

Remote Commander

Operating Instructions

RM-LJ301

Precautions

On safety

Should any solid object or liquid fall into the cabinet, unplug the receiver and have it checked by qualified personnel before operating it any further.

On operation

Before connecting other components, be sure to turn off and unplug the receiver.

On cleaning

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

If you have any question or problem concerning your receiver, please consult your nearest Sony dealer.

About This Manual

The instructions in this manual are for model RM-LJ301. Check your model number by looking at the lower left corner of the front side.

Conventions

The following icon is used in this manual:




Indicates hints and tips for making the task easier.


Before You Use Your Remote

Check that you received the following item with the remote:

LR6 (size-AA) alkaline batteries (3)

Inserting batteries into the remote

Insert three LR6 (size-AA) alkaline batteries with the + and – properly oriented in the battery compartment. When using the remote, point it at the remote sensor  on the receiver.

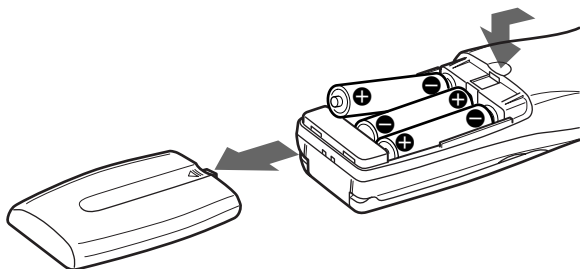

When to replace batteries

Under normal conditions, the batteries should last for about 3 months. When the remote no longer operates the receiver, replace all the batteries with new ones.

Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with old ones.
- Do not mix the alkaline batteries and other kinds of batteries. This remote is designed for use with the alkaline batteries only.
- Do not expose the remote sensor of the receiver to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Setting up the remote

At the time of shipping, the remote has not been customized to your receiver yet. Before you use the remote for the first time, do the procedure below to set up the remote so that it can control your receiver properly.



- 1 Press I/⏻ on the receiver to turn it on.**
- 2 Point the remote towards the receiver and press SOUND FIELD, FUNCTION, or SUB.**
 and  appear in the display window of the remote while it communicates with the receiver and identifies the receiver model.
When the communication ends, the remote is customized and provides the operation lists that match your receiver.

TABLE OF CONTENTS

Location of Parts and Basic Remote Operations 4

Parts Description 4

Using the Lists 12

Chart of Lists 13

Selecting a Component 14

Selecting a Sound Field 15

Programming the Remote 15

Downloading Data From the Receiver 16

Other Operations 17

Additional Information 18


Troubleshooting 18

Specifications 19

Location of Parts and Basic Remote Operations

This chapter provides information on the location of buttons and how to use them to perform basic operations.

Parts Description

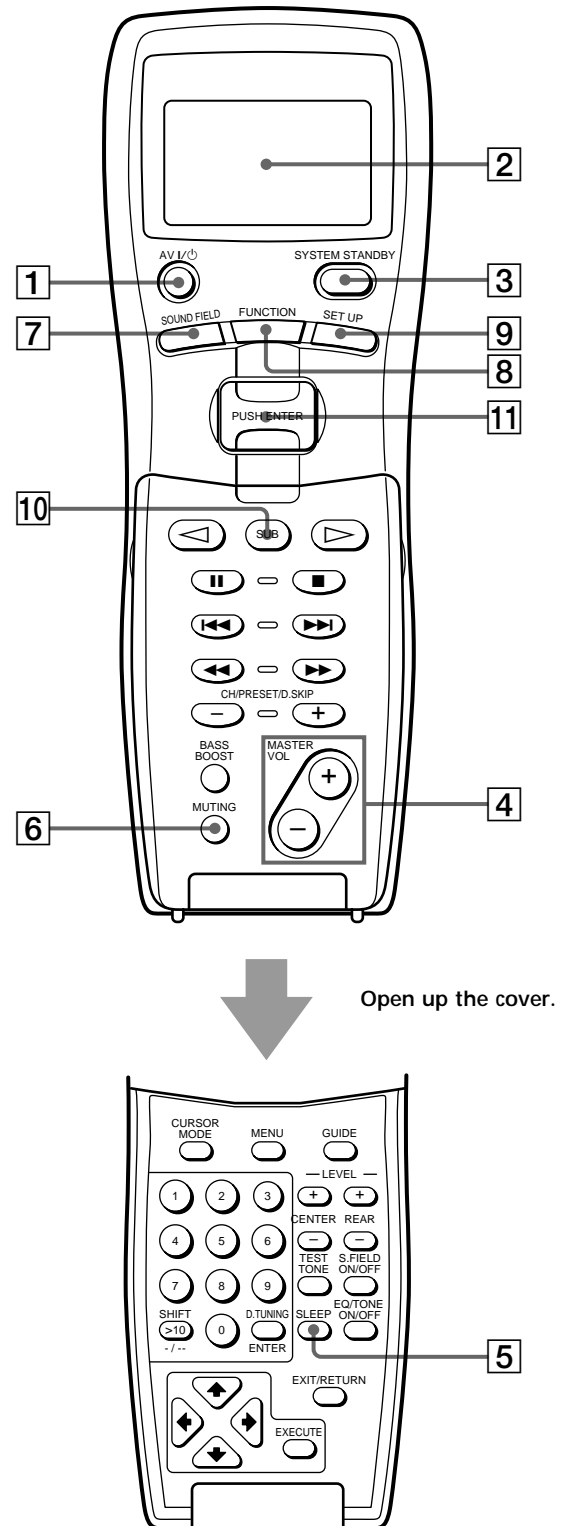

1 AV I/⏻ switch

Press to turn on or off the components that the remote is programmed to operate. For details on programming procedure, see "Programming the Remote" on page 15.

2 Display window

The current status of the selected component or a list of selectable items appears here.

3 SYSTEM STANDBY switch

Press to turn off the receiver and other Sony audio/video components at the same time. If you want to change the function of the SYSTEM STANDBY switch so that it turns on or off the receiver only, see page 16.

Note

Before you turn on the receiver, make sure that you have turned the MASTER VOLUME control on the receiver to the leftmost position to avoid damaging your speakers.

4 MASTER VOL +/- buttons

Press to adjust the volume level of all speakers at the same time.

5 SLEEP button

Press repeatedly to activate the sleep function and select the duration after which the receiver turns off automatically.

6 MUTING button

Press to mute the sound. The MUTING indicator on the receiver lights up when the sound is muted.

7 SOUND FIELD button

Press to display the sound field list. Press again to revert back to the component information.

8 FUNCTION button

Press to display the function (component) list. Press again to revert back to the component information.

See the table on page 9 for information on the buttons you can use to control each component.

If you want to change the contents of a function list to match your particular components, do the procedure "Programming the Remote" on page 15.

Note

After you have selected the VCR or DVD player, turn on the TV and set the TV's video input to match the component you selected.

9 SET UP button

Press to display the set up list. Press again to revert back to the component information.


10 SUB button

While operating a component, press to display a list of operations that the corresponding buttons are not found on the remote. Then move the easy scroll key to select the operation, and then press the key to enter the selection. Press again to revert back to the component information.


See the table on pages 10 and 11 for information on the operations that appear when you press the SUB button.

11 Easy scroll key

While displaying a list, move up or down to select an item from the list, and then press to enter the selection.

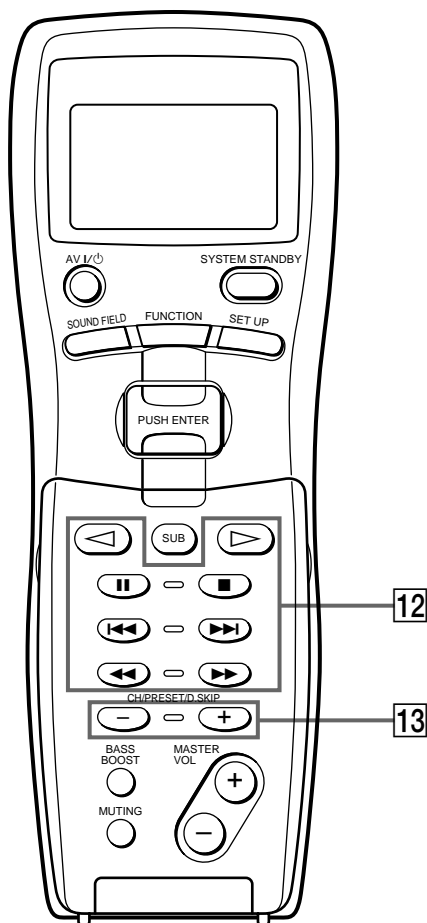

Open up the cover.

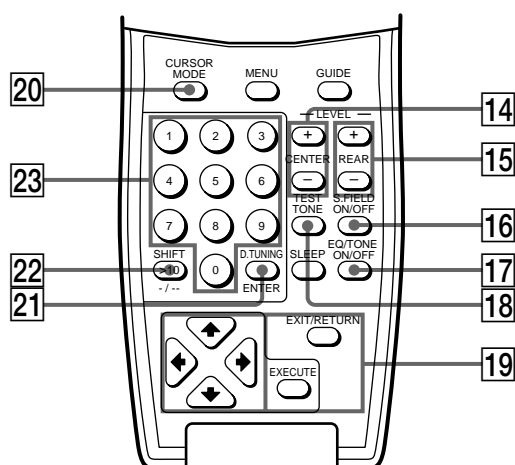

12 Tape/disc operation buttons

The following table shows what components are operated by each button and the function of the buttons.

| Button(s) | Component(s) | Function |
|-----------|--|---|
| ▶ | VCR, DVD player, LD player, video CD player, tape deck, MD deck, CD player, DAT deck | Starts play of the playback medium |
| ◀ | Tape deck | Starts play on the reverse side of the cassette |
| ⏸ | VCR, DVD player, LD player, video CD player, tape deck, MD deck, CD player, DAT deck | Pauses play or recording or starts recording when the component is in recording standby |
| ■ | VCR, DVD player, LD player, video CD player, tape deck, MD deck, CD player, DAT deck | Stops play |
| ⏮ / ⏭ | VCR, DVD player, LD player, video CD player, tape deck (deck B only), MD deck, CD player, DAT deck | Skips tracks |
| ⏮ / ⏭ | VCR, LD player, tape deck, MD deck, DAT deck | Fastwinds or rewinds |
| | DVD player, LD player, video CD player, CD player | Searches tracks in the forward or backward direction |

See the table on page 9 for information on the buttons that you can use to control each component.

13 CH/PRESET/D.SKIP +/- buttons

Press repeatedly to select a preset station, channel, track, or a disc.

14 LEVEL CENTER +/- buttons

Press to adjust the volume level of the center speaker.

15 LEVEL REAR +/- buttons

Press to adjust the volume level of the rear speakers.

16 S.FIELD ON/OFF button

Press to turn the sound field on or off.

17 EQ/TONE ON/OFF button

Press to turn the equalizer or tone effect on or off. The TONE indicator on the receiver lights up when the effect is turned on.

Note that if you have adjusted the equalization or tone using the CURSOR MODE button and cursor buttons, the adjusted equalization or tone will be produced whenever you turn on the equalizer or tone effect.

18 TEST TONE button

Press to output a test tone.

19 Cursor buttons (▲/▼/◀/▶)

After pressing the CURSOR MODE button or SET UP button on the receiver, use the cursor buttons to make specific settings. For details refer to the Operating Instructions supplied with your receiver.

To perform menu operations on the VCR, DVD player, or DBS tuner, do the procedure below. If you don't do this, the cursor buttons merely operate the receiver.

- 1** Press FUNCTION and move the easy scroll key to select the VCR, DVD player, or DBS tuner.
- 2** Open up the cover on the remote.
CURSOR TYPE list appears.
If the list has disappeared before you go on to Step 3, press any of the cursor buttons to restore the list.
- 3** Move the easy scroll key to select the component that you selected in Step 1, then press the key to enter the selection.

EXECUTE button

After pressing the MENU or GUIDE button, use the cursor buttons to select a menu item, then press the EXECUTE button to enter the selection.

EXIT/RETURN button

Press to return to the previous menu or exit the menu while VCR, DVD, or DBS menu or DBS guide is displayed on the TV screen.

20 CURSOR MODE button

Press repeatedly to select SURROUND, BASS/TREBLE (or EQ), or INDEX cursor mode. The indicator for the selected cursor mode on the receiver lights up.

21 D.TUNING ENTER button**If you have selected tuner:**

Press to enter Direct Tuning mode. For details on Direct Tuning procedure, refer to the Operating Instructions supplied with your receiver.

If you have selected VCR, DVD player, LD player, TV, DBS tuner, tape deck, MD deck, CD player, or DAT deck:

After selecting a channel, disc, or track using the numeric buttons, press this button to enter the selection. For details, refer to the Operating Instructions supplied with your receiver.

22 SHIFT >10 -/-- button**If you have selected tuner:**


Press repeatedly to select a memory page for presetting radio stations or tuning to preset stations.

If you selected VCR, TV, LD player, video CD player, tape deck, MD deck, or CD player:

Press before inputting a channel, disc, or track number of eleven or higher. For details, refer to the operation manual supplied with the respective components.

23 Numeric buttons (1 to 0)

Inputs the corresponding numeric value. On some components, pressing 0 selects 10. For details, refer to the operation manual supplied with the respective components.

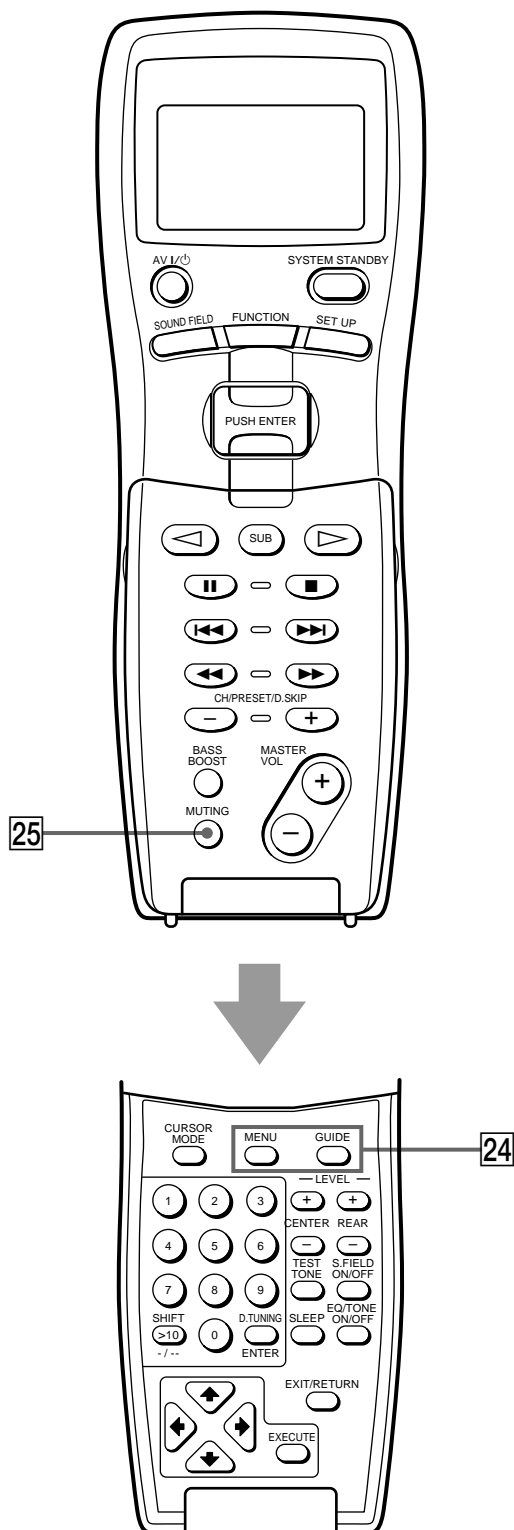

24 MENU button

When you have selected the VCR, DVD player, or DBS tuner, press this button to display VCR, DVD, or DBS menu on the TV screen. Then use the cursor buttons to perform the menu operations (see “19 Cursor buttons (▲/▼/◀/▶),” “EXECUTE button,” and “EXIT/RETURN button” on page 7).

Note

When you have selected VCR, the remote is set to control the VCR that corresponds with VCR 1 after you press the MENU button. Before pressing the button, make sure to set the VCR input mode to VCR 1.

GUIDE button

Press to display the DBS guide. Then use the cursor buttons on the remote to perform the menu operations (see “17 Cursor buttons (▲/▼/◀/▶),” “EXECUTE button,” and “EXIT/RETURN button” on page 7).

25 BASS BOOST button

Press to increase the bass of the front speakers. The BASS BOOST indicator on the receiver lights up when the function is turned on.

Table of buttons used to control each component

When you program the remote to control the following Sony or non-Sony components, you can use the buttons on the remote that are marked with circles. Note, however, that some buttons may not operate your component.

| Button \ Component | VCR (VHS, Beta, 8mm) | DBS tuner | DVD player | LD player | TV | Tuner | Video CD player | CD player | MD deck | DAT deck | Tape deck (A and B) |
|----------------------|----------------------|-----------|------------|-----------|----|-------|-----------------|-----------|---------|----------|---------------------|
| AV I/⏻ | ● | ● | ● | ● | ● | | ● | ● | ● | | |
| SUB* | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| ◁ | | | | | | | | | | | ● |
| ▷ | ● | | ● | ● | | | ● | ● | ● | ● | ● |
| ⏮ | ● | | ● | ● | | | ● | ● | ● | ● | ● |
| ⏭ | ● | | ● | ● | | | ● | ● | ● | ● | ● |
| ⏮/⏭ | ● | | ● | ● | | | ● | ● | ● | ● | ●** |
| ⏮/⏭ | ● | | ● | ● | | | ● | ● | ● | ● | ● |
| CH/PRESET/D.SKIP +/- | ● | ● | ● | | ● | ● | ● | ● | ● | | |
| Cursor buttons | ● | ● | ● | | | | | | | | |
| MENU | ● | ● | ● | | | | | | | | |
| GUIDE | | ● | | | | | | | | | |
| Numeric buttons | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| SHIFT >10 -/-- | ● | | | ● | ● | ● | ● | ● | ● | | ● |
| D.TUNING ENTER | ● | ● | ● | ● | ● | ● | | ● | ● | ● | ● |
| EXIT/RETURN | | ● | ● | | | | | | | | |
| EXECUTE | ● | ● | ● | | | | | | | | |

* For information on the operations that become available when you press the button, see the table on page 9.

**Deck B only.

💡 If you have assigned TV to the USER 1 or 2 item in the IR SET list (see page 16)

The remote is set to operate TVs only. In this case, only the following buttons are operable:

- CH/PRESET/D.SKIP +/- buttons
- MASTER VOL +/- buttons
- MUTING button
- Numeric buttons
- SHIFT >10 -/-- button
- D.TUNING ENTER button

Parts Description

Table of operations that appear when you press the SUB button

Press the SUB button to display a list of operations that the corresponding buttons are not found on the remote. The contents of the lists will vary according to the currently selected component. The following table shows the items in each list and the function of each item.

| Component | Item(s) | Function |
|------------|-------------|--|
| VCR | REC | Starts recording |
| | ANT TV/VTR | Selects the signal to be output from the antenna terminal of the VCR (TV signal or video signal) |
| | DISPLAY | Selects information displayed on the TV screen |
| | INPUT SEL. | Changes the input mode of the VCR |
| | SP/LP | Selects the playback speed |
| DBS tuner | JUMP | Toggles between the previous and current channels |
| | DISPLAY | Selects information displayed on the TV screen |
| | ANT TV/DBS | Selects the signal to be output from the antenna terminal of the VCR (TV signal or DBS signal) |
| | FAVORITE | Displays the Favorite Station Guides |
| | CATEGORY | Displays the Guide Category list |
| | INDEX | Displays the Station Index |
| DVD player | TITLE | Displays the Title menu. For details on the menu operation, see "To perform title and set up menu operations on the DVD player" on page 11. |
| | DISPLAY | Selects information displayed on the TV screen |
| | MENU | Displays the Set up menu. For details on the menu operation, see "To perform title and set up menu operations on the DVD player" on page 11. |
| | SUB-TITLE | Displays the Subtitles |
| | S.TITLE CHG | Changes the Subtitle Language |
| | AUDIO CHG | Changes the sounds |
| | SEARCH | Changes the search mode |
| | CLEAR | Returns to the Continuous Play etc. |

| Component | Item(s) | Function |
|-----------------|------------------------|---|
| LD player | SIDE A ^{a)} | Selects side A of the disc |
| | SIDE B ^{a)} | Selects the side B of the disc |
| | DISPLAY | Selects information displayed on the TV screen |
| | PROGRAM | Programs the tracks |
| TV | REPEAT | Repeats current track or programmed tracks |
| | JUMP | Toggles between the previous and current channels |
| | DISPLAY | Selects information displayed on the TV screen |
| | TV/VTR | Changes the input mode of the TV |
| | P IN P ^{b)} | Activates the picture-in picture function ^{c)} |
| | POSITION ^{b)} | Changes the position of the small picture ^{c)} |
| | SWAP ^{b)} | Swaps the small and large pictures ^{c)} |
| | WIDE ^{b)} | Selects the wide-picture mode ^{d)} |
| | SUB CH + ^{b)} | Selects preset channels for the small picture ^{c)} |
| | SUB CH - ^{b)} | |
| Tuner | FM/AM | Selects the FM or AM band |
| VIDEO CD player | TIME | Changes the time information |
| CD player | DISC | Selects a disc ^{e)} |
| | TRACK | Selects a track ^{e)} |
| | CONTINUE | Selects Continuous Play |
| | SHUFFLE | Selects Shuffle Play |
| | PROGRAM | Selects Program Play |
| | REPEAT | Selects Repeat Play |

| Component | Item(s) | Function |
|-----------|----------|--|
| MD deck | CONTINUE | Selects Continuous Play |
| | SHUFFLE | Selects Shuffle Play |
| | PROGRAM | Selects Program Play |
| | REPEAT | Selects Repeat Play |
| | DISPLAY | Changes the information on the display |
| | EDIT/NO | Selects editing operation or cancels editing |
| | YES | Performs editing operation |
| | REC | Pauses for recording |
| DAT deck | REC | Pauses for recording |
| | REPEAT | Starts Repeat Play |
| | CLEAR | Erases a track in the program etc. |
| Tape deck | A-REC | Makes deck A pause for recording |
| | B-REC | Makes deck B pause for recording |

a) "SIDE A/B" appears for non-Sony LD players.

b) These items do not appear if you have assigned TV to the USER 1 (or 2) item in the IR SET list (see page 16) and selected USER 1 (or 2) (see page 14).

c) Only with Sony TVs with the picture-in-picture function.

d) Only with Sony TVs that supports the wide-picture mode.

e) Only with the Sony CD changer.

Note

If you have programmed the remote to control non-Sony components, note the following:

- All the items may not appear when you select a component.
- All the items displayed may not function.



To perform title and set up menu operations on the DVD player

1 Select the DVD player from the function list.

2 Press SUB.

3 Move the easy scroll key to select "TITLE" (for the title menu) or "MENU" (for the set up menu), then press the key to enter the selection.

4 Open up the cover on the remote and move the easy scroll key to select "DVD" from the CURSOR TYPE list, then press the key to enter the selection.

5 Use the cursor buttons and the EXECUTE button to perform menu operations on the DVD player.

To exit the menu operation

1 Close the cover on the remote.


2 Press SUB.

3 Move the easy scroll key to select "TITLE" or "MENU," then press the key to enter the selection.

To display the DVD menu, use the MENU button. For details, see "[24] MENU button" on page 8.

Using the Lists

This chapter describes how to display and use various lists. It also includes a chart showing all of the various lists.

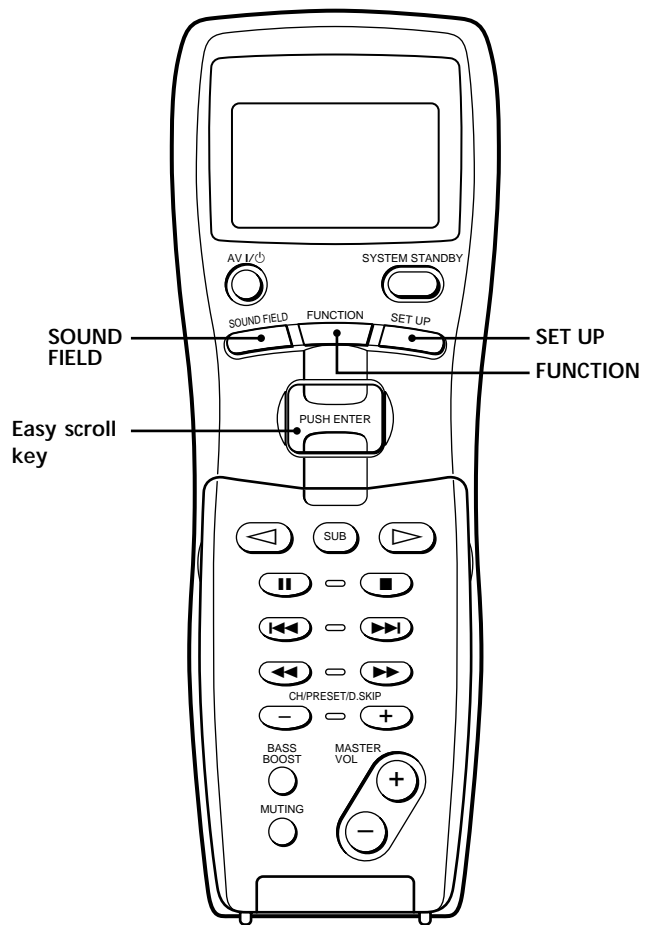

Brief descriptions of buttons for list operations

SOUND FIELD button: Press to display the sound field list. Press again to revert back to the component information.




FUNCTION button: Press to display the function (component) list. Press again to revert back to the component information.

SET UP button: Press to display the set up list. Press again to revert back to the component information.

Easy scroll key: While displaying a list, move this key up or down to select an item from the list, then press the key to enter the selection.

Chart of Lists

 See the treelike chart below for the list hierarchy. Details on how to access each list is given from page 14. Some items have sub-lists that appear when you press the SUB button (see pages 10 and 11). The configuration of the lists will vary depending on the receiver.

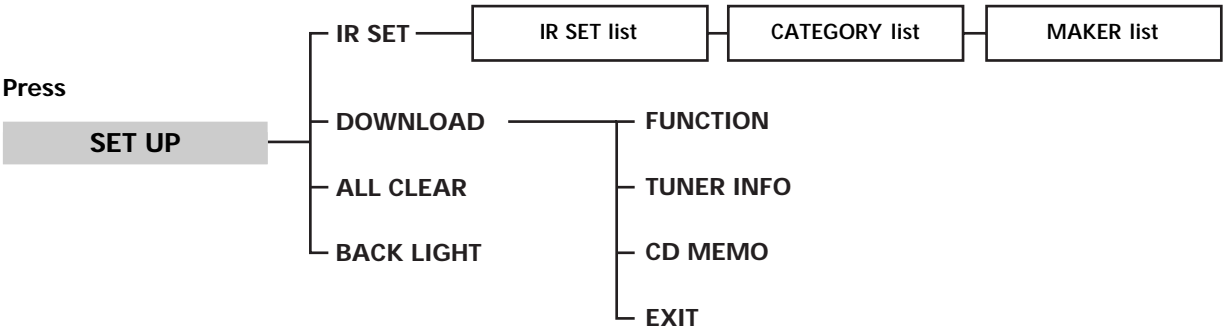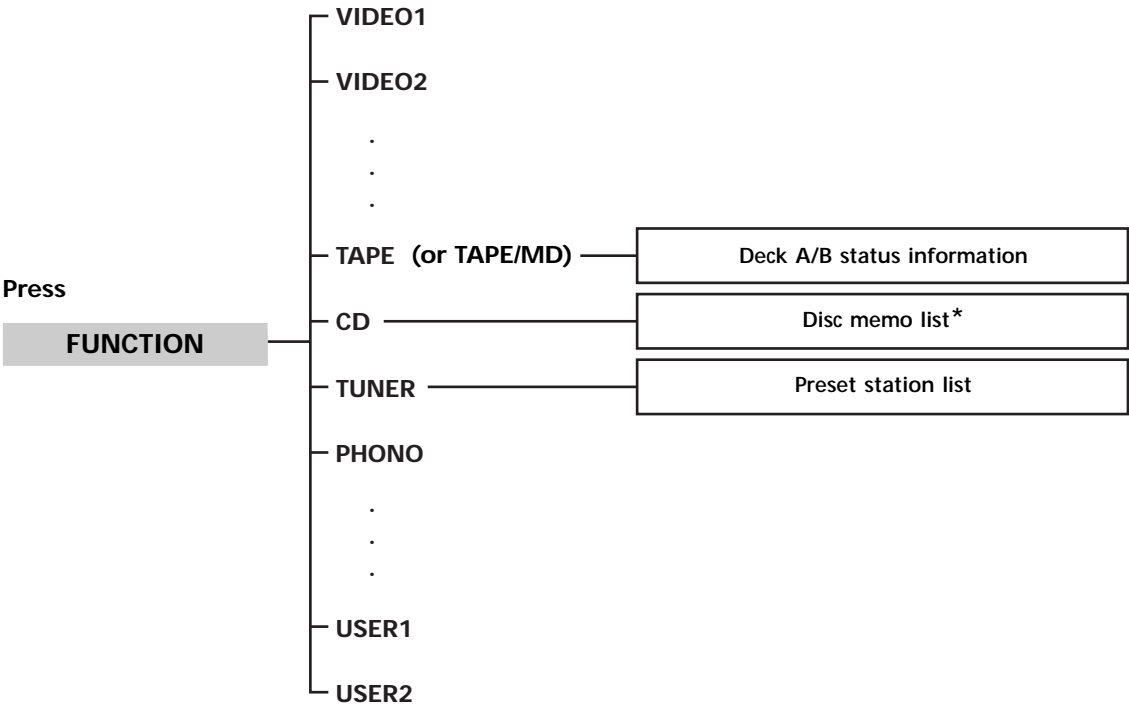

* Appears only when the receiver is connected to S-LINK CONTROL A1 compatible CD changer (5 discs, 50 discs, or 200 discs).

Selecting a Component

Basic procedure for selecting a component

Do the procedure below to select a component from the function list. Note that the components contained in the list will vary depending on the receiver.

1 Press FUNCTION.

 
The function list appears. The items in the list correspond with the jacks on the receiver.



2 Move the easy scroll key to select a component from the list, then press the key to enter the selection.

Information about the component appears in the display window.

A display example



You can modify the components displayed
You can display the index name for the component. For details, see “Downloading Data From the Receiver” on page 16.

You can modify the category indication
The category indication tells you what component is actually connected to the jacks on the receiver. If a component is connected to jacks for which they are not originally meant, you can modify the category indication to match the component. For details, see “Programming the Remote” on page 15.

Depending on the component that you selected, you may have to do an additional procedure, or you may be able to obtain detailed information about the component by doing an additional procedure. For details, see “Additional procedure after selecting a component” on this page.

Additional procedures after selecting a component

If you have selected tuner

Do the procedure below after you have selected the tuner.

1 Move the easy scroll key.

The preset station list appears.

- 2 Move the easy scroll key to select the preset station, then press the key to enter the selection. The current status of the component appears in the display window.

Note

If you have changed the contents of the preset station memory of the receiver, be sure to download the preset station memory from the receiver (see page 16) before you tune in to a preset station.

If you have selected CD player, tape deck, or MD deck

Detailed information about the component appears in the display window of the remote only if the component is compatible with S-LINK CONTROL A1.

The information that appears is as follows:

| If you have selected | The following information appears |
|----------------------------------|--|
| CD player | The first 12 characters of the disc memo, track number, and track text |
| MD deck | The first 12 characters of the disc name, track number, and track name |
| tape deck, CD player, or MD deck | The current deck operation (▶, or ■) to the right of the component indication |

If you selected a Sony CD changer

1 Move the easy scroll key.

The DISC MEMO list appears.

- 2 Move the easy scroll key to select a disc, then press the key to enter the selection.

3 Start playback.

Note

If you have changed the discs in the changer, be sure to download the CD memos from the receiver (see page 16) or play the newly inserted disc(s) before you select a disc from the changer.

If you selected the tape deck

Move the easy scroll key to display the information about deck A or B.

Note

When the remote is programmed to control a non-Sony tape deck, the following may occur:

- The information about deck B is not displayed and you cannot switch between tape deck A and B.
- “TAPE A/B” is displayed and tape deck A and B switch automatically each time you press the easy scroll key, etc.

Selecting a Sound Field

Do the procedure below to select a sound field from the sound field list. Note that the sound fields contained in each list will vary depending on the receiver.

1 Press SOUND FIELD.

The sound field list appears.

```
[Music ]
→Stadium
Game
```

2 Move the easy scroll key to select the sound field, then press the key to enter the selection.

The display reverts back to the component information after about ten seconds.

A display example

```
[Cinema ]
C.Studio B
→C.Studio C
```

Genre of the current sound field

Current sound field

To turn off the sound field

Move the easy scroll key to select "S.Field OFF," then press the key to enter the selection. Or press the S.FIELD ON/OFF button.

Programming the Remote

You can customize the remote to match the components connected to your receiver. You can even program the remote to control non-Sony components and also Sony components that the remote is normally unable to control. The procedure below uses as an example a case in which a Kenwood LD player is connected to the VIDEO 2 jacks on the receiver.

Before you begin note that:

- You cannot change the settings of TUNER and PHONO.
- The remote can control only components that accept infrared wireless control signals.

Be sure to turn on the receiver and point the remote towards the receiver when performing the following procedure.

1 Press SET UP.

The set up list appears.

```
→IR SET
DOWNLOAD
BACK LIGHT
```

2 Move the easy scroll key to select "IR SET," then press the key to enter the selection.

The IR SET list appears.

```
<IR SET>
→[ VIDEO01 ]
[ VIDEO02 ]
```

3 Move the easy scroll key to select the component ("VIDEO 2," for example), then press the key to enter the selection.

The CATEGORY list appears.

```
CATEGORY?
→ VTR
T U
```

4 Move the easy scroll key to select the category (i.e., the component that is actually connected to the corresponding jacks; in this case, "LD"), then press the key to enter the selection.

The MAKER list appears.

```
MAKER?
→ Sony
DENON
```

Programming the Remote

- 5 Move the easy scroll key to select the make of the component ("Kenwood," for example), then press the key to enter the selection.


When programming the remote to control Sony component

Select "Sony."


Programming is now completed.

To cancel programming

Move the easy scroll key to select "EXIT" from the IR SET list, or "CANCEL" from the CATEGORY list or MAKER list, then press the key to enter the selection.

 You can change the function of the SYSTEM STANDBY switch. The SYSTEM STANDBY switch is factory set to turn off the receiver and other Sony audio/video components (i.e., "ALL OFF" setting) as described on page 5. To change the setting, move the easy scroll key to select "STANDBY" from the IR SET list in Step 3 on page 15, then select "ON/OFF" from the STANDBY list. The switch is now set to turn on or off the receiver only.



 You can freely assign any component to USER 1 and 2 items in the IR SET list

- 1 Do Steps 1 and 2 in "Programming the Remote" on page 15.
- 2 Move the easy scroll key to select "USER 1" or "USER 2," then press the key to enter the selection.
- 3 Continue from Step 4 in "Programming the Remote" on page 15 to select the category and make of the component.

Downloading Data From the Receiver

The remote communicates with the receiver every time a button is pressed on the remote and displays the current operation status of the receiver on the display window. The remote can also download index names of the program sources, preset stations, CD memos*, and information indicating the presence or absence of a CD in each slot of a CD changer* from the receiver.

* Appears only when you have selected a Sony CD changer (5 discs, 50 discs, or 200 discs) connected to the receiver using the S-LINK CONTROL A1 cable.

Be sure to turn on the receiver and point the remote towards the receiver when performing the following procedure.

- 1 Press SET UP.
The set up list appears.
- 2 Move the easy scroll key to select "DOWNLOAD," then press the key to enter the selection.
The DOWNLOAD list appears.



- 3 To download index names
Move the easy scroll key to select "FUNCTION," then press the key to enter the selection.

To download preset stations

Move the easy scroll key to select "TUNER INFO," then press the key to enter the selection.

To download CD memos and information on the presence or absence of a CD in each slot of a CD changer

- 1 Move the easy scroll key to select "CD MEMO," then press the key to enter the selection.
The SORT menu appears in the display.

```
<SORT? >
->NUMBER
  ALPHABET
```

- 2 Move the easy scroll key to select "NUMBER" or "ALPHABET," then press the key to enter the selection.

The remote starts to download the data.

```
<<LOADING>>
[■■■■] — Shows the progress
CANCEL      of downloading
```

To cancel the downloading process

Move the easy scroll key to select "EXIT" from the DOWNLOAD list, then press the key to enter the selection.

Notes

- If you have changed the discs in the CD changer, be sure to download the CD memos from the receiver or play the newly inserted disc(s) before you select a disc from the changer.
- You can download the data only from the Sony CD changer (5 discs, 50 discs, or 200 discs) connected to the receiver using the S-LINK CONTROL A1 cable.

Other Operations

Turning the backlight on or off

Each time you press a button on the remote, the backlight turns on. If you do the procedure below to turn off the backlight, you can make the batteries last longer.

- 1 Press SET UP.
The set up list appears.
- 2 Move the easy scroll key to select "BACK LIGHT," then press the key to enter the selection.
The BACK LIGHT list appears .

```
<BACK LIGHT>
->ON
  OFF
```

- 3 Move the easy scroll key to select "ON" or "OFF," then press the key to enter the selection.

Clearing all the contents of remote's memory

Be sure to turn on the receiver and point the remote towards the receiver when performing the following procedure.


- 1 Press SET UP.
The set up list appears.
- 2 Move the easy scroll key to select "ALL CLEAR," then press the key to enter the selection.
- 3 Move the easy scroll key to select "YES," then press the key to enter the selection.
The contents of remote's memory (i.e., all programming and downloaded data) are cleared.

Additional Information

Troubleshooting

If you experience any of the following difficulties while using the remote, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest Sony dealer.

The remote does not function.

- ➔ Point the remote at the remote sensor  on the receiver.
- ➔ Remove any obstacles in the path between the remote and the receiver.
- ➔ Replace all the batteries in the remote with new ones, if they are weak.
- ➔ Make sure you select the correct function on the remote.
- ➔ When you operate a programmed non-Sony component, the remote may not function properly depending on the model and the make of the component.

Component names that the receiver does not have corresponding jacks appear in the function list./The sound field list does not appear.

- ➔ The remote has been initialized. Turn on the receiver and press the SOUND FIELD, FUNCTION, or SUB button on the remote making sure that the remote points to the receiver (see page 3).

The SOUND FIELD button does not work.

- ➔ If the receiver has the 5.1(/DVD) INPUT jacks, the SOUND FIELD button becomes inoperable whenever you select the component connected to the jacks.

appears in the display window of the remote.

- ➔ The batteries are running out. Replace all the batteries with new ones.

The function names that appear in the display windows of the receiver and the remote are different.

- ➔ Select the correct function using the remote.

When the CD player, tape deck, or MD deck is connected to the receiver via S-LINK CONTROL A1 jacks, Auto Function does not work properly.
➡ Reprogram the remote (see pages 15 and 16).

“5.1(DVD)” cannot be selected from the function list even though the receiver has the 5.1(DVD) INPUT jacks.
➡ A communication error has occurred. Point the remote towards the receiver and select “5.1(/DVD)” from the function list again.

Specifications

| General | |
|---|---|
| Remote control system | Infrared control |
| Power requirements | 3 V DC with three LR6 (size-AA) alkaline batteries |
| Dimensions | 125 × 43 × 33 mm (5 × 1 ³ / ₄ × 1 ¹⁵ / ₁₆ inches) |
| Mass (approx.) | 130 g (4.5 oz) excluding batteries |
| Design and specifications are subject to change without notice. | |

