


BOMAG

Service - Manual

BW 211 / 212 / 213 D-40

BW 211 / 212 / 213 PD-40

S/N 101 582 02 S/N 101 582 43 S/N 101 582 44
S/N 101 583 02 S/N 101 583 03 S/N 101 582 55
S/N 101 582 47 S/N 101 582 48 S/N 101 582 49

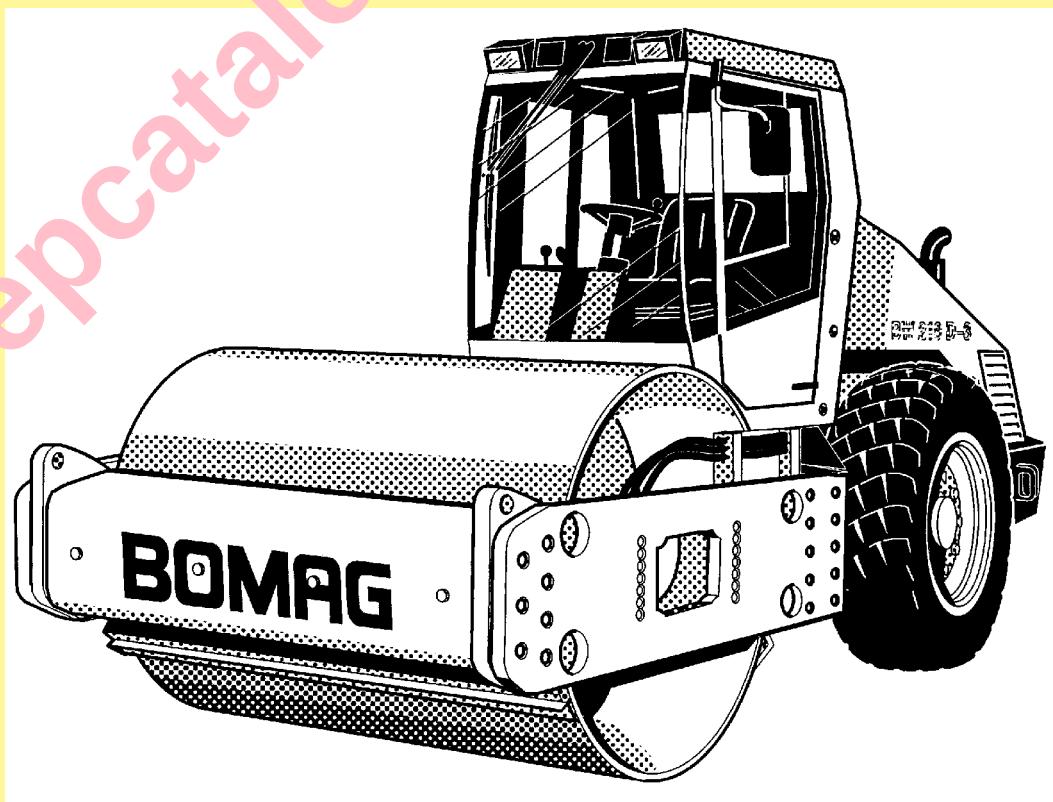

Single drum roller

General	7
1.1 Introduction	8
1.2 Safety regulations	9
1.3 General repair instructions	14
1.4 Tightening torques	24
Technical data	29
2.1 Technische Daten	30
2.2 Maintenance chart	38
2.3 Table of fuels and lubricants	40
2.4 Fuels and lubricants	40
Connection overview	43
3.1 Connection overview	44
Tests and adjustments	47
4.1 Special tools, tests and adjustments	48
4.2 Checking the rotation speeds	52
4.3 Checking / adjusting the neutral positions of the travel pump	54
4.4 Pressure tests in the travel circuit	56
4.5 Checking / adjusting the vibrator shaft speeds	58
4.6 Pressure measurements in the vibration circuit	59
4.7 Check the leakage rate of the vibration motor	60
4.8 Pressure test in steering circuit	61
Flushing and bleeding	63
5.1 Special tools for flushing	64
5.2 Flushing - general	69
5.3 Flushing schematic travel circuit (distribution travel pump)	71
5.4 Flushing the travel circuit (travel pump distribution)	73
5.5 Flushing schematic travel circuit (distribution axle motor)	79
5.6 Flushing the travel circuit (axle motor distribution)	84
5.7 Flushing schematic for vibration drive	89
5.8 Flushing the vibration circuit	90
5.9 Bleeding the travel circuit	94
5.10 Bleeding the vibration circuit	96
Fundamental electrics	99
6.1 Understanding circuit diagrams	100
6.2 Terminal designations	104
6.3 Current and voltage	108
6.4 Resistance	112
6.5 Series / parallel connection	114
6.6 Ohm's law	116
6.7 Electrical energy	116
6.8 Formula diagram	117
6.9 Metrology	118
6.10 Diodes, relays, fuses	120
6.11 Batteries	123
6.12 Three-phase generator	126
6.13 Electric starter	133

Table of Contents

6.14	Telemecanique switch	136
6.15	Inductive proximity switches	139
6.16	Angle sensor with current output	140
6.17	Plug connectors	141
6.18	Deutsch plug, series DT and DTM	142
6.19	Plugs and terminals in spring clamping technology	148
Special tools, electrics		153
7.1	Special tools, electrics	154
Electronic modules		163
8.1	Vibration module	165
Speedometer Module		169
9.1	Speedometer module	171
Service Training		173
10.1	Electrics BEM (BOMAG Evib-motor)	175
10.2	Service Training	233
Engine		297
11.1	Diesel engine, general	299
11.2	Service side	300
11.3	Starter side	301
11.4	Lubrication oil circuit	302
11.5	Oil pressure switch and low oil pressure circuitry	304
11.6	Check the engine oil level	305
11.7	Changing engine oil and oil filter cartridges	306
11.8	Coolant circuit	308
11.9	Coolant temperature switch	310
11.10	Disassembling and assembling the coolant temperature switch	311
11.11	Replacing the thermostat	312
11.12	Checking the thermostat in disassembled state	313
11.13	Check the coolant level	314
11.14	Change the coolant	314
11.15	Clean the cooling fins on engine and hydraulic oil cooler	315
11.16	Three-phase generator	316
11.17	Fuel supply	318
11.18	Injection system	321
11.19	Injection pump replacement during service	322
11.20	Injection valve replacement during service	331
11.21	Checking / repairing injection valves	334
11.22	Fuel filter	339
11.23	Check, clean the water separator	341
11.24	Change the fuel pre-filter cartridge	341
11.25	Change the fuel filter cartridge	342
11.26	Checking the compression	343
11.27	Check, adjust the valve clearance	344
11.28	Boost fuel solenoid valve	346
11.29	Engine shut-down solenoid	347
11.30	Air filter	348
11.31	Cleaning, changing the dry air filter cartridge	349

11.32 Heating flange on engine	351
11.33 Checking the heating flange control	354
11.34 Electric throttle control	355
11.35 Engine monitoring	357
11.36 Engine	359
11.37 Special tools, Deutz engine (BFM 2012)	361
Air conditioning system	373
12.1 Physical basics	375
12.2 Refrigerant R134a	378
12.3 Compressor oil / refrigeration oil	379
12.4 Working principle of the air conditioning system	380
12.5 Monitoring devices	380
12.6 Description of components	381
12.7 Checking the compressor oil level	387
12.8 Checking the magnetic clutch	388
12.9 Inspection and maintenance work	389
12.10 Checking, replacing the refrigerant compressor V-belt	389
12.11 Service the air conditioning	390
12.12 Drying and evacuation	393
12.13 Emptying in case of repair	393
12.14 Leak test	394
12.15 Filling instructions	395
12.16 Trouble shooting in refrigerant circuit, basic principles	398
12.17 Trouble shooting, refrigerant circuit diagram	402
12.18 Trouble shooting procedure	403
12.19 Steam table for R134a	413
12.20 Heating control / air conditioning control	419
Replacing the cab window panes	425
13.1 Assembly of window panes	426
13.2 Special tools	427
13.3 Auxiliary materials	428
13.4 Removing and installing the window pane	430
Drum	435
14.1 Special tools, drum, single drum rollers	436
14.2 Repair overview for drum	438
14.3 Removing and installing the drum	446
14.4 Repairing the drum	451
14.5 Disassembling and assembling the change-over weight	484
14.6 Changing the rubber buffers and adjusting the pretension	487
Oscillating articulated joint	491
15.1 Special tools	492
15.2 Repair overview oscillating articulated joint	494
15.3 Removing and installing the oscillating articulated joint	497
15.4 Dismantling the oscillating articulated joint	499
15.5 Assembling the oscillating articulated joint	504
Suppliers documentation	515
16.1 Travel pump series 90R	517

[Buy now](#)

[Bomag Single Drum Roller BW211/212/213 D/PD-40 Service Manual PDF](#)
[With Instant Download](#)