


BOMAG

Service - Manual

BW 211 / 212 / 213 D-40

BW 211 / 212 / 213 PD-40

S/N 101 582 21 ... S/N 101 582 43 ... S/N 101 582 44 ...
S/N 861 583 01 ... S/N 101 583 02 ... S/N 101 583 03 ... S/N 101 582 55 ...
S/N 101 582 47 ... S/N 101 582 48 ... S/N 101 582 49 ...

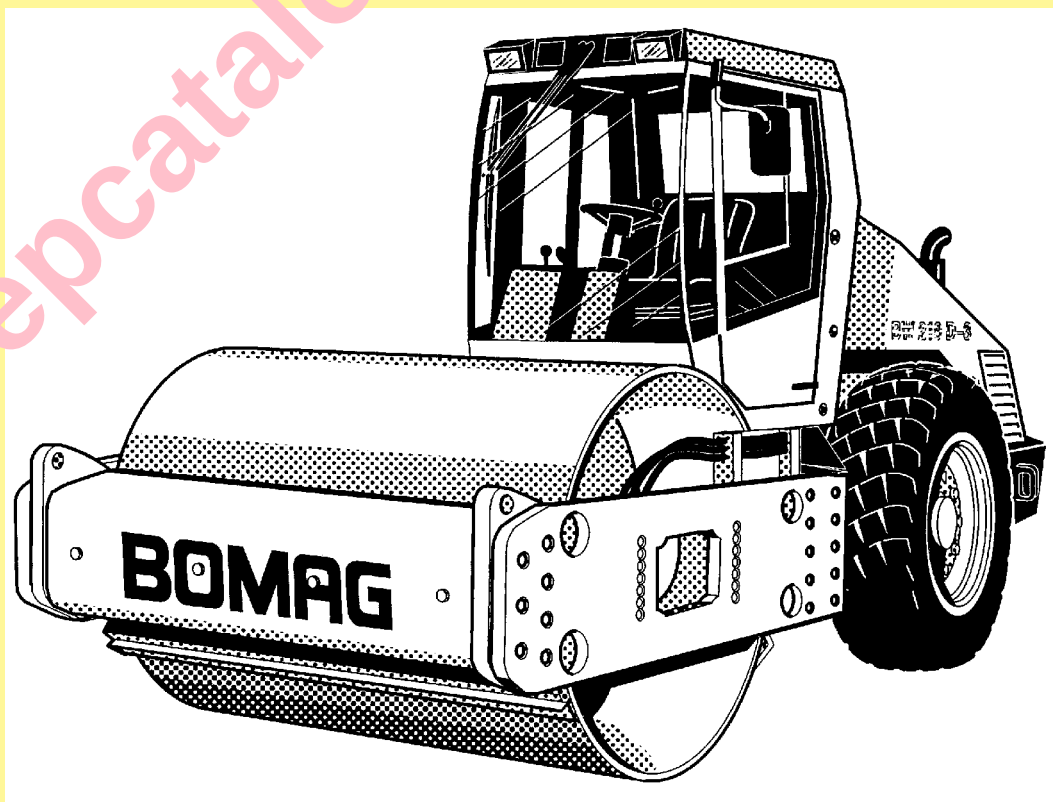

Single drum roller

General	7
1.1 Introduction	8
1.2 Safety regulations	9
1.3 General repair instructions	14
1.4 Tightening torques	24
Maintenance	29
2.1 General notes on maintenance	30
2.2 Table of fuels and lubricants	32
2.3 Running-in instructions	33
2.4 Maintenance chart	34
Technical data	37
3.1 Technical data	38
Connection overview	47
4.1 Connection overview	48
Tests and adjustments	51
5.1 Special tools, tests and adjustments	52
5.2 Checking the rotation speeds	56
5.3 Checking / adjusting the neutral positions of the travel pump	58
5.4 Pressure test in the travel circuit	60
5.5 Checking / adjusting the vibrator shaft speeds	62
5.6 Pressure measurements in the vibration circuit	63
5.7 Check the leakage rate of the vibration motor	64
5.8 Pressure test in steering circuit	65
Flushing and bleeding	67
6.1 Special tools for flushing	68
6.2 Flushing - general	73
6.3 Flushing schematic travel circuit (distribution travel pump)	75
6.4 Flushing the travel circuit (travel pump distribution)	77
6.5 Flushing schematic travel circuit (distribution axle motor)	83
6.6 Flushing the travel circuit (axle motor distribution)	88
6.7 Flushing schematic for vibration drive	93
6.8 Flushing the vibration circuit	94
6.9 Bleeding the travel circuit	98
6.10 Bleeding the vibration circuit	100
Fundamental electrics	103
7.1 Understanding circuit diagrams	104
7.2 Terminal designations	109
7.3 Current and voltage	113
7.4 CAN-Bus	116
7.5 Resistance	118
7.6 Series / parallel connection	120
7.7 Ohm's law	122
7.8 Electrical energy	122
7.9 Formula diagram	123
7.10 Metrology	124
7.11 Diodes, relays, fuses	127

Table of Contents

7.12 Batteries	130
7.13 Three-phase generator	133
7.14 Electric starter	141
7.15 Telemecanique switch	144
7.16 Inductive proximity switches	147
7.17 Angle sensors	148
7.18 Plug connectors	150
7.19 Deutsch plug, series DT and DTM	150
7.20 Plugs and terminals in spring clamping technology	157
7.21 Electric modules	160
Special tools, electrics	161
8.1 Special tools, electrics	162
Electronic modules	171
9.1 BEM, BOMAG Evib-meter	173
9.2 Electric module K04	234
9.3 Heating/air conditioning control	238
Speedometer Module	245
10.1 Speedometer module	246
Service Training	249
11.1 Service Training	251
Engine	315
12.1 Diesel engine, general	316
12.2 Service side	317
12.3 Starter side	318
12.4 Lubrication oil circuit	319
12.5 Oil pressure switch and low oil pressure circuitry	321
12.6 Check the engine oil level	322
12.7 Changing engine oil and oil filter cartridges	323
12.8 Coolant circuit	325
12.9 Coolant temperature switch	327
12.10 Disassembling and assembling the coolant temperature switch	328
12.11 Replacing the thermostat	329
12.12 Checking the thermostat in disassembled state	330
12.13 Check the coolant level	331
12.14 Change the coolant	331
12.15 Checking the anti-freeze concentration	332
12.16 Clean the cooling fins on engine and hydraulic oil cooler	333
12.17 Three-phase generator	334
12.18 Fuel supply	336
12.19 Injection system	339
12.20 Injection pump replacement during service	340
12.21 Injection valve replacement during service	349
12.22 Checking / repairing injection valves	352
12.23 Fuel filter	357
12.24 Check, clean the water separator	359
12.25 Change the fuel pre-filter cartridge	359
12.26 Change the fuel filter cartridge	361

12.27	Checking the compression	361
12.28	Check, adjust the valve clearance	362
12.29	Boost fuel solenoid valve	364
12.30	Engine shut-down solenoid	365
12.31	Air filter	366
12.32	Cleaning, changing the dry air filter cartridge	367
12.33	Heating flange on engine	369
12.34	Checking the heating flange control	372
12.35	Electric throttle control	373
12.36	Engine monitoring	375
12.37	Engine	378
12.38	Special tools, Deutz engine (BFM 2012)	380
Air conditioning system		393
13.1	Physical basics	394
13.2	Refrigerant R134a	397
13.3	Compressor oil / refrigeration oil	398
13.4	Working principle of the air conditioning system	399
13.5	Monitoring devices	399
13.6	Description of components	400
13.7	Checking the compressor oil level	406
13.8	Checking the magnetic clutch	407
13.9	Inspection and maintenance work	408
13.10	Checking, replacing the refrigerant compressor V-belt	408
13.11	Service the air conditioning	409
13.12	Drying and evacuation	412
13.13	Emptying in case of repair	412
13.14	Leak test	413
13.15	Filling instructions	414
13.16	Trouble shooting in refrigerant circuit, basic principles	417
13.17	Trouble shooting, refrigerant circuit diagram	421
13.18	Trouble shooting procedure	422
13.19	Steam table for R134a	432
Replacing the cab window panes		437
14.1	Assembly of window panes	438
14.2	Special tools	439
14.3	Auxiliary materials	440
14.4	Removing and installing the window pane	442
Drum		447
15.1	Special tools, drum, single drum rollers	448
15.2	Repair overview for drum	450
15.3	Removing and installing the drum	457
15.4	Repairing the drum	462
15.5	Disassembling and assembling the change-over weight	495
15.6	Changing the rubber buffers and adjusting the pretension	498
Oscillating articulated joint		501
16.1	Special tools, oscillating articulated joint (BW177 to BW 216)	502
16.2	Repair overview oscillating articulated joint	504

[Buy now](#)

[Bomag Single Drum Roller BW211/212/213 D/PD-40 Service Manual PDF](#)
[With Instant Download](#)