

BOMAG

Service - Manual

BW 213 DH-4 BVC


BW 213 DH-4 BVC with attachment plate

Variocontrol / Variocontrol+

S/N 101 583 16

S/N 101 583 06

S/N 101 582 12 S/N 101 582 13

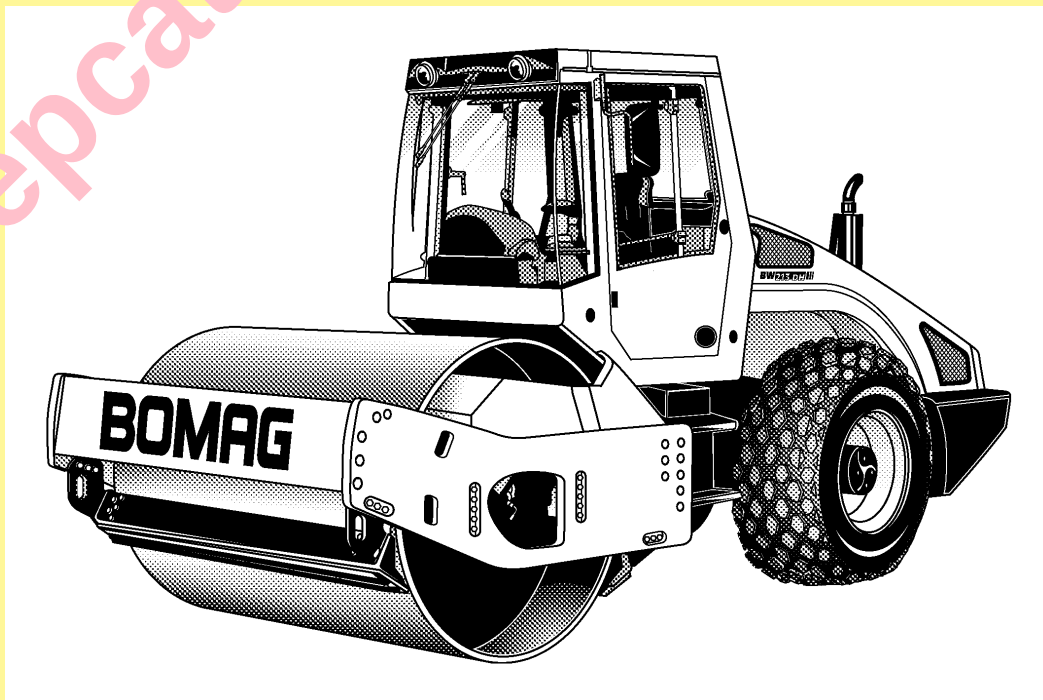

Single drum roller

General	7
1.1 Introduction	8
1.2 Safety regulations	9
1.3 General repair instructions	14
1.4 Tightening torques	26
Maintenance	31
2.1 General notes on maintenance	32
2.2 Fuels and lubricants	33
2.3 Table of fuels and lubricants	36
2.4 Running-in instructions	37
2.5 Maintenance chart	38
Technical data	41
3.1 Technical data	42
Connection overview	53
4.1 Connection overview	54
Tests and adjustments	57
5.1 Special tools, tests and adjustments	58
5.2 Activate service mode	62
5.3 Driving against the closed brake	64
5.4 Turn the steering against an end stop.	66
5.5 Pressure tests in the travel circuit	68
5.6 Checking / adjusting the neutral positions of the travel pump	70
5.7 Pressure measurements in the vibration circuit	72
5.8 Check the leakage rate of the vibration motor	73
5.9 Pressure test in steering circuit	74
Flushing and bleeding	77
6.1 Special tools for flushing	78
6.2 Flushing - general	83
6.3 Flushing schematic travel circuit (distribution travel pump)	85
6.4 Flushing the travel circuit (travel pump distribution)	87
6.5 Flushing schematic travel circuit (distribution axle motor)	93
6.6 Flushing the travel circuit (axle motor distribution)	98
6.7 Flushing schematic for vibration drive	103
6.8 Flushing the vibration circuit	104
6.9 Bleeding the travel circuit	108
6.10 Bleeding the vibration circuit	110
Fundamental electrics	113
7.1 Understanding circuit diagrams	114
7.2 Terminal designations	118
7.3 Current and voltage	122
7.4 Resistance	126
7.5 Series / parallel connection	128
7.6 Ohm's law	130
7.7 Electrical energy	130
7.8 Formula diagram	131
7.9 Metrology	132

Table of Contents

7.10	Diodes, relays, fuses	134
7.11	Batteries	137
7.12	Three-phase generator	140
7.13	Electric starter	148
7.14	Telemecanique switch	151
7.15	Inductive proximity switches	154
7.16	Angle sensor with current output	155
7.17	Plug connectors	156
7.18	Deutsch plug, series DT and DTM	157
7.19	Plugs and terminals in spring clamping technology	163
Special tools, electrics		167
8.1	Special tools, electrics	168
Machine related electrics		177
9.1	Machine related electrics	179
9.2	Electrics MESX	269
Service Training		331
10.1	Service Training Machine	333
10.2	Service Training BVC	411
Engine		467
11.1	Diesel engine	468
11.2	Engine description TCD 2012	469
11.3	Engine description TCD 2013, 4 and 6 cylinder	471
11.4	Lubrication oil circuit TCD 2012 / 2013	475
11.5	Coolant circuit TCD 2012 / 2013	476
11.6	Fuel system TCD 2012 / 2013	477
11.7	Deutz Common Rail (DCR) injection system for TCD 2012 / 2013	481
11.8	Sensors TCD 2012 / 2013	487
11.9	Engine control EDC16 with EMR 3 for TCD 2012 / 2013	502
11.10	Exhaust gas recirculation TCD 2012 / 2013	507
11.11	Fault code monitoring with display TCD 2012 / 2013	508
11.12	Fault code display TCD 2012 / 2013	509
11.13	EMR3 List of fault codes	510
11.14	SerDia Service-Software TCD 2012 / 2013	520
11.15	General trouble shooting chart TCD 2012 / 2013	523
11.16	Valve adjustment TCD 2012 / 2013	525
11.17	Ribbed V-belt - fan drive TCD 2012 / 2013	528
11.18	Special tools, Deutz engine (TCD 2012 2V)	529
11.19	Special tools, Deutz engine (TCD 2013 2V)	544
Air conditioning system		563
12.1	Physical basics	564
12.2	Refrigerant R134a	567
12.3	Compressor oil / refrigeration oil	568
12.4	Working principle of the air conditioning system	569
12.5	Monitoring devices	569
12.6	Description of components	570
12.7	Checking the compressor oil level	576
12.8	Checking the magnetic clutch	577

12.9	Inspection and maintenance work	578
12.10	Checking, replacing the refrigerant compressor V-belt	578
12.11	Service the air conditioning	579
12.12	Drying and evacuation	582
12.13	Emptying in case of repair	582
12.14	Leak test	583
12.15	Filling instructions	584
12.16	Trouble shooting in refrigerant circuit, basic principles	587
12.17	Trouble shooting, refrigerant circuit diagram	591
12.18	Trouble shooting procedure	592
12.19	Steam table for R134a	602
12.20	Heating control / air conditioning control	607
Replacing the cab window panes		613
13.1	Assembly of window panes	614
13.2	Special tools	615
13.3	Auxiliary materials	616
13.4	Removing and installing the window pane	618
Drum		623
14.1	Special tools drum BW 213/226 DH-4 BVC and Variocontrol	624
14.2	Removing and installing the drum	626
14.3	Changing the rubber buffers and adjusting the pretension	634
Drum		637
15.1	Repair overview for drum	638
15.2	Assembly of tapered roller bearing	644
Articulated joint, electric steering		651
16.1	Special tools	652
16.2	Repair overview oscillating articulated joint	654
16.3	Removing and installing the oscillating articulated joint	658
16.4	Dismantling the oscillating articulated joint	661
16.5	Assembling the oscillating articulated joint	665
Articulated joint, hydraulic steering		675
17.1	Special tools	676
17.2	Repair overview oscillating articulated joint	678
17.3	Removing and installing the oscillating articulated joint	681
17.4	Dismantling the oscillating articulated joint	683
17.5	Assembling the oscillating articulated joint	688
Suppliers documentation		699
18.1	Travel pump / vibration pump series 90R	701
18.2	Vibration motor A2FM	791
18.3	Travel drive series 51	821
18.4	Transmission CR	903
18.5	Axle DANA 193	929
18.6	Auxiliary pump for plate, series	1019
Circuit diagrams		1057
19.1	Wiring diagram	1059
19.2	Wiring diagram	1103
19.3	Wiring diagram	1145

[Buy now](#)

[Bomag BW 213 DH-4 BVC Single Drum Roller Service Manual PDF](#)
[With Instant Download](#)