



BOMAG

FAYAT GROUP

Service - Manual

BW 216 D-40 / PD-40

BW 218 D-40

S/N 101 583 39 / S/N 101 583 40
S/N 101 583 41.....>



Single drum roller

General	7
1.1 Introduction	8
1.2 Safety regulations	9
1.3 General repair instructions	14
1.4 Tightening torques	26
Technical data	31
2.1 Technical data	32
Maintenance	39
3.1 General notes on maintenance	40
3.2 Fuels and lubricants	41
3.3 Table of fuels and lubricants	44
3.4 Running-in instructions	45
Caddy wiring diagrams	47
4.1 Understanding circuit diagrams	48
4.2 Circuit symbols in the circuit diagram	53
4.3 Identification of switch blocks in the Caddy wiring diagram	54
4.4 Designation of components in the wiring diagram	55
4.5 Terminal designations in wiring diagram	56
E-Plan wiring diagrams	59
5.1 Understanding wiring diagrams	60
5.2 Circuit symbols in the circuit diagram	69
5.3 Identification of switch blocks in the wiring diagram	72
5.4 Designation of components in the wiring diagram	73
5.5 Terminal designations in wiring diagram	74
Electrics	77
6.1 Designation of components in the wiring diagram	78
6.2 Terminal designations in wiring diagram	79
6.3 Battery ground and analog ground	81
6.4 Current and voltage	81
6.5 Resistance	83
6.6 Series / parallel connection	85
6.7 Ohm's law	87
6.8 Electrical energy	88
6.9 Formula diagram	89
6.10 Metrology	90
6.11 Diodes, relays, fuses	94
6.12 Telemecanique switch	97
6.13 Plug connectors	99
6.14 Magnetic coil plug	99
6.15 Deutsch plug, series DT and DTM	101
6.16 Plugs and terminals in spring clamping technology	106
6.17 Proximity switches	110
6.18 Level sensor in diesel tank (R03)	111
6.19 Differential pressure switch for hydraulic oil filter, B21	112
6.20 Acceleration transducer	114
6.21 Batteries	115

Table of Contents

6.22 Service the battery	119
6.23 Main battery fuse	120
6.24 Starting with jump wires	120
6.25 Generator	121
6.26 Replacing the voltage regulator	130
6.27 Electric starter	132
6.28 Coolant temperature switch	138
6.29 Oil pressure switch and low oil pressure circuitry	139
6.30 Boost fuel solenoid valve	141
6.31 Engine shut-down solenoid	142
6.32 Electric throttle control	143
6.33 Heating flange on engine	145
6.34 Checking the heating flange control	148
6.35 Engine monitoring	149
6.36 Overview of electric components	152
6.37 Operator's stand, old design	163
6.38 Operator's stand, new design	165
6.39 Cabin	166
6.40 Fuses, old design	167
6.41 Fuses, new design	168
6.42 Electronic control units	169
6.43 Checking the voltage supply for the control unit	172
6.44 Diagnostics concept	180
Electronic modules	183
7.1 ECU, BOMAG Evib-meter	185
7.2 Electrics module A68	249
7.3 Electric module K04	257
7.4 Electric module A72, old design	261
7.5 Electric module A108	267
Speedometer module	271
8.1 Speedometer module	272
582 502 15 dust protection / 582 502 16 gasket	275
9.1 Assembling the dust protection	276
Hydraulics	281
10.1 Hydraulic circuit	282
10.2 Connection overview	284
10.3 Travel pump 075	286
10.4 Vibration pumps 42R041 & 42R055	292
10.5 Axial piston swash plate principle / pump	295
10.6 Troubleshooting axial piston pumps	297
10.7 Travel motor 51 C/D 110	300
10.8 Trouble shooting, variable displacement axial piston motor	302
10.9 Vibration motor A10FM 45	304
10.10 Vibration motor 90M 055	305
10.11 Axial piston swash plate principle / motor	307
10.12 External gear pumps	309
10.13 Travel circuit	311

10.14 Adjust the parking brake	316
10.15 Stopping the machine, operating the parking brake	318
10.16 Towing in case of an engine failure	318
10.17 Vibration circuit	321
10.18 Steering circuit	326
10.19 Check the hydraulic oil level	332
10.20 Changing hydraulic oil and breather filter	332
10.21 Replace hydraulic oil filter	333
10.22 Changing the bypass filter	334
Tests and adjustments	335
11.1 Special tools, tests and adjustments	336
11.2 Adjusting the solenoid for engine speed control	340
11.3 Checking the rotation speeds	341
11.4 Checking / adjusting the neutral positions of the travel pump	343
11.5 Pressure tests in the travel circuit	345
11.6 Checking / adjusting the vibrator shaft speeds	347
11.7 Pressure measurements in the vibration circuit	348
11.8 Check the leakage rate of the vibration motor	349
11.9 Pressure test in steering circuit	350
Flushing and bleeding	353
12.1 Special tools for flushing	354
12.2 Flushing - general	359
12.3 Flushing schematic travel circuit (distribution travel pump)	361
12.4 Flushing the travel circuit (travel pump distribution)	363
12.5 Flushing schematic travel circuit (distribution axle motor)	369
12.6 Flushing the travel circuit (axle motor distribution)	374
12.7 Flushing schematic for vibration drive	379
12.8 Flushing the vibration circuit	380
12.9 Bleeding the travel circuit	384
12.10 Bleeding the vibration circuit	386
Air conditioning system	389
13.1 Physical basics	390
13.2 Refrigerant R134a	393
13.3 Compressor oil / refrigeration oil	394
13.4 Working principle of the air conditioning system	395
13.5 Monitoring devices	395
13.6 Description of components	396
13.7 Measuring the compressor oil level	402
13.8 Checking the magnetic clutch	402
13.9 Inspection and maintenance work	403
13.10 Checking, replacing the refrigerant compressor V-belt	404
13.11 Air conditioning service (old design)	405
13.12 Service the air conditioning	407
13.13 Drying and evacuation	410
13.14 Emptying in case of repair	410
13.15 Leak test	411
13.16 Filling instructions	412
13.17 Trouble shooting in refrigerant circuit, basic principles	415

[Buy now](#)

[Bomag BW 216/218 D/PD 40 Single drum roller Service Manual](#)

[With Instant Download](#)