


BOMAG

Service - Manual

BW 219 D-4 / PD-4

S/N 101 582 72> S/N 101 582 73>

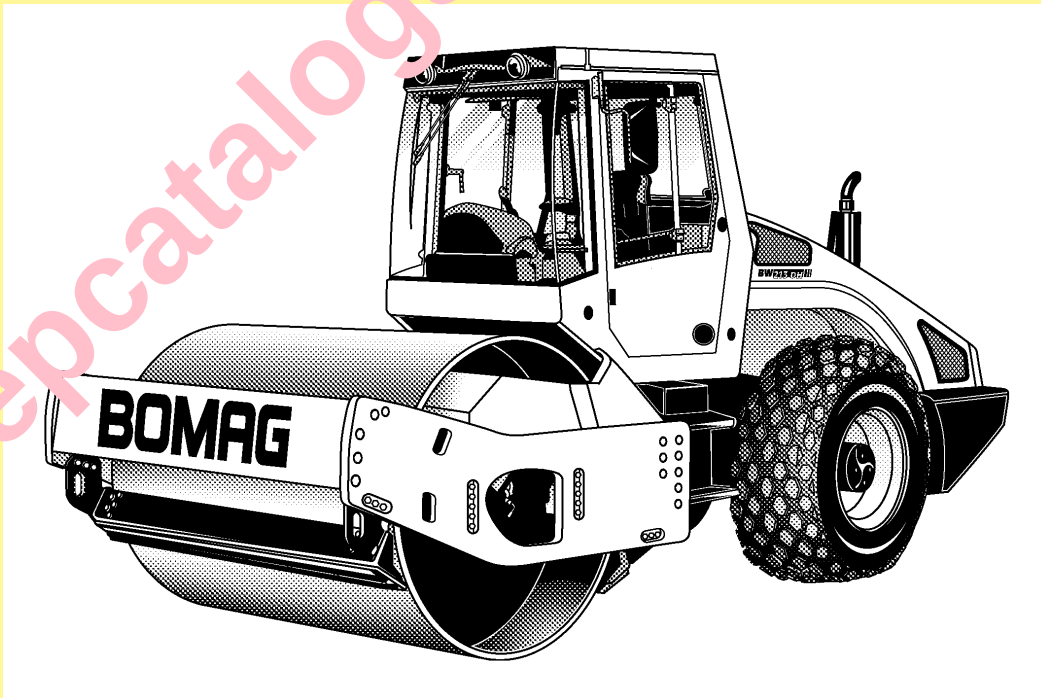

Single drum roller

General	7
1.1 Introduction	8
1.2 Safety regulations	9
1.3 General repair instructions	14
1.4 Tightening torques	24
Maintenance	29
2.1 General notes on maintenance	30
2.2 Fuels and lubricants	31
2.3 Table of fuels and lubricants	34
2.4 Running-in instructions	35
2.5 Maintenance chart	36
Technical data	39
3.1 Technical data	40
Connection overview	45
4.1 Connection overview	46
Tests and adjustments	49
5.1 Special tools, tests and adjustments	50
5.2 Checking the rotation speeds	54
5.3 Checking / adjusting the neutral positions of the travel pump	56
5.4 Pressure tests in the travel circuit	58
5.5 Checking / adjusting the vibrator shaft speeds	60
5.6 Pressure measurements in the vibration circuit	61
5.7 Check the leakage rate of the vibration motor	62
5.8 Pressure test in steering circuit	63
Flushing and bleeding	65
6.1 Special tools for flushing	66
6.2 Flushing - general	71
6.3 Flushing schematic travel circuit (distribution travel pump)	73
6.4 Flushing the travel circuit (travel pump distribution)	75
6.5 Flushing schematic travel circuit (distribution axle motor)	81
6.6 Flushing the travel circuit (axle motor distribution)	86
6.7 Flushing schematic for vibration drive	91
6.8 Flushing the vibration circuit	92
6.9 Bleeding the travel circuit	96
6.10 Bleeding the vibration circuit	98
Fundamental electrics	101
7.1 Understanding circuit diagrams	102
7.2 Terminal designations	106
7.3 Current and voltage	110
7.4 Resistance	114
7.5 Series / parallel connection	116
7.6 Ohm's law	118
7.7 Electrical energy	118
7.8 Formula diagram	119
7.9 Metrology	120
7.10 Diodes, relays, fuses	122

Table of Contents

7.11 Batteries	125
7.12 Three-phase generator	128
7.13 Electric starter	135
7.14 Telemecanique switch	138
7.15 Inductive proximity switches	141
7.16 Angle sensor with current output	142
7.17 Plug connectors	143
7.18 Deutsch plug, series DT and DTM	144
7.19 Plugs and terminals in spring clamping technology	150
Special tools, electrics	155
8.1 Special tools, electrics	156
Machine related electrics	165
9.1 Electrics BEM (BOMAG Evib-meter)	167
9.2 Seat contact module	225
Speedometer Module	233
10.1 Speedometer module	234
Service Training	237
11.1 Service Training Machine	239
Air conditioning system	345
12.1 Physical basis	346
12.2 Refrigerant R134a	349
12.3 Compressor oil / refrigeration oil	350
12.4 Working principle of the air conditioning system	351
12.5 Monitoring devices	351
12.6 Description of components	352
12.7 Checking the compressor oil level	358
12.8 Checking the magnetic clutch	359
12.9 Inspection and maintenance work	360
12.10 Checking, replacing the refrigerant compressor V-belt	360
12.11 Service the air conditioning	361
12.12 Drying and evacuation	364
12.13 Emptying in case of repair	364
12.14 Leak test	365
12.15 Filling instructions	366
12.16 Trouble shooting in refrigerant circuit, basic principles	369
12.17 Trouble shooting, refrigerant circuit diagram	373
12.18 Trouble shooting procedure	374
12.19 Steam table for R134a	384
12.20 Heating control / air conditioning control	389
Replacing the cab window panes	395
13.1 Assembly of window panes	396
13.2 Special tools	397
13.3 Auxiliary materials	398
13.4 Removing and installing the window pane	400
Drum	405
14.1 Special tools, drum, single drum rollers	406
14.2 Repair overview for drum	408

14.3 Removing and installing the drum	417
14.4 Repairing the drum	423
14.5 Dismantling, assembling the change-over weights	455
14.6 Changing the rubber buffers and adjusting the pretension	458
Oscillating articulated joint	461
15.1 Special tools	462
15.2 Repair overview oscillating articulated joint	464
15.3 Removing and installing the oscillating articulated joint	468
15.4 Dismantling the oscillating articulated joint	470
15.5 Assembling the oscillating articulated joint	473
Suppliers documentation	477
16.1 Travel pump / vibration pump series 90R	479
16.2 Travel drive series 51	569
16.3 Transmission CR	651
16.4 Axle DANA 193	677
Circuit diagrams	767
17.1 Wiring diagram	769
17.2 Wiring diagram	799
17.3 Hydraulic diagram	835

[Buy now](#)

[Bomag Single Drum Roller BW 219 D-4/PD-4 Service Manual PDF](#)

[With Instant Download](#)