

**BETRIEBSANLEITUNG
OPERATING INSTRUCTIONS
INSTRUCTIONS DE SERVICE
ISTRUZIONI D'USO
HANDLEIDING
INSTRUCCIONES PARA EL MANEJO
MANUAL DE INSTRUÇÕES
NAUDOJIMOSI INSTRUKCIJA
KASUTUSJUHEND
LIETOŠANAS INSTRUKCIJA
DRIFTSINSTRUKS
DRIFTSINSTRUKTIONER
DRIFTSVEJLEDNING
INSTRUKCJA OBSŁUGI**

**KEZELÉSI ÚTMUTATÓ
NÁVOD K OBSLUZE
NAVODILO ZA UPORABO
NÁVOD NA OBSLUHU
UPUTE ZA RAD
MANUAL DE OPERATII
TREORACHA OIBRIÚCHÁIN
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EL KITABI
ИНСТРУКЦИИ ЗА ЕКСПЛОАТАЦИЯ
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
取扱説明書
사용설명서
使用说明书**

SV 1.50/3

MAKE IT BECKER.



No. _____ year _____

CE

frequency _____ Hz

speed _____ min⁻¹

power required _____ kW

inlet capacity _____ m³/h

pressure _____ mbar

vacuum _____ mbar

Help in Germany

m³/h
mbar

DIN EN ISO 11203
Accuracy Class 2
K_{pA} = 3 dB(A)
l ← 1m

L_{pA} = 62 dB(A) - 50Hz
L_{pA} = 63 dB(A) - 60Hz

1

2

static inst.
①-④

dynamic installation
 Gebr. BECKER

The pump must be securely mounted at the place of installation. Physical tension on the blower housing must be avoided.

8 kg
17,6 lbs

INLET AIR

40°C/104°F
0°C/32°F

max. 90%

max. 800m

A > 100mm

A > 4"

3

4






VACUUM

AIR

>100°C
>212°F

PRESSURE


5

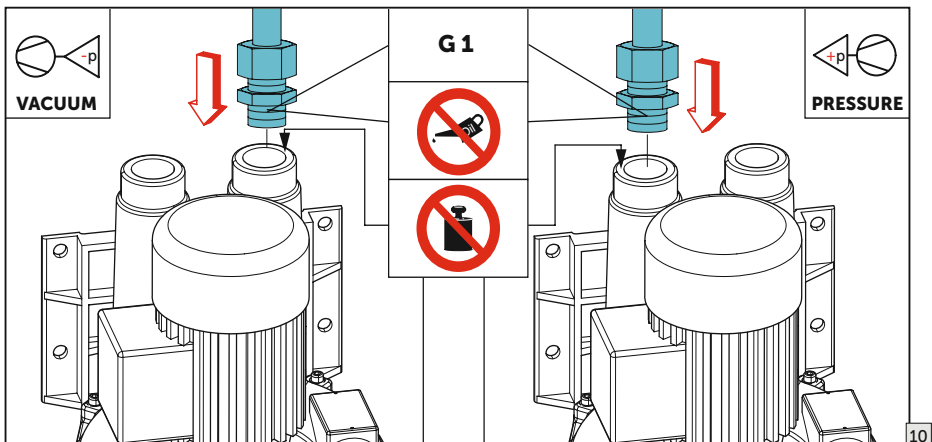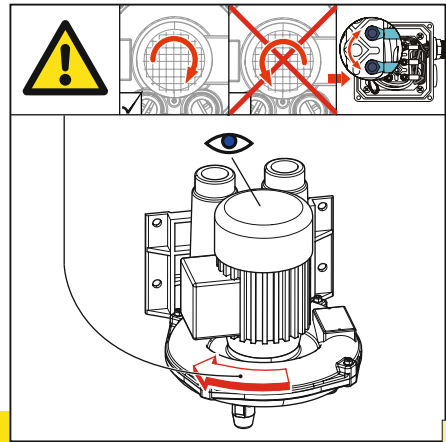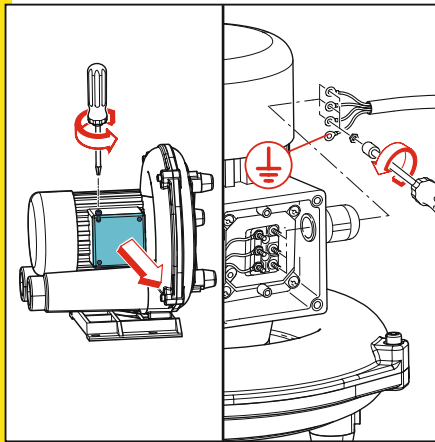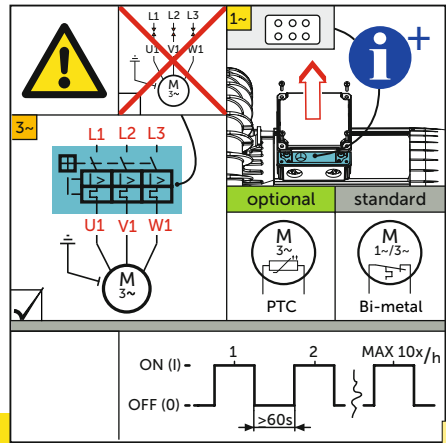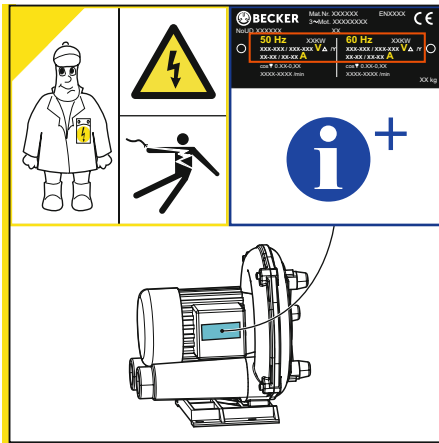

Maintenance




11

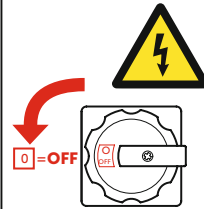

$n=0\text{min}^{-1}$



12

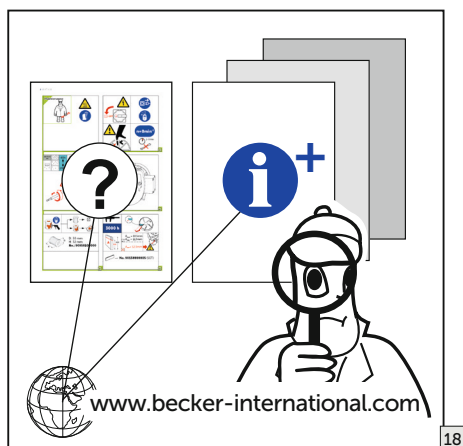

WWW.BECKER-INTERNATIONAL-SHOP.COM

Gebr. Becker GmbH
Hoelker Feld 29-31
42279 WUPPERTAL
GERMANY
info@becker-international.com
www.becker-international.com





MAKE IT BECKER.

2810.0099000 | 2020-01-28 | Alle Rechte vorbehalten