

# Brocade X6-4 Director Hardware Installation Guide

© 2017, Brocade Communications Systems, Inc. All Rights Reserved.

Brocade, the B-wing symbol, and MyBrocade are registered trademarks of Brocade Communications Systems, Inc., in the United States and in other countries. Other brands, product names, or service names mentioned of Brocade Communications Systems, Inc. are listed at [www.brocade.com/en/legal/brocade-Legal-intellectual-property/brocade-legal-trademarks.html](http://www.brocade.com/en/legal/brocade-Legal-intellectual-property/brocade-legal-trademarks.html). Other marks may belong to third parties.

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Brocade. Brocade reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Brocade sales office for information on feature and product availability. Export of technical data contained in this document may require an export license from the United States government.

The authors and Brocade Communications Systems, Inc. assume no liability or responsibility to any person or entity with respect to the accuracy of this document or any loss, cost, liability, or damages arising from the information contained herein or the computer programs that accompany it.

The product described by this document may contain open source software covered by the GNU General Public License or other open source license agreements. To find out which open source software is included in Brocade products, view the licensing terms applicable to the open source software, and obtain a copy of the programming source code, please visit <http://www.brocade.com/support/oscd>.

# Contents

---

<b>Preface.....</b>	<b>9</b>
Document conventions.....	9
Notes, cautions, and warnings.....	9
Text formatting conventions.....	9
Command syntax conventions.....	10
Brocade resources.....	10
Document feedback.....	10
Contacting Brocade Technical Support.....	11
Brocade customers.....	11
Brocade OEM customers.....	11
<b>About This Document.....</b>	<b>13</b>
Supported hardware and software.....	13
What is new in this document.....	14
<b>Device Overview.....</b>	<b>15</b>
Product features.....	15
Hardware components.....	15
Port-side view of device.....	16
Port-side slot numbering.....	18
Nonport-side view of the device .....	18
<b>Preparing for the Installation.....</b>	<b>21</b>
Safety precautions.....	21
General precautions.....	21
ESD precautions.....	22
Power precautions.....	22
Lifting precautions.....	22
Laser precautions.....	23
Facility requirements.....	23
Time and items required for installation.....	24
Quick installation checklists.....	25
Pre-installation tasks.....	25
Installation and initial configuration.....	25
Items shipped.....	26
<b>Mounting the Device.....</b>	<b>29</b>
Mounting options.....	29
Mounting precautions.....	29
Unpacking and transporting the device.....	30
Installing the 8U Chassis Airflow Diversion or Port Side Exhaust Kit for Four-Post Racks (XBR-DCX4S-0121 and XBR-DCX4S-0130) .....	31
Time and items required.....	32
Installing the device in an 18-24-inch rack (XBR-DCX4S-0130).....	32
Installing the device in a 27-31-inch rack (XBR-DCX4S-0121) .....	40
Installing the 8U Chassis Mid-Mount Rack Kit for Two-Post Racks (XBR-DCX4S-0126 and XBR-X64-0126).....	49
Time and items required.....	49
Parts list.....	49

Assembling the rack hardware.....	51
Installing the device in the rack.....	54
Installing the 8U Chassis 27-31-Inch Rail Rack Kit for Four-Post Racks (XBR-DCX4S-0120).....	56
Time and items required.....	57
Parts list.....	57
Assembling the rack hardware.....	58
Installing the device in the rack.....	60
Removing logo bezel protective cover.....	62
<b>Initial Setup and Verification.....</b>	<b>65</b>
Configuration and verification task guide.....	65
Items required.....	66
Providing power to the device.....	66
Connecting power cord to AC power supplies.....	67
Connecting power cord to HVAC/HVDC power supplies.....	68
Establishing a serial connection to the device.....	73
Configuring the IP addresses.....	74
Establishing an Ethernet connection to the device.....	76
Setting the domain ID.....	77
Setting the date and time.....	77
Setting the time zone.....	78
Synchronizing local time with an external source.....	80
Customizing the chassis and switch name.....	80
Verifying installed licenses and license key.....	81
Verifying correct operation.....	81
Backing up the configuration.....	82
Powering down the chassis.....	83
<b>Installing Transceivers and Cables.....</b>	<b>87</b>
Supported transceivers and cables.....	87
Port and extension blade transceivers .....	88
Core routing blades.....	89
Time and items required.....	92
Precautions specific to transceivers and cables.....	92
Cleaning the fiber-optic connectors.....	93
Cable management.....	93
Installing an SFP+ transceiver.....	94
Replacing an SFP+ transceiver.....	96
Installing a QSFP transceiver.....	98
Replacing a QSFP transceiver.....	99
Verifying the operation of new transceivers.....	101
<b>Monitoring the Device.....</b>	<b>103</b>
Introduction.....	103
Interpreting port blade LEDs.....	103
Interpreting extension blade LEDs.....	105
Interpreting control processor blade LEDs.....	106
Interpreting core routing blade LEDs.....	108
Interpreting WWN card LEDs.....	109
Interpreting power supply LEDs.....	110
Interpreting fan assembly LEDs.....	113
Interpreting POST and boot results.....	114

POST.....	114
Boot.....	114
Using monitoring commands.....	115
chassisShow.....	115
errDump and errShow.....	118
fanShow.....	118
haShow.....	118
historyShow.....	119
psShow.....	120
sensorShow.....	120
slotShow.....	121
sfpShow.....	121
switchShow.....	125
supportSave.....	125
tempShow.....	127
Running diagnostic tests.....	128
<b>Port and Extension Blades.....</b>	<b>131</b>
Port blade overview.....	131
FC32-48 blade port numbering and trunking.....	131
Extension blade overview.....	132
Extension features.....	133
SX6 blade port numbering and trunking.....	134
Precautions specific to the blade.....	134
Faulty blade indicators.....	135
Time and items required for removal and installation.....	135
Removing a blade.....	136
Installing a blade.....	137
Verifying blade operation.....	138
<b>Core Routing Blades.....</b>	<b>141</b>
Core routing blade overview.....	141
CR32-4 port numbering.....	141
ICL trunking groups.....	142
ICL cabling configurations.....	143
Precautions specific to the blade.....	144
Faulty core routing blade indicators.....	145
Time and items required.....	146
Replacing a core routing blade.....	146
Preparing for replacement.....	146
Removing a core routing blade.....	147
Installing a core routing blade.....	148
Verifying blade operation.....	149
<b>Control Processor Blades.....</b>	<b>151</b>
Control processor blade overview.....	151
CPX6 port identification.....	152
Precautions specific to the blade.....	152
Blade fault indicators.....	153
Blade replacement task guide.....	153
Replacing CP blade (hot-swap).....	154
Replacing a CP blade (cold-swap).....	154

Time and items required for replacement.....	154
Preparing for replacement.....	155
Replacing a CP blade.....	156
Hot-swap procedure.....	156
Cold-swap procedure.....	162
Completing the replacement.....	164
Verifying blade operation.....	165
<b>WWN Cards.....</b>	<b>167</b>
WWN card overview.....	167
WWN card location and numbering.....	167
Precautions specific to WWN cards.....	168
WWN card fault indicators.....	169
WWN card replacement task guide.....	170
Replacing WWN cards (hot-swap).....	170
Replacing WWN cards (cold-swap).....	170
Time and items required for replacement.....	170
Using the wwnrecover utility.....	171
Preparing for WWN card replacement.....	171
Hot-swap replacement.....	173
Cold-swap replacement.....	174
Removing the WWN card and bezel.....	176
Configuring airflow direction on WWN cards.....	177
Verifying WWN card operation.....	178
<b>Power Supply Assemblies.....</b>	<b>179</b>
AC power supply overview.....	179
HVAC/HVDC power supply overview.....	180
Power supply assembly numbering.....	182
Fan and power supply airflow.....	182
Precautions specific to power supply assembly.....	184
Power supply assembly fault indicators.....	184
Power supply assembly task guide.....	184
Installing additional power supply (hot-install).....	185
Replacing power supply assembly (hot-swap).....	185
Replace or install power supply assembly (cold-install or cold-swap).....	185
Time and items required.....	186
Removing a power supply.....	186
Installing a power supply.....	187
Verifying power supply operation.....	188
<b>Fan Assemblies.....</b>	<b>189</b>
Fan assembly overview.....	189
Fan and power supply airflow.....	190
Fan assembly numbering.....	191
Precautions specific to fan assemblies.....	192
Fan assembly fault indicators.....	192
Fan assembly task guide.....	192
Replacing fan assembly (hot-swap).....	193
Replacing fan assembly (cold-swap).....	193
Time and items required.....	193
Removing a fan assembly .....	193

Installing a fan assembly.....	194
Verifying fan operation.....	195
<b>Blade Filler Panels.....</b>	<b>197</b>
Blade filler panel removal and replacement.....	197
Removing a filler panel.....	197
Installing a filler panel.....	198
<b>Cable management fingers.....</b>	<b>201</b>
Cable management fingers overview.....	201
Time and items required for removal and replacement.....	201
Removing the cable management finger assembly.....	201
Installing the cable management fingers.....	203
<b>Chassis door.....</b>	<b>205</b>
Chassis door overview.....	205
Time and items required.....	205
Removing a chassis door.....	205
Installing a chassis door.....	206
<b>Replacing the Chassis.....</b>	<b>211</b>
Chassis replacement overview.....	211
Precautions specific to chassis replacement.....	211
Chassis replacement task guide.....	212
Chassis fault indicators.....	212
Time and items required.....	213
Preparing for replacement.....	213
Recording critical device and SAN information.....	214
Disconnecting from network and fabric.....	217
Removing components from the chassis.....	217
Installing the replacement chassis.....	218
Installing components into the chassis.....	218
Synchronizing airflow direction on WWN cards.....	219
Downloading the configuration.....	220
Reconnecting system to the network and fabric.....	220
Verifying correct operation of system.....	221
Verifying correct configuration of the fabric.....	223
<b>Brocade X6 Directors Technical Specifications.....</b>	<b>225</b>
System specifications.....	225
Fibre channel.....	227
LEDs.....	227
Other.....	228
Weight and physical dimensions.....	228
Environmental requirements.....	229
Power supply specifications (per PSU).....	229
Power supply requirements.....	230
Power consumption for AC power supplies (typical configuration).....	231
Power consumption for AC power supplies (idle configuration).....	231
Power consumption for AC power supplies (maximum configuration).....	232
Power consumption for HVAC/HVDC power supplies (typical configuration).....	232
Power consumption for HVAC/HVDC power supplies (idle configuration).....	233
Power consumption for HVAC/HVDC power supplies (maximum configuration).....	233

Power consumption (modules).....	234
Fibre Channel data transmission ranges.....	235
Data port specifications (Fibre Channel).....	235
Class 1M transceiver specification.....	236
Serial port specifications (pinout RJ-45).....	236
Serial port specifications (protocol).....	236
Memory specifications (per CP blade).....	236
Regulatory compliance (EMC).....	237
Regulatory compliance (safety).....	237
Regulatory compliance (environmental).....	237
<b>Regulatory Statements.....</b>	<b>239</b>
BSMI statement (Taiwan).....	239
Canadian requirements.....	239
CE statement.....	239
China ROHS.....	240
FCC warning (US only).....	240
KCC statement (Republic of Korea).....	240
VCCI statement.....	240
Germany statement.....	240
<b>Cautions and Danger Notices.....</b>	<b>241</b>
Cautions.....	241
General cautions.....	241
Electrical cautions.....	243
Cautions related to equipment weight.....	245
Danger Notices.....	246
General dangers.....	246
Dangers related to equipment weight.....	246
Electrical dangers.....	247
Laser dangers.....	248



# Preface

---

• Document conventions.....	9
• Brocade resources.....	10
• Document feedback.....	10
• Contacting Brocade Technical Support.....	11

## Document conventions

The document conventions describe text formatting conventions, command syntax conventions, and important notice formats used in Brocade technical documentation.

## Notes, cautions, and warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

### NOTE

A Note provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

### ATTENTION

An Attention statement indicates a stronger note, for example, to alert you when traffic might be interrupted or the device might reboot.



### CAUTION

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



### DANGER

*A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.*

## Text formatting conventions

Text formatting conventions such as boldface, italic, or Courier font may be used to highlight specific words or phrases.

Format	Description
<b>bold text</b>	Identifies command names.
	Identifies keywords and operands.
	Identifies the names of GUI elements.
<i>italic text</i>	Identifies text to enter in the GUI.
	Identifies emphasis.
Courier font	Identifies variables.
	Identifies document titles.
	Identifies CLI output.

Format	Description
	Identifies command syntax examples.

## Command syntax conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

Convention	Description
<b>bold text</b>	Identifies command names, keywords, and command options.
<i>italic text</i>	Identifies a variable.
value	In Fibre Channel products, a fixed value provided as input to a command option is printed in plain text, for example, <b>--show</b> WWN.
[ ]	Syntax components displayed within square brackets are optional.  Default responses to system prompts are enclosed in square brackets.
{ x   y   z }	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.  In Fibre Channel products, square brackets may be used instead for this purpose.
x   y	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, for example, passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member[member...]</i> .
\	Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

## Brocade resources

Visit the Brocade website to locate related documentation for your product and additional Brocade resources.

White papers, data sheets, and the most recent versions of Brocade software and hardware manuals are available at [www.brocade.com](http://www.brocade.com). Product documentation for all supported releases is available to registered users at [MyBrocade](http://MyBrocade).

Click the **Support** tab and select **Document Library** to access product documentation on [MyBrocade](http://MyBrocade) or [www.brocade.com](http://www.brocade.com). You can locate documentation by product or by operating system.

Release notes are bundled with software downloads on [MyBrocade](http://MyBrocade). Links to software downloads are available on the MyBrocade landing page and in the Document Library.

## Document feedback

Quality is our first concern at Brocade, and we have made every effort to ensure the accuracy and completeness of this document. However, if you find an error or an omission, or you think that a topic needs further development, we want to hear from you. You can provide feedback in two ways:

- Through the online feedback form in the HTML documents posted on [www.brocade.com](http://www.brocade.com)
- By sending your feedback to [documentation@brocade.com](mailto:documentation@brocade.com)

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.

# Contacting Brocade Technical Support

As a Brocade customer, you can contact Brocade Technical Support 24x7 online or by telephone. Brocade OEM customers should contact their OEM/solution provider.

## Brocade customers

For product support information and the latest information on contacting the Technical Assistance Center, go to [www.brocade.com](http://www.brocade.com) and select **Support**.

If you have purchased Brocade product support directly from Brocade, use one of the following methods to contact the Brocade Technical Assistance Center 24x7.

Online	Telephone
<p>Preferred method of contact for non-urgent issues:</p> <ul style="list-style-type: none"> <li>• Case management through the <a href="#">MyBrocade</a> portal.</li> <li>• Quick Access links to Knowledge Base, Community, Document Library, Software Downloads and Licensing tools</li> </ul>	<p>Required for Sev 1-Critical and Sev 2-High issues:</p> <ul style="list-style-type: none"> <li>• Continental US: 1-800-752-8061</li> <li>• Europe, Middle East, Africa, and Asia Pacific: +800-AT FIBREE (+800 28 34 27 33)</li> <li>• <a href="#">Toll-free numbers</a> are available in many countries.</li> <li>• For areas unable to access a toll-free number: +1-408-333-6061</li> </ul>

## Brocade OEM customers

If you have purchased Brocade product support from a Brocade OEM/solution provider, contact your OEM/solution provider for all of your product support needs.

- OEM/solution providers are trained and certified by Brocade to support Brocade® products.
- Brocade provides backline support for issues that cannot be resolved by the OEM/solution provider.
- Brocade Supplemental Support augments your existing OEM support contract, providing direct access to Brocade expertise. For more information, contact Brocade or your OEM.
- For questions regarding service levels and response times, contact your OEM/solution provider.



# About This Document

- Supported hardware and software.....13
- What is new in this document.....14

## Supported hardware and software

The following tables list the major field replaceable units (FRUs) and rack mount kits supported for the Brocade X6 Director. First release of this product was at Fabric OS 8.0.1.

**TABLE 1** OS-dependent FRUs

FRU	Part Number	Short Description	Introduced (OS)	Currently supported
<b>AC power supply</b>	XBR-X6-RACNPIPSU-0104	Provides 1450 W (100-120 VAC) and 2870 W (200-240 VAC). This model supports nonport-side intake (NPI) airflow.	Fabric OS 8.0.1	Yes
	XBR-X6-RACNPEPSU-0104	Provides 1450 W (100-120 VAC) and 2870 W (200-277 VAC). This model supports nonport-side exhaust (NPE) airflow.	Fabric OS 8.0.1	Yes
<b>HVAC/HVDC power supply</b>	XBR-X6-HVNPIPSU-0104	Dual-function high-voltage model provides the following power output from either high-voltage AC or DC power source: <ul style="list-style-type: none"> <li>• 1450 W (100-120 VAC)</li> <li>• 2870 W (200-277 VAC)</li> <li>• 2870 W (240-380 VDC)</li> </ul> This model supports nonport-side intake (NPI) airflow.	Fabric OS 8.1.0a	Yes
	XBR-X6-HVNPEPSU-0104	Dual-function high-voltage model provides the following power output from either high-voltage AC or DC power source: <ul style="list-style-type: none"> <li>• 1450 W (100-120 VAC)</li> <li>• 2870 W (200-277 VAC)</li> <li>• 2870 W (240-380 VDC)</li> </ul> This model supports nonport-side exhaust (NPE) airflow.	Fabric OS 8.1.0a	Yes
<b>Fan assembly</b>	XBR-X6-NPI-0122	Supports NPI airflow	Fabric OS 8.0.1	Yes
	XBR-X6-NPE-0122	Supports NPE airflow	Fabric OS 8.0.1	Yes
<b>FC32-48 blade</b>	XBR-X6-0148	Fibre Channel port blade with 48 32-Gbps SFP+ ports	Fabric OS 8.0.1	Yes
<b>CPX6 blade</b>	XBR-CPX6-0103	Control processor (CP) blade	Fabric OS 8.0.1	Yes
<b>CR32-4 blade</b>	XBR-X64-0106	Core routing (CR) blade with 8 4x32-Gbps QSFP+ ports for Brocade X6-4 Director	Fabric OS 8.0.1	Yes
<b>SX6 blade</b>	XBR-SX6-0000	Extension (X) blade with 16 32-Gbps Fibre Channel SFP+ ports, 16 10-GbE SFP+ ports, and 2 40-GbE QSFP+ ports	Fabric OS 8.0.1	Yes
<b>WWN card</b>	XBR-X6-0124	World Wide Name card	Fabric OS 8.0.1	Yes

TABLE 1 OS-dependent FRUs (continued)

FRU	Part Number	Short Description	Introduced (OS)	Currently supported
Blade slot filler panel	XBR-X6-0128	Required to cover empty slot to maintain airflow in chassis.	Fabric OS 8.0.1	Yes
Power supply assembly slot filler panel	XBR-X6-0130	Required to cover empty slot to maintain airflow in chassis.	Fabric OS 8.0.1	Yes

TABLE 2 Rack mount kits

Kit	Part Number	Short Description
Rack mount kits	XBR-DCX4S-0120	27-31-in. rail rack mount kit for four-post rack
	XBR-DCX4S-0121	Airflow diversion kit for four-post rack (27-31 in.)
	XBR-DCX4S-0130	Airflow diversion kit for four-post rack (18-24 in.)
	XBR-X64-0126	8U mid-mount rack kit for X6-4 Director for two-post rack

## What is new in this document

The following changes have been made in this document:

- Removed "Verifying the PID mode" section from "Initial setup and configuration" section because it is no longer a configuration requirement.
- Modified the following sections in [Replacing the Chassis](#) on page 211:
  - [Recording critical device and SAN information](#) on page 214 – Revised introduction to using critical information checklist, removed note to run **supportShow** command, removed -sw option from step to enter **ipAddrShow** command, and added more information to step to enter **supportShow** command.
  - [Reconnecting system to the network and fabric](#) on page 220 – Revised step 1 to include references to sections in "Initial configuration" for connecting serial cable, establishing a serial connection, configuring IP addresses, and establishing an Ethernet connection to the device.
  - [Verifying correct operation of system](#) on page 221 – Moved this section to after [Reconnecting system to the network and fabric](#) on page 220.
  - [Verifying correct configuration of the fabric](#) on page 223 – Added step to modify SCC policy for fabric, if one exists, to add WWN of new chassis.
- In [Brocade X6 Directors Technical Specifications](#) on page 225, modified the "Fibre Channel data transmission ranges" table. For 32 Gbps transmission, under 50nm, the OM2 range was doubled to 20m, and the extra OM4 entry was removed. Under 9nm, the 10m value was replaced with "N/A".

# Device Overview

---

• Product features.....	15
• Hardware components.....	15
• Port-side view of device.....	16
• Port-side slot numbering.....	18
• Nonport-side view of the device .....	18

## Product features

Key product features for this device include the following:

- Redundant and hot-swappable SFP, SFP+, SFP28, and QSFP+ transceivers; port, extension, control processor (CP) and core routing (CR) blades; power supply assemblies, fan assemblies, and WWN cards that enable a high availability platform and allow nondisruptive software upgrades for mission-critical SAN applications.
- Up to 192 32-Gbps external ports and 16 4x32-Gbps QSFP (ICL) ports in a single chassis, enabling high density SAN configurations with reduced footprint.
- Support for 48 4-, 8-, 16-, and 32-Gbps autosensing Fibre Channel ports on FC32-48 port blades. Trunking technology groups up to eight ports to create high performance 256-Gbps ISL trunks between switches using 32-Gbps ports.
- 10-Gbps FC-type SFPs on FC32-48 port blades and 10-GbE SFPs on the SX6 application blades. The two types of SFPs are not interchangeable. The 10-Gbps transceivers can be used for any port on the FC32-48 port blades.
- Support for 16 Fibre Channel ports supporting 4-, 8-, 16-, and 32-Gbps; 16 GbE ports supporting 1 or 10 Gbps; and two GbE ports supporting 40 Gbps on SX6 extension blades. Trunking technology groups up to eight ports to create high performance 256-Gbps ISL trunks between switches using 32-Gbps ports.
- Support for FC quad SFP (QSFP) ports supporting 4x16 Gbps and 4x32 Gbps on core CR blades. Up to nine chassis in a full-mesh topology and 12 chassis in a core-to-edge topology can be connected using these Fibre Channel ports for inter-chassis links (ICLs).
- Universal ports that self-configure as E\_Ports, F\_Ports, EX\_Ports, M\_Ports (mirror ports), and FICON ports. The 10-Gbps ports on the port blade can function as E\_Ports only.
- ClearLink Diagnostic port (D\_Port) functionality on Fibre Channel ports.
- Data compression capabilities through the port blades when ports are configured as ISLs.
- The SX6 blades perform as extension platforms to support Fibre Channel (FC) and FICON data flows and IP-based storage data flows over an IP WAN.

## Hardware components

The device has a modular and scalable mechanical construction that allows a wide range of flexibility in installation, fabric design, and maintenance. The device can be mounted with the cables facing either the front or the rear of the equipment rack, and consists of the following:

- Up to four slots for hot-swappable port blade assemblies, providing up to 192 32-Gbps Fibre Channel ports.
- Two half-size slots for control processor (CP) blades:
  - A single active CP blade can control all the ports in the device.
  - The standby CP blade assumes control of the device if the active CP blade fails.

- Two slots for core routing (CR) blades:
  - CR blade interconnects all port blades.
  - Up to 16 4x32-Gbps QSFP (ICL) ports.
  - ICL ports allow interconnection with neighboring Director chassis
  - Both CR blades are active and can be hot-swapped.
- Up to four slots for modular, hot-swappable 34-port SX6 extension blades. Blades provide 16 32-Gbps Fibre Channel (FC) ports supporting 8, 16, and 32 Gbps or 16 16-Gbps FC ports supporting 4, 8, and 16 Gbps; 16 GbE ports supporting 1 or 10 Gbps; and 2 GbE ports supporting 40 Gbps. Extension blades enable long-distance communication over an existing IP infrastructure.
- Modular, hot-swappable field-replaceable units (FRUs):
  - Two fan assemblies, available with nonport-side intake (NPI) or nonport-side exhaust (NPE) airflow.
  - Up to two power supply assemblies, available with nonport-side intake (NPI) or nonport-side exhaust (NPE) airflow.
    - › Refer to the "Power supply specifications (per PSU)" in the [Brocade X6 Directors Technical Specifications](#) on page 225 for maximum output power, input voltage, input line frequency, and other specifications for your power supply model.
    - › Refer to the "Power supply requirements" section in the [Brocade X6 Directors Technical Specifications](#) on page 225 for the minimum number of power supplies required for operation and redundancy when different input voltages are used, such as low line and high line AC.
    - › Refer to "Power Consumption" sections in the [Brocade X6 Directors Technical Specifications](#) on page 225 for power output data and minimum number of power supplies for supported input voltages.
    - › Redundant primary power connections ensure high availability. Each power supply assembly has its own connector, so the number of primary power connections is two for optimum efficiency and redundancy.
  - Two World Wide Name (WWN) cards located on the nonport side of the device behind the WWN card bezel.
  - Blades use small form-factor pluggable (SFP+ and QSFP+) optical transceivers.
    - › The 10-Gbps speed must be manually set and requires special 10-Gbps FC SFP+ transceivers.
    - › The 32-Gbps SFP+ transceivers support speeds of 8, 16, and 32 Gbps.
    - › The 16-Gbps SFP+ transceivers support speeds of 4, 8, and 16 Gbps.
    - › The 4x32-Gbps QSFP+ transceivers on the core routing blades provide four 32-Gbps inter-chassis links (ICL) clustered in a single quad connector and cable.
    - › The 4x16-Gbps QSFP+ transceivers on the core routing blades provide four 16-Gbps inter-chassis links (ICL) clustered in a single quad connector and cable).
- Chassis door. This door must be installed to meet EMI compliance certification.
- Two vertical cable management finger assemblies. These install on the equipment rack for cable management.


#### NOTE

Device control processors and management modules contain batteries for RTC/NVRAM backup. Do not attempt to replace these batteries. Dispose of hardware components containing these batteries as required by local ordinances and regulations.

## Port-side view of device

The following illustration shows the port-side view of the Brocade X6-4 Director with installed blades identified. Note that an SX6 extension blades are not shown in the following illustration, but would install in the same slots as the FC32-48 port blades. A maximum of four SX6 blades are supported.

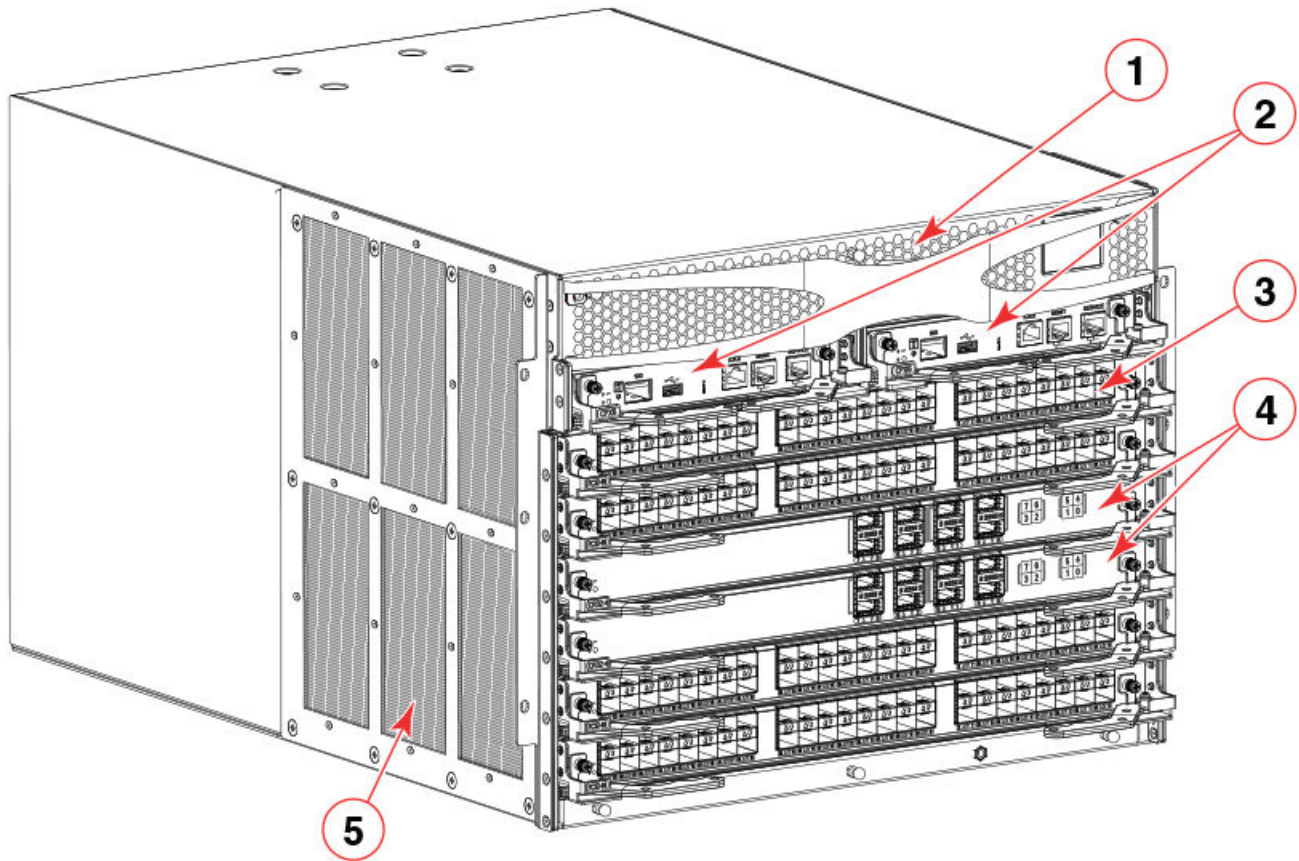

**FIGURE 1** Port side of the Brocade X6-4 Director (sample configuration)

- |  |                                 |
|--|---------------------------------|
| 1. Front air vent  | 4. Core routing blades (CR32-4) |
| 2. Control processor blades (CPX6) – slot 1 (left), slot 2 (right) | 5. Side air vent                |
| 3. Port blades (FC32-48)   |                                 |

**NOTE**

When nonport-side exhaust (NPE) fan and power supply assemblies are installed, air flows through the side vent and exhausts to the nonport side. When nonport-side intake (NPI) fan and power supply assemblies are installed, air flows from the nonport-side and exhausts through the side vent. When installing the chassis in a four-post rack with the airflow diversion rack mount kit, airflow is redirected to or from the port side of the chassis. Therefore, if NPE fan and power supply assemblies are installed, air flows into port-side air vents and exhausts to the nonport side. If NPI fan and power supply assemblies are installed, air flows into nonport-side air vents and exhausts through to the port-side.

**CAUTION**

Do not attempt to lift or support the chassis by the logo bezel attached over the port-side air vents.

**NOTE**

Be careful to not push on mesh screen covering the side air vent or poke it with sharp objects.

## Port-side slot numbering


The Brocade X6-4 Director contains 6 full-width slots and two half-width slots, for a total of 8 slots. Facing the port side of the device, the half-width slots are on the top, numbered 1 and 2 from left to right. The remaining full-width slots are numbered 3 through 8, counting from top to bottom of chassis.

Slots contain guide pins and connectors designed for specific blade types. Only install the control processor (CP), core routing (CR), port, and extension blades into slot numbers as follows:

- Slots 1-2 are restricted to CP blades. Note that the blade installed in slot 1 will be designated as CP0, while the blade in slot 2 will be designated as CP1 in CLI command and message output.
- Slots 3-4 and slots 7-8 are restricted to port and extension blades.
- Slots 5-6 are restricted to CR32-4 blades.

## Nonport-side view of the device

The following illustration shows the nonport-side view of the Brocade X6-4 Director with all fan and power supply assemblies installed.

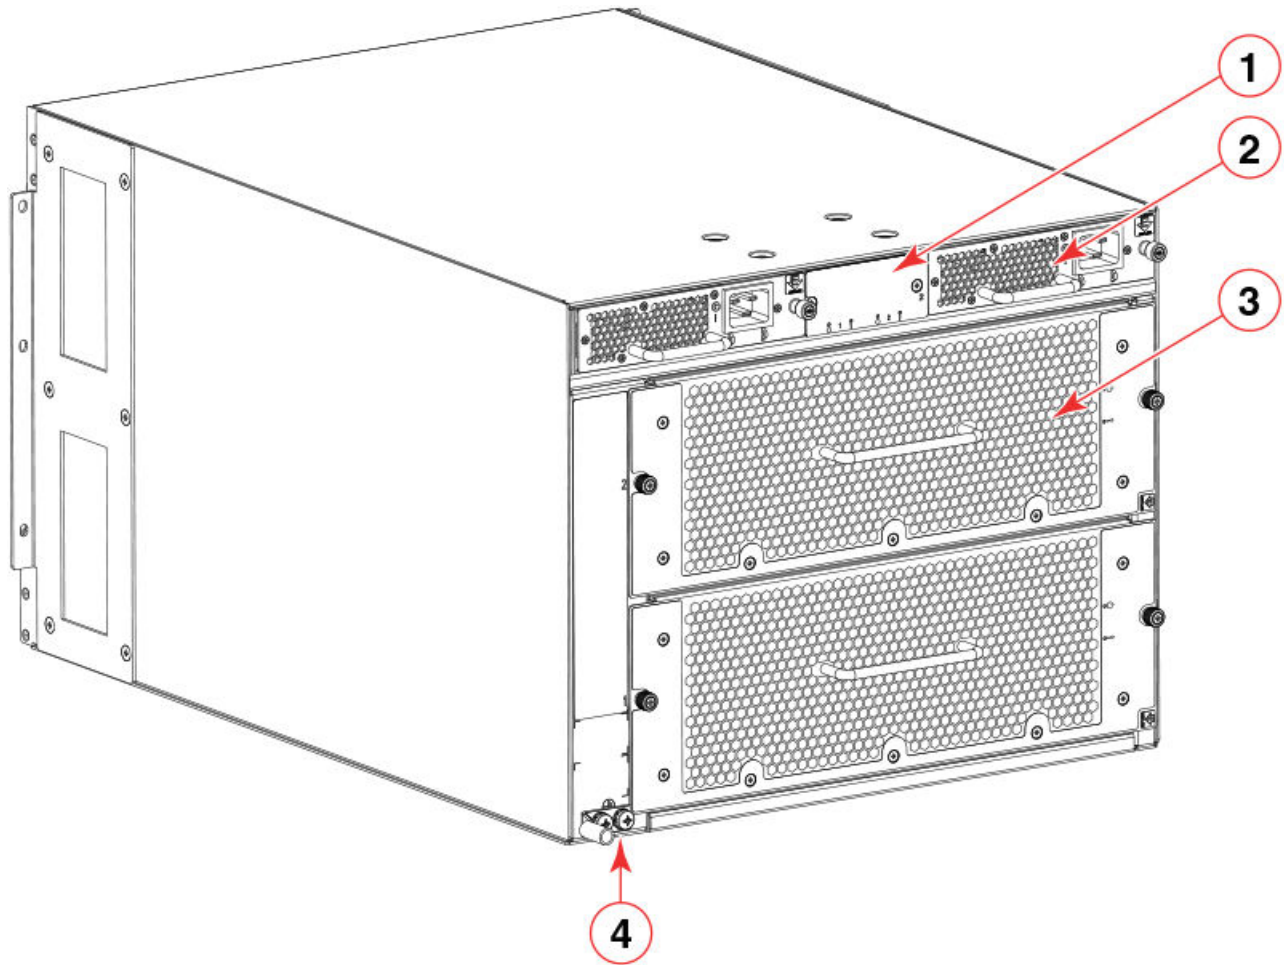**FIGURE 2** Nonport side of the Brocade X6-4 Director (sample configuration)

- |  |  |
|--|--|
| 1. WWN bezel (logo plate - WWN cards behind) | 3. Fan assembly  |
| 2. Power supply assembly                     | 4. 2AWG Panduit LCD2-14AF lug for building ground connection |

Depending on fans and power supplies installed, airflow can be from the port side to the nonport side or the nonport side to the port side of the chassis through the side air vent. Use the Chassis Airflow Diversion and Port Side Exhaust Kit to divert airflow so that air fully exhausts to the port side of the chassis or is fully drawn from the port side of the chassis while mounted in a four-post rack.

Although not illustrated, the chassis label containing the serial number, SKU, and WWN is located on the upper portion of the chassis to the left of the fan assemblies.



# Preparing for the Installation

• Safety precautions.....	21
• Facility requirements.....	23
• Time and items required for installation.....	24
• Quick installation checklists.....	25
• Items shipped.....	26

## Safety precautions

When using this product, observe all danger, caution, and attention notices in this manual. The safety notices are accompanied by symbols that represent the severity of the safety condition

Refer to the Cautions and Danger Notices at the end of this guide for translations of safety notices for this product.

### General precautions



#### DANGER

*The procedures in this manual are for qualified service personnel.*



#### DANGER

*Before beginning the installation, see the precautions in “Power precautions.”*



#### CAUTION

Changes or modifications made to this device that are not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.



#### CAUTION

Disassembling any part of the power supply and fan assembly voids the warranty and regulatory certifications. There are no user-serviceable parts inside the power supply and fan assembly.



#### CAUTION

Make sure the airflow around the front, and back of the device is not restricted.



#### CAUTION

To protect the serial port from damage, keep the cover on the port when not in use.



#### CAUTION

Never leave tools inside the chassis.



#### CAUTION

Use the screws specified in the procedure. Using longer screws can damage the device.

## ESD precautions



### DANGER

*For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.*

## Power precautions



### DANGER

*If the installation requires a different power cord than the one supplied with the device, make sure you use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the device.*



### DANGER

*Make sure that the power source circuits are properly grounded, then use the power cord supplied with the device to connect it to the power source.*



### CAUTION

Use a separate branch circuit for each power cord, which provides redundancy in case one of the circuits fails.



### DANGER

*High Touch Current. Earth connection essential before connecting supply.*



### CAUTION

All devices with AC power sources are intended for installation in restricted access areas only. A restricted access area is a location where access can be gained only by trained service personnel through the use of a special tool, lock and key, or other means of security.



### CAUTION

The maximum input voltage for connection to the HVAC/HVDC power supply should not exceed 305 VAC and 400 VDC.



### CAUTION

The maximum input voltage for connection to the HVAC/HVDC power supply should not exceed 305 VAC and 400 VDC .



### CAUTION

For removal of the metal cable restraint cover under the high voltage power supply inlet, remove the 2 Torx screws.

## Lifting precautions



### DANGER

*Use safe lifting practices when moving the product.*



### DANGER

*A fully populated chassis weighs approximately 68.95 kg (152.0 lbs) and requires a hydraulic or assisted lift to install it.*



### CAUTION

Do not attempt to lift or support the chassis by the logo bezel attached over the port-side air vents.

## Laser precautions



### DANGER

*All fiber-optic interfaces use Class 1 lasers.*



### DANGER

*Laser Radiation. Do Not View Directly with Optical Instruments. Class 1M Laser Products.*



### DANGER

*Use only optical transceivers that are qualified by Brocade Communications Systems, Inc. and comply with the FDA Class 1 radiation performance requirements defined in 21 CFR Subchapter I, and with IEC 60825 and EN60825. Optical products that do not comply with these standards might emit light that is hazardous to the eyes.*

## Facility requirements

Before installing the device, be sure the following facilities requirements are met.

**TABLE 3** Facility requirements

Type	Requirements
Device specifications	Ensure that the facility can accommodate system, power, and environmental specifications for this device as outlined in the <a href="#">Brocade X6 Directors Technical Specifications</a> on page 225.
Electrical	<p>Ensure that there are dedicated electrical branch circuits with the following characteristics are available:</p> <ul style="list-style-type: none"> <li>• Two branch circuits are highly recommended to power supplies for high availability and maximum blade usage.</li> <li>• Two cables for VAC high line or VAC low line operation.</li> <li>• Two cables for DC operation.</li> <li>• Protected by a circuit breaker in accordance with local electrical codes.</li> <li>• Supply circuit, line fusing, and wire size adequate to the electrical rating on the chassis nameplate.</li> <li>• Location close to the chassis and easily accessible.</li> <li>• Grounded outlets installed by a licensed electrician and compatible with the power cords.</li> </ul> <p>Ensure that all equipment in rack is grounded through a reliable branch circuit connection.</p> <p>Make sure that power distribution units (PDUs) can handle maximum input amperage of power supplies. Use cables with adequate amperage rating from PDUs to power source.</p>
Thermal	<p>Ensure that the air intake and exhaust vents have a minimum of 5.1 cm (2 in.) of airspace.</p> <p>Ensure that the air intake temperature is less than 40°C (104°F) during operation.</p>
Rack (when rack-mounted)	<p>Ensure that these airflow requirements are met:</p> <ul style="list-style-type: none"> <li>• Plan to install the device with the air-intake side facing the cool air aisle. The device can be installed facing either direction if serviceability and cooling requirements are met.</li> <li>• Ensure that the airflow available at the air vents meets the minimum requirements for the device.</li> <li>• Install the device with the airflow aligned with other devices in the rack. Some devices have airflow running from port side to nonport side and others have the opposite arrangement. Make sure that the airflow for all devices moves in the same direction to maximize cooling.</li> </ul> <p>Ensure that the following amount of space is available in the rack:</p> <ul style="list-style-type: none"> <li>• 8 rack units (8U) high. 1U is equal to 4.45 cm (1.75 inches).</li> <li>• 9 rack units (9U) high, if you use the airflow diversion rack mount kit.</li> <li>• 61.29 cm (24.09 inch) deep.</li> <li>• 43.74 cm (17.22 inch) wide.</li> </ul>

**TABLE 3** Facility requirements (continued)

Type	Requirements
	<p>Ensure that the rack meets these additional requirements:</p> <ul style="list-style-type: none"> <li>• Additional weight of chassis will not exceed the rack's weight limits.</li> <li>• The rack is secured to ensure stability in case of unexpected movement.</li> </ul>

## Time and items required for installation

You can set up and install the device in the following ways:

- As a standalone unit on a flat surface.
- In a 19-inch Electronic Industries Association (EIA) rack or in a telecommunications (Telco) rack using a Brocade rack mount kit. Refer to [Mounting options](#) on page 29 for applicable rack mount kits.

The following table describes the main installation and setup tasks, the estimated time required for each, and the items required to complete the task for a device that is fully populated with port blades. Configurations with fewer blades or ports require less time. These time estimates assume a prepared installation site and appropriate power and network connectivity.

**TABLE 4** Installation tasks, time, and items required

Installation task	Time estimate	Items required
Site preparation and unpacking the device.	30 minutes	<p>1/2-in. socket wrench (optional).</p> <p>#1 and #2 Phillips screwdrivers.</p> <p>Pallet jack.</p> <p>Hydraulic lift or assisted lift, able to raise to a minimum of 140 cm (55 in.), with a minimum capacity of 115 kg (254 lb).</p> <p>To find the weight of your device fully populated with the required port blades, refer to <a href="#">Brocade X6 Directors Technical Specifications</a> on page 225.</p>
Installing rack mount kit .	30 minutes	Refer the procedures for your rack mount kit located in this guide.
Mounting and securing the device in rack.	30 minutes	
Installing power cables and powering on the device.	20 minutes	Power cables. These are ordered and shipped separately based on country where device is installed.
Establishing serial connection, logging in to the device, and configuring IP addresses.	20 minutes	<p>Serial cable (provided in the accessory kit).</p> <p>Workstation computer with a serial port or terminal server port and a terminal emulator application (such as HyperTerminal).</p> <p>Ethernet IP addresses for the device and for both control processor blades; total of three addresses.</p>
Installing an Ethernet cable, opening a Telnet session, and configuring the device domain ID, date and time, and additional system parameters. Verify and back up configuration.	20 minutes	<p>Ethernet cabling (optional) for Telnet access.</p> <p>Refer to the <i>Brocade Fabric OS Administration Guide</i>.</p>
Installing transceivers as needed.	20-30 minutes or longer if you are using high-density port blades.	SFP+ and QSFP28 optical transceivers as needed.
Attaching fiber-optic cables, cable ties, and cable guides.	2-3 hours	Fiber-optic cables and cable ties.



# Quick installation checklists

These checklists provides a high-level overview of the basic installation process from the planning stage to the point where the device comes online and is ready to be deployed. Completing all the tasks in the suggested order ensures successful installation. Brocade recommends that you print these checklists and take them to the installation site.

## Pre-installation tasks

Review all installation requirements ahead of time as part of your site preparation. Careful planning and site preparation ensures seamless installation, especially when installing multiple devices.

**TABLE 5** Installation prerequisites

Task	Task details or additional information	Completed
Unpack the device.	Take an inventory of the hardware components included in your shipment. Refer to <a href="#">Items shipped</a> on page 26.	
Gather necessary components and required tools.	Review the time and items required information at the beginning of the following sections in this guide to ensure you have gathered all necessary components required: <ul style="list-style-type: none"> <li>• <i>Mounting the Device</i></li> <li>• <i>Initial Setup and Verification</i></li> <li>• <i>Port and Extension Blades</i> (if required to install)</li> <li>• <i>Power Supplies</i> (if required to install)</li> </ul>	
Review the safety precautions.	Refer to <a href="#">Safety precautions</a> on page 21.	
Plan the installation.	Obtain the appropriate rack mount kit. Refer to <a href="#">Mounting options</a> on page 29.	
Review and verify installation requirements.	Verify that the following requirements are met. Refer to <a href="#">Facility requirements</a> on page 23. <ul style="list-style-type: none"> <li>• Electrical</li> <li>• Environmental</li> <li>• Rack</li> <li>• Thermal</li> </ul>	
Gather network configuration parameters.	<ul style="list-style-type: none"> <li>• IP address</li> <li>• Subnet mask</li> <li>• Default gateway</li> <li>• Domain ID</li> <li>• Time zone</li> </ul>	

## Installation and initial configuration

The initial setup includes mounting the device on a flat surface or in a rack and completing the configuration tasks necessary to bring the device online and verify the operation.

**TABLE 6** Installation and basic system configuration

Task	Task details or additional information	Completed
Install blades or power supply assemblies	Install any blades or power supply assemblies that have shipped separately from the chassis. Be sure to use a #1 Phillips screwdriver for captive screws to lock these FRUs into place.	
Mount the device	Choose one of the following mounting options: <ul style="list-style-type: none"> <li>• Mount the device in a four-post rack. Refer to the instructions in this guide for mounting your device in a four-post rack.</li> </ul>	

**TABLE 6** Installation and basic system configuration (continued)

Task	Task details or additional information	Completed
	<ul style="list-style-type: none"> <li>Mount the device in a two-post rack. Refer to the instructions in this guide for mounting your device in a two-post rack.</li> </ul>	
Check the airflow of the power supply and fan assembly	The airflow direction of the power supply and fan should match. The power supplies and fan trays are clearly labeled with either a green arrow with an "E", or an orange arrow with an "I." For more details, refer to <a href="#">Fan and power supply airflow</a> on page 182.	
Gather all components required for the initial setup	Refer to <a href="#">Items required</a> on page 66.	
Provide power to the device	Refer to <a href="#">Connecting power cord to AC power supplies</a> on page 67.	
Attach a management station, establish a serial connection, and change the default passwords (optional)	Refer to <a href="#">Establishing a serial connection to the device</a> on page 73. After completing this task, log in to the serial port to configure the device.	
Set the IP address, subnet mask, and the default gateway IP address	Use the <b>ipaddrset</b> command to configure a static device IP address, subnet mask, and gateway IP address, or you can use a DHCP server to obtain the information dynamically. Refer to <a href="#">Configuring the IP addresses</a> on page 74.	
Set the date and time	<ul style="list-style-type: none"> <li>Use the <b>date</b> command to display and set the date and time.</li> <li>Use the <b>tstimezone</b> command to display and set the time zone.</li> <li>Use the <b>tsclockserver</b> command to synchronize the time with an external NTP server.</li> </ul> Refer to <a href="#">Setting the date and time</a> on page 77 for more information.	
Customize the switch name and chassis name	<ul style="list-style-type: none"> <li>Use the <b>switchname</b> command to change the default switch name.</li> <li>Use the <b>chassisname</b> command to change the default chassis name.</li> </ul> Refer to <a href="#">Customizing the chassis and switch name</a> on page 80 for more information.	
Establish an Ethernet connection	By establishing an Ethernet connection, you can complete the device configuration using a serial session, Telnet, or management application, such as Brocade Network Advisor. Refer to <a href="#">Establishing an Ethernet connection to the device</a> on page 76.	
Optional: Configure the DNS service	Use the <b>dnsconfig</b> command to create DNS server entries. Refer to the <i>Brocade Fabric OS Administration Guide</i> .	
Optional: Customize the domain ID	Use the <b>configure</b> command to change the domain ID (default ID is 1). Refer to <a href="#">Setting the domain ID</a> on page 77 for more information.	
Verify that the device operates correctly	<ul style="list-style-type: none"> <li>Check the LEDs to verify operation of functional parts. Refer to the <i>Monitoring the Device</i> section of this guide.</li> <li>The following commands can be useful to establish an operational baseline for the device. Refer to the <i>Brocade Fabric OS Command Reference</i> for more information on these commands. <ul style="list-style-type: none"> <li><b>psshow</b></li> <li><b>fanshow</b></li> <li><b>tempshow</b></li> <li><b>historyshow</b></li> <li><b>errdump</b></li> </ul> </li> </ul>	
Back up the configuration	Use the interactive <b>configupload</b> command to back up the configuration. Refer to <a href="#">Backing up the configuration</a> on page 82 for more information.	
Optional: Power off the devices	Enter the <b>shutdown</b> command and wait for the device to power down, and then unplug the power cords. Refer to <a href="#">Powering down the chassis</a> on page 83 for more information.	

## Items shipped

When unpacking the device, follow procedures under "Unpacking and transporting the device". Verify that you have the following items. Save shipping cartons and packaging in the event you need to return the device.

Packaged in device shipping carton:

- Brocade X6 Director with shipping tray
- Packing foam
- Antistatic plastic
- Inner foam

Packaged in device shipping carton or separate carton.

- Door (for EMI compliance)
- Power cords as ordered for installed power supplies
- Serial cable
- ESD wrist strap
- SFP extraction tool
- Power cord retainer clips
- Cable management finger assembly
- 4 GB USB drive
- China-RoHS Hazardous/Toxic Substance statement
- Network Advisor web pointer card
- Brocade documentation web pointer card
- Rack mount kit for your device
- Ground lug kit



# Mounting the Device

• Mounting options.....	29
• Mounting precautions.....	29
• Unpacking and transporting the device.....	30
• Installing the 8U Chassis Airflow Diversion or Port Side Exhaust Kit for Four-Post Racks (XBR-DCX4S-0121 and XBR-DCX4S-0130).....	31
• Installing the 8U Chassis Mid-Mount Rack Kit for Two-Post Racks (XBR-DCX4S-0126 and XBR-X64-0126).....	49
• Installing the 8U Chassis 27-31-Inch Rail Rack Kit for Four-Post Racks (XBR-DCX4S-0120).....	56
• Removing logo bezel protective cover.....	62

## Mounting options

You can mount the device in the following locations:

- As a standalone unit on a flat surface, such as a table top.
- In a four-post 19 in. (48.3 cm) EIA rack:
  - Use the 27-32 inch four-post rail rack mount kit (XBR-DCX4S-0120), which contains 27-31 in. (68.58 to 78.74 cm) expandable rails.
  - Refer to [Installing the 8U Chassis 27-31-Inch Rail Rack Kit for Four-Post Racks \(XBR-DCX4S-0120\)](#) on page 56 for instructions.
- In a four-post 19 in. (48.3 cm) EIA rack using an airflow diversion rack mount kit:
  - Use the 8U Chassis Airflow Diversion and Port Side Exhaust rack mount kit to divert airflow so that it fully exhausts to the port side of the device or is fully drawn from the port side of the device while mounted in a four-post rack. The XBR-DCX4S-0121 rack kit is designed for rack rail-to-rail depth of 27 to 31 in. (68.58 to 78.74 cm) depths and the XBR-DCX4S-0130 kit is designed for 18 to 24 in. (45.72 to 60.96 cm) depths.
  - Refer to [Installing the 8U Chassis Airflow Diversion or Port Side Exhaust Kit for Four-Post Racks \(XBR-DCX4S-0121 and XBR-DCX4S-0130\)](#) on page 31 for instructions.
- In a two-post Telco rack:
  - Use the mid-mount rack kit for X6-4 Director for two-post racks (XBR-X64-0126).
  - Refer to [Installing the 8U Chassis Mid-Mount Rack Kit for Two-Post Racks \(XBR-DCX4S-0126 and XBR-X64-0126\)](#) on page 49 for instructions.

### NOTE

Review the [Mounting precautions](#) on page 29 before mounting the device and ensure that all [Facility requirements](#) on page 23 are met.

### NOTE

The preceding rack mount kits are supported for these devices on the publication date of this guide. For current support information, contact your Brocade representative.

## Mounting precautions

The following precautions specifically apply to mounting the device.

#### NOTE

Be careful to not push on mesh screen covering the side vent on the chassis or poke screen with sharp objects.



#### CAUTION

Do not use the port cover tabs to lift the module. They are not designed to support the weight of the module, which can fall and be damaged.



#### CAUTION

Make sure the airflow around the front, and back of the device is not restricted.



#### DANGER

*Mount the devices you install in a rack as low as possible. Place the heaviest device at the bottom and progressively place lighter devices above.*



#### DANGER

*Use safe lifting practices when moving the product.*



#### CAUTION

To prevent damage to the chassis and components, never attempt to lift the chassis using the fan or power supply handles. These handles were not designed to support the weight of the chassis.



#### CAUTION

Do not attempt to lift or support the chassis by the logo bezel attached over the port-side air vents.

#### NOTE

You can connect the device to building ground by connecting an appropriate 2 AWG wire from a grounded connection to the 2AWG Panduit LCD2-14AF lug on the nonport-side of the device.

## Unpacking and transporting the device

Use the following procedure to unpack and install your device.



#### DANGER

*A fully populated chassis weighs approximately 68.95 kg (152.0 lbs) and requires a hydraulic or assisted lift to install it.*

1. Unpack the device.
  - a) Cut the bands that encircle the packaging.
  - b) Open the top of the shipping box and remove accessory kit, rack mount kits, and foam from the top of the device.
  - c) Lift the cardboard shipping container and inner cardboard sleeve off the device.
  - d) Remove the antistatic plastic off the device.
  - e) Leave the device on top the foam shipping tray and wood pallet if the device must be transported to the installation location.
  - f) Verify the contents of the shipping carton by referring to [Items shipped](#) on page 26.
  - g) Save foam packing material and wooden pallet for reuse.
2. Use a pallet jack or other assisted lift to transport the device to the installation area. Doorways must be wider than 36 in. (91 cm) to accommodate the device.
3. Remove the chassis door if installed.

4. Remove the X6-4 Director vertical cable management fingers if attached to rack.
5. Use a lift to raise the device to the correct level. Use two people, one to operate the lift and the other to secure the device on the lift.

**CAUTION**

Do not attempt to lift or support the chassis by the logo bezel attached over the port-side air vents.

**NOTE**

Orient the device on the lift so that you can slide it into correct side of rack to provide cool air intake. Fans and power supply FRUs in this device have a green "E" or "I" symbol on the FRU faceplate. An "E" indicates that the FRU pulls air from the port side of the device and exhausts out the nonport side. An "I" indicates that the FRU pulls air from the nonport side of the device and exhausts out the nonport side. Fans and power supplies must have the same airflow indicator. Be sure that you are pulling cool air into the air intake side of the device. For more details, refer to [Fan and power supply airflow](#) on page 182.

6. If applicable, lock the wheels of the lift.
7. Install the applicable rack mount kit in your equipment rack and mount the device using the rack mount kit's installation instructions.

**NOTE**

When installing the device into the rack, use one person on each side of the device to gently slide it onto the final installation surface and ensure that it remains supported during the transfer.

8. Install the vertical cable management fingers on the rack's upright posts.
9. Reinstall the chassis door. The door must be installed to meet EMI compliance.

## Installing the 8U Chassis Airflow Diversion or Port Side Exhaust Kit for Four-Post Racks (XBR-DCX4S-0121 and XBR-DCX4S-0130)

Use the following instructions to install a modular device in a 19 in. (48.26 cm) Electronic Industries Association (EIA) rack using the following Brocade rack mount kits:

- XBR-DCX4S-0121 - Kit for rack rail-to-rail depth of 27 to 31 in. (68.58 to 78.74 cm).
- XBR-DCX4S-0130 - Kit for rack rail-to-rail depth of 18 to 24 in. (45.72 to 60.96 cm).

These kits have a different function, depending on the device being installed in the rack and the airflow direction provided by fans and power supplies installed in the device.

For X6-4 Directors, if nonport-side exhaust (NPE) fan and power supply assemblies are installed, air flows through the side vent and exhausts to the nonport side of the chassis. When nonport-side intake (NPI) fan and power supply assemblies are installed, air flows from the nonport-side and exhausts through the side vent. This kit is designed to divert this airflow to or from the port side of the chassis. Therefore, if NPE fan and power supply assemblies are installed, air flows into port-side air vents and exhausts to the nonport side. If NPI fan and power supply assemblies are installed, air flows into nonport-side air vents and exhausts through to the port-side.

Observe the following when mounting this device:

- Installing this rack mount kit with an 8U chassis requires 9U of rack space.
- Before mounting your device, review any specific installation and facility requirements in this Hardware Installation Guide.

- Hardware devices illustrated in these procedures are only for reference and may not depict the device you are installing into the rack.

## Time and items required

Allow approximately one hour to unpack and install the device in a rack.

The following tools are required when installing the 8U Airflow Diversion and Port Side Exhaust Kit for Four-Post Racks (XBR-DCX4S-0121 and XBR-DCX-0130):

- Torque wrench with #2 Phillips screwdriver tip
- Flathead screwdriver
- Hydraulic or assisted lift with a minimum raise of 140 cm (55 in.) and a minimum capacity of 113 kg (250 lbs).

## Installing the device in an 18–24-inch rack (XBR-DCX4S-0130)

Use the following instructions to install the device in a rack with rail-to-rail depth of 18 to 24 in.(45.72 to 60.96 cm). Be sure to use the 18–24 in. *8U Chassis Airflow Diversion and Port Side Exhaust Kit for Four-Post Racks (XBR-DCX4S-0130)* for this installation.

### Parts list

The following parts list refers to items illustrated in the following figure.

#### NOTE


Not all parts may be used with certain installations depending on the device type.

**TABLE 7** Hardware for Airflow Diversion and Port-Side Exhaust Kit for 18–24 in. (45.72 to 60.96 cm) racks

Description	Quantity
Top rail	1
Top rail mounting brackets for 18–20 in., (45.72–50.8 cm) 20–22-in. (50.8–55.88 cm), and 22–24.in (55.88–60.96 cm) racks	3
Duct	1
Shelf	1
Shelf saddle	1
10–32 x .5 in. (1.27 cm) Phillips screw (blue Loctite on threads)	12
10–32 x .63 in.(1.60 cm) Phillips screw with square-cone washer	12
10–32 clip nut for racks that have rails with round holes	8
10–32 retainer nut for racks that have rails with square holes	8
Alignment washer for racks that have rails with square holes	12
6–32 x .25 in. (.635 cm) Phillips screw	2



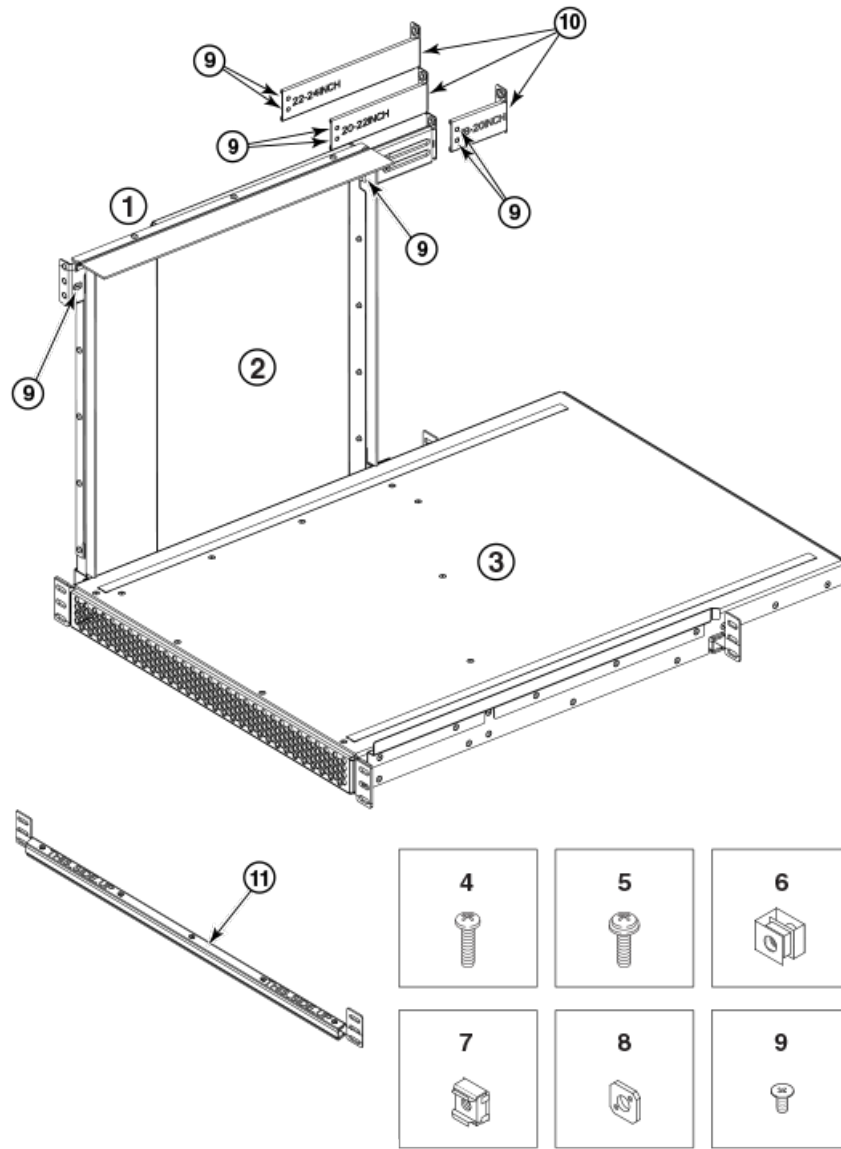**FIGURE 3** Airflow Diversion and Port-Side Exhaust Kit assembly for 18-24 in. (45.72 to 60.96 cm) racks



- |   |  |
|---|--|
| 1. Top rail   | 7. 10-32 retainer nut for racks that have rails with square holes  |
| 2. Duct   | 8. Alignment washer for racks that have rails with square holes  |
| 3. Shelf  | 9. 6-32 x .25 in. (.635 cm) Phillips screw   |
| 4. 10-32 x .5 in. (1.27 cm) Phillips screw with blue Loctite on threads                                       | 10. Top rail mounting brackets for 18-20 in., (45.72-50.8 cm) 20-22-in. (50.8-55.88 cm), and 22-24.in (55.88-60.96 cm) racks |
| 5. 10-32 x .63 in.(1.60 cm) Phillips screw with square cone washer for racks that have rails with round holes | 11. Shelf saddle   |
| 6. 10-32 clip nut for racks that have rails with round holes  |  |

### Torque requirements

Use the following torque settings when tightening screws that secure the rack mount kit and device to the rack.


TABLE 8 Torque requirements for mounting screws

Screw size	Torque
6-32 x .25 in. (.635 cm) Phillips screw	8.75 in-lb (10 cm-kg)
10-32 x .63 in. (1.60 cm) Phillips screw	32 in-lb (36.86 cm-kg)

Assembling the rack hardware

- 1. Determine how the device can be oriented in the rack so that the non-port side has access to intake air (cool).
- 2. Install clip nuts (8 in Figure 3 on page 33) or retainer nuts (9 in Figure 3 on page 33) in rack rail locations shown in the following figure. These nuts will secure the 10-32 screws that mount the rack kit's shelf and the device to the rack. For rails with round holes, use clip nuts. For rails with square holes, use retainer nuts. Note that the following figure shows relative positions for these nuts in the rack rails to mount the shelf and device. You may mount the shelf and device in 9U of rack space higher or lower in the rack than shown.

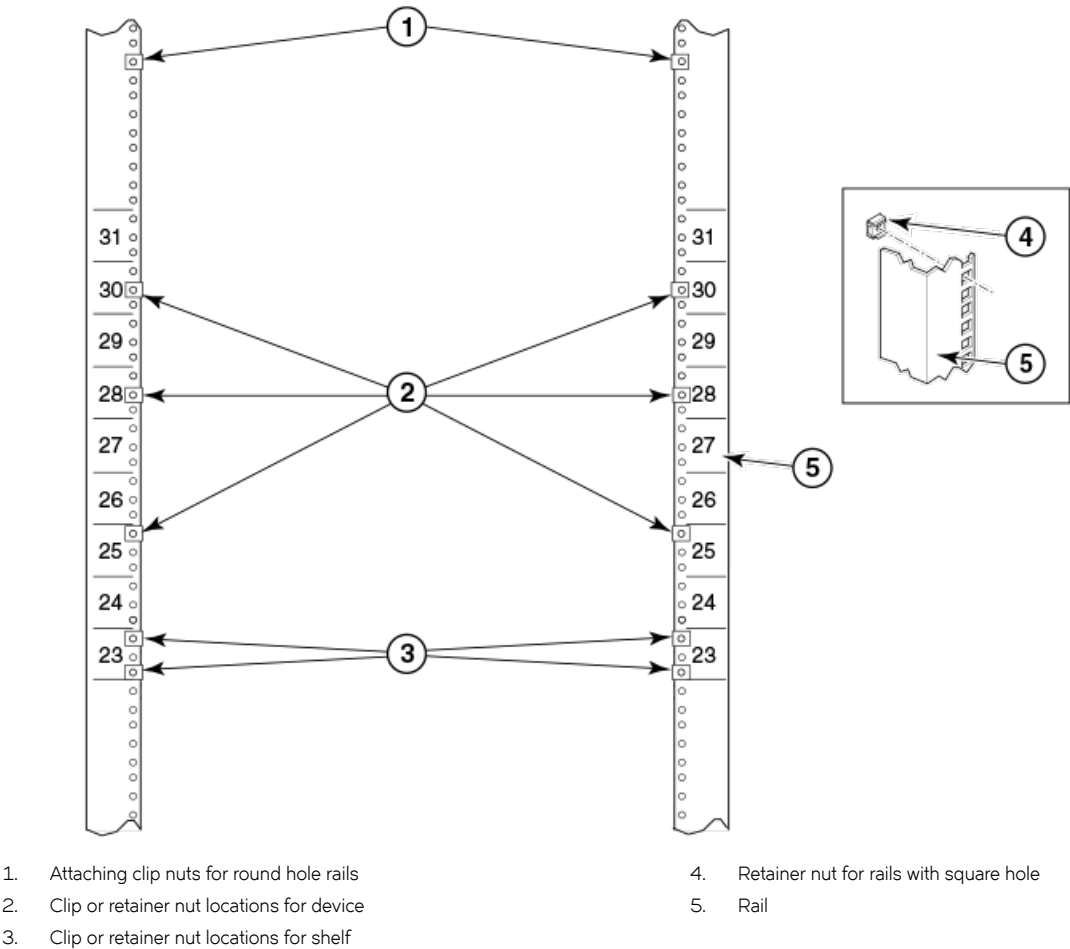
FIGURE 4 Clip and retainer nut locations on rack rails



3. Install the shelf saddle (refer to [Figure 3](#) on page 33) to the nonport side of the rack. Install the saddle in the same vertical location as where the shelf installs on the port side of the rack. In using the previous figure as example, if the shelf is installed in location 23 on the port side, install the saddle in location 23 on the nonport side. Ensure that the words "THIS SIDE UP" on the saddle face towards the port side of the rack (see the following figure).

Secure the saddle to the rack using four 10-32 screws with washers (refer to [Figure 3](#) on page 33), two screws on each side of the saddle. Tighten the screws according to specifications under [Torque requirements](#) on page 33.

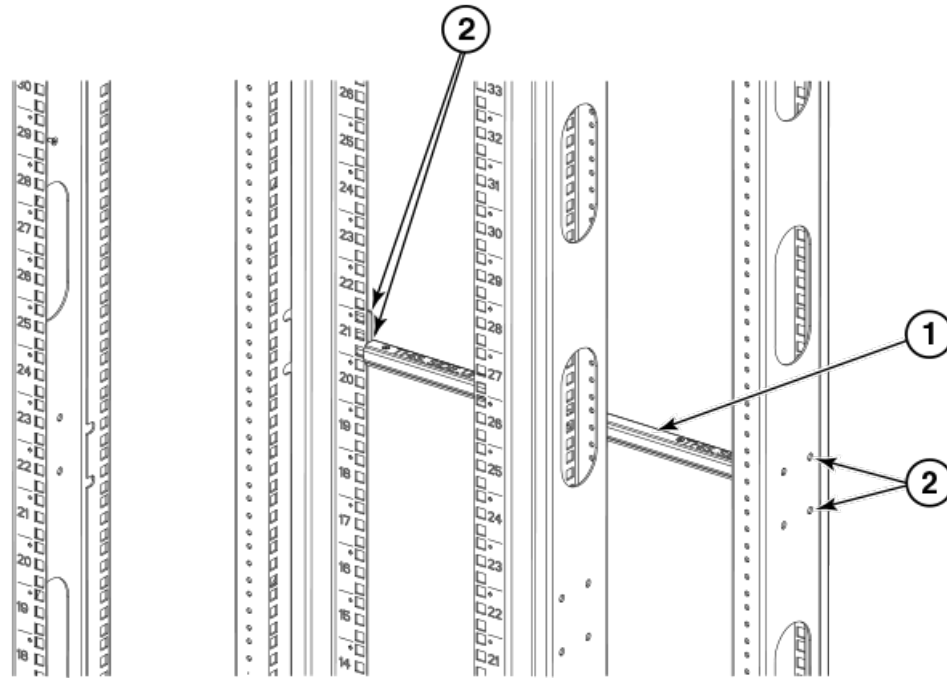**FIGURE 5** Installing saddle to equipment rack



1. Shelf saddle
2. 10-32 x .5 in. (1.27 cm) Phillips screw with blue Loctite on threads or 10-32 x .63 in. (1.60 cm) Phillips screw with square cone washer for racks that have rails with round holes. Use


either 10-32 retainer nut for racks that have rails with square holes or 10-32 clip nut for racks that have rails with round holes to retain screws.

#### NOTE

For rails with round holes, use the clip nuts (refer to [Figure 3](#) on page 33) on the rails for securing 10-32 screws. For rails with square holes, use the retainer nuts (see [Figure 3](#) on page 33). Also refer to [Figure 4](#).

4. Place the shelf (refer to the following figure) on the saddle then secure it to the rack rails using four 10-32 screws with washers (refer to [Figure 3](#) on page 33). Tighten the screws according to specifications under [Torque requirements](#) on page 33.

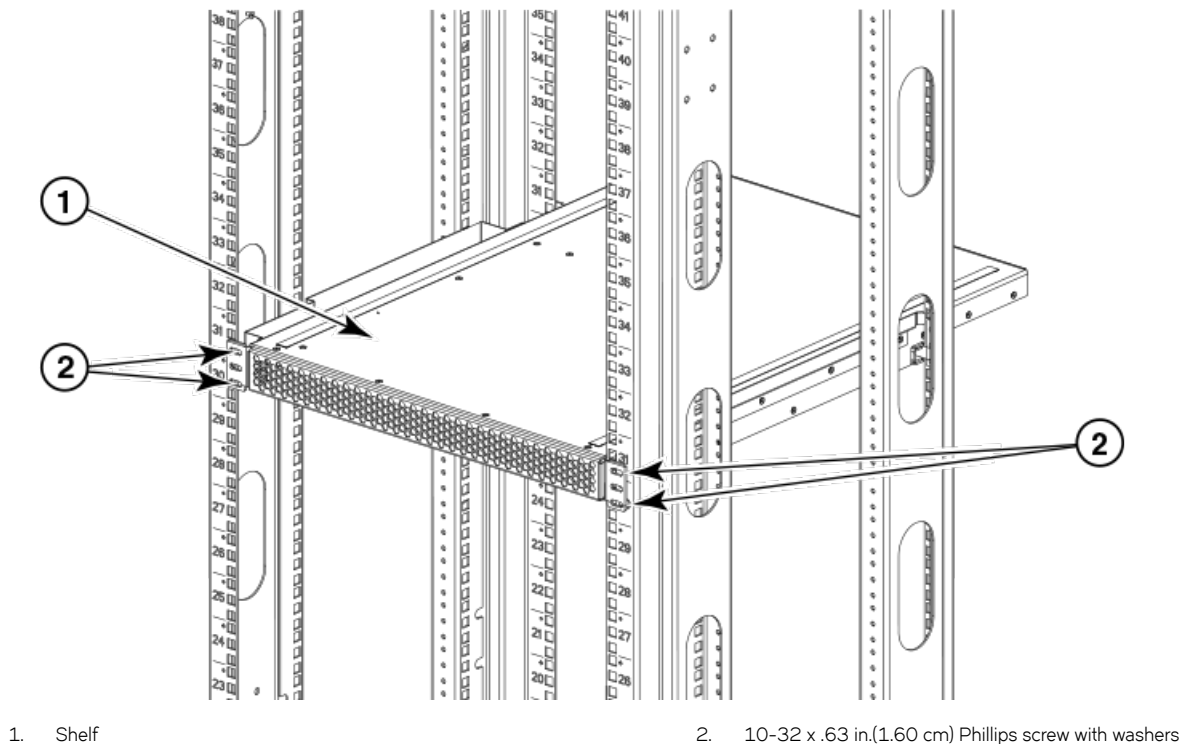**FIGURE 6** Shelf installed in rack




**NOTE**

For rails with round holes, use the clip nuts on the front rails for securing 10-32 screws. For rails with square holes, use the retainer nuts.

5. Install the air duct assembly (refer to the following figure) by inserting it down into the side-slot on the shelf. Ensure that the tabs of the duct align and engage with the slots in the shelf.

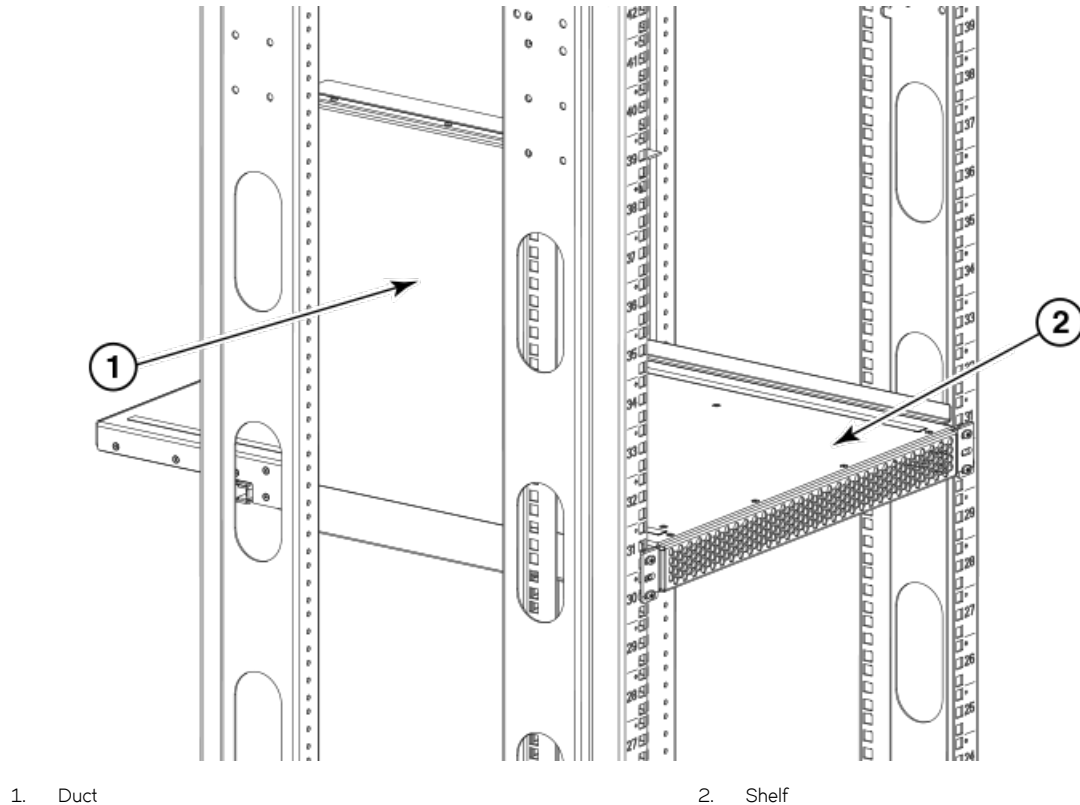**FIGURE 7** Installing air duct into side slot on shelf




6. Install the top rail inner bracket to the top rail assembly.
  - a) Determine the size of the top rail inner bracket that you will need to install on the top rail so that the top rail will fit on the inside of the rack rails. Remove the appropriate bracket from the accessory kit. Note that the accessory kit contains three sizes, depending the depth of your equipment rack (refer to [Figure 3](#) on page 33).
  - b) Secure the top rail inner bracket to the top rail assembly with two 6-32 screws (see [Figure 3](#) on page 33). Tighten the screws according to specifications under [Torque requirements](#) on page 33.

7. Install the top rail assembly.
  - a) Insert the top rail assembly (with the top rail inner bracket attached) down into the air duct assembly and then secure the top rail assembly to the air duct assembly with two 6-32 screws, one screw on each side of the air duct assembly (see the following figure).
  - b) Secure the top rail assembly to the rack.

**For rails with round holes,** use two 10-32 screws with washers (refer to [Figure 3](#) on page 33) on each end of the top rail assembly. Tighten the screws according to specifications under [Torque requirements](#) on page 33.

**For rails with square holes,** use the two standard 10-32 screws with blue Loctite on the threads and alignment washers (refer to [Figure 3](#) on page 33) on each end of the top rail assembly. Tighten the screws according to specifications under [Torque requirements](#) on page 33.

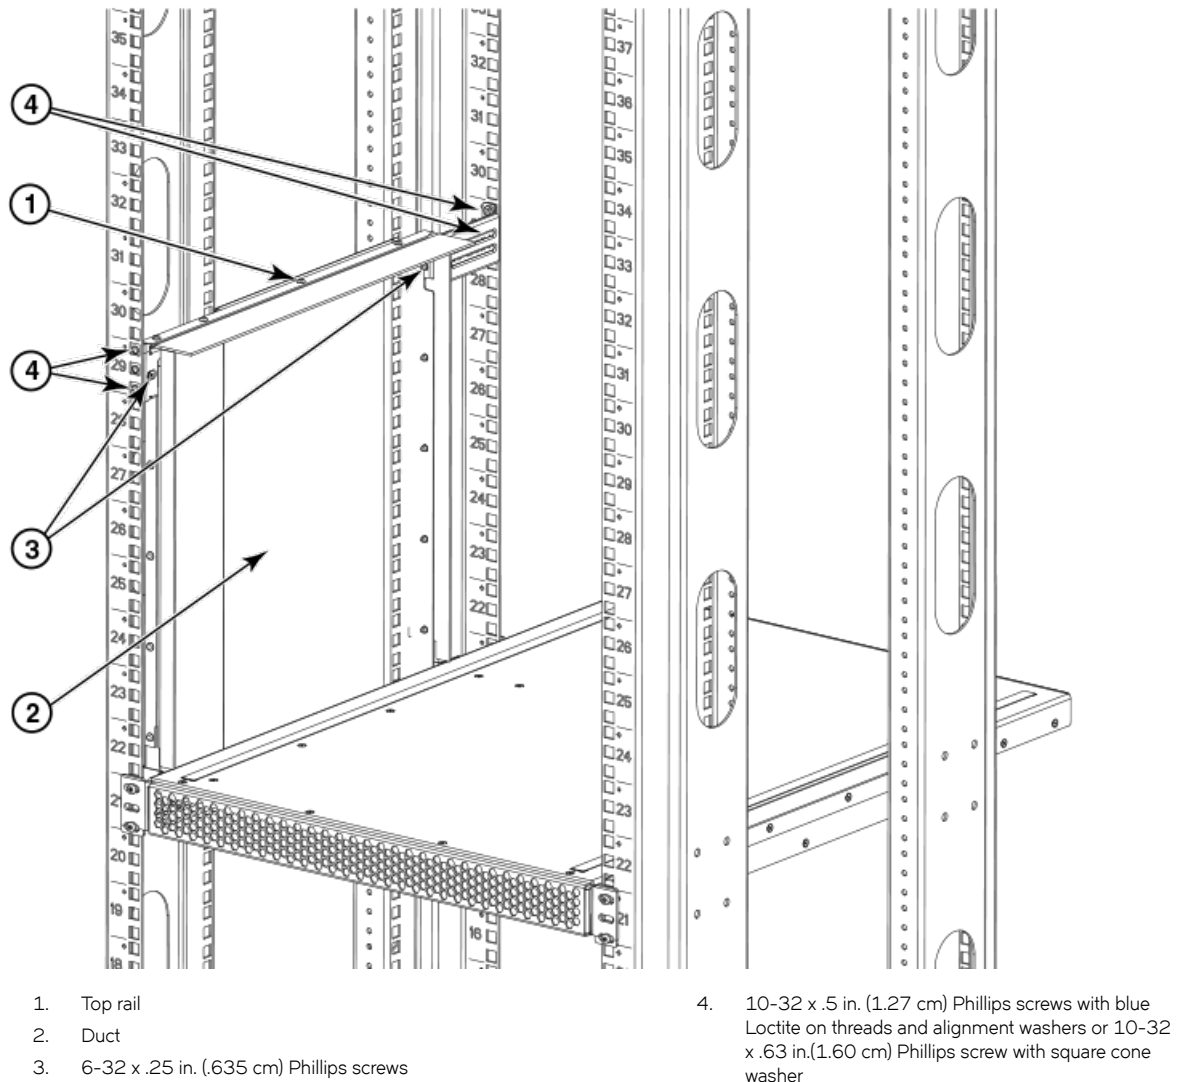**FIGURE 8** Securing top rail in rack



### *Installing the device in the rack*

1. If a door is installed on your chassis, ensure that it is removed. Refer to procedures for removing and replacing the device door in this guide.
2. Use a hydraulic lift to raise the device to the correct level.



**DANGER**

*Use safe lifting practices when moving the product.*


3. If applicable, lock the wheels of the lift.
4. Carefully lift the device and slide it into the rack.

- Secure the device to the rack with six 10-32 screws with washers, three screws on each side (refer to the following figure). Tighten the screws according to specifications under [Torque requirements](#) on page 33.

**NOTE**

Screws, clip nuts, and retainer nuts for securing the device to the equipment rack are included in the device hardware accessory kit.

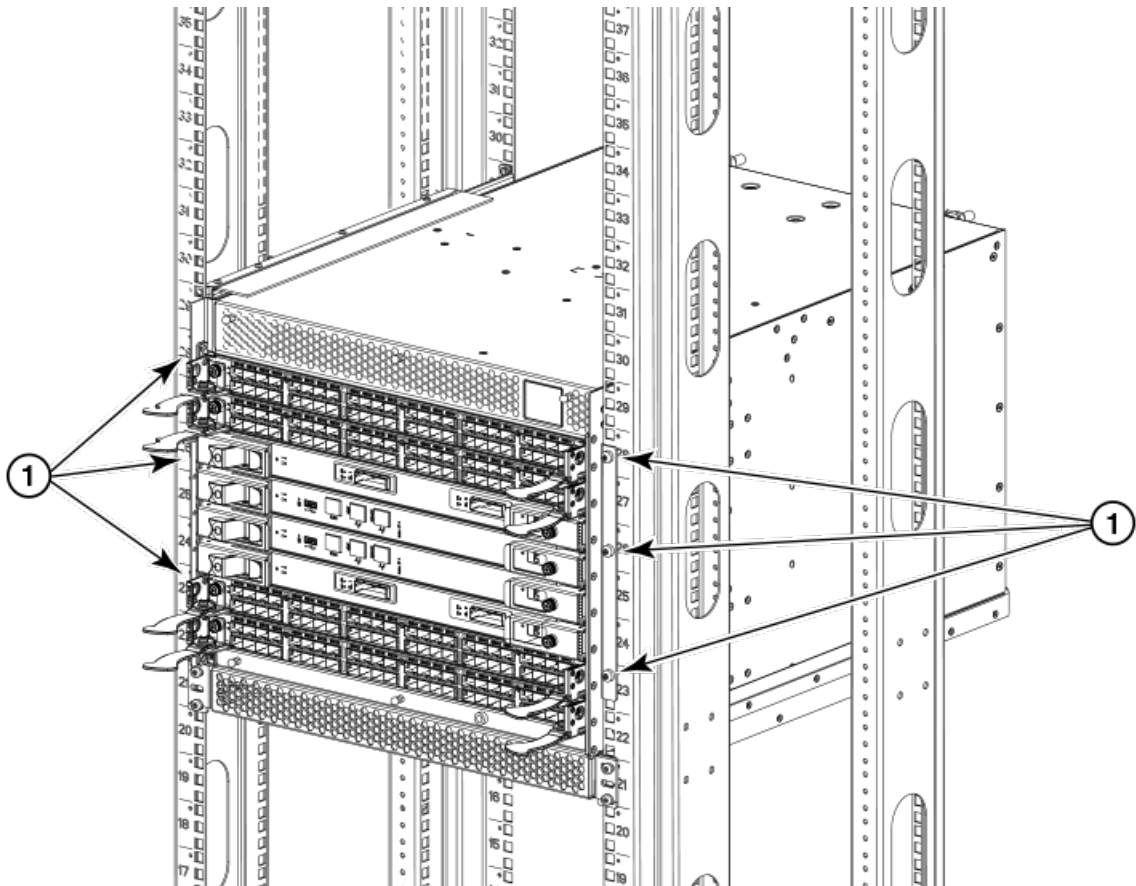**FIGURE 9** Brocade device with 18-24 in. (45.72 to 60.96 cm) kit installed in rack



1. 10-32 x .63 in.(1.60 cm) Phillips screw with square cone washer for racks that have rails with round holes

**NOTE**

For rails with round holes, use the clip nuts on the front rails for securing 10-32 screws. For rails with square holes, use the retainer nuts (refer to [Figure 3](#) on page 33). Also refer to [Figure 4](#) on page 34.

- Reinstall the device door if removed. Refer to procedures for removing and replacing the device door in this guide.

## Installing the device in a 27-31-inch rack (XBR-DCX4S-0121)

Use the following instructions to install the device in a rack with rail-to-rail depth of 27 to 31 in. (68.58 to 78.74 cm). Be sure to use the 27-31 in. 8U Chassis Airflow Diversion and Port Side Exhaust Kit for Four-Post Rack (XBR-DCX4S-0121) for this installation.



## Parts list

The following parts list refers to items illustrated in the following figure.


### NOTE

Not all parts may be used with certain installations depending on the device type.

**TABLE 9** Hardware for Airflow Diversion and Port Side Exhaust Kit for 27-31 in. (68.58 to 78.74 cm) racks

Description	Quantity
Top rail	1
Duct	1
Shelf	1
10-32 x .5 in. (1.27 cm) Phillips screw (blue Loctite on threads)	12
10-32 x .63 in.(1.60 cm) Phillips screw with square cone washer	12
10-32 clip nut for racks that have rails with round holes	8
10-32 retainer nut for racks that have rails with square holes	8
Alignment washer for racks that have rails with square holes	12
6-32 x .25 in. (.635 cm) Phillips screw	2

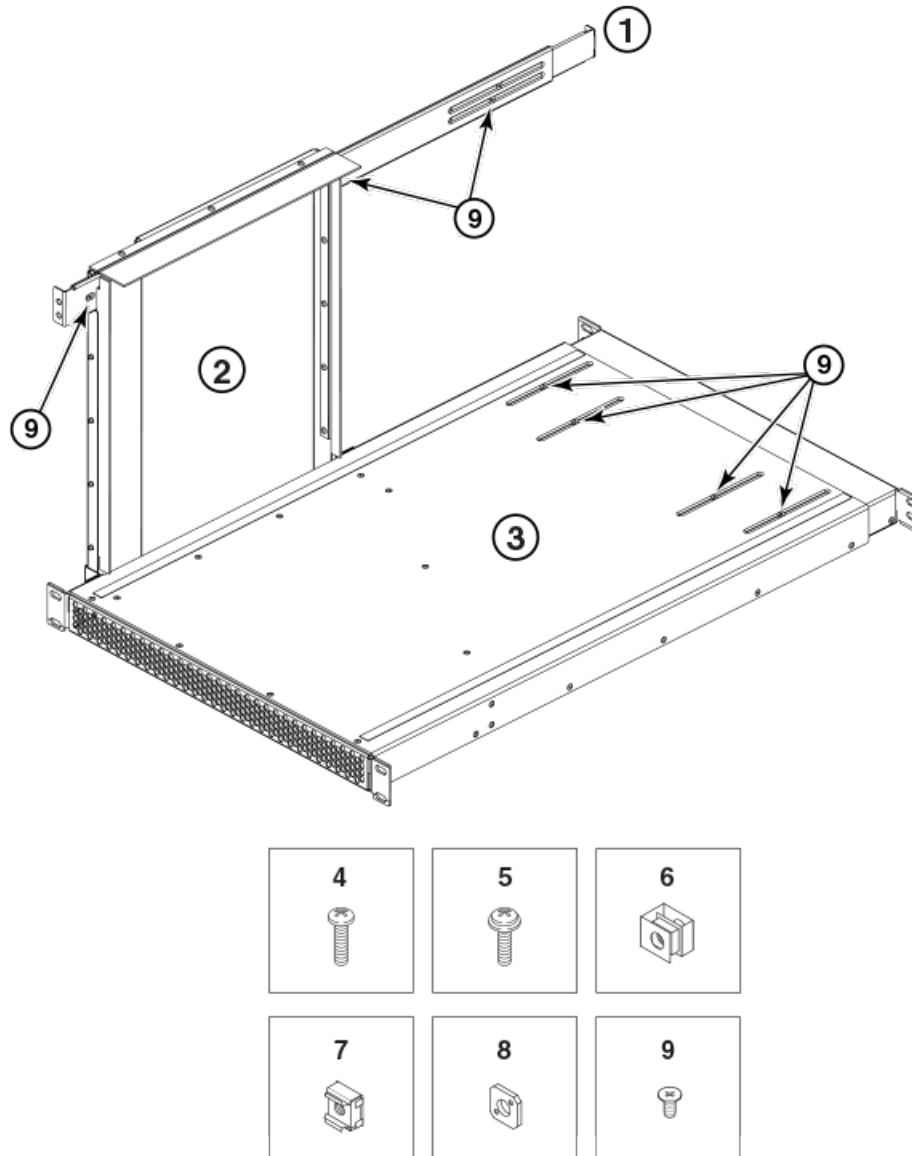**FIGURE 10** Airflow Diversion and Port-Side Exhaust Kit assembly for 27-31 in. (68.58 to 78.74 cm) racks



- |  |   |
|--|---|
| 1. Top rail  | 6. 10-32 clip nut for racks that have rails with round holes      |
| 2. Duct  | 7. 10-32 retainer nut for racks that have rails with square holes |
| 3. Shelf   | 8. Alignment washer for racks that have rails with square holes   |
| 4. 10-32 x .5 in. (1.27 cm) Phillips screw with blue Loctite on threads  | 9. 6-32 x .25 in. (.635 cm) Phillips screw                        |
| 5. 10-32 x .63 in. (1.60 cm) Phillips screw with square cone washer for racks that have rails with round holes |   |

### Torque requirements

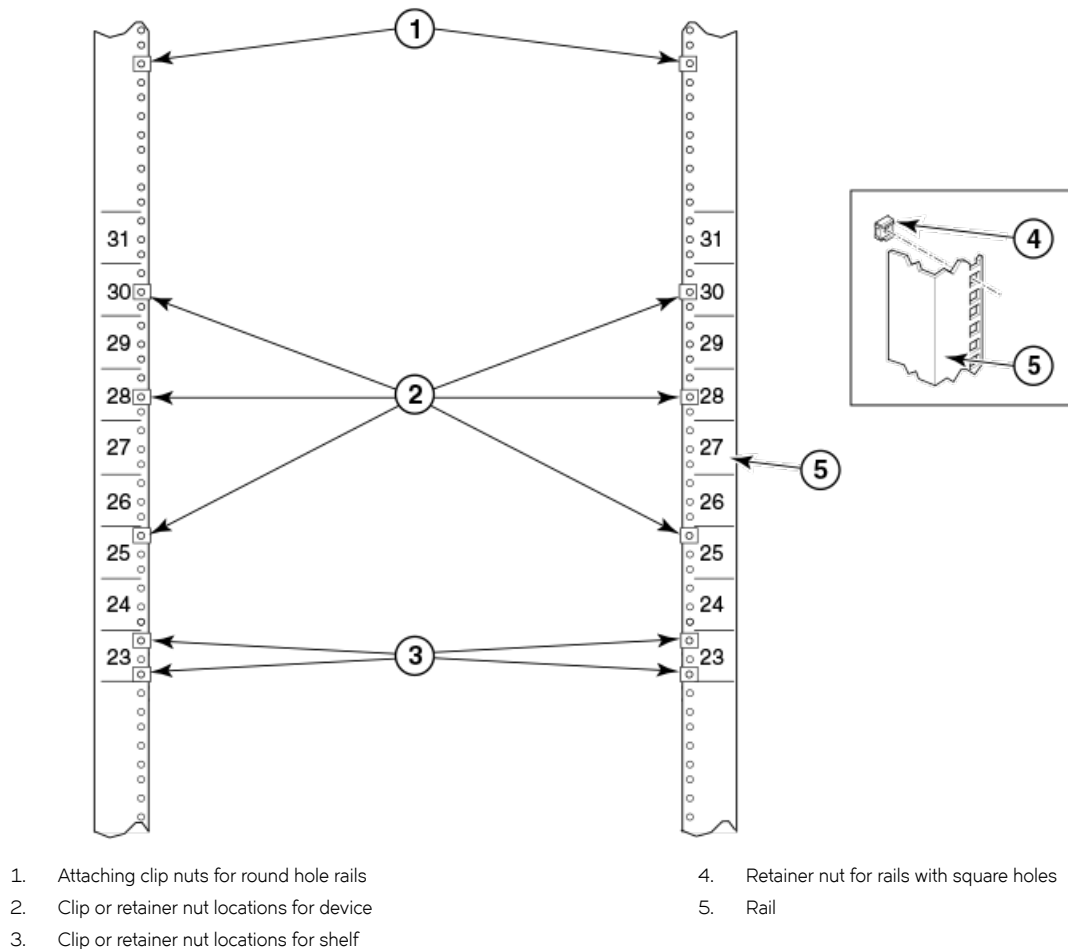
Use the following torque settings when tightening screws that secure the rack mount kit and device to the equipment rack.

**TABLE 10** Torque requirements for mounting screws

Screw size	Torque
6-32 x .25 in. (.635 cm) Phillips screw	8.75 in-lb (10 cm-kg)
10-32 x .63 in. (1.60 cm) Phillips screw	32 in-lb (36.86 cm-kg)


### Assembling the rack hardware

1. Determine how the device can be oriented in the rack so that the nonport side has access to intake air (cool).
2. Install clip nuts or retainer nuts (as shown in the previous figure) in rack rail locations shown in the following figure. These nuts will secure the 10-32 screws that mount the Port Side Exhaust Kit shelf and device to the rack. For rails with round holes, use clip nuts. For rails with square holes, use retainer nuts. Note that the following figure shows relative positions for these nuts in the rack rails to mount the shelf and device. You may mount the shelf and device in 9U of rack space higher or lower in the rack than shown.

**FIGURE 11** Clip and retainer nut locations on rack rails

3. Install the shelf as shown in the following figure.
  - a) The shelf can be adjusted to a length of between 27 and 31 inches (68.58 and 78.74 cm) to accommodate your rack size. To lengthen or shorten the shelf, loosen the four 6-32 screws in the four slots on the shelf (see [Figure 10](#) on page 42) and adjust the shelf to the desired length. Once adjusted, tighten the four 6-32 screws.
  - b) Secure the shelf to the rack with eight 10-32 screws with washers, two screws in each corner of the shelf (see the following figure). Tighten the screws according to specifications under [Torque requirements](#) on page 42.

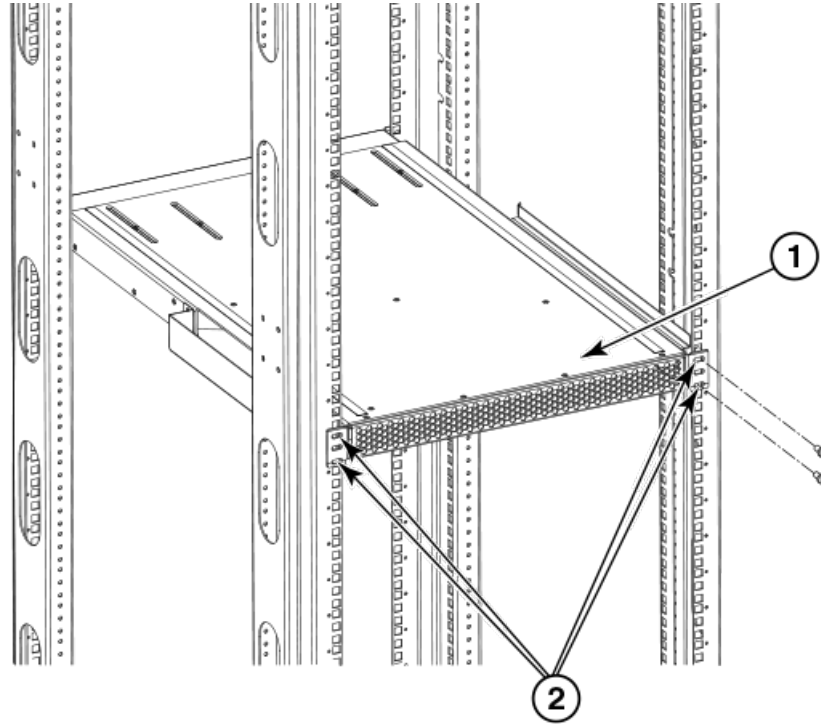**FIGURE 12** Shelf installed in rack




1. Shelf
2. 10-32 x .5 in. (1.27 cm) Phillips screws with blue Loctite on threads or 10-32 x .63 in.(1.60 cm)

Phillips screw with square cone washer for racks that have rails with round holes


4. Install the air duct assembly by inserting it down into the side slot on the shelf. Ensure that the tabs of the duct align and engage with the slots in the shelf.

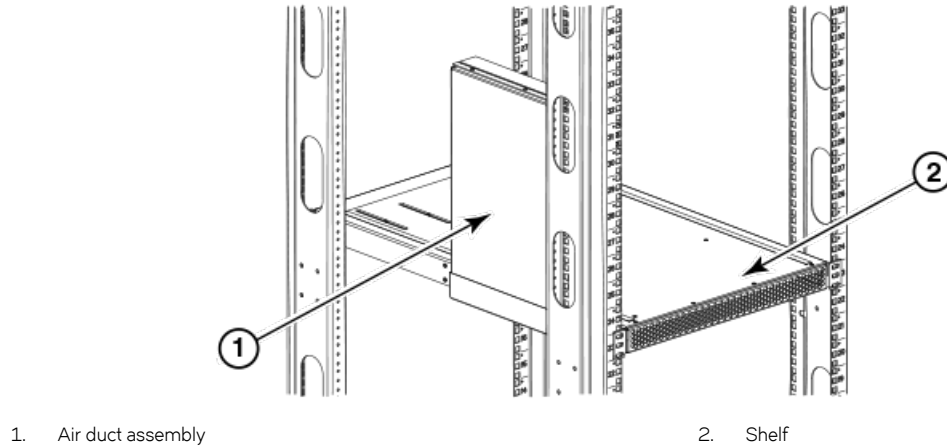**FIGURE 13** Installing air duct into side slot on shelf



5. Install the top rail assembly to the air duct assembly as shown in the following figure.
  - a) The top rail assembly can be adjusted to a length of between 27 and 31 inches (68.58 to 78.74 cm) to fit on the inside of the rack rails. To lengthen or shorten the top rail assembly, loosen the two 6-32 screws and adjust the top rail assembly to the desired length. The length will be approximately the length of the adjustable shelf. Once adjusted, tighten the two 6-32 screws.
  - b) Insert the top rail assembly down into the air duct assembly and then secure the top rail assembly to the air duct assembly with two 6-32 screws, one screw on each side of the air duct assembly. Tighten the screws according to specifications under [Torque requirements](#) on page 42.

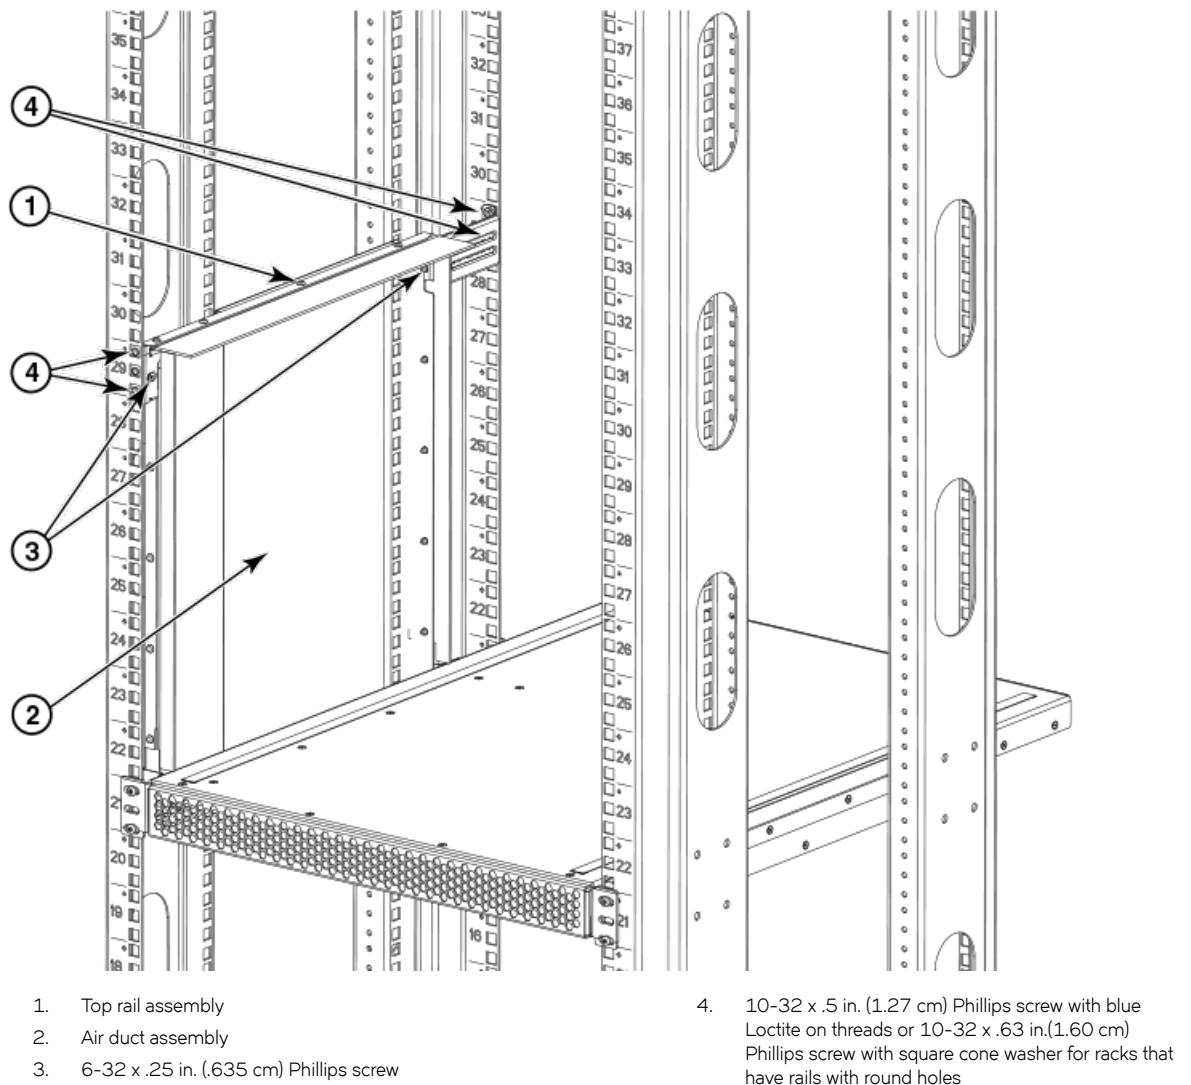**FIGURE 14** Securing top rail in rack



6. Secure the top rail assembly to the rack with four 10-32 screws, two screws on each end of the top rail assembly.
  - For rails with round holes, use two 10-32 screws with washers (refer to [Figure 10](#) on page 42) on each end of the top rail assembly. Tighten the screws according to specifications under [Torque requirements](#) on page 42.
  - For rails with square holes, use the two standard 10-32 screws (refer to [Figure 10](#) on page 42) with blue Loctite on the threads and alignment washers (refer to [Figure 10](#) on page 42) on each end of the top rail assembly. Tighten the screws according to specifications under [Torque requirements](#) on page 42.

### Installing shipping brackets (optional)

Shipping brackets are required when devices are installed with the intent to ship pre-installed in a rack. Use these brackets as an alternate method from what is explained in [Installing the device in the rack](#) on page 39 to secure the device to the rack for shipping.

Parts in the following table are provided with your rack mount kit for installing these shipping brackets on the device and the device into a rack.

#### NOTE

Not all parts may be used with certain installations depending on the device type.

**TABLE 11** Hardware for optional chassis shipping brackets

Description	Quantity
Mounting plates	2 (marked A and B)
L-brackets	2 (marked R and L)
6-32 x 3/8 in. panhead Phillips screw with square cone washer	10
10-32 x .63 in.(1.60 cm) panhead Phillips screw with square cone washer	23
10-32 clip nut for racks that have rails with round holes	6
10-32 retainer nut for racks that have rails with square holes	6

For steps to install these shipping brackets, refer to the *Installing Brocade Chassis Shipping Brackets* instructions packaged with the bracket parts.

### Installing the device in the rack



#### DANGER

*Use safe lifting practices when moving the product.*


1. If a door is installed on your chassis, ensure that it is removed. Refer to procedures for removing and replacing the device door in this guide.
2. Use a lift to raise the device to the correct level.
3. If applicable, lock the wheels of the lift.
4. Carefully lift the device and slide it into the rack.

5. Secure the device to the rack with six 10-32 screws with washers. Tighten the screws according to specifications under [Torque requirements](#) on page 42.

**NOTE**

Screws, clip nuts, and retainer nuts to secure the device to the rack are provided in the device hardware accessory kit.

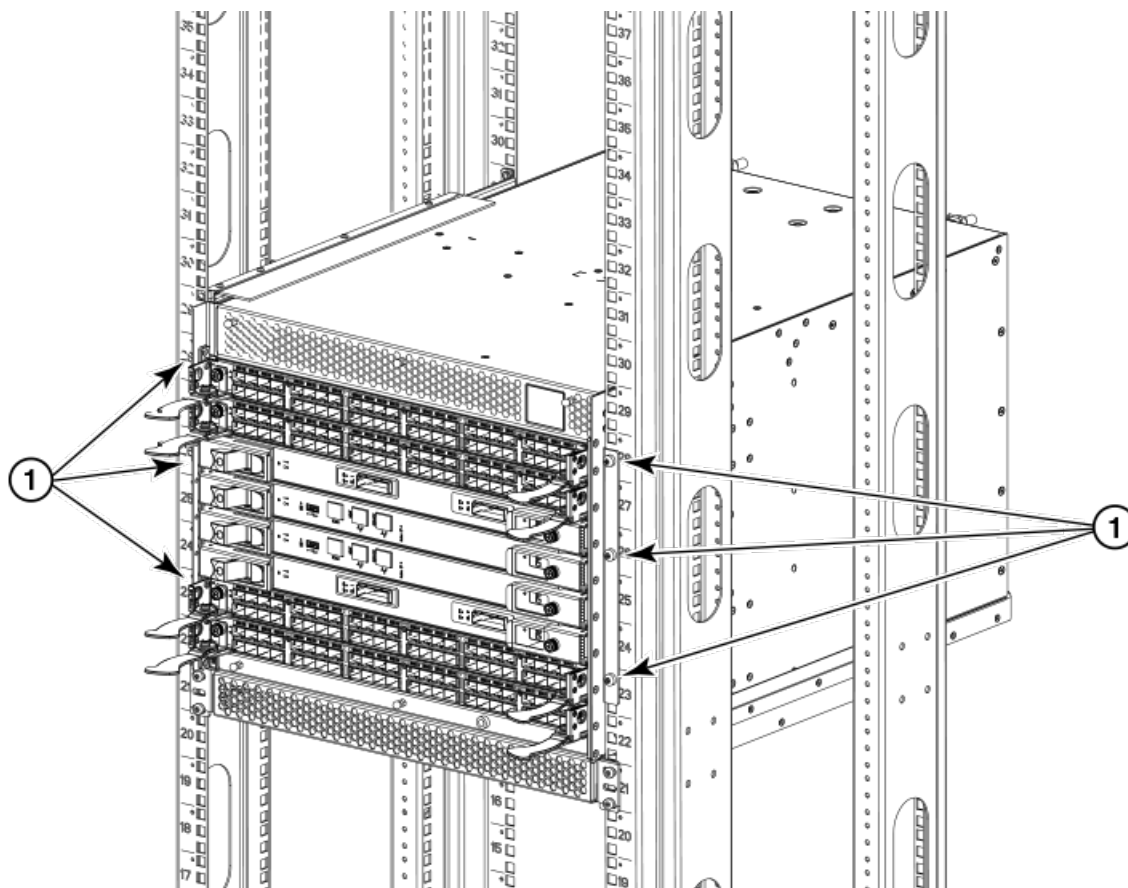**FIGURE 15** Device and 27-31 in. (68.58 to 78.74 cm) kit installed in rack



1. Screw locations for 10-32 x .5 in. (1.27 cm) Phillips screw with blue Loctite on threads or 10-32 x .63 in.(1.60 cm) Phillips screw with square cone washer for racks that have rails

with round holes. Use either 10-32 retainer nut for racks that have rails with square holes or 10-32 clip nut for racks that have rails with round holes to retain screws.

**NOTE**

For rails with round holes, use the clip nuts (refer to [Figure 10](#) on page 42) on the rails for securing the 10-32 screws. For rails with square holes, use the retainer nuts (see [Figure 10](#) on page 42). Also refer to [Figure 11](#) on page 43.

6. Reinstall the device door. Refer to procedures for removing and replacing the device door in this guide.



# Installing the 8U Chassis Mid-Mount Rack Kit for Two-Post Racks (XBR-DCX4S-0126 and XBR-X64-0126)

Use the following instructions to install the device in a rack using the 8U Chassis Mid-Mount Rack Kit for Two-Post Racks (XBR-DCX4S-0126 and XBR-X64-0126).

Observe the following when mounting this device:

- Before mounting your device, review any specific installation and facility requirements in this Hardware Installation Guide.
- Hardware devices illustrated in these procedures are only for reference and may not depict the device you are installing into the rack.

## Time and items required

Allow approximately one hour to unpack and install the chassis in a rack.

The following tools are required when installing the 8U Chassis Mid-Mount Rack Kit for Two-Post Racks (XBR-DCX4S-0126 and XBR-X64-0126):

- Torque wrench with #2 Phillips screwdriver tip
- Flathead screwdriver
- Hydraulic or assisted lift with a minimum raise of 140 cm (55 in.) and a minimum capacity of 113 kg (250 lbs)

## Parts list


The following parts are provided with the 8U Chassis Mid-Mount Rack Kit for Two-Post Racks (XBR-DCX4S-0126 and XBR-X64-0126).

### NOTE

Not all parts may be used with certain installations depending on the device being installed.

Use parts in the following XBR-DCX4S-0126 rack mount kit to install the Brocade DCX-4S Director in a two-post rack.

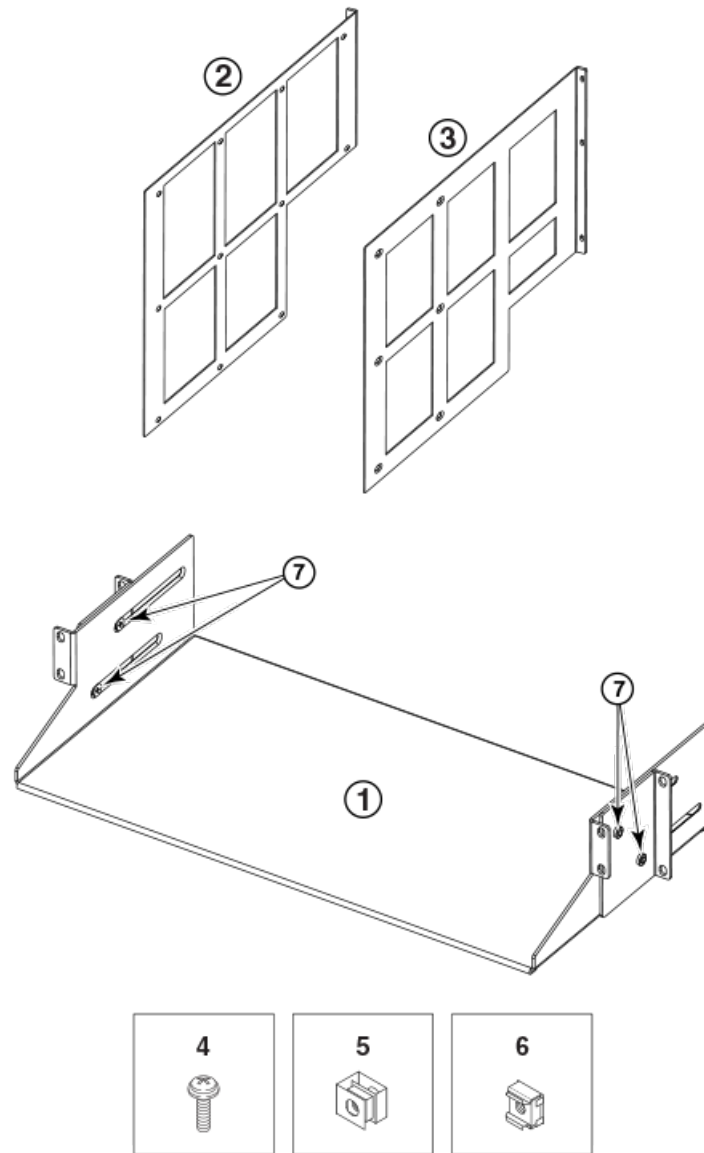
**FIGURE 16** Rack kit parts (XBR-DCX4S-0126)



- |  |  |
|--|--|
| 1. Saddle  | 5. 10-32 clip nuts for racks that have rails with round holes      |
| 2. Telco mid-mount mounting bracket (left)   | 6. 10-32 retainer nuts for racks that have rails with square holes |
| 3. Telco mid-mount mounting bracket (right)  | 7. Bracket adjusting screws  |
| 4. 10-32 x .63 in.(1.60 cm) Phillips screws with square cone washer for racks that have rails with round holes |  |

Use parts in the following XBR-X64-0126 rack mount kit to install the Brocade X6-4 Director in a two-post rack.

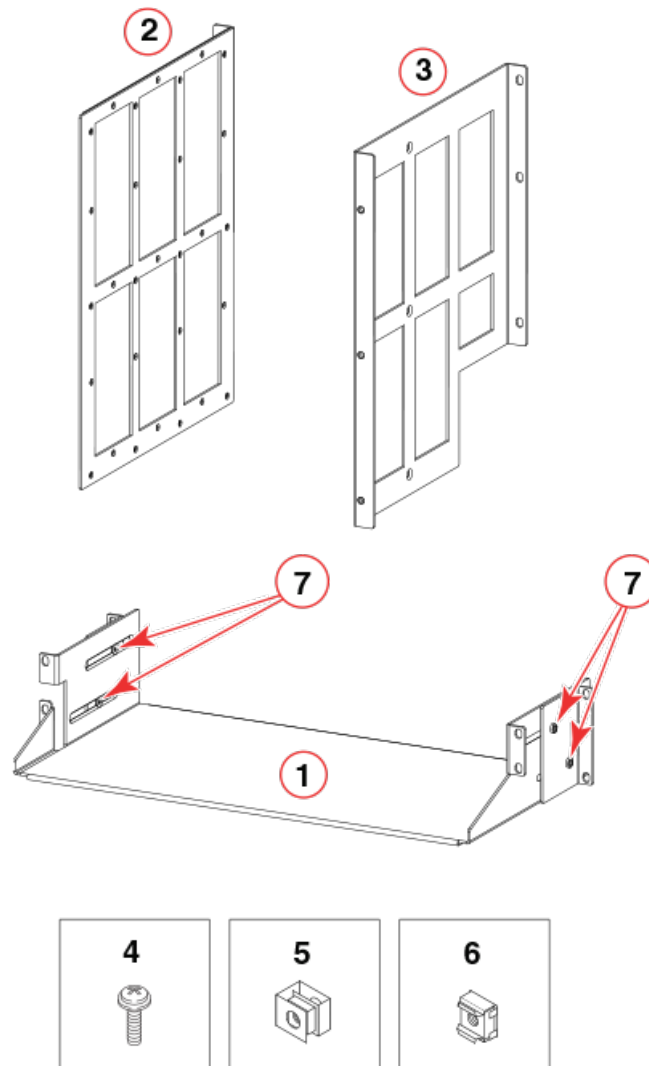**FIGURE 17** Rack kit parts (XBR-X64-0126)



- |  |  |
|--|--|
| 1. Saddle  | 5. 10-32 clip nuts for racks that have rails with round holes      |
| 2. Telco mid-mount mounting bracket (left)   | 6. 10-32 retainer nuts for racks that have rails with square holes |
| 3. Telco mid-mount mounting bracket (right)  | 7. Bracket adjusting screws  |
| 4. 10-32 x .63 in.(1.60 cm) Phillips screws with square cone washer for racks that have rails with round holes |  |

## Assembling the rack hardware


- Loosen the two 10-32 adjusting screws securing the each mid-mount bracket to the saddle (refer to the previous figure) and slide the brackets as far backward as possible.

2. Install the saddle to the equipment rack rails using the following steps while referring to the following figure. Also refer to [Figure 19](#) for details on securing screws to equipment rack.
  - a) Install the saddle to the port side of the rack rails using four 10-32 screws with square-cone washers, two screws on each side of the saddle. Tighten the screws to 32 in-lb (36.86 cm-kg).
  - b) Move the mid-mount brackets into position so they align with the rack mounting holes on the nonport side of the rack. Secure the mid-mount brackets to the rack with four 10-32 screws with square-cone washers, two on each side. Tighten the screws to 32 in-lb (36.86 cm-kg).
  - c) Tighten the two 10-32 adjusting screws on each mid-mount bracket.

**NOTE**

The following illustration shows the saddle for XBR-DCX4S-0126. The saddle for XBR-X64-0126 has a somewhat different design but installs the same way.

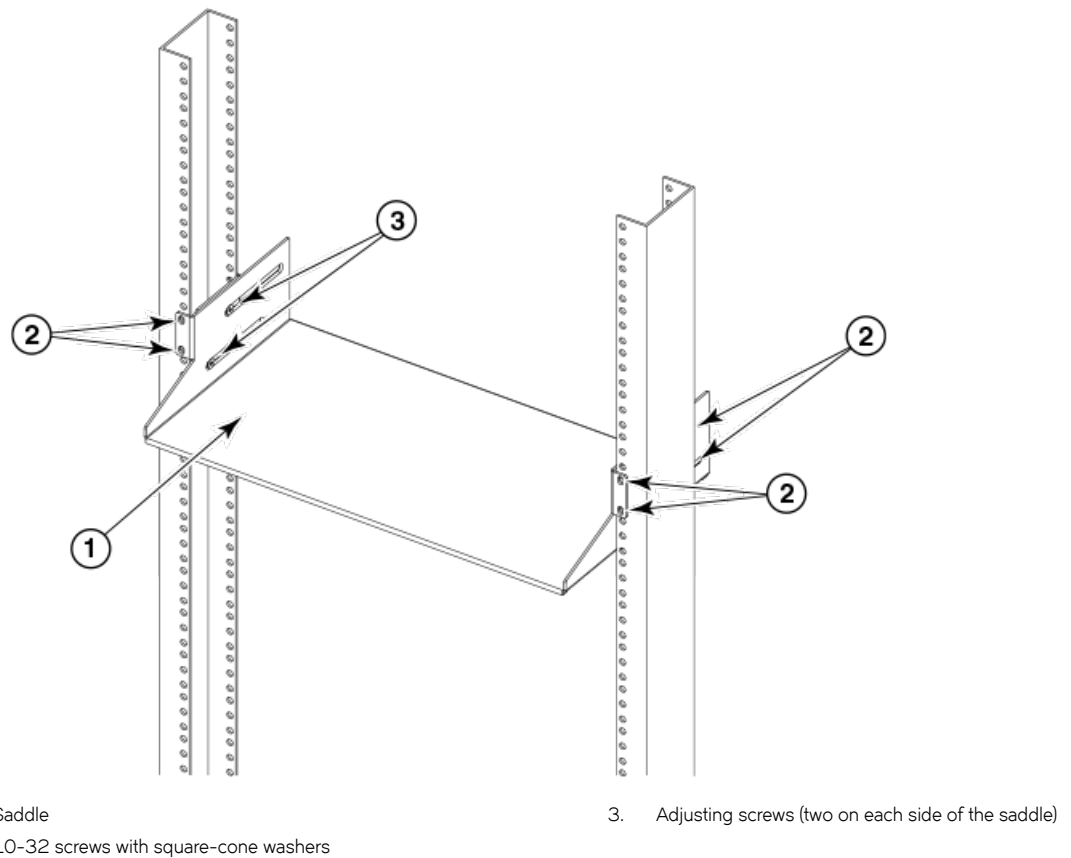
**FIGURE 18** Saddle installed in a rack



**NOTE**

For rails with round holes, use the clip nuts (refer to [Figure 16](#) on page 50) on the rack rails for securing 10-32 screws. For rails with square holes, use the retainer nuts (refer to [Figure 16](#) on page 50). Also refer the following figure.

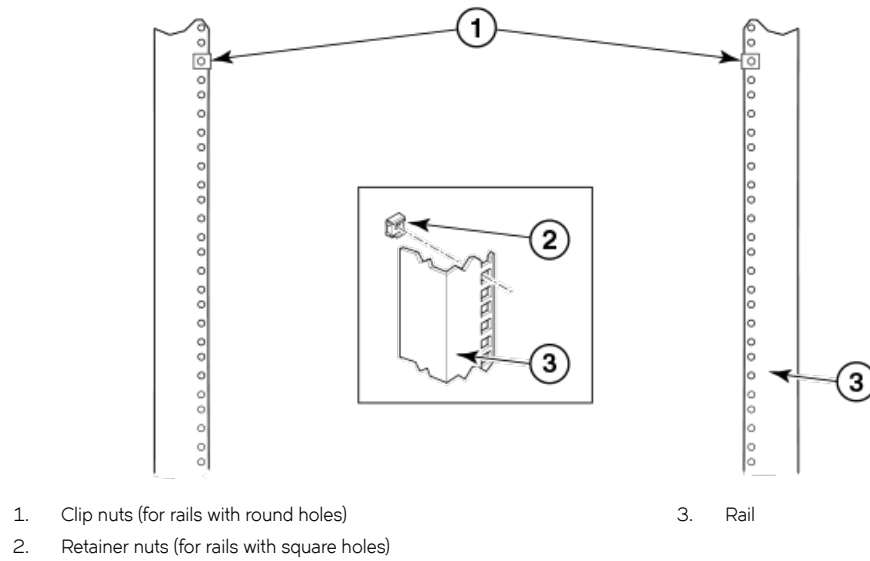**FIGURE 19** Using clip nuts and retainer nuts to secure screws to rack rails




3. Remove any existing rack-mount brackets from the device, and install the new Telco mid-mount brackets from the accessory kit. Refer to the following figure.

**NOTE**

The following illustration shows mounting brackets from XBR-DCX4S-0126. Mounting brackets from XBR-X64-0126 kit install the same way.

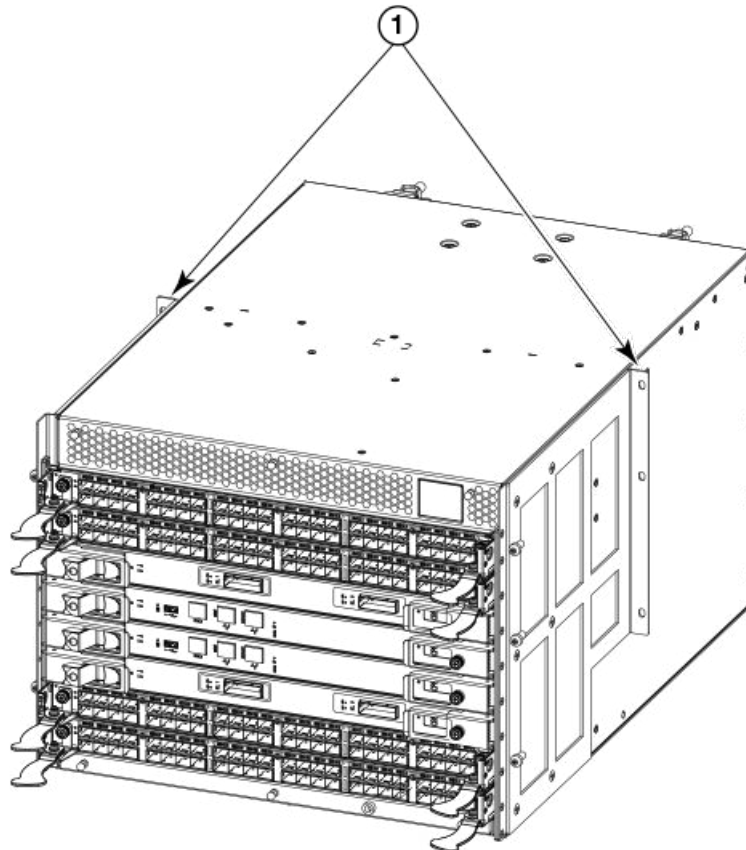**FIGURE 20** Telco mid-mount brackets installation



1. Telco mid-mount mounting brackets (left and right)

## Installing the device in the rack



**DANGER**

*Use safe lifting practices when moving the product.*


1. Ensure that the door is removed from the port side of the device, if installed. Refer to procedures for removing and replacing the device door in this guide.
2. Ensure the device can be oriented so that the nonport side has access to intake air (cool).
3. Use a lift to raise the device to the correct level.
4. If applicable, lock the wheels of the lift.

5. Gently slide the device onto the saddle, ensuring that it remains supported during the transfer. See the following figure.

**NOTE**

The following illustration shows mounting brackets from XBR-DCX4S-0126. Mounting brackets from XBR-X64-0126 kit install the same way.

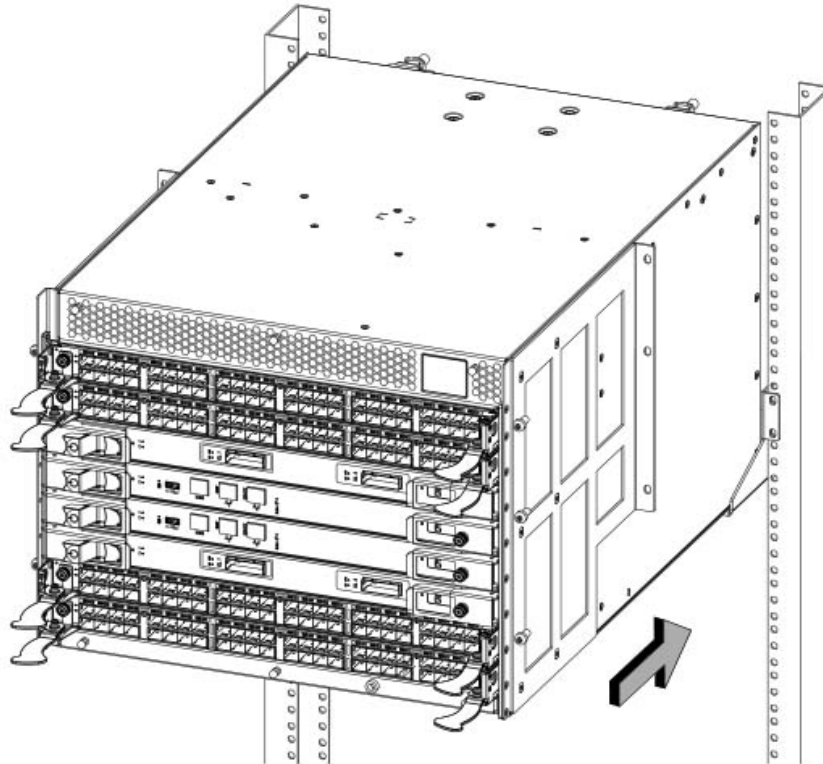**FIGURE 21** Sliding the device into the mid-mount saddle




6. Secure the device to the rack using six 10-32 screws with square-cone washers, three screws for each mounting bracket attached to the device. Refer to the following figure. Tighten the screws to 32 in-lb (36.86 cm-kg)

**NOTE**

Screws, clip nuts, and retainer nuts for mounting the device to the equipment rack are located in the device hardware accessory kit.

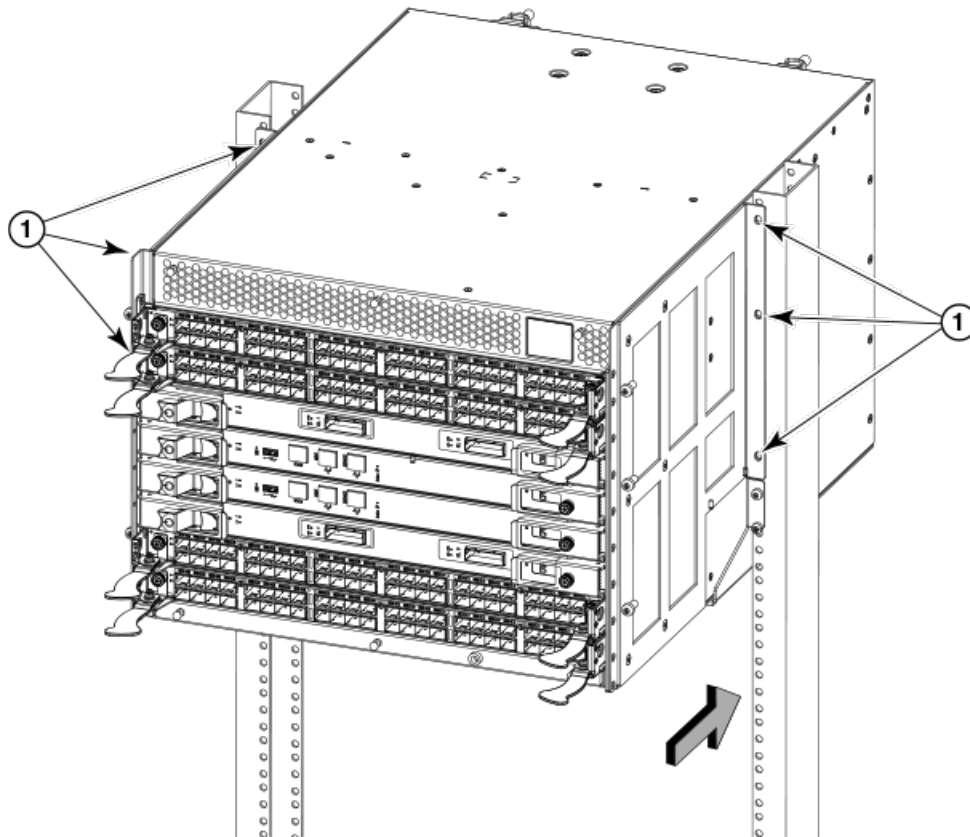**FIGURE 22** Device installed in mid-mount saddle



1. 10-32 screws with square-cone washers (6)

**NOTE**

For rails with round holes, use the clip nuts on the rack rails for securing 10-32 screws. For rails with square holes, use the retainer nuts (refer to [Figure 16](#) on page 50). Also refer to [Figure 19](#) on page 53.

7. Reinstall the door. Refer to procedures for removing and replacing the device door in this guide.

## Installing the 8U Chassis 27-31-Inch Rail Rack Kit for Four-Post Racks (XBR-DCX4S-0120)

Use the following instructions to install the device in a rack using the 8U Chassis 27-31 Inch Rail Rack Kit for Four-Post Racks (XBR-DCX4S-0120).



Observe the following when mounting this device:

- Use Electronic Industries Association (EIA) standard racks to install a modular device in a 19 in. Provide a space that is 8 rack units (8U) high, with a rail-to-rail depth of 27-31 in.(68.58 to 78.74 cm). 1U is equal to 4.45 cm (1.75 in.).
- Before mounting your device, review any specific installation and facility requirements in this Hardware Installation Guide.
- Hardware devices illustrated in these procedures are only for reference and may not depict the device you are installing into the rack.

## Time and items required

Allow approximately one hour to unpack and install a device in a rack.

The following tools are required to install the 8U Chassis 27-31 Inch Rail Rack Kit for Four-Post Racks (XBR-DCX4S-0120).

- Torque wrench with #2 Phillips screwdriver tip
- Flathead screwdriver
- Hydraulic or assisted lift with a minimum raise of 140 cm (55 in.) and a minimum capacity of 113 kg (250 lbs).


## Parts list

The following parts are provided with the 8U Chassis 27-31 Inch Rail Rack Kit for Four-Post Racks (XBR-DCX4S-0120).

### NOTE

Not all parts may be used with certain installations depending on the device type.

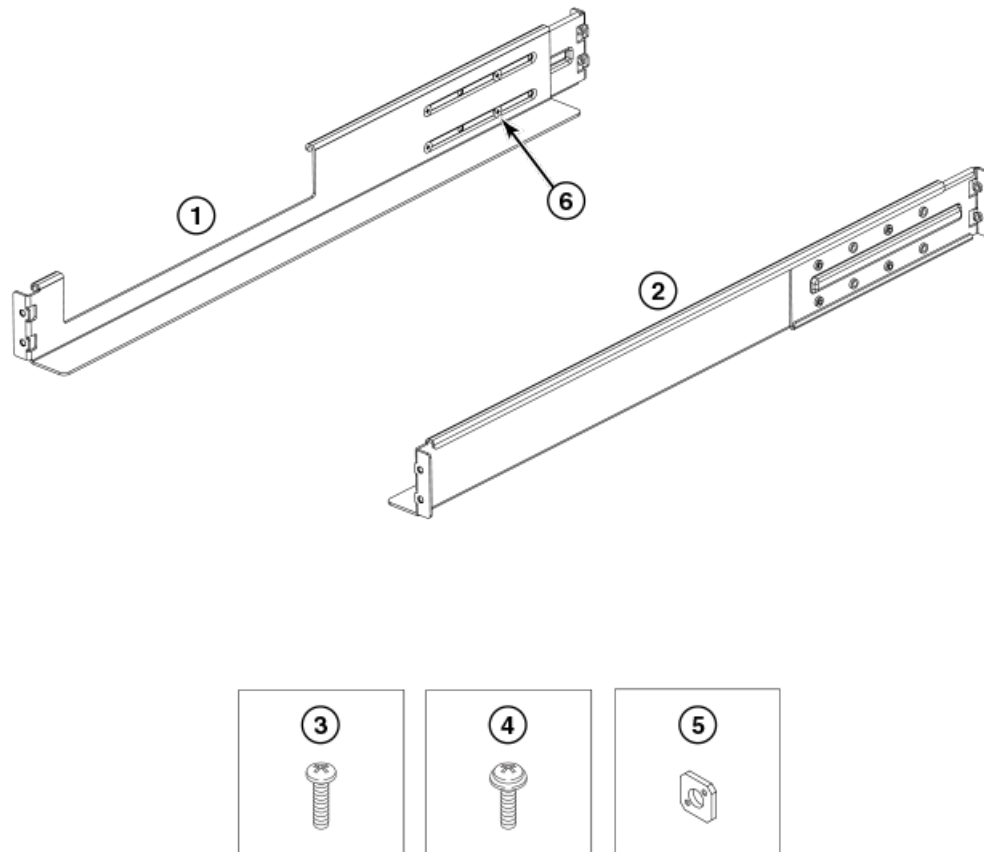**FIGURE 23** Rack kit parts



- |  |   |
|--|---|
| 1. Left rail   | 5. Alignment washer for racks that have rails with square holes |
| 2. Right rail  | 6. Adjusting screw locations                                    |
| 3. 10-32 x .5 in. (1.27 cm) Phillips screw   |   |
| 4. 10-32 x .63 in. (1.60 cm) Phillips screw with square cone washer for racks that have rails with round holes |   |


## Assembling the rack hardware

Use the following instructions to install the rack mount kit illustrated in the previous figure into the equipment rack for mounting the device.

1. On each rail (1 and 2 in the previous figure), loosen the four 10-32 screws on the adjustable brackets and adjust the rails to the depth of your equipment rack. Tighten screws after adjustment.

2. Noting that the rails are designated "Left" and "Right," install each rail in the rack using four 10-32 x .63 or four 10-32 x .5 screws, two screws on each end of each rail. Refer the following figure.
  - Position the rails so that the adjustable ends are mounted on the intake aisle side of the rack.
  - For rails with round holes - use two 10-32 x .63 screws with square-cone washers on each end of the rail assembly. Tighten the screws to a torque of 29.2 to 36.5 in-lb (33.6 to 42 cm-kg).
  - For rails with square holes - use the two standard 10-32 x .5 screws with blue Loctite on the threads and alignment washers on each end of the rail assembly. Tighten the screws to a torque of 29.2 to 36.5 in-lb (33.6 to 42 cm-kg).

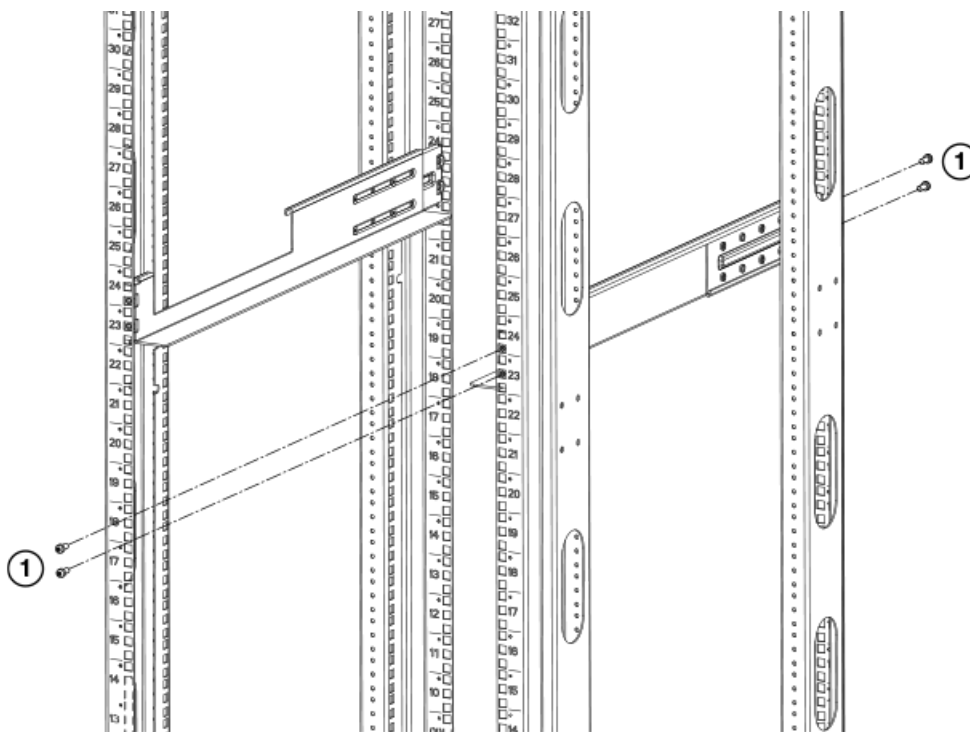**FIGURE 24** Device rails installed in equipment rack



1. 10-32 x .5 in. (1.27 cm) Phillips screw (for square holes) or 10-32 x .63 in. (1.60 cm) Phillips screw (for round holes)


3. Install either clip nuts or retainer nuts depending on whether your rack has round holes or square holes.

These will allow you to secure the device to the rack uprights.

**NOTE**

For rails with round holes, use the clip nuts on the rack rails for securing 10-32 x .63 screws. For rails with square holes, use the retainer nuts. Refer to the following figure.

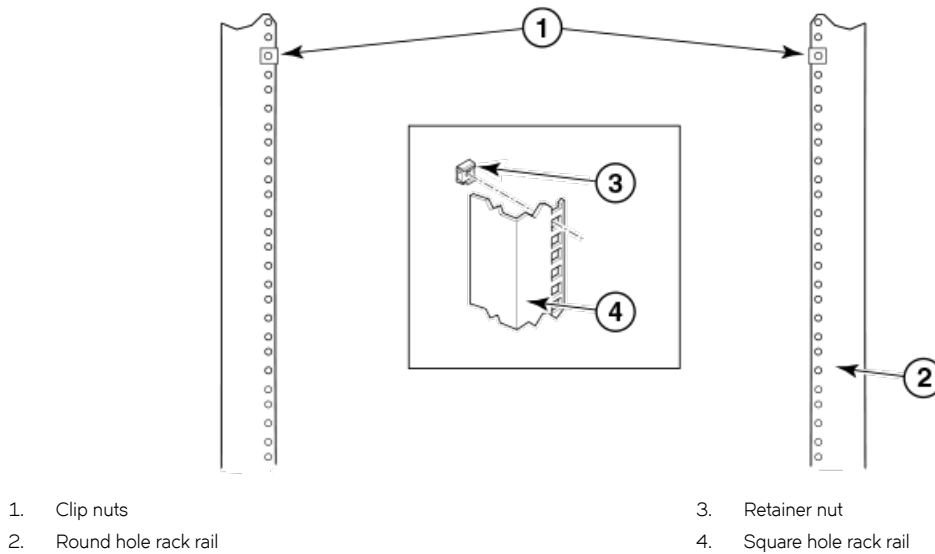**FIGURE 25** Using clip nuts and retainer nuts to secure screws to rack rails




## Installing the device in the rack

1. Ensure that the door is removed from the port side of the device if it is installed. Refer to procedures for removing and replacing the device door in this guide.
2. Ensure the chassis can be oriented so that the nonport side has access to intake air (cool).
3. If applicable, lock the wheels of the lift.
4. Use a lift to raise the chassis to the correct level.


5. Gently slide the chassis onto the rail, ensuring that it remains supported during the transfer. Refer the following figure.

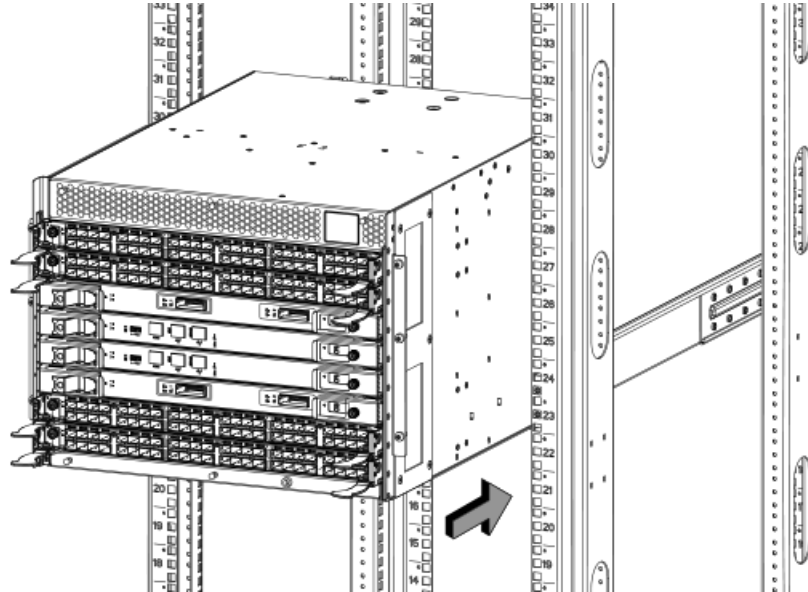**FIGURE 26** Installing a chassis into the equipment rack



6. Secure the device to the equipment rack racks with six 10-32 x .63 screws with square-cone washers, three screws on each side. Tighten the screws to a torque of 80 in-lb (92 cm-kg). Refer to the following figure.

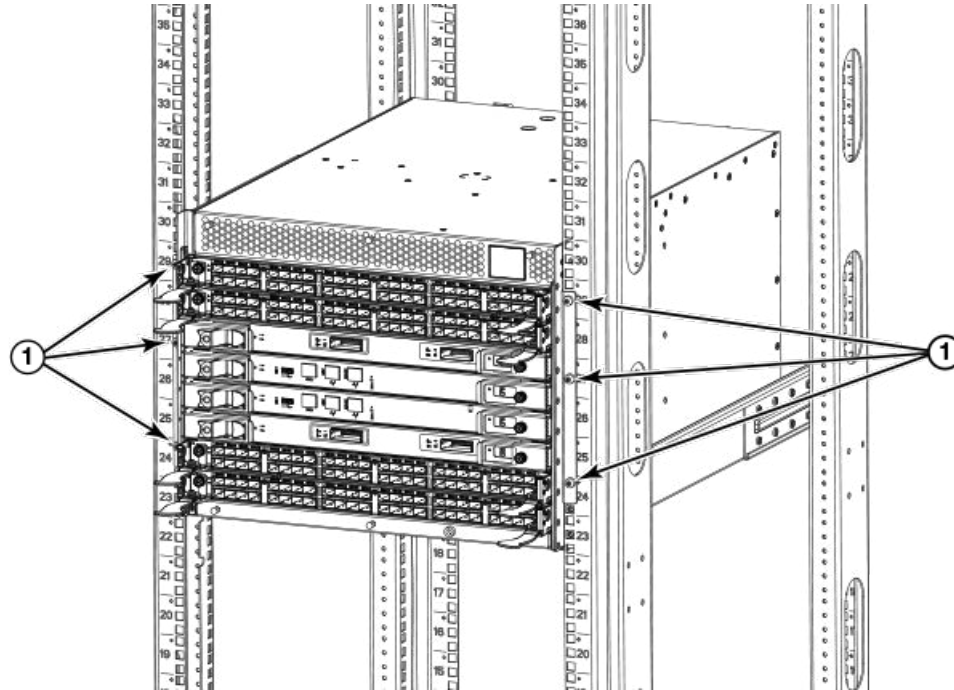FIGURE 27 Chassis installed in equipment rack



1. 10-32 x .63 in.(1.60 cm) Phillips screw with square cone washer

7. Reinstall the device door. For instructions, refer to procedures for removing and replacing the device door in this guide.

## Removing logo bezel protective cover

The chassis ships with a protective cover installed over the logo bezel and air vents at the top of the port side of the chassis.




### CAUTION

Remove the logo bezel protective cover on the port side of chassis before applying power. This cover is attached over the air vents. If not removed, the chassis can overheat and will eventually shut down.

Remove this cover by removing the Phillips screws securing it to the mounting bracket on each side of the chassis.

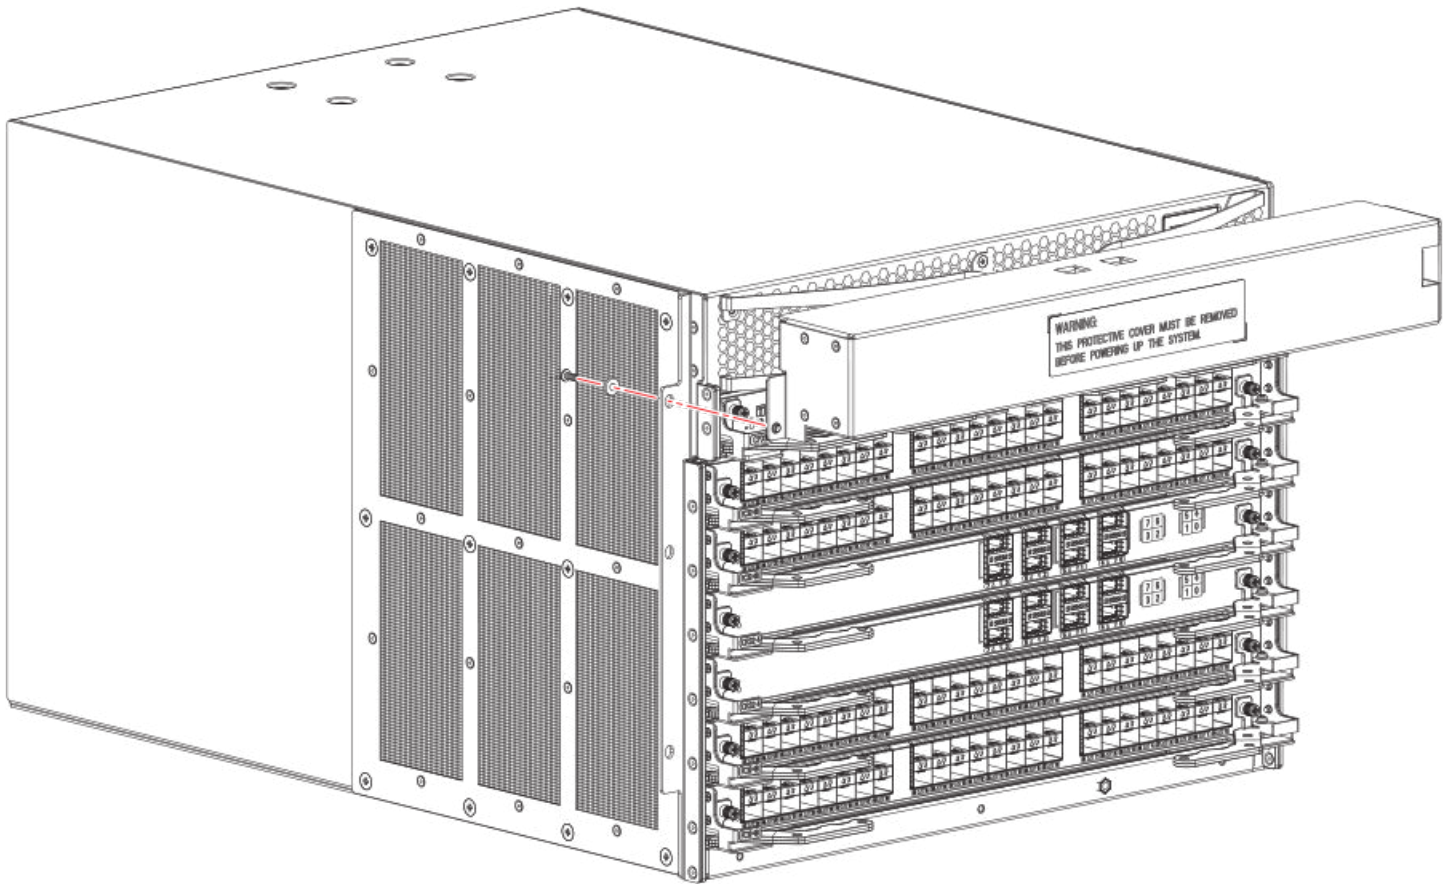FIGURE 28 Removing bezel protective cover from Brocade X6-4



**CAUTION**

Do not attempt to lift or support the chassis by the logo bezel attached over the port-side air vents.





# Initial Setup and Verification

• Configuration and verification task guide.....	65
• Items required.....	66
• Providing power to the device.....	66
• Establishing a serial connection to the device.....	73
• Configuring the IP addresses.....	74
• Establishing an Ethernet connection to the device.....	76
• Setting the domain ID.....	77
• Setting the date and time.....	77
• Customizing the chassis and switch name.....	80
• Verifying installed licenses and license key.....	81
• Verifying correct operation.....	81
• Backing up the configuration.....	82
• Powering down the chassis.....	83

## Configuration and verification task guide

Before connecting device to the fabric, use the following tasks to initially configure and setup the device, verify correct operation, and back up the configuration.

The configuration information is mirrored to the standby CP blade, which allows the current configuration to remain available even if the active CP blade fails. The configuration information for the device is stored in the WWN cards and the flash memory of the CP blades. The configuration can be backed up to a workstation (uploaded) and then downloaded to the active CP blade if necessary.

### NOTE

The device WWN is set by the factory to match the license ID (which is based on the chassis serial number).

**TABLE 12** Configuration and verification tasks

Task	Task details or additional information
Establish a serial connection to the director.	Connect a serial cable to the console port on active CP blade and use a terminal emulator program (such as HyperTerminal on a PC, or TERM, TIP, or Kermit in a UNIX environment) to log in to the console port and device. The blue "Active" LED illuminates on the active CP blade.
Configure IP addresses for the device.	Configure an IP address and subnet mask for a chassis management connection.  Configure IP addresses, host names, subnet masks, and gateway addresses for both control processor (CP) blades.
Establishing an Ethernet connection to the device.	Connect Ethernet cable to active CP blade Ethernet port labeled "Management" and establish a connection.
Set a unique domain ID for the device.	Disable the device using the <b>switchDisable</b> command, and then use the <b>configure</b> command to step through prompts to configure a domain ID. Use <b>switchEnable</b> to re-enable the device.
Set the date and time for the device.	Use the <b>date</b> , <b>tsTimeZone</b> , and <b>tsClockServer</b> commands to set date, time zone, and synchronize local time of device with NTP server.
Customize a switch and chassis name for the device.	Use the <b>switchName</b> command, followed by new name in quote marks ( <b>switchname</b> "bigswitch").  Use the <b>chassisName</b> command followed by the new name in quote marks ( <b>chassisname</b> "chassis_002").

**TABLE 12** Configuration and verification tasks (continued)

Task	Task details or additional information
Verify installed licenses and license key	<p>Enter the <b>licenseShow</b> command to determine display enabled licenses and the license key.</p> <p>Enter the <b>licenseIdShow</b> command to obtain the chassis ID.</p> <p>Record the license key and chassis ID for future reference.</p>
Verify correct operation of director.	<p>Check LEDs on blades and FRUs, and use the following commands to verify operation:</p> <ul style="list-style-type: none"> <li>• <b>psShow</b></li> <li>• <b>fanShow</b></li> <li>• <b>switchShow</b></li> <li>• <b>fabricShow</b></li> <li>• <b>slotShow</b></li> <li>• <b>tempShow</b></li> <li>• <b>historyShow</b></li> <li>• <b>errdump</b></li> </ul>
Back up the configuration.	Use the <b>configUpload</b> command.

## Items required

The following items are required for initial setup and verification of the device:

- The device, mounted and installed with the required blades, FRUs, transceivers, and cables and is connected to a power source.
- A workstation computer with an installed terminal emulator application, such as HyperTerminal for Windows.
- An unused IP address with corresponding subnet mask and gateway address.
- A serial cable (provided) with an RJ-45 connector.
- An RJ-45 to DB-9 adapter.
- Three Ethernet cables (including one spare).
- Access to an FTP server or USB device for backing up (uploading) or downloading the device configuration or collecting **supportsave** output data (optional).
- A Brocade USB drive for collecting **supportsave** output data (optional)

## Providing power to the device

Perform the steps to provide power that are applicable to your power supply model. Observe the following for all power connections:

- Before connecting power, refer the following.
  - Electrical caution and danger statements in [Safety precautions](#) on page 21 and [Facility requirements](#) on page 23
  - Power supply specifications section in the [Brocade X6 Directors Technical Specifications](#) on page 225 for power supply requirements of your device.
- Connect each power supply to a different power source or circuit to provide full redundancy.
- Route the power cords so they will be out of the way when connected to the power source. Ensure that the power cords have a minimum service loop of 15.2 cm (6 in.) and are routed to avoid stress.
- Remember that power is supplied to the device as soon as the first power supply is connected to a power source.

## Connecting power cord to AC power supplies

Complete the following steps to connect the power cord from the facility AC power source to the device's AC power supply. Before connecting to power, be sure to observe all "Power Precautions" in [Safety precautions](#) on page 21. In addition, refer to the power supply specifications and requirements in [Brocade X6 Directors Technical Specifications](#) on page 225.

1. Remove the logo bezel protective cover if it is still installed over the top air vents on the port side of the chassis. Refer to [Removing logo bezel protective cover](#) on page 62 for instructions.



### CAUTION

Remove the logo bezel protective cover on the port side of chassis before applying power. This cover is attached over the air vents. If not removed, the chassis can overheat and will eventually shut down.

2. Install all power supplies provided for your device if not already installed. Refer to [Installing a power supply](#) on page 187 for procedures.
3. When installing device in a rack, route power cables from power distribution units (PDUs) so they do not cover air vents in chassis.
4. Connect the provided AC power cords to a power source with voltage of 200–240 VAC, 50/60 Hz or optionally to a power source with voltage of 100–120 VAC, 50/60 Hz.



### DANGER

**High Touch Current. Earth connection essential before connecting supply.**

### NOTE

Use of the high-voltage line (200–240 VAC) is highly recommended because of better power-conversion efficiency. With 120 VAC primary input, the power distribution unit (PDU) supplies roughly half the available wattage, which can limit blade and port configurations. For a "fully-loaded" chassis with maximum supported blades and optics, two power supplies connected to 200–240 VAC are required for full N+N redundancy. For details on power supplies required for operation and high availability, refer to "Power supply requirements" and "Power consumption" tables in the [Brocade X6 Directors Technical Specifications](#) on page 225.

5. Route the cords so they will be out of the way when connected to the power source. Ensure that the power cords have a minimum service loop of 15.2 cm (6 in.) available and are routed to avoid stress.
6. Plug the power cords into power supplies. The power supply LED will light green when power is applied. Note that after one power supply is plugged into AC power, LEDs on the remaining installed power supplies will flash green until they also have power applied.

The director performs a power-on self-test (POST) each time it is powered on. POST takes approximately 10 minutes, during which time status LEDs on installed blades and other FRUs may display amber. Power LEDs on all FRUs display green when power-on self-test (POST) is complete and all FRUs are functional. You can bypass POST by using the **fastBoot** command. You can also disable POST for successive reboots using the **diagDisablePost** command.

### NOTE

Do not connect the device to the network until the IP addresses are configured.

7. After POST is complete, verify that the power LEDs on blades and other FRUs are green.  
For information about LED patterns, refer to *Monitoring the Device*.
8. Ground the chassis by attaching a ground wire from building ground to an appropriate crimp connector and attaching the connector to the 2AWG Panduit LCD2-14AF lug located to the left of the bottom fan assembly near the bottom of the chassis.

## Connecting power cord to HVAC/HVDC power supplies

Use steps in this section to apply power to the dual-function high-voltage AC and DC (HVAC/HVDC) power supply. This power supply converts high-voltage DC or AC input to appropriate DC power for the device.

Make sure that you observe the electrical caution and danger statements in [Safety precautions](#) on page 21 when connecting this power supply.

### NOTE

The equipment installation must meet NEC/CEC code requirements. Consult local authorities for regulations.

### NOTE

Power is supplied to the device as soon as the first power supply is connected to a power source.



### CAUTION

The maximum input voltage for connection to the HVAC/HVDC power supply should not exceed 305 VAC and 400 VDC.



### CAUTION

The maximum input voltage for connection to the HVAC/HVDC power supply should not exceed 305 VAC and 400 VDC .

1. If connecting to AC power, attach an AC power plug to the unterminated wires on the HVAC/HVDC power cord that meets your facility and local code requirements. If connecting to DC power, verify how you will attach these unterminated wires to your site's DC power terminal blocks. For more information on the HVAC/HVDC power cord available for these power supplies, refer to [Using HVAC/HVDC power cords](#) on page 72.
2. Ground the chassis by attaching a ground wire from building ground to an appropriate crimp connector and attaching the connector to the 2AWG Panduit LCD2-14AF lug located to the left of the bottom fan assembly near the bottom of the chassis.
3. Remove the logo bezel protective cover if it is still installed over the top air vents on the port side of the chassis. Refer to [Removing logo bezel protective cover](#) on page 62 for instructions.



### CAUTION

Remove the logo bezel protective cover on the port side of chassis before applying power. This cover is attached over the air vents. If not removed, the chassis can overheat and will eventually shut down.

4. Install all power supplies provided for your device if not already installed. Refer to [Installing a power supply](#) on page 187 for procedures.
5. When installing the device in a rack, route power cables from power distribution units (PDUs) so they do not cover air vents in chassis.

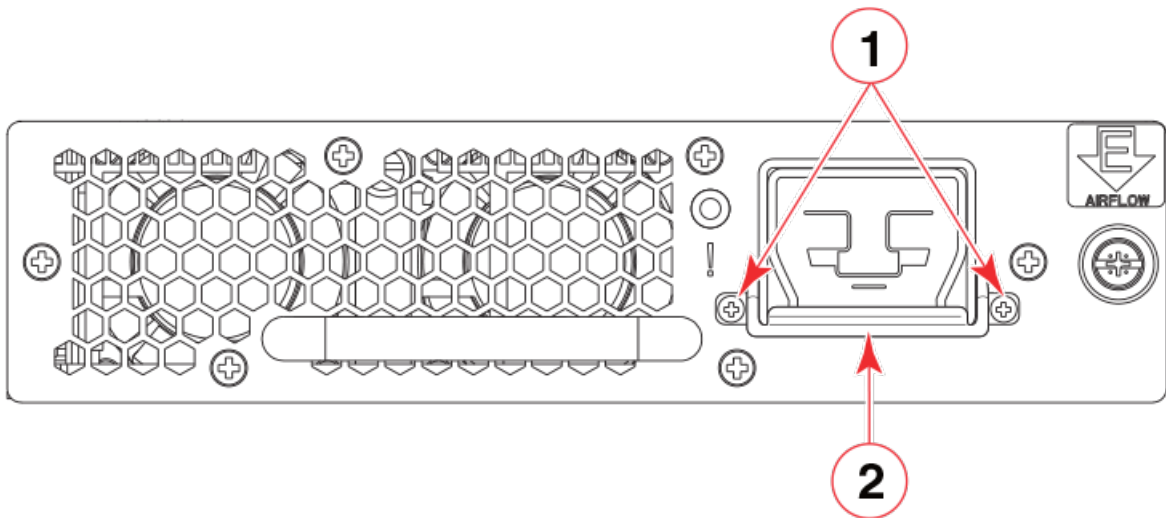
6. Before connecting the power cord to a power supply, first remove the cable restraint cover, if it is installed under the power cord connector. Remove the cover by unscrewing the two torx head screws.

Save the retainer cover and screws for reinstallation after plugging in the power cord.



**CAUTION**

When removing the metal cable restraint cover under the high voltage power supply inlet, remove the 2 Torx head screws only.




1. Torx head screws

2. Metal cable restraint cover

7. Connect power cords to installed power supplies.

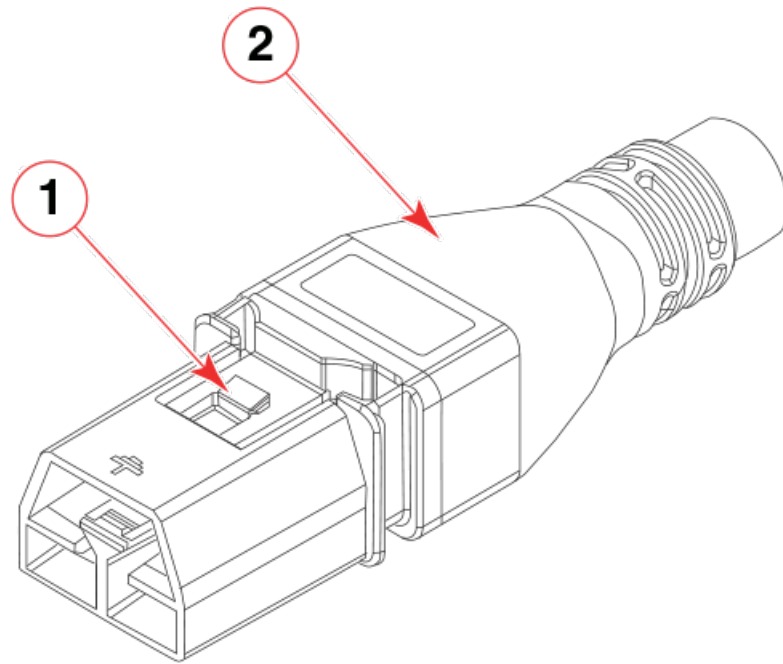The connector on the power cord is keyed so that it only fits one way into the power supply connector. Note that the connector's latch should be positioned under the connector and will latch when the power cord connector is fully inserted into the power supply.



1. Power cable

2. Connector latch

8. Attach the cable restraint cover under the power cord connector using its two torx head screws (refer to step 4).

**NOTE**

This retainer cover protects the power cord from being accidentally unlatched and disconnected from the power supply.

9. If connecting to an AC power source, use the following steps. (If connecting to a DC power source, go on to step 8.)
  - a) Make sure that you observe the electrical caution and danger statements in [Safety precautions](#) on page 21 when connecting this power supply.
  - b) Make sure that AC power plug is attached to the power-source end of the HVAC/HVDC power cord that meets your facility and local code requirements.

For more information on the HVAC/HVDC power cord available for these power supplies, refer to [Using HVAC/HVDC power cords](#) on page 72.

**DANGER**

***Make sure that the power source circuits are properly grounded, then use the power cord supplied with the device to connect it to the power source.***

- c) If connecting to an AC power source, connect to a power source with voltage of 200–277 VAC, 50/60 Hz (recommended).

**NOTE**

Use of a high-voltage line (200–277 VAC) is highly recommended because of better power-conversion efficiency. For a "fully-loaded" chassis with maximum supported blades and optics, two power supplies connected to 200–277 VAC are required for full N+N redundancy. For details on power supplies required for operation and high availability, refer to "Power supply requirements" and "Power consumption" tables in the [Brocade X6 Directors Technical Specifications](#) on page 225.

**DANGER**

***High Touch Current. Earth connection essential before connecting supply.***

**CAUTION**

***Use a separate branch circuit for each power cord, which provides redundancy in case one of the circuits fails.***

10. If connecting to an DC power source, use the following steps. (If connecting to a AC power source, go to step 7.)
  - a) Make sure that you observe applicable electrical caution and danger statements in [Safety precautions](#) on page 21 when connecting this power supply.
  - b) Terminate the negative (-) and positive (+) unterminated wires on the HVAC/HVDC power cord to the DC power source. Connect the ground wire to building ground.

For more information on the HVAC/HVDC power cord available for these power supplies, refer to [Using HVAC/HVDC power cords](#) on page 72.

**NOTE**

Make sure that there is an adequate circuit breaker in the DC input circuit to the system based on input wiring to the product and input voltage.

11. Route the cords so they will be out of the way when connected to the power source. Ensure that the power cords have a minimum service loop of 15.2 cm (6 in.) available and are routed to avoid stress.

12. After power is applied, the power supply LED will light green.

The director performs a power-on self-test (POST) each time it is powered on. POST takes approximately 10 minutes, during which time status LEDs on installed blades and other FRUs may display amber. Power LEDs on all FRUs display green when power-on self-test (POST) is complete and all FRUs are functional. You can bypass POST by using the **fastBoot** command. You can also disable POST for successive reboots on the device using the **diagDisablePost** command.

#### NOTE

Do not connect the device to the network until the IP addresses are configured.

13. After POST is complete, verify that the power LEDs on blades and other FRUs are green.

For information about LED patterns, refer to *Monitoring the Device*.

14. Ground the chassis by attaching a ground wire from facilities ground to an appropriate crimp connector and attaching the connector to the 2AWG Panduit LCD2-14AF lug located to the left of the bottom fan assembly near the bottom of the chassis.

## Using HVAC/HVDC power cords

HVAC/HVDC power supply power cords, available from Brocade, are shipped with an Anderson Saf-D-Grid® 400 connector on the power supply end and three unterminated 14 AWG UL 600V 90C wires with ring lugs on the power source end. Power cord length is 6 m (19 ft. 8 in.). For connecting to a power source, attach either an AC power plug to these wires that meets your facility and local code requirements, or connect these wires to appropriate DC power terminal blocks.


The following table defines the function of the 14 AWG wires in the power cable:

**TABLE 13** HVAC/HVDC power cable

Wire label	Color	Function
L+	Brown	Return positive (+)
-	Blue	Negative (-)
PE	Green with yellow stripe	Earth ground (PE)

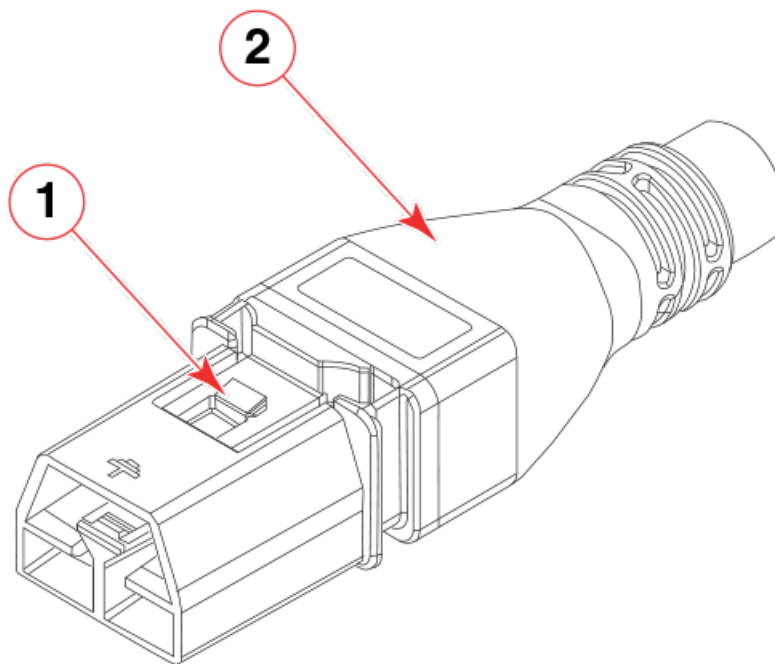The Anderson Saf-D-Grid® connector on the power supply end of the cord is keyed so that it only fits one way into the power supply. Note that the connector's latch should be positioned under the connector and will latch when the power cord connector is fully inserted into the power supply.





1. Power cable

2. Connector latch

## Establishing a serial connection to the device

To establish a serial connection to the console port on the device, complete the following steps.

1. Verify that the device is powered on and that POST is complete by verifying that all power LED indicators on the power supplies, fans, and blades display a steady green light.
2. Remove the shipping cap from the console (IOIO) port on the active CP blade. The active CP is indicated by an illuminated blue LED on the CP blade front panel.

### NOTE

The console, or serial port is intended primarily for the initial setting of the IP address and for service purposes.

3. Use the serial cable provided with the device to connect the console (serial) port on the active CP to a computer workstation.

### NOTE

The active CP is indicated by an illuminated blue LED, labeled "Active," on the CP blade front panel.

If the serial port on the workstation is RJ-45 instead of RS-232, remove the adapter on the end of the serial cable and insert the exposed RJ-45 connector into the RJ-45 serial port on the workstation.

4. Access the device using a terminal emulator application (such as HyperTerminal in a Windows environment or tip in a UNIX environment).
5. Disable any serial communication programs running on the workstation (such as synchronization programs).

6. Open a terminal emulator application (such as HyperTerminal on a PC, or TERM, TIP, or Kermit in a UNIX environment), and configure the application as follows:
  - In a Windows environment:

Parameter	Value
Bits per second	9600
Data bits	8
Parity	None
Stop bits	1
Flow control	None

**NOTE**

Flow control is not supported on the serial consoles when attached to remote terminal servers and must be disabled on the customer-side remote terminal server and the host-side clients.

- In a UNIX environment, enter the following string at the prompt:

```
tip /dev/ttyb -9600
```

If ttyb is already in use, use ttya -9600 instead.

When the terminal emulator application stops reporting information, press **Enter**. The following login prompt displays:

```
CP0 Console Login:
```

**NOTE**

CP0 in the preceding prompt is an example. "CP1" will display if it is the active CP.

7. Log in to the console using *admin* as the default login name and *password* as the default password. As login to the device occurs, you are prompted to change the device passwords.

```
Please change passwords for switch default accounts now.
Use Control-C to exit or press 'Enter' key to proceed.
```

8. Press **Enter** to step through a procedure to change the passwords as shown in the following example. To skip modifying the password, press **Ctrl+C**.

```
-----
for user - admin
Changing password for admin
Enter old password:
Enter new password:
Re-type new password:
passwd: all authentication tokens updated successfully
```

Passwords can be 8 to 40 characters long. They must begin with an alphabetic character. They can include numeric characters, periods (.), and underscores (\_) only. Passwords are case-sensitive, and they are not displayed when you enter them on the command line. For more information on passwords, refer to the *Brocade Fabric OS Administration Guide*.

## Configuring the IP addresses

The device requires three IP addresses, which are configured using the **ipaddrset** command. IP addresses are required for both CP blades (CP0 and CP1) and for chassis management (shown as SWITCH under the **ipaddrshow** command) in the device.

The default IP addresses and host names for the device are:

- 10.77.77.75 / CP0 (the CP blade in slot 1 at the time of configuration)
- 10.77.77.74 / CP1 (the CP blade in slot 2 at the time of configuration)

Use one of the following formats for IPv4 or IPv6 addressing when entering the IP address using the **ipaddrset** command:

- If you using an IPv4 IP address, enter the IP address in dotted decimal notation as prompted.

```
Ethernet IP Address: [192.168.74.102]
```

- If using an IPv6 address, enter the network information in colon-separated notation as prompted.

```
device:admin> ipaddrset -ipv6 --add 1080::8:800:200C:417A/64
```

#### NOTE

Resetting an IP address while the device has active IP traffic or has management and monitoring tools running, such as DCFM, Fabric Watch, and SNMP, can cause traffic to be interrupted or stopped.

Complete the following steps to set the IP addresses for the device.

1. Log into the device through a serial console connection to the active CP blade.

The active CP is indicated by an illuminated blue LED on the blade front panel. If you are already logged through a console port, you can determine whether you are logged into the active or standby CP by entering **hashow** at the prompt. The following example shows local login at CP1, which is the active blade.

```
swDir:admin> hashow
Local CP (Slot 2, CP1) : Active, Warm Recovered
Remote CP (Slot 1, CP0) : Standby, Healthy
HA Enabled, Heartbeat Up, HA State Synchronized
```

2. Configure the chassis management IP address by entering the **ipaddrset -chassis** command:

```
swDir:admin> ipAddrSet -chassis
```

Enter required information at the prompts. Specify the **-chassis** IP address. The **-sw 0** IP address is not valid on this device.

#### NOTE

The addresses 10.0.0.0 through 10.0.0.255 are reserved and used internally by the device. External IPs must not use these addresses.

Following is example configuration for setting the chassis IP address.

```
swDir:admin> ipaddrset -chassis
DHCP [Off]:
Ethernet IP Address [10.0.0.0]:192.168.1.1
Ethernet Subnetmask [255.0.0.0]:255.255.240.0
IP address is being changed...
```

3. Set up the CP0 IP address by entering the **ipaddrset -cp 0** command:

```
swDir:admin> ipAddrSet -cp 0
```

Enter required information at the prompts. Following is example configuration for setting the CP0 IP address.

```
swDir:admin> ipaddrset -cp 0
DHCP [Off]:
Host Name [cp0]:
Ethernet IP Address [10.0.0.0]:192.168.1.2
Ethernet Subnetmask [255.0.0.0]:255.255.260.0
Gateway IP Address [10.0.0.0]:10.38.160.1
IP address is being changed...
Done.
```

4. Set up the CP1 IP address by entering the **ipaddrset -cp 1** command:

```
swDir:admin> ipAddrSet -cp 1
```

Enter required information at the prompts. Following is example configuration for setting the CP1 IP address.

Following is sample configuration for setting the CP1 IP address:

```
swDir:admin> ipaddrset -cp 1
DHCP [Off]:
Host Name [cp0]:
Ethernet IP Address [10.0.0.0]:192.168.3
Ethernet Subnetmask [255.0.0.0]:255.255.230.0
Gateway IP Address [10.0.0.0]:10.38.160.1
IP address is being changed...
Done.
```

## Establishing an Ethernet connection to the device

After using a serial connection to configure the IP addresses for the device, you can connect the active CP blade to the local area network (LAN).

### NOTE

Connecting the CP blades to a private network or VLAN is recommended.

After establishing an Ethernet connection, you can complete the device configuration using a serial console connection, Telnet connection, or management applications, such as Web Tools or Brocade Network Advisor.

Perform the following steps to establish an Ethernet connection to the device.

1. Remove the shipping plug from the Ethernet port on the active CP blade.  
The active CP is indicated by an illuminated blue LED on the blade front panel.
2. Insert one end of an Ethernet cable into the Management (MGMT) Ethernet port.
3. Connect the other end to an Ethernet 10/100/1000 BaseT LAN.
4. Complete any additional device configuration procedures for the device using one of the following steps:
  - Log into the device using a serial console connection and **admin** login.
  - Log into the device through a Telnet session using the chassis management IP address and **admin** login.

## Setting the domain ID

Each device in the fabric must have a unique domain ID. The default domain ID is 1. If the device is not powered on until after it is connected to the fabric and the default domain ID is already in use, the domain ID for the new device is automatically reset to a unique value. If the device is connected to the fabric after it has been powered on and the default domain ID is already in use, the fabric segments.

You can use the **fabricshow** command on another device in the fabric to view domain IDs already assigned. Manually configure a unique domain ID using the **configure** command as in the following steps:

1. Log into the device using one of the following methods:
  - A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
  - A Telnet session using the chassis management IP address.
2. Log into the device using *admin* as your password. If you have not changed the default password, use *password*.
3. Perform the following steps to modify the Domain ID.
  - a) Disable the device by entering the **switchdisable** command.
  - b) Enter the **configure** command. The command prompts display sequentially. Enter a new value or press **Enter** to accept each default value.
  - c) Enter **y** after the "Fabric param" prompt.
 

```
Fabric param (yes, y, no, n): [no] y
```
  - d) Enter a unique domain ID (such as the domain ID used by the previous device, if still available).
 

```
Domain: (1..239) [1] 3
```
  - e) Complete the remaining prompts or press Ctrl+D to accept the remaining settings without completing all the prompts.
  - f) Re-enable the device by entering the **switchenable** command.

## Setting the date and time

The date and time settings are used for logging events, error detection, and troubleshooting, and hence you should set them correctly. However, device operation does not depend on the date and time; a device with incorrect date or time values still functions properly.

You can synchronize the local time of the principal or primary fabric configuration server (FCS) device to that of an external Network Time Protocol (NTP) server.

Perform the following steps to set the date and time.

1. Log into the device using one of the following methods:
  - A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
  - A Telnet session using the chassis management IP address.
2. Log into the device using *admin*. If you have not changed the default password, use *password*.

3. Enter the **date** command, using the following syntax:

```
date "mmddHHMMyy"
```

The values are:

- mm is the month; valid values are 01 through 12.
- dd is the date; valid values are 01 through 31.
- HH is the hour; valid values are 00 through 23.
- MM is minutes; valid values are 00 through 59.
- yy is the year; valid values are 00 through 99 (values greater than 69 are interpreted as 1970 through 1999, and values less than 70 are interpreted as 2000 through 2069).

```
switch:admin> date
Fri Sep 28 17:01:48 UTC 2016
switch:admin> date "0927123016"
Thu Sep 27 12:30:00 UTC 2016
switch:admin>
```

## Setting the time zone

The default time zone is Coordinated Universal Time (UTC). The time zone needs to be set only once because the value is stored in nonvolatile memory. Use the following procedure to set the time zone. The time zone change will take affect after the next system reboot.

1. Log into the device using one of the following methods:
  - A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
  - A Telnet session using the chassis management IP address.
2. Log into the device using *admin*. If you have not changed the default password, use *password*.

3. Use one of the following steps for the **tsTimeZone** command.

- Enter **tsTimeZone --interactive** command, enter the appropriate number as shown in the following example, then follow prompts.

```
sw0:admin> tstimezone --interactive
Please identify a location so that time zone rules can be set correctly.
Please select a continent or ocean.
1) Africa
2) Americas
3) Antarctica
4) Arctic Ocean
5) Asia
6) Atlantic Ocean
7) Australia
8) Europe
9) Indian Ocean
10) Pacific Ocean
11) none - I want to specify the time zone using the POSIX TZ format.
Enter number or control-D to quit ?
```

- Enter **tsTimeZone [houroffset [, minuteoffset]]** command as follows:
  - For Pacific Standard Time, enter **tsTimeZone -8,0**.
  - For Central Standard Time, enter **tsTimeZone -6,0**.
  - For Eastern Standard Time, enter **tsTimeZone -5,0**.

**TABLE 14** Example: tsTimeZone command parameter selection for the US time zones

Local time	tsTimeZone parameter (difference from UTC)
Atlantic Standard	-4,0
Atlantic Daylight	-3,0
Eastern Standard	-5,0
Eastern Daylight	-4,0
Central Standard	-6,0
Central Daylight	-5,0
Mountain Standard	-7,0
Mountain Daylight	-6,0
Pacific Standard	-8,0
Pacific Daylight	-7,0
Alaskan Standard	-9,0
Alaskan Daylight	-8,0
Hawaiian Standard	-10,0

- Enter the **tsTimeZone** command followed by the time zone, such as US/Pacific, US/Central, or US/Eastern as in the following example.

```
switch_99:Admin> tstimezone US/Pacific
System Time Zone change will take effect at next reboot
```

## Synchronizing local time with an external source

Perform the following steps to synchronize the local time of the principal or primary FCS device with that of an external NTP server.

1. Log into the device using one of the following methods:
  - A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
  - A Telnet session using the chassis management IP address.
2. Log into the device using *admin*. If you have not changed the default password, use *password*.
3. Enter the **tsClockServer** *ipaddr* command.

The *ipaddr* variable represents the IP address of the NTP server that the device can access. This argument is optional; by default, the value is "LOCL".

```
switch:admin> tsclockserver 192.168.126.60
Updating Clock Server configuration...done.
Updated with the NTP servers
```

## Customizing the chassis and switch name

Refer to the considerations and rules for creating switch, fabric, and chassis names listed in the Fabric OS Administration Guide.

### NOTE

Changing the name causes a domain address format RSCN to be issued.

1. Log into the device using one of the following methods:
  - A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
  - A Telnet session using the chassis management IP address.
2. Log into the device using *admin* as your password. If you have not changed the default password, use *password*.
3. Enter **chassisName** followed by the new name.

```
switch:admin> chassisname Chassis_01
```

A message displays explaining that the chassis name change is applied and the new name will display at next login. You can enter **chassisName** to verify the new name after login.

4. To change the switch name, enter **switchName** followed by the new name.

```
swDir:admin> switchName Switch_01
Committing configuration...
Done.
Switch name has been changed.Please re-login into the switch for the
change to be applied.
```

A message displays that the name change is applied and the new name will display at next login. You can enter **switchName** to verify the new name after login.

5. Record the new names for future references.



## Verifying installed licenses and license key

Depending on the vendor agreement, certain licenses are factory installed on the device. Use the following steps to list installed licenses and to record your license key and chassis ID for future reference.

- Log into the device using one of the following methods:
  - A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
  - A Telnet session using the chassis management IP address.
- Log into the device using *admin* as your password. If you have not changed the default password, use *password*.
- Enter the **licenseShow** command to determine which licenses are enabled.  
This will list installed licenses and display a license key, such as `aNYtMJg7tcMZrTZ9JTXBC4SXWLJMY3QfBKYHG`.
- Enter the **licenseIdShow** command on the active CP blade to obtain the chassis ID.  
The chassis ID is required to obtain and activate licenses for the device.
- Record the license key and chassis ID for future reference.

Refer to the *Brocade Fabric OS Software Licensing Guide* for more information.

## Verifying correct operation

Perform the following steps to verify correct operation of the device.

- Check the LEDs of all power supplies, fans, and blades to verify that all are functional.
- Log into the device using one of the following methods:
  - A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
  - A Telnet session using the chassis management IP address.
- Log into the device using *admin* as your password. If you have not changed the default password, use *password*.
- Verify the correct operation of the device by entering the following commands. Copy the output to a file to save the information.

Command	Description
<b>slotshow -m</b>	Displays blades (with model numbers) detected in each slot
<b>slotshow -p</b>	Displays power consumption data and enabled status for installed blades.
<b>psShow</b>	Displays power supply status and information
<b>fanShow</b>	Displays fans status and information
<b>switchShow</b>	Displays switch status and information
<b>fabricShow</b>	Displays information about the device operation in the fabric and general information about the fabric
<b>slotShow</b>	Displays the current status of each slot in the device
<b>tempShow</b>	Displays temperature status and information
<b>historyShow</b>	Displays the device history
<b>errDump</b>	Displays any errors

# Backing up the configuration

Brocade recommends backing up the configuration on a regular basis to ensure that a complete configuration is available for downloading to a replacement switch.

Observe the following notes about configuration data:

- Passwords are not saved in the configuration file, and are not uploaded during a configuration upload.
- It is recommended that the configuration be backed up on a regular basis to ensure that a complete configuration is available for downloading to a replacement chassis.
- Besides saving configuration files to an FTP server or local file system, you can save to a Brocade USB device by using the **usbstorage** command.

1. Log into the device using one of the following methods:

- A serial console connection to the active CP blade. The active CP is indicated by an illuminated blue LED on the blade front panel.
- A Telnet session using the chassis management IP address.

2. Log into the device using *admin* as your password. If you have not changed the default password, use *password*.

3. Back up the device configuration using the **configUpload** command.

Follow the prompts to upload the configuration to an external host using the file transfer protocol (FTP), secure copy protocol (SCP), or secure FTP (SFTP), or save the configuration to the local file system on device or attached USB device.

```
sb_70:admin> configupload
Protocol (scp, ftp, local) [ftp]:
Server Name or IP Address [host]: 192.168.0.100
User Name [user]: anonymous
Path/Filename [<home dir>/config.txt]: /dumps/supportsave/pz/switch85/G20-1.txt
Section (all|chassis|switch [all]): all
configUpload complete: All selected config parameters are uploaded
```

4. Back up the virtual fabric configuration using the **configUpload -vf** command.

For more information on using the **configUpload** and **configUpload -vf** command, refer to the *Brocade Fabric OS Command Reference*.

5. Enter the following commands for additional configuration information that you can save to files:

- **configShow**
- **ipaddrShow**
- **licenseShow**
- **switchShow**

# Powering down the chassis

Perform the following steps to power down the chassis.

1. Shut down the chassis using the **sysShutdown** command.

```
switch::admin> sysshutdown
This command will shutdown the operating systems on your switch.
You are required to power-cycle the switch in order to restore operation.
Are you sure you want to shutdown the switch [y/n]?y
HA is disabled
Stopping blade 1
Shutting down the blade....
Stopping blade 2
Shutting down the blade....
Stopping blade 8
Shutting down the blade....
Broadcast message from root (pts/1) Tue Aug 23 14:23:06 2010...
The system is going down for system halt NOW !!
```

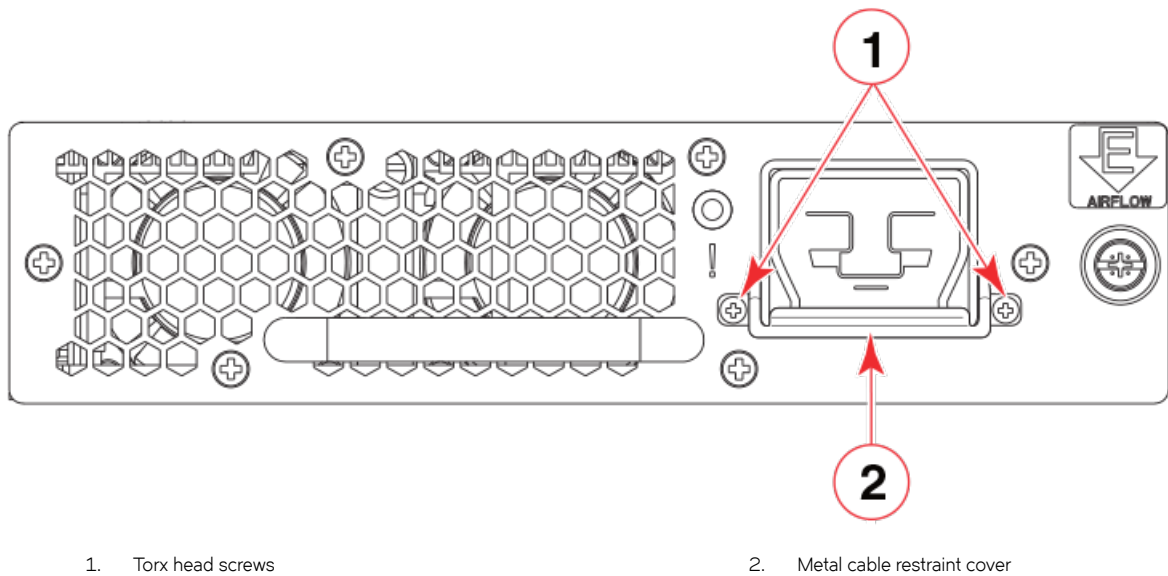
## NOTE

If you do **not** use the **sysshutdown** command and you sequence power off on power distribution units (PDU) with a few seconds between power-offs, be aware that a low-power condition will be detected and logged along with possible blade power-offs before shutdown. This is an expected error condition due to delays in powering down PDUs without halting the control processors first using **sysShutdown**.

2. Power off the chassis by disconnecting all power cords or switching off rack power source.

Note that power supply LEDs will continue to flash green briefly after disconnecting power until power supply is completely off.

3. To disconnect power cables from HVAC/HVDC power supplies only, use the following steps.
  - a) Remove the cable restraint cover, if installed under the power cord connector, by unscrewing the two torx head screws.




**CAUTION**

When removing the metal cable restraint cover under the high voltage power supply inlet, remove the two Torx head screws only.

- b) Disconnect the power cable from the power supply.

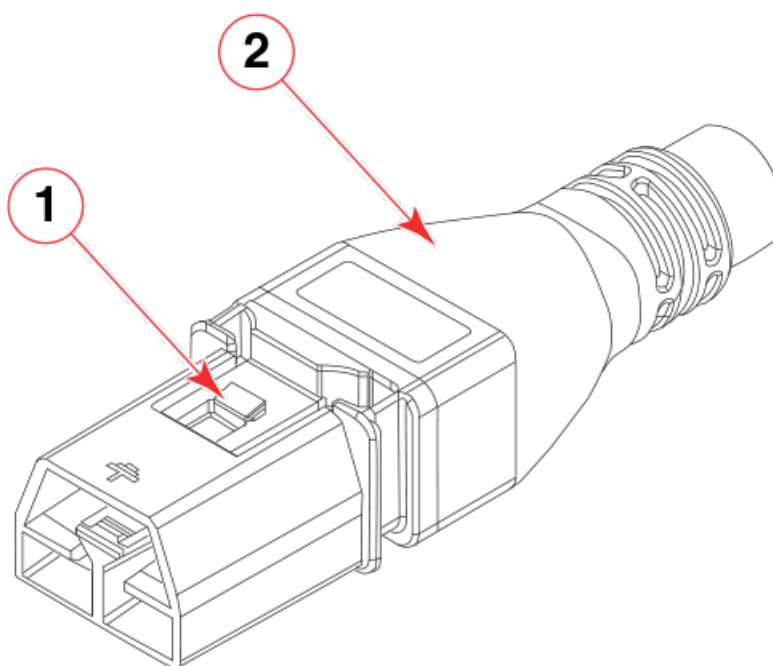Note that the latch for the power cable connector is positioned under the connector. Press on the latch using a small screwdriver or other tool to unlatch from the power supply.



1. Power cable

2. Connector latch



# Installing Transceivers and Cables

• Supported transceivers and cables.....	87
• Time and items required.....	92
• Precautions specific to transceivers and cables.....	92
• Cleaning the fiber-optic connectors.....	93
• Cable management.....	93
• Installing an SFP+ transceiver.....	94
• Replacing an SFP+ transceiver.....	96
• Installing a QSFP transceiver.....	98
• Replacing a QSFP transceiver.....	99
• Verifying the operation of new transceivers.....	101

## Supported transceivers and cables

The following table is a general reference to the types of transceivers supported on device blades.

**TABLE 15** Supported transceivers and cables

Blade	Transceiver Type	Auto-negotiate/Fixed	Speeds supported (Gbps)
FC32-48 port blade	32 Gbps SFP28, SWL, LWL	Auto negotiate	8, 16, 32
	16 Gbps SFP+, SWL, LWL, ELWL	Auto negotiate	4, 8, 16
	10 Gbps SFP+, SWL, LWL	Fixed	10
SX6 extension blade	32 Gbps SFP28, SWL, LWL	Auto negotiate	8, 16, 32
	16 Gbps SFP+, SWL, LWL, ELWL	Auto negotiate	4, 8, 16
	10 Gbps, SFP+, SWL, LWL	Fixed	10
	10 GbE SFP+, SR, LR, USR	Fixed	10
	10GBase-ZRD tunable SFP+	Fixed	10
	1 GbE SFP, Copper	Fixed	1
	1 GbE SX SFP, LX SFP, and CWDM SFP+	Fixed	1
	40 GbE QSFP, SR4,LR4, ER4	Fixed	40
CR32-4 core routing blade	4x32 Gbps QSFP, SWL	Fixed (each 32 Gbps channel)	32
	4x32 Gbps QSFP, CWDM4 (2 km)	Fixed (each 32 Gbps channel)	32
	4x16 Gbps QSFP, SWL, LWL (2 km)	Fixed (each 16 Gbps channel)	16

The following notes apply to QSFP transceivers on core routing blades.

- You cannot connect an ICL between a 4x32 Gbps QSFP on a Brocade X6 Director core blade and a 16-Gbps QSFP on a DCX 8510 Director core routing blade. You must use a 4x16 Gbps QSFP on the Brocade X6 blade.
- The 4x32 Gbps QSFP transceiver has four links that operate at 32 Gbps to achieve a 128 Gbps link speed. The 4x16 Gbps QSFP+ transceiver has four links that operate at 16 Gbps to achieve a 64 Gbps link speed. The cables come in specific predetermined fixed lengths that are qualified by Brocade.

**DANGER**

*Use only optical transceivers that are qualified by Brocade Communications Systems, Inc. and comply with the FDA Class 1 radiation performance requirements defined in 21 CFR Subchapter I, and with IEC 60825 and EN60825. Optical products that do not comply with these standards might emit light that is hazardous to the eyes.*


For Class 1M transceiver specifications, refer to [Brocade X6 Directors Technical Specifications](#) on page 225.

For current information on qualified transceivers supported by this device, go to [www.brocade.com](http://www.brocade.com). Select "Products and Services" from the menu, and then select "transceiver modules" under the Transceivers heading to access the *Brocade Fibre Channel Transceiver Platform Support Matrix* and *Brocade Transceiver Module Resources*. These resources include transceiver data sheets.

## Port and extension blade transceivers

FC SFP+ transceivers installed in port blades and extension blade ports provide connections to devices on FC fabrics. The FC ports on SX6 Extension blades support Fibre Channel Routing Services (FCRS). The following figure illustrates a FC SFP+ transceiver. A separate fiber optic cable plugs into the transceiver.

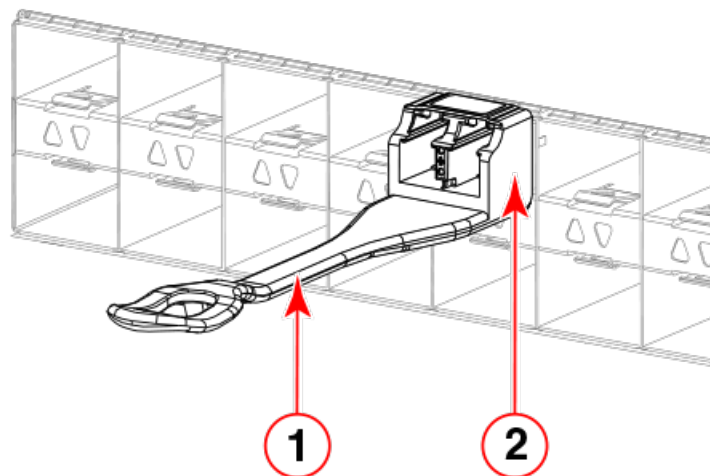**FIGURE 29** FC SFP+ transceiver




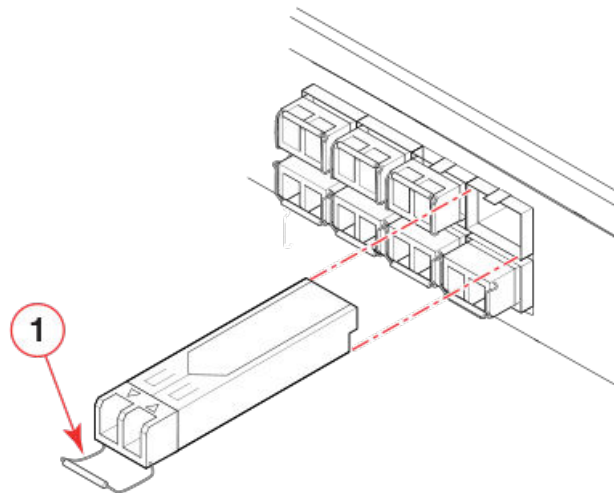1. Pull tab

2. Transceiver

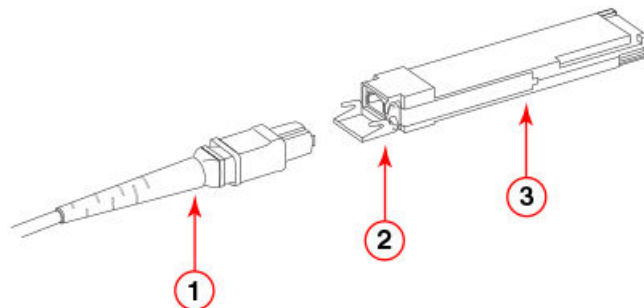
GbE SFP+ and QSFP ports on extension blades allow connection of blades to IP WANs and allow Fibre Channel and IP I/O traffic to pass through the IP WAN through extension tunnels. The following illustrates a typical SFP+ transceiver that uses a bail latching mechanism to release the transceiver from the blade port cage. A separate fiber optic cable plugs into the transceiver.



**FIGURE 30** Optical transceiver with bail open

1. SFP+ bail

The following illustrates a 40 GbE QSFP transceiver that uses a bail latching mechanism to release the transceiver from the blade port cage. A separate fiber optic cable connects to the transceiver. Some QSFP transceivers have an integrated pull tab that releases the transceiver from the port.

**FIGURE 31** QSFP cable and transceiver with bail open


1. Fiber-optic cable
2. Bail
3. Transceiver

## Core routing blades

QSFPs installed in core routing blades are used for connecting inter-switch links (ICLs) between Brocade X6 Directors or between Brocade X6 and DCX 8510 Directors. Interconnecting these devices increases the number of useable ports for device connections.


Following are types of QSFPs installed in core routing blades:

- Separate MTP cable and transceiver. The transceiver is inserted into the blade port and the cable plugs into a QSFP on the other end of the ICL.

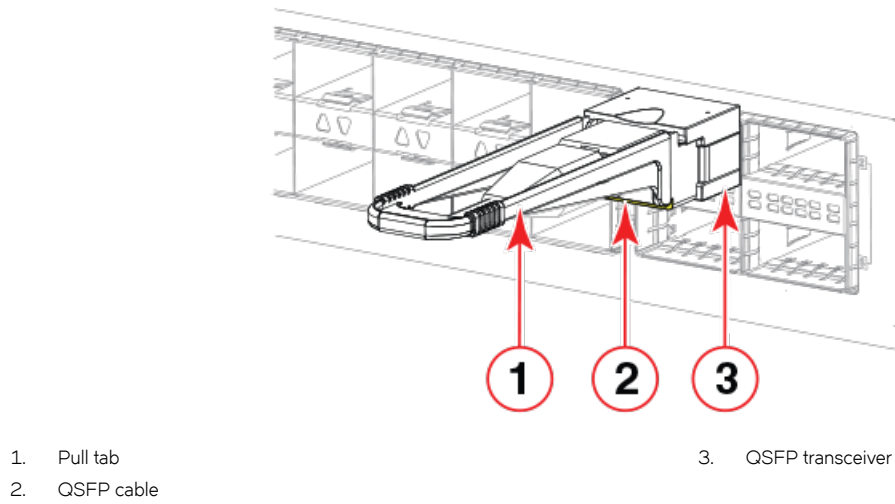**FIGURE 32** QSFP transceiver with separate cable**NOTE**

If the fiber optic cables are not connected to the transceivers, make sure the rubber sealing gaskets are plugged into the transceivers.

- Brocade 2 km LWL 16 Gbps QSFP transceiver with integrated MTP cable. The transceiver is inserted into the blade port connector and integrated cable plugs into a QSFP on the other end of the ICL, a patch panel, or a patch cable.

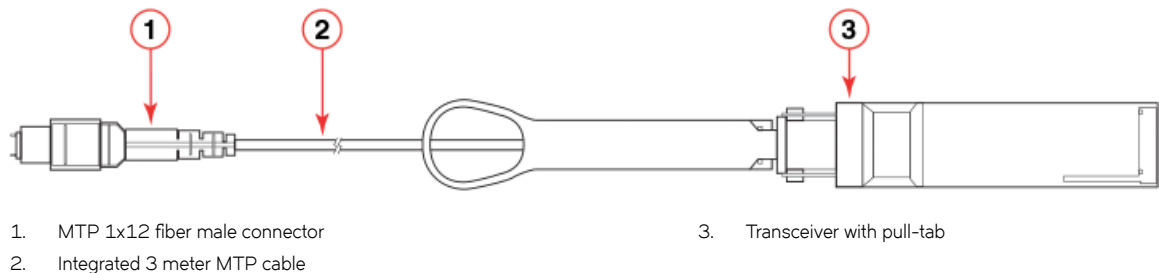**FIGURE 33** 2 km QSFP 16 Gbps with integrated cable

Follow these guidelines for using QSFPs when connecting ICLs. Refer to [Installing a QSFP transceiver](#) on page 98 to install cables and QSFP transceivers.

- The QSFP ports on the core switch blades can be used only with an inter-chassis link (ICL) license. After the addition or removal of a license, the license enforcement is performed on the ports only when the **portdisable** and **portenable** commands are issued on the ports. An ICL license must be installed on all Brocade X6 Directors forming the ICL connection. Up to nine neighboring Directors can be connected with the MTP cables.
- The 32 Gbps QSFP28 transceivers on Brocade X6 Director core routing blades only operate at 32 Gbps and cannot be configured at 16 Gbps for Fabric OS v8.0.1. Therefore, you cannot connect an ICL between a 32 Gbps transceiver on a Brocade X6 Director core blade and a 16 Gbps QSFP transceiver on a DCX 8510 Director core routing blade. You must connect between 16 Gbps transceivers on each blade.
- An off-the-shelf MTP cable up to 100 meters can be used as an ICL cable when using the standard SWL optics. The Brocade 2 km 16 Gbps QSFP with LWL optics has an integrated 3 meter single-mode pigtail with a male MTP connector for

connectivity to a patch panel or female terminated MTP patch cable to achieve up to 2 km distances. Refer to [Brocade 2 km LWL QSFPs](#) on page 91 for more information.

- Brocade supports fully populating a switch with ICL connections using a mixture of 50 and 100 m SWL optics and 16 Gbps 2 km LWL optics.
- Any number of ICL ports can be used for 2 km distances when using 2 km LWL 16 Gbps QSFPs and configuring 20 buffer credits per virtual channel. There are no limitations on the number of ICL ports if all ICL distances are a few hundred meters.

On the core routing blade faceplates, QSFP ports belonging to the same trunking groups are indicated with the same color border under the ports. These colors are also applied to the port map labels on each blade faceplate to indicate ports belonging to the same trunking groups.

For details on the following subjects, refer to the "Inter-Chassis Links" section of the *Brocade Fabric OS Administration Guide*:


- ICL topologies
- ICL trunking
- Configuring ICLs between Brocade X6 Directors
- Configuring ICLs between Brocade X6 and DCX 8510 Directors

### Brocade 2 km LWL QSFPs

All 16 ICL ports can be used for 2km distances when we configure 20 buffer credits are configured per virtual channel.

The Brocade 2 km LWL QSFP, is a hot-swappable, low-voltage (3.3 V) digital diagnostic optical transceiver that supports high-speed serial links over parallel single-mode optical fibers at signaling rates up to 4×14.025 Gbps. The QSFP is integrated with a 3 m ribbon fiber cable with a male MTP 1x12 connector. The QSFP supports 2 km link length on parallel single-mode fiber.

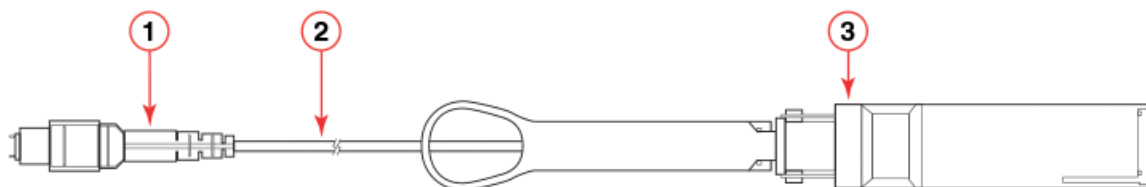**FIGURE 34** 2 km LWL QSFP transceiver with integrated cable



1. MTP 1x12 fiber male connector
2. Integrated 3-meter MTP cable

3. Transceiver with pull-tab

Following are cabling options and recommendations:

- Connect the 3-meter integrated single mode transceiver cable directly to a female-terminated connector in a patch panel or patch cable using a key-up/key-down MPO/MTP coupler.
- Use female-to-female patch cable with the following specifications:
  - Single-mode (not OM3 MMF or OMM MMF)
  - MTP/MPO 1x12 fiber
  - MTP female angled polished connector (APC)
  - Key-up/key-up connectors for polarity

FIGURE 35 Female-to-female patch cable for QFSP connections



## Time and items required

The installation or replacement procedure for one transceiver takes less than 5 minutes. Ensure that the following items are available:

- Required number of compatible power cables
- Required number of supported Brocade-branded transceivers
- Required number of compatible fiber-optic cables
- Optical transceiver extraction tool (for 10 Gbps transceiver only)

### NOTE

Most Brocade devices come with a transceiver extraction tool and holster. The extraction tool is designed to remove transceivers from modules where the space is limited.

FIGURE 36 Optical transceiver extraction tool



## Precautions specific to transceivers and cables



### DANGER

*All fiber-optic interfaces use Class 1 lasers.*



### DANGER

*Use only optical transceivers that are qualified by Brocade Communications Systems, Inc. and comply with the FDA Class 1 radiation performance requirements defined in 21 CFR Subchapter I, and with IEC 60825 and EN60825. Optical products that do not comply with these standards might emit light that is hazardous to the eyes.*

**CAUTION**

Do not use the port cover tabs to lift the module. They are not designed to support the weight of the module, which can fall and be damaged.

**CAUTION**

Before plugging a cable into any port, be sure to discharge the voltage stored on the cable by touching the electrical contacts to ground surface.

## Cleaning the fiber-optic connectors

To avoid problems with the connection between the fiber-optic transceiver (SFP+ or QSFP) and the fiber cable connectors, Brocade strongly recommends cleaning both connectors each time you disconnect and reconnect them. Dust can accumulate on the connectors and cause problems such as reducing the optic launch power.

To clean the fiber cable connectors, Brocade recommends using a fiber-optic reel-type cleaner. When not using an SFP+, or QSFP connector, make sure to keep the protective covering in place.

## Cable management

The minimum radius that a 50 micron cable can be bent under full tensile load is 5.1 cm (2 in.). For a cable under no tensile load, that minimum is 3.0 cm (1.2 in.). Cables can be organized and managed in a variety of ways, for example, using cable channels on the sides of the rack or patch panels to minimize cable management. Following is a list of additional recommendations:

- Plan for rack space required for cable management before installing the switch.
- Leave at least 1 m (3.28 ft) of slack for each port cable. This provides room to remove and replace the switch, allows for inadvertent movement of the rack, and helps prevent the cables from being bent to less than the minimum bend radius.
- If you are using Brocade ICL Trunking, consider grouping cables by trunking groups. The cables used in trunking groups must meet specific requirements, as described in the *Brocade Fabric OS Administration Guide*.
- For easier maintenance, label the fiber-optic cables and record the devices to which they are connected.
- Keep LEDs visible by routing port cables and other cables away from the LEDs.
- Do not route the cables in front of air vents.
- Use Velcro<sup>®</sup> type straps to secure and organize fiber-optic cables.
- Route the cables away from LEDs to keep them visible.
- The cable management finger assemblies attach to the chassis on either side of the port side of the chassis and allow for simple cable management. The cable management finger assemblies can be installed without service disruption.

**CAUTION**

Before plugging a cable into any port, be sure to discharge the voltage stored on the cable by touching the electrical contacts to ground surface.

**NOTE**

Do not use tie wraps with optical cables because they are easily overtightened and can damage the optic fibers.

## Installing an SFP+ transceiver


The device supports only Brocade-qualified transceivers. If you use an unqualified transceiver, the **switchshow** command output shows the port in a Mod\_Inv state. Fabric OS also logs the issue in the system error log. To insert an SFP+ transceiver, complete the following steps:

NOTE

Always use the pull tab to insert or remove 16 Gbps and 32 Gbps transceivers as they might be hot.


1. Perform one of the following steps, depending on your transceiver type.
  - If transceiver has a pull tab (16- and 32-Gbps SFP+ transceivers), use the pull tab to help push the transceiver into the port until it is firmly seated and the latching mechanism clicks.

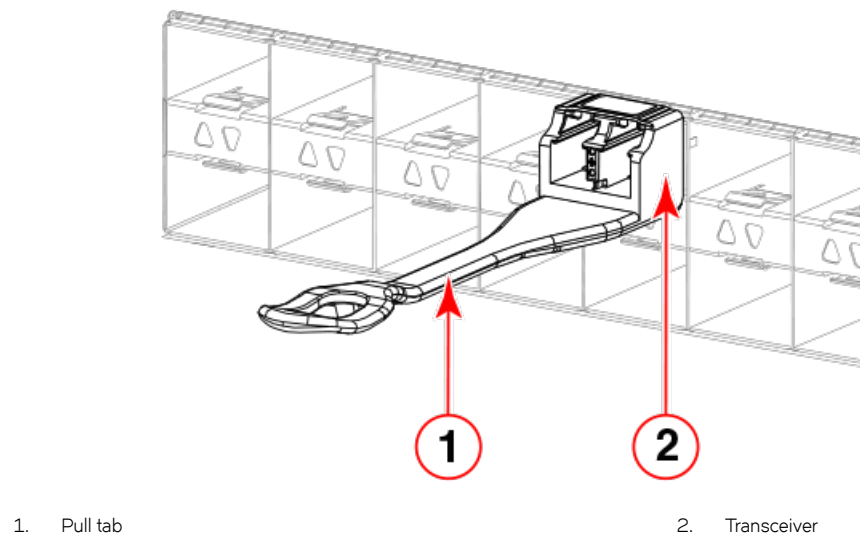**FIGURE 37** Installing an SFP+ transceiver with pull tab into blade port



- If transceiver has a bail latch mechanism (10 GbE transceivers), ensure that the bail (wire handle) is in the unlocked position, grasp the transceiver, and push it into the port until firmly seated. Close the bail to latch the transceiver in the slot.

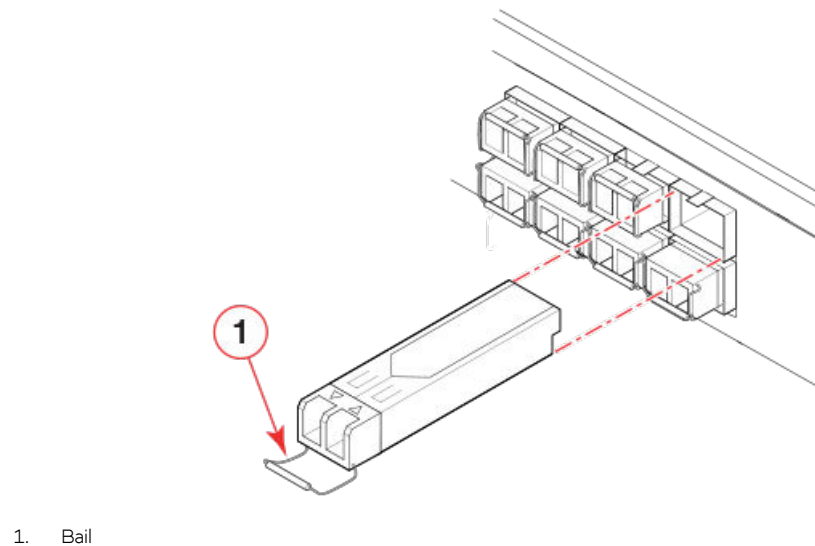**FIGURE 38** Installing an SFP+ transceiver with bail latch into blade port



Transceivers are keyed so that they can only be inserted with the correct orientation. If a transceiver does not slide in easily, ensure that it is correctly oriented.

2. Position a cable so that the key (the ridge on one side of the cable connector) is aligned with the slot in the transceiver. Insert the cable into the transceiver until the latching mechanism clicks.

**NOTE**

Cables are keyed so that they can be inserted in only one way. If a cable does not slide in easily, ensure that it is correctly oriented. Do not insert any unsupported cable intended for an other type of transceiver into a regular SFP+ transceiver. You may damage the cable as well as the transceiver.

## Replacing an SFP+ transceiver

Complete the following steps to remove and then install a new SFP+ transceiver.

**NOTE**

The 16- and 32-Gbps SFP+ transceivers do not have bails but pull tabs. Always use the pull tab to insert or remove the SFP+ transceivers, as the transceiver might be hot.

1. Remove any cables that are inserted into the transceiver.




2. To remove the transceiver, perform one of the following steps, depending on your transceiver type.
  - If transceiver has a pull tab (16- and 32-Gbps SFP+ transceivers), grasp the pull tab and pull the transceiver straight out from the port.

**NOTE**


Grasp the pull tab near the body of the transceiver to reduce the chances of bending the pull tab. As the transceiver may be hot, avoid touching it.

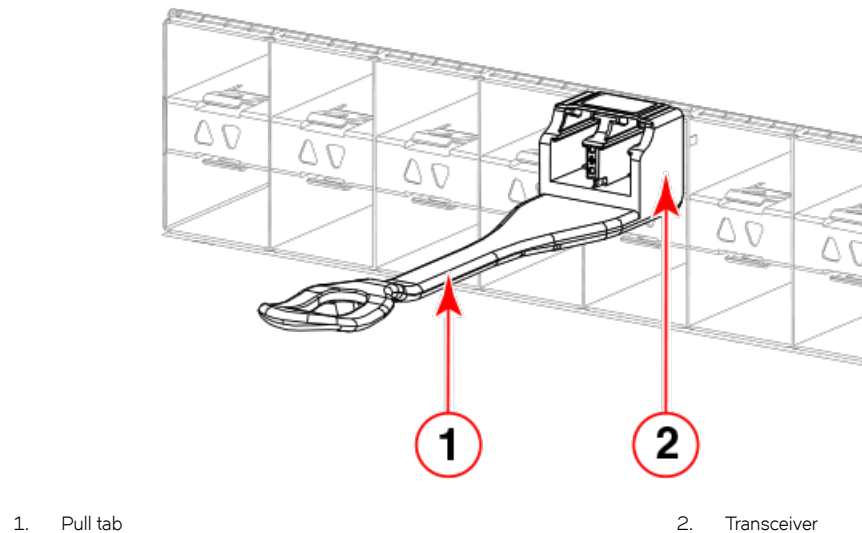**FIGURE 39** Replacing a SFP+ optical transceiver with pull tab into blade port



- If transceiver has a bail latch mechanism (10 GbE transceivers), unlatch from the port by pulling the bail (wire handle) away from its pivot point using your fingers or the hooked end of the transceiver extraction tool. Pull the transceiver out from the port slightly using the bail, and then grasp the transceiver with your fingers and slide it straight out of the port.

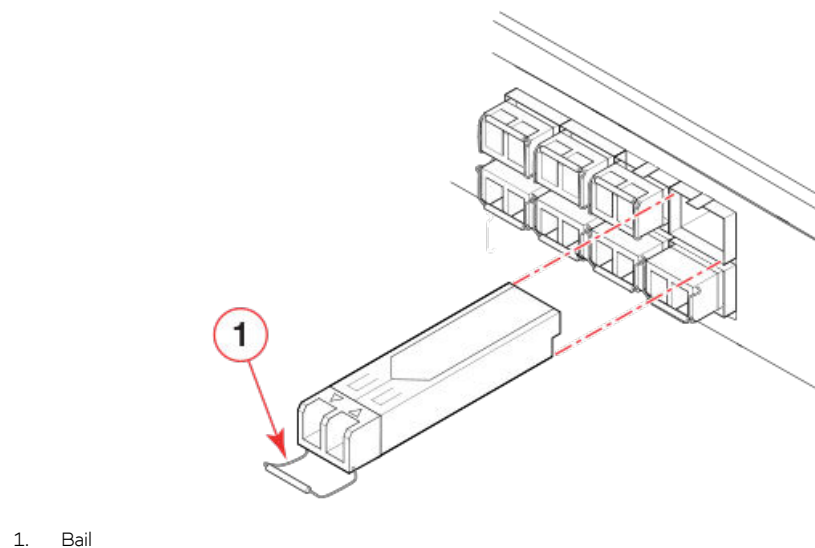**FIGURE 40** Installing an SFP+ transceiver with bail latch into blade port



3. To install the transceiver, perform one of the following steps depending on your transceiver type:
  - If transceiver has a pull tab (16 and 32 Gbps SFP+ transceivers), use the pull tab to help push the transceiver into the port until it is firmly seated and the latching mechanism clicks.
  - If transceiver has a bail latch mechanism (10 GbE transceivers), ensure that the bail (wire handle) is in the unlocked position, grasp the transceiver, and push it into the port until firmly seated. Close the bail to latch the transceiver in the slot.

Transceivers are keyed so that they can only be inserted with the correct orientation. If a transceiver does not slide in easily, ensure that it is correctly oriented.

4. Position a cable so that the key (the ridge on one side of the cable connector) is aligned with the slot in the transceiver. Insert the cable into the transceiver until the latching mechanism clicks.

Cables are keyed so that they can be inserted in only one way. If a cable does not slide in easily, ensure that it is correctly oriented.

## Installing a QSFP transceiver

The device supports only Brocade-qualified transceivers. If you use an unqualified transceiver, the **switchshow** command output shows the port in a Mod\_Inv state. Fabric OS also logs the issue in the system error log. Also note the following:

- Each QSFP contains four individual 16 Gbps or 32 Gbps ports. Be aware that any problems with one port could affect all four ports in the quad if the QSFP must be replaced.
- Although installation and removal procedures are the same for QSFP transceivers installed in port blades and extension blades, these transceivers are not interchangeable between the two blade types.
- Some QSFPs, such as the 4x16 Gbps 2 km QSFP, have an integrated cable attached. You do not need to install a separate cable.


To insert an QSFP transceiver and cable, complete the following steps.

1. Push the transceiver into the port using the pull tab. Transceivers are keyed so that they can only be inserted with the correct orientation. If a transceiver does not slide in easily, ensure that it is correctly oriented. Push the correctly oriented transceiver into the port until it is firmly seated and the latching mechanism clicks.

#### NOTE

Always use the transceiver pull tab to insert or remove the QSFP transceivers, as the transceiver might be hot.

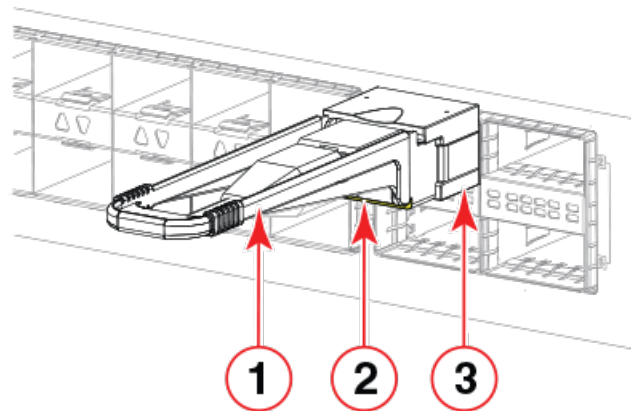**FIGURE 41** Installing a QSFP transceiver into blade port



1. Pull tab
2. QSFP cable

3. QSFP transceiver

The port LED initially blinks amber after installation, then displays steady amber.

2. Position the cable so that the key (the ridge on one side of the cable connector) is aligned with the slot in the transceiver. Insert the cable into the transceiver until the latching mechanism clicks.

#### NOTE

If your transceiver has an integrated cable, you will not need to install a cable.

The port LED displays steady amber until both ends of the cable are inserted and the link is established. When the link is fully established, the LED displays steady green.

#### NOTE

Cables are keyed so that they can be inserted in only one way. If a cable does not slide in easily, ensure that it is correctly oriented. Do not insert any unsupported cable intended for an other type of transceiver into a regular QSFP transceiver. You may damage the cable as well as the transceiver.

3. Organize cables to avoid covering LEDs and air vents. Refer to [Cable management](#) on page 93.

## Replacing a QSFP transceiver

The device supports only Brocade-qualified transceivers. If you use an unqualified transceiver, the **switchshow** command output shows the port in a Mod\_Inv state. Fabric OS also logs the issue in the system error log. Also note the following:

- Each QSFP contains four individual 16 Gbps or 32 Gbps ports. Be aware that any problems with one port could affect all four ports in the quad if the QSFP must be replaced.

- Although installation and removal procedures are the same for QSFP transceivers installed in port blades and extension blades, these transceivers are not interchangeable between the two blade types.
- Some QSFPs, such as the 4x16 Gbps 2 km QSFP, have an integrated cable attached. You do not need to install a separate cable.

Complete the following steps to remove and then install a new QSFP transceiver.

1. Remove any cables that are inserted into the transceiver.

**NOTE**

If your transceiver has an integrated cable, you cannot remove the cable.


2. Grasp the transceiver pull tab and gently pull the transceiver straight out from the port.

**NOTE**

Grasp the pull tab near the body of the transceiver to reduce the chances of bending the pull tab. As the transceiver may be hot, always use the pull tab and avoid touching the transceiver body.

3. To insert the replacement transceiver, use the pull tab to carefully push the transceiver into the port. Transceivers are keyed so that they can only be inserted with the correct orientation. If a transceiver does not slide in easily, ensure that it is correctly oriented. Gently push the correctly oriented QSFP transceiver until the latching mechanism clicks.

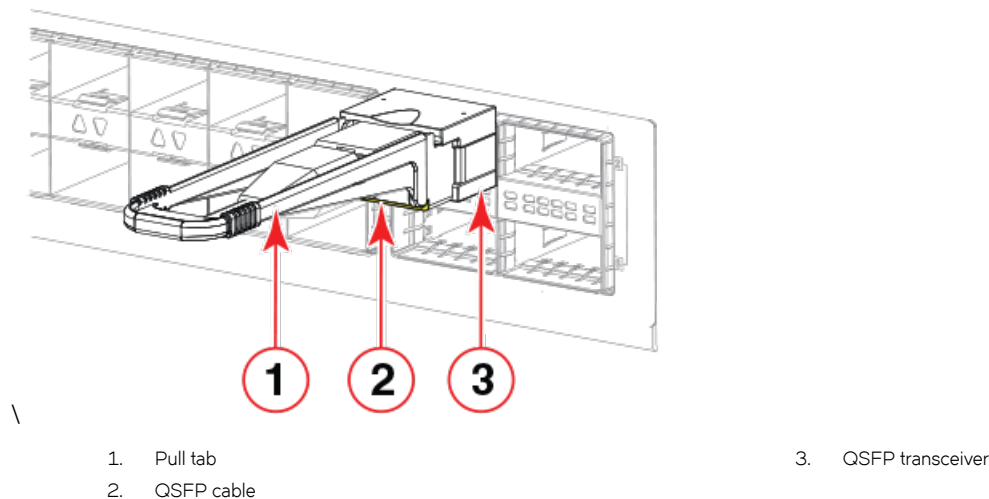**FIGURE 42** Installing a QSFP optical transceiver into blade port



The port's status LED initially blinks amber after installation, then displays steady amber.

4. Position a cable so that the key (the ridge on one side of the cable connector) is aligned with the slot in the transceiver. Insert the cable into the transceiver until the latching mechanism clicks.

**NOTE**

If your transceiver has an integrated cable attached, you will not install a cable.

The port's status LED displays steady amber until both ends of the cable are inserted and the link is established. When the link is fully established, the LED displays steady green.

**NOTE**

Cables are keyed so that they can be inserted in only one way. If a cable does not slide in easily, ensure that it is correctly oriented.

5. Organize cables to avoid covering LEDs and air vents. Refer to [Cable management](#) on page 93.

## Verifying the operation of new transceivers

You can use the following commands to verify if the transceivers are working correctly:

- **sfpShow**
- **switchShow**
- **switchshow-slot** *slot*, where *slot* is slot number
- **switchshow -qsfp**
- **errDump**
- **fabricShow**

For output examples and additional information on Fabric OS commands, refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference*.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.



# Monitoring the Device

- Introduction..... 103
- Interpreting port blade LEDs..... 103
- Interpreting extension blade LEDs..... 105
- Interpreting control processor blade LEDs..... 106
- Interpreting core routing blade LEDs..... 108
- Interpreting WWN card LEDs..... 109
- Interpreting power supply LEDs..... 110
- Interpreting fan assembly LEDs..... 113
- Interpreting POST and boot results..... 114
- Using monitoring commands..... 115
- Running diagnostic tests..... 128


## Introduction

This device is engineered for high reliability, high availability, and enhanced serviceability (RAS) and requires no routine operational steps or maintenance. This section provides information about determining the status of each component using LEDs and CLI commands. Refer to the *Brocade Web Tools Administration Guide* and the *Brocade Fabric OS Administration Guide* for additional information.

## Interpreting port blade LEDs

Refer to the following illustration and table to interpret the LED patterns for the FC32-48 blade. The LED patterns will temporarily change during POST and other diagnostic tests.

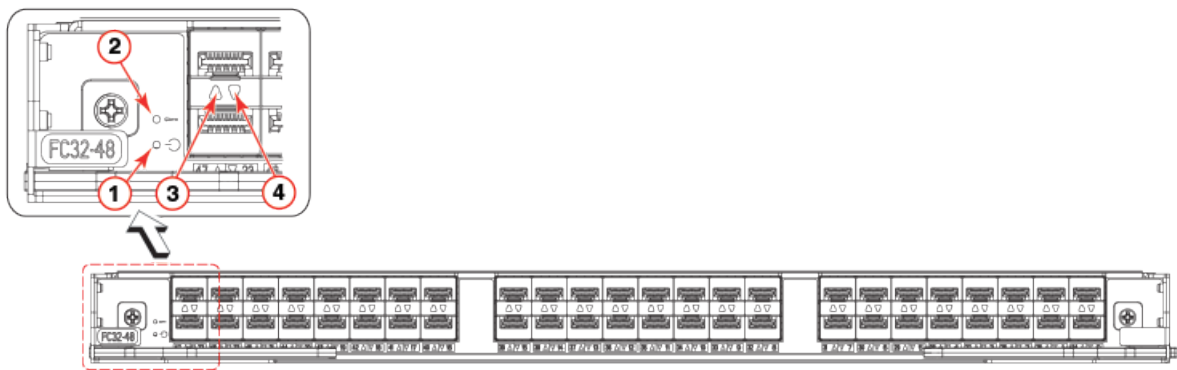

FIGURE 43 FC32-48 port blade LEDs



- |                     |                                 |
|---------------------|---------------------------------|
| 1. Blade power LED  | 3. Status LED for upper FC port |
| 2. Blade status LED | 4. Status LED for lower FC port |

The following table describes the port blade LED patterns and the recommended actions for those patterns.

**TABLE 16** Port blade LED descriptions


LED purpose	Color	Status	Recommended action
<b>Power</b> 	Steady green	Blade is operational.	No action required.
	No light (LED is off)	Blade is not powered on.	Ensure that the blade is firmly seated, with ejectors pushed in fully to center of blade and captive screw for each ejector fully tightened.
<b>Status</b> 	No light (LED is off)	Blade is either healthy or does not have power.	Verify that the power LED is on.
	Steady amber	Blade is faulty.	Ensure that the blade is firmly seated and check the status by entering the <b>slotShow</b> command. If LED remains amber, consult the device supplier.
	Slow-flashing amber (on 2 seconds, then off 2 seconds)	Blade is not seated correctly or is faulty.	Pull the blade out and reseal it. If LED continues to flash, replace the blade.
	Fast-flashing amber (on 1/2 second, then off 1/2 second)	Environmental range exceeded.	Check for out-of-bounds environmental condition and correct it.
<b>FC port Status</b>	No light (LED is off)	Port has no incoming power, or there is no light or signal carrier detected.	Verify that the power LED is on, check the transceiver and cable.
		Polling is in progress.	Allow 60 seconds for polling to complete.
		Connected device is configured in an offline state.	Verify the status of the connected device.
	Steady green	Port is online (connected to an external device) but has no traffic.	No action required.
	Slow-flashing green (on 1 second, then off 1 second)	Port is online but segmented, indicating a loopback plug or cable or an incompatible switch.	Verify that the correct device is attached to the chassis.
	Fast-flashing green (on 1/4 second, then off 1/4 second)	Port is in internal loopback (diagnostic).	No action required.
	Flickering green	Port is online, with traffic flowing through port.	No action required.
	Steady amber	Port is receiving light or signal carrier, but it is not online yet.	Reset the port from the workstation using the <b>portEnable</b> or <b>portCfgPersistentEnable</b> command.
	Slow-flashing amber (on 2 seconds, then off 2 seconds)	Port is disabled due to diagnostic tests or <b>portDisable</b> or <b>portCfgPersistentEnable</b> command.	Reset the port from the workstation using the <b>portEnable</b> or <b>portCfgPersistentEnable</b> command.
	Fast-flashing amber (on 1/2 second, then off 1/2 second)	Transceiver or port is faulty.	Change the transceiver or reset the switch from the workstation.
	Alternating green/amber	Port is beaconing.	No action.



# Interpreting extension blade LEDs

Refer to the following illustration and table to interpret the LED patterns on the SX6 extension blade. The LED patterns may temporarily change during POST and other diagnostic tests.

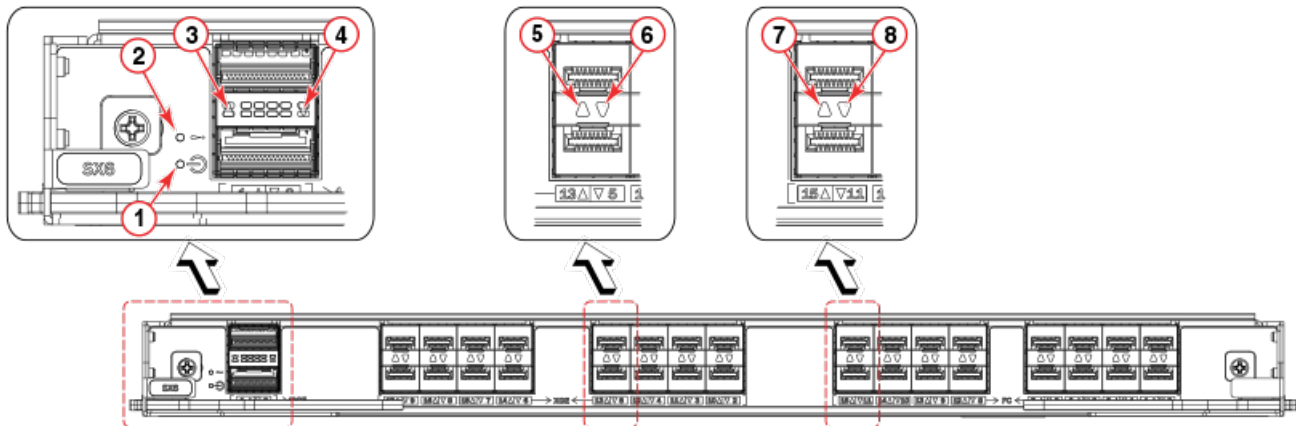
**FIGURE 44** SX6 Extension blade LEDs



- |  |                                      |
|--|--------------------------------------|
| 1. Blade power LED                       | 5. Upper 1 or 10 GbE port status LED |
| 2. Blade status LED                      | 6. Lower 1 or 10 GbE port status LED |
| 3. Upper 40 GbE QSFP (port 0) status LED | 7. Upper FC port status LED          |
| 4. Lower 40 GbE QSFP (port 1) status LED | 8. Lower FC port status LED          |

The following table describes the extension blade LED patterns and the recommended actions for those patterns.

**TABLE 17** Extension blade LED descriptions

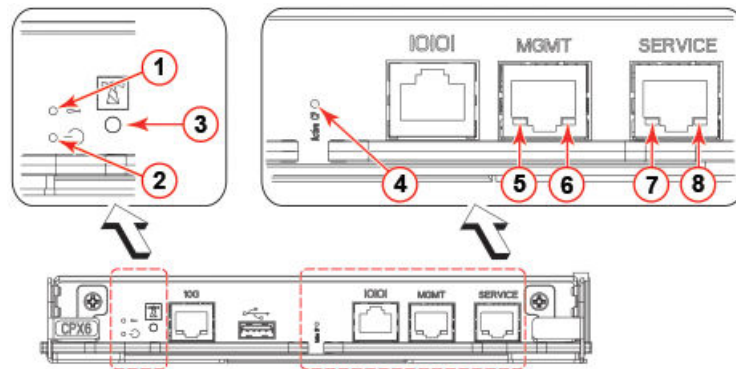
LED purpose	Color	Status	Recommended action
<b>Power</b> 	Steady green	Blade is operational.	No action required.
	No light (LED is off)	Blade is not powered on.	Ensure that the blade is firmly seated, with ejectors pushed in fully to center of blade and captive screw for each ejector fully tightened.
<b>Status</b> 	No light (LED is off)	Blade is either healthy or does not have power.	Verify that the power LED is on.
	Steady amber	Blade is faulty or initializing.	Ensure that the blade is firmly seated and check the status by entering the <b>slotShow</b> command. If LED remains amber, consult the device supplier.
	Blinking amber and green.	Attention. Blade is not seated correctly or is faulty.	Pull the blade out and reseal it. If LED continues to flash, replace the blade.
	Green	Blade is operational.	No action required.
<b>GbE port status</b>	No light (LED is off)	Port has no incoming power, or is offline.	Verify that the power LED is on, check the transceiver and cable.
	Steady green	Port is online but has no traffic.	No action required.
	Blinking green	Port is online, with traffic flowing through port.	No action required.

**TABLE 17** Extension blade LED descriptions (continued)

LED purpose	Color	Status	Recommended action
FC port status	Steady amber	Transceiver or port has error or is faulty.	Change the transceiver or reset the switch from the workstation.
	No light (LED off)	Port has no incoming power, or there is no light or signal carrier detected.	Verify that the power LED is on, check the transceiver and cable.
		Polling is in progress.	Allow 60 seconds for polling to complete.
		Connected device is configured in an offline state.	Verify the status of the connected device.
	Steady green	Port is online (connected to an external device) but has no traffic.	No action required.
	Slow-flashing green (on 1 second, then off 1 second)	Port is online but segmented, indicating a loopback plug or cable or an incompatible switch.	Verify that the correct device is attached to the chassis.
	Fast-flashing green (on 1/4 second, then off 1/4 second)	Port is in internal loopback (diagnostic).	No action required.
	Flickering green	Port is online, with traffic flowing through port.	No action required.
	Steady amber	Port is receiving light or signal carrier, but it is not online yet.	Reset the port from the workstation using the <b>portEnable</b> or <b>portCfgPersistentEnable</b> command.
	Slow-flashing amber (on 2 seconds, then off 2 seconds)	Port is disabled due to diagnostic tests or <b>portDisable</b> or <b>portCfgPersistentEnable</b> command.	Reset the port from the workstation using the <b>portEnable</b> or <b>portCfgPersistentEnable</b> command.
	Fast-flashing amber (on 1/2 second, then off 1/2 second)	Transceiver or port has error or is faulty.	Change the transceiver or reset the switch from the workstation.
	Alternating green and amber	Port is bypassed.	Reset the port from the workstation using the <b>portEnable</b> or <b>portCfgPersistentEnable</b> command.

## Interpreting control processor blade LEDs

Refer to the following illustration and table to interpret the LED patterns on the CPX6 blade. The LED patterns may temporarily change during POST and other diagnostic tests.

**FIGURE 45** Control processor blade (CPX6)



- |                         |   |
|-------------------------|---|
| 1. Blade status LED     | 5. 10/100/1000 Mb/s Ethernet port (MGMT) link status LED      |
| 2. Blade power LED      | 6. 10/100/1000 Mb/s Ethernet port (MGMT) link activity LED    |
| 3. Chassis beacon LED   | 7. 10/100/1000 Mb/s Ethernet port (SERVICE) link status LED   |
| 4. Active (blue) CP LED | 8. 10/100/1000 Mb/s Ethernet port (SERVICE) link activity LED |

**NOTE**

The 10 Gbps Base-T RJ45 Ethernet port, shown to the right of the chassis beacon LED, is reserved for future use.

The following table describes the CP blade LED patterns and the recommended actions for those patterns.

**TABLE 18** CP blade LED descriptions

LED purpose	Color	Status	Recommended action
<b>Power</b> 	Steady green	CP blade is on.	No action required.
	No light (LED is off)	CP blade is not on.	Ensure that the blade is firmly seated and has power.
<b>Attention</b> 	No light (LED is off)	CP blade is either healthy or does not have power.	Verify that the power LED is on.
	Steady amber	If on for more than 5 seconds, the CP blade is faulty.	Ensure that the blade is firmly seated and the switch has completed booting. If LED remains amber, consult the device supplier.
	Slow-flashing amber (on 2 seconds, then off 2 seconds)	CP blade is not seated correctly or is faulty.	Pull the blade out and reseal it. If the LED continues to flash, replace the blade.
	Fast-flashing amber (on 1/2 second, then off 1/2 second)	Environmental range exceeded.	Check for out-of-bounds environmental condition and correct it.
<b>Beacon</b>	Steady white	LED illuminates white on both CP blades when <b>chassisbeacon 1</b> is issued from management interface to locate chassis in equipment racks. To turn off beaconing, issue the <b>chassisbeacon 0</b> .	No action required.
<b>Ethernet link status (10 Gb/s port)</b>	No light (LED is off)	Either an Ethernet link is not detected, or the blade does not have incoming power.	Ensure that the blade has power, the Ethernet cable is firmly seated, and the connected device is functioning.
	Blinking green	Activity is present on link.	No action required.

**TABLE 18** CP blade LED descriptions (continued)

LED purpose	Color	Status	Recommended action
<b>Ethernet link activity (10 Gb/s port)</b>	No light (LED is off)	No activity on link.	Ensure that the blade has power, the Ethernet cable is firmly seated, and the connected device is functioning.
	Blinking green	Activity is present on link.	No action required.
<b>Active CP</b>	Steady blue	Active CP blade.	No action required.
	No light (LED is off)	CP blade is either booting, negotiating to be active, or is the standby CP blade.	No action required.
<b>Ethernet link status (10/100/1000 Mb/s port)</b>	No light (LED is off)	Ethernet link speed is 10 Mb/s or link is not established.	Ensure that the CP has power. <b>NOTE:</b> To force a persistent Ethernet link speed, enter the <b>ifModeSet</b> command.
	LED is on	Ethernet link speed is 100/1000 Mb/s. Ethernet link is healthy and traffic is flowing through port.	No action required.
<b>Ethernet link activity (10/100/1000 Mb/s port)</b>	No light (LED is off)	No activity on link.	Ensure that the blade has power, the Ethernet cable is firmly seated, and the connected device is functioning.
	Blinking green	Activity is present on link.	No action required.

## Interpreting core routing blade LEDs

Refer to the following illustration and table to interpret the LED patterns on the CR32-4 blade. The LED patterns may temporarily change during POST and other diagnostic tests.

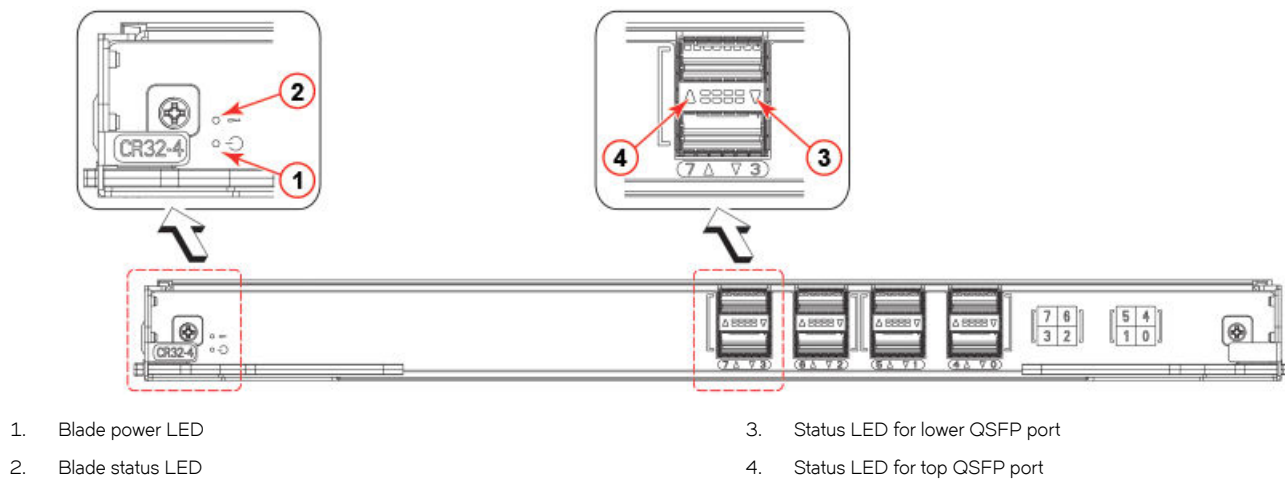


**FIGURE 46** CR32-4 core routing blade LEDs


TABLE 19 Core routing blade LED descriptions

LED purpose	Color	Status	Recommended action
<b>Power</b> 	Steady green	Blade is on.	No action required.
	No light (LED is off)	Blade is not on.	Ensure that the blade is firmly seated and has power.
<b>Status</b> 	No light (LED is off)	Blade is either healthy or does not have power.	Verify that the power LED is on.
	Steady amber	Blade is faulty or the switch is still booting.	Ensure that the blade is firmly seated and the switch has completed booting. If the LED remains amber, consult the supplier for your Brocade device.
	Slow-flashing amber (on 2 seconds, then off 2 seconds)	Blade is not seated correctly or is faulty.	Pull the blade out and reseal it. If the LED continues to flash, replace the blade.
	Fast-flashing amber (on 1/2 second, then off 1/2 second)	Environmental range exceeded.	Check for out-of-bounds environmental condition and correct it.
<b>QSFP port status LED</b>	No light (LED is off)	No QSFP module, all four QSFP ports are disabled	No action needed if the QSFP is not installed or verify that the QSFP is fully inserted.
	Steady amber	QSFP module is in, all four ports have no signal/no sync.	Ensure that the cable is properly connected. If the LED remains amber, consult the supplier for your Brocade device.
	Blinking amber	Port is disabled or faulted, FC link activity, segmented, loopback mode, also during transition between cable plug in and all four ports online.	Check for console messages or wait for all four ports to come online.
	Steady green	QSFP module is in and all ports are online.	No action needed.

## Interpreting WWN card LEDs

Refer to the following illustration and table to interpret the LED patterns of installed WWN cards. LEDs for WWN card 1 and WWN card 2 are located on the WWN card (logo) bezel between the power supplies on the nonport side of the device. The LED patterns may temporarily change during POST and other diagnostic tests.

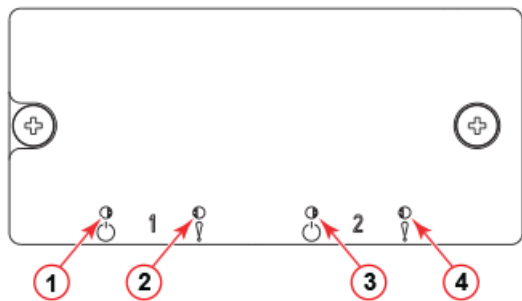FIGURE 47 WWN card LEDs on bezel



1.



Power LED for WWN card 1
2.

Status LED for WWN card 1
3.

Power LED for WWN card 2
4.

Status LED for WWN card 2


TABLE 20 WWN card LED descriptions

LED purpose	Color	Status	Recommended action
<b>Power</b> 	No light (LED is off)	Card is not receiving power.	Ensure that device power supplies are firmly seated, power cables are connected, and that cables are connected to power source.
	Steady green	Card is receiving power.	No action required.
<b>Status</b> 	No light (LED is off)	Card is either healthy or does not have power.	No action required.
	Steady amber	Card is faulty	Replace card.
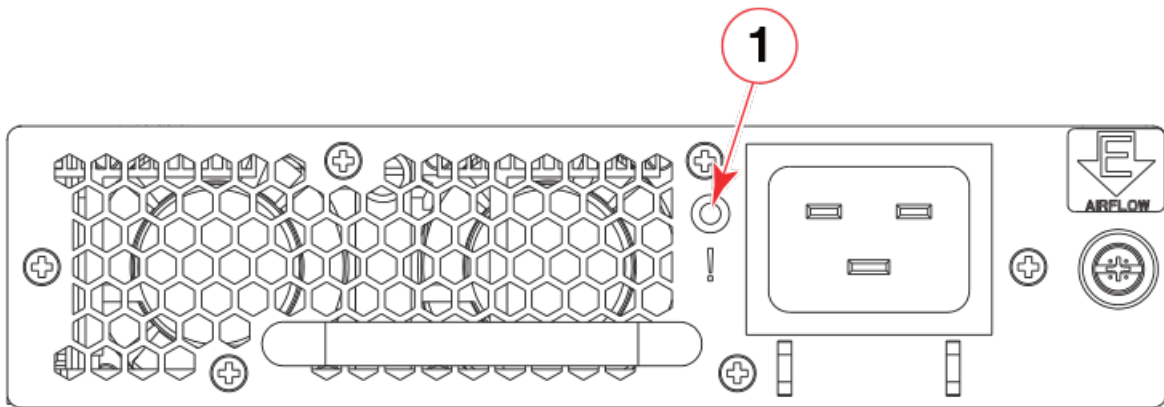
## Interpreting power supply LEDs

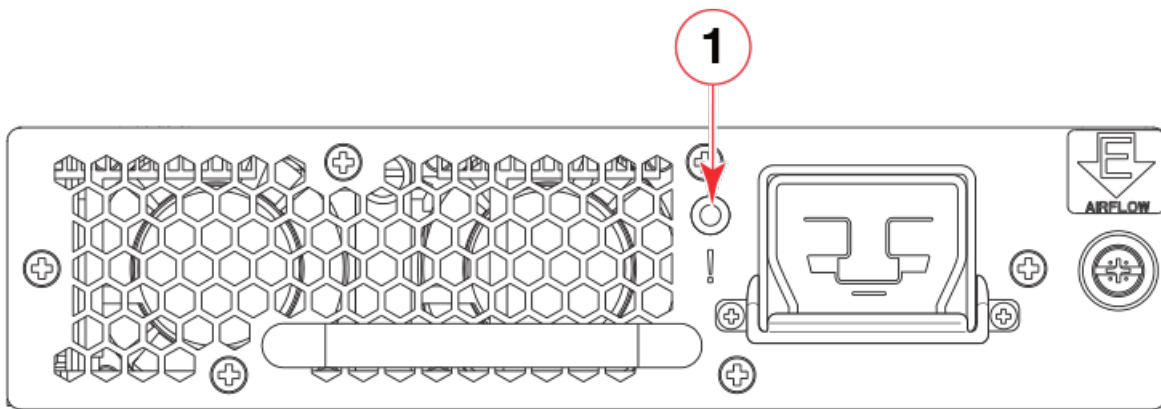
Refer to the following information to interpret the LED patterns on the power supply. The LED patterns may temporarily change during POST and other diagnostic tests. The Brocade X6-4 Director has two power supplies.

FIGURE 48 AC Power supply LED



1.


Power status LED

**FIGURE 49** HVAC/HVDC power supply LED

1. Power status LED

The following tables describe the power supply LED patterns and the recommended actions for those patterns. In the unlikely event of a faulty power supply, the status LED will flash in a coded pattern to provide additional fault information. Record the sequence of flashes and status as defined in the table to provide to your support representative along with **supportsave** output data.


**TABLE 21** AC Power supply LED descriptions

LED purpose	Color	Status	Recommended action
<b>Power status</b> 	No light (LED is off)	Power supply does not have incoming power and is not providing power to the device.  <b>NOTE</b> When incoming power is first removed, LED flashes, and then turns off.	Ensure that the power supply is firmly seated, power cable is connected, and that power cable is connected to power source.  Disconnect power cable from power supply, remove and reinsert power supply, and then reconnect power cable to restart.  If status persists, replace power supply assembly.
	Steady green	Power supply has incoming power and is providing power to the device.	No action required.
	Flashing on one-half second and then off one-half second.	AC power is disconnected from the power supply assembly, but additional power supply installed in device is powered on.	Check power connection at power supply, cable, and AC power source. If these check out, disconnect power cable from power supply, remove and reinsert power supply, and then reconnect power cable to restart. If status persists, replace power supply assembly.
	Flashing on two times, and then off 5 seconds.	48V is out of range.	Disconnect power cable from power supply, remove and reinsert power supply, and then reconnect power cable to restart. If status persists, replace power supply assembly. If status persists, replace power supply.

**TABLE 21** AC Power supply LED descriptions (continued)

LED purpose	Color	Status	Recommended action
	Flashing on three times, and then off 5 seconds.	12V is out of range.	Disconnect power cable from power supply, remove and reinsert power supply, and then reconnect power cable to restart. If status persists, replace power supply assembly.
	Flashing on four times, and then off 5 seconds.	AC input is under voltage.	Verify voltage in power distribution unit (PDU) or system providing power to power supply assembly. Check cabling and voltage between PDU and switch. Correct the voltage as necessary. If correct voltage is verified, replace power supply assembly.
	Flashing on five times, and then off 5 seconds.	Power supply assembly fan is faulty.	Replace power supply.
	Flashing on six times, and then off 5 seconds.	Over temperature protection.	Check for blocked air flow or high ambient temperature at power supply. If status persists, replace power supply.
	Flashing on seven times, and then off 5 seconds.	Power supply is disabled.	Disconnect power cable from power supply, remove and reinsert power supply, and then reconnect power cable to restart. If status persists, replace power supply assembly. If status persists, replace power supply.

**TABLE 22** HVAC/HVDC Power supply LED descriptions

LED purpose	Color	Status	Recommended action
<b>Power status</b> 	No light (LED is off)	Power supply does not have incoming power and is not providing power to the device.  <b>NOTE</b> When incoming power is first removed, LED flashes, and then turns off.	Ensure that the power supply is firmly seated, power cable is connected, and that power cable is connected to power source.  Disconnect power cable from power supply, remove and reinsert power supply, and then reconnect power cable to restart.  If status persists, replace power supply assembly.
	Steady green	Power supply has incoming power and is providing power to the device.	No action required.
	Flashing on one-half second and then off one-half second.	Source power is disconnected from the power supply assembly, but additional power supply installed in device is powered on.	Check power connection at power supply, cable, and power source. If these check out, disconnect power cable from power supply, remove and reinsert power supply, and then reconnect power cable to restart. If status persists, replace power supply assembly.




**NOTE**

If airflow direction for a power supply assembly does not match the chassis airflow direction as stored on WWN cards, the power supply will have a "fault" status. However, LED operation for the power supply will not indicate a fault.



## Interpreting fan assembly LEDs

Refer to the following illustration and table to interpret the LED patterns on fan assemblies. The LED patterns may temporarily change during POST and other diagnostic tests. The Brocade X6-4 Director has two fan assemblies.

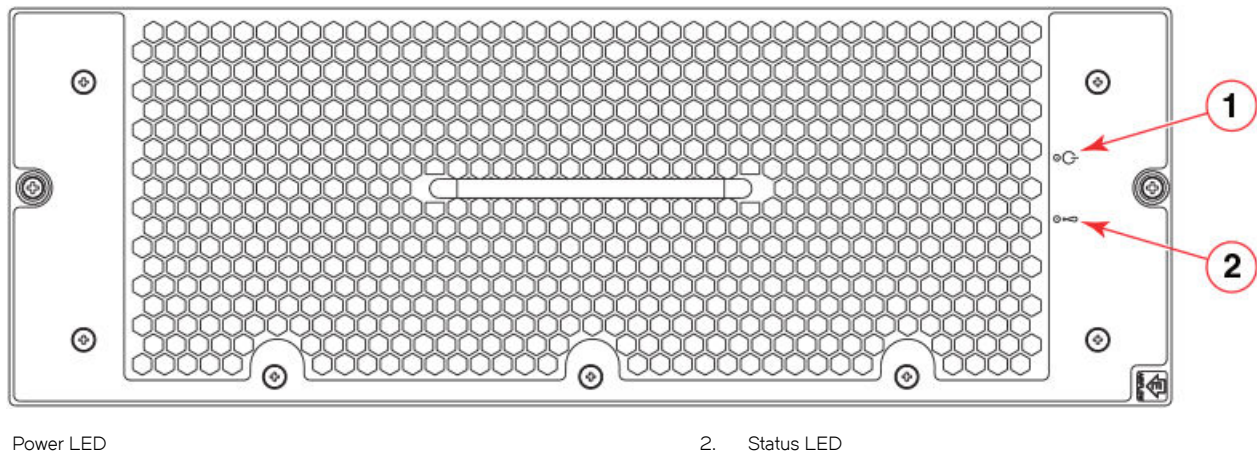**FIGURE 50** Fan assembly LEDs



**TABLE 23** Fan assembly LED descriptions

LED purpose	Color	Status	Recommended action
<b>Power</b> 	No light (LED is off)	Fan assembly does not have power.	Ensure that the fan assembly is firmly seated and has power.
	Steady green	Fan assembly has power.	No action required.
<b>Status</b> 	No light (LED is off)	Fan assembly is either healthy or does not have power.	Ensure that the fan assembly has power.
	Steady amber	Fan assembly is being initialized or has a failure (full or partial).	Wait to see if fan fully initializes. If LED remains amber, replace the fan assembly.
	Slow-flashing amber (on 2 seconds, then off 2 seconds)	Fan assembly is not seated correctly or is faulty.	Pull the unit out and reseal it. If the LED continues to flash, replace the unit.
	Flashing amber (on ½ second, then off 3.5 seconds)	Fan is disabled.	Run the <b>fanEnable</b> command to enable the fan.
	Fast-flashing amber (on ½ second, then off ½ second)	Environmental range exceeded.	Check for out-of-bounds environmental condition, resolve any problems, and reseal the unit. If the LED continues to flash, replace the unit.

**CAUTION**

If fan assembly LED operation indicates a fault or no power, verify that fan is fully seated in the chassis and that captive screws securing fan in the chassis are fully tightened. If screws are loose, pressure from fans may unseat the fan from chassis connectors.

## Interpreting POST and boot results

The device performs Power-On Self-Test (POST) by default each time the device is powered on, rebooted, or reset. The device can be rebooted using the **reboot** to reboot each CP individually) or **fastBoot** commands. The **fastBoot** command reboots the switches without running POST. If the active CP blade is rebooted, it fails over to the standby CP blade.

### POST

The device automatically performs POST each time it is powered on or reset.

To verify that POST has completed without error, do the following:

- Verify that all LEDs return to a normal state after POST completes.

If one or more LEDs do not return to a normal state, and this is not due to the device being set to beacon, refer to the relevant LED table to identify and correct the problem. For port blades, and CP and core switch blades, the **slotShow** command can be used to check the status of the slots. For information about turning beaconing on or off, refer to the *Brocade Fabric OS Administration Guide*.

- Verify that the switch prompt displays when POST completes.

If it does not display, POST was not successfully completed. Contact the device supplier for support.

- Review the system error log using the **errShow** or **errDump** commands.

Any errors detected during POST are written to the system log, which is accessible through the **errShow** command. For information about error messages, refer to the *Brocade Fabric OS Message Reference*.

POST includes the following steps:

1. Preliminary POST diagnostics are run.
2. Operating system is initialized.
3. Hardware is initialized.
4. Diagnostic tests are run on several functions, including circuitry, port functionality, ability to send and receive frames, all aspects of memory, parity, statistics counters, and serialization.

### Boot

In addition to POST, boot includes the following steps after POST is complete:

1. Universal port configuration is performed.
2. Links are initialized.
3. Fabric is analyzed. If any ports are connected to other switches, the device participates in a fabric configuration.
4. The device obtains a domain ID and assigns port addresses.
5. Unicast routing tables are constructed.
6. Normal port operation is enabled.

## Using monitoring commands

This section provides example output and explanation for commands referenced in this guide for monitoring and verifying operation of the director and various components, such as blades, power supply assemblies, and fan assemblies.

Output for the following commands is provided:

- switchShow
- chassisShow
- haShow
- tempShow
- psShow
- sensorShow
- sfpShow
- fanShow
- errDump
- HistoryShow
- SupportSave

For more detail on using these commands, refer to the *Brocade Fabric OS Command Reference*. For more information on error messages, refer to the *Brocade Fabric OS Message Reference*.

### chassisShow

The **chassisShow** can be especially helpful in monitoring the health of the device. This command provides information on installed blade, fan assembly, and power supply assembly FRUs. In addition, customer-supplied information can also be viewed, if included, for each FRU type. Four measurements to note are:

- Power Consume Factor: Maximum power allocated for a given FRU. Except for power supply assemblies, all power is shown as a negative number.
- Power Usage: If shown, this reflects real-time power usage for the FRU.
- Time Awake: Time that the system as been powered on since the last reboot.
- Time Alive: Reflects the total power-on time for the FRU (when available).

The following examples show output from this command.

#### NOTE

The output has been truncated to reduce duplicate information.

```
chassisX6-4:admin> chassisshow
Chassis Family:      X6-4
Chassis Backplane Revision: 0
```

```
SW BLADE Slot: 3
Header Version:      2
Power Consume Factor: -245W
Power Usage:          -152W
Factory Part Num:     60-1003325-01
Factory Serial Num:   DYJ0339L029
Manufacture:          Day: 6 Month: 11 Year: 2015
Update:               Day: 15 Month: 2 Year: 2016
Time Alive:           26 days
Time Awake:           0 days
ID:
```

```

SW BLADE Slot: 4
Header Version: 2
Power Consume Factor: -245W
Power Usage: -157W
Factory Part Num: 60-1003325-01
Factory Serial Num: DYJ0339L014
Manufacture: Day: 3 Month: 10 Year: 2015
Update: Day: 15 Month: 3 Year: 2016
Time Alive: 80 days
Time Awake: 0 days
ID:

```

```

CP BLADE Slot: 1
Header Version: 2
Power Consume Factor: -50W
Power Usage: -47W
Factory Part Num: 60-1003201-09
Factory Serial Num: DYK0338L008
Manufacture: Day: 7 Month: 10 Year: 2015
Update: Day: 23 Month: 3 Year: 2016
Time Alive: 84 days
Time Awake: 0 days
ID:

```

```

CP BLADE Slot: 2
Header Version: 2
Power Consume Factor: -50W
Power Usage: -41W
Factory Part Num: 60-1003201-09
Factory Serial Num: DYK0338L00E
Manufacture: Day: 7 Month: 10 Year: 2015
Update: Day: 23 Month: 3 Year: 2016
Time Alive: 87 days
Time Awake: 0 days
ID:

```

```

CORE BLADE Slot: 5
Header Version: 2
Power Consume Factor: -450W
Power Usage: -264W
Factory Part Num: 60-1003199-08
Factory Serial Num: DYH0344L005
Manufacture: Day: 17 Month: 11 Year: 2015
Update: Day: 0 Month: 0 Year: 0
Time Alive: 0 days
Time Awake: 0 days
ID:

```

```

CORE BLADE Slot: 6
Header Version: 2
Power Consume Factor: -450W
Power Usage: -289W
Factory Part Num: 60-1003199-08
Factory Serial Num: DYH0344L003
Manufacture: Day: 7 Month: 11 Year: 2015
Update: Day: 0 Month: 0 Year: 0
Time Alive: 0 days
Time Awake: 0 days
ID:

```

```

SW BLADE Slot: 7
Header Version: 2
Power Consume Factor: -420W
Power Usage: -264W
Factory Part Num: 60-1003373-01
Factory Serial Num: EAL0339L009
Manufacture: Day: 24 Month: 10 Year: 2015
Update: Day: 12 Month: 3 Year: 2016
Time Alive: 66 days
Time Awake: 0 days
ID:

```

```

SW BLADE Slot: 8
Header Version: 2
Power Consume Factor: -420W
Power Usage: -264W
Factory Part Num: 60-1003373-01
Factory Serial Num: EAL0339L009
Manufacture: Day: 24 Month: 10 Year: 2015
Update: Day: 12 Month: 3 Year: 2016
Time Alive: 66 days
Time Awake: 0 days
ID:

```

```

POWER SUPPLY Unit: 1
Power Source: AC
Fan Direction: Non-portside Intake
Header Version: 2
Power Consume Factor: 2870w
Factory Part Num: 23-0000161-01
Factory Serial Num: DUC2M32L06L
Manufacture: Day: 10 Month: 8 Year: 2015
Update: Day: 16 Month: 2 Year: 2016
Time Alive: 88 days
Time Awake: 3 days
ID:

```

```

FAN Unit: 1
Fan Direction: Non-portside Intake
Header Version: 2
Power Consume Factor: -300w
Factory Part Num: 60-1003203-03
Factory Serial Num: DYLO329L05J
Manufacture: Day: 3 Month: 10 Year: 15
Update: Day: 16 Month: 2 Year: 2016
Time Alive: 88 days
Time Awake: 3 days
ID:

```

```

FAN Unit: 2
Fan Direction: Non-portside Intake
Header Version: 2
Power Consume Factor: -300w
Factory Part Num: 60-1003203-03
Factory Serial Num: DYLO329L05M
Manufacture: Day: 3 Month: 10 Year: 15
Update: Day: 16 Month: 2 Year: 2016
Time Alive: 88 days
Time Awake: 3 days
ID:

```

```

WWN Unit: 1
System AirFlow: Non-portside Intake
Header Version: 2
Power Consume Factor: -1W
Factory Part Num: 60-1003194-02
Factory Serial Num: DZH0331L039
Manufacture: Day: 3 Month: 10 Year: 15
Update: Day: 0 Month: 0 Year: 0
Time Alive: 24 days
Time Awake: 0 days
ID: ***(@%)( *
Part Num: ***(@%)( *@#%(@%)*@*
Serial Num: ***(@%)( *@#%(@%)*@*
Revision Num: ***(

```

```

WWN Unit: 2
System AirFlow: Non-portside Intake
Header Version: 2
Power Consume Factor: -1W
Factory Part Num: 60-1003194-02
Factory Serial Num: DZH0331L032
Manufacture: Day: 3 Month: 10 Year: 15

```

```

Update:           Day:  0  Month:  0  Year:  0
Time Alive:       24 days
Time Awake:       0 days
ID:               *** (@*) (*
Part Num:         *** (@*) (*@#% (@*) @*
Serial Num:       *** (@*) (*@#% (@*) @*
Revision Num:     *** (

```

```
Chassis Factory Serial Num: DZB1339A006
```

## errDump and errShow

Use the **errShow** command to display device error log messages one at a time. Use the **errDump** command to display error log messages without any page breaks. The output of these commands are unique for each Control Processor (CP), so must be executed on each CP blade to obtain a complete record.

Following is a partial example of **errDump** output.

```

chassisX6:admin> errdump

2016/03/28-08:44:28, [FV-1001], 90, SLOT 1 CHASSIS, INFO, My_Switch, Flow Vision daemon initialized.
2016/03/28-08:44:51, [FSSM-1002], 91, SLOT 1 CHASSIS, INFO, My_Chassis, HA State is in sync.
2016/03/28-08:44:51, [SULB-1003], 92, SLOT 1 CHASSIS, INFO, My_Chassis, Firmwarecommit has started.
2016/03/28-08:48:27, [SULB-1004], 93, SLOT 1 CHASSIS, INFO, My_Chassis, Firmwarecommit has completed.
2016/03/28-08:48:27, [SULB-1036], 94, SLOT 1 CHASSIS, INFO, My_Chassis, The new Version: Fabric OS v8.0.1_bld52.
2016/03/28-08:48:27, [SULB-1002], 95, SLOT 1 CHASSIS, INFO, My_Chassis, Firmwaredownload command has completed
successfully.
2016/03/28-08:50:51, [IPAD-1003], 96, SLOT 1 CHASSIS, INFO, My_Chassis, DNS parameters saved successfully.
-----

```

Note the following about this output:

- The output can contain several thousand lines. Use **errClear** command to reset the output when needed. This command clears all error log messages for all director instances on the CP where the command is issued.
- *My\_Switch* corresponds to what is entered for switchname and is a switch or logical switch event.
- *My\_Chassis* corresponds to what is entered for chassisname and is a chassis event.

## fanShow

Use this command to display the current status and speed of each installed fan. The following is an example of **fanShow** output.

```

chassisX6-4:admin> fanshow
Fan 1 is Ok, speed is 6993 RPM
Fan 2 is Ok, speed is 6993 RPM

```

## haShow

Use this command to display the control processor (CP) status. The display includes the following information:

- Local CP state (slot number and CP ID), warm or cold, recovering or recovered.
- Remote CP state (slot number and CP ID).
- High Availability (enabled or disabled).

- Heartbeat (up or down).
- Health of standby CP.
- HA synchronization status.

The following is an example of **haShow** output.

```
chassisX6:admin> hashow
Local CP (Slot 1, CP0): Active, Warm Recovered
Remote CP (Slot 2, CP1): Standby, Healthy
HA enabled, Heartbeat Up, HA State synchronized
```

Note the following about this output:

- A warm recovery typically does not disrupt traffic flow.
- A cold recovery is usually a result of a reboot of the active CP, which disrupts traffic.
- A lack of HA synchronization can be related to a firmware download in progress or that the device is recovering from a reboot or power-cycle.

## historyShow

Use this command to display the entire history log, which includes insertion and removal events for field-replaceable units (FRUs), such as blades, power supplies, fans, and world wide name (WWN) cards.

The following is an example of **historyShow** output.

```
chassisX6-4:admin> historyshow

CORE BLADE Slot 5      Inserted at Fri Jun 17 12:05:02 2016
Factory Part Number:   60-1003324-01
Factory Serial Number: DZD0331L004

POWER SUPPLY Unit 1    Inserted at Fri Jun 17 12:05:26 2016
Factory Part Number:   23-0000162-01
Factory Serial Number: DUD2M36L04N

POWER SUPPLY Unit 2    Inserted at Fri Jun 17 12:05:26 2016
Factory Part Number:   23-0000162-01
Factory Serial Number: DUD2M08M08G

CORE BLADE Slot 6      Inserted at Fri Jun 17 12:05:26 2016
Factory Part Number:   60-1003324-01
Factory Serial Number: DZD0331L016

FAN Unit 1             Inserted at Fri Jun 17 12:05:27 2016
Factory Part Number:   60-1003203-03
Factory Serial Number: DYLO329L05R

FAN Unit 2             Inserted at Fri Jun 17 12:05:27 2016
Factory Part Number:   60-1003203-03
Factory Serial Number: DYLO329L01Z

SW BLADE Slot 3         Inserted at Fri Jun 17 12:05:27 2016
Factory Part Number:   60-1003200-07
Factory Serial Number: DYJ0332L00H

WWN Unit 1             Inserted at Fri Jun 17 12:05:27 2016
Factory Part Number:   60-1003194-02
Factory Serial Number: DZH0331L00E

WWN Unit 2             Inserted at Fri Jun 17 12:05:28 2016
Factory Part Number:   60-1003194-02
Factory Serial Number: DZH0331L01C

SW BLADE Slot 4        Inserted at Fri Jun 17 12:05:28 2016
```

```

Factory Part Number:    60-1003336-01
Factory Serial Number:  EAL0338L00R

SW BLADE Slot 7        Inserted at Fri Jun 17 12:05:29 2016
Factory Part Number:    60-1003200-07
Factory Serial Number:  DYJ0332L02G

SW BLADE Slot 8        Inserted at Fri Jun 17 12:05:29 2016
Factory Part Number:    60-1003200-07
Factory Serial Number:  DYJ0332L03G

CP BLADE Slot 1        Inserted at Fri Jun 17 12:05:30 2016
Factory Part Number:    60-1003201-09
Factory Serial Number:  DYK0331L007

CP BLADE Slot 2        Inserted at Fri Jun 17 12:05:31 2016
Factory Part Number:    60-1003201-09
Factory Serial Number:  DYK0331L00N

```

## psShow

Use this command to display the current status of installed power supplies. The following is an example of **psShow** output.

```

chassisX6-4:admin> psshow
Power Supply #1 is OK
V10L36, DUD2M36L04N ,23-0000162-01,30,DELTA,ECD16020043 ,S3,DUD2M36L
Power Supply #2 is OK
V10M08, DUD2M08M08G ,23-0000162-01,32,DELTA,ECD16020043 ,S5,DUD2M08M

```

## sensorShow

Use this command to display the current temperature, fan, and power supply status, and readings from sensors located on the device. The **sensorShow** command output is similar to **tempShow** except that fan and power supply sensor information is also included. Temperatures are in Celsius only.

The following is an example of **sensorShow** output.

```

chassisX6-4:admin> sensorshow
sensor 1: (Temperature) is Ok, value is 29 C
sensor 2: (Temperature) is Ok, value is 47 C
sensor 3: (Temperature) is Ok, value is 43 C
sensor 4: (Temperature) is Ok, value is 34 C
sensor 5: (Temperature) is Ok, value is 53 C
sensor 6: (Temperature) is Ok, value is 36 C
sensor 7: (Temperature) is Ok, value is 39 C
sensor 8: (Temperature) is Ok, value is 33 C
sensor 9: (Temperature) is Ok, value is 41 C
sensor 10: (Temperature) is Ok, value is 43 C
sensor 11: (Temperature) is Ok, value is 44 C
sensor 12: (Temperature) is Ok, value is 41 C
sensor 13: (Temperature) is Ok, value is 45 C
sensor 14: (Temperature) is Ok, value is 31 C
sensor 15: (Temperature) is Ok, value is 45 C
sensor 16: (Temperature) is Ok, value is 48 C
sensor 17: (Temperature) is Ok, value is 31 C
sensor 18: (Temperature) is Ok, value is 45 C
sensor 19: (Temperature) is Ok, value is 45 C
sensor 20: (Temperature) is Ok, value is 29 C
sensor 21: (Temperature) is Ok, value is 44 C
sensor 22: (Temperature) is Ok, value is 43 C
sensor 23: (Temperature) is Ok, value is 30 C
sensor 24: (Temperature) is Ok, value is 45 C
sensor 25: (Temperature) is Ok, value is 42 C
sensor 26: (Fan ) is Ok, speed is 6984 RPM
sensor 27: (Fan ) is Ok, speed is 6984 RPM

```



```
sensor 28: (Power Supply) is Ok
sensor 29: (Power Supply) is Ok
```

## slotShow

Use this command to display the current status of each blade in the system. Depending on the option used, the command retrieves information on blade type, blade ID, status, Brocade model name, and power usage for each slot in the switch or chassis. Use the `-m` operand to display the blade model name and status.

Following is an example of **slotShow** output.

### NOTE

The most common status is shown. A status of Faulty (51) would display for a POST failure during power-on or a blade hot-plug.

```
chassisX6-4:admin> slotShow -m
```

Slot	Blade Type	ID	Model Name	Status
1	CP BLADE	175	CPX6	ENABLED
2	CP BLADE	175	CPX6	ENABLED
3	SW BLADE	178	FC32-48	ENABLED
4	UNKNOWN			VACANT
5	CORE BLADE	176	CR32-4	ENABLED
6	CORE BLADE	176	CR32-4	ENABLED
7	SW BLADE	178	FC32-48	DISABLED
8	AP BLADE	186	SX6	ENABLED

## sfpShow

Use this command without operands to display a summary of all installed SFPs. For each port, the command displays the SFP type and, for serial ID SFP, the vendor name and SFP, serial number, and speed capability (in Gbps). Use this command with a port number to display detailed information about the serial ID SFP in the specified port.

Following is example of **sfpShow** output.

```
chassisX6-4:admin> sfpshow
Slot 3/Port 0: id (sw) Vendor: BROCADE   Serial No: JAF3154200000VJ   Speed: 8,16,32_Gbps
Slot 3/Port 1: --
Slot 3/Port 2: --
Slot 3/Port 3: --
Slot 3/Port 4: --
Slot 3/Port 5: --
Slot 3/Port 6: --
Slot 3/Port 7: --
Slot 3/Port 8: --
Slot 3/Port 9: --
Slot 3/Port 10: --
Slot 3/Port 11: --
Slot 3/Port 12: --
Slot 3/Port 13: --
Slot 3/Port 14: --
Slot 3/Port 15: --
Slot 3/Port 16: --
Slot 3/Port 17: --
Slot 3/Port 18: --
Slot 3/Port 19: --
Slot 3/Port 20: --
Slot 3/Port 21: --
Slot 3/Port 22: --
Slot 3/Port 23: --
Slot 3/Port 24: --
Slot 3/Port 25: --
Slot 3/Port 26: --
```

```

Slot 3/Port 27: --
Slot 3/Port 28: --
Slot 3/Port 29: --
Slot 3/Port 30: --
Slot 3/Port 31: --
Slot 3/Port 32: --
Slot 3/Port 33: --
Slot 3/Port 34: --
Slot 3/Port 35: --
Slot 3/Port 36: --
Slot 3/Port 37: --
Slot 3/Port 38: --
Slot 3/Port 39: --
Slot 3/Port 40: --
Slot 3/Port 41: --
Slot 3/Port 42: --
Slot 3/Port 43: --
Slot 3/Port 44: --
Slot 3/Port 45: --
Slot 3/Port 46: --
Slot 3/Port 47: --
Slot 4/Port 0: --
Slot 4/Port 1: --
Slot 4/Port 2: --
Slot 4/Port 3: --
Slot 4/Port 4: --
Slot 4/Port 5: --
Slot 4/Port 6: --
Slot 4/Port 7: --
Slot 4/Port 8: --
Slot 4/Port 9: --
Slot 4/Port 10: --
Slot 4/Port 11: --
Slot 4/Port 12: --
Slot 4/Port 13: --
Slot 4/Port 14: --
Slot 4/Port 15: --
Slot 7/Port 0: --
Slot 7/Port 1: --
Slot 7/Port 2: --
Slot 7/Port 3: --
Slot 7/Port 4: --
Slot 7/Port 5: --
Slot 7/Port 6: --
Slot 7/Port 7: --
Slot 7/Port 8: --
Slot 7/Port 9: --
Slot 7/Port 10: --
Slot 7/Port 11: --
Slot 7/Port 12: --
Slot 7/Port 13: --
Slot 7/Port 14: --
Slot 7/Port 15: --
Slot 7/Port 16: --
Slot 7/Port 17: --
Slot 7/Port 18: --
Slot 7/Port 19: --
Slot 7/Port 20: --
Slot 7/Port 21: --
Slot 7/Port 22: --
Slot 7/Port 23: --
Slot 7/Port 24: --
Slot 7/Port 25: --
Slot 7/Port 26: --
Slot 7/Port 27: --
Slot 7/Port 28: --
Slot 7/Port 29: --
Slot 7/Port 30: --
Slot 7/Port 31: id (sw) Vendor: BROCADE Serial No: JAF3154200000K8 Speed: 8,16,32_Gbps
Slot 7/Port 32: --
Slot 7/Port 33: --
Slot 7/Port 34: id (sw) Vendor: BROCADE Serial No: JAF3154200000K3 Speed: 8,16,32_Gbps

```

```

Slot 7/Port 35: id (sw) Vendor: BROCADE Serial No: JAF315410000NN4 Speed: 8,16,32_Gbps
Slot 7/Port 36: --
Slot 7/Port 37: id (sw) Vendor: BROCADE Serial No: HAF314410000596 Speed: 4,8,16_Gbps
Slot 7/Port 38: --
Slot 7/Port 39: --
Slot 7/Port 40: --
Slot 7/Port 41: --
Slot 7/Port 42: --
Slot 7/Port 43: --
Slot 7/Port 44: --
Slot 7/Port 45: --
Slot 7/Port 46: --
Slot 7/Port 47: --
Slot 8/Port 0: --
Slot 8/Port 1: --
Slot 8/Port 2: --
Slot 8/Port 3: --
Slot 8/Port 4: --
Slot 8/Port 5: --
Slot 8/Port 6: --
Slot 8/Port 7: --
Slot 8/Port 8: --
Slot 8/Port 9: --
Slot 8/Port 10: --
Slot 8/Port 11: --
Slot 8/Port 12: --
Slot 8/Port 13: --
Slot 8/Port 14: --
Slot 8/Port 15: id (sw) Vendor: BROCADE Serial No: JAF315420000188 Speed: 8,16,32_Gbps
Slot 8/Port 16: --
Slot 8/Port 17: --
Slot 8/Port 18: --
Slot 8/Port 19: --
Slot 8/Port 20: --
Slot 8/Port 21: --
Slot 8/Port 22: --
Slot 8/Port 23: --
Slot 8/Port 24: --
Slot 8/Port 25: --
Slot 8/Port 26: --
Slot 8/Port 27: --
Slot 8/Port 28: --
Slot 8/Port 29: --
Slot 8/Port 30: --
Slot 8/Port 31: --
Slot 8/Port 32: id (sw) Vendor: BROCADE Serial No: HAF110520000CY2 Speed: 4,8,16_Gbps
Slot 8/Port 33: id (sw) Vendor: BROCADE Serial No: HAF110500000V4K Speed: 4,8,16_Gbps
Slot 8/Port 34: id (sw) Vendor: BROCADE Serial No: HAF11053000098J Speed: 4,8,16_Gbps
Slot 8/Port 35: id (sw) Vendor: BROCADE Serial No: HAF110500000V3M Speed: 4,8,16_Gbps
Slot 8/Port 36: --
Slot 8/Port 37: --
Slot 8/Port 38: --
Slot 8/Port 39: --
Slot 8/Port 40: --
Slot 8/Port 41: --
Slot 8/Port 42: --
Slot 8/Port 43: --
Slot 8/Port 44: --
Slot 8/Port 45: --
Slot 8/Port 46: --
Slot 8/Port 47: --
Slot 5/Port 0: --
Slot 5/Port 1: --
Slot 5/Port 2: --
Slot 5/Port 3: --
Slot 5/Port 4: --
Slot 5/Port 5: --
Slot 5/Port 6: --
Slot 5/Port 7: --
Slot 5/Port 8: --
Slot 5/Port 9: --
Slot 5/Port 10: --

```

```

Slot 5/Port 11: --
Slot 5/Port 12: --
Slot 5/Port 13: --
Slot 5/Port 14: --
Slot 5/Port 15: --
Slot 6/Port 0: --
Slot 6/Port 1: --
Slot 6/Port 2: --
Slot 6/Port 3: --
Slot 6/Port 4: --
Slot 6/Port 5: --
Slot 6/Port 6: --
Slot 6/Port 7: --
Slot 6/Port 8: --
Slot 6/Port 9: --
Slot 6/Port 10: --
Slot 6/Port 11: --
Slot 6/Port 12: --
Slot 6/Port 13: --
Slot 6/Port 14: --
Slot 6/Port 15: --
Slot 5/Port 16: --
Slot 5/Port 17: --
Slot 5/Port 18: --
Slot 5/Port 19: --
Slot 5/Port 20: --
Slot 5/Port 21: --
Slot 5/Port 22: --
Slot 5/Port 23: --
Slot 5/Port 24: --
Slot 5/Port 25: --
Slot 5/Port 26: --
Slot 5/Port 27: --
Slot 5/Port 28: id 7/0 (sw) Vendor: BROCADE Serial No: ZTA11539000002A Speed: 32_Gbps
Slot 5/Port 29: id 7/1 (sw) Vendor: BROCADE Serial No: ZTA11539000002A Speed: 32_Gbps
Slot 5/Port 30: id 7/2 (sw) Vendor: BROCADE Serial No: ZTA11539000002A Speed: 32_Gbps
Slot 5/Port 31: id 7/3 (sw) Vendor: BROCADE Serial No: ZTA11539000002A Speed: 32_Gbps
Slot 6/Port 16: --
Slot 6/Port 17: --
Slot 6/Port 18: --
Slot 6/Port 19: --
Slot 6/Port 20: --
Slot 6/Port 21: --
Slot 6/Port 22: --
Slot 6/Port 23: --
Slot 6/Port 24: --
Slot 6/Port 25: --
Slot 6/Port 26: --
Slot 6/Port 27: --
Slot 6/Port 28: id 7/0 (id) Vendor: FINISAR CORP Serial No: DU8000J Speed:
Slot 6/Port 29: id 7/1 (id) Vendor: FINISAR CORP Serial No: DU8000J Speed:
Slot 6/Port 30: id 7/2 (id) Vendor: FINISAR CORP Serial No: DU8000J Speed:
Slot 6/Port 31: id 7/3 (id) Vendor: FINISAR CORP Serial No: DU8000J Speed:
GE: Slot 4/Port 0: --
GE: Slot 4/Port 1: --
GE: Slot 4/Port 2: --
GE: Slot 4/Port 3: --
GE: Slot 4/Port 4: --
GE: Slot 4/Port 5: --
GE: Slot 4/Port 6: --
GE: Slot 4/Port 7: --
GE: Slot 4/Port 8: --
GE: Slot 4/Port 9: --
GE: Slot 4/Port 10: --
GE: Slot 4/Port 11: --
GE: Slot 4/Port 12: --
GE: Slot 4/Port 13: --
GE: Slot 4/Port 14: --
GE: Slot 4/Port 15: --
GE: Slot 4/Port 16: --
GE: Slot 4/Port 17: --

```

## switchShow

The **switchShow** command is especially helpful for monitoring the health of the device. This command displays status, identification, and configuration information on the chassis and installed blades and ports. The following example shows output from this command.

Following is an example of **switchShow** output.

### NOTE

The following output has been truncated to reduce duplicate information.

```
chassisX6-4:admin> switchshow
switchName:      sw0
switchType:      165.0
switchState:     Online
switchMode:      Native
switchRole:      Principal
switchDomain:    1
switchId:        fffc01
switchWwn:       10:00:00:27:f7:f2:73:f6
zoning:          OFF
switchBeacon:    OFF
FC Router:       OFF
HIF Mode:        OFF
Allow XISL Use:  OFF
LS Attributes:   [FID: 128, Base Switch: No, Default Switch: Yes,
Address Mode 0]
```

Index	Slot	Port	Address	Media	Speed	State	Proto			
64	4	0	014000	id	N32	Online	FC	F-Port	86:0d:00:11:0d:06:00:00	
65	4	1	014100	id	N32	Online	FC	F-Port	86:24:00:11:0d:07:00:00	
66	4	2	014200	id	N32	Online	FC	F-Port	86:0c:00:11:0d:05:00:00	
67	4	3	014300	id	N32	Online	FC	F-Port	86:25:00:11:0d:08:00:00	
68	4	4	014400	id	N32	Online	FC	F-Port	21:00:00:24:ff:90:55:30	
69	4	5	014500	id	N32	Online	FC	F-Port	21:00:00:24:ff:90:55:31	
70	4	6	014600	id	N32	Online	FC	F-Port	21:00:00:24:ff:90:55:9e	
71	4	7	014700	id	N32	Online	FC	F-Port	21:00:00:24:ff:90:55:9f	
72	4	8	014800	id	N32	Online	FC	E-Port	10:00:00:27:f8:f2:c5:b8	
73	4	9	014900	id	N32	Online	FC	E-Port	10:00:00:27:f8:f2:c6:b8	"ras010" (Trunk master)
74	4	10	014a00	id	N32	Online	FC	E-Port	10:00:00:27:f8:f2:c7:b8	"ras010" (Trunk master)
75	4	11	014b00	id	N32	Online	FC	E-Port	10:00:00:27:f8:f2:c8:b8	"ras010" (Trunk master)
76	4	12	014c00	--	N32	No_Module	FC			
77	4	13	014d00	--	N32	No_Module	FC			
78	4	14	014e00	--	N32	No_Module	FC			
79	4	15	014f00	--	N32	No_Module	FC			
80	4	16	015000	--	N32	No_Module	FC			
81	4	17	015100	--	N32	No_Module	FC			
82	4	18	015200	id	N32	Online	FC	E-Port	10:00:50:eb:1a:f6:6c:67	"ras006" (Trunk master)
83	4	19	015300	id	N32	Online	FC	E-Port	10:00:50:eb:1a:f6:6c:68	"ras006" (Trunk master)
84	4	20	015400	--	N32	No_Module	FC			
85	4	21	015500	--	N32	No_Module	FC			
86	4	22	015600	--	N32	No_Module	FC			
87	4	23	015700	--	N32	No_Module	FC			
88	4	24	015800	--	N32	No_Module	FC			
89	4	25	015900	--	N32	No_Module	FC			

-----output truncated-----

## supportSave

Use this command to collect RASLOG, TRACE, supportShow, core file, FFDC data and other support information to a remote FTP location. On platforms that support a USB, the information can also be stored on an attached USB device. SupportShow information is available on Active and Standby CPs.

Following is an example of **supportSave** output. This output assumes that the **supportFtp** was used to set up FTP parameters (always recommended). In the following examples, the **-c** operand allows use of the FTP, SCP, or SFTP parameters set by **supportFtp**. The **-n** operand turns off confirmation prompting.

```
chassisX6-4:admin> supportsave -n -c

Saving support information for switch:ras010, module:RAS...
.....

Saving support information for switch:ras010, module:FTRACE_START...
....
Saving support information for switch:ras010, module:SSHOW_SYS...
.....

Saving support information for switch:ras010, module:SSHOW_ISWITCH...
.....

Saving support information for switch:ras010, module:FABRIC...
.....

Saving support information for switch:ras010, module:DIAG...
.....

Saving support information for switch:ras010, module:RTE...
Saving support information for switch:ras010, module:IF_TREE...
Saving support information for switch:ras010, module:ISCSID_DBG...
Saving support information for switch:ras010, module:AGDUMP...
Saving support information for switch:ras010, module:AGWWNS...
Saving support information for switch:ras010, module:AGWWN_CFG...
Saving support information for switch:ras010, module:VPWWN_CFG...
.....

Saving support information for switch:ras010, module:SSHOW_PLOG...
..

Saving support information for switch:ras010, module:SSHOW_OS...
.....

Saving support information for switch:ras010, module:SSHOW_EX...
..

Saving support information for switch:ras010, module:SSHOW_FABRIC...
.....

Saving support information for switch:ras010, module:SSHOW_SERVICE...
.....

Saving support information for switch:ras010, module:SSHOW_SEC...
.....

Saving support information for switch:ras010, module:SSHOW_NET...
.....

Saving support information for switch:ras010, module:SSHOW_FICON...
.....

Saving support information for switch:ras010, module:SSHOW_ASICDB...
.....

Saving support information for switch:ras010, module:SSHOW_AG...

Saving support information for switch:ras010, module:SSHOW_Cryp...

Saving support information for switch:ras010, module:SSHOW_FCIP...
.....
slot 4-dp1 support file transfer done.
.....
```

```

slot 4-dp0 support file transfer done.
.....

Saving support information for switch:ras010, module:SSHOW_PORT...
.
.
.

Saving support information for switch:ras010, module:SSHOW_DCEHSL...

Saving support information for switch:ras010, module:SSHOW_FLOW...
...

Saving support information for switch:ras010, module:CEEDEDEBUG...
Saving support information for switch:ras010, module:CEETECHSUPPORT...
Saving support information for switch:ras010, module:FCOESUPPORT...
Saving support information for switch:ras010, module:C2REGDUMP...
Saving support information for switch:ras010, module:C1REGDUMP...
Saving support information for switch:ras010, module:PBREGDUMP...
Saving support information for switch:ras010, module:BLSREGDUMP...
Saving support information for switch:ras010, module:AVREGDUMP...
Saving support information for switch:ras010, module:C3REGDUMP...
Saving support information for switch:ras010, module:C4REGDUMP...
Saving support information for switch:ras010, module:BCM_STATS...
Saving support information for switch:ras010, module:CRYP...

Saving support information for switch:ras010, module:FCIP...

Saving support information for switch:ras010, module:FCIP_DPLOGS...
.....

Saving support information for switch:ras010, module:VFABRIC...
.....

Saving support information for switch:ras010, module:MAPS...
Saving support information for switch:ras010, module:ENC_LOGGER...
Saving support information for switch:ras010, module:AN_DEBUG...
.....

Saving support information for switch:ras010, module:AMS_MAPS_LOG...
Saving support information for switch:ras010, module:FLOW_VISION_LOG...
Saving support information for switch:ras010, module:MP_LOG...
Saving support information for switch:ras010, module:DM_FTR_FFDC...
.....
Saving support information for switch:ras010, module:CORE_FFDC...
No core or FFDC data files found!
Saving support information for switch:ras010, module:RAS_POST...
.....

SupportSave completed.

```

## tempShow

Use this command to display temperature readings of blade temperature sensors. The command displays the following information:

- Sensor ID (an index number)
- Slot number
- Sensor index (when command issued with the --detail option)
- Sensor state (OK or absent)
- Temperature in both Centigrade and Fahrenheit

Following is an example of **tempShow** output.

```
chassisX6-4:admin> tempshow
```

Sensor ID	Slot	Sensor Index	State	Centigrade	Fahrenheit
1	3	0	Ok	29	84
2	3	1	Ok	47	116
3	3	2	Ok	43	109
4	4	0	Ok	34	93
5	4	1	Ok	53	127
6	1	0	Ok	36	96
7	1	1	Ok	39	102
8	1	2	Ok	33	91
9	1	3	Ok	41	105
10	2	0	Ok	43	109
11	2	1	Ok	44	111
12	2	2	Ok	41	105
13	2	3	Ok	45	113
14	5	0	Ok	31	87
15	5	1	Ok	45	113
16	5	2	Ok	48	118
17	6	0	Ok	31	87
18	6	1	Ok	45	113
19	6	2	Ok	45	113
20	7	0	Ok	29	84
21	7	1	Ok	44	111
22	7	2	Ok	43	109
23	8	0	Ok	30	86
24	8	1	Ok	45	113
25	8	2	Ok	43	109

Note the following about this output:

- The absent state simply reflects that the blade slot is empty.
- The sensor index is mainly for support use.
- Multiple sensors are commonly averaged to determine thresholds used for managing fan speeds or for determining a high temperature condition that may require that the blade be shut off.

## Running diagnostic tests

Diagnostic tests are automatically run during POST to check the status of the device. Any error messages generated during POST are sent to the error logs and to the serial console, if connected.

Diagnostic tests can also be run manually to test and troubleshoot the hardware and the firmware, including internal connections and circuitry, transceivers, and port cables. However, diagnostic tests are generally intended for use by support personnel.

### NOTE

Error messages do not necessarily indicate that the device requires maintenance.

Each diagnostic test can be implemented by entering the related command through a Telnet or serial session. For a list of diagnostic tests and commands, refer to the *Brocade Fabric OS Administration Guide*.

All diagnostic tests are run at all supported link speeds. They might temporarily lock the transmit and receive speeds to a specific speed. Some diagnostic tests require interconnecting the ports to each other or using loopback plugs. If ports are interconnected, the media (cables and transceivers) at each end of the connection must be of the same type. For example, short wavelength media must be connected to short wavelength media, and likewise with long wavelength media and copper media.



For more information about diagnostic tests and how to run them, refer to the *Brocade Fabric OS Administration Guide* and the *Brocade Fabric OS Command Reference*. For information about system error messages (**errShow** or **errDump**), refer to the *Fabric OS Troubleshooting and Diagnostics Guide*.



# Port and Extension Blades

• Port blade overview.....	131
• Extension blade overview.....	132
• Precautions specific to the blade.....	134
• Faulty blade indicators.....	135
• Time and items required for removal and installation.....	135
• Removing a blade.....	136
• Installing a blade.....	137
• Verifying blade operation.....	138

## Port blade overview

The FC32-48 port blade contains 48 ports capable of Fibre Channel (FC) speeds up to 32 Gbps. Port blades connect to core routing blades through backplane ports. Each core routing blade provides 96 backplane ports for port blade connection. The port blade supports port-based in-flight encryption/decryption and compression/decompression.

Port and extension blades can be mixed in device slots 3, 4, 7, and 8, but CR32-4 blades must be installed in slots 5 and 6. Up to four hot-swappable port blades can be installed in a single chassis to provide up to 192 32 Gbps FC ports.

The following optics can be installed in the blade's FC ports:

- 32 Gbps SFP+ transceivers supporting speeds 8,16, and 32 Gbps.
- 16 Gbps SFP+ transceivers supporting speeds of 4, 8, and 16 Gbps.
- 10 Gbps SFP+ transceivers supporting 10 Gbps.

Port blades contain the following LED indicators:


- Green blade power LED
- Amber blade status LED
- Bicolor green/amber FC port status LEDs

For details on interpreting LED operation, refer to [Interpreting port blade LEDs](#) on page 103.

## FC32-48 blade port numbering and trunking

The following illustration shows how ports are numbered and port trunking groups are arranged on the blade.

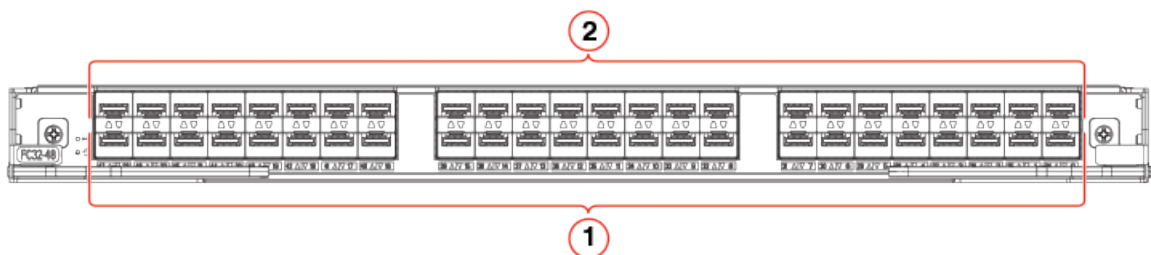**FIGURE 51** FC32-48 blade port numbering



1. FC ports 0-23 (numbered right to left)

2. FC ports 24-47 (numbered right to left)

Following are the eight-port Fibre Channel port groups for configuring trunk groups or "trunks." Color coding on the physical blade identifies the port groups. On the blade, ports belonging to the same port group are indicated with the same color border beneath the port on the blade label. Ports belonging to the same ASIC are indicated by a border with a similar color tone.

- 0–7
- 8–15
- 16–23
- 24–31
- 32–39
- 40–47

Following are the requirements for forming trunk groups:

- All ports in a trunk group must belong to the same port group. For example, to form an 8-port trunk select all eight ports from port group 0 or port group 1. You cannot use ports from each port group for the trunk.
- You can use from 1–8 ports in a port group to form a trunk.
- All ports in a trunk must be running at the same speed.
- All ports in a trunk must be configured for the same distance.
- All ports in a trunk must have the same encryption, compression, QoS, and FEC settings.
- Trunk groups must be created between Brocade switches (or Brocade adapters in the case of F\_Port trunking). Brocade trunking is proprietary and is not supported on M-EOS or third-party switches.
- There must be a direct connection between participating switches.

## Extension blade overview

The Brocade SX6 Extension blade is intended as an extension platform to support Fibre Channel (FC), FICON, and IP based storage data flows. Brocade Extension enables you to use the existing IP wide area network (WAN) infrastructure to connect Fibre Channel and IP fabrics. Brocade Extension supports applications such as remote data replication (RDR), centralized backup, and data migration over very long distances that are impractical or very costly using native Fibre Channel or IP connections. Extension tunnels, built on a physical connection between two extension switches or blades, allow Fibre Channel and IP I/O to pass through the IP WAN. The SX6 Extension blade can connect with an SX6 blade in another Brocade X6 Director or with a Brocade 7840 Extension Switch.

Port and extension blades can be mixed in device slots 3, 4, 7, and 8, but CR32–4 blades must be installed in slots 5 and 6. You can install a maximum of four SX6 blades in the device.

The SX6 blade have the following external ports:

- 16 Fibre Channel (FC) SFP+ ports that support Fibre Channel Routing Services and connection to FC devices for the Brocade Extension feature. These ports support 32 Gbps transceivers operating at 8, 16, or 32 Gbps, 16 Gbps transceivers operating at 4, 8, or 16 Gbps, and 10 Gbps transceivers operating at fixed 10 Gbps. FC ports can autonegotiate speeds with connecting ports.
- 16 10 or 1 GbE SFP+ and two 40 GbE QSFP ports. These ports allow connection of blades to IP WANs and allow Fibre Channel and IP I/O to pass through the IP WAN using extension tunnels. The 10 or 1 GbE ports operate at 10 Gbps or 1 Gbps fixed speeds with appropriate 10 Gbps or 1 Gbps transceivers installed. The 40 GbE QSFP ports operate at 40 Gbps fixed speed.

Extension blades have the following LED indicators:

- Green blade power LED
- Amber blade status LED

- Bicolor green/amber 40 GbE and 10 or 1 GbE port status LEDs
- Bicolor green/amber FC port status LEDs

For details on interpreting LED operation, refer to [Interpreting extension blade LEDs](#) on page 105.

All features are supported on this blade with no license requirements.

## Extension features

The SX6 Extension blade supports the following extension features.

### NOTE


For full details on extension blade features and configuration, refer to the *Brocade Fabric OS Extension Configuration Guide*.

- Connectivity with another Brocade SX6 extension blade or the Brocade 7840 Extension Switch.
- Multiple logical extension tunnels with maximum tunnel bandwidth up to 40 Gbps (FCIP mode) allow for scalable connections between sites.
- Extension trunking feature allows multiple IP source and destination address pairs (defined as circuits) via multiple 10 GbE or 40 GbE interfaces to provide high bandwidth extension tunnel and lossless failover resiliency. In addition, each extension circuit supports four QoS classes (class-F, high, medium and low priority), each as a TCP connection.
- ARL feature meets minimum bandwidth guarantee for each tunnel while making the full utilization of the available network bandwidth without adverse throughput performance impact at high traffic load.
- Hardware-based compression delivers the ability to maximize throughput over lower bandwidth links in the wide area network, optimizing the cost efficiencies of FCIP. The SX6 blade compresses FC frames before they are encapsulated into FCIP packets.
- Key protocol features are enabled in the FCIP implementation to optimize performance of extension over IP networks, including WAN Optimized TCP (WO-TCP), 9K jumbo frame and end-to-end Path MTU auto discovery.
- Hardware-based IPsec supports mix of secure and non-secure tunnels on the same Ethernet port, jumbo frames, and VLAN tagged connections. The IPsec function is capable of supporting both IPv4 and IPv6.
- FastWrite, Open Systems Tape Pipelining and Advanced Accelerator for FICON mitigate the latency effect of a long distance FCIP distance connection over IP WAN.
- Extension HCL (Hot Code Load) provides In-service firmware upgrade for supporting 24/7 non-stop business operations
- Built-in WAN link tester generates traffic over an IP connection to test for maximum throughput, congestion, loss percentage, out of order deliver, latency, and other network conditions. It helps determine the health of a WAN link before deploying it for use.
- Fabric Vision advanced monitoring provides the following functions:
  - Policy based monitoring monitors extension connectivity and WAN anomalies using multi-layer metrics.
  - Flow monitoring reports IOPS and data rate of individual I/O flows of inter-DC replication and tape backup operations.
  - Flow generator generates FC frames for a defined flow with default or custom size and pattern and sent across extension tunnel to help validate end to end network setup and configuration.
- Extended distance Fibre Channel supports long distance native FC connectivity.
- Extension tunnels and circuits:
  - A maximum of 8 circuits can be configured per tunnel.
  - A maximum of 20 tunnels (VE\_Ports) can be configured for all GbE ports.
  - The maximum committed rate of a single circuit is 10 Gbps, whether configured on a 10 GbE or 40 GbE port.
- FCIP and hybrid mode (FC + IP) modes.

## SX6 blade port numbering and trunking

The following illustration shows how ports are numbered on the blade. Ports are labeled as 10GE, 40 GbE, and FC on the blade.

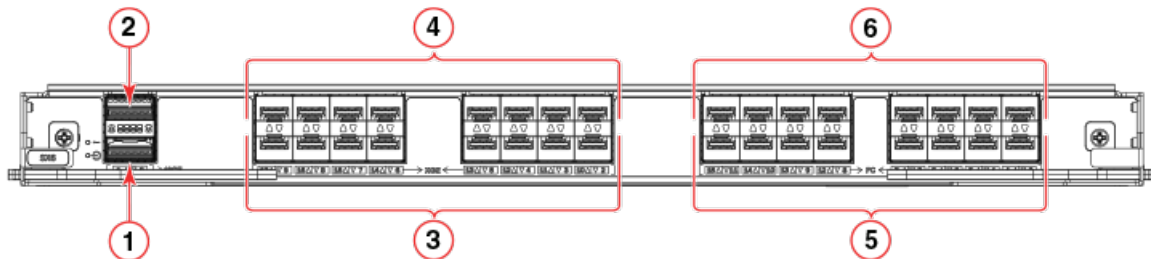FIGURE 52 SX6 Extension blade port numbering



- |                                       |  |
|---------------------------------------|--|
| 1. 40 GbE port 0                      | 4. 10/1 GbE ports 10-17 (right to left)                |
| 2. 40 GbE port 1                      | 5. FC ports 0, 1, 2, 3, 8, 9, 10, 11 (right to left)   |
| 3. 10/1 GbE ports 2-9 (right to left) | 6. FC ports 4, 5, 6, 7, 12, 13, 14, 15 (right to left) |

Following are the eight-port Fibre Channel port groups for configuring trunk groups or "trunks":

- Port group 0: ports 0-7
- Port group 1: ports 8-15

Following are the requirements for forming trunk groups:

- All ports in a trunk group must belong to the same port group. For example, to form an 8-port trunk select all eight ports from port group 0 or port group 1. You cannot use ports from each port group for the trunk.
- You can use from 1-8 ports in a port group to form a trunk.
- Ports must be running at the same speed.
- Ports must be configured for the same distance.
- Ports must have the same encryption, compression, QoS, and FEC settings.
- Trunk groups must be created between Brocade switches (or Brocade adapters in the case of F\_Port trunking). Brocade trunking is proprietary and is not supported on M-EOS or third-party switches.
- There must be a direct connection between participating switches.

For full details on trunking requirements and configuration, refer to the *Brocade Fabric OS Administration Guide*.

## Precautions specific to the blade

This document describes how to remove and replace a port or extension blade.

Observe the following precautions when replacing these blades:

- The SX6 extension and FC32-48 port blade can only be installed in Brocade X6 Directors.
- Wear an appropriately grounded ESD wrist strap when handling and installing device blades and cards. Follow electrostatic discharge (ESD) precautions. Wear a wrist grounding strap connected to chassis ground (if the chassis is plugged in) or a bench ground.
- Install port and extension blades only in slots 3-4 and 7-8. Slots 5 and 6 are reserved for CR32-4 blades. These blades cannot be installed in other slots as guide pins and connectors in each slot allow only specific blade types.

**DANGER**

*For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.*

**CAUTION**

If you do not install a module or a power supply in a slot, you must keep the slot filler panel in place. If you run the chassis with an uncovered slot, the system will overheat.

**CAUTION**

Static electricity can damage the chassis and other electronic devices. To avoid damage, keep static-sensitive devices in their static-protective packages until you are ready to install them.

**CAUTION**

Before plugging a cable into any port, be sure to discharge the voltage stored on the cable by touching the electrical contacts to ground surface.

**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

## Faulty blade indicators

Confirm that you need to replace the blade before continuing. The following events may indicate that a blade is faulty:

- The status LED on the blade is lit steady amber, or the power LED is not illuminated.
- The **slotShow** command does not show that the blade is enabled.
- errShow - Displays error log messages one at a time.
- Any of the following messages display in the error log or "show" command output:
  - "Slot unknown" message relating to the blade slot
  - FRU: FRU\_FAULTY messages for the blade
  - FAULTY (xx) with an associated (xx) code used by support

For output examples and additional information on Fabric OS commands, refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference*.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.

## Time and items required for removal and installation

The removal or installation procedure for each blade takes less than 10 minutes. Removing and restoring transceivers and cables may take longer depending on how many must be changed. The following items are required for the blade and filler panel replacement:

- Electrostatic discharge (ESD) grounding strap
- Workstation computer
- Replacement blade or filler panel
- #1 Phillips screwdriver
- SFP, SFP+, or SFP28 transceivers (as needed)
- Optical and copper cables (as needed)

**NOTE**

For information about the transceivers that are qualified for this Brocade device, refer to the "Installing Transceivers and Cables" section.

## Removing a blade

- Before removing any cables from a blade, note the cable order (identify each cable by its physical port).
- It is a good practice to create a table of cable to port mapping for reference.
- If multiple blades are being replaced, replace one blade at a time.

Use the following steps to remove a port or extension blade from the unit while system power is on. This procedure is applicable for all the port and extension blades supported on the device.

1. Remove the chassis door.
2. Check the blade power and status LEDs and port status LEDs on the front of each blade to identify any possible problems.
3. Before replacing a blade, establish a Telnet or console connection to determine a failure and verify operation after replacement. Use the **switchShow** and **slotShow** commands to view the status of the blades.
4. Check for adequate cable slack. Ensure there is plenty of cable slack to remove a blade without cable obstruction.
5. Ensure that the part number on the unit being replaced matches the replacement part number. The **chassisShow** command displays information about the blades, including part numbers (xx-xxxxxx-xx), serial numbers, and additional status.
6. Ensure that traffic is not flowing through the blade (port status LED should be off) prior to disconnecting cables.
7. Disconnect all cables and remove transceivers from the blade.
8. If removing an extension blade, perform the following steps:
  - a) Delete all fcip tunnel configurations using the **portcfg fcip tunnel slot/vePort delete** command.
  - b) Delete all IP Routes defined on the blade to be removed using the **portcfg iproute delete** command.
  - c) Delete all IP interfaces (IPIFs) defined on the blade using the **portcfg ipif slot/geX delete** command.
  - d) If logical switches are used on the switch, move all blade ports back to the default logical switch. Refer to the **lscfg** command in the *Brocade Fabric OS Command Reference* for details.

**NOTE**

If you are removing the extension blade to install in a different slot, you must remove configuration using the preceding steps, then reconfigure the blade in the new slot. If you move the blade without performing these steps and the blade faults, you must move the blade to the original slot and remove configuration.

9. Loosen the captive screws for both ejector handles on the blade using a #1 Phillips screwdriver.  
Loosening the screws initiates a hot-swap request and disconnects power from the blade. The spring-loaded captive screws will pop out from the slot .63 cm (.25 in.) when fully disengaged. Do not eject the blade using blade handles until screws disengage from slot and the power LED is off.
10. Grasp both ejector handles and simultaneously pull them away from the center of the blade using equal pressure to approximately 45 degrees (fully open).  
As you move the handles, you will hear connectors disengaging from the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane. The blade will move out approximately 1.27 cm (.5 in.) from the slot when fully disengaged.




11. Pull the blade out from the slot slightly using the ejector handles until you can grasp the blade edges with your hands. Make sure that the blade has cooled sufficiently to touch.

**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

12. Continue pulling the blade from the slot by the blade edges. As you slide out the blade, place one hand under it for support. Do not support the blade by the injector handles after removal.

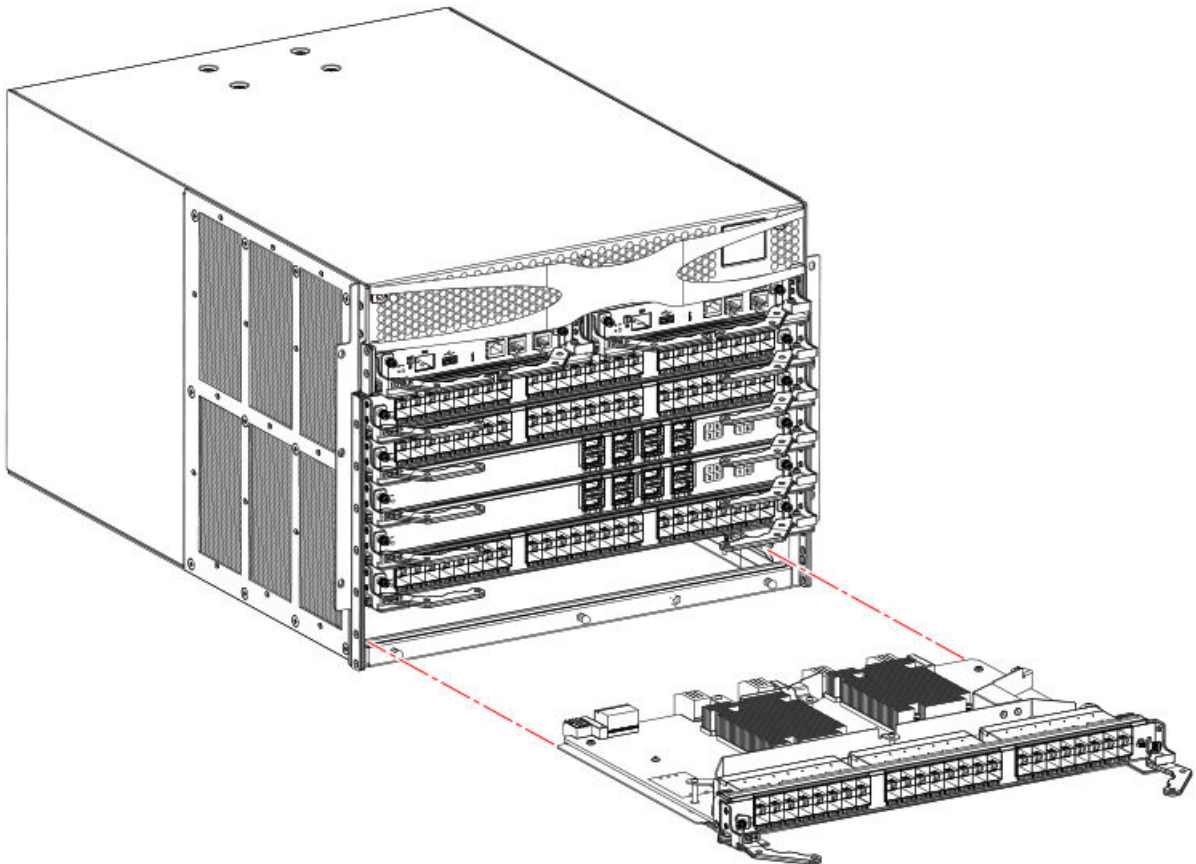**FIGURE 53** Removing and replacing port or extension blade



13. If the blade is not being replaced by another blade, install a filler panel and reinstall the chassis door. The filler panel is required for proper chassis cooling. The door is required to meet EMI compliance.

## Installing a blade

Complete this procedure to install a port or extension blade. These steps apply to all port and extension blades installed in the device.

1. If a protective sleeve is covering the blade connectors remove the sleeve.
2. Rotate the ejector handles away from center of blade completely - approximately 45 degrees. Do not support the blade using ejector handles. Orient the blade so that the handles are toward you and the flat metal side is facing down.

3. Follow these steps to insert the blade into the slot.
  - a) Align the blade in the slot with the flat metal side of the blade at the bottom (blade power and status LEDs are on the left).
  - b) Carefully push the blade into the slot using your thumbs or fingers on the blade faceplate.



**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

When the blade face is about 2.54 cm (1 in.) from the chassis, you should feel resistance as the blade connectors meet the backplane connectors.

- c) Continue pushing the blade into slot using your thumbs or fingers until the ejectors move in towards the blade slightly indicating that the connectors are engaged.
- d) Simultaneously push both ejector handles in towards the blade center with even pressure until the blade completely seats in the slot.

**NOTE**

As you move the handles, you will hear connectors engaging the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane.

4. Tighten the captive for each ejector using a #1 Phillips screwdriver.  
As blade seats completely, amber blade status and green blade power LEDs illuminate.

**NOTE**

Be sure that captive screws are tightened. If not, high pressure from fan operation may unseat blade from chassis connectors.

5. Observe the blade power and status LEDs and verify the following:
  - a) Verify that the status LED on the blade shows amber until POST completes for the blade. The status LED should then display green to indicate that the blade has power. If the status LED remains amber, the board may not be properly seated in the backplane or the board may be faulty.
  - b) Verify that the power LED on the port blade is displaying a steady green light to indicate that the blade has power. If it does not turn on, ensure that the blade is firmly seated and ejector captive screws are tightened.
6. Install the transceivers and cables in the blade.
7. Group and route the cables through the vertical cable management finger assemblies.
8. Replace the chassis door. The door is required to meet EMI compliance.

## Verifying blade operation

Perform the following tasks to verify operation of blade:

1. Check the LED indicators on the blade's front panel. For information on interpreting LED patterns, refer to one of the following sections of this guide:
  - [Interpreting port blade LEDs](#) on page 103.
  - [Interpreting extension blade LEDs](#) on page 105.

2. Enter the following commands and note any error conditions:

- **slotshow -p** - Displays the current data on each slot in the system, including blade type, blade ID, status, and Brocade model name.
- **tempShow** - Displays temperature reading of blades.
- **chassisShow** - Displays information about each component in the system.
- **sensorShow** - Displays temperature reading of blades with fan and power supply status.
- **errDump** - Displays the entire system error log.
- **errShow** - Displays error log messages one at a time.

For output examples and additional information on Fabric OS commands, refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference*.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.



# Core Routing Blades

- Core routing blade overview.....141
- Precautions specific to the blade..... 144
- Faulty core routing blade indicators..... 145
- Time and items required.....146
- Replacing a core routing blade.....146
- Verifying blade operation.....149

## Core routing blade overview

Two CR32-4 core routing blades are installed in device slots 5 and 6. Core routing blades contain ASICs that allow switching between up to four port blades. Core routing blades connect to port blades through Fibre Channel backplane ports. Each core routing blade provides 96 backplane ports for port blade connection. Each core routing blade also has 32 front-end ports that are mapped to 8 QSFP transceivers on the blade's front panel. These transceivers can create ICL connections for up to nine separate directors in a full-mesh topology and 12 directors in a core-to-edge topology. Each transceiver provides four 32 Gbps FC links for a total of 128 Gbps per connection. This core routing blade is compatible only with the Brocade X6-4.

Core routing blades contain the following LED indicators:


- Green blade power LED
- Amber blade status LED
- Bicolor green/amber QSFP port status LEDs

For details on interpreting LED operation, refer to [Interpreting core routing blade LEDs](#) on page 108.

## CR32-4 port numbering

The following illustration shows how ports are numbered and port trunking groups are arranged on the blade.

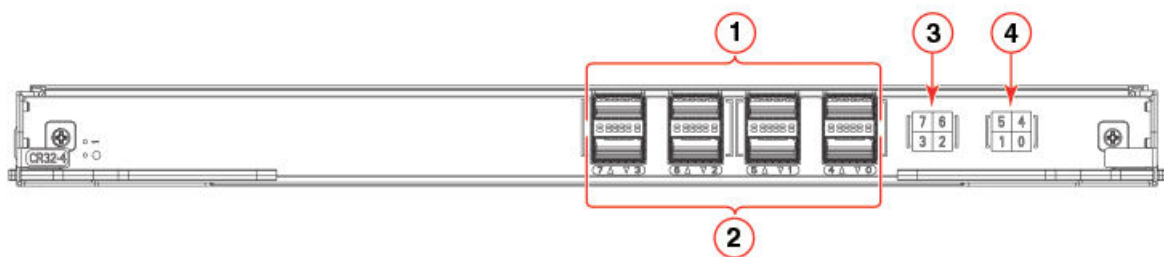FIGURE 54 CR32-4 core routing blade port numbering



- 1. QSFP ports 4-7 (right to left)
- 2. QSFP ports 0-3 (right to left)
- 3. Map of ports 2, 3, 6, and 7
- 4. Map of ports 0, 1, 4, and 5

QSFP ports are numbered from 0 through 3 along the top row from right to left and 4 through 7 along bottom row from right to left. For information on supported QSFP transceivers, refer to [Supported transceivers and cables](#) on page 87.

Ports belonging to the same trunking groups are indicated with the same color border under the ports. These colors are also applied to the port map labels on each blade to indicate ports belonging to the same trunking groups.

Each numbered QSFP port on the blade provides four 32 Gbps FC ports. The following table shows the mappings from the numbered QSFP ports on the face of the core blade to the individual FC port numbers as shown by the **slotShow** command.

**TABLE 24** External port to slotShow port mapping for core blades

External port number	slotShow FC port numbers
0	0-3
1	4-7
2	8-11
3	12-15
4	16-19
5	20-23
6	24-27
7	28-31

## ICL trunking groups

Multiple directors can be connected through inter-chassis links (ICLs) between 4x32-Gbps QSFPs on core routing blades installed in these devices. Each QSFP connection between two devices provides 128 Gbps bandwidth. Trunking optimizes the use of ICL bandwidth by allowing a group of links to merge into a single logical link, called a trunk. Traffic is distributed dynamically and in order over this trunk, achieving greater performance with fewer links. Within the trunk, multiple physical ports appear as a single port, thus simplifying management. Trunking also improves system reliability by maintaining in-order delivery of data and avoiding I/O retries if one link within the trunk fails.

Each QSFP provides four 32 Gbps FC ports. Since each port within a QSFP terminates on a different ASIC within each core blade, an ICL trunk cannot be formed using the individual FC ports within the same QSFP. A trunk has to be formed from individual FC ports in different QSFP ports. These QSFP ports must reside in the same trunk group. To form an ICL trunk between two devices, a minimum of two QSFPs within a port trunk group on a core blade installed in one device must be connected to a pair of QSFPs within a trunk group on a core blade in another device using ICLs.

Each CR32-4 blade on the Brocade X6-4 has two ICL trunking groups consisting of the following QSFP ports:

- 0, 1, 5, and 4
- 2, 3, 6, and 7

Ports belonging to the same trunking groups are indicated with the same color border under the ports on the blade faceplate. These colors are also applied to the port map labels on each blade faceplate to indicate ports belonging to the same trunking groups.

For more information on ICLs and configuring ICL trunking between core routing blades on GEN6 and GEN5 Directors, refer to the "Inter-Chassis Links" in the *Brocade Fabric OS Administration Guide*.

For more information recommended cabling topologies for ICLs, refer to [ICL cabling configurations](#) on page 143.

### NOTE

You cannot configure ISLs using ports on port blades and QSFP-based ICLs using ports on core routing blades concurrently on the same chassis.


## ICL cabling configurations

The following figures show acceptable cabling configurations for the inter-chassis link (ICL) feature between QSFP ports in core routing blades. The recommended topology is the parallel type where at least four QSFP cables connect between both core routing blades on any two directors. This provides ICL trunking between directors, ensuring redundancy. Parallel connections between core blades are recommended.

Following are the maximum numbers of directors that you can connect using 4x32-Gbps quad SFP (QSFP) inter-chassis links (ICLs):

- Up to nine X6 (GEN6) directors can be connected in a full-mesh topology.
- Up to six directors are recommended in a full-mesh topology if connecting a mixture of X6 and GEN5 directors.
- Up to 12 directors can be connected in a core-to-edge topology.

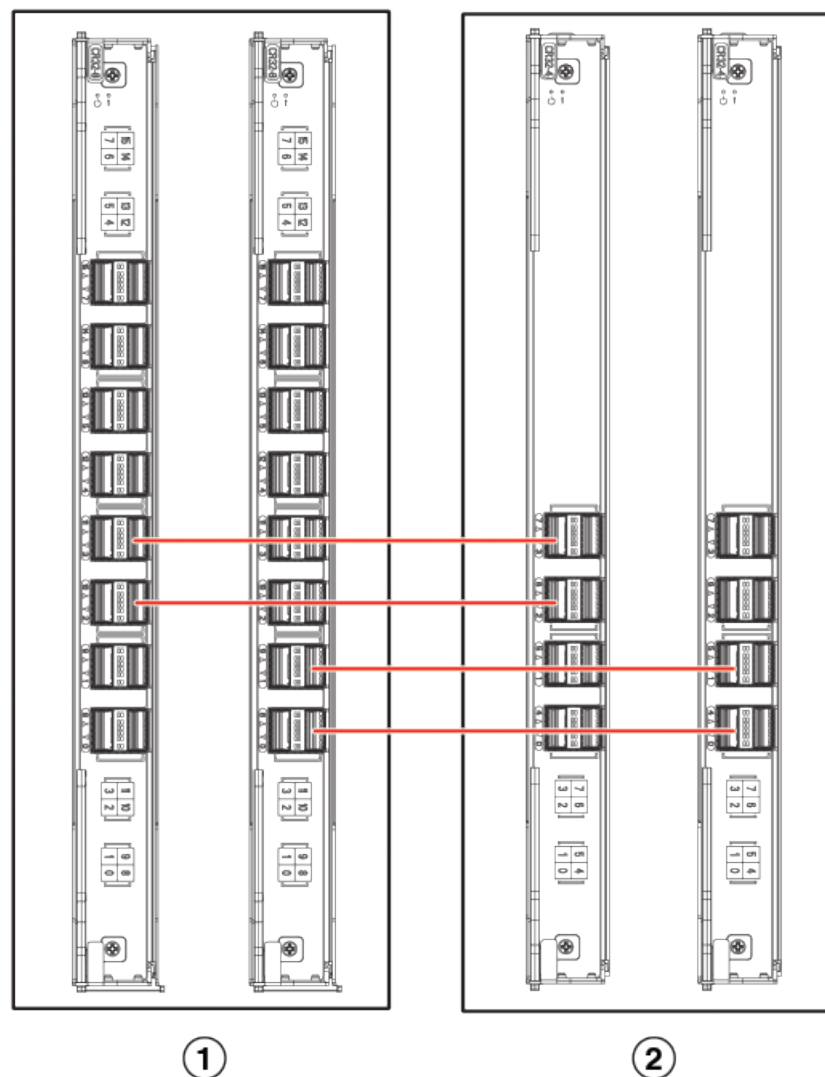**FIGURE 55** ICL cable connections for Brocade X6 Director (sample configuration)




1. Chassis 1 - X6-8

2. Chassis 2 - X6-4

To connect multiple X6 Directors via ICLs, a minimum of four ICL ports (two on each core routing blade) must be connected between each chassis. The dual connections on each core blade must reside within the same trunk group. If more than four ICL connections are required between a pair of directors, additional ICL connections should be added in pairs (one on each core blade). ICLs and ISLs are not concurrently supported between a single pair of X6 Directors.

The Brocade X6 Director can be connected in a core-edge configuration. The following figure shows two core and four edge devices. Although X6-8 Directors are shown in the figure, the device can be either X6-4 or X6-8 Directors. The cabling scheme should follow the parallel example shown in the previous figure. Each line in the example actually represents four cables running between the devices.

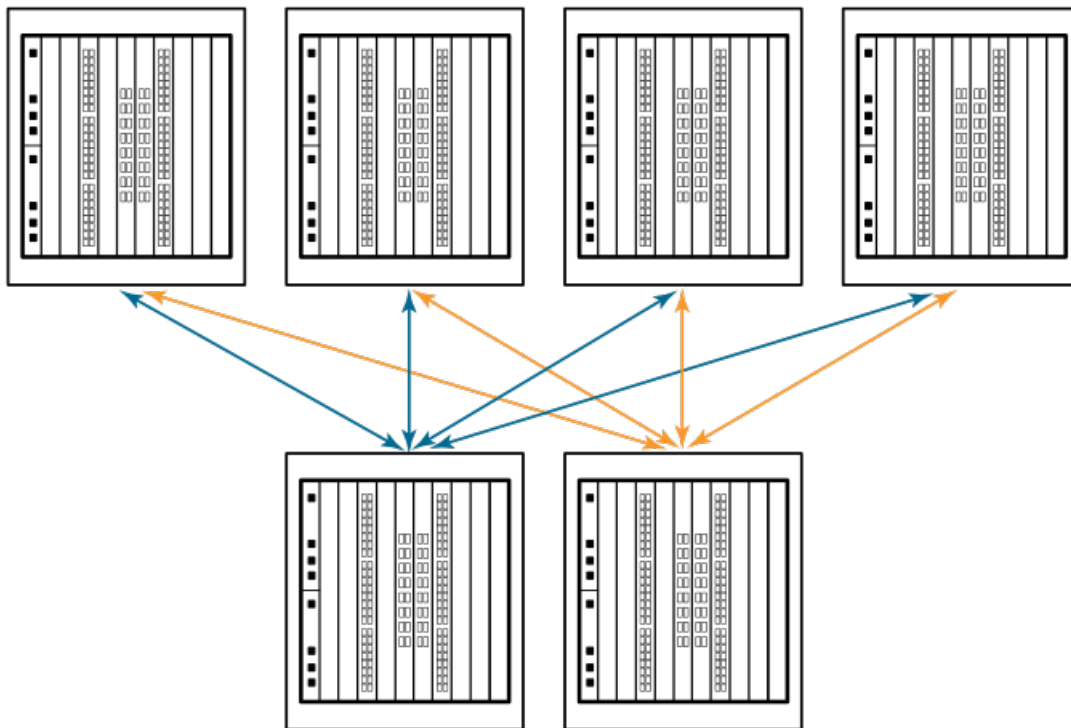**FIGURE 56** Brocade X6 Director core-edge ICL topology



Brocade Brocade X6 and DCX 8510 Directors can also be connected in a full-mesh configuration.

For details on the following subjects, refer to the "Inter-Chassis Links" section of the *Brocade Fabric OS Administration Guide*:

- ICL topologies
- ICL trunking
- Configuring ICLs between Brocade X6 Director
- Configuring ICLs between Brocade X6 Director and DCX 8510 Director models

## Precautions specific to the blade

This document describes how to remove and replace a core routing blade.

Observe the following precautions when replacing these blades:

- The CR32-4 core routing blade is compatible only with the Brocade X6-4 Director.



- Wear an appropriately grounded ESD wrist strap when handling and installing blades and cards. Follow electrostatic discharge (ESD) precautions. Wear a wrist grounding strap connected to chassis ground (if the chassis is plugged in) or a bench ground.
- Install core routing blades only in slots 5-6. These blades cannot be installed in other slots as guide pins and connectors in each slot allow only specific blade types.

**DANGER**

*For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.*

**CAUTION**

If you do not install a module or a power supply in a slot, you must keep the slot filler panel in place. If you run the chassis with an uncovered slot, the system will overheat.

**CAUTION**

Static electricity can damage the chassis and other electronic devices. To avoid damage, keep static-sensitive devices in their static-protective packages until you are ready to install them.

**CAUTION**

Before plugging a cable into any port, be sure to discharge the voltage stored on the cable by touching the electrical contacts to ground surface.

**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

## Faulty core routing blade indicators

Confirm that you need to replace the blade before continuing. The following events may indicate that a core routing blade is faulty:

- The status LED on the core switch blade is lit steady amber, or the power LED is not illuminated.
- The **slotShow** command does not show that the core switch blade is enabled.
- Any of the following messages display in the **errShow** output or **errShowAll** command output for root-capable administrators:
  - "Slot unknown" message relating to a core switch slot
  - Core switch blade errors or I2C timeouts
  - FRU: FRU\_FAULTY messages for a core switch blade
  - FAULTY (xx) with an associated code used by support
  - Configuration loader messages or "Sys PCI config" messages
  - Generic system driver messages ("FABSYS")
  - Platform system driver messages ("Platform")
  - EM messages that indicate a problem with a core switch blade
  - Function fail messages for the core switch master

Refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference* for output examples and additional information on Fabric OS commands.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.

## Time and items required

The replacement procedure for the core switch blade takes approximately 30 minutes. The following items are required for the core switch blade replacement:

- Electrostatic discharge (ESD) grounding strap
- Workstation computer
- Replacement blade or filler panel
- #1 Phillips screwdriver
- QSFP transceivers (as needed)
- Optical cables (as needed)

### NOTE

For information about the transceivers that are qualified for this Brocade device, refer to the "Installing Transceivers and Cables" section.

## Replacing a core routing blade

Use the following procedures in this section to replace routing blades.

- [Preparing for replacement](#) on page 146. Use these procedures to ensure that traffic is not disrupted through existing ICL connections when you are replacing a core routing blade. If ICLs are not connected to the blade or traffic through ICL ports has ceased, you can skip these procedures and go to [Removing a core routing blade](#) on page 147.
- [Removing a core routing blade](#) on page 147. Use these procedures to remove a blade from the chassis.
- [Installing a core routing blade](#) on page 148. Use these procedures to install a blade into an empty chassis slot.

### NOTE

Perform these procedures to remove and install one core routing blade at a time while chassis power is on. You must replace a blade and ensure its operation before replacing the other core routing blade. Removing both blades will shut down the chassis. To replace both blades at the same time, power off the chassis and follow steps under [Removing a core routing blade](#) on page 147 and [Installing a core routing blade](#) on page 148.

## Preparing for replacement

For nondisruptive replacement of a core blade, ensure that the core blade in the system that you are not replacing is active and is allowing traffic through ICL ports to the same fabrics as ICL ports on the blade being replaced.

Use the following procedures to ensure that traffic will offload from the blade that you are replacing to the other core blade in the system during replacement. This ensures nondisruptive impact on existing traffic flowing through the blade's ICLs. If ICLs are not connected to the blade or traffic over blade ICLs has been halted, skip these procedures and go on to [Removing a core routing blade](#) on page 147.

1. Ensure that Lossless Dynamic Load Sharing is enabled on each logical switch that resides on each physical switch that has ICL connections through the core blades. Log into each logical switch using an account with admin permissions, and then enter **dlShow**.

"DLS is set with Lossless enabled" should display if Lossless is enabled.

2. To enable Lossless Dynamic Load Sharing, use the following options.  
You can enable this feature on individual logical switches or each logical switch configured for the chassis.
  - Log in to each logical switch and enter the **dlset --enable -lossless** command.
  - Enable on all logical switches configured in the chassis using the **fosexec --fid all -cmd dlset** command.
3. Disable each ICL port on the core blade that you are replacing using the **portdecom [slot/]port** command.  
This command persistently disables the port without frame loss and moves all traffic flows from the port to redundant paths between fabrics and ICL ports on the other core routing blade.
4. Confirm that all of the ICL ports are persistently disabled (decommissioned) on the blade by logging into the physical switch and entering the **portcfgpersistentdisable** command.  
This command displays the status of ports in each chassis slot.
5. Remove and replace the core blade following procedures in [Removing a core routing blade](#) on page 147 and [Installing a core routing blade](#) on page 148.

#### NOTE

After installing the new blade, allow sufficient time for it to initialize and for all decommissioned ports to transition back online.

## Removing a core routing blade

Perform the following procedures to remove one core routing blade at a time with chassis power on. You must replace the blade and ensure its operation before removing the other core routing blade. Removing both blades will power down the chassis. To replace both blades at the same time, power down the chassis and perform the following steps.

1. Remove the chassis door.
2. Check the blade power and status LEDs and port status LEDs on the front of each blade to identify any possible problems.
3. Before replacing a blade, establish a Telnet or console connection to determine a failure and verify operation after replacement. Use the **switchShow** and **slotShow** commands to view the status of the blades.
4. Ensure that existing traffic through blade ICL ports will not be disrupted when the blade is removed by performing steps under [Preparing for replacement](#) on page 146.
5. Check for adequate cable slack. Ensure there is plenty of cable slack to remove a blade without cable obstruction.
6. Ensure that the part number on the unit being replaced matches the replacement part number. The **chassisShow** command displays information about the blades, including part numbers (xx-xxxxxx-xx), serial numbers, and additional status.
7. Disconnect all cables and remove transceivers from the blade.
8. Label and then disconnect cables from the faulty core routing blade.
9. Loosen the captive screws for both ejector handles on the blade using a #1 Phillips screwdriver.  
Loosening the screws initiates a hot-swap request and disconnects power from the blade. The spring-loaded captive screws will pop out from the slot .63 cm (.25 in.) when fully disengaged. Do not eject the blade using blade handles until screws disengage from slot and the power LED is off.
10. Grasp both ejector handles and simultaneously pull them away from the center of the blade using equal pressure to approximately 45 degrees (fully open).  
As you move the handles, you will hear connectors disengaging from the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane. The blade will move out approximately 1.27 cm (.5 in.) from the slot when fully disengaged.

11. Pull the blade out from the slot slightly using the ejector handles until you can grasp the blade edges with your hands. Make sure that the blade has cooled sufficiently to touch.




**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

12. Continue pulling the blade from the slot by the blade edges. As you slide out the blade, place one hand under it for support. Do not support the blade by the injector handles after removal.

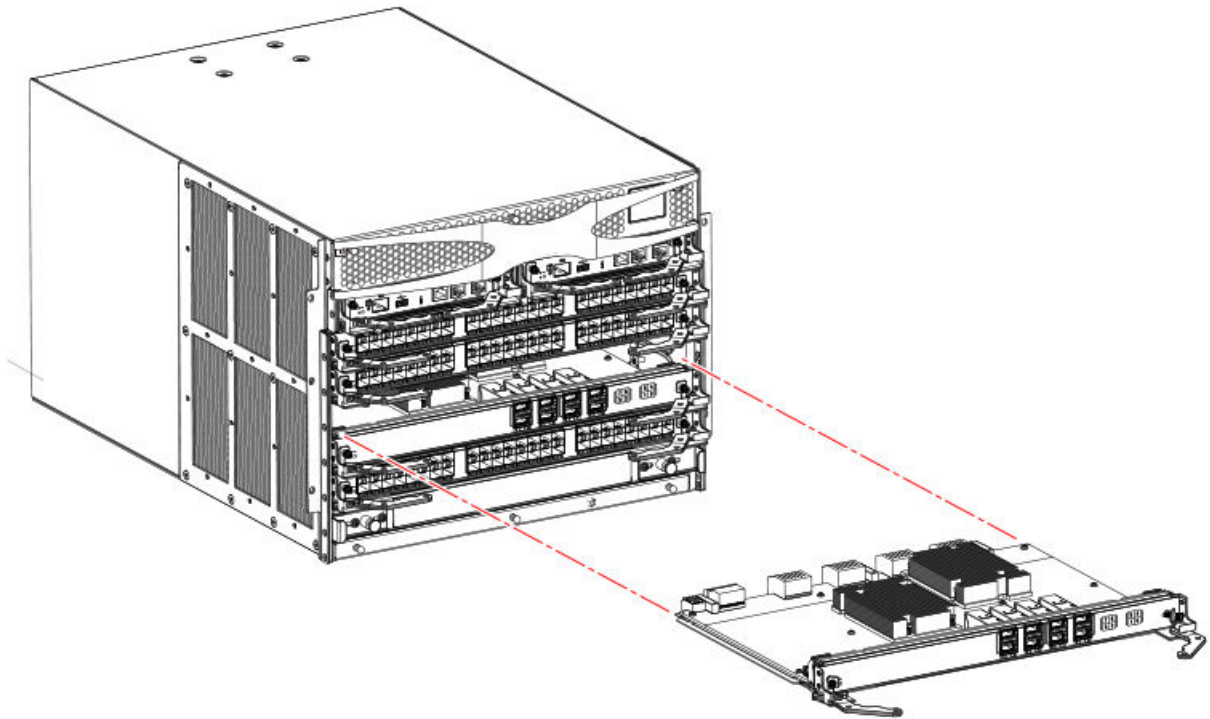**FIGURE 57** Removing and installing a core routing blade



13. If the blade is not being replaced by another blade, install a filler panel and reinstall the chassis door. The filler panel is required for proper chassis cooling. The door is required to meet EMI compliance.

## Installing a core routing blade

Complete the following steps to install a core routing blade into an empty slot.

**NOTE**

The device continues to operate while a core routing blade is installed.

1. If a protective sleeve is covering the blade connectors remove the sleeve.
2. Rotate the ejector handles away from center of blade completely - approximately 45 degrees. Do not support the blade using ejector handles. Orient the blade so that the handles are toward you and the flat metal side is facing down.

3. Follow these steps to insert the blade into the slot.
  - a) Align the blade in the slot with the flat metal side of the blade at the bottom (blade power and status LEDs are on the left).
  - b) Carefully push the blade into the slot using your thumbs or fingers on the blade faceplate.

**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

When the blade face is about 2.54 cm (1 in.) from the chassis, you should feel resistance as the blade connectors meet the backplane connectors.

- c) Continue pushing with your thumbs or fingers until the ejectors move in towards the blade slightly indicating that the connectors are engaged.
- d) Simultaneously push both ejector handles in towards the blade center with even pressure until the blade completely seats in the slot.

**NOTE**

As you move the handles, you will hear connectors engaging the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane.

4. Tighten the captive for each ejector using a #1 Phillips screwdriver.  
As blade seats completely, amber blade status and green blade power LEDs illuminate.

**NOTE**

Be sure that captive screws are tightened. If not, high pressure from fan operation may unseat blade from chassis connectors.

5. Observe the blade power and status LEDs and verify the following:
  - a) Verify that the status LED on the blade shows amber until POST completes for the blade, then turns off. If the status LED remains amber, the board may not be properly seated in the backplane or the board may be faulty.

**NOTE**

POST may take several minutes to complete on these blades.

- b) Verify that the power LED on the port blade is displaying a steady green light to indicate that the blade has power. If it does not turn on, ensure that the blade is firmly seated and ejector captive screws are tightened.
6. Install the transceivers and cables in the blade.
7. Group and route the cables through the vertical cable management finger assemblies.
8. Allow sufficient time for blade to initialize and for all ports to transition online.
9. Reinstall the chassis door. The door is required to meet EMI compliance.

## Verifying blade operation

Perform the following tasks to verify operation of new blade:

1. Check the LED indicators on the blade's front panel. For information on interpreting LED patterns, refer to [Interpreting core routing blade LEDs](#) on page 108.  
Enter the **slotShow** command and note any error conditions:

2. Enter the following commands and note any error conditions:

- **slotShow** - Displays the current data on each slot in the system, including blade type, blade ID, status, Brocade model name, and power usage.
- **tempShow** - Displays temperature reading of blades.
- **sensorShow** - Displays temperature reading of blades with fan and power supply status.
- **chassisShow** - Displays information about each component in the system.
- **errDump** - Displays the entire system error log.
- **errShow** - Displays error log messages one at a time.

For output examples and additional information on Fabric OS commands, refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference*.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.

# Control Processor Blades

---

• Control processor blade overview.....	151
• Precautions specific to the blade.....	152
• Blade fault indicators.....	153
• Blade replacement task guide.....	153
• Time and items required for replacement.....	154
• Preparing for replacement.....	155
• Replacing a CP blade.....	156
• Verifying blade operation.....	165

## Control processor blade overview

The CPX6 control processor blades are half the slot length of other Brocade X6-4 Director blades. Two CPX6 control processor blades are inserted in the half slots located at the top of the chassis to provide CP redundancy. CP0 is installed in slot 1, while CP1 is installed in slot 2.

The control processor (CP) blade contains the control plane for the device and hosts the Fabric OS that manages all hardware within the device. It also provides the following external connections for device configuration, firmware downloads, service, management, and monitoring functions.

- USB port for firmware download and **supportsave** data.
- Serial console RJ45 port.
- 10/100/1000Base-T RJ45 Ethernet port for device management and configuration. This is an auto-sensing MDI port.

### NOTE

Half duplex operation is not supported at 10 or 100 Mbps speed.

- 10/100/1000Base-T RJ45 Ethernet port for service. This is an auto-sensing MDI port.
- 10 Gbps Base-T RJ45 Ethernet port (reserved for future use).

The two 10/100/1000 Mbps Ethernet ports are bound together as a single logical network interface. One port is selected as the active interface, while the other is select as the standby interface. All traffic is transmitted over the active port while no traffic is transmitted over the standby interface. If the primary Ethernet port fails (due to something other than power loss), the standby port becomes active and immediately takes over data transmission to retain link layer communication.

### NOTE

Connecting the CP blades to a private network or VLAN is recommended.

The blade contains a blue LED to indicate active CP status, green LEDs on Ethernet ports to indicate link and activity, and green and amber LEDs to indicate blade power and status.

A bright, white beacon LED is located just to the right of the blade power and status LEDs. You can enable this LED to illuminate on both CP blades so that you can easily locate the blades and chassis in an equipment rack. To enable or disable beaconing on both blades, log into the chassis and enter the **chassisbeacon** command as follows:

- To enable beaconing:

```
chassisX6:admin> chassisbeacon 1
chassisBeacon success 1
```

- To disable beaconing:

```
chassisX6:admin> chassisbeacon 0
chassisBeacon success 0
```

- To display beaconing status:

#### NOTE

Value in the following example shows 0 when beaconing is off and 1 if beaconing is on.


```
chassisX6:admin> chassisbeacon
Value = 0
```

For details on LED location and operation, refer to [Interpreting control processor blade LEDs](#) on page 106.

## CPX6 port identification

The following illustration identifies connector ports on the CPX6 blade.

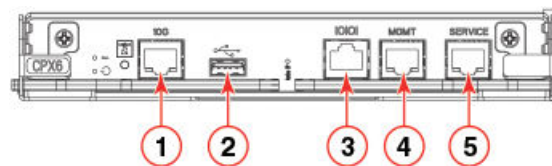FIGURE 58 CPX6 blade port identification



- |  |  |
|--|--|
| 1. 10 Gbps Base-T RJ45 Ethernet port (reserved for future use) | 4. 10/100/1000Base-T RJ45 Ethernet port for chassis management and configuration |
| 2. USB port for firmware download and logs                     | 5. 10/100/1000Base-T RJ45 Ethernet port for service                              |
| 3. Serial console RJ45 port                                    |  |

## Precautions specific to the blade

This document describes how to remove and replace a control processor (CP) blade. Each device has two CPX6 blades located in slots 1 and 2.

Observe the following precautions when replacing these blades:

- The CPX6 blade is compatible only with the Brocade X6 Director.
- Wear an appropriately grounded ESD wrist strap when handling and installing blades and cards. Follow electrostatic discharge (ESD) precautions. Wear a wrist grounding strap connected to chassis ground (if the chassis is plugged in) or a bench ground.
- Install CPX6 blades in slots 1 and 2, which are half the width of other slots in the device.
- The firmware upgrade policy for CP blades specifies testing for the current Fabric OS release and one version earlier. It is possible to upgrade by more than one version, but it is a very specific and detailed process. Read the directions under [Downloading firmware from USB device](#) on page 160 and [Downloading firmware from FTP server](#) on page 159 carefully.
- If the new CP blade does not have the same firmware as the active CP blade, the new blade must be upgraded to the same firmware version. After installing the new blade, you can determine the firmware version on the replacement blade and use the **firmwaresync** command to allow the active CP blade to copy current firmware to the replaced standby CP blade, if necessary. However, you must disable high availability (HA) before inserting the new blade.



**DANGER**

For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.

**CAUTION**

If you do not install a module or a power supply in a slot, you must keep the slot filler panel in place. If you run the chassis with an uncovered slot, the system will overheat.

**CAUTION**

Static electricity can damage the chassis and other electronic devices. To avoid damage, keep static-sensitive devices in their static-protective packages until you are ready to install them.

**CAUTION**

Before plugging a cable into any port, be sure to discharge the voltage stored on the cable by touching the electrical contacts to ground surface.

**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

## Blade fault indicators

Confirm that you need to replace the CP blade. The following events may indicate that a CP blade is faulty:

- The status LED on the CP blade is lit steady amber, or the power LED is not illuminated. Refer to [Interpreting control processor blade LEDs](#) on page 106 for details on interpreting LED operation.
- The CP blade does not respond to Telnet commands, or the serial console is not available.
- The **haShow** command indicates an error.
- The clock is inaccurate, or the CP blade does not boot up or shut down normally.
- Any of the following messages display in the error log:
  - "Slot unknown" message relating to a CP slot
  - CP blade errors or I2C timeouts
  - FRU: FRU\_FAULTY messages for a CP blade
  - Configuration loader messages or "Sys PCI config" messages
  - Generic system driver messages ("FABSYS")
  - Platform system driver messages ("Platform")
  - EM messages that indicate a problem with a CP blade
  - Function fail messages for the CP master

Refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference* for output examples and additional information on Fabric OS commands.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.

## Blade replacement task guide

This section contains a guide to more complete, detailed steps in this section for installing or replacing CP blades when the device is running (hot swap) or must be powered off (cold swap). References are provided to the more detailed blade removal and installation steps for further information.

## Replacing CP blade (hot-swap)

For hot-swap replacement, the chassis continues to operate while a CP blade is being replaced if the redundant CP blade is active and a failover does not occur. You can prevent failover by entering the **haDisable** command. You can replace one blade or both blades one at a time using these steps. Follow all steps for one blade, and then repeat the same steps to replace the other blade.

1. Prepare for replacing the blade by following all steps under [Preparing for replacement](#) on page 155.
2. Remove the blade from the slot by following all steps under [Removing a blade](#) on page 156.
3. Install a new blade into the empty slot by following all steps under [Installing a blade](#) on page 158.
4. Verify and synchronize firmware on both blades by following all steps under [Verifying and synchronizing firmware on blades](#) on page 159.

If you need to download firmware to update the blades, follow steps in one of the following sections:

- [Downloading firmware from FTP server](#) on page 159
  - [Downloading firmware from USB device](#) on page 160
5. Verify firmware installation by following all steps under [Completing the replacement](#) on page 164.
  6. Verify operation of replacement blade by following steps under [Verifying blade operation](#) on page 165.
  7. Repeat preceding steps to replace the other CP blade if necessary.

## Replacing a CP blade (cold-swap)

Use this procedure to replace CP blades after removing power to the device.

1. Prepare for replacing the blade by following all steps under [Preparing for replacement](#) on page 155.
2. Remove blade(s) following all steps under [Removing a blade](#) on page 162.
3. Install blade(s) following all steps under [Installing a blade](#) on page 163.
4. Verify firmware installation by following all steps under [Completing the replacement](#) on page 164.
5. Verify operation of replacement blade by following steps under [Verifying blade operation](#) on page 165.

## Time and items required for replacement

The replacement procedure for the CP blade takes approximately 30 minutes. The following items are required for the CP blade replacement:

- Electrostatic discharge (ESD) grounding strap
- Workstation computer
- Serial cable
- IP address of an FTP server for backing up the device configuration
- #1 Phillips screwdriver
- Replacement CP blade

## Preparing for replacement

Use the following steps to prepare the system for CP blade replacement by backing up the device configuration, connecting to the device with a serial connection, determining the active CP blade, failing over the blade to replace, determining the firmware version on the active blade, and uploading configuration data to the active blade.

1. Back up the device configuration before you replace a CP blade by uploading various device configuration files using a Telnet connection and saving them to a host computer. Before you upload a configuration file, verify that you can reach the FTP server from the device.

Perform the following steps:

- a) Enter the **configupload -all** command, specifying a file name for saving configuration data.  
This saves all system configuration data including chassis and switch configuration for all logical switches to the file name specified. For more information, refer to the *Brocade Fabric OS Command Reference*.
- b) Enter the **configupload -vf** command, specifying a file name, when prompted, for saving configuration data.  
This saves the backbone virtual fabric data to the file name specified. For more information, refer to the *Brocade Fabric OS Command Reference*.
- c) In a FICON environment, log in as root and enter **configupload --map** to upload port-to-area mapping information.  
Specify a folder name, when prompted.  
This command saves the port-to-area addressing mode configuration files to the folder specified. Be sure to upload the configuration using the **-map** option for a FICON-enabled device if port-bound addressing is used. For more information, refer to the *Brocade Fabric OS Command Reference*.

2. Connect to the device and log in as **admin**, using a serial console connection.
3. Enter **haShow** to determine which CP blade is active.

```
Chassis 1:admin> haShow
Local CP (Slot 1, CP1) : Active
Remote CP (Slot 2, CP0) : Standby, Healthy
HA Enabled, Heartbeat Up, HA State Synchronized
```

4. Enter all remaining commands from the serial console for the active CP blade, unless otherwise indicated. For more information about commands, refer to the *Brocade Fabric OS Command Reference*.
5. If the active CP blade is faulted, automatic fail over to the standby CP blade should have occurred. Perform the following steps:
  - a) Confirm that the standby CP blade is active using the **haShow** command.
  - b) Power off the faulted CP blade by loosening the captive screws on both ejector handles on the blade using a #1 Phillips screwdriver. This disconnects power from the blade. The spring-loaded captive screws will pop out from the slot .63 cm (.25 in.) when fully disengaged.
  - c) Log into the now active CP blade.
  - d) Skip to step 8.

If automatic fail over has not occurred, manually fail over the faulty blade by loosening the captive screws on both ejector handles. As the screws loosen, the blade fails over and the amber status LED will illuminate. Log into the standby CP blade, and skip to step 8.

6. If both CP blades are healthy and you want to replace the standby CP blade, log in to the active CP blade and skip to step 8.

7. If both CP blades are healthy and you want to replace the active CP blade, log in to the active CP blade and run the following steps:
  - a) Run the **haFailover** command to make the standby CP blade the active blade. The currently active CP blade becomes the standby blade. Wait until the status LED on the currently active CP blade is no longer illuminated.
  - b) Confirm the completion of the failover by running the **haShow** command.
  - c) Log in to the new active CP blade.
8. Run **firmwareShow** to note the firmware version of the active CP blade.

The **firmwareshow** command will display a warning message if the firmware versions on the two CP blades are not the same.

```
WARNING: The local CP and remote CP have different versions
of firmware, please retry firmwaredownload command.
Chassis_1:root>
```

9. Run **haDisable** from the active CP blade to prevent failover or communication between the CP blades during the replacement.

## Replacing a CP blade

Use the following procedures in this section to replace CPX6 blades:

- Hot swap procedure. Use this procedure to replace a single CP blade or both CP blades, one at a time, while the device power is on. The device continues to operate while replacing a blade if the redundant blade is active and failover does not occur.
- Cold swap procedure. Use this procedure to replace CP blades after removing power to the device.

### Hot-swap procedure

Use this procedure to replace CP blades, one at a time, while the device power is on. The device continues to operate while replacing a blade if the redundant blade is active and failover does not occur. You can prevent failover by entering the **haDisable** command.

To replace both CP blades with power off, refer to the cold-swap replacement procedures.

### Removing a blade

Complete the following steps to remove a CP blade.

#### NOTE

The chassis continues to operate while a CP blade is being replaced if the redundant CP blade is active and a failover does not occur. You can prevent failover by entering the **haDisable** command.

1. Remove the chassis door.
2. Log in to the active CP as the admin user. You can use a serial cable or Telnet, Web Tools, or Fabric Manager. Determine which CP is active using the **haShow** command or view the active LED on the front of the CP.
3. Perform one of the following steps to ensure that the faulty blade is the standby blade.
  - If the faulty blade is the standby CP blade, skip to step 4.
  - If the faulty blade is the active CP blade, issue the **haFailover** command. Wait until the failover has completed. Use the **haShow** command to verify the CPs are synchronized and the failover is complete.

Depending on the nature of the failure, it is possible that the **haFailover** command may not work. Proceed to the next step anyway.

4. Enter the **haDisable** command. This is required before physically removing and replacing a CP blade.
5. Disconnect all cables from the faulty (standby) CP blade.
6. Loosen the captive screws for both ejector handles on the blade using a #1 Phillips screwdriver.

Loosening the screws initiates a hot-swap request and disconnects power from the blade. The spring-loaded captive screws will pop out from the slot .63 cm (.25 in.) when fully disengaged. Do not eject the blade using blade handles until screws disengage from slot and the power LED is off.

7. Grasp both ejector handles and simultaneously pull them away from the center of the blade using equal pressure to approximately 45 degrees (fully open).

As you move the handles, you will hear connectors disengaging from the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane. The blade will move out approximately 1.27 cm (.5 in.) from the slot when fully disengaged.

8. Pull the blade out from the slot slightly using the ejector handles until you can grasp the blade edges with your hands. Make sure that the blade has cooled sufficiently to touch.




#### CAUTION

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

9. Continue pulling the blade from the slot by the blade edges. As you slide out the blade, place one hand under it for support. Do not support the blade by the injector handles after removal.

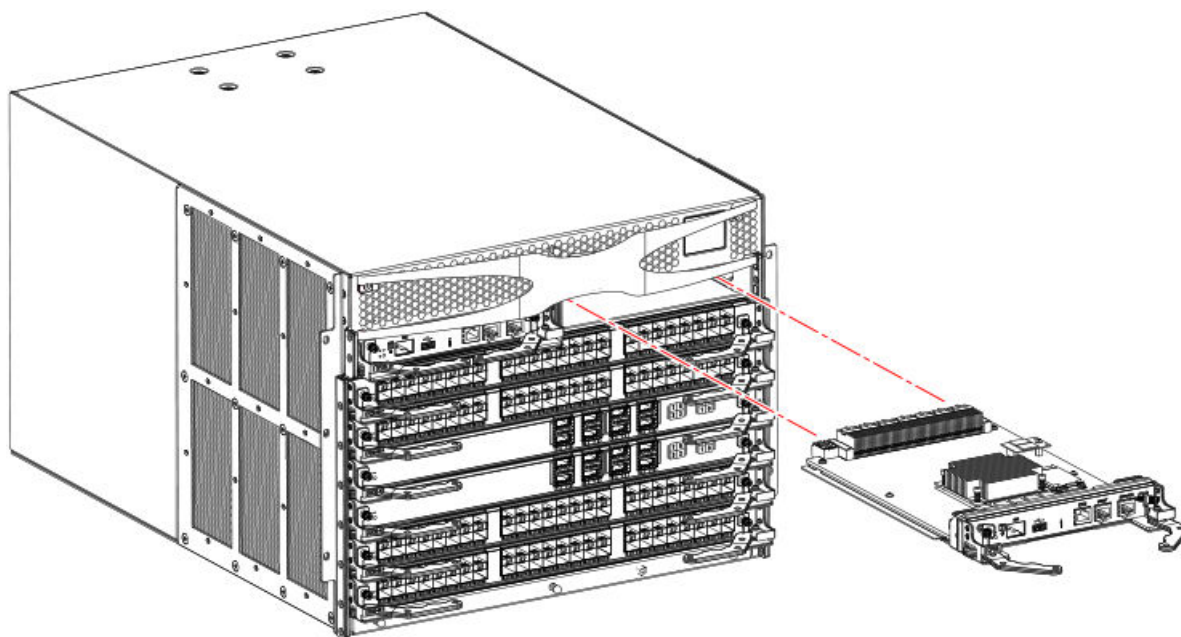**FIGURE 59** Removal and replacement of the control processor blade (CPX6)



10. If the blade is not being replaced by another blade, install a filler panel and reinstall the chassis door. The filler panel is required for proper chassis cooling. The door is required to meet EMI compliance.

## Installing a blade

### NOTE

Read all of the instructions for replacing the CP blade before beginning the procedure. Make sure that the same version of Fabric OS is installed on both CP blades. Using different versions is not supported and may cause malfunctioning. If the replacement CP blade has a different version of Fabric OS, bring both blades to the same firmware version. Once you have installed the replacement CP blade, determine the version of firmware on the replacement CP blade and upgrade it if necessary.

Complete the following steps to install a CP blade.

1. If a protective sleeve is covering the blade connectors remove the sleeve.
2. Rotate the ejector handles away from center of blade completely - approximately 45 degrees. Do not support the blade using ejector handles. Orient the blade so that the handles are toward you and the flat metal side is facing down.
3. Follow these steps to insert the blade into the slot.
  - a) Align the blade in the slot with the flat metal side of the blade at the bottom (blade power and status LEDs are on the left).
  - b) Carefully push the blade into the slot using your thumbs or fingers on the blade faceplate.



### CAUTION

**To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.**

When the blade face is about 2.54 cm (1 in.) from the chassis, you should feel resistance as the blade connectors meet the backplane connectors.

- c) Continue pushing with your thumbs or fingers until the ejectors move in towards the blade slightly indicating that the connectors are engaged.
- d) Simultaneously push both ejector handles in towards the blade center with even pressure until the blade completely seats in the slot.

### NOTE

As you move the handles, you will hear connectors engaging the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane.

4. Tighten the captive screw for each ejector using a #1 Phillips screwdriver.

As blade seats completely, amber blade status and green blade power LEDs illuminate.

### NOTE

Be sure that captive screws are tightened. If not, high pressure from fan operation may unseat blade from chassis connectors.

5. Observe the blade power and status LEDs and verify the following:
  - a) The amber status LED on the blade illuminates until POST completes for the blade. The LED remains amber until the blade has gained sync with the active CP. This can take a few minutes to complete depending on the configuration. If the status LED remains amber for an extended period, the board may not be properly seated in the backplane or the board may be faulty.
  - b) The power LED on the port blade should displays a steady green. If it does not turn on, ensure that the blade is firmly seated and blade ejector screws are tightened.
6. Connect the cables to the new CP blade.
7. Remain logged in to the active CP and continue to [Verifying and synchronizing firmware on blades](#) on page 159.

## Verifying and synchronizing firmware on blades

At this point, the active blade is up and running. The replacement blade is the standby blade. To verify that boot and POST are complete on a newly installed CP blade, that the CP blade has achieved failover redundancy, and that firmware levels are synchronized on the installed blades, perform the following steps.

1. Enter **slotShow**. The command output shows the new CP blade as "enabled."  
If the standby CP is unresponsive, you can try unplugging the new CP blade, running **haDisable** on the active CP blade, and plugging the new CP blade back in. At that point, you can repeat step 1 to begin the verification process again.
2. Log into each CP blade and enter the **haShow** command to display the CP status. Verify the CP state, status, health, and that the HA state is synchronized. Remedy any issues before proceeding. For more information on **haShow** output, refer to the *Brocade Fabric OS Command Reference*.
3. Determine the firmware version of installed CP blades by entering **firmwareShow**. If the serial console on the replacement CP blade is connected, issue the **firmwareShow** command there. More information is available through the console.
4. If the firmware versions for both CP blades are the same, skip to [Completing the replacement](#) on page 164.

If the firmware version on the replacement (standby) blade does not match that on the active CP blade, a warning message appears with the results of the **firmwareshow** command.

```
WARNING: The local CP and remote CP have different versions
of firmware, please
```

5. Bring the replacement blade firmware to the same firmware level as the active blade using one of the following procedures:
  - Run the **firmwaresync** command on the active CP blade to copy all firmware from the active CP blade to the standby CP blade.

### NOTE

Using this command requires that existing telnet, secure telnet, or SSH sessions to the standby CP blade to be restarted.

- Run the **firmwareDownload -s** command or **firmwaresync** command (if versions are compatible) to update firmware on the replacement blade to bring it up to the proper level.
6. Perform one of the following tasks to download firmware:
    - If you are using an FTP server to download the firmware, skip to the procedure for downloading firmware from an FTP server.
    - If you are using a USB device to download the firmware, skip to the procedure for downloading firmware from a USB device. If the firmware on the standby CP blade is more than one level down from the level on the active CP blade, you must have formatted USB devices for each of the versions you will need to upgrade.

For details on supported upgrade paths and steps to upgrade through multiple versions of Fabric OS, refer to the *Fabric OS Release Notes*, and the *Brocade Fabric OS Upgrade Guide*.

## Downloading firmware from FTP server

For this task, determine the correct sequence of upgrading firmware versions to reach your target version.

Complete the following steps to download the firmware from an FTP server to the replacement blade.

1. Log in to the standby CP blade as **admin**. If you need to know the IP address of the standby blade, run **ipaddrshow**.  
You should remain logged in to the active CP blade in order to monitor it.

2. Run **firmwareDownload -s** to download the firmware to the replacement (standby) CP blade. The **-s** option also disables the autoreboot, so you will have to manually issue a reboot after the download finishes to initiate **firmwarecommit**. Enter all requested information (use default values).
3. When the download process finishes, run **firmwareDownloadStatus** to verify that the firmware has been updated. The command displays a running account of the progress of the **firmwareDownload** command (if it is still running) until the command has completed. The final message is similar to the following and will appear with a date and time stamp.

```
Slot 1 (CP0, active): Firmwaredownload command has completed successfully. Use firmwareshow to
verify the firmware versions.
```

4. On the standby CP blade (the blade for which you just changed the firmware level), run **reboot**. The reboot of the standby CP will initiate a **firmwarecommit** to the secondary partition and log you out.

```
Chassis_1:admin> reboot
Broadcast message from root (ttyS0) Fri Jun 17 14:49:45 2016...
The system is going down for reboot NOW !!
INIT: Switching to runlevel: 6
INIT: Sending processes the TERM signal Chassis_1:admin> HAMu Heartbeat down, stop FSS
Unmounting all f##exiting due to signal: 9, pending signals: 0x20000, 0x0
ilesystems.
Please stand by while rebooting the system...
Restarting system.
The system is coming up, please wait...
.
.
.
Fri Jun 17 14:53:13 2016: Doing firmwarecommit now.
Please wait ...
Fri Jun 17 14:55:27 2016: Firmware commit completes successfully.
Validating the filesystem ...
Fri Jun 17 22:36:05 2016: Doing firmwarecommit now.
Please wait ...
Fri Jun 17 22:36:48 2016: Firmware commit completes successfully.
2016/06/17-14:56:50, [SULB-1004], 908, SLOT 2 | CHASSIS, INFO, Brocade_X6, Firmwarecommit has
completed.
2016/06/17-14:56:50, [SULB-1036], 909, SLOT 2 | CHASSIS, INFO, Brocade_X6, The new Version: Fabric
OS [version]
2016/06/17-14:56:50, [SULB-1002], 910, SLOT 2 | CHASSIS, INFO, Brocade_X6, Firmwaredownload command
has completed successfully.
```

5. Log back in to the standby CP blade and run **firmwareDownloadStatus** on the standby CP blade to validate a successful commit. This may take 10 minutes.
6. If you are upgrading through several levels of the Fabric OS, repeat step 2 through step 5 as often as necessary based on the path outlined in the preceding table. Otherwise, proceed to step 7.
7. Log out of the standby CP blade and log in to the active CP blade.
8. Proceed to the procedures for verifying operation of the new CP blade.

## Downloading firmware from USB device

For this task, determine the correct sequence of upgrading firmware versions to reach your target version.

This section assumes that the new firmware has already been copied onto the USB device. The folder structure on the USB device must be as follows in order to allow the device to be enabled:

- brocade>
  - config
  - firmware (Contains the specific release you are installing)
  - firmwareKey
  - support



Complete the following steps to download the firmware from a USB device to the replacement blade.

1. Insert the USB device into the active CP blade.
2. Attach a serial cable from the PC to the active CP blade.
3. Log in to the active CP blade as **admin** if you are not still logged in and enter **usbStorage -e** to enable the USB device.
4. Remove the serial cable from the active CP blade and attach it to the standby CP blade and log in as **admin**.
5. Run **firmwareDownload -s** to download the firmware to the standby CP blade. Enter all requested information. The **-s** option disables the autoreboot, so you will have to manually issue a reboot after the download finishes to initiate **firmwarecommit**. Use all default values, except use USB [Y] so that USB will be used for downloading.
6. When the download process finishes, run **firmwareDownloadStatus** to verify that the firmware has been updated. The command displays a running account of the progress of the **firmwareDownload** command until the command has completed. The final message is similar to the following and will appear with a date and time stamp.

```
Slot 1 (CP0, active): Firmwaredownload command has completed successfully. Use firmwareshow to
verify the firmware versions.
```

7. Ensure that you are still logged in to the standby CP blade (the blade for which you just changed the firmware level) and type **reboot**. The reboot of the standby CP will initiate a **firmwarecommit** to the secondary partition and log you out.

```
Chassis_1: admin> reboot
Broadcast message from root (ttyS0) Fri Jun 17 14:49:45 2016...
The system is going down for reboot NOW !!
INIT: Switching to runlevel: 6
INIT: Sending processes the TERM signal Chassis_1:admin> HAMu Heartbeat down, stop FSS
Unmounting all ##exiting due to signal: 9, pending signals: 0x20000, 0x0
ilesystems.
Please stand by while rebooting the system...
Restarting system.
The system is coming up, please wait...
.
.
.
Fri Jun 17 14:53:13 2016: Doing firmwarecommit now.
Please wait ...
Fri Jun 17 14:55:27 2016: Firmware commit completes successfully.
Validating the filesystem ...
Fri Jun 17 22:36:05 2016: Doing firmwarecommit now.
Please wait ...
Fri Jun 17 22:36:48 2016: Firmware commit completes successfully.
2016/06/17-14:56:50, [SULB-1004], 908, SLOT 2 | CHASSIS, INFO, Brocade_X6, Firmwarecommit has
completed.
2010/06/17-14:56:50, [SULB-1036], 909, SLOT 2 | CHASSIS, INFO, Brocade_X6, The new Version: Fabric
OS [version]
2010/06/17-14:56:50, [SULB-1002], 910, SLOT 2 | CHASSIS, INFO, Brocade_X6, Firmwaredownload command
has completed successfully.
```

#### NOTE

The time stamp on the co-CPU may not be in sync with the main CPU on the blade. This is not a cause for concern.

8. Log back in to the standby CP blade and enter **firmwareDownloadStatus** on the standby CP blade to validate a successful commit. This may take 10 minutes.
9. If you are upgrading through several levels of the Fabric OS, repeat step 5 through step 8 as often as necessary based on the path outlined in the preceding table. Otherwise, proceed to step 10.
10. Log out of the standby CP blade and log in to the active CP blade.
11. Proceed to the procedures to "Completing the replacement."

## Cold-swap procedure

Use this procedure to replace both CP blades while the device power is off. You must power off the device to replace both CP blades. To replace a single blade, refer to the hot-swap replacement procedures.

### Removing a blade

Use the following procedure to power down the device and remove CP blades. You can replace a single CP blade or both blades one at a time using the hot-swap procedure.

1. Be sure to perform all steps under [Preparing for replacement](#) on page 155.
2. Power down the device.
3. Remove the chassis door.
4. Disconnect all cables from the CP blades.
5. Loosen the captive screws for both ejector handles on the blade using a #1 Phillips screwdriver.  
Loosening the screws initiates a hot-swap request and disconnects power from the blade. The spring-loaded captive screws will pop out from the slot .63 cm (.25 in.) when fully disengaged. Do not eject the blade using blade handles until screws disengage from slot and the power LED is off.
6. Grasp both ejector handles and simultaneously pull them away from the center of the blade using equal pressure to approximately 45 degrees (fully open).  
As you move the handles, you will hear connectors disengaging from the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane. The blade will move out approximately 1.27 cm (.5 in.) from the slot when fully disengaged.
7. Pull the blade out from the slot slightly using the ejector handles until you can grasp the blade edges with your hands. Make sure that the blade has cooled sufficiently to touch.




#### CAUTION

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

8. Continue pulling the blade from the slot by the blade edges. As you slide out the blade, place one hand under it for support. Do not support the blade by the injector handles after removal.

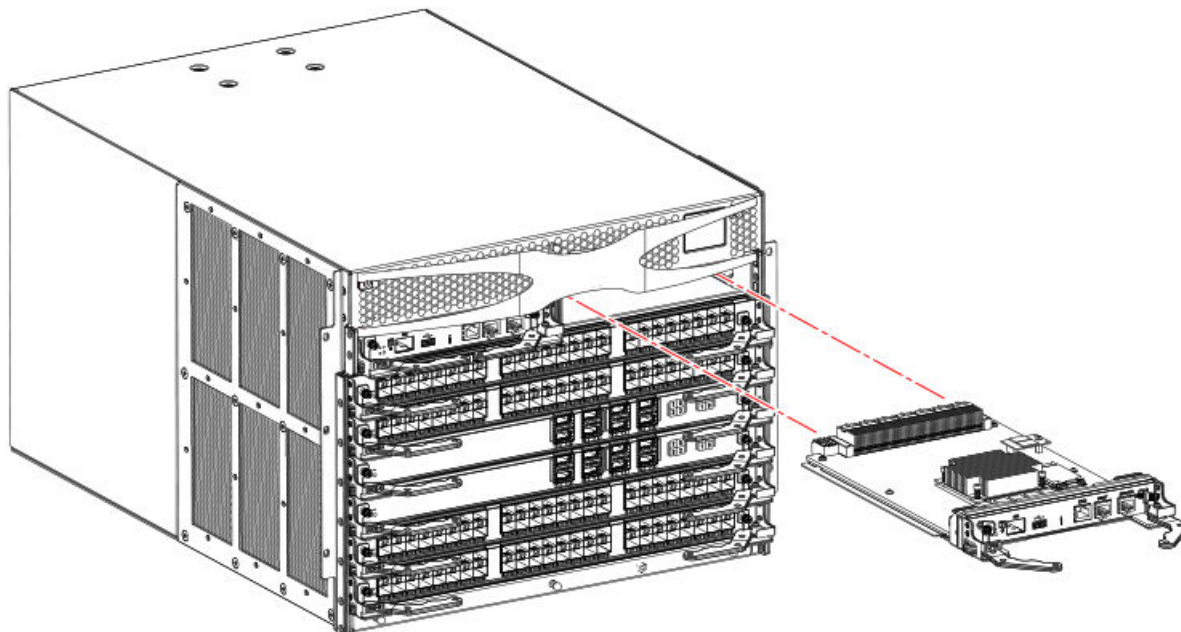**FIGURE 60** Removal and replacement of the control processor blade (CPX6)



9. If the blade is not being replaced by another blade, install a filler panel and reinstall the chassis door. The filler panel is required for proper chassis cooling. The door is required to meet EMI compliance.

## Installing a blade

Use the following steps to install both CP blades when the device power is off (cold-swap procedure).

1. Rotate the ejector handles away from center of blade completely - approximately 45 degrees. Do not support the blade using ejector handles. Orient the blade so that the handles are toward you and the flat metal side is facing down.
2. Follow these steps to insert each blade into the slot.
  - a) Align the blade in the slot with the flat metal side of the blade at the bottom (blade power and status LEDs are on the left).
  - b) Carefully push the blade into the slot using your thumbs or fingers on the blade faceplate.



### CAUTION

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

When the blade face is about 2.54 cm (1 in.) from the chassis, you should feel resistance as the blade connectors meet the backplane connectors.

- c) Continue pushing with your thumbs or fingers until the ejectors move in towards the blade slightly indicating that the connectors are engaged.
- d) Push the ejector handles fully in towards the blade to seat it completely in the slot.

As you move the handles, you will hear connectors engaging the backplane connector and possibly a slight popping noise. This is normal and is due to the dense backplane.

3. Tighten the captive for each ejector using a #1 Phillips screwdriver.

**NOTE**

Be sure that captive screws are tightened. If not, high pressure from fan operation may unseat blade from chassis connectors.

4. Power up the device.
5. Connect the cables to the new CP blades.
6. Enter **chassisDisable**.
7. Enter **configDownload -vf** to download device virtual fabric data to the local system.  
The device reboots and partitions are restored.
8. Enter **chassisDisable**.
9. Enter **configDownload -map** to download port-to-area addressing mode configuration files to the local system.
10. Power-cycle the chassis.  
The system recovers.
11. Enter **chassisDisable**.
12. Enter **configDownload -all** to download system configuration data, including chassis and switch configuration for all logical switches, to the local system.  
All the licenses, configurations, and FCIP tunnels are restored.
13. Enter **reboot**.  
The device becomes fully functional with the new CP blades.
14. Verify that each blade's power LED is green. If not, ensure that the CP blade has power and is firmly seated and that the ejectors are in the locked position.

## Completing the replacement

Complete the following steps to complete the CP blade replacement procedure.

1. Enter **haEnable** to re-enable HA on the active CP blade.

**NOTE**

The **haEnable** command will cause the standby CP blade to reboot. Wait until POST completes before moving to the next step. POST is complete when the status LED on the CP blade returns to a steady green state.

2. Enter **haShow** and verify that the command output includes "HA Enabled, Heartbeat Up". If it is not yet enabled, re-enter the command until you have verified that redundancy is achieved.

**NOTE**

The **haEnable** command will cause the standby CP blade to reboot.

```
Chassis_1:admin> hashow
Local CP (Slot 2, CP1) : Active
Remote CP (Slot 1, CP0) : Standby, Healthy
HA Enabled, Heartbeat Up, HA State Synchronized
```

3. Enter **firmwareShow** to verify that the firmware version has been updated and that the versions are the same on the two CP blades.

```
X6chassis:admin> firmwareshow -v
```

Slot	Name	Appl	Primary/Secondary Versions	Status
1	CP0	FOS	v8.0.1	STANDBY
2	CP1	FOS	v8.0.1	ACTIVE *
3	SX6	FOS	v8.0.1	
4	SX6	FOS	v8.0.1	
7	SX6	FOS	v8.0.1	
8	SX6	FOS	v8.0.1	

If you have one or more port or extension blades in the device, the Fabric OS automatically detects mismatches between the active CP firmware and the blade's firmware and triggers the auto-leveling process. This auto-leveling process automatically updates the application blade firmware to match the active CP blade. At the end of the auto-leveling process, the active CP and extension blades will run the same version of the firmware.

4. Enter the **chassisEnable** command to enable all user ports in the chassis and enable a virtual, fabric-aware chassis.
5. Replace the chassis door. The door is required to meet EMI compliance.
6. Pack the faulty CP blade in the packaging provided with the new CP blade, and contact the switch supplier to determine the return procedure.

## Verifying blade operation

Perform the following tasks to verify operation of new blade:

1. Check the LED indicators on the blade's front panel. For information on interpreting LED patterns, refer to [Interpreting control processor blade LEDs](#) on page 106.
2. Enter the following commands and note any error conditions:
  - **slotShow** - Displays the current data on each slot in the system, including blade type, blade ID, status, Brocade model name, and power usage.
  - **haShow** - Displays control processor (CP) status.
  - **tempShow** - Displays temperature reading of blades.
  - **sensorShow** - Displays temperature reading of blades with fan and power supply status.
  - **errDump** - Displays the entire system error log.
  - **errShow** - Displays error log messages one at a time.

Refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference* for output examples and additional information on Fabric OS commands.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.



# WWN Cards

---

• WWN card overview.....	167
• Precautions specific to WWN cards.....	168
• WWN card fault indicators.....	169
• WWN card replacement task guide.....	170
• Time and items required for replacement.....	170
• Using the <code>wwnrecover</code> utility.....	171
• Preparing for WWN card replacement.....	171
• Hot-swap replacement.....	173
• Cold-swap replacement.....	174
• Removing the WWN card and bezel.....	176
• Configuring airflow direction on WWN cards.....	177
• Verifying WWN card operation.....	178

## WWN card overview

Two WWN cards are located behind the WWN bezel (logo plate) between the power supplies on the nonport side of the device. WWN 1 is located on the left side and WWN is located on the right side. The WWN cards store critical configuration data, such as WWN, IP addresses, part and serial numbers, and license IDs for the device.

Identical data must be maintained on each WWN card at all times so that if one card fails, the system can use the other card to provide valid system operation. To maintain data and ensure its integrity, the system audits both WWN cards one hour after the first system boot-up, every 24 hours after boot-up, and any time a WWN card is inserted to compare the critical data.

If a data mismatch is detected during the audit, messages in the RASlog will provide a summary of all errors detected and prompt you through a data recovery process. The **wwnrecover** utility permits a recovery of WWN card data in the event of corruption. The data recovery mechanism may vary depending on the error encountered and the data being compared. Problems such as a mismatch between license IDs cannot be fixed with **wwnrecover**, and the output will direct you to call Brocade Technical Support. For other problems, running **wwnrecover** can pinpoint the problem and, in some cases, permit you to fix it. Mismatched data can be resolved, and corrupt data can sometimes be recovered. For more information on the **wwnrecover** utility, refer to [Using the wwnrecover utility](#) on page 171.


### NOTE

The device will operate with one WWN card, but will be in degraded condition. If you have removed a card, be sure to replace as soon as possible.

## WWN card location and numbering

WWN card are located behind the WWN bezel (logo bezel) on the nonport side of the device between the power supplies. The bezel must be removed to access the card trays. The following figure illustrates WWN card location and numbering.

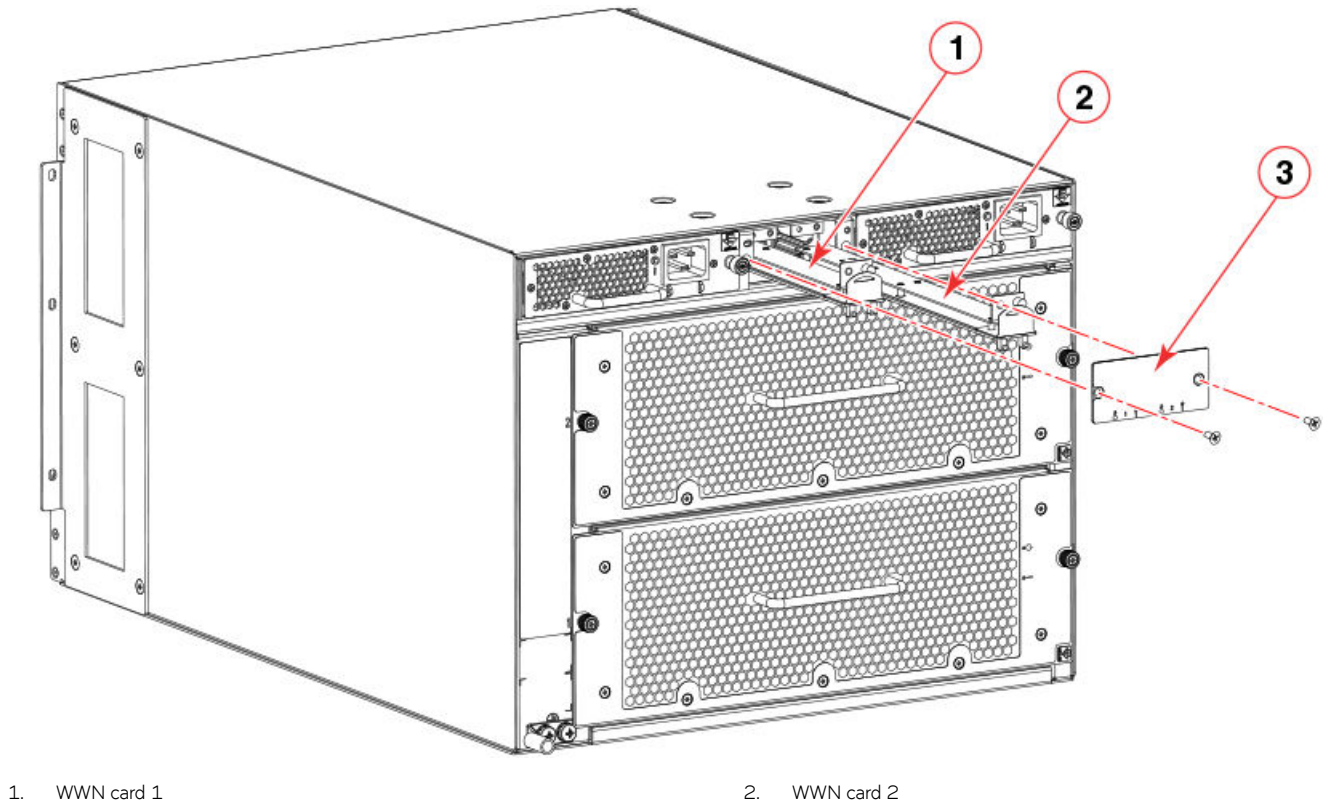FIGURE 61 WWN card location and numbering



## Precautions specific to WWN cards

Observe the following precautions for these cards:

- Wear an appropriately grounded ESD wrist strap when handling and installing device blades and cards. Follow electrostatic discharge (ESD) precautions. Wear a wrist grounding strap connected to chassis ground (if the chassis is plugged in) or a bench ground.
- The device will operate with one WWN card, but will be in degraded condition. If you have removed a card, be sure to replace as soon as possible.

### NOTE

Do not use steps in the WWN card and WWN card bezel removal procedures to disable logical switches and power down the device.



### DANGER

*For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.*



### CAUTION

Static electricity can damage the chassis and other electronic devices. To avoid damage, keep static-sensitive devices in their static-protective packages until you are ready to install them.



# WWN card fault indicators

Before replacing a WWN card, verify that the replacement is necessary. Any of the following events can indicate that cards require replacement:

- RASlog messages may occur during periodic WWN card audit routines alerting you of data or license mismatches between WWN cards and other errors. Some of these messages may direct you to contact technical support or to run the **wwnrecover** command. You can use this command to further verify or to fix problems. If an EM-1220 or EM-1222 error message occurs due to WWN card data corruption or data mis-matches across WWN cards, data recovery may be possible using this command. For more information on using **wwnrecover**, refer to [Using the wwnrecover utility](#) on page 171. If recovery is not possible, command output will direct you to replace the affected card(s).
- Status LEDs on the WWN bezel do not reflect the actual status of the WWN cards or indicate a problem. For information on interpreting LED patterns, refer to [Interpreting WWN card LEDs](#) on page 109. Note that the LED patterns may temporarily change during POST and other diagnostic tests.
- Problems viewing or modifying the data stored on the WWN card.
- Error messages regarding WWN units in **chassisshow** output.

Error messages that may indicate problems with a WWN card are summarized in the following table.

**TABLE 25** Messages that may indicate WWN card failure

Type of message	Sample error message
WWN unit fails its field-replaceable unit (FRU) header access.	0x24c (fabos): Switch: switchname, error EM-I2C_TIMEOUT, 2, WWN 1 I2C timed out: state 0x4
WWN unit fails to power on.	<timestamp>, [EM-1004], <sequence-number>, CRITICAL, <system-name>, WWN # failed to power on<timestamp>, [EM-1043], <sequence-number>, WARNING, <system-name>, Can't power <FRU Id> <state (on or off)>.
WWN unit is being faulted.	0x24c (fabos): Switch: switchname , Critical EM-WWN_UNKNOWN, 1, Unknown WWN #2 is being faultedor<timestamp>, [EM-1003], 40, SLOT 7   FFDC   CHASSIS, CRITICAL, Brocade_Chassis, WWN 2 has unknown hardware identifier: FRU faultedor<timestamp>, [EM-1034], <sequence-number>, ERROR, <system-name>, WWN # set to faulty, rc=<return code>
WWN unit is not present or is not accessible.	0x24c (fabos): Switch: switchname, Error EM-WWN_ABSENT, 2, WWN #1 not presentor<timestamp>, [EM-1036], <sequence-number>, WARNING, <system-name>, <FRU Id> is not accessible.
Writing to the FRU history log ( <b>hilSetFruHistory</b> ) has failed.	0x24c (fabos): Switch: switchname, Error EM-HIL_FAIL, 2, HIL Error: hilSetFruHistory failed, rc=-3 for SLOT 3

# WWN card replacement task guide

This section contains a guide to more complete, detailed steps in this section for installing or replacing WWN cards when the device is running (hot swap) or must be powered off (cold swap). References are provided to the more detailed WWN removal and installation steps for further information.

## Replacing WWN cards (hot-swap)

Use this procedure to replace WWN cards with system power on. You can use this procedure to replace one WWN card assembly at a time while power is on. To replace both cards, follow all steps for one card, and then repeat the same steps to replace the other card assembly.

1. Save settings and system data and order replacement WWN card(s) by following all steps under [Preparing for WWN card replacement](#) on page 171.
2. Replace a card by following all steps under [Hot-swap replacement](#) on page 173. Repeat these steps to replace the second WWN card if necessary.
3. If RASlog messages indicate a mismatch between fan and system airflow direction, follow steps under [Configuring airflow direction on WWN cards](#) on page 177
4. Verify WWN card operation using steps under [Verifying WWN card operation](#) on page 178.

## Replacing WWN cards (cold-swap)

Use this procedure to replace WWN cards with system power off. You can use this procedure to replace one or both WWN cards.

1. Save settings and system data and order replacement WWN card(s) by following all steps under [Preparing for WWN card replacement](#) on page 171.
2. Replace card(s) by following all steps under [Cold-swap replacement](#) on page 174.
3. If RASlog messages indicate a mismatch between fan and system airflow direction, follow steps under [Configuring airflow direction on WWN cards](#) on page 177
4. Verify WWN card operation using steps under [Verifying WWN card operation](#) on page 178.

## Time and items required for replacement

If there is a need to replace one or both WWN cards, allow approximately 20 minutes. Refer to [Using the wwnrecover utility](#) on page 171 and [WWN card fault indicators](#) on page 169 before replacement.

The following items are needed to replace the WWN cards:

- Electrostatic discharge (ESD) grounding strap
- #1 Phillips screwdriver
- Workstation computer

## Using the **wwnrecover** utility

The **wwnrecover** utility permits a recovery of WWN card data in the event of corruption. Recovery is not possible if hardware issues prevent access to either WWN card or if the primary and backup copy of the license ID on either card is corrupted.

Identical data must be maintained on each WWN card at all times so that if one card fails, the system can use the other card to provide valid system operation. To maintain data and ensure its integrity, the system audits both WWN cards one hour after the first system boot-up, every 24 hours after boot-up, and any time a WWN card is inserted to compare the critical data.

If a data mismatch is detected during the audit, messages in the RASlog will provide a summary of all errors detected and prompt you through a data recovery process. The data recovery mechanism may vary depending on the error encountered and the data being compared. Problems such as a mismatch between license IDs cannot be fixed with **wwnrecover**, and the output will direct you to call Brocade Technical Support. For other problems, running **wwnrecover** can pinpoint the problem and, in some cases, permit you to fix it. Mismatched data can be resolved, and corrupt data can sometimes be recovered.

The following table lists RASlog messages that can occur during the WWN card audit routine.

**TABLE 26** RASlog messages from WWN card audit

Error message	Issue
[EM-1220]...M1, ERROR ... A problem was found on one or both CID cards (x), please run the <b>wwnrecover</b> tool to get more information and recovery options.	Some kind of error or mismatch has been detected in the WWN card audit.
[EM-1221], ... M1, INFO, ... A WWN card has been inserted, a WWN verification audit will be run to detect any mismatches or other problems.	A second WWN card is enabled and the WWN card audit will be run. If an error is detected during the audit, EM-1220 and EM-1222 messages are generated.
[HIL-1650], CHASSIS, ERROR...Unable to detect WWN card in chassis. Access to WWN halted...	WWN card has been removed from the device. Replace as soon as possible since system is in degraded state.
[EM-1222], ... M1, WARNING, ... A WWN card access problem has been encountered, please run the <b>wwnrecover</b> tool to get more information and recovery options.	An error is detected during normal access to the WWN cards; typically, one of the cards is corrupted or inaccessible.
Recovery is not possible. Please contact Brocade Technical Support for replacement of the corrupted or inaccessible WWN(s).	The license ID on the two WWN cards do not match.

The **wwnrecover** utility must be used to maintain data integrity when replacing one or both WWN cards using instructions in the WWN card removal and replacement section. To run **wwnrecover**, log in as admin and enter the following command:

```
switch:admin# wwnrecover
```

For more information on **wwnrecover** and command syntax, refer to the *Brocade Fabric OS Command Reference*.

## Preparing for WWN card replacement

If the WWN cards require replacement, complete the following steps. Follow electrostatic discharge (ESD) precautions.

1. Open a Telnet session to the device and log in to the active CP blade as admin. The default password is "password".
2. Verify that you are logged in to the active CP blade. Run the **haShow** command to determine the active CP blade.
3. Run the **supportSave** command on the active CP blade to capture all settings. These settings will be referenced to verify the settings have been correctly programmed after WWN replacement.

4. Run the following commands on the device before replacing the cards so that the data can be verified after the replacement:

- **licenseidshow**
- **ipaddrshow**
- **switchname**
- **chassisname**
- **wwncardshow ipdata**
- **chassisshow** (look at the WWN and chassis information at the bottom)
- **ficonshow switchrnid** (FICON/mainframe environments only)
- **configupload -all**
- **configupload -vf**

The factory serial number and the sequence number in the following output from the **chassisShow** command should match. In the **ficonshow switchrnid** output, a sequence number indicates the logical switch number, if virtual fabrics is enabled:

```
switch:FID128:admin> chassisshow
<output truncated>
WWN Unit: 1
System AirFlow:      Non-portside Intake
Header Version:      2
Power Consume Factor: -1W
Factory Part Num:     60-1003194-02
Factory Serial Num:   DZH0331L039
Manufacture:          Day:  3  Month: 10  Year: 15
Update:               Day:  0  Month:  0  Year:  0
Time Alive:           24 days
Time Awake:           0 days

WWN Unit: 2
System AirFlow:      Non-portside Intake
Header Version:      2
Power Consume Factor: -1W
Factory Part Num:     60-1003194-02
Factory Serial Num:   DZH0331L032
Manufacture:          Day:  3  Month: 10  Year: 15
Update:               Day:  0  Month:  0  Year:  0
Time Alive:           24 days
Time Awake:           0 days

Chassis Factory Serial Num: AFY2530G00S

switch:admin> ficonshow switchrnid
{
  {Switch WWN          Flag Parm
   10:00:00:05:1e:95:b1:00 0x00 0x200a00
   Type number:           SLKWRM
   Model number:          DCX
   Manufacturer:          BRD
   Plant of Manufacture:  CA
   Sequence Number:    0AFX2533G001
   tag:                   b6ff
  }
}
```

5. Contact Brocade Technical Support for replacement of WWN cards. Brocade Support will request the partner or OEM to send WWN cards from FRU inventory to the nearest Brocade Support office to be reprogrammed. Brocade Support will require the **Supportsave** data taken in the previous step so that the replacement cards can be reprogrammed prior to shipping to the partner or your site. If Brocade support has determined that both WWN cards need replaced, you must replace both WWN cards as a matched pair.

# Hot-swap replacement

You may replace one WWN card assembly at a time with the system powered on using the following steps to avoid interruption of system operation.

Use this procedure if Brocade Customer Support has determined that a WWN card needs replaced and you have received replacement cards. These procedures require that you use the **wwnrecover** utility. For more information on this utility, refer to [Using the wwnrecover utility](#) on page 171.

You can use this procedure to replace one WWN card assembly at a time while power is on. Follow all steps for one card, and then repeat the same steps to replace the other card assembly. To replace both WWN card assemblies simultaneously, use procedures under [Cold-swap replacement](#) on page 174.

1. Remove the defective WWN card assembly using procedures under [Removing the WWN card and bezel](#) on page 176.

Removing a WWN card assembly will result in RASlog messages indicating that a WWN card cannot be detected. Since the system will be in a degraded state, replace the WWN card as soon as possible.

2. Install the replacement WWN card assembly into the empty slot using the following steps:
  - a) Holding the card assembly by its edges with both hands along its length, slide it into the chassis slot.
  - b) Push with your thumb on the end of assembly to fully seat into the backplane connector.
  - c) Use a Phillips screwdriver to tighten the captive screw and secure the card assembly to the chassis.

## NOTE

Be sure that captive screws are tightened. If not, high pressure from fan operation may unseat cards from chassis connectors.

3. Verify that the WWN card is correctly connected by noting if the LEDs on the card reflects the status of the components.
4. Address any issues flagged by any RASlog EM-1220 and EM-1222 messages that display for the new card before proceeding.

## NOTE

Issues relating to data recovery on new WWN cards must be resolved at this point before proceeding to avoid invalid WWN data, errors, and operating problems. If EM-1220 messages indicate that IP addresses on installed WWN cards do not match, follow instructions in the message to recover the IP address so that both cards use the same address.

5. Determine the active CP blade by entering the **haShow** command.
6. On the active CP blade, run the **wwnrecover** command and specify the WWN card that you replaced (WWN 2 or WWN 1) when prompted.
7. If **wwnrecover** messages prompt for a system reboot, reboot both CP blades to ensure the system is running with valid WWN card data.
8. Enter the **hafailover** command to force failover so that the standby CP blade becomes the active CP blade.

This command is necessary so that the correct IP address for the new card displays for the **ipaddrshow** command. For more information on these commands, refer to the *Brocade Fabric OS Command Reference*.

9. Verify the new card settings by running the following commands and comparing the output with the original **supportsave** data:
  - **licenseidshow**
  - **ipaddrshow**
  - **switchname**
  - **chassisname**
  - **wwncardshow ipdata**
  - **chassisshow** (look at the WWN and Chassis information at the bottom)
10. If replacing the second WWN card, repeat the previous steps in this procedure for the other card.
11. Install the WWN bezel on the chassis.
  - a) Orient the bezel on the chassis.
  - b) Insert and tighten both screws using a Phillips screwdriver.
12. Pack faulty WWN cards in the packaging provided with the replacement cards, and return them to Brocade Support for failure analysis (FA).

## Cold-swap replacement

Use this procedure When you can interrupt system operation and replace one or both WWN cards with the system powered down. You can replace one WWN card or both WWN cards, one at a time, with system power on using steps under [Hot-swap replacement](#) on page 173.

### NOTE

Be aware that if replacing both WWN cards, the IP addresses on the new WWN cards will be in effect when the device powers up. If these IP addresses are different from the previous cards, then you will not be able to establish ssh or other sessions that use the previous IP addresses. You can change IP addresses on the new cards using the **ipaddrset** command.

1. Unpack the replacement WWN card assembly and save the packaging for the faulty WWN card(s).  
The WWN card assemblies are labeled #1 for the left slot and #2 for the right slot.
2. Perform the following steps.
  - a) Log in to the device and execute the **switchcfgpersistentdisable** command on the main switch and other logical switches. The **switchcfgpersistentdisable** command disables the switches, and ensures they remain disabled after the power is cycled. This allows you to check all the settings so that you can verify the settings before placing the device back into production.
 

```
switch:admin> switchcfgpersistentdisable
Switch's persistent state set to 'disabled'
```

If there are other logical switches on your chassis, use the **setcontext** command to connect to all the other switches and then run **switchcfgpersistentdisable** on these switches as well.
3. Enter the **sysShutdown** command. When command output indicates that the device has completed shut-down, remove power cords from all power supply assemblies.
4. Remove defective WWN card assemblies using steps under [Removing the WWN card and bezel](#) on page 176, and then continue with step 5.

### NOTE

There are two WWN card assemblies located behind the WWN bezel (logo plate). As you are facing the bezel, WWN 1 is located on the left side, and WWN 2 is on the right.

5. Install replacement WWN card assemblies into the empty slot using the following steps:
  - a) Holding the card assembly by its edges with both hands along its length, slide it into the device slot.
  - b) Push with your thumb on the end of assembly to fully seat into the backplane connector.
  - c) Use a #1 Phillips screwdriver to tighten the captive screw and secure the card assembly to the chassis.

**NOTE**

Be sure that captive screws are tightened. If not, high pressure from fan operation may unseat cards from chassis connectors.

6. Power on the device and wait for five minutes for the device to boot.
7. Verify that new WWN cards are correctly connected by checking LED function. For details on LED operation, refer to [Interpreting WWN card LEDs](#) on page 109.

**NOTE**

The LEDs may take up to two minutes after WWN card installation to begin functioning.

8. Resolve any issues flagged by RASlog EM-1220 and EM-1222 messages that display for the new card(s) before proceeding.

**NOTE**

Issues relating to data recovery on new WWN cards must be resolved at this point before proceeding to avoid invalid WWN data, errors, and operating problems.

9. Determine the active CP blade by entering the **haShow** command.
10. On the active CP blade, run the **wwnrecover** command and specify WWN 2 card for recovery when prompted in **wwnrecover** output messages. Refer to [Using the wwnrecover utility](#) on page 171 for more information on this command.
11. If **wwnrecover** messages prompt for a system reboot, reboot both CP blades to ensure the system is running with valid WWN card data.
12. Verify the new card settings by running the following commands and comparing the output with the original **supportsave** data:
  - **licenseidshow**
  - **ipaddrshow**
  - **switchname**
  - **chassisname**
  - **wwncardshow ipdata**
  - **chassisshow** (look at the WWN and chassis information at the bottom)
13. Run the **switchcfgpersistentenable** command to persistently enable each logical switch, that was disabled before removing the WWN card(s):

```
switch:FID128:root> switchcfgpersistentenable
Switch's persistent state set to 'enabled'
```

14. Install the WWN bezel on the chassis.
  - a) Orient the bezel on the chassis.
  - b) Insert and tighten both screws using a Phillips screwdriver.
15. Pack faulty WWN card assemblies in the packaging provided with the replacement cards, and return them to Brocade Support for failure analysis (FA).

## Removing the WWN card and bezel

Two WWN cards located behind the WWN bezel. As you are facing the bezel on the non-port-side of the device, WWN 1 is located on the left side, and WWN 2 is on the right. When cards have been determined faulty and the replacement WWN cards have been received, complete the following steps to remove the bezel and faulty WWN cards.


### NOTE

Unless the device is powered down and not operational, do not perform these steps without first performing procedures under either [Hot-swap replacement](#) on page 173 or [Cold-swap replacement](#) on page 174.

1. Remove the two screws from the WWN bezel on the back of the device using a Phillips screwdriver. Pull the bezel away from the chassis and set it aside. The ends of both WWN card assemblies with pull tabs are now visible.
2. Unscrew the captive screw for the WWN card assembly using a Phillips screwdriver until the assembly releases from chassis.
3. Grasp the pull tab for a WWN card assembly and gently pull to release the assembly from backplane connector. Carefully slide the card assembly out from the chassis slot.

Use both hands to support the card assembly along its length as you remove it from the slot.

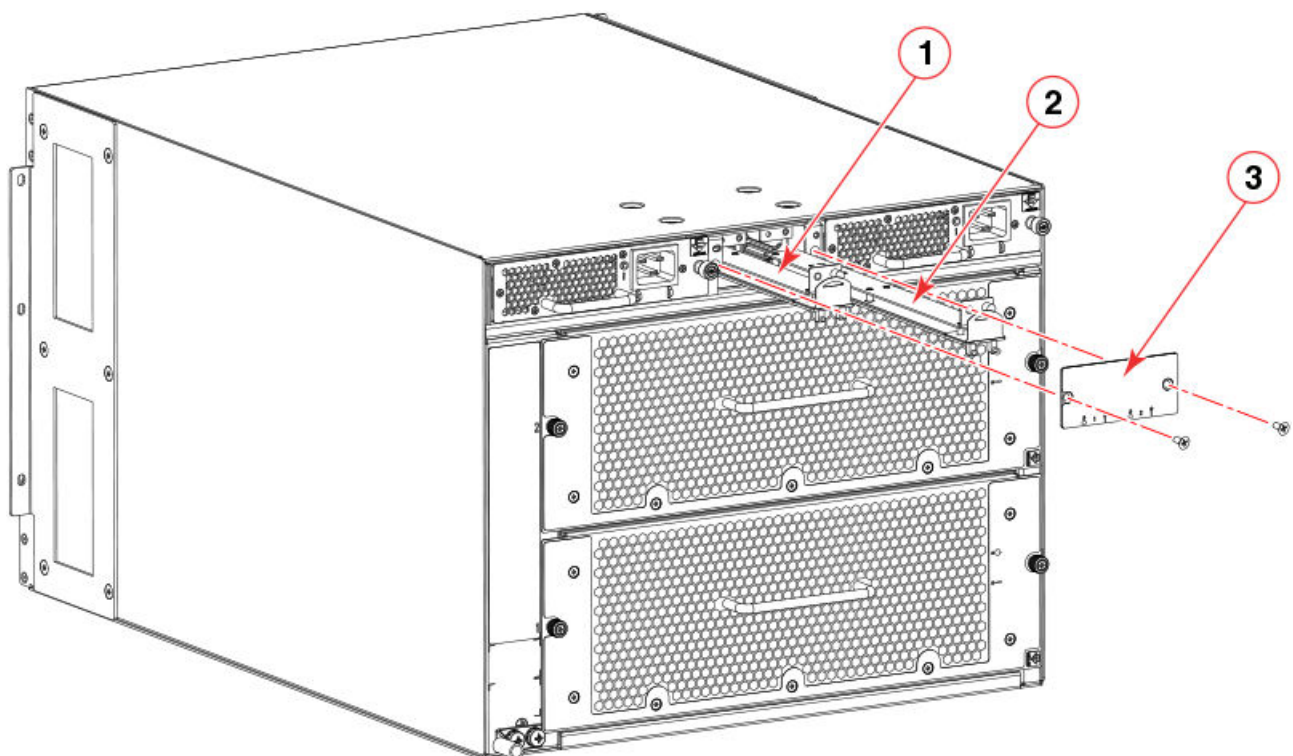**FIGURE 62** Removing and installing WWN cards



1. WWN card 1
2. WWN card 2

3. WWN card bezel

4. Depending on the WWN card assembly removed, label the assembly with #1 for the left-side assembly and #2 for the right-side assembly for future reference.
5. Set the WWN card assembly on a static-free surface, such as a grounding pad.



# Configuring airflow direction on WWN cards

All fan and power supply assemblies installed in the chassis must provide the same airflow direction, either nonport-side intake (NPI) or nonport-side exhaust (NPE). In a factory-configured system, this airflow direction will match the airflow direction configured for the chassis on the installed WWN cards.

A mismatch of between system and fan and power supply airflow direction may occur when installing new WWN cards into an existing chassis with fan and power supply assemblies already installed or when installing fan and power supply assemblies into a replacement chassis. Replacement chassis are shipped with new WWN cards installed, and airflow direction is not configured on these cards.

The system detects airflow direction of the chassis at system boot based on airflow direction of installed power supply and fan assemblies. Normally, if there is a mismatch between airflow direction set on WWN cards and airflow direction of the installed fan and power supply assemblies, the system will automatically configure the established airflow direction on the WWN cards, provided *all* installed fan and power supply assemblies have the same airflow direction. RASLOG messages such as the following will occur during this automatic configuration:

```
...[HIL-1630], 449, SLOT 1 CHASSIS, INFO, chassis1, Auto-configuring
system airflow direction to Non-portside Exhaust

[HIL-1630], 449, SLOT 1 CHASSIS, INFO, chassis1, Auto-configuring
system airflow direction to Non-portside Intake
```

If airflow direction for power supply and fan assemblies does not match, WWN cards will not automatically reconfigure and the fan or power supply assembly with mismatched airflow will fault. In this case, you must replace fan or power supply assemblies to achieve matching airflow direction for all, and then reboot the system.

The following procedure is provided if you need to manually synchronize airflow direction on WWN cards with airflow direction of installed fan and power supply assemblies.

## NOTE

Changing chassis airflow is only supported to synchronize established airflow direction of installed fan and power supply assemblies with airflow direction configured on WWN cards. Changing airflow direction from NPI to NPE or NPE to NPI is not supported in a customer environment.

1. Enter **chassisShow** to display airflow direction programmed in WWN cards and airflow direction of installed fan and power supply FRUs.

Airflow direction of fans and power supplies displays as "Fan Direction" under each fan or power supply unit. System airflow direction displays as "System Airflow" under the WWN card unit. The following example shows mismatch of system airflow and airflow direction in installed fan and power supply as the WWN units should indicate "Non-portside Intake."

```
POWER SUPPLY Unit: 1
Power Source:      AC
Fan Direction:     Non-portside Intake
...
FAN Unit: 2
Fan Direction:     Non-portside Intake
...
WWN Unit: 1
System AirFlow:    Non-portside Exhaust
...
WWN Unit: 2
System AirFlow:    Non-portside Exhaust
```

2. To reconfigure airflow direction on installed WWN cards, enter **wwnrecover**.

```
sw0:admin> wwnrecover
WWN 1 and/or WWN 2 system airflow direction mismatches with the
installed fan FRU's airflow direction.

      WWN Non-Critical Seeprom Problem Details

WWN 1 system airflow direction mismatches with installed Fan FRU's
airflow direction!!!!
WWN 2 system airflow direction mismatches with installed Fan FRU's
airflow direction!!!!

      Recovery Options

0. Exit

1. Copy Airflow direction from Fan FRU to both WWN cards
```

3. Enter **1** when prompted for a recover option to copy airflow direction from the fan to both WWN cards.

```
Enter Selection > 1
WWN Airflow direction recovery complete.

Please reboot the system.
```

4. Reboot the system.

## Verifying WWN card operation

Perform the following tasks to verify operation of the WWN cards:

1. Check the LED indicators on the WWN card bezel, located between the power supplies on the nonport side of the device. The LED patterns may temporarily change during POST and other diagnostic tests. For information on interpreting LED patterns, refer to [Interpreting WWN card LEDs](#) on page 109.
2. Enter the **errDump** command. This displays the system error log. Refer to the *Brocade Fabric OS Message Reference* for more information on the messages in this log.

# Power Supply Assemblies

• AC power supply overview.....	179
• HVAC/HVDC power supply overview.....	180
• Power supply assembly numbering.....	182
• Fan and power supply airflow.....	182
• Precautions specific to power supply assembly.....	184
• Power supply assembly fault indicators.....	184
• Power supply assembly task guide.....	184
• Time and items required.....	186
• Removing a power supply.....	186
• Installing a power supply.....	187
• Verifying power supply operation.....	188


## AC power supply overview

This device supports the following AC power supply assemblies. All power supplies installed in the device must be of the same type and match the airflow of installed fan assemblies.

- Power supply model supporting nonport-side air intake (NPI) provides 1450 W (100-120 VAC) and 2870 W (200-240 VAC). This assembly has two fans that move the air from the nonport side to the port side of the device.
- Power supply model supporting nonport-side air exhaust (NPE) provides 1450 W (100-120 VAC) and 2870 W (200-240 VAC). This assembly has two fans that move the air from the port side to the nonport side of the device.

The following figure illustrates power supply assembly components.

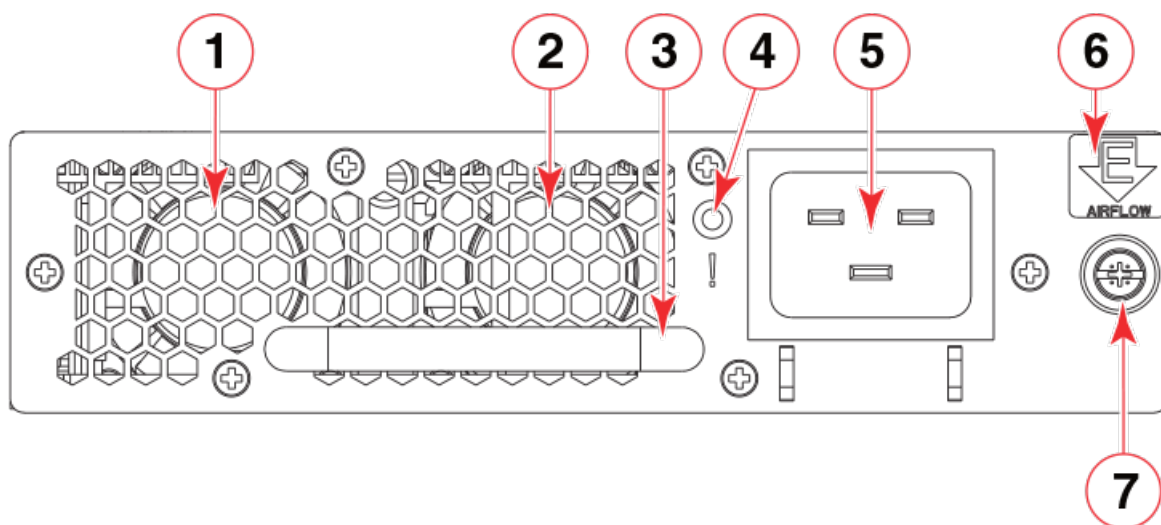**FIGURE 63** AC power supply assembly



- |               |                              |
|---------------|------------------------------|
| 1. Fan 1      | 5. AC power cable receptacle |
| 2. Fan 2      | 6. Airflow label             |
| 3. Handle     | 7. Captive screw             |
| 4. Status LED |                              |

The Brocade X6-4 Director has two power supplies installed. Use of the high-voltage line (200 to 240 VAC) is highly recommended because of better power conversion efficiency. Refer to "Power Supply Requirements" in [Brocade X6 Directors Technical Specifications](#) on page 225 for minimum power supplies required for AC low and high voltage line operation, redundancy in case of power supply failure, and other specifications.

Redundant AC primary power connections ensure high availability. Each power supply has its own connector, so two primary power connections are required for the Brocade X6-4 Director for optimum efficiency and redundancy.

Power supplies can be removed and replaced without special tools. If replacing one power supply, the device can continue operating during replacement if procedures are followed in this guide.

Power cords for these power supplies are available from Brocade that meet your site and country requirements.

## HVAC/HVDC power supply overview

The Brocade X6 supports a dual-function high-voltage AC, high-voltage DC (HVAC/HVDC) power supply assembly. This power supply converts AC or DC input to the required DC output power required for device operation.

Each HVAC/HVDC power supply assembly provides the following power outputs in Watts at the indicated AC and DC input rated voltages:

- 1450 W (100-120 VAC)
- 2870 W (200-277 VAC)
- 2870 W (240-380 VDC)

The following HVAC/HVDC power supply models are supported:


- Power supply model supporting nonport-side air intake (NPI). This assembly has two fans that move the air from the nonport side to the port side of the device.
- Power supply model supporting nonport-side air exhaust (NPE). This assembly has two fans that move the air from the port side to the nonport side of the device.

Consider the following important notes about installing this power supply:

- You cannot upgrade from standard voltage AC power supplies in an existing chassis to HVAC/HVDC power supplies. You must order a new base chassis and the required HVAC/HVDC power supplies.
- You cannot mix HVAC/HVDC and standard voltage AC power supplies in the same Brocade X6 chassis. All power supplies must be the same type.
- All HVAC/HVDC power supplies installed in the device must be all either NPI or NPE models. The airflow direction must match airflow direction of installed fans.

The following figure illustrates power supply assembly components.

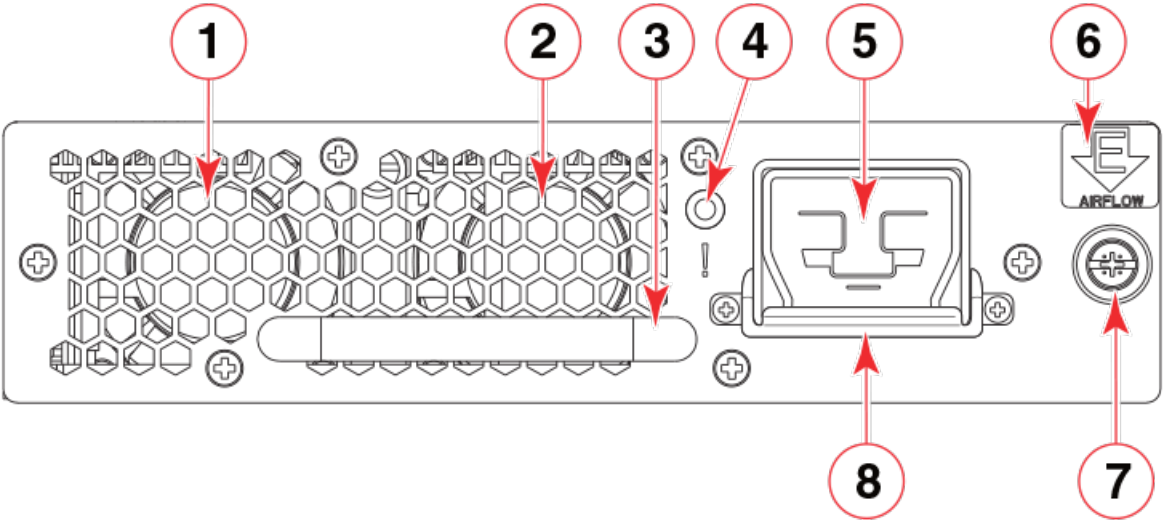FIGURE 64 HVAC/HVDC power supply assembly



1. Fan 1

2. Fan 2

3. Handle

4. Status LED
5. HVAC/HVDC power cable receptacle

6. Airflow label

7. Captive screw

8. Power cable restraint cover

Consider the following information when connecting AC power:

- The Brocade X6-4 Director has two power supplies installed. Use of the high-voltage line (200 to 277 VAC) is highly recommended because of better power conversion efficiency. Refer to "Power Supply Requirements" in [Brocade X6 Directors Technical Specifications](#) on page 225 for minimum power supplies required for AC low and high voltage line operation, redundancy in case of power supply failure, and other specifications.
- Redundant AC primary power connections ensure high availability. Each power supply has its own connector, so two primary power connections are required for the Brocade X6-4 Director for optimum efficiency and redundancy.

Power supplies can be removed and replaced without special tools. If you are replacing one power supply in a configuration with N+1 or greater redundancy, the director can continue operating during the replacement if procedures in this guide are followed. Otherwise, installed blades may power off. Refer to "Power supply requirements" in [Brocade X6 Directors Technical Specifications](#) on page 225 for more information about power supply redundancy.

Power cords are available from Brocade. Power cords are 6 m (19.68 ft.) long and contain three colored 14 AWG unterminated wires which are described in the following table:

TABLE 27 HVAC/HVDC power cable wiring


Label (color)	Function
(black)	Negative (-)
(green with yellow stripe)	Earth ground (PE)
(red)	Return positive (+)

Power cords have an Anderson Saf-D-Grid® 400 connector on the power supply end and unterminated wires on the other end for attaching to AC or DC power sources. Attach either an AC power plug to these wires that meets your facility and local code requirements or connect wires to appropriate DC power terminal blocks.


## Power supply assembly numbering

The following figure illustrates the location and number identification of power supply assemblies in the chassis.

**FIGURE 65** AC Power supply assembly numbering

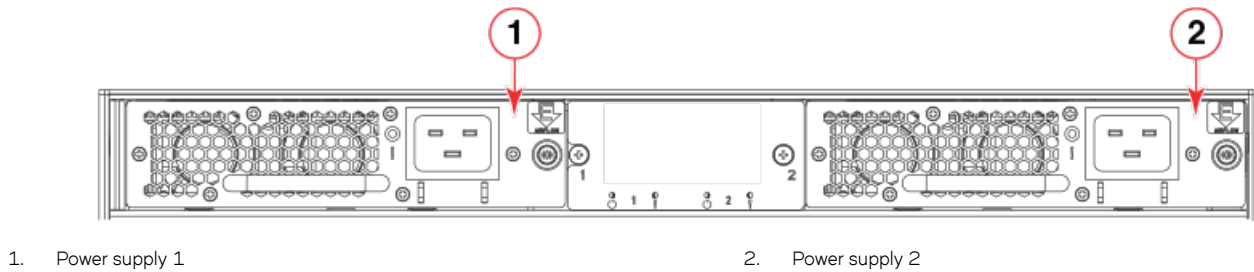

**FIGURE 66** HVAC/HVDC Power supply assembly numbering

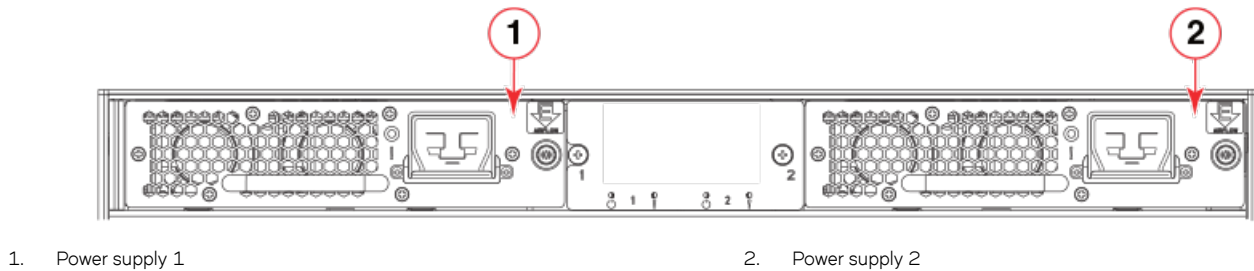

## Fan and power supply airflow

All fans and power supply FRUs installed in this device must have either NPI (nonport-side intake) or NPE (nonport-side exhaust) airflow. You must order a replacement FRU with the same part number (P/N) as the FRU being replaced to provide the same airflow. The manufacturing P/N, located on the top of the FRU, contains either NPI or NPE. If a mismatched power source or fan assembly is installed by mistake, a RASlog message occurs indicating that a mismatch in fan or power supply airflow has occurred and the FRU is faulted.

### NOTE

If airflow direction for a power supply assembly does not match the chassis airflow direction as stored on WWN cards, the power supply will have a "fault" status. However, LED operation for the power supply will not indicate a fault. If airflow direction for a fan assembly does not match the chassis airflow direction, the fan LED will indicate a fault condition.

Power supply and fan assemblies are labeled with a green "E" or orange "I" airflow symbol. All fans and power supplies in a chassis must have the same label affixed to guarantee airflow direction is consistent.

FIGURE 67 Airflow labels



The orange **I** symbol indicates an intake FRU. This unit pulls air in from the nonport side of the device and exhausts it out the port side. This symbol should appear on FRUs with part numbers that contain an **NPI**.

The green **E** symbol indicates an exhaust FRU. This unit pulls air in from the port side of the device and exhausts it out the nonport side. This symbol should appear on FRUs with part numbers that contain an **NPE**.

Ensure airflow direction of power supply and fan assemblies match. If power supply or fan air flow direction does not match, the FRU will fault. Faulty fans can cause increase in temperature.

Airflow direction can be verified by entering the **chassisShow** command. Following is an example from command output indicating mismatching airflow. WWN units should indicate "Non-portside Intake".

```
POWER SUPPLY  Unit: 1
Power Source:      AC
Fan Direction:     Non-portside Intake
...
FAN  Unit: 2
Fan Direction:     Non-portside Intake
...
WWN  Unit: 1
System AirFlow:    Non-portside Exhaust
...
WWN  Unit: 2
System AirFlow:    Non-portside Exhaust
```

#### NOTE

Ensure that captive screws securing the fan and power supply assemblies are tightened. If they are not, air pressure inside chassis may unseat these FRUs from chassis connectors.

## Precautions specific to power supply assembly

Observe the following precautions when replacing the power supply assembly.

### NOTE

Depending on the blade configuration of the device and the number of power supplies installed, the device may be able to continue operating while replacing a power supply. Refer to "Power Supply Requirements" in [Brocade X6 Directors Technical Specifications](#) on page 225 for minimum power supplies required for AC low and high voltage line operation, redundancy in case of power supply failure, and other specifications. If there is insufficient power, the device will start powering down blades until the power demand can be met.

### NOTE

A device with slots for eight port blades can have up to four power supplies installed. If you are adding additional power supplies, you can use the procedures in this section under [Installing a power supply](#) on page 187 to install the new power supplies. Be sure to follow steps on those procedures to enable sending notifications if the additional power supplies should fail.

### NOTE

Make sure that captive screws securing power supply assemblies to chassis are tightened. If not, high pressure from fans operation may unseat power supply assemblies from chassis connectors.

Refer to [Safety precautions](#) on page 21 for caution and danger notices related to installing power supplies.

## Power supply assembly fault indicators

Use one of the following methods to determine if a power supply is faulty:

- Check the power supply status LED.
  - The LED may take up to 10 seconds to illuminate. If LED does not illuminate, the power supply has no incoming power. Check if power supply is properly seated in backplane connector. Check power source to power cord.
  - If LED is flashing green, the power supply may be faulty.

For more information on LED operation, refer to [Interpreting power supply LEDs](#) on page 110.

- Enter **psShow**. If status of power supply displays absent or faulty, check if power supply assembly is seated in chassis. If it is, power supply could be faulty.
- Enter **sensorShow** to determine if a power supply is running above average temperatures of other installed power supplies.
- Enter **errDump** to display the system error log. Refer to the *Brocade Fabric OS Message Reference* for more information on the messages in this log.

Refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference* for output examples and additional information on Fabric OS commands.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.

## Power supply assembly task guide

This section contains a guide to more complete, detailed steps in this section for installing or replacing power supply assemblies when the chassis is running (hot swap) or must be powered off (cold swap). References are provided to the more detailed removal and installation steps for further information.



**NOTE**

Depending on the blade configuration of the chassis and the number of power supplies installed, the chassis may be able to continue operating while replacing a power supply. Refer to "Power Supply Requirements" in [Brocade X6 Directors Technical Specifications](#) on page 225 for minimum power supplies required for AC low and high voltage line operation, redundancy in case of power supply failure, and other specifications. If there is insufficient power, the chassis will start powering down blades until the power demand can be met.

## Installing additional power supply (hot-install)

If your chassis is up and running, has empty slots for power supplies, and you want to install additional power supplies, complete the following steps.

1. Remove filler panel from empty power supply assembly slot.
2. Insert the new power supply assembly.
3. Plug power cord into the new power supply assembly from power source.
4. Verify power supply assembly status LED.

## Replacing power supply assembly (hot-swap)

If your chassis is up and running, but a power supply has failed, complete the following steps.

**NOTE**

Removing more than one power supply could result in insufficient system power which could cause some blades to power down. Ensure that there is an adequate number of active power supply assemblies when removing a single power unit during hot-swap. Refer to "Power supply specifications" and "Power supply requirements" in [Brocade X6 Directors Technical Specifications](#) on page 225 for minimum power supplies required for low and high voltage line operation.

1. Unplug power cable from failed power supply assembly.
2. Remove power supply assembly.
3. Insert new power supply assembly.
4. Plug power cord into new power supply assembly from power source.
5. Verify power supply assembly status LED.

## Replace or install power supply assembly (cold-install or cold-swap)

If your chassis is up and running, but you want to power down the chassis to install additional power supply assemblies or replace failed power supply assemblies, complete the following steps.

1. Shut down the system using the **sysShutdown** command.
2. Unplug power cords from all power supply assemblies.
3. If adding a power supply assembly, remove filler panel from empty power supply assembly slot.
4. Install or replace power supply assemblies.
5. Plug power cords into all power supply assemblies from power sources.
6. Verify the power supply assembly status LEDs.

## Time and items required

The procedure to remove or install a each power supply takes less than five minutes. A power supply unit or filler panel is required for the power supply replacement.

## Removing a power supply

To remove a power supply, complete the following steps.

1. Before removing a power supply assembly, Verify if you can remove a power supply and the leave chassis operating (hot swap replacement) or must power down the chassis (cold-swap replacement).

### NOTE

Depending on the blade configuration of the chassis and the number of power supplies installed, the chassis may be able to continue operating while replacing a power supply. Refer to "Power supply specifications" and "Power supply requirements" in [Brocade X6 Directors Technical Specifications](#) on page 225 for minimum power supplies required for low and high voltage line operation, redundancy in case of power supply failure, and other specifications. If there is insufficient power, the chassis will power down blades until the power demand can be met.

2. Perform one of the following steps:

- If you need to power down the chassis to remove a power supply, enter the **sysShutdown** command. Refer to [Powering down the chassis](#) on page 83 for detailed procedures. When the chassis chassis completed shut-down, remove power cords from all power supply assemblies.

### NOTE

To remove a power cord from a HVAC/HVDC power supply, you must remove the power cord retainer cover, if attached under the power cord connector, and then unlatch the power cord release latch located under the power cord connector. Refer to [Powering down the chassis](#) on page 83 for detailed procedures.

- If you can leave the chassis in operation and replace a power supply, unplug the power cord from the power supply assembly that you are replacing.

### NOTE


Be sure to replace the power supply as soon as possible.

3. Loosen the captive screw on the right side of the power supply assembly until the screw releases from the chassis.

The captive screw is located just below the airflow label on the right side of the power supply assembly. If necessary use a Phillips screwdriver.

4. Grasp the handle and pull, sliding the power supply from the chassis and supporting the power supply from beneath as you remove it.

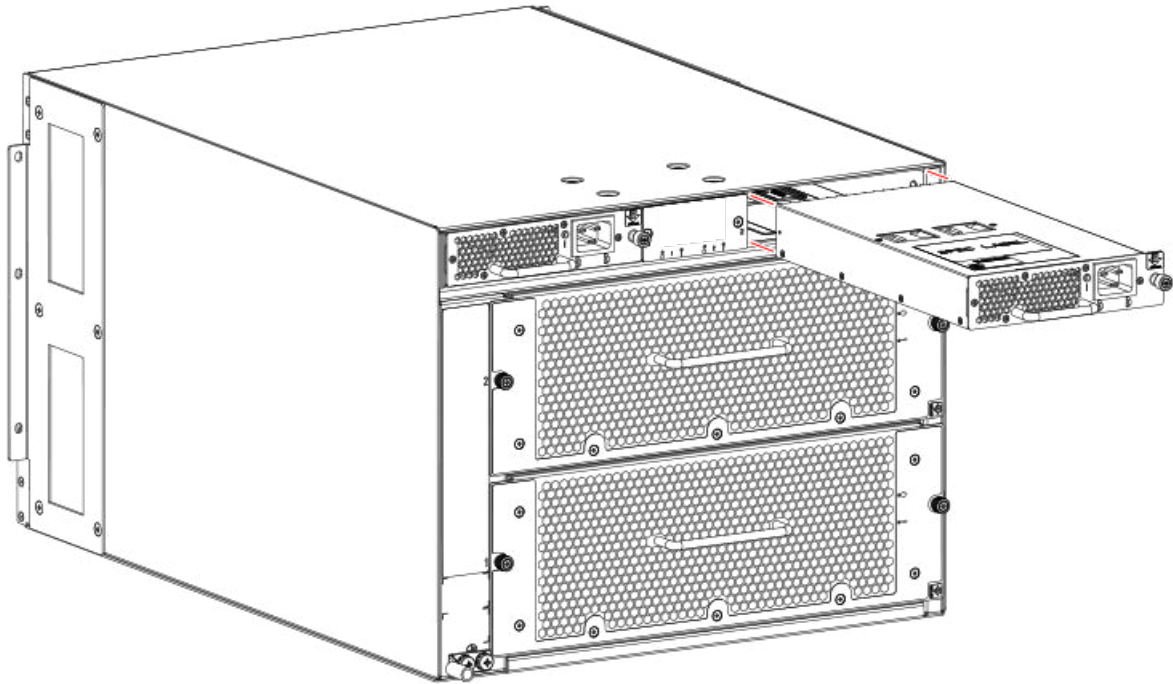**FIGURE 68** Removing and installing power supply assembly



5. If you are not replacing the power supply and can leave the chassis operating, insert a filler panel into the slot and tighten captive screw to secure to chassis.

## Installing a power supply

To install a power supply, complete the following steps.

1. If a filler panel is installed over the slot where you are installing the power supply, remove the panel by loosening the captive screw located on the right side of the panel. When the screw releases from chassis, pull on the screw to lift the panel from the chassis slot.
2. Grasp the handle and slide the new power supply into the chassis while supporting the power supply from beneath. Push the power supply into slot until the connectors seat in the chassis backplane.
3. Verify that the power supply assembly is seated by gently pushing on the handle.
4. Push in captive screw, and then tighten with fingers to secure power supply assembly to chassis.

### NOTE

Make sure that captive screws securing power supply assembly to chassis are tightened. If not, high pressure from fan operation may unseat power supply assembly from chassis connectors.

5. Connect power to the power supply using steps in [Providing power to the device](#) on page 66.
6. Verify that the power LED on the power supply displays steady green when power is fully applied.

## Verifying power supply operation

Perform the following tasks to verify operation of the power supply:

1. Check the LED indicator on the power supply. The LED patterns may temporarily change during POST and other diagnostic tests. For information on interpreting LED patterns, refer to [Interpreting power supply LEDs](#) on page 110. Be sure to check all the power supply modules.
2. Check the power supply status by entering the following commands:

The power supply status displays OK, Absent, or Faulty. If a power supply displays absent or faulty, contact the device supplier to order replacement parts. Both physically absent or faulty could also be the result of the power supply not being properly seated or being turned off.

- **psShow** - Displays the status of each power supply as OK, Absent, or Faulty. If a power supply displays absent or faulty, contact the device supplier to order replacement parts. Both physically absent or faulty could also be the result of the power supply not being properly seated or being turned off.
- **sensorShow** - Displays current temperature and status of fan and power supply sensors located on the chassis.
- **errDump** - Displays all system error log messages.
- **errShow** - Displays error log messages one at a time.

Refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference* for output examples and additional information on Fabric OS commands.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.

# Fan Assemblies

• Fan assembly overview.....	189
• Precautions specific to fan assemblies.....	192
• Fan assembly fault indicators.....	192
• Fan assembly task guide.....	192
• Time and items required.....	193
• Removing a fan assembly .....	193
• Installing a fan assembly.....	194
• Verifying fan operation.....	195


## Fan assembly overview

Following are important details that you should note about fan assemblies:

- Two fan assemblies are installed in the chassis, containing two fans each, for a total of four fans.
- The chassis requires 3 fans out of 4 functioning fans for operation.
- Fan assemblies with the following airflow directions can be installed. All fan assemblies must have the same airflow direction and match airflow direction of installed power supplies.
  - Fan assembly with nonport-side air intake. Fans move air from the nonport side to the port side of the chassis.
  - Fan assembly with nonport-side air exhaust. Fans move air from the port side to the nonport side of the chassis.
- Fan assemblies can be removed and replaced without special tools.
- The chassis can continue operation while one fan assembly is replaced if the fan assembly is replaced immediately.

The following figure illustrates fan assembly components.

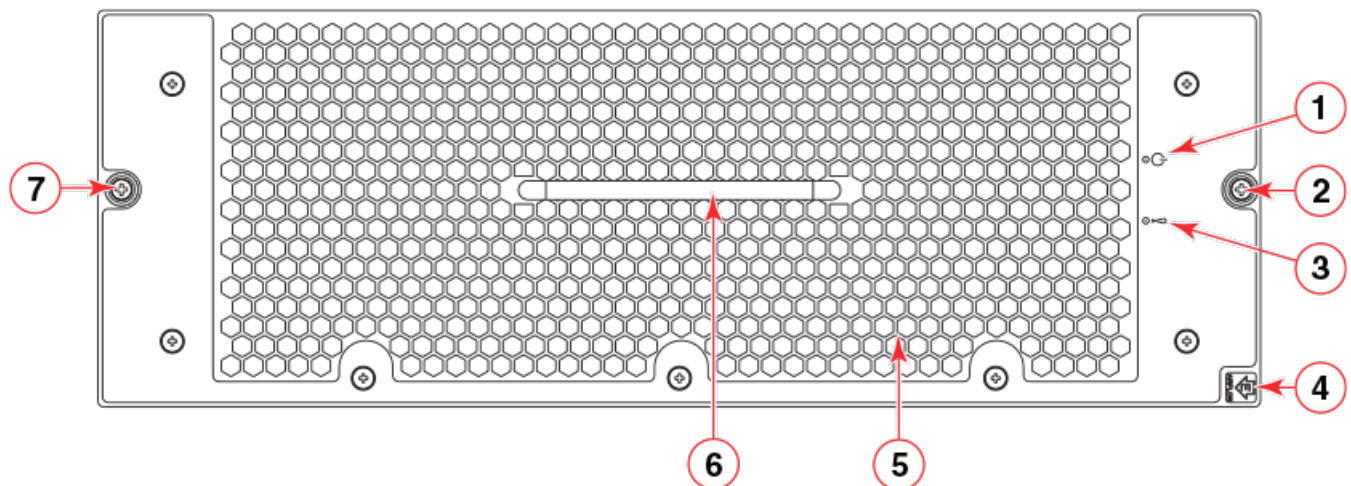**FIGURE 69** Fan assembly



- |                  |                  |
|------------------|------------------|
| 1. Power LED     | 5. Air vent      |
| 2. Captive screw | 6. Handle        |
| 3. Status LED    | 7. Captive screw |
| 4. Airflow label |                  |

## Fan and power supply airflow

All fans and power supply FRUs installed in this device must have either NPI (nonport-side intake) or NPE (nonport-side exhaust) airflow. You must order a replacement FRU with the same part number (P/N) as the FRU being replaced to provide the same airflow. The manufacturing P/N, located on the top of the FRU, contains either NPI or NPE. If a mismatched power source or fan assembly is installed by mistake, a RASlog message occurs indicating that a mismatch in fan or power supply airflow has occurred and the FRU is faulted.

### NOTE

If airflow direction for a power supply assembly does not match the chassis airflow direction as stored on WWN cards, the power supply will have a "fault" status. However, LED operation for the power supply will not indicate a fault. If airflow direction for a fan assembly does not match the chassis airflow direction, the fan LED will indicate a fault condition.

Power supply and fan assemblies are labeled with a green "E" or orange "I" airflow symbol. All fans and power supplies in a chassis must have the same label affixed to guarantee airflow direction is consistent.

FIGURE 70 Airflow labels



The orange **I** symbol indicates an intake FRU. This unit pulls air in from the nonport side of the device and exhausts it out the port side. This symbol should appear on FRUs with part numbers that contain an **NPI**.

The green **E** symbol indicates an exhaust FRU. This unit pulls air in from the port side of the device and exhausts it out the nonport side. This symbol should appear on FRUs with part numbers that contain an **NPE**.

Ensure airflow direction of power supply and fan assemblies match. If power supply or fan air flow direction does not match, the FRU will fault. Faulty fans can cause increase in temperature.

Airflow direction can be verified by entering the **chassisShow** command. Following is an example from command output indicating mismatching airflow. WWN units should indicate "Non-portside Intake".

```
POWER SUPPLY Unit: 1
Power Source:      AC
Fan Direction:     Non-portside Intake
...
FAN Unit: 2
Fan Direction:     Non-portside Intake
...
WWN Unit: 1
System AirFlow:    Non-portside Exhaust
...
WWN Unit: 2
System AirFlow:    Non-portside Exhaust
```


#### NOTE

Ensure that captive screws securing the fan and power supply assemblies are tightened. If they are not, air pressure inside chassis may unseat these FRUs from chassis connectors.

## Fan assembly numbering

The following figure illustrates the location and number identification of fan assemblies in the chassis.

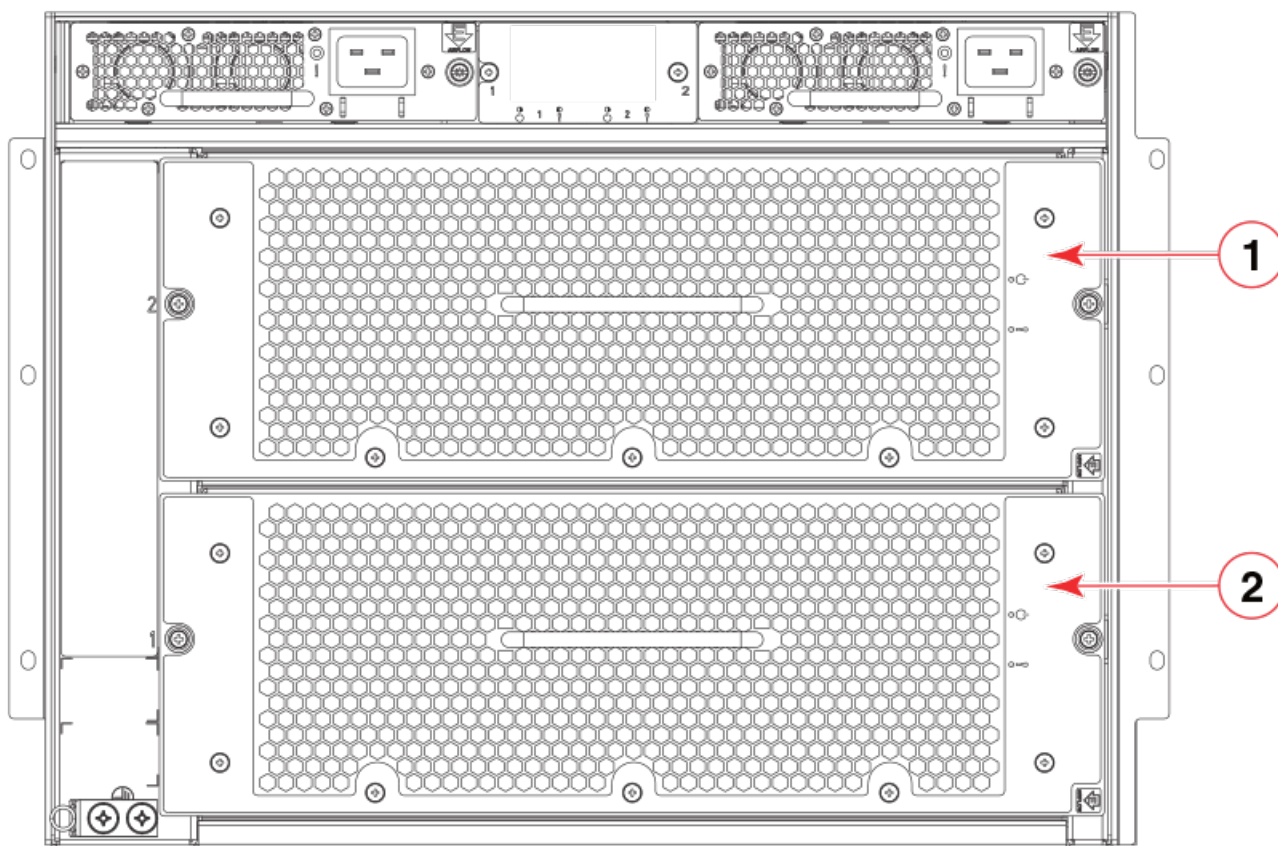FIGURE 71 Fan assembly numbering



1. Fan assembly 1

2. Fan assembly 2

## Precautions specific to fan assemblies

Observe the following precautions when replacing fan assemblies.

### NOTE

Each fan assembly contains two fans for a total of four fans for two installed fan assemblies. The device requires 3 fans out of 4 functioning fans for operation. If hot-swapping a fan assembly, be sure to have the replacement fan assembly ready to install before removing a faulty fan assembly and replace as soon as possible.

### NOTE

If a fan assembly has failed, do not remove it from chassis unless a FRU is available for replacement. If the slot is left empty for an extended time period, this could cause chassis air-leakage and overheating.

### NOTE

Make sure that captive screws securing fan assemblies to chassis are tightened. If not, high pressure from fan operation may unseat fan from chassis connectors.

## Fan assembly fault indicators

Use one of the following methods to determine if a fan assembly is faulty:

- Check the fan status LED.
  - Steady amber – fan assembly has a failure (full or partial).
  - Slow-flashing amber (on 2 seconds, then off 2 seconds) – fan assembly is not seated correctly or is faulty.
  - Fast-flashing amber (on ½ second, then off ½ second) – environmental range exceeded.
- Enter **fanShow** . If status of fan assembly displays absent or faulty, check if assembly is seated in chassis. If it is, power supply could be faulty or is not receiving power for some reason.
- Enter **sensorShow** to determine if a fan is running above average temperatures of other installed fan(s).
- Enter **errDump** to display the system error log.

For more information on LED operation, refer to [Interpreting fan assembly LEDs](#) on page 113.

For output examples and additional information on Fabric OS commands, refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference*.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.

## Fan assembly task guide

This section contains a guide to more complete, detailed steps in this section for installing or replacing fan assemblies when the chassis is running (hot swap) or must be powered off (cold swap). References are provided to the more detailed removal and installation steps for further information.

### NOTE

Each fan assembly contains 2 fans for a total of 4 fans for two installed fan assemblies. The chassis requires 3 fans out of 4 functioning fans for operation. If hot-swapping a fan assembly, be sure to have the replacement fan assembly ready to install before removing a faulty fan assembly and replace as soon as possible.



**NOTE**

If a fan assembly has failed, do not remove it from chassis unless a FRU is available for replacement. If the slot is left empty for an extended time period, this could cause chassis air-leakage and overheating.

**NOTE**

Make sure that captive screws securing fan assemblies to chassis are tightened. If not, high pressure from fan operation may unseat fan from chassis connectors.

## Replacing fan assembly (hot-swap)

If your chassis is up and running, but a fan assembly has failed, complete the following steps.

1. Remove fan assembly.
2. Insert new fan assembly into empty slot as soon as possible.
3. Verify that the fan assembly status LED is green.

## Replacing fan assembly (cold-swap)

If your chassis is up and running, but you want to power down the chassis to replace a failed fan assembly, complete the following steps.

1. Shut down the system using the **sysShutdown** command.
2. Unplug power cords from receptacles on all power supply assemblies.
3. Remove faulty fan assembly.
4. Insert new fan assembly.
5. Plug power cords into all power supply assemblies from power sources to power chassis on.
6. Verify that fan assembly status LEDs are green.

## Time and items required

The replacement procedure for each fan assembly takes less than 5 minutes. The following items are required for the blower assembly replacement:

- Replacement fan assembly
- #1 Phillips screwdriver

## Removing a fan assembly

Complete the following steps to remove a fan assembly from the chassis.

1. Before removing a fan assembly, Verify if you can remove a power supply and leave the chassis operating (hot swap replacement), by referring to [Precautions specific to fan assemblies](#) on page 192.


2. Perform one of the following steps:
  - If you need to power down the chassis to remove a fan assembly, enter the **sysShutdown** command. When command output indicates the chassis has completed shut-down, remove power cords from all power supply assemblies.
  - If you can hot-swap the fan assembly, go on to the next step.

**NOTE**

Replace fan as soon as possible to avoid overheating and eventual system shutdown.

3. Loosen the captive screw at each end of the fan assembly until the screw releases from the chassis. Use a #1 Phillips screwdriver if tightened.
4. Grasp the handle and pull, sliding the fan assembly from the chassis while supporting the fan assembly from beneath as you remove it.

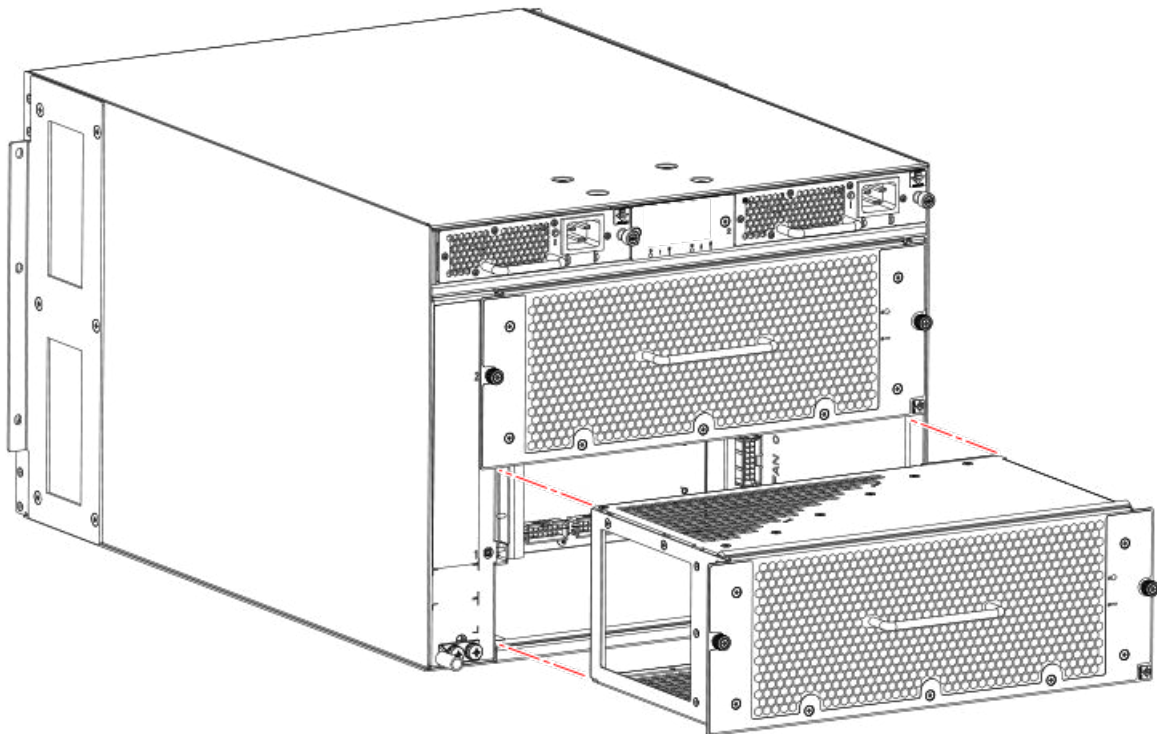**FIGURE 72** Removing and installing a fan assembly



5. If leaving power on for replacement (hot swap), be sure to replace the fan assembly as soon as possible.

## Installing a fan assembly

Complete the following steps to replace the fan assembly in a chassis.

1. Grasp the handle and carefully slide the fan assembly into the chassis while supporting the fan assembly from beneath.
2. Push the fan assembly fully into the slot with your fingers until it seats in the backplane connectors.
3. Verify that the power LED displays a green light.

4. Push in on each captive screw and tighten with #1 Phillips screwdriver to secure the fan assembly to the chassis.

**NOTE**

Be sure that captive screws are tightened. If not, high pressure from fan operation may unseat fan from chassis connectors.

## Verifying fan operation

Perform the following tasks to verify operation of a fan assembly:

1. Check the LED indicators on the fan assemblies. The fan assemblies are located on the nonport side of the device. The LED patterns may temporarily change during POST and other diagnostic tests. For information on interpreting LED patterns, refer to [Interpreting fan assembly LEDs](#) on page 113.
2. Check the fan assembly status using the following commands:
  - **fanShow** - Displays the status for each fan assembly as OK, Absent, or Faulty. The RPM of each fan in the assembly is also provided. If a fan assembly displays absent or faulty, contact the chassis supplier to order replacement parts. Both physically absent or faulty could also be the result of the fan not being properly seated in the chassis slot.
  - **sensorShow** - Displays current temperature and status of fan and power supply sensors located in the chassis.
  - **errShow** - Displays error log messages one at a time.
  - **errDump** - Displays the entire system error log.

Refer to [Using monitoring commands](#) on page 115 and the *Brocade Fabric OS Command Reference* for output examples and additional information on Fabric OS commands.

For more information about error messages, refer to the *Brocade Fabric OS Message Reference*.



# Blade Filler Panels

---

• Blade filler panel removal and replacement.....	197
• Removing a filler panel.....	197
• Installing a filler panel.....	198

## Blade filler panel removal and replacement

When installing a blade into the device, you may need to first remove a blade filler panel. Be sure to keep all filler panels in a safe place in case you need to remove a blade for an indefinite period of time. Cover all empty slots with blade filler panels. Failure to do so will adversely affect device cooling.



### CAUTION

**If you do not install a module or a power supply in a slot, you must keep the slot filler panel in place. If you run the chassis with an uncovered slot, the system will overheat.**

Blade filler panels have a latch mechanism at each end of the panel. Both latches must be opened to remove and install the panel.

### NOTE

Filler panels for Brocade DCX and Brocade DCX 8510 Directors are not interchangeable with filler panels for Brocade X6 Directors.

## Removing a filler panel


Complete the following steps to remove a filler panel from a blade slot.

1. Remove the chassis door.
2. Pull out the spring-loaded latch release on the latch at each end of the cover using your thumb and forefinger and slide the latches toward the center of the cover.

This moves the latches away from the ends of the slot to unlatch the cover from chassis.

3. Using the latch pull tabs as handles, pull the filler panel out of the chassis.

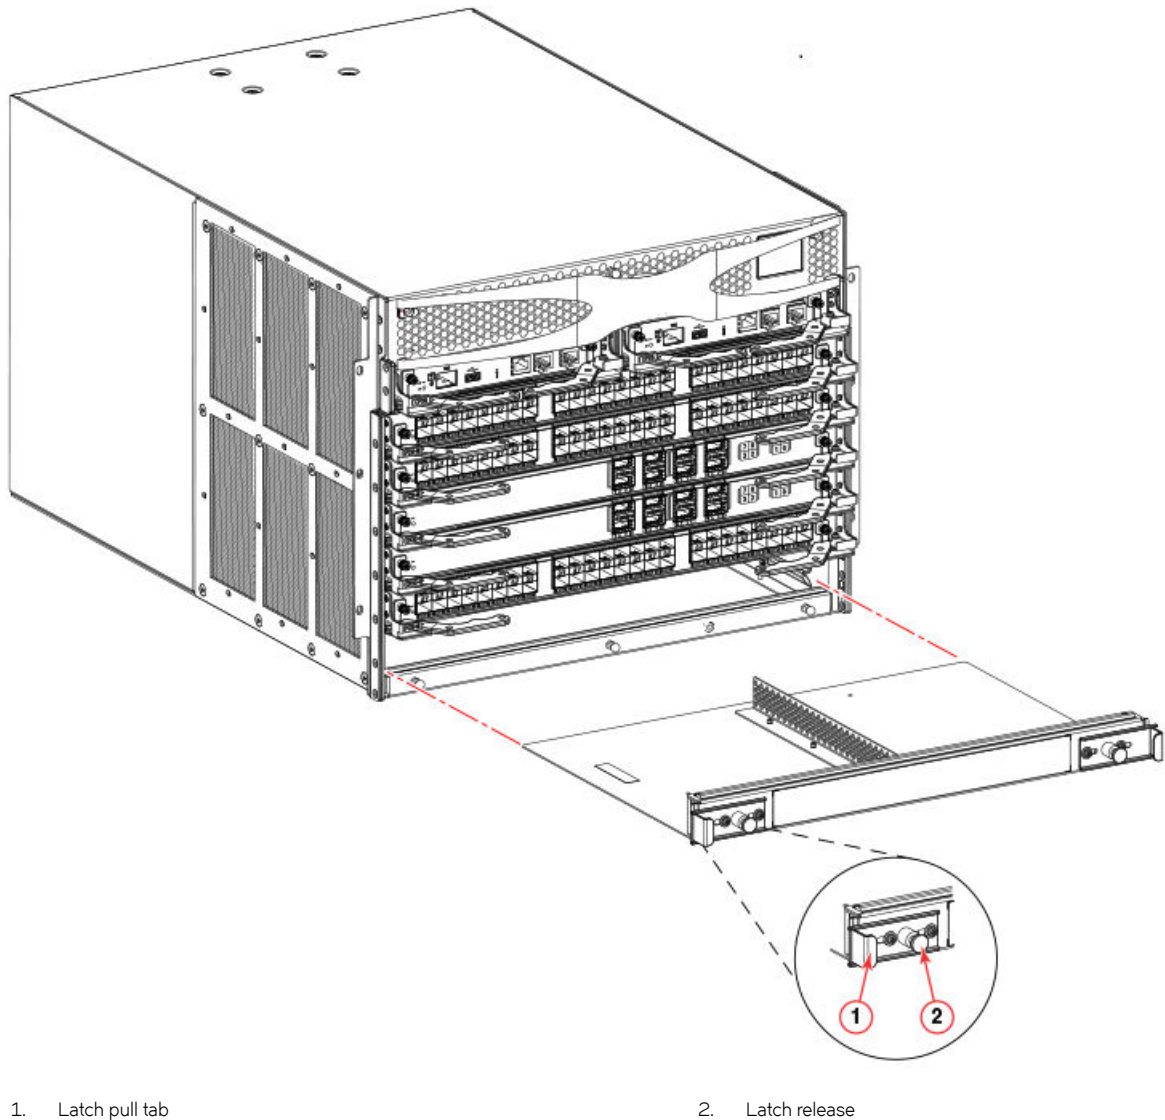**FIGURE 73** Removing and installing the blade filler panel



## Installing a filler panel


1. Pull out the spring-loaded latch release on the latch at each end of the cover using your thumb and forefinger and slide the latches toward the center of the cover.
2. Orient the filler panel over the empty slot and slide into the slot.

3. Pull out the spring-loaded latch release at each end of the cover and slide each latch towards the end of the cover. This should slide the latches into the chassis and lock the panel in place. If not, the cover may not be seated fully into the slot. Try unlatching both ends, pushing the cover firmly into the slot, then latching both ends again.

**NOTE**

Be sure filler panels are securely latched. If not, high pressure from fan operation may unseat blade from chassis connectors.

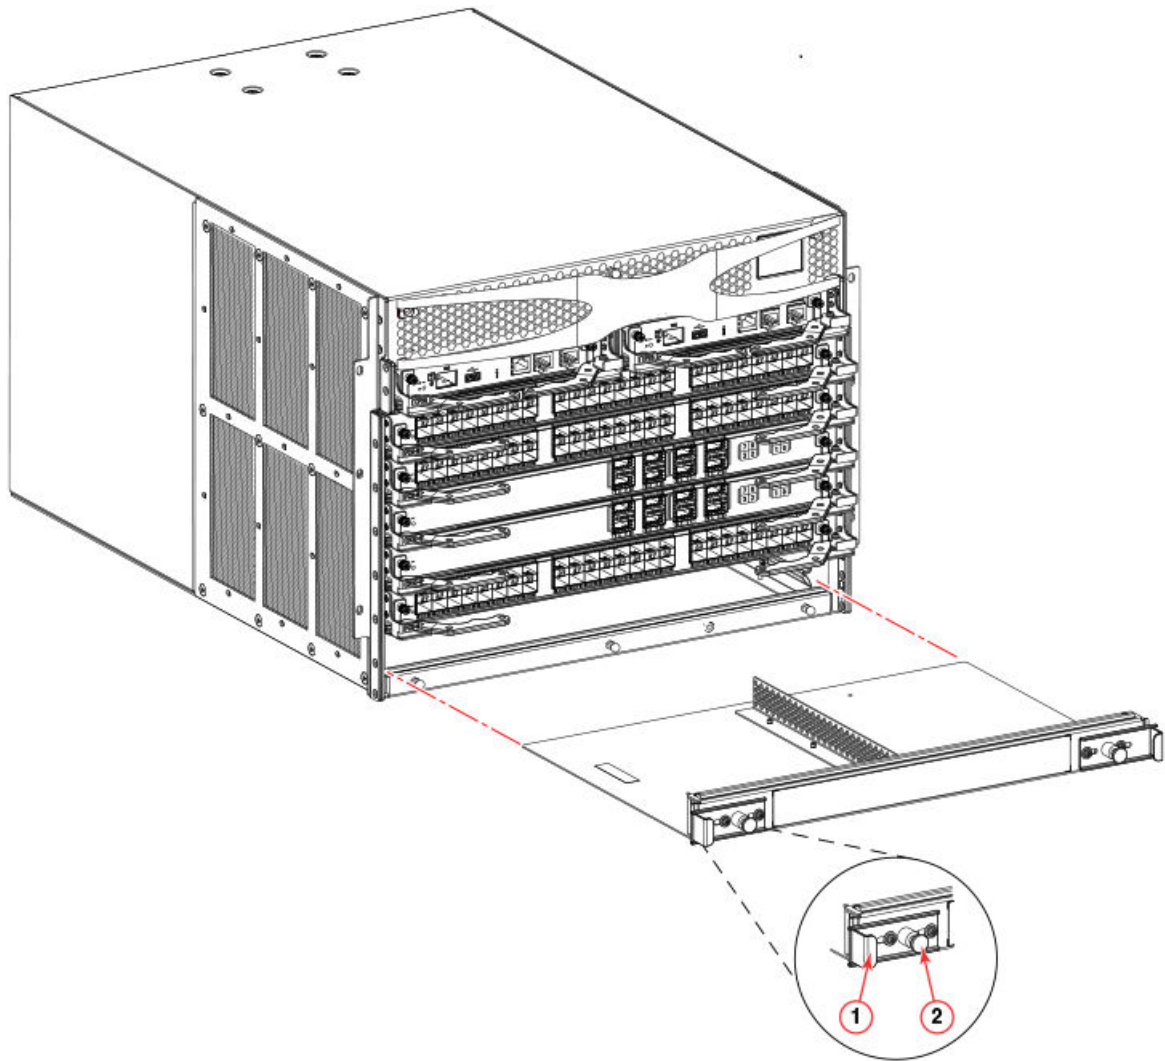**FIGURE 74** Removing and installing the blade filler panel



1. Latch pull tab

2. Latch release

4. Reinstall the chassis door. The door must be installed to meet EMI compliance.





# Cable management fingers

---

- Cable management fingers overview.....201
- Time and items required for removal and replacement.....201
- Removing the cable management finger assembly..... 201
- Installing the cable management fingers..... 203

## Cable management fingers overview

The Brocade X6-4 Director comes equipped with two vertical cable management finger assemblies. It can continue to operate during the replacement of the cable management fingers. Due to the horizontal orientation of the blades in the device, the finger assemblies are attached to the uprights of the mounting rack.


## Time and items required for removal and replacement

The replacement procedure for the cable management fingers takes less than five minutes. A #1 Phillips screwdriver is required.

## Removing the cable management finger assembly

Complete the following steps to remove the cable management finger assemblies from rack uprights. Cable management finger assemblies are shown installed in the following illustration.

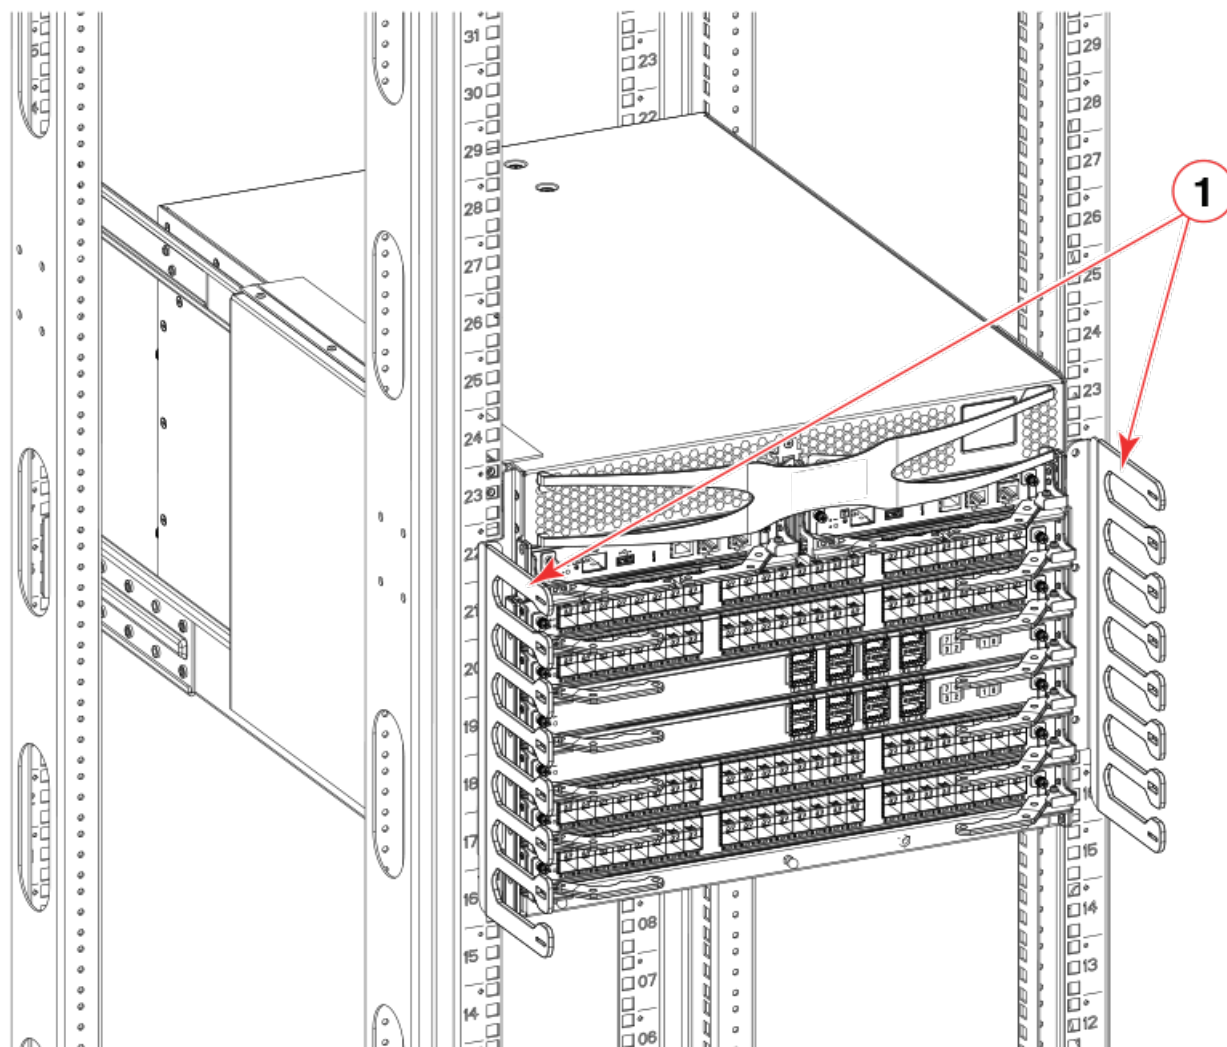**FIGURE 75** Cable management fingers installed on rack uprights




1. Cable management finger assemblies
1. Remove the cables from the cable management finger assembly and rearrange the cables around the assembly.
2. Unscrew and save the three (3) screws holding the finger assembly to the rack upright. Support the assembly to prevent it from falling.
3. Remove the cable management finger assembly.
4. If necessary, repeat steps 1 through 4 for the other finger assembly.

# Installing the cable management fingers

Complete the following steps to install the cable management finger assembly.

1. Position and tighten the three (3) screws to secure the vertical cable management finger assembly to the rack upright. Cable management fingers are shown installed in following illustration.

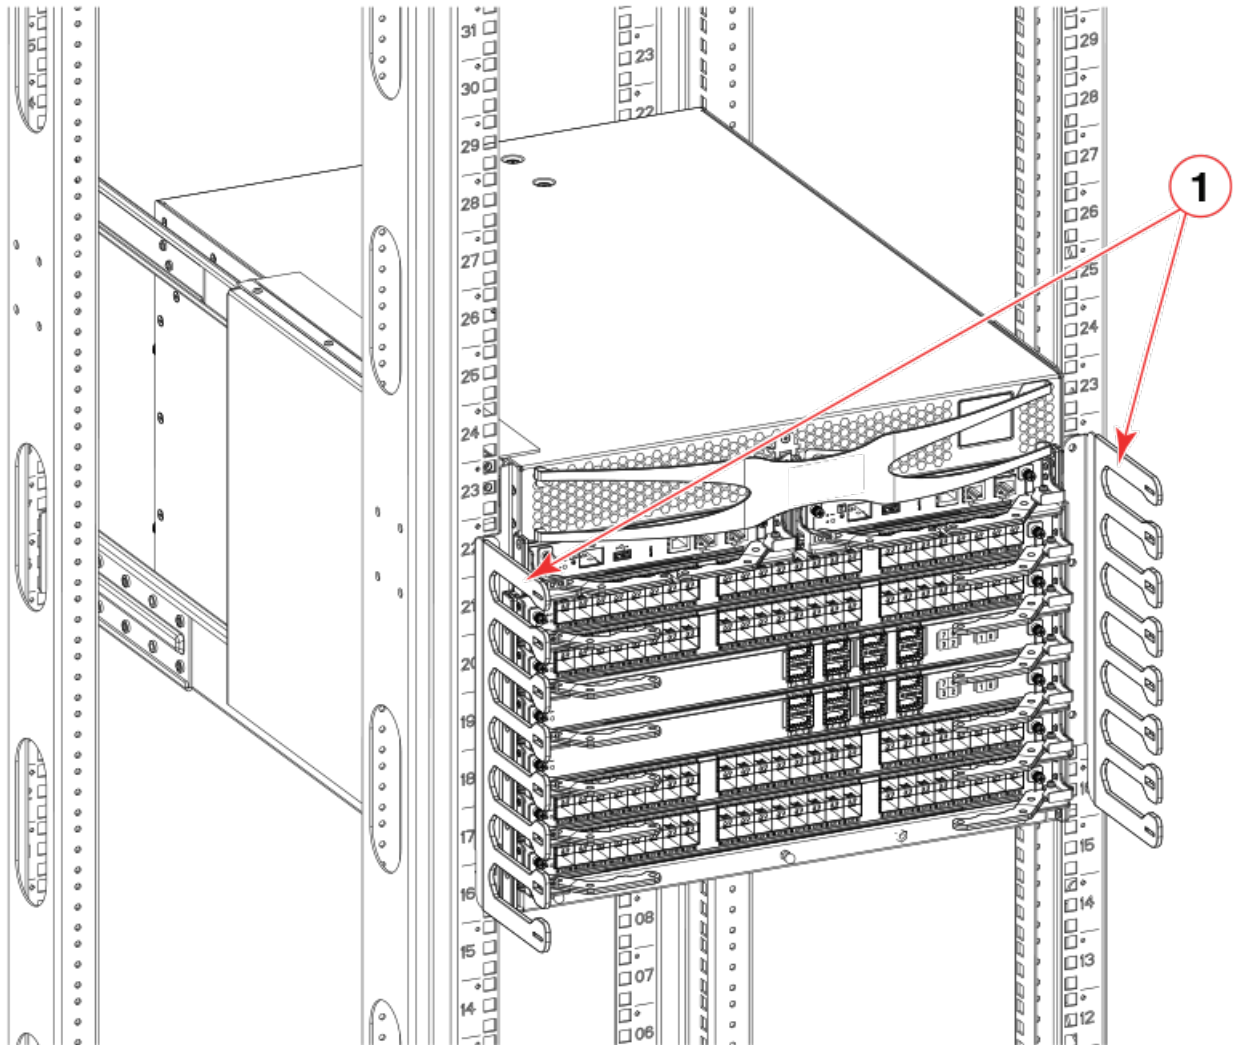**FIGURE 76** Cable management finger assemblies



1. Cable management finger assemblies

2. Arrange the cables along the cable management finger assembly.
3. If necessary, repeat steps 1 and 2 for the other cable management finger assembly.



# Chassis door

---

- Chassis door overview.....205
- Time and items required.....205
- Removing a chassis door.....205
- Installing a chassis door.....206

## Chassis door overview

The chassis door must be installed to ensure that the device meets EMI and other regulatory certifications. A receiving hole is located on each corner on the back side of the door. Each hole snaps into a ball stud located on a matching corner of the chassis.

## Time and items required


The first-time installation procedure for the chassis door takes 15 minutes or longer because you must remove the logo bezel and install ball studs to mount the door. Thereafter, removal and reinstallation should take less than 5 minutes.

Required for installation are the door assembly, packaged separately from the chassis, and ball studs for the door. Ball studs are packaged with the door assembly.

## Removing a chassis door

Support the door to prevent it from falling. Pull and remove the door. It will pop off the ball studs.

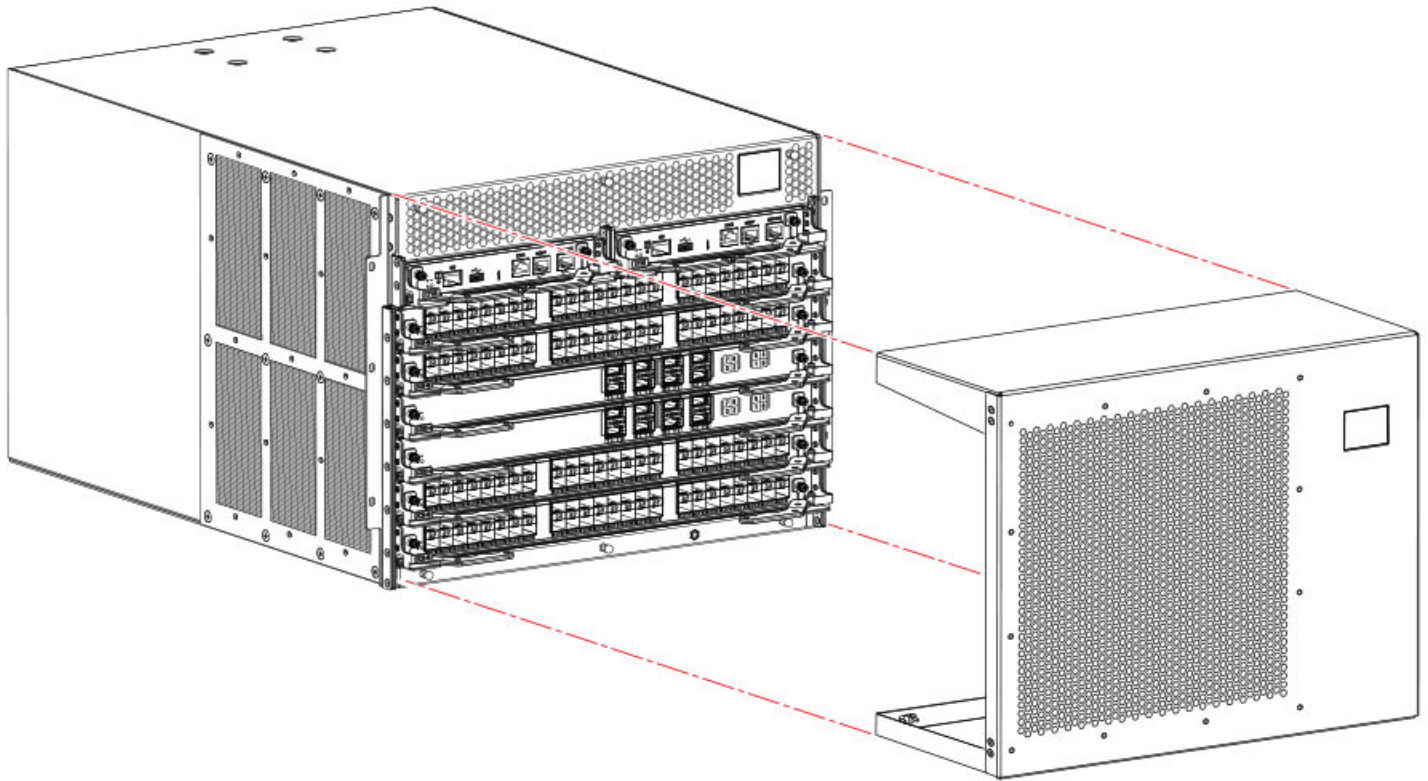**FIGURE 77** Removal and replacement of the chassis door



## Installing a chassis door

Complete the following steps to install the door on the port side of the chassis.


Steps 1 and 2 describe removing the logo bezel, if it is attached over the air vents at the top of the chassis, and installing ball studs into the chassis for attaching the door. If the bezel has been removed and door ball studs are installed, skip to step 3 to install the door.

1. Use the following steps to remove the logo bezel.

Save bezel and other parts for future installation.

- a) Unfasten the bezel from its chassis mounting bracket by removing the single 6-32 X 3/8 in. panhead Phillips screw located on the top center of the bezel using a Phillips screwdriver.
- b) While supporting the bezel, use a Phillips screwdriver to remove the 6-32 X 1/4 in. flathead Phillips screws securing each end of the bezel to the chassis and remove bezel.
- c) Remove the bezel's mounting bracket from the chassis by removing the single 6-32 X 1/4 in. Phillips screw securing the bracket to the chassis.

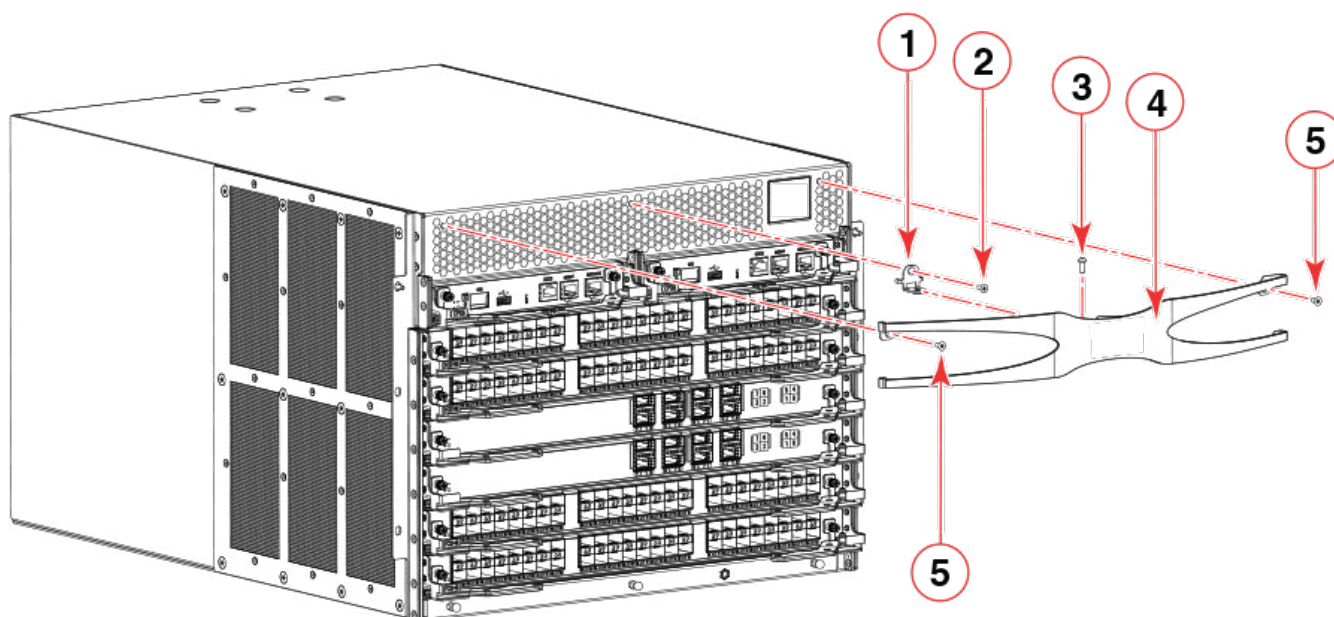**FIGURE 78** Removing logo bezel from Brocade X6-4 chassis



1. Chassis mounting bracket for logo bezel
2. 6-32 x 1/4 in. 100 degree flathead Phillips screw
3. 6-32 x 3/8 in. panhead Phillips with a square cone sem
4. Logo bezel
5. 6-32 x 1/4 in. 100 degree flathead Phillips screw
6. 6-32 x 1/4 in. 100 degree flathead Phillips screw




2. Install six ball studs into the chassis at locations indicated in the following illustration. Using your fingers, thread three ball studs into the holes located at the top of the chassis air vent and three ball studs into the holes located below the blades at the bottom of the chassis. Screw ball studs in finger tight.

**NOTE**

The ball studs are packaged with the chassis in the accessory tray.

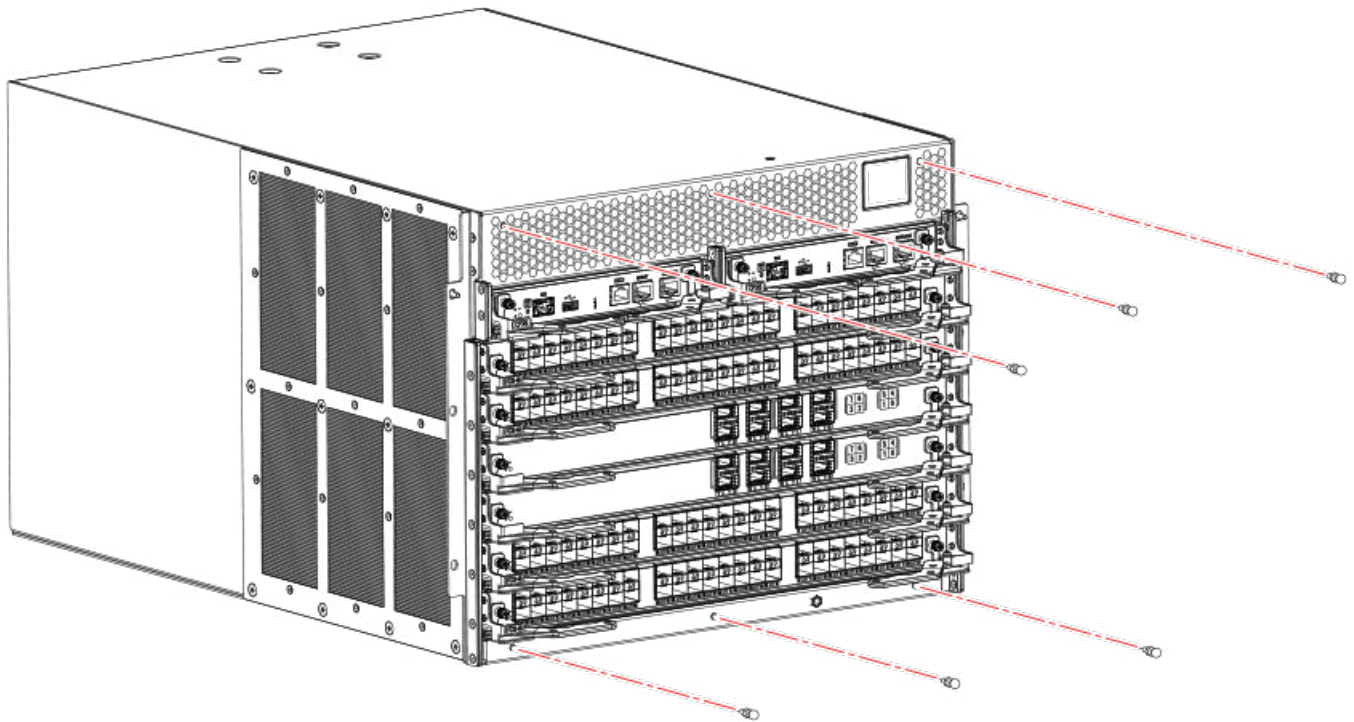
**FIGURE 79** Installing door ball studs into Brocade X6-4 chassis





3. Align the six ball stud attachment holes in the back of door with the six ball studs in the chassis and push the door into place. It will snap onto the studs.

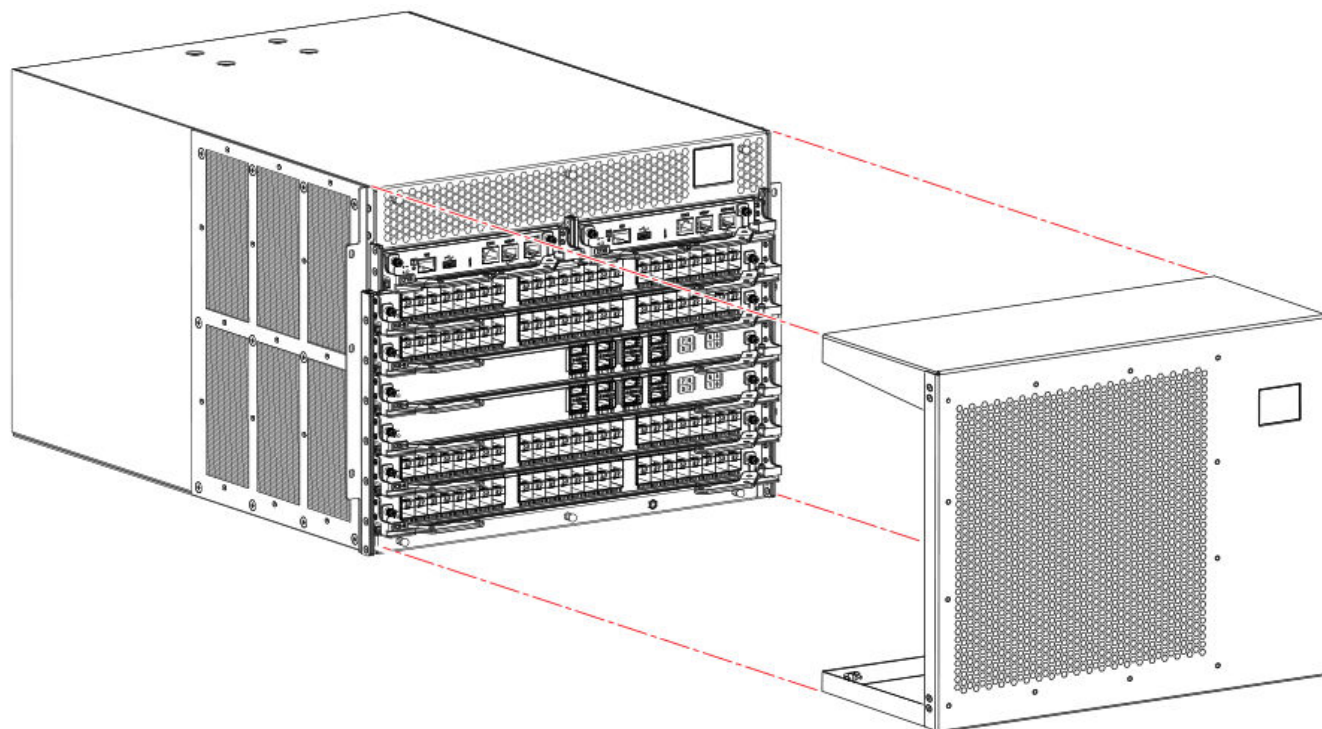**FIGURE 80** Installing chassis door





# Replacing the Chassis

• Chassis replacement overview.....	211
• Precautions specific to chassis replacement.....	211
• Chassis replacement task guide.....	212
• Chassis fault indicators.....	212
• Time and items required.....	213
• Preparing for replacement.....	213
• Removing components from the chassis.....	217
• Installing the replacement chassis.....	218
• Installing components into the chassis.....	218
• Synchronizing airflow direction on WWN cards.....	219
• Downloading the configuration.....	220
• Reconnecting system to the network and fabric.....	220
• Verifying correct operation of system.....	221
• Verifying correct configuration of the fabric.....	223

## Chassis replacement overview

Before replacing the chassis, you will need to remove all blades and FRUs, except the WWN cards, from the existing chassis. You will reinstall these in the replacement chassis. Do not remove components without following procedures in this section exactly as you will need to save critical device and SAN information for these components before disconnecting the chassis from the network, fabric, and power to begin removal procedures. After you reinstall components in the new chassis, follow exact procedures to reconnect to the network, fabric and power, and then download firmware if necessary and verify system operation and configuration.

### NOTE

New WWN cards are shipped preinstalled in the replacement chassis. Do not replace the WWN cards in the replacement chassis with the old WWN cards from chassis that you are replacing. This will result in licensing and return materials authorization (RMA) issues for your product. The original license will be transferred to the replacement chassis, based on the license identification (LID) of the new, preinstalled WWN card, through the RMA process. You should be provided a license for the new chassis through email. If you have not received this, contact your Brocade support representative.

Before beginning these procedures, perform the following tasks:

- Place the replacement chassis in close proximity to the old chassis.
- Provide a surface on which to place the old chassis, such as a second lift or the pallet originally provided with the chassis.
- Obtain all tools and other materials listed under [Time and items required](#) on page 213.

To unpack and transport the new chassis, follow procedures under [Unpacking and transporting the device](#) on page 30.

## Precautions specific to chassis replacement

Observe the following precautions when replacing the chassis.

When removing components, Wear a wrist grounding strap connected to bench ground.



### DANGER

*For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.*



**DANGER**

*Disconnect the power cord from all power sources to completely remove power from the device.*



**DANGER**

*Use safe lifting practices when moving the product.*



**DANGER**

*Make sure the rack housing the device is adequately secured to prevent it from becoming unstable or falling over.*



**DANGER**

*A completely empty chassis weighs approximately 24.49 kg (54 lb) and requires a hydraulic or assisted lift to install it.*

## Chassis replacement task guide

Following are the basic tasks for removing and replacing the chassis with its backplane.

**NOTE**

The device must be removed from the fabric and powered off to perform these tasks. Contact your support provider if you have any questions about whether the chassis requires replacement.

1. [Recording critical device and SAN information](#) on page 214
2. [Disconnecting from network and fabric](#) on page 217
3. [Removing components from the chassis](#) on page 217
4. [Installing the replacement chassis](#) on page 218
5. [Installing components into the chassis](#) on page 218
6. [Downloading the configuration](#) on page 220
7. [Reconnecting system to the network and fabric](#) on page 220
8. [Verifying correct operation of system](#) on page 221
9. [Verifying correct operation of system](#) on page 221

## Chassis fault indicators

Verify that replacement of the chassis is necessary. If error messages and LED operation indicates faulty components, ensure that the components are firmly seated. Contact your support provider with any questions about whether the chassis should be replaced.

Any of the following events might indicate the need to replace the chassis:

- Visible mechanical damage to the chassis, including damage to sheet metal or card guides that prevents correct installation of a blade.
- Bent or damaged connectors on the backplane (the surface inside the chassis to which the blades connect).
- One or more components (such as a power supply, blower assembly, port blade, control processor blade, core switch blade, or WWN card) do not function properly even after the component was replaced.
- Intermittent FAULTY codes for blades. Reseat the blade and visually inspect the ejector stiffening rails for possible wear or damage. It is important that the blade ejector handles not slip out during blade installation. If this happens, it is usually due to excessive wear or damage to the ejector stiffening rails.

- The **psShow** or **fanShow** commands continue to show a faulty component even though the component was replaced.
- The **slotShow** command continues to show a faulty control processor, core switch, or port blade even though the blade was replaced.

## Time and items required

The chassis replacement takes approximately 3 to 4 hours.

The following items are required for the chassis replacement:

- Electrostatic discharge (ESD) grounding strap
- ESD grounding pads for protecting all blades and WWN cards
- Serial cable and workstation computer with a terminal emulator application (such as HyperTerminal for Windows systems or TIP for Solaris systems), required only if serial console session used
- Pallet jack or hydraulic or assisted lift that raises a minimum of 140 cm (55 in.) and carries a minimum of 113 kg (250 lb)
- A surface on which to place the old chassis, such as a second lift or the pallet originally provided with the old chassis
- #1 and #2 Phillips screwdriver. Use #1 Phillips screwdriver for removing and installing blades and FRUs in chassis.

## Preparing for replacement

Before beginning replacement procedures you must run the a series of Fabric OS commands and record device information for safekeeping that may be required for installing and configuring the new chassis. This includes information on licenses, IP address, WWN, serial numbers, switch ID, location of configuration files, and fabric details. It also includes information that might be required by Technical Support. [Recording critical device and SAN information](#) on page 214 instructs you to run the following commands and record specific output:

- supportShow
- configUpload - all
- configupload -vf
- ipAddrShow -sw
- chassisShow
- nsShow
- nsAllShow
- switchShow -qsfp
- fabricShow
- licenseShow
- supportShow

Before beginning replacement, you must also properly shut down the device and disconnect from the fabric and power using procedures under [Disconnecting from network and fabric](#) on page 217.

## Recording critical device and SAN information

Use a checklist, such as the following, to ensure that critical information is recorded for installing the new chassis. This information includes current chassis IP addresses, license keys, the new chassis serial number, and output from supportShow, fabricShow, and other commands. Save output from commands to text files listed in the table.

All commands must be entered from a CLI session (Telnet or serial) to the active CP blade unless otherwise indicated. For detailed information about Fabric OS commands, refer to the *Fabric OS Command Reference*.

**TABLE 28** Critical information checklist

Checked?	Data	Notes
Configuration information		
	Location of "config-switch.txt" file	
	Location of "config-miscinfo.txt" file	
	IP address, subnet mask	
	WWN for the device	
SAN profile		
	Location of "SANbefor.txt" file	
	Notes regarding <b>nsshow</b> output	
	Notes regarding <b>nsallshow</b> output	
	Notes regarding <b>switchshow</b> output	
	Notes regarding <b>fabricshow</b> output	
Output from licenseshow command		
	License keys and other licensing data for licensed products enabled on device.	
Output from supportshow command		
	Location of "spptshow.txt" file	
	Notes regarding <b>supportshow</b> output	
Information about the new chassis		
	New factory serial number	
	New serial number (if available)	

1. Open a telnet session and log into the device as **admin**. The default password is *password*. Enable the logging function on your telnet or serial console connection.

2. Back up the current configuration by entering the **configUpload -all**. Enter the requested information at the prompts.

#### NOTE

If you are using the Virtual Fabric feature, run **configupload -vf** before running the **configupload** command to save the logical switch configuration.

This **configUpload -all** command uploads the device configuration to the customer-defined FTP server, making it available for downloading. Alternatively, you can save the configuration file to a Brocade USB device. For more information about this command, refer to the *Brocade Fabric OS Command Reference*.

```
switch:admin> configupload
Protocol (scp or ftp) [ftp]: ftp
Server Name or IP Address [host]: 123.123.123.123
User Name [user]: Admin24
File Name [config.txt]: config-switch0.txt
Password:
Upload complete
switch:admin>
```

3. Record the WWN value: Enter **wwn**, and then copy the command output into a file named config-miscinfo.txt.

```
switch:admin> wwn
10:00:00:60:69:00:00:0a
```

4. Enter **ipAddrShow**, and then copy the command output into the config-miscinfo.txt file.

```
switch:admin> ipaddrshow
Chassis
Ethernet IP Address: 10.33.60.85
Ethernet Subnetmask: 255.255.240.0
CP0
Ethernet IP Address: 10.33.60.86
Ethernet Subnetmask: 255.255.240.0
Host Name: cp0
Gateway IP Address: 10.33.48.1
CP1
Ethernet IP Address: 10.33.60.87
Ethernet Subnetmask: 255.255.240.0
Host Name: cp1
Gateway IP Address: 10.33.48.1
Backplane IP address of CP0 : 10.0.0.5
Backplane IP address of CP1 : 10.0.0.6
IPv6 Autoconfiguration Enabled: Yes
Local IPv6 Addresses:
chassis 0 stateless fd00:60:69bc:63:205:1eff:fe39:e45a/64 preferred
chassis 0 stateless fec0:60:69bc:63:205:1eff:fe39:e45a/64 preferred
cp 0 stateless fd00:60:69bc:63:205:1eff:fe40:6230/64 preferred
cp 0 stateless fec0:60:69bc:63:205:1eff:fe40:6230/64 preferred
cp 1 stateless fd00:60:69bc:63:205:1eff:fe39:ff2a/64 preferred
cp 1 stateless fec0:60:69bc:63:205:1eff:fe39:ff2a/64 preferred
IPv6 Gateways:
cp 0 fe80:60:69bc:63::3
cp 0 fe80:60:69bc:63::1
cp 0 fe80:60:69bc:63::2
cp 1 fe80:60:69bc:63::1
cp 1 fe80:60:69bc:63::2
cp 1 fe80:60:69bc:63::3
```

5. Display and record the manufacturer serial numbers.

Enter **chassisShow**, and then copy the command output into the config-miscinfo.txt file.

"Factory Serial Num" and "Serial Num" are listed under "Chassis/WWN Unit 1" and "Chassis/WWN Unit 2". If the current WWN cards are the original cards, the factory serial number listed is the same as the chassis serial number.

For example output from the **chassisShow** command, refer to [chassisShow](#) on page 115.

6. Create a SAN "profile" by entering and recording the information provided by the following commands:

- **nsShow**
- **nsAllShow**
- **switchShow -qsfp**
- **fabricShow**

Copy the command output into a text file named "SANbefor.txt." After the device is restored to the fabric, this information can be used to verify that no unintentional changes have occurred to the fabric.

```
switch:admin> nsshow
Enter Pid COS PortName NodeName TTL
<output truncated>
switch:admin> nsallshow
    12 Nx_Ports in the Fabric
<output truncated>
switch:admin> switchshow
switchName: switch
<output truncated>
switch:admin> fabricshow
Switch ID Worldwide Name Enet IP Addr FC IP Addr Name
<output truncated>
switch:admin>
```

7. Enter **licenseShow**, and then copy the command output into a text file named "licenseshow.txt."

```
switch:admin> licenseshow
S9bddb9SQbTAceeC:
Fabric license
eezeRRySff0fSe:
Remote Switch license
bzbzRcbcSc0c0SY:
Remote Fabric license
dSeR9RcSeeTfSAq:
Extended Fabric license
RyeSzRScycTzfT09:
Entry Fabric license
RyeSzRScyczfT0G:
Trunking license
RyeSzRScycS0fT09:
4 Domain Fabric license
```

8. Enter **supportShow**; then copy the command output into a text file named "spptshow.txt."

#### NOTE

The **supportShow** command has a very long output and time for completion. It may last 20 minutes or longer depending on the size of the SAN.

This command displays support information from groups of preselected Fabric OS and Linux commands. Groups include os, exception, port, fabric, services, security, network, portlog, system, extend, filter, ficon, iswitch, asic\_db, fcip, ag, dce\_hsl, and crypto. This provides a backup of all the information that might be required by Technical Support and can be used after the device is restored to the fabric to verify that no unintentional changes have occurred to the fabric.

```
switch:admin> supportshow
version: 8.0.1
<output truncated>
switch:admin>
```

9. Record the cable connections between the chassis and the target device and ports.
10. Run **supportSave** on the active CP blade. The information recorded can be very important in case you have difficulties during the replacement process.



## Disconnecting from network and fabric

Complete the following steps to disconnect the chassis from the network.

1. Shut down the device using the **sysShutdown** command on the active CP blade.

```
switch:admin> sysshutdown
This command will shutdown the operating systems on your switch.
You are required to power-cycle the switch in order to restore operation.
Are you sure you want to shutdown the switch [y/n]?y
HA is disabled
Stopping blade 1
Shutting down the blade....
Stopping blade 2
Shutting down the blade....
Stopping blade 8
Shutting down the blade....
Broadcast message from root (pts/1) Tue April 12 14:23:06 2008...
The system is going down for system halt NOW !!
```



### DANGER

*Disconnect the power cord from all power sources to completely remove power from the device.*

2. Power off the chassis by removing the power cords from the power supplies and the power outlets.
3. Remove the chassis door.
4. Label the cables connected to all blades and record the connections. Per connection, identify the director slot and port, the device connected, and the slot or port on the connected device.
5. Disconnect the cables from the transceivers in extension, port, and core routing blades and set them aside. For transceivers with integrated cables, remove the transceivers and cables together and set them aside. Transceivers without integrated cables can be left in the blades or removed.
6. Disconnect all cables from the CP blades.

## Removing components from the chassis

Follow electrostatic discharge (ESD) precautions when removing components. Wear a wrist grounding strap connected to chassis ground (if the device is plugged in) or a bench ground.

### NOTE

Do not remove WWN cards from the chassis as new WWN cards are shipped preinstalled in the replacement chassis. Do not replace the WWN cards in the replacement chassis with the old WWN cards as this will result in licensing and return materials authorization (RMA) issues for your product. The original license will be transferred to the replacement chassis, based on the license identification (LID) of the new, preinstalled WWN card, through the RMA process. You should be provided a license for the new chassis through email. If you have not received this, contact your Brocade support representative.

When removing components, Wear a wrist grounding strap connected to bench ground.



### DANGER

*For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.*

1. Remove the chassis door ([Removing a chassis door](#) on page 205) if not already removed.
2. Remove the cable management finger assemblies.
3. Remove the port, extension, blades or filler panels ([Removing a blade](#) on page 136 and [Removing a filler panel](#) on page 197).

4. Remove the core routing blades ([Removing a core routing blade](#) on page 147).
5. Remove the control processor blades ([Removing a blade](#) on page 162).
6. Remove the power supply assemblies or filler panels ([Removing a power supply](#) on page 186).
7. Remove the fan assemblies ([Removing a fan assembly](#) on page 193).

## Installing the replacement chassis

Complete the following steps to install the replacement chassis.



**DANGER**

*Use safe lifting practices when moving the product.*



**DANGER**

*A completely empty chassis weighs approximately 35.61 kg (78.5 lb) and requires a hydraulic or assisted lift to install it.*



**DANGER**

*A completely empty chassis weighs approximately 24.49 kg (54 lb) and requires a hydraulic or assisted lift to install it.*



**DANGER**

*Make sure the rack housing the device is adequately secured to prevent it from becoming unstable or falling over.*

1. If the chassis is in a rack, remove it from the rack.
2. Place the chassis on a lift or on the shipping pallet provided with the original chassis and transport to storage location.
3. Unpack the new chassis.
  - a) Cut the bands that encircle the packaging.
  - b) Open the top of the shipping box and remove accessory kit, rack mount kits, and foam from the top of the chassis.
  - c) Lift the cardboard shipping container and inner cardboard sleeve off the chassis.
  - d) Remove the antistatic plastic off the chassis.
  - e) Save the packing materials for use when returning the old chassis.
  - f) Leave the chassis on top the foam shipping tray and wood pallet if the chassis must be transported to the installation location.
  - g) Verify the contents of the shipping carton by referring to [Items shipped](#) on page 26.
  - h) Save foam packing material and wooden pallet for reuse.
4. Use a pallet jack or other assisted lift to transport the new chassis to the installation area. Doorways must be wider than 91 cm (36 in.) to accommodate the chassis on the pallet.
5. Use a lift to raise the chassis to the correct level. If installing the chassis in a rack, follow the instructions provided by the rack kit manufacturer.

## Installing components into the chassis

Follow electrostatic discharge (ESD) precautions when installing new components. Wear a wrist grounding strap connected to chassis ground (if the device is plugged in) or a bench ground.

**NOTE**

New WWN cards are shipped preinstalled in the replacement chassis. Do not replace the WWN cards in the replacement chassis with the old WWN cards from chassis that you are replacing. This will result in licensing and return materials authorization (RMA) issues for your product. The original license will be transferred to the replacement chassis, based on the license identification (LID) of the new, preinstalled WWN card, through the RMA process. You should be provided a license for the new chassis through email. If you have not received this, contact your Brocade support representative.

**DANGER**

*For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.*

1. Record the chassis serial number, SKU, and WWN printed on the chassis label. This label is located on the upper portion of the chassis to the left of the fan assemblies on the nonport side.  
You may need this information to transfer licenses to the new chassis.
2. Replace the fan assemblies ([Installing a fan assembly](#) on page 194).
3. Replace the power supplies or filler panels ([Installing a power supply](#) on page 187).
4. Replace the control processor (CP) blades ([Replacing a CP blade](#) on page 156).
5. Replace the core routing (CR) blades ([Installing a blade](#) on page 163).
6. Replace the port and extension blades or filler panels ([Installing a blade](#) on page 137 and [Installing a filler panel](#) on page 198).
7. Replace the cable management finger assemblies.
8. Replace the chassis door. The door is required to meet EMI compliance. Refer to [Installing a chassis door](#) on page 206.
9. Plug in power cords from power source into all installed power supplies to power on device. Refer to [Providing power to the device](#) on page 66.

The device performs a power-on self-test (POST). The POST takes a minimum of three minutes and is complete when LED activity returns to the standard state. The power supply LED will light green when power is applied. Note that after one power supply is plugged into AC power, LEDs on the remaining installed power supplies will flash green until they also have full power.

10. Verify that the device is powered on and POST is complete (all power LED indicators on the blades should be a steady green).
11. Verify that all components are functioning correctly by checking their LEDs. If the LEDs do not indicate correct operation, try reinstalling the corresponding component.

## Synchronizing airflow direction on WWN cards

An airflow direction mismatch may occur if the airflow direction, nonport-side intake (NPI) or nonport-side exhaust (NPE), for installed fan and power supply assembly FRUs does not match airflow direction set on new WWN cards shipped with replacement chassis.

You can check airflow direction for fans in fan and power supply assemblies installed in device with airflow direction set on WWN cards by entering the **chassisShow** command. Airflow direction of fans and power supplies displays as "Fan Direction" under each fan or power supply unit. System airflow direction displays as "System Airflow" under the WWN card unit.

If the chassisShow command or RASlog messages indicate a mismatch between system airflow direction and airflow direction of fan in power supply or fan assemblies refer, to [Configuring airflow direction on WWN cards](#) on page 177 for instructions on configuring correct airflow direction on WWN cards.

#### NOTE

Changing chassis airflow allows you to synchronize established chassis airflow direction from installed fan and power supply assemblies with airflow direction configured on WWN cards. This procedure may need to be used after replacing WWN cards. This procedure must be performed when replacing the director chassis, as replacement chassis are shipped with new WWN cards installed and airflow direction is not configured on these cards. This procedure is not supported for any other purpose.

## Downloading the configuration

Once the chassis and its various components have been reassembled and powered back on, use the **configDownload** command to restore the original configuration. The **configDownload** command can be entered through a Telnet or serial session, but the device must have an Ethernet connection to the server name or IP address of the host for the download process to complete. For more information, refer to the **help configdownload** command or the *Brocade Fabric OS Command Reference*.

Complete the following steps to download the configuration.

1. Log in to the device as **admin**.

```
switch:admin> login
login: admin
password: xxxxxxxx
switch:admin>
```

#### NOTE

If you are using the Virtual Fabric feature, you must run **configdownload -vf** before running the **configdownload** command to restore the logical switch configuration.

2. Enter the **chassisDisable** command.
3. Enter the **configDownload** command.

```
switch:admin> configdownload -all
Server Name or IP Address [host]: 123.123.123.123
User Name [None]: Admin24
File Name [config.txt]: config-switch.txt
Password: xxxxxxxx
download complete
switch:admin>
```

4. Reboot the device.
5. Enter the **chassisEnable** command to enable all user ports and enable a virtual fabric-aware chassis.

## Reconnecting system to the network and fabric

Complete the following steps to reconnect the device to the network and fabric.

1. Connect the CP blades to the local area network by following all steps in the following sections:
  - [Establishing a serial connection to the device](#) on page 73.
  - [Configuring the IP addresses](#) on page 74.
  - [Establishing an Ethernet connection to the device](#) on page 76.

#### NOTE

Once an Ethernet connection is established, the device can be accessed by remote connection using any of the available management tools, such as Telnet or Web Tools.

2. Reconnect the transceivers and cables to the port blades.

#### NOTE

The ports and cables used in trunking groups must meet specific requirements. For a list of these requirements, refer to the *Brocade Fabric OS Administration Guide*.

- a) Position one of the transceivers so that the key is oriented correctly to the port and insert the transceiver into the port until it is firmly seated and the latching mechanism clicks.
- b) Select the cable that corresponds to the port and position it so that the key (the ridge on one side of the cable connector) is aligned with the slot in the transceiver. Insert the cable into the transceiver until the latching mechanism clicks.
- c) Repeat step a and step b for the remaining ports.
- d) Organize the cables as required.

#### NOTE

Do not route cables in front of the air exhaust vents.

## Verifying correct operation of system

Complete the following steps to verify the correct operation of the device.

1. Log in to the device as **admin**.

```
switch:admin> login
login: admin
password: xxxxxxxx
switch:admin>
```

2. Enter the **chassisShow** command to verify that airflow direction set on WWN cards matches airflow direction for fans in fan and power supply assemblies installed in device.

Airflow direction of fans and power supplies displays as "Fan Direction" under each fan or power supply unit. System airflow direction displays as "System AirFlow" under the WWN card unit. The following example shows mismatch of system airflow and airflow direction in installed fan and power supply.

```
POWER SUPPLY Unit: 1
Power Source:      AC
Fan Direction:     Non-portside Intake
...
FAN Unit: 2
Fan Direction:     Non-portside Intake
...
WWN Unit: 1
System AirFlow:    Non-portside Exhaust
...
WWN Unit: 2
System AirFlow:    Non-portside Exhaust
```

The WWN units should indicate "Non-portside Intake." If there is a mismatch of airflow direction, RASlog messages will indicate a mismatch between system airflow direction and airflow direction of fan in power supply or fan assembly refer to [Configuring airflow direction on WWN cards](#) on page 177 for instructions on configuring correct airflow direction on WWN cards.

3. Enter the **slotShow -m** command and verify that all the installed cards are detected and that their status is operational (enabled).

```
switch:admin> slotShow -m
```

Slot	Blade Type	ID	Model Name	Status
1	CP BLADE	175	CPX6	ENABLED
2	CP BLADE	175	CPX6	ENABLED
3	SW BLADE	178	FC32-48	ENABLED
4	SW BLADE	178	FC32-48	ENABLED
5	CORE BLADE	176	CR32-4	ENABLED
6	CORE BLADE	176	CR32-4	ENABLED
7	SW BLADE	178	FC32-48	ENABLED
8	AP BLADE	186	SX6	ENABLED

4. Verify that the device is functioning correctly by entering **switchShow** or **switchStatusShow**.

This **switchShow** command displays the device and port status information.

```
switch0:admin> switchshow
switchName:      sw0
switchType:      165.0
switchState:     Online
switchMode:      Native
switchRole:      Principal
switchDomain:     130
switchId:        fffc82
switchWwn:       10:00:00:05:31:03:2c:00
zoning:          ON (ZONE_CONFIG_NAME)
switchBeacon:    OFF
FC Router:       OFF
HIF Mode:        OFF
Allow XISL Use:  OFF
LS Attributes:   [FID: 128, Base Switch: No, Default Switch: Yes,
Address Mode 0]
Index Slot Port Address Media Speed State Proto
=====
```

64	4	0	014000	--	N32	Online	FC	F-Port	10:00:00:05:1e:f8:a0:b4
65	4	1	014100	--	N32	Online	FC	F-Port	10:00:00:05:33:26:0e:65
66	4	2	014200	--	N32	Online	FC	F-Port	10:00:00:05:33:48:5e:f5
67	4	3	014300	--	N32	Online	FC	F-Port	10:00:00:05:1e:f8:a0:b3
68	4	4	014400	--	N32	Online	FC	F-Port	10:00:00:05:1e:f8:a0:b6

(output truncated)

5. Verify that all the IP address information is correct by entering **ipAddrShow** and checking the results against the IP information recorded in the config-miscinfo.txt file.

```
switch:admin> ipaddrshow
SWITCH
Ethernet IP Address: xxx.xxx.xxx.12
Ethernet Subnetmask: 255.55.0.0
Fibre Channel IP Address: 1.2.3.4
Fibre Channel Subnetmask: 255.255.255.0
CP0
Ethernet IP Address: xxx.xxx.xxx.10
Ethernet Subnetmask: 255.55.0.0
HostName : cp0
Gateway Address: xxx.xxx.xxx.1
CP1
Ethernet IP Address: xxx.xxx.xxx.11
Ethernet Subnetmask: 255.55.0.0
HostName : cp1
Gateway Address: .1
Backplane IP address of CP0 : 10.0.0.4
Backplane IP address of CP1 : 10.0.0.5
switch:admin>switch:admin>
```

# Verifying correct configuration of the fabric

Copying the command outputs from this section into a file is recommended. You must be logged in with Admin privileges.

1. Create an "after" SAN profile by entering the following commands and copying the output to a text file named SANafter.txt:

- **nsShow**
- **nsAllShow**
- **switchShow**
- **fabricShow**
- **lscfg --show** (if using the Virtual Fabric feature)

```
switch:admin> nsshow
Type Pid      COS      PortName NodeName TTL(sec)
  N   020f00;    3;10:00:00:01:73:00:29:46;10:00:00:01:73:00:29:46; na
      Fabric Port Name: 20:0f:00:60:69:90:03:f0
<output truncated>
switch:admin> nsallshow
{
  020f00 021fda 021fdc 021fe0 021fe1
  5 Nx_Ports in the Fabric}
switch:admin> switchshow
switchName: rsl8-st03-01
<output truncated>
switch:admin> fabricshow
Switch ID Worldwide Name Enet IP Addr FC IP Addr Name
<output truncated>
switch:admin> lscfg --show
Created switches: 128(ds) 1 2(bs)
Port      0    1    2    3    4    5    6    7    8    9
-----
FID      1 | 1 | 1 | 1 | 1 | 128 | 128 | 128 | 128 | 128 |
<output truncated>
switch:admin>
```

2. Determine any differences between the information in the SANafter.txt file and the information in the SANbefor.txt file created earlier. In particular, look for differences in the following:
  - Device types
  - Number of devices
  - ISL and port states
  - Number of switches in the fabric
3. If an SCC policy exists on the active fabric where you are connecting the new chassis, modify the policy to include the WWN of the new chassis.
  - Refer to the *Brocade Fabric OS Administration Guide* for information on SCC policy.
  - Use the **wwn** command to determine the WWN of the chassis.
  - Use the **secPolicyAdd** command to modify an existing policy.
4. Resolve any issues or unintentional changes to the device or fabric:
  - If there are any mechanical problems, try reseating the associated component.
  - If the configuration information is not correct for the device, modify as required.
  - If other issues exist, contact your support provider.





# Brocade X6 Directors Technical Specifications

## System specifications

System component	Description
Enclosure	Brocade X6-4 Director: 8 blade slots, 8U rack-mountable chassis; 27–31 in. rail, 18–24 in. rail, and airflow diversion rack mount kits for four-post rack; mid-mount kit for two-post rack.  Brocade X6-8 Director: 12 blade slots, 14U rack-mountable chassis; 27–31 in. and 22 in. rail kits for four-post rack; mid-mount kit for two-post rack.
Control processor	Redundant (active/standby) control processor blades.
Scalability	Full fabric architecture: a maximum of 239 switches.
Performance	<ul style="list-style-type: none"><li>• 4-Gbps line speed, full duplex</li><li>• 8-Gbps line speed, full duplex</li><li>• 10-Gbps line speed, full duplex</li><li>• 16-Gbps line speed, full duplex</li><li>• 32-Gbps line speed, full duplex</li></ul> Autosensing of 4-, 8-, 16-, and 32-Gbps port speeds depending on SFPs used. Speed matching between 4-, 8-, 16-, and 32-Gbps port speeds. 10-Gbps port speeds with dedicated SFPs.
Slot bandwidth	1,536 Gbps (data rate)
Local switching bandwidth	1.5 Tbps for Brocade FC32-48: 48 ports × 32 Gbps (data rate)
Chassis bandwidth	Brocade X6-4 Director: 8 Tbps per chassis (192 ports with 32 Gbps data rate plus 16 4x32 Gbps ICLs) Brocade X6-8 Director: 16 Tbps per chassis (384 ports with 32 Gbps data rate plus 32 4x32 Gbps ICLs)
ISL trunking	Can use up to 8 ports in a trunk group to form a 256-Gbps trunk.
UltraScale ICL bandwidth	Brocade X6-4 Director: 2 Tbps; 16 UltraScale ICL ports provide the equivalent of 64 32-Gbps ports. Each UltraScale ICL port provides 128-Gbps bandwidth over a QSFP (32 Gbps × 4) link.  Brocade X6-8 Director: 4 Tbps; 32 UltraScale ICL ports provide the equivalent of 128 32-Gbps ports. Each UltraScale ICL port provides 128 Gbps bandwidth over a QSFP (32 Gbps × 4) line.  Both models: Frame-based trunking is enabled between four UltraScale ICLs. DPS distributes exchanges across all frame trunks.
Power inlet	C20: AC power supply.  Anderson Saf-D-Grid® 400: HVAC/HVDC power supply.  Power from nonport side, all power supplies.
Power supplies: Brocade X6-4 Director	Up to two modular, hot-swappable AC power supplies providing 1450 W (100–120 VAC) and 2870 W (200–240 VAC).  Up to two modular, hot-swappable HVAC/HVDC power supplies providing 1450 W (100–120 VAC) and 2870 W (192–400 VDC or 180–305 VAC).
Power supplies: Brocade X6-8	Up to four modular, hot-swappable AC power supplies providing 1450 W (100–120 VAC) and 2870 W (200–240 VAC).  Up to four modular, hot-swappable HVAC/HVDC power supplies providing 1450 W (100–120 VAC) and 2870 W (192–400 VDC or 180–305 VAC).

System component	Description
	<p><b>NOTE</b> Refer to "Power Supply Requirements" section of this Technical Specification for details on minimum power supplies required for operation and redundancy.</p>
Cooling	<p>Brocade X6-4 Director: Two fan assemblies, nonport-side exhaust or intake, for 1+1 redundancy. Each assembly contains 2 fans for total of 4. System requires 3 out of 4 functioning fans for operation. One fan assembly can be hot-swapped, but must be replaced immediately.</p> <p>Brocade X6-8 Director: Three fan assemblies, nonport-side exhaust or intake, for 2+1 redundancy. Each assembly contains 2 fans for total of 6. System requires 5 out of 6 functioning fans for operation. One fan assembly can be hot-swapped, but must be replaced immediately.</p>
System architecture	Nonblocking shared memory
System processors	FreeScale P4080 (8 core), 1.5 GHz
Aggregate bandwidth	<p>Brocade X6-4 Director: 8 Tbps when populated with 192x32 Gbps ports and using 16 ICL ports at 128 Gbps (including 2 Tbps of ICL bandwidth)</p> <p>Brocade X6-8 Director: 16 Tbps when populated with 384x32 Gbps and using 32 ICL ports at 128 Gbps (including 4 Tbps of ICL bandwidth)</p>
Switch latency	<p>FC32-48 blade: &lt;900ns (including FEC) any port to any port local switching and 2.7 µsec blade to blade (including FEC) at 32-Gbps, cut-through routing.</p> <p>SX6 blade: FC-to-FC &lt;900ns (including FEC) and 2.7 µsec any port to any port at 32 Gbps, cut-through routing.</p>
Maximum frame size	2112-byte payload
Frame buffers	15000 per CR32 core routing blade ASIC
Port types	<p>FC32-48 port blade: F_Port, E_Port, EX_Port, M_Port, SIM, and D_Port</p> <p>SX6 extension blade: F_Port, FL_Port, E_Port, SIM, and EX_Port on FC, and VE_Port on GbE</p> <p><b>NOTE</b> Self-discovery is based on switch type (U_Port) with an optional port type control.</p>
Data traffic types	Fabric switches supporting unicast, multicast (255 groups), and broadcast
Media types	<p>FC32-48 port blade: supports Brocade hot-pluggable 32 Gbps SWL/LWL SFP28, 16 Gbps SWL/LWL/ELWL SFP+, 10 Gbps SWL/LWL SFP</p> <p>SX6 extension blade: supports hot-pluggable Brocade 32 Gbps SWL/LWL SFP28, 16 Gbps SWL/LWL/ELWL SFP+, 10 Gbps SWL/LWL SFP, 1 GbE copper SFP, 1GbE 1000Base-SX/LX/CWDM SFP, 10 GbE SR/LR SFP+, 10 GbE Tunable DWDM 80km SFP+, and 40 GbE SR4/LR4/ER4 QSFP.</p> <p>CR32-4 and CR32-8 core routing blades: support Brocade-branded, hot-pluggable 4x32 Gbps SWL QSFP, 4x16 Gbps SWL QSFP, 4x16 Gbps 2km LWL QSFP for ICL connections</p>
USB	One USB port per control processor for firmware download, support save, and configuration upload or download
Fabric services	Advanced Performance Monitoring; Adaptive Networking (Ingress Rate Limiting, Traffic Isolation, QoS); BB credit recovery; Brocade Advanced Zoning (default zoning, port/WWN zoning, broadcast zoning); Dynamic Path Selection (DPS); Extended Fabrics; Fabric Vision; FDMI; FICON CUP; Frame Redirection; FSPF; Integrated Routing; IPFC; ISL Trunking; Management Server; N_Port Trunking; NPIV; NTP v3; Port Fencing; Registered State Change Notification (RSCN); Reliable Commit Service (RCS); Simple Name Server (SNS); syslog; Flow Vision; Virtual Fabrics (Logical Switch, Logical Fabric); target-driven zoning; peer zoning
Extension	Supports DWDM, CWDM, and FC-SONET devices; Fibre Channel, in-flight compression (Brocade LZO) BB credit recovery; Extension trunking, FICON Extension, IP Extension, Adaptive Rate Limiting (ARL), data compression, Fast Write, read/write Tape Pipelining, QoS
FICON	FICON cascading; support for lossless DLS; FICON CUP; Advanced Accelerator for FICON (IBM z/OS Global Mirror and read/write Tape Pipelining)
Inter-chassis link (ICL)	Chassis-to-chassis linkage through connectors on the core routing (CR) blade

# Fibre channel

System component	Description
Fibre Channel ports	Brocade X6-4 Director: Up to 192 32-Gbps ports, universal (F_Port, E_Port, EX_Port, M_Port, D_Port, FICON) Brocade X6-8 Director: Up to 384 32-Gbps ports, universal (E_Port, F_Port, EX_Port, M_Port, D_Port, FICON)
Classes of service	Class 2, Class 3, Class F (interswitch frames)
ANSI Fibre Channel protocol	FC-PH (Fibre Channel Physical and Signalling Interface standard)
Fabric initialization	Complies with FC-SW 5.0
IP Extension (IP over Fibre Channel)	Complies with FC-IP 2.3 of the FCA profile
Port to port latency	Local switching: 900 ns (including FEC) any port to any port; Blade to blade: 2.7 microseconds (including FEC) E_Port to E_Port
Switching capacity	An aggregate switching capacity of 13.5 billion frames per second (for Class 2, Class 3, and Class F frames for a 384-port chassis)

# LEDs

System component	Description
Port status	Bicolor (green and amber) Fibre Channel port status LED on port blades displaying nine different LED states based on FC port activity and status.  Bicolor (green and amber) QSFP ICL port LED on core routing blades displaying four different states based on activity and status of all four lanes.  Bicolor (green and amber) Fibre Channel port status on extension blades displaying eight different LED states based on port activity and status.  Bicolor (green and amber) Ethernet port status on extension blades displaying four different LED states based on port activity and status.
Blade power and status	Unicolor (green) displaying power off and power on condition.  Unicolor (amber) LED displaying four different LED states based on blade operation.
CP blade status	Unicolor (green) Ethernet link status displaying two different states depending on link operation.  Unicolor (green) Ethernet link activity displaying two different states depending on link operation.  Unicolor (blue) control processor (CP) displaying two different states depending on active or standby status.  Unicolor (bright white) illuminates to indicate blade location (beacon).
WWN card status	Unicolor (green) displaying power off and power on condition.  Unicolor (amber) fault LED.
Fan status	Unicolor (green) displaying power off and power on condition.  Unicolor (amber) status LED displaying four different LED states based on fan operation.
Power supply status	Unicolor (green) power status LED displaying different LED states based on power supply operation.

## Other

System component	Description
Serial Cable	RS-232 serial cable
RJ-45 to DB9 adaptor	RS-232 cable has an adapter at one end that can be removed to provide an RJ-45 style connector. For serial port.
RJ-45 connector	For 10/100/1000 Ethernet management port and 10 Gbps Ethernet port on control processor (CP) blades.  <b>NOTE</b> The 10 Gbps port is reserved for future use.

## Weight and physical dimensions

Model	Height	Width	Depth	Weight (empty)	Weight (fully loaded)
Brocade X6-8 Director	61.23 cm 24.11 inches	43.74 cm 17.23 inches	61.05 cm 24.04 inches	35.61 kg 78.5 lb	145.83 kg 321.5 lb Weight includes all blades and four power supplies.
Brocade X6-8 Director with door	61.23 cm 24.11 inches	43.74 cm 17.23 inches	72.96 cm 28.72 inches		
Brocade X6-4 Director	34.45 cm 13.56 inches	43.74 cm 17.23 inches	61.04 cm 24.04 inches	24.49 kg 54 lb	68.95 kg 152.0 lb Weight includes all blades and two power supplies.
Brocade X6-4 Director with Airflow Diverter and Port Side Exhaust Kit	40.00 cm 15.75 inches	43.74 cm 17.22 inches	61.29 cm 24.09 inches		
Brocade X6-4 Director with door	34.45 cm 13.56 inches	43.74 cm 17.23 inches	73.20 cm 28.82 inches		

Blade	Description	Length	Depth	Height	Weight
CPX6 blade	Control processor blade	20.55 cm 8.09 inches	34.46 cm 13.57 inches	3.28 cm 1.29 inches	1.93 kg 4.25 lb
CR32-4 blade (without media)	Core routing blade for Brocade X6-4 Director	42.06 cm 16.56 inches	34.13 cm 13.44 inches	3.63 cm 1.43 inches	3.92 kg 8.65 lb
CR32-8 blade (without media)	Core routing blade for Brocade X6-8 Director	42.06 cm 16.56 inches	34.13 cm 13.44 inches	3.63 cm 1.43 inches	4.87 kg 10.75 lb
FC32-48 port blade (without media)	48-port Brocade port blade supporting 4/8/10/16/32 Gbps	42.06 cm 16.56 inches	34.13 cm 13.44 inches	3.63 cm 1.43 inches	4.35 kg 9.6 lb

Blade	Description	Length	Depth	Height	Weight
SX6 extension blade (without media)	Enables FC extension functionality over existing IP infrastructure.  Has 16 FC ports supporting 8/10/16/32 Gbps, 16 GbE ports supporting 1 or 10 Gbps, and 2 GbE ports supporting 40 Gbps.	42.06 cm	34.13 cm	3.63 cm	5.22 kg
		16.56 inches	13.44 inches	1.43 inches	11.5 lb

## Environmental requirements

Condition	Operational	Non-operational (storage)
Ambient temperature	0°C to 40°C (32°F to 104°F)	-25°C to 70°C (-13°F to 158°F)
Relative humidity (non-condensing)	5% to 93% at 40°C (104°F) with maximum gradient of 10% per hour	10% to 93% at 70°C (158°F)
Altitude (above sea level)	0 to 3000 m (10,000 feet)	0 to 12000 m (40,000 feet)
Shock	10 G, 11 ms, half-sine wave	20 G, 11 ms, half-sine wave
Vibration	Random vibration is 5-10Hz @ +5db/Oct; 10-200Hz @ 0.0005 Grms; 200-500Hz @ -5db/Oct. Scale 0.05 Grms	Random Vibration is 3-10Hz @ +5db/Oct; 10-200Hz @ 0.0065 Grms; 200-500Hz @ -5db/Oct. Scale 1.12 Grms
Air flow	Brocade X6-8 Maximum: 1711 cmh (1007 cfm)  Brocade X6-8 Nominal: ~985 cmh (~580 cfm)  Brocade X6-4 Maximum: 953 cmh (561 cfm)  Brocade X6-4 Nominal: ~486 cmh (~286 cfm)	N/A
Heat dissipation	Brocade X6-4: refer to Watts and Btu/hr values under VAC inputs in Typical, Idle, and Maximum Power Consumption tables.  Brocade X6-8: refer to Watts and Btu/hr values under VAC inputs in Typical, Idle, and Maximum Power Consumption tables.	N/A
Operating noise	Brocade X6-4: 64.2 dB  Brocade X6-8: 68.2 dB	N/A

## Power supply specifications (per PSU)

Power supply model	Maximum output power rating (DC)	Output power vs. input voltage	Input line frequency	Maximum input current	Input line protection	Maximum inrush current
AC power supply  FRU numbers: XBR-X6-RACNIPSU-0104 XBR-X6-RACNPEPSU-0104	1450/2870 W	1450 W Output 100–120 VAC (nominal) 90–132 VAC (range)  2870 W Output 200–240 VAC (nominal) 180–264 VAC (range)	50–60 Hz (nominal)	16 A	Line & Neutral Fused	35 A peak for <10 ms at cold or warm start  25 A peak for cycles 10ms–150ms

Power supply model	Maximum output power rating (DC)	Output power vs. input voltage	Input line frequency	Maximum input current	Input line protection	Maximum inrush current
						Less than fuse rating for >150ms
HVAC/HVDC power supply FRU numbers: XBR-X6-HVNPIPSU-0104 XBR-X6-HVNPEPSU-0104		1450 W Output 100–120 VAC(nominal) 90–132 VAC (range) 2870 W Output 200–277 VAC (nominal) 180–305 VAC (range) 2870 W Output 240–380 VDC (nominal) 192–400 VDC (range)	50–60 Hz (nominal)	16 A	Line & Neutral Fused	35 A peak for <10 ms at cold or warm start  25 A peak for cycles 10ms–150ms  Less than fuse rating for >150ms

## Power supply requirements

The minimum number of power supplies needed in your system for operation and to achieve redundancy depends on the blade and port configuration and the AC or DC input voltage level. N is minimum number of power supplies to operate configuration, N+N doubles power supplies for full AC or DC input and DC output redundancy, and N+1 adds additional power supply for DC output redundancy in case of single power supply failure. Although examples for different port and blade configurations are provided, for more information and help with determining the actual number of power supplies for your deployment, contact your local Brocade representative.

### NOTE

In the following table, HVAC and HVDC indicates voltages from the high-voltage AC and high-voltage DC power supply.

Model name	Configured ports	Input connection	Minimum power supplies for operation	Number of power supplies (redundancy)
Brocade X6-4	Any combination of 32 Gbps ports, Extension blades, and QSFP ICLs	100–120 VAC (low line)	2	Not supported
		200–240 VAC (high line)	1	2 (N+N)
		200–277 HVAC (high line)		
		240–380 HVDC		
Brocade X6-8	144 32 Gbps ports and QSFP ICLs	100–120 VAC (low line)	2	3 (N+1)
		100–120 VAC (low line)	2	4 (N+N)
		200–240 VAC (high line)	1	2 (N+N)
		200–277 HVAC (high line)		
Brocade X6-8	384 32 Gbps ports and QSFP ICLs	240–380 HVDC		
		100–120 VAC (low line)	3	Not supported
		200–240 VAC (high line)	2	3 (N+1)
		200–277 HVAC (high line)		
		240–380 HVDC		
		200–240 VAC (high line)	2	4 (N+N)
		200–277 HVAC (high line)		
		240–380 VDC		

Model name	Configured ports	Input connection	Minimum power supplies for operation	Number of power supplies (redundancy)
Brocade X6-8	Any combination of 32 Gbps ports, Extension blades, and QSFP ICLs	100–120 VAC (low line)	3	Not supported
		200–240 VAC (high line)	2	3 (N+1)
		200–277 HVAC (high line)		
		240–380 HVDC		
		200–240 VAC (high line)	2	4 (N+N)
		200–277 HVAC (high line)		
		240–380 HVDC		

## Power consumption for AC power supplies (typical configuration)

The typical power consumption configuration features fans at nominal speed and the FC32-48 port blade configured with optics operating at 50% line rate and random packets (does not include the power draw for the SX6 extension blade).

Model name	@100 VAC input	@200 VAC input	@-48 VDC input	Minimum number of power supplies	Notes
Brocade X6-4	1407 W 4802 BTU/hr	1376 W 4696 BTU/hr	Not supported	2 power supplies for AC low Line (100–120 VAC)  1 power supply for AC high line (200–240 VAC)  One power supply provides system power, but two must be installed to provide power efficiency and redundancy.	Brocade X6-4 fully loaded: 2 CP blades, 2 CR blades, 4 FC32-48 port blades, 2 fan assemblies
Brocade X6-8	2647 W 9034 BTU/hr	2589 W 8836 BTU/hr	Not supported	3 power supplies for AC low line (100–120 VAC)  2 power supplies for AC high line (200–240 VAC)  Two power supplies provide system power, but 3 or 4 must be installed to provide power efficiency and redundancy.	Brocade X6-8 fully loaded: 2 CP blades, 2 CR blades, 8 FC32-48 port blades, 3 fan assemblies

## Power consumption for AC power supplies (idle configuration)

No optics or connections, ports disabled, and system completed boot up, fans at low speed.

Model name	@100 VAC input	@200 VAC input	@-48 VDC input	Minimum number of power supplies	Notes
Brocade X6-4	840 W 2867 BTU/hr	822 W 2806 BTU/hr	Not supported	2 power supplies for AC low line (100–120 VAC)  1 power supply for AC high line (200–240 VAC)	Brocade X6-4 fully loaded: 2 CP blades, 2 CR blades, 4 FC32-48 port blades, 2 fan assemblies

Model name	@100 VAC input	@200 VAC input	@-48 VDC input	Minimum number of power supplies	Notes
				One power supply provides system power, but two must be installed to provide power efficiency and redundancy.	
Brocade X6-8	1515 W 5171 BTU/hr	1481 W 5055 BTU/hr	Not supported	3 power supplies for AC low line (100–120 VAC)  2 power supplies for AC high line (200–240 VAC)  Two power supplies provide system power, but 3 or 4 must be installed to provide power efficiency and redundancy.	Brocade X6-8 fully loaded: 2 CP blades, 2 CR blades, 8 FC32-48 port blades, 3 fan assemblies

## Power consumption for AC power supplies (maximum configuration)

The maximum power consumption configuration features fans at maximum speed and the FC32-48 blade installed with optics. Traffic is at full-line rate, smallest packet is 64-bytes, 40°C (104°F) ambient temperature, and maximum power for all supported optics. Does not include the power draw for the SX6 extension blade.

Model name	@100 VAC input	@200 VAC input	@-48 VDC input	Minimum number of power supplies	Notes
Brocade X6-4	2438 W 8322 BTU/hr	2385 W 8139 BTU/hr	N/A	2 for AC low line (100–120 VAC) 1 for AC high line (200–240 VAC)  One power supply provides system power, but two must be installed to provide power efficiency and redundancy.	Brocade X6-4 fully loaded: 2 CP blades, 2 CR blades, 4 FC32-48 port blades, 2 fan assemblies
Brocade X6-8	4339 W 14810 BTU/hr	4244 W 14485 BTU/hr	N/A	3 for AC low line (100–120 VAC) 2 for AC high line (200–240 VAC)  Two power supplies provide system power, but 3 or 4 must be installed to provide power efficiency and redundancy	Brocade X6-8 fully loaded: 2 CP blades, 2 CR blades, 8 FC32-48 port blades, 3 fan assemblies

## Power consumption for HVAC/HVDC power supplies (typical configuration)

The typical power consumption configuration features fans at nominal speed and the FC32-48 port blade configured with optics operating at 50% line rate and random packets (does not include the power draw for the SX6 extension blade).

Model name	@240 VDC input @ 100 VAC input	@380 VDC input @ 240 or 277 VAC input	Minimum number of power supplies	Notes
Brocade X6-4	1361 W 4645 BTU/hr	1332 W 4546 BTU/hr	1 power supply for DC input (192–400 VDC) 2 power supplies for AC low line (100–120 VAC) 1 power supply for AC high line (200–277 VAC)	Brocade X6-4 fully loaded: 2 CP blades, 2 CR blades,



Model name	@240 VDC input @ 100 VAC input	@380 VDC input @ 240 or 277 VAC input	Minimum number of power supplies	Notes
			One power supply provides system power, but two must be installed to provide power efficiency and redundancy.	4 FC32-48 port blades, 2 fan assemblies
Brocade X6-8	2561 W 8741 BTU/hr	2506 W 8553 BTU/hr	2 power supplies for DC input (192–400 VDC) 3 power supplies for AC low line (100–120 VAC) 2 power supplies for AC high line (200–277 VAC) Two power supplies provide system power, but 4 must be installed to provide power efficiency and redundancy.	Brocade X6-8 fully loaded: 2 CP blades, 2 CR blades, 8 FC32-48 port blades, 3 fan assemblies

## Power consumption for HVAC/HVDC power supplies (idle configuration)

No optics or connections, ports disabled, and system completed boot up, fans at low speed.

Model name	@240 VDC input @ 100 VAC input	@380 VDC input @ 240 or 277 VAC input	Minimum number of power supplies	Notes
Brocade X6-4	813 W 2775 BTU/hr	796 W 2717 BTU/hr	1 power supply for DC input (192–400 VDC) 2 power supplies for AC low line (100–120 VAC) 1 power supply for AC high line (200–277 VAC) One power supply provides system power, but two must be installed to provide power efficiency and redundancy.	Brocade X6-4 fully loaded: 2 CP blades, 2 CR blades, 4 FC32-48 port blades, 2 fan assemblies
Brocade X6-8	1465 W 5000 BTU/hr	1434 W 4894 BTU/hr	2 power supplies for DC input (192–400 VDC) 3 power supplies for AC low line (100–120 VAC) 2 power supplies for AC high line (200–277 VAC) Two power supplies provide system power, but 4 must be installed to provide power efficiency and redundancy.	Brocade X6-8 fully loaded: 2 CP blades, 2 CR blades, 8 FC32-48 port blades, 3 fan assemblies

## Power consumption for HVAC/HVDC power supplies (maximum configuration)

The maximum power consumption configuration features fans at maximum speed and the FC32-48 blade installed with optics. Traffic is at full-line rate, smallest packet is 64-bytes, 40°C (104°F) ambient temperature, and maximum power for all supported optics. Does not include the power draw for the SX6 extension blade.

Model name	@240 VDC input @ 100 VAC input	@380 VDC input @ 240 or 277 VAC input	Minimum number of power supplies	Notes
Brocade X6-4	2359 W 8050 BTU/hr	2309 W 2309 BTU/hr	1 power supply for DC input (192–400 VDC) 2 for AC low line (100–120 VAC) 1 for AC high line (200–277 VAC)  One power supply provides system power, but two must be installed to provide power efficiency and redundancy.	Brocade X6-4 fully loaded: 2 CP blades, 2 CR blades, 4 FC32-48 port blades, 2 fan assemblies
Brocade X6-8	4198 W 14328 BTU/hr	4109 W 14023 BTU/hr	2 power supplies for DC input (192–400 VDC) 3 for AC low line (100–120 VAC) 2 for AC high line (200–277 VAC)  Two power supplies provide system power, but 4 must be installed to provide power efficiency and redundancy	Brocade X6-8 fully loaded: 2 CP blades, 2 CR blades, 8 FC32-48 port blades, 3 fan assemblies

## Power consumption (modules)

For blades in the following table:

- Idle: blade enabled, chips initialized, no optics, ports disabled.
- Nominal: blade enabled, optics in 50% of ports, passing line rate.
- Maximum: blade enabled, optics installed, traffic, full-line rate, 64-byte smallest packet, 40°C (104°F) ambient temperature, maximum power for all supported optics.

Module name	Module description	Power consumption
CPX6	Control Processor Blade	Idle = 38 W Typical = 45 W Maximum = 50 W
CR32-4	Core Routing Blade for Brocade X6-4	Idle = 95 W Typical = 160 W Maximum = 244 W
CR32-8	Core Routing Blade for Brocade X6-8	Idle = 180 W Typical = 342 W Maximum = 450 W
SX6	Extension Blade	Idle = 300 W Typical = 340 W Maximum = 420 W
FC32-48	48 x 32 Gbps Port Blade	Idle = 95 W Typical = 160 W Maximum = 245 W
WWN card	World Wide Name card	Idle = 1 W Typical = 1 W Maximum = 1 W

Module name	Module description	Power consumption
Fan assembly	Fan assembly containing two fans	Idle = 50 W Nominal = 100 W Maximum = 300 W

## Fibre Channel data transmission ranges

Port speed (Gbps)	Cable size (microns)	Short wavelength (SWL)	Long wavelength (LWL)	Extended long wavelength (ELWL)
4	50	150 m (492 ft) (OM2) 380 m (1,264 ft) (OM3) 400 m (1,312 ft) (OM4)	N/A	N/A
	62.5	70 m (229 ft)	N/A	N/A
	9	N/A	30 km (18.6 miles)	N/A
8	50	50 m (164 ft) (OM2) 150 m (492 ft) (OM3) 190 m (623 ft) (OM4)	N/A	N/A
	62.5	21 m (68 ft)	N/A	N/A
	9	N/A	10 km (6.2 miles)	N/A
10	50	82 m (269 ft) (OM2) 300 m (984 ft) (OM3) 550 m (1,804 ft) (OM4)	N/A	N/A
	62.5	33 m (108 ft)	N/A	N/A
	9	N/A	10 km (6.2 miles)	N/A
16	50	35 m (115 ft) (OM2) 100 m (328 ft) (OM3) 125 m (410 ft) (OM4)	N/A	N/A
	62.5	15 m (49 ft)	N/A	N/A
	9	N/A	10 km (6.2 miles)	N/A
32	50	20 m (65.6 ft) (OM2) 70 m (230 ft) (OM3) 100 m (328 ft) (OM4)	N/A	N/A
	62.5	10 m (32.8 ft)	N/A	N/A
	9	N/A	10 km (6.2 miles)	N/A

## Data port specifications (Fibre Channel)

Name	Number of ports	Description
Brocade X6-4	192	32 Gbps (E, F, D, M, and EX) Fibre Channel ports using four 48-port 32 Gbps Fibre Channel port blades.
Brocade X6-8	384	32 Gbps (E, F, D, M, and EX) Fibre Channel ports using four 48-port 32 Gbps Fibre Channel port blades.

## Class 1M transceiver specification

Specification	Standards approval	Description
Class 1M	Pass	Radiation output and standards information
<3.1 mW	N/A	Max output of laser radiation
N/A	N/A	Pulse duration
840-860 nm	N/A	Emitted wavelength(s)
IEC 60825-1:2007 IEC 60825-2:A2/2010	Pass	The name and publication date of the standard

## Serial port specifications (pinout RJ-45)

Pin	Signal	Description
1	Not supported	NA
2	Not supported	NA
3	UART1_RXD	Transmit data
4	GND	Logic ground
5	GND	Logic ground
6	UART1_TXD	Receive data
7	Not supported	NA
8	Not supported	NA

## Serial port specifications (protocol)

Parameter	Value
Baud	9600
Data bits	8
Parity	None
Flow control	None

**NOTE**  
Flow control on customer terminal servers.

## Memory specifications (per CP blade)

Memory	Type	Size
Main memory	DDR3 MiniDIMM	16 GB
Boot flash	On-board NAND	4 MB
Compact flash	eUSB	16 GB

## Regulatory compliance (EMC)

- FCC Part 15, Subpart B (Class A)
- EN 55022 (CE mark) (Class A)
- EN 55024 (CE mark) (Immunity) for Information Technology Equipment
- ICES-003 (Canada) (Class A)
- AS/NZ 55022 (Australia) (Class A)
- VCCI (Japan) (Class A)
- EN 61000-3-2
- EN 61000-3-3
- EN 61000-6-1

## Regulatory compliance (safety)

- CAN/CSA-C22.2 No. 60950/UL 60950
- EN 60825 Safety of Laser Products
- EN 60950/IEC 60950 Safety of Information Technology Equipment

## Regulatory compliance (environmental)

- 2011/65/EU - Restriction of the use of certain hazardous substance in electrical and electronic equipment (EU RoHS).
- 2012/19/EU - Waste electrical and electronic equipment (EU WEEE).
- 94/62/EC - packaging and packaging waste (EU).
- 2006/66/EC - batteries and accumulators and waste batteries and accumulators (EU battery directive).
- 1907/2006 of the European Parliament and of the Council of 18 December 2006 concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals (EU REACH).
- Section 1502 of the Dodd-Frank Wall Street Reform and Consumer Protection Act of 2010 - U.S. Conflict Minerals.
- 30/2011/TT-BCT - Vietnam circular.
- SJ/T 11363-2006 Requirements for Concentration Limits for Certain Hazardous Substances in EIPs (China).
- SJ/T 11364-2006 Marking for the Control of Pollution Caused by EIPs (China).



# Regulatory Statements

---

• BSMI statement (Taiwan).....	239
• Canadian requirements.....	239
• CE statement.....	239
• China ROHS.....	240
• FCC warning (US only).....	240
• KCC statement (Republic of Korea).....	240
• VCCI statement.....	240
• Germany statement.....	240

## BSMI statement (Taiwan)

警告使用者：  
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，  
在這種情況下，使用者會被要求採取某些適當的對策。

Warning:

This is Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Canadian requirements

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations, ICES-003 Class A.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## CE statement

### ATTENTION

This is a Class A product. In a domestic environment, this product might cause radio interference, and the user might be required to take corrective measures.

The standards compliance label on this device contains the CE mark which indicates that this system conforms to the provisions of the following European Council directives, laws, and standards:

- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Low Voltage Directive (LVD) 2014/35/EU
- EN 55032/EN 55024 (European Immunity Requirements)
  - EN61000-3-2/JEIDA (European and Japanese Harmonics Spec)
  - EN61000-3-3

## China ROHS

Refer to the latest revision of the China ROHS document (P/N 53-1000428-xx) which ships with the product.

## FCC warning (US only)

This equipment has been tested and complies with the limits for a Class A computing device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

## KCC statement (Republic of Korea)

A급 기기 (업무용 방송통신기기): 이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Class A device (Broadcasting Communication Device for Office Use): This device obtained EMC registration for office use (Class A), and may be used in places other than home. Sellers and/or users need to take note of this.

## VCCI statement

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance might arise. When such trouble occurs, the user might be required to take corrective actions.

## Germany statement

Machine noise information regulation - 3. GPSGV, the highest sound pressure level value is 64.2 dB(A) in accordance with EN ISO 7779.

Maschinenlärminformations-Verordnung - 3. GPSGV, der höchste Schalldruckpegel beträgt 64.2 dB(A) gemäss EN ISO 7779.



# Cautions and Danger Notices

• Cautions.....	241
• Danger Notices.....	246

## Cautions

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.

Ein Vorsichtinweis warnt Sie vor potenziellen Personengefahren oder Beschädigung der Hardware, Firmware, Software oder auch vor einem möglichen Datenverlust

Un message de mise en garde vous alerte sur des situations pouvant présenter un risque potentiel de dommages corporels ou de dommages matériels, logiciels ou de perte de données.

Un mensaje de precaución le alerta de situaciones que pueden resultar peligrosas para usted o causar daños en el hardware, el firmware, el software o los datos.

## General cautions



### CAUTION

If fan assembly LED operation indicates a fault or no power, verify that fan is fully seated in the chassis and that captive screws securing fan in the chassis are fully tightened. If screws are loose, pressure from fans may unseat the fan from chassis connectors.

VORSICHT	Wenn eine leuchtende Lüftermontage-LED auf einen Fehler oder fehlende Stromversorgung hinweist, überprüfen Sie, ob der Lüfter vollständig in das Chassis eingesetzt wurde und ob die unverlierbaren Schrauben, mit denen der Lüfter am Chassis befestigt ist, vollständig angezogen sind. Wenn die Schrauben locker sind, kann der Lüfter durch den Lüfterdruck möglicherweise angehoben und von den Chassis-Anschlüssen getrennt werden.
MISE EN GARDE	Si le voyant à DEL d'un ventilateur indique une défaillance ou une panne de courant, vérifiez que le ventilateur est bien logé dans le châssis et que les vis qui fixent le ventilateur au châssis sont bien serrées. Si les vis sont desserrées, la pression créée par les ventilateurs peut déplacer le ventilateur suffisamment pour qu'il se connecte du châssis.
PRECAUCIÓN	Si el LED del montaje del ventilador/abanico indica una falla o una falta de energía, compruebe que el ventilador/abanico esté completamente asentado en el chasis y que los tornillos cautivos que sujetan el ventilador en el chasis estén completamente ajustados. Si los tornillos están sueltos, la presión de los ventiladores puede desmontar o desprender el ventilador de los conectores del chasis.



### CAUTION

Changes or modifications made to this device that are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

VORSICHT	Falls dieses Gerät verändert oder modifiziert wird, ohne die ausdrückliche Genehmigung der für die Einhaltung der Anforderungen verantwortlichen Partei einzuholen, kann dem Benutzer der weitere Betrieb des Gerätes untersagt werden.
MISE EN GARDE	Les éventuelles modifications apportées à cet équipement sans avoir été expressément approuvées par la partie responsable d'en évaluer la conformité sont susceptibles d'annuler le droit de l'utilisateur à utiliser cet équipement.
PRECAUCIÓN	Si se realizan cambios o modificaciones en este dispositivo sin la autorización expresa de la parte responsable del cumplimiento de las normas, la licencia del usuario para operar este equipo puede quedar anulada.

**CAUTION**

Disassembling any part of the power supply and fan assembly voids the warranty and regulatory certifications. There are no user-serviceable parts inside the power supply and fan assembly.

VORSICHT	Das Zerlegen von Netzteilen oder Lüftereinheiten macht die Garantie und die gesetzlichen Zertifizierungen ungültig. Die Netzteile und Lüftereinheiten enthalten keine Teile, die vom Benutzer gewartet werden können.
MISE EN GARDE	Le démontage d'une pièce du bloc d'alimentation ou du ventilateur annule la garantie et les certificats de conformité. Aucune pièce du bloc de l'alimentation ou du ventilateur ne peut être réparée par l'utilisateur.
PRECAUCIÓN	Si se desmonta cualquier pieza del módulo de fuente de alimentación y ventiladores, la garantía y las certificaciones normativas quedan anuladas. En el interior del módulo de fuente de alimentación y ventiladores no hay piezas que pueda reparar el usuario.

**CAUTION**

Make sure the airflow around the front, and back of the device is not restricted.

VORSICHT	Stellen Sie sicher, dass an der Vorderseite, den Seiten und an der Rückseite der Luftstrom nicht behindert wird.
MISE EN GARDE	Vérifiez que rien ne restreint la circulation d'air devant, derrière et sur les côtés du dispositif et qu'elle peut se faire librement.
PRECAUCIÓN	Asegúrese de que el flujo de aire en las inmediaciones de las partes anterior, laterales y posterior del instrumento no esté restringido.

**CAUTION**

Ensure that the airflow direction of the power supply unit matches that of the installed fan tray. The power supplies and fan trays are clearly labeled with either a green arrow with an "E", or an orange arrow with an "I".

VORSICHT	Vergewissern Sie sich, dass die Luftstromrichtung des Netzteils der eingebauten Lüftereinheit entspricht. Die Netzteile und Lüftereinheiten sind eindeutig mit einem grünen Pfeil und dem Buchstaben "E" oder einem orangefarbenen Pfeil mit dem Buchstaben "I" gekennzeichnet.
MISE EN GARDE	Veillez à ce que le sens de circulation de l'air du bloc d'alimentation corresponde à celui du tiroir de ventilation installé. Les blocs d'alimentation et les tiroirs de ventilation sont étiquetés d'une flèche verte avec un "E" ou d'une flèche orange avec un "I".
PRECAUCIÓN	Asegúrese de que la dirección del flujo de aire de la unidad de alimentación se corresponda con la de la bandeja del ventilador instalada. Los dispositivos de alimentación y las bandejas del ventilador están etiquetadas claramente con una flecha verde y una "E" o con una flecha naranja y una "I".

**CAUTION**

To protect the serial port from damage, keep the cover on the port when not in use.

VORSICHT	Um den seriellen Anschluss vor Beschädigungen zu schützen, sollten Sie die Abdeckung am Anschluss belassen, wenn er nicht verwendet wird.
MISE EN GARDE	Mettre le bouchon de protection sur le port série lorsqu'il ne sert pas pour éviter de l'endommager.
PRECAUCIÓN	Para evitar que se dañe el puerto serie, mantenga la cubierta colocada sobre el puerto cuando no lo utilice.

**CAUTION**

Never leave tools inside the chassis.

VORSICHT	Lassen Sie keine Werkzeuge im Chassis zurück.
MISE EN GARDE	Ne laissez jamais d'outils à l'intérieur du châssis
PRECAUCIÓN	No deje nunca herramientas en el interior del chasis.

**CAUTION**

Use the screws specified in the procedure. Using longer screws can damage the device.

VORSICHT	Verwenden Sie die in der Anleitung aufgeführten Schrauben. Mit längeren Schrauben wird das Gerät möglicherweise beschädigt.
MISE EN GARDE	Utilisez les vis mentionnées dans les instructions. L'utilisation de vis plus longues peut endommager l'appareil.
PRECAUCIÓN	Utilice los tornillos especificados en el procedimiento. Si utiliza tornillos de mayor longitud, podría dañar el dispositivo.

**CAUTION**

To avoid damaging blade and chassis, do not push the blade into a slot or pull the blade from a slot using the ejector handles.

VORSICHT	Um Beschädigung von Blade und Chassis zu vermeiden drücken sie das Blade nicht mithilfe des Auswurfhebels in einen Slot bzw. ziehen es heraus.
MISE EN GARDE	Pour éviter d'endommager une lame et le châssis, ne pas pousser la lame dans une fente ou retirer la lame d'une fente en utilisant les poignées d'éjection.
PRECAUCIÓN	Para evitar dañar la placa y el chasis, no coloque la placa en la ranura ni la retire de la ranura usando los mangos eyectores.

**CAUTION**

Do not attempt to lift or support the chassis by the logo bezel attached over the port-side air vents.

VORSICHT	Versuchen Sie nicht das Chassis über die Logo-Blende anzuheben oder zu stützen, welche über den portseitigen Luftauslässen angebracht ist.
MISE EN GARDE	Ne tentez pas de soulever ou de soutenir le châssis par la plaque du logo qui est fixée sur les bouches d'aération et située sur le côté des ports.
PRECAUCIÓN	No intente levantar ni sostener el chasis sujetando el bisel del logotipo colocado sobre las ventilas que se encuentra al lado del puerto Ethernet de la puerta.

**CAUTION**

Remove the logo bezel protective cover on the port side of chassis before applying power. This cover is attached over the air vents. If not removed, the chassis can overheat and will eventually shut down.

VORSICHT	Entfernen sie die Logo-Blendenschutzabdeckung auf der Portseite des Chassis, bevor sie das Gerät mit Strom versorgen. Diese Abdeckung befindet sich über den Luftauslässen. Wenn diese nicht entfernt wird, kann das Chassis überhitzen und heruntergefahren werden.
MISE EN GARDE	Retirez le couvercle de protection de la plaque du logo située sur le côté des ports du châssis avant de mettre sous tension. Ce couvercle est fixé sur les bouches d'aération. S'il n'est pas retiré, le châssis peut surchauffer et éventuellement s'arrêter.
PRECAUCIÓN	Retire la cubierta de protección del bisel del logotipo que se encuentra al lado del puerto Ethernet del chasis antes de ejercer fuerza. Esta cubierta se coloca sobre las ventilas. Si no se retira, el chasis puede sobrecalentarse y eventualmente apagarse.

## Electrical cautions

**CAUTION**

Use a separate branch circuit for each power cord, which provides redundancy in case one of the circuits fails.

VORSICHT	Es empfiehlt sich die Installation eines separaten Stromkreisweiges für jede Elektroschnur als Redundanz im Fall des Ausfalls eines Stromkreises.
MISE EN GARDE	Utilisez un circuit de dérivation différent pour chaque cordon d'alimentation ainsi, il y aura un circuit redondant en cas de panne d'un des circuits.

PRECAUCIÓN	Use un circuito derivado separado para cada cordón de alimentación, con lo que se proporcionará redundancia en caso de que uno de los circuitos falle.
------------	--

**CAUTION**

For the NEBS-compliant installation of a Brocade device, use a ground wire of at least 2 AWG. The ground wire should have an agency-approved crimped connector (provided with the device) attached to one end, with the other end attached to building ground. The connector must be crimped with the proper tool, allowing it to be connected to both ground screws on the enclosure. Before crimping the ground wire into the provided ground lug, ensure that the bare copper wire has been cleaned and antioxidant is applied to the bare wire. In addition, anti-rotation devices or lock washers must be used with all screw connections for the grounding wire.

VORSICHT	Zur NEBS-konformen Installation eines Brocade Geräts muss zur Erdung ein Kabel der Stärke von mindestens 2 AWG verwendet werden. Das Erdungskabel muss an einem Ende mit einem zugelassenen Crimp-Anschluss (im Lieferumfang des Geräts) versehen sein und mit dem anderen Ende an die Gebäude-Erde angeschlossen werden. Der Anschluss muss mit einem geeigneten Werkzeug gecrimpt werden, damit er mit den beiden Erdungsschrauben auf dem Gehäuse verbunden werden kann. Bevor das Erdungskabel an die Erdungsöse angeschlossen wird, muss der blanke Kupferdraht gereinigt und mit einem Antioxidationsmittel behandelt werden. Außerdem müssen bei allen Schraubverbindungen des Erdungskabels Drehsicherungen oder Sicherungsscheiben verwendet werden.
MISE EN GARDE	Pour garantir la conformité de l'installation d'un dispositif Brocade à la norme NEBS, utilisez un câble de mise à la terre d'au moins 2 AWG. Le câble de mise à la terre doit être muni d'une cosse sertie homologuée (fournie avec l'appareil) à une extrémité, l'autre extrémité étant reliée à la terre. La cosse doit être sertie avec l'outil adéquat, ce qui permet de la relier aux deux vis de mise à la terre du boîtier. Avant de sertir le câble de mise à la terre dans la cosse fournie, assurez-vous que le fil de cuivre dénudé a été nettoyé et qu'un antioxydant a été appliqué. De plus, des dispositifs antirotation ou des rondelles de frein doivent être utilisés avec tous les raccords vissés au câble de mise à la terre.
PRECAUCIÓN	Para que la instalación de un dispositivo sea conforme a la certificación NEBS, utilice un cable de conexión a tierra de calibre AWG 2 como mínimo. El cable de conexión a tierra debe disponer de un conector engarzado homologado (suministrado con el dispositivo) unido a un extremo de modo que el otro extremo se conecte a la toma de tierra. El conector se debe engarzar con la herramienta adecuada de forma que se pueda conectar a los dos tornillos de conexión a tierra del compartimento. Antes de engarzar el cable de conexión a tierra a la patilla de conexión a tierra proporcionada, asegúrese de limpiar y aplicar antioxidante al alambre pelado de cobre. Además, deben emplearse los seguros contra giro o las arandelas de sujeción en todas las uniones atornilladas del cable de toma de tierra.

**CAUTION**

Before plugging a cable into any port, be sure to discharge the voltage stored on the cable by touching the electrical contacts to ground surface.

VORSICHT	Bevor Sie ein Kabel in einen Anschluss einstecken, entladen Sie jegliche im Kabel vorhandene elektrische Spannung, indem Sie mit den elektrischen Kontakten eine geerdete Oberfläche berühren.
MISE EN GARDE	Avant de brancher un câble à un port, assurez-vous de décharger la tension du câble en reliant les contacts électriques à la terre.
PRECAUCIÓN	Antes de conectar un cable en cualquier puerto, asegúrese de descargar la tensión acumulada en el cable tocando la superficie de conexión a tierra con los contactos eléctricos.

**CAUTION**

Static electricity can damage the chassis and other electronic devices. To avoid damage, keep static-sensitive devices in their static-protective packages until you are ready to install them.

VORSICHT	Statische Elektrizität kann das System und andere elektronische Geräte beschädigen. Um Schäden zu vermeiden, entnehmen Sie elektrostatisch empfindliche Geräte erst aus deren antistatischer Schutzhülle, wenn Sie bereit für den Einbau sind.
MISE EN GARDE	L'électricité statique peut endommager le châssis et les autres appareils électroniques. Pour éviter tout dommage, conservez les appareils sensibles à l'électricité statique dans leur emballage protecteur tant qu'ils n'ont pas été installés.
PRECAUCIÓN	La electricidad estática puede dañar el chasis y otros dispositivos electrónicos. A fin de impedir que se produzcan daños, conserve los dispositivos susceptibles de dañarse con la electricidad estática dentro de los paquetes protectores hasta que esté listo para instalarlos.

**CAUTION**

All devices with AC power sources are intended for installation in restricted access areas only. A restricted access area is a location where access can be gained only by trained service personnel through the use of a special tool, lock and key, or other means of security.

VORSICHT	Alle Geräte mit Wechselstromquellen sind nur zur Installation in Sperrbereichen bestimmt. Ein Sperrbereich ist ein Ort, zu dem nur ausgebildetes Wartungspersonal mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer anderen Schutzvorrichtung Zugang hat.
MISE EN GARDE	Tous les équipements dotés de sources d'alimentation C.A. sont destinés à être installés uniquement dans des zones à accès réglementé. Une zone à accès réglementé est une zone dont l'accès n'est possible qu'au personnel de service qualifié utilisant un verrou, une clé ou un outil spécial, ou d'autres moyens de sécurité.
PRECAUCIÓN	Todos los dispositivos con fuentes de alimentación de corriente alterna (AC), están diseñados únicamente para su instalación en zonas de acceso restringido. Se entiende como área de acceso restringido un lugar al que solo puede acceder personal de servicio mediante el uso de una herramienta especial, llave y cerrojo u otro medio de seguridad similar, y que esté controlado por la autoridad responsable de esa ubicación.

**CAUTION**

If you do not install a module or a power supply in a slot, you must keep the slot filler panel in place. If you run the chassis with an uncovered slot, the system will overheat.

VORSICHT	Falls kein Modul oder Netzteil im Steckplatz installiert wird, muss die Steckplatztafel angebracht werden. Wenn ein Steckplatz nicht abgedeckt wird, läuft das System heiß.
MISE EN GARDE	Si vous n'installez pas de module ou de bloc d'alimentation dans un slot, vous devez laisser le panneau du slot en place. Si vous faites fonctionner le châssis avec un slot découvert, le système surchauffera.
PRECAUCIÓN	Si no instala un módulo o un fuente de alimentación en la ranura, deberá mantener el panel de ranuras en su lugar. Si pone en funcionamiento el chasis con una ranura descubierta, el sistema sufrirá sobrecalentamiento.

**CAUTION**

The maximum input voltage for connection to the HVAC/HVDC power supply should not exceed 305 VAC and 400 VDC .

VORSICHT	Die maximale Eingangsspannung für die Verbindung mit der HS Wechselstrom/HGÜ-Stromversorgung darf 305 V Wechselstrom und 400 V Gleichstrom nicht übersteigen.
MISE EN GARDE	La tension maximale d'entrée pour la connexion à l'alimentation CVCA/CVDC ne doit pas dépasser 305 VCA et 400 VDC .
PRECAUCIÓN	La tensión máxima de entrada para la conexión a la fuente de alimentación HVAC/HVDC no debe exceder 305 VAC y 400 VDC.

## Cautions related to equipment weight

**CAUTION**

Do not use the port cover tabs to lift the module. They are not designed to support the weight of the module, which can fall and be damaged.

VORSICHT	Verwenden Sie nicht die Laschen der Anschlussabdeckungen um ein Modul anzuheben. Diese sind nicht auf das Gewicht des Moduls ausgelegt, welches herunterfallen und dabei beschädigt werden kann.
MISE EN GARDE	N'utilisez pas les languettes du boîtier du port pour soulever le module. Elles ne sont pas conçues pour supporter le poids du module, qui peut tomber et être endommagé.
PRECAUCIÓN	No utilice las pestañas de la tapa del puerto para levantar el módulo. No están diseñadas para soportar el peso del módulo, por lo que este podría caerse y resultar dañado.



### CAUTION

To prevent damage to the chassis and components, never attempt to lift the chassis using the fan or power supply handles. These handles were not designed to support the weight of the chassis.

VORSICHT	Alle Geräte mit Wechselstromquellen sind nur zur Installation in Sperrbereichen bestimmt. Ein Sperrbereich ist ein Ort, zu dem nur Wartungspersonal mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer anderen Schutzvorrichtung Zugang hat.
MISE EN GARDE	Pour éviter d'endommager le châssis et les composants, ne jamais tenter de soulever le châssis par les poignées du ventilateur ou de l'alimentation. Ces poignées n'ont pas été conçues pour supporter le poids du châssis.
PRECAUCIÓN	Para prevenir daños al chasis y a los componentes, nunca intente levantar el chasis usando las asas de la fuente de alimentación o del ventilador. Tales asas no han sido diseñadas para soportar el peso del chasis.

## Danger Notices

A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Ein Gefahrenhinweis warnt vor Bedingungen oder Situationen die tödlich sein können oder Sie extrem gefährden können.

Sicherheitsetiketten sind direkt auf den jeweiligen Produkten angebracht um vor diesen Bedingungen und Situationen zu warnen.

Un énoncé de danger indique des conditions ou des situations potentiellement mortelles ou extrêmement dangereuses. Des étiquettes de sécurité sont posées directement sur le produit et vous avertissent de ces conditions ou situations.

Una advertencia de peligro indica condiciones o situaciones que pueden resultar potencialmente letales o extremadamente peligrosas. También habrá etiquetas de seguridad pegadas directamente sobre los productos para advertir de estas condiciones o situaciones.

## General dangers



### DANGER

*The procedures in this manual are for qualified service personnel.*

GEFAHR	Die Vorgehensweisen in diesem Handbuch sind für qualifiziertes Servicepersonal bestimmt.
DANGER	Les procédures décrites dans ce manuel doivent être effectuées par un personnel de maintenance qualifié.
PELIGRO	Los procedimientos de este manual deben llevarlos a cabo técnicos cualificados.

## Dangers related to equipment weight



### DANGER

*Use safe lifting practices when moving the product.*

GEFAHR	Beim Bewegen des Produktes ist auf eine sichere Hubtechnik zu achten.
DANGER	Utiliser des techniques de levage sûres pour déplacer le produit.
PELIGRO	Tenga mucho cuidado al levantar el producto para moverlo



### DANGER

*Make sure the rack housing the device is adequately secured to prevent it from becoming unstable or falling over.*

GEFAHR	Stellen Sie sicher, dass das Gestell für die Unterbringung des Geräts auf angemessene Weise gesichert ist, so dass das Gestell oder der Schrank nicht wackeln oder umfallen kann.
--------	---

DANGER	Vérifiez que le bâti abritant le dispositif est bien fixé afin qu'il ne devienne pas instable ou qu'il ne risque pas de tomber.
PELIGRO	Verifique que el bastidor que alberga el instrumento está asegurado correctamente para evitar que pueda hacerse inestable o que caiga.

**DANGER**

***Mount the devices you install in a rack as low as possible. Place the heaviest device at the bottom and progressively place lighter devices above.***

GEFAHR	Montieren Sie die Geräte im Gestell so tief wie möglich. Platzieren Sie das schwerste Gerät ganz unten, während leichtere Geräte je nach Gewicht (je schwerer desto tiefer) darüber untergebracht werden.
DANGER	Montez les dispositifs que vous installez dans un bâti aussi bas que possible. Placez le dispositif le plus lourd en bas et le plus léger en haut, en plaçant tous les dispositifs progressivement de bas en haut du plus lourd au plus léger.
PELIGRO	Monte los instrumentos que instale en un bastidor lo más bajos posible. Ponga el instrumento más pesado en la parte inferior y los instrumentos progresivamente más livianos más arriba.

**DANGER**

***A completely empty chassis weighs approximately 24.49 kg (54 lb) and requires a hydraulic or assisted lift to install it.***

GEFAHR	Ein unbestücktes Gerät wiegt etwa 24.49 kg und erfordert zur Installation eine hydraulische oder Servo-Hebevorrichtung.
DANGER	Un commutateur incomplet pèse environ 24.49 kg et requiert un dispositif de levage hydraulique ou électrique pour l'installation.
PELIGRO	Un chasis con la configuración incomplete pesa aproximadamente 24.49 kg (54 libras) y requiere un elevador hidráulico o asistido para realizar su instalación.

**DANGER**

***A fully populated chassis weighs approximately 68.95 kg (152.0 lbs) and requires a hydraulic or assisted lift to install it.***

GEFAHR	Ein vollständig bestücktes Gerät wiegt etwa 68.95 kg und erfordert zur Installation eine hydraulische oder Servo-Hebevorrichtung.
DANGER	Un commutateur complet pèse environ 68.95 kg et requiert un dispositif de levage hydraulique ou électrique pour l'installation.
PELIGRO	Un chasis con la configuración completa pesa aproximadamente 68.95 kg (152.0 libras) y requiere un elevador hidráulico o asistido para realizar su instalación.

## Electrical dangers

**DANGER**

***Make sure that the power source circuits are properly grounded, then use the power cord supplied with the device to connect it to the power source.***

GEFAHR	Stellen Sie sicher, dass die Stromkreise ordnungsgemäß geerdet sind. Benutzen Sie dann das mit dem Gerät gelieferte Stromkabel, um es an die Stromquelle anzuschließen.
DANGER	Vérifiez que les circuits de sources d'alimentation sont bien mis à la terre, puis utilisez le cordon d'alimentation fourni avec le dispositif pour le connecter à la source d'alimentation.
PELIGRO	Verifique que circuitos de la fuente de corriente están conectados a tierra correctamente; luego use el cordón de potencia suministrado con el instrumento para conectarlo a la fuente de corriente



**DANGER**

***Before beginning the installation, see the precautions in "Power precautions."***

GEFAHR	Vor der Installation siehe Vorsichtsmaßnahmen unter "Power Precautions" (Vorsichtsmaßnahmen in Bezug auf elektrische Ablagen).
DANGER	Avant de commencer l'installation, consultez les précautions décrites dans "Power Precautions" (Précautions quant à l'alimentation).
PELIGRO	Antes de comenzar la instalación, consulte las precauciones en la sección "Power Precautions" (Precauciones sobre corriente).



**DANGER**

***For safety reasons, the ESD wrist strap should contain a series 1 megaohm resistor.***

GEFAHR	Aus Sicherheitsgründen sollte ein EGB-Armband zum Schutz von elektronischen gefährdeten Bauelementen mit einem 1 Megaohm-Reihenwiderstand ausgestattet sein.
DANGER	Pour des raisons de sécurité, la dragonne ESD doit contenir une résistance de série 1 méga ohm.
PELIGRO	Por razones de seguridad, la correa de muñeca ESD deberá contener un resistor en serie de 1 mega ohmio.



**DANGER**

***If the installation requires a different power cord than the one supplied with the device, make sure you use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the device.***

GEFAHR	Falls für die Installation ein anderes Stromkabel erforderlich ist (wenn das mit dem Gerät gelieferte Kabel nicht passt), müssen Sie sicherstellen, dass Sie ein Stromkabel mit dem Siegel einer Sicherheitsbehörde verwenden, die für die Zertifizierung von Stromkabeln in Ihrem Land zuständig ist. Das Siegel ist Ihre Garantie, dass das Stromkabel sicher mit Ihrem Gerät verwendet werden kann.
DANGER	Si l'installation nécessite un cordon d'alimentation autre que celui fourni avec le dispositif, assurez-vous d'utiliser un cordon d'alimentation portant la marque de l'organisation responsable de la sécurité qui définit les normes et réglementations pour les cordons d'alimentation dans votre pays. Cette marque vous assure que vous pouvez utiliser le cordon d'alimentation avec le dispositif en toute sécurité.
PELIGRO	Si la instalación requiere un cordón de corriente distinto al que se ha suministrado con el instrumento, verifique que usa un cordón de corriente que venga con la marca de la agencia de seguridad que defina las regulaciones para cordones de corriente en su país. Esta marca será su garantía de que el cordón de corriente puede ser utilizado con seguridad con el instrumento.



**DANGER**

***Disconnect the power cord from all power sources to completely remove power from the device.***

GEFAHR	Ziehen Sie das Stromkabel aus allen Stromquellen, um sicherzustellen, dass dem Gerät kein Strom zugeführt wird.
DANGER	Débranchez le cordon d'alimentation de toutes les sources d'alimentation pour couper complètement l'alimentation du dispositif.
PELIGRO	Para desconectar completamente la corriente del instrumento, desconecte el cordón de corriente de todas las fuentes de corriente.

## Laser dangers



**DANGER**

***All fiber-optic interfaces use Class 1 lasers.***

GEFAHR	Alle Glasfaser-Schnittstellen verwenden Laser der Klasse 1.
DANGER	Toutes les interfaces en fibre optique utilisent des lasers de classe 1.



PELIGRO	Todas las interfaces de fibra óptica utilizan láser de clase 1.
---------	---

**DANGER**

*Use only optical transceivers that are qualified by Brocade Communications Systems, Inc. and comply with the FDA Class 1 radiation performance requirements defined in 21 CFR Subchapter I, and with IEC 60825 and EN60825. Optical products that do not comply with these standards might emit light that is hazardous to the eyes.*

GEFAHR	Verwenden Sie nur optische Transceiver, die von Brocade Communications Systems zugelassen sind und die die Anforderungen gemäß FDA Class 1 Radiation Performance Standards in 21 CFR, Unterkapitel I, sowie IEC 60825 und EN60825 erfüllen. Optische Produkte, die diese Normen nicht erfüllen, können Strahlen aussenden, die für das menschliche Auge gefährlich sind.
DANGER	Utilisez uniquement des émetteurs-récepteurs optiques certifiés par Brocade Communications Systems, Inc. et conformes aux exigences sur la puissance de rayonnement de catégorie 1 de la FDA définies au sous-chapitre 21 CFR I et à les normes IEC 60825 et EN60825. Les produits optiques non-conformes à ces normes sont susceptibles d'émettre une lumière dangereuse pour les yeux.
PELIGRO	Utilice sólo transceptores ópticos aprobados por Brocade Communications Systems, Inc. y que cumplan con las normas IEC 60825 y EN60825, y con los estándares de rendimiento Clase 1 de FDA definidos en el subcapítulo I de 21 CFR. Los productos ópticos que no cumplan con estos estándares pueden emitir luz dañina para los ojos.

**DANGER**

*Laser Radiation. Do Not View Directly with Optical Instruments. Class 1M Laser Products.*

GEFAHR	Laserstrahlung! Schauen Sie nicht direkt mit optischen Instrumenten in den Laserstrahl herein. Klasse 1M Laserprodukte.
DANGER	Rayonnement de laser. Ne regardez pas directement avec des instruments optiques. Produits de laser de classe 1M.
PELIGRO	Radiacion de Laser. No vea directamente con Instrumentos Opticos. Clase 1M de Productos de Laser.
警告	レーザ放射 光学器具で直接ビームを見ないこと クラス 1 M レーザ製品