



# SHOOTER GP11

G A M I N G   C O N T R O L L E R

ENGLISH


## Instruction manual

Thank you for purchasing Fantech SHOOTER GP11 Wired Gaming Controller for PC.

This gamepad is a plug and play device, but some platforms or games may need to install additional software to make its function fully active. This gamepad supports PC installed with Windows XP/Win7/Win8/Win10

## Technical specification

- USB Wired Gaming controller
- Number of buttons: 14
- Vibration: Yes
- Cable length: 1.8M
- Weight: ±230gr

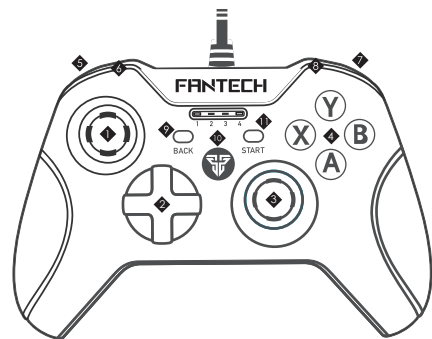

## Features

- |                    |                  |                  |
|--------------------|------------------|------------------|
| 1. Left joystick   | 5. Left trigger  | 9 . Back button  |
| 2. Directional pad | 6. Left button   | 10. Mode button  |
| 3. Right joystick  | 7. Right trigger | 11. Start button |
| 4. Action buttons  | 8. Right button  |                  |

## LED indicator

PC platform: Press and hold MODE Button for 8 seconds to switch between modes.



### Xinput / 360 MODE

LED 1 + LED 2



### Direct Input ANALOG MODE

LED 1 + LED 3



### Direct Input DIGITAL MODE

LED 1 + LED 4



### ANDROID MODE

LED 3 + LED 4



### PS3 MODE

LED 4

## Installation

Connect SHOOTER 11 to your PC with the USB plug.

1. Xinput Mode: ■■■ LED 1 + LED 2 , when the LED lights up, the gamepad is successfully connected.
2. Press mode button to switch from Xinput to Direct input Analog Mode  
Direct input Analog mode: ■■■ LED 1 + LED 3
3. Press mode button once to switch from Direct input Analog mode to Direct input Digital mode.  
Direct input Digital mode: ■■■ LED 1 + LED 4
4. To go back to Xinput, press and hold the mode button for 8 sec.
5. Android mode will activate when plugged to Android via OTG (OTG compatible device).  
Android mode : ■■■ LED 3 + LED4
6. PS3 mode will activate automatically when plugged to PS3 console : ■■■ LED 4.

## Troubleshooting

- A. Gamepad not recognize/ not found/ no response
- \* Check gamepad connection
  - \* USB port problem, change another USB port
  - \* Gamepad driver was not installed correctly, Please unplug and restart computer.
- B. Gamepad not working in the game
- \* Game is not supporting gamepad
  - \* Gamepad was not set in the game setting
- C. No vibration
- \* Driver was not installed correctly
  - \* Game is not supporting vibration

## Operating conditions

- |   |                                    |
|---|------------------------------------|
| 1. Operating temperature: -25 C ~ 65 C ± 10 C | 3. Operating humidity: 10 ~ 90% rh |
| 2. Storage temperature: -40 C ~ 70 C ± 10 C   | 4. Storage humidity: -5 ~ 95% rh   |

# SHOOTER GP11

G A M I N G   C O N T R O L L E R

USER MANUAL

## What's included in the box

1. FANTECH SHOOTER GP11 Gaming Controller
2. User manual

## System requirements

1. Operating systems: Windows XP/7/8/10
2. USB 2.0/3.0 port