



Power
Maid[™]

Owner's Manual for the
Fuller Brush Power Brush
Hand Vacuum
Model FB-PM



Thank you for purchasing the
Fuller Brush Power Maid.

To ensure the best results, please read this
manual first and keep it for future reference.

TABLE OF CONTENTS

Important Safety Instructions	2
Description of Vacuum	4
Operating the Vacuum	5
Trouble Shooting Guide	7

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING: The manufacturer cannot accept responsibility for damage caused when the appliance is not used according to the instructions, or for uses other than those for which it was intended.

To reduce the risk of fire, electric shock or injury:

- Use only on dry, indoor surfaces.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
- Like any appliance, do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use if cord or plug is damaged. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to place of purchase for service.
- Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not attempt to service the unit while appliance is plugged in.


IMPORTANT SAFETY INSTRUCTIONS

- Read and follow all rating label instructions.
- Keep end of hose and other openings away from your face and body.
- Do not use the hand vacuum cleaner without dust cup and filter in place.
- Always unplug this appliance before connecting or disconnecting the vacuum hose.
- Store the vacuum indoors.
- Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on the rating label.
- Do not use for any purpose other than described in this user's guide.
- If the cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid hazard.

FOR HOUSEHOLD USE ONLY

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install proper outlet. Do not modify the plug in any way.

DESCRIPTION OF VACUUM

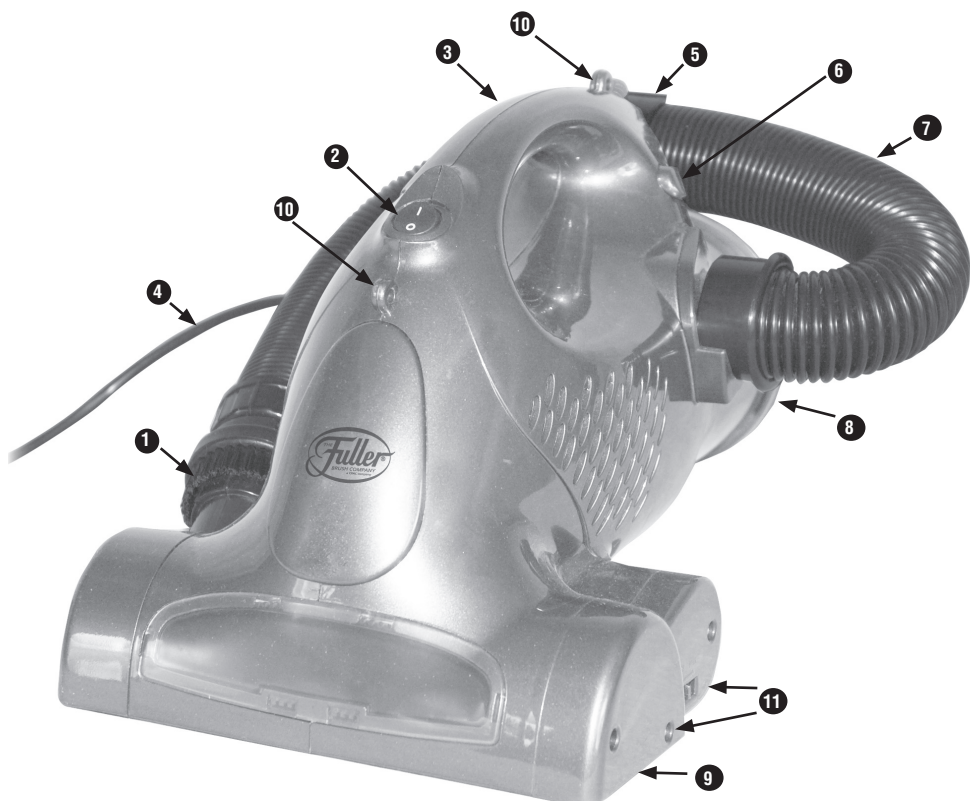

1. Hose inlet
2. On / Off switch
3. Carrying handle
4. Power cord
5. Hose clip
6. Dust cup release button
7. Flexible hose
8. Dust cup
9. Suction inlet
10. Shoulder strap clips
11. Access to belt. Screw and release tab.

Turning the Vacuum On

Hold the vacuum handle firmly in your hand and push the power button to the 'on' position.

Hose Cleaning

- 1) To clean with the hose attachment, remove the hose from the inlet. This disables the brushroll allowing for better cleaning performance with the hose.
- 2) For added convenience, a dusting brush is attached to the end of the hose. Extend the brush away from the hose to use this feature.
- 3) Re-attach the hose to the inlet to activate the brushroll for carpet cleaning. Push the hose onto the inlet until it clicks. Doing so will ensure the hose is properly attached and the brushroll is activated.

Important:

Do not push the hose too far onto the inlet. If the hose is pushed too far onto the inlet, the brushroll will not activate.




OPERATING THE VACUUM


Emptying the Dust Cup

Safety First: Always unplug from electrical outlet before opening the dust cup. The dust cup must be properly installed to operate the vacuum.


1. To open the dust cup, push the dust cup release button and pull out the dust cup. (Fig. 1)
2. Pull out the dust cup filter. (Fig. 2) Shake filter to remove debris.
3. Press the button to release the bottom and empty the dust from the dust cup. (Fig. 3)
4. If desired, you may rinse the dust cup filter under cold water. Wait until the filter dries before placing it back into the vacuum.
5. Place the dust cup filter back into the dust cup.
6. Attach the dust cup to the vacuum.

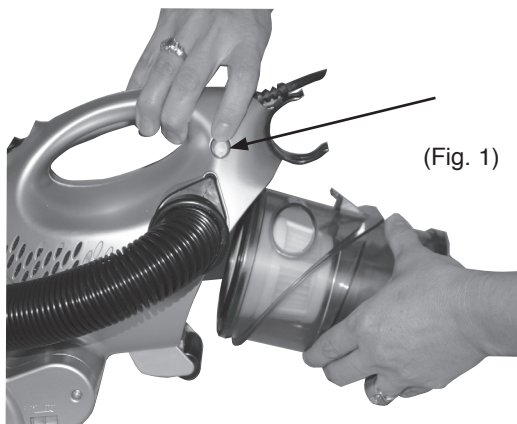

(Fig. 1)

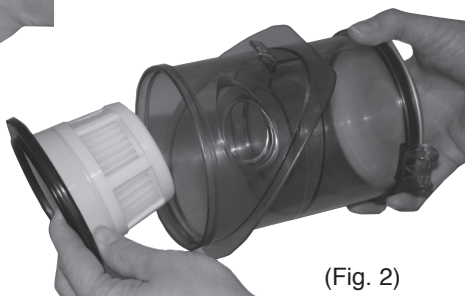

(Fig. 2)

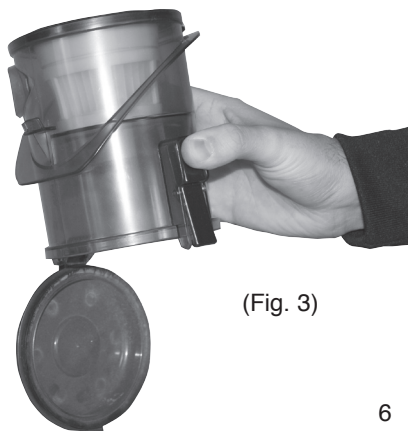

(Fig. 3)

TROUBLE SHOOTING GUIDE

Problem	Possible Solution
Vacuum will not operate	1. Check to ensure unit is firmly plugged in. 2. Check house fuse or breaker. Replace fuse or reset breaker. 3. Check for damaged power cord.
Internal thermal breaker tripped due to overheating	1. Unplug and allow unit to cool down for 30-35 minutes. 2. Empty dust cup and remove any clogs.
Vacuum will not pick up dirt or suction power is weak	1. Turn off unit and unplug from wall outlet. Remove dust cup filter and empty dust cup. 2. Clean and replace dust cup filter. Attach dust cup to vacuum. 3. Dust cup is not installed properly. Check for proper installation of dust cup and filter.
Dust escaping from vacuum	1. Check to ensure dust cup is empty and seated properly on vacuum. 2. Clean and replace dust cup filter.
Vacuum hose will not pick up	1. Remove hose. Remove obstruction from the hose. 2. Empty dust cup. 3. Clean and replace dust cup filter. Attach dust cup to vacuum.
Brushroll will not spin	1. Attach hose to hose inlet, listen for click. 2. Check that hose isn't pushed too far onto hose inlet.



Fuller Brush Vacuum Cleaners
PO Box 730
Fenton, MO 63026

Should your vacuum ever need service, simply contact the retailer where original purchase was made or a vacuum service center.