
Ouick Guide MM-014196-001 Rev. D, August 2020



EDACS[®], Conventional, P25 P7300 Portable Radios



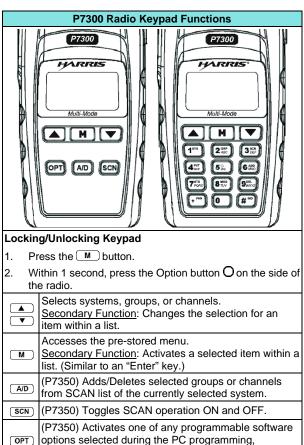

including: high/low TX power and talkaround.

(P7370) Selects a specific system.
(· · · · · / · · · · · · · · · · · · ·
(P7370) Selects a specific group.
(P7370) Toggles SCAN operation on and off.
(P7370) Enables Private mode for the system/group/channel displayed.
(P7370) Adds groups or channels from the currently selected system to the SCAN list.
(P7370) Accesses the status list (0-9). The Status key permits the transmission of a pre-programmed status message to an EDACS site.
(P7370) Accesses the message list (0-9). The Message key permits the transmission of a preprogrammed message to an EDACS site.
(P7370) Deletes a selected group or channel from the SCAN list of the currently selected system.
(P7370) Initiates telephone interconnect calls.
(P7370) Initiates individual (unit-to-unit) calls.
(P7370) Keys used to place telephone interconnect and individual (unit-to-unit) calls. Functions as a telephone keypad.

P7200 Padio Koynad Functions (cont'd)

P7300 Radio Controls				
Top View		Side View		
POWER ON-OFF/ VOLUME CONTROL KNOB SYSTEM/GROUP/ CHANNEL CONTROL KNOB Option Button (option Button (option Button) (piton Button) (PTT) Button				
Power On- Off/Volume Control Knob	and increase th	clockwise to dec		
System/Group/ Channel Control Knob		ntary knob for selenters (set during p	0 ,	
Emergency/ Home Button	select a pre-set	ed to declare an e Home group/syse assigned to this	stem. One or	
PTT Button	The PTT button	is pressed to tra	ınsmit.	
Option Button O	Pre-programme option.	ed to activate one	software	
Clear/Monitor Button (Option Button 2)	operation and to Conventional m	Used to exit the erminate special node: Used to mo remove Channe a channel.	calls. nitor channels	
A/B Switch		ed to choose betw	veen 2 software	

	P7300 Alert Tones			
(T) = trunked only (B) = both trunked and conv modes				
Ready-to- Talk (B)	One short mid-pitched tone. OK to talk after pressing PTT button.			
Call Queued (T)	One high-pitched tone. Call queued for processing			
Autokey (T)	One mid-pitched tone. Queued call received channel assignment.			
System Busy (T)	Three low-pitched tones. System busy or unable to complete the call.			
Call Denied (T)	One low-pitched tone. Radio not authorized on the system or group.			
Carrier Control Timer (B)	Five high-pitched tones and one long low-pitched tone. PTT pressed for too long.			
Low Battery (B)	One low-pitched and one short mid-pitched tone. Low battery. Replace battery immediately.			
TX Low Battery Alert (B)	Transmit Lockout. One low-pitched tone after PTT. Battery too low to transmit.			
Attach Battery Pack				
	 Align the tabs at each side on the bottom of the battery pack with the slots at the bottom of the battery cavity. Push the top of the battery pack down until 			




- the latches click to attach the battery to the
- 3. Tug gently to verify that the latches are secure and the battery pack is properly attached to the radio.

Remove Battery Pack



- . Pull both latches on either side of the battery pack toward the bottom of the radio simultaneously.
- 2. Pull the battery away from the radio.
- 3. Remove the battery pack from the radio.

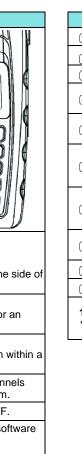

Line 1 - System/Channel Line 2 - Group Line 3 - Icon and Position Radio is transmitting. Radio is transmitting/receiving a call, call is queued. T99 Mode is enabled. Channel Guard (CG) enabled. EDACS trunked system is in Failsoft™ mode. Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) − SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		P7300 Display & Status Icons				
Radio is transmitting. Radio is transmitting/receiving a call, call is queued. T99 Mode is enabled. Channel Guard (CG) enabled. EDACS trunked system is in Failsoft™ mode. Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		Line 1 - System/Channel				
Radio is transmitting. Radio is transmitting/receiving a call, call is queued. T99 Mode is enabled. Channel Guard (CG) enabled. EDACS trunked system is in Failsoft™ mode. Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		Line 2 - Group				
Radio is transmitting/receiving a call, call is queued. T99 Mode is enabled. Channel Guard (CG) enabled. EDACS trunked system is in Failsoft™ mode. Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		Line 3 - Icon and Position				
T99 Mode is enabled. Channel Guard (CG) enabled. EDACS trunked system is in Failsoft™ mode. Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		Radio is transmitting.				
Channel Guard (CG) enabled. EDACS trunked system is in Failsoft™ mode. Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) − SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone	Ŧ	Radio is transmitting/receiving a call, call is queued.				
EDACS trunked system is in Failsoft™ mode. Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		T99 Mode is enabled.				
Selected group/channel set at low power TX. If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		Channel Guard (CG) enabled.				
If icon is not visible, TX at high power. Steady - Radio is transmitting or receiving a manual or OTAR (Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		EDACS trunked system is in Failsoft™ mode.				
(Network) encrypted call. Selected talk group/channel is operating in P25, Digital, or Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone	•					
Conventional mode. Animated (rotating clockwise) – SCAN mode enabled. Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone						
Selected talk group/channel is a Priority 1, 2, or "in the scan list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone						
list." The talk group or channel isn't in the scan list if a priority icon isn't associated with it. Special call select/entry mode (Individual or Telephone		Animated (rotating clockwise) – SCAN mode enabled.				
		list." The talk group or channel isn't in the scan list if a priority				
Interconnect).		Special call select/entry mode (Individual or Telephone Interconnect).				
Gauges approximate battery voltage level. "Empty" indicates low battery.						

About L3Harris Technologies

L3Harris Technologies is an agile global aerospace and defense technology innovator, delivering end-to-end solutions that meet customers' mission-critical needs. The company provides advanced defense and commercial technologies across air, land, sea, space and cyber domains.

P7300 Radio Status Messages				
CC SCAN	Control Channel Scan mode - Trunked mode only. Control channel lost, searching for a control channel.			
WA SCAN	Wide Area Scan mode - Trunked mode only. Radio searching for a new system.			
TALKARND	Talkaround mode - Conventional mode only. Radio operating unit-to-unit.			
SYSC ON	System Scan Features On - Trunked mode only.			
SYSC OFF	System Scan Features Off - Trunked mode only.			
LOW BATT	Low Battery - Battery charge too low to transmit.			
RXEMER	Receive Emergency - Trunked mode only. Indicates an emergency call is being received. This message will be flashing on line two.			
TXEMER	Transmit Emergency - Trunked mode only. Indicates an emergency call has been transmitted on this radio. This message will be flashing on line two.			
WHC	Who Has Called - Trunked mode only. Missed Individual call.			
UNKNOWN	Unknown ID - Trunked mode only. Individual call being received from an unknown ID.			
QUEUED	Call Queued - Trunked mode only. Indicates the system has placed the call in a request queue.			
SYS BUSY	System Busy - Trunked mode only. System is busy, no channels available, queue is full, or individual call being made to radio already receiving a call.			
DENIED	Call Denied - Trunked mode only. Radio or group not authorized on selected system or group.			

NOTICE

The material contained herein is subject to U.S. export approval. No export or reexport is permitted without written approval from the U.S. Government. Rated: EAR99; in accordance with U.S. Dept. of Commence regulations 15CFR774, Export Administration Regulations.

Menu

The menu M key allows access to features that are not available from the keypad.

- 1. Press the M key to enter menu mode.
- Use the or button to scroll through the available menu items.
- 3. Press the M key again to select the item.
- Depending upon the item selected, further scrolling using the
 or button may be required.
- 5. Press the key again to return to the active display.

Trunked Mode

Transmitting a Group Call

- Select the group.
- 2. Press the PTT button and speak normally while holding the microphone approximately 2 (two) inches from your mouth.
- Release the PTT button when finished speaking and wait for a reply.

Receiving a Group Call

- 1. Listen to the call.
- 2. The Group name or "GRxxxx" appears in the display to indicate a call is being received.
- 3. Press the PTT button and speak normally while holding the microphone approximately 2 (two) inches from your mouth.
- Release the PTT button when finished speaking and wait for a reply.

Trunked Mode (cont'd)

Transmitting an Individual Call (P7370 Model)

- Press the ** o button to access individual call list. appears.
- Use the or button to scroll through the individual call list or enter the Logical ID (LID) number from keypad.
- Press the PTT button and speak normally while holding the microphone approximately 2 (two) inches from your mouth.
- Release the PTT button when finished speaking and wait for a reply.

Receiving an Individual Call (P7370 Model)

Receive audio sounds when a call is received and the display reads:
 ID xxxxx

*IND

- Press and hold the PTT button to respond. Radio continues to ring until PTT is pressed or originating radio disconnects.
- If call is cleared with no response, the radio stores the ID in Who Has Called (WHC) list and display: *WHC*.
- Press the ** o key to display ID. Press PTT button to return call or press Monitor/Clear button to clear *WHC*.

Transmitting a Telephone Interconnect Call (P7370 Model)

- 1. Press the ** button to access phone call list. appears.
- 2. Follow steps 2 through 4 in "Transmitting an Individual Call"

Receiving a Telephone Interconnect Call (P7370 Model)

- Receive audio sounds when call is received and the display reads: *PHONE*.
- 2. Follow Steps 2 through 4 for "Receiving an Individual Call."

Conventional Mode

Transmitting a Call

- 1. Select the conventional system and channel.
- 2. Press the Monitor/Clear button briefly. If audio is heard or is illuminated, then the channel is busy.
- 3. When the channel becomes available, press the PTT button and speak normally while holding the microphone approximately 2 (two) inches from your mouth.
- Release the PTT button when finished speaking and wait for a reply.

Receiving a Call

- 1. Select a conventional system and channel or turn Scan on and make sure desired channel is in Scan list.
- 2. When the radio receives a call, the radio unmutes and the channel name or number appears in the display.

Declaring an Emergency

- 1. Press and hold the red Emergency/Home button.
- 2. T and are illuminated in the display and *TXEMER* flashes in the display. After 2-3 seconds, turns off.
- 3. *TXEMER* and T remain illuminated in the display until the emergency is cleared.
- 4. Press the PTT button and reappears. Speak normally.
- Release the PTT button when transmission is complete. Press and hold the Clear/Monitor button, then simultaneously press the emergency button to clear an emergency (if enabled through programming).

For more detailed operating information and a list of options and accessories, refer to the Operator's Manual (MM-013994-001 - available online at www.pspc.harris.com).