

**IEI Technology Corp.** 

### MODEL: ROCKY-4786EV/EVG

PICMG Socket 478 CPU Card, Intel® Pentium® 4 Processor Support, Gigabit Ethernet, USB 2.0, VGA, SATA RoHS Compliant

### **User Manual**



Rev. 4.10 - 24 March, 2010

### Revision

Date	Version	Changes	
24 March, 2010	4.10	Update Northbridge to Intel® 865G	
May 2006	1.00	Initial release	



### Copyright

BTechnology Corp.

#### **COPYRIGHT NOTICE**

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

#### TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Page iii



### **Table of Contents**

1 INTRODUCTION
1.1 ROCKY-4786EV/EVG CPU BOARD OVERVIEW
1.1.1 ROCKY-4786EV/EVG CPU Board Applications
1.1.2 ROCKY-4786EV/EVG CPU Board Benefits
1.1.3 ROCKY-4786EV/EVG CPU Board Features
1.2 CONNECTORS
1.3 DIMENSIONS
1.4 Data Flow
1.4.1 Technical Specifications:
2 UNPACKING
2.1 ANTI-STATIC PRECAUTIONS
2.2 UNPACKING PRECAUTIONS
2.3 PACKING LIST
2.3.1 Optional Items
3 CONNECTORS
3.1 Peripheral Interface Connectors
3.1.1 ROCKY-4786EV/EVG CPU Board Layout14
3.1.2 Peripheral Interface Connectors
3.1.3 Rear Panel Connectors
3.2 Internal Peripheral Connectors
3.2.1 FDD Connector
3.2.2 IDE Connectors
3.2.3 COM Ports
3.2.4 Parallel Port
3.2.5 Internal USB Connectors
3.2.6 Cooling Fan Connector
3.2.7 Backplane to Mainboard ATX Connector
3.2.8 System Front Panel Connector
3.2.9 IrDA Connector

3.2.10 SATA Drive Connectors	34
3.2.11 Keyboard Connector	37
3.2.12 ATX-12V Power Source Connector	39
3.3 External (Rear Panel) Connectors	40
3.3.1 PS/2 Connector	41
3.3.2 Ethernet Connectors	42
3.3.3 LINE OUT Connector	43
3.3.4 VGA Connector	44
4 INSTALLATION	45
4.1 ANTI-STATIC PRECAUTIONS	46
4.2 INSTALLATION CONSIDERATIONS	46
4.3 ROCKY-4786EV/EVG CPU CARD INSTALLATION	48
4.3.1 CPU Installation	49
4.3.2 Cooling Kit CF-519 Installation	50
4.3.3 DIMM Module Installation	51
4.3.3.1 Purchasing the Memory Module	51
4.3.3.2 DIMM Module Installation	52
4.3.4 Backplane Installation	52
4.3.5 CPU Card Installation	52
4.4 JUMPER SETTINGS	53
4.4.1 CF Card Setup	55
4.4.2 Reset CMOS Jumper	55
4.5 INTERNAL PERIPHERAL DEVICE CONNECTIONS	56
4.5.1.1 IDE Disk Drive Connector (IDE1)	56
4.5.1.2 Floppy Drive Connector (FDD1)	57
4.6 EXTERNAL PERIPHERAL INTERFACE CONNECTION	57
4.6.1 Audio Line-out Connector	57
4.6.2 LAN Connection	58
4.6.3 VGA Monitor Connection	58
4.7 Software Installation	59
5 AWARD BIOS SETUP	62
5.1 Introduction	63
5.1.1 Starting Setup	63

#### Page v

:

®Technology Corp.

#### al

	2-00
© Technology Corp.	G Llsor Manual
5.1.2 Using Setup	
5.1.3 Getting Help	
5.1.4 Unable to Reboot After Configuration Changes	
5.1.5 Main BIOS Menu	
5.2 Standard CMOS Features	67
5.2.1 IDE Channel Master	
5.3 Advanced BIOS Features	
5.3.1 CPU Feature	
5.3.2 Hard Disk Boot Priority	
5.4 Advanced Chipset Features	
5.5 INTEGRATED PERIPHERALS	
5.5.1 OnChip IDE Device	
5.5.2 Onboard Device	
5.5.3 SuperIO Device	
5.6 POWER MANAGEMENT SETUP	
5.7 PNP/PCI CONFIGURATIONS	
5.8 PC HEALTH STATUS	110
5.9 Frequency/Voltage Control	111
A BIOS OPTIONS	114
B TERMINOLOGY	119
C DIGITAL I/O INTERFACE	
C.1 INTRODUCTION	
C.2 DIO CONNECTOR PINOUTS	
C.3 Assembly Language Samples	
C.3.1 Enable the DIO Input Function	
C.3.2 Enable the DIO Output Function	
D WATCHDOG TIMER	
E ADDRESS MAPPING	120
	120
E 1 I/O ADDRESS MAP	
E.2 IDO MADDING TADU E	
E.3 IKQ MAPPING TABLE	
E.4 DIMA CHANNEL ASSIGNMENTS	

#### 

®Technology Corp.

Page vii



# R Technology Corp.

## List of Figures

Figure 1-1 Connectors			
Figure 1-2: ROCKY-4786EV/EVG Dimensions (mm)4			
Figure-1-3: Data Flow Block Diagram			
Figure 3-1: Connector and Jumper Locations14			
Figure 3-2: FDD Connector Location			
Figure 3-3: IDE Connector Locations			
Figure 3-4 COM Port Locations22			
Figure-3-5: LPT Connector Location			
Figure-3-6: USB Port Connector Location			
Figure 3-7 Cooling Fan Connector Locations			
Figure 3-8: ATXCTL Connector Locations			
Figure 3-9: System Panel Connector Location			
Figure 3-10: IrDA Connector Location			
Figure 3-11: SATA Connector Locations			
Figure 3-12: CN5 Connector Location			
Figure 3-13: ATX Connector Location40			
Figure 3-14: ROCKY-4786EV/EVG CPU Board Rear Panel41			
Figure 3-15: PS/2 Pinout locations42			
Figure 3-16: RJ-45 Ethernet Connector43			
Figure 3-17: VGA Connector44			
Figure 4-1: Locking the CPU into the CPU Socket			
Figure 4-2: Cooling Kit Support Bracket51			
Figure 4-3: Jumper Locations			
Figure 4-4: LAN Connection			
Figure 4-5: VGA Connector			
Figure 4-6: Introduction Screen60			
Figure 4-7: Available Drivers61			

Page viii

### **List of Tables**

®Technology Corp.

Page ix

3 8.



### **BIOS Menus**

 	65
 	67
 	70
 	73
 	80
	81
 	82
	87
	88
 	91
 	93





Page 1

÷.

®Technology Corp.

# Introduction

#### 1.1 ROCKY-4786EV/EVG CPU Board Overview

**BTechnology Corp** 

The PICMG 1.0 form factor ROCKY-4786EV/EVG Pentium 4 CPU platform is fully equipped with a high performance processor and advanced multi-mode I/Os. The ROCKY-4786EV/EVG is designed for system manufacturers, integrators, and VARs that want performance, reliability, and quality at a reasonable price.

#### 1.1.1 ROCKY-4786EV/EVG CPU Board Applications

The ROCKY-4786EV/EVG CPU board has been designed for use in industrial applications where board expansion is critical and operational reliability is essential.

#### 1.1.2 ROCKY-4786EV/EVG CPU Board Benefits

Some of the ROCKY-4786EV/EVG CPU board benefits include,

- providing access to multiple PCI and ISA expansion slots for easy system expansion
- operating reliably in harsh industrial environments with ambient temperatures as high as 60°C
- rebooting automatically if the BIOS watchdog timer detects that the system is no longer operating

#### 1.1.3 ROCKY-4786EV/EVG CPU Board Features

Some of the ROCKY-4786EV/EVG CPU board features are listed below:

- Complies with PICMG 1.0
- Complies with RoHS
- Supports socket 478 Intel® Pentium 4 CPUs
- Supports a maximum front side bus (FSB) speed up to 800 MHz
- Supports up to 2 GB of 333 MHz or 400 MHz single channel DDR memory
- Comes with one high performance gigabit Ethernet (GbE) controller
- Supports two SATA channels with transfer rates up to 150 MB/s
- Supports eight USB 2.0 connectors



#### **1.2 Connectors**

The connectors on the ROCKY-4786EV/EVG are shown in the figure below.

®Technology Corp.



®Technology Corp.

#### **ROCKY-4786EV/EVG User Manual**



Figure 1-2: ROCKY-4786EV/EVG Dimensions (mm)

#### 1.4 Data Flow

**Figure-1-3** shows the data flow between the two onboard chipsets and other components installed on the CPU board and described in the following sections of this chapter.

®Technology Corp.



Figure-1-3: Data Flow Block Diagram





#### 1.4.1 Technical Specifications:

ROCKY-4786EV/EVG CPU board technical specifications are listed in **the table below**.

SPECIFICATION		
CPUs Supported	Intel <sup>®</sup> Pentium <sup>®</sup> 4	
	Intel <sup>®</sup> Celeron <sup>®</sup> D	
Chipsets	Northbridge: Intel <sup>®</sup> 865G	
	Southbridge: Intel <sup>®</sup> ICH5	
Super I/O	Winbond W83627F/HF	
Graphics Support	Intel® Extreme Graphic II integrated graphic engine	
Memory	Two 184-pin DDR 333 MHz or 400 MHz SDRAM DIMM	
	memory modules (Max. 2GB)	
PCI Bus Interface	33MHz, Revision 2.3	
Display	One VGA port	
Serial ATA (SATA)	Two SATA channels with 150 MB/s transfer rates	
HDD Interface	Two IDE channels supports four Ultra ATA 100/66/33	
	devices	
LPT	One internal parallel port connector	
Floppy Disk Drive (FDD)	Supports FDD	
USB Interfaces	Eight USB 2.0 via internal pin headers	
Serial Ports	Two RS-232 serial ports	
Keyboard/Mouse	One PS/2 port	
	One KB/MS (internal) connector	
Real Time Clock	256-byte battery backed CMOS RAM	
Hardware Monitoring	Cooling fans, temperature and system voltages	

П

SPECIFICATION			
Power Management	Supports Advanced Configuration and Power Interface		
	(ACPI) Specifications Revision 2.0		
Infrared Support	One Infrared Data Association (IrDA) interface		
Ethernet	RJ-45 10/100BaseT		
	RJ-45Gigabit Ethernet (GbE) with ASF 2.0 remote		
	control support (ROCKY-4768EVG only)		
BIOS	Award BIOS		
Audio Interfaces	One Audio Codec '97 (AC'97) version 2.2 connector		
Physical Dimensions	338 mm x 122 mm (length x width)		
Weight	1.1 kg		
Power Supply	AT/ATX supported		
Power Consumption	5V @ 6.98A, 12V @ 7.52A (Intel® Pentium® 4 CPU		
	3.00GHz 800 MHz FSB with 2GB DDR 400MHz)		
Operating Temperature	Minimum: 0°C (32°F)		
	Maximum: 60°C (140°F)		
Humidity (operating)	5% ~ 95% (non-condensing)		

Table-1-1: Technical Specifications

Page 7

®Technology Corp.







#### 2.1 Anti-static Precautions

### 

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

RTechnology Corp.

Page 9

Make sure to adhere to the following guidelines:

- Wear an anti-static wristband: Wearing an anti-static wristband can prevent electrostatic discharge.
- Self-grounding: Touch a grounded conductor every few minutes to discharge any excess static buildup.
- Use an anti-static pad: When configuring any circuit board, place it on an anti-static mat.
- Only handle the edges of the PCB: Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

#### 2.2 Unpacking Precautions

When the ROCKY-4786EV/EVG is unpacked, please do the following:

- Follow the antistatic guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

#### 2.3 Packing List

Technology Corp



If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the ROCKY-4786EV/EVG was purchased from or contact an IEI sales representative directly by sending an email to <u>sales@iei.com.tw</u>.

The ROCKY-4786EV/EVG is shipped with the following components:

Quantity	Item and Part Number	Image
1	ROCKY-4786EV/EVG CPU card	
	(P/N: ROCKY-4786EV-RS-R41)	
	(P/N: ROCKY-4786EVG-RS-R41)	
1	SATA power cable	
	(P/N: 32102-000100/200-RS)	
2	SATA cable	
	(P/N: 32000-062800-RS)	
1	AT 12V Cable	
	(P/N: 32100-087100-RS)	
1	Dual USB cable (w bracket)	
	(P/N: CB-USB02-RS)	
1	ATA 66/100 flat cable	
	(P/N: 32200-000052-RS)	

1	Keyboard/mouse PS/2 Y-cable (P/N: 32000-133200-RS)		
1	Dual RS-232 cable (P/N: 19800-000051-RS)		
1	Mini jumper pack (2.0mm) (P/N: 33100-000033-RS)	414	
1	Utility CD		
1	Quick Installation Guide	One to transmission of state	

®Technology Corp.

#### 2.3.1 Optional Items

The following components are options for the ROCKY-4786EV/EVG:

Item and Part Number	Image
CPU cooler (up to 115 W)	
( <b>P/N</b> : CF-478A-RS)	
CPU cooler	
( <b>P/N</b> : CF-478B-RS)	



®Technology Corp.

#### ROCKY-4786EV/EVG User Manual

CPU cooler ( <b>P/N</b> : CF-514-RS)	
CPU cooler ( <b>P/N</b> : CF-519-RS)	
FDD cable (P/N: 32200-000017-RS)	
Parallel port cable (P/N:19800-000049-RS)	



Page 13

÷.

®Technology Corp.

### Connectors



#### **3.1 Peripheral Interface Connectors**

Technology Corp

The locations of the peripheral interface connectors are shown in **Section 3.1.1**. A complete list of all the peripheral interface connectors can be seen in **Section 3.1.2**.

#### 3.1.1 ROCKY-4786EV/EVG CPU Board Layout

**Figure 3-1** shows the onboard peripheral connectors, backplane peripheral connectors and onboard jumpers.



Figure 3-1: Connector and Jumper Locations

#### 3.1.2 Peripheral Interface Connectors

**Table 3-1** shows a list of the peripheral interface connectors on the ROCKY-4786EV/EVGCPU board. Detailed descriptions of these connectors can be found in Section 3.2.

Label	Connector	Туре
IDE1	Primary & Secondary IDE connectors	40-pin header
IDE2	Primary & Secondary IDE connectors	40-pin header
FDD1	Floppy drive	34-pin header
LPT1	Parallel port connector	26-pin header
COM1	Serial port connectors	5-pin header
COM2	Serial port connectors	5-pin header
CF1	Compact Flash Storage Card Type II connector	50-pin header
IR1	IrDA infrared interface port	5-pin header
USB1	USB dual port connector	8-pin header
USB2	USB dual port connector	8-pin header
USB3	USB dual port connector	8-pin header
USB4	USB dual port connector	8-pin header
CN5	External Keyboard Connector	5-pin header
FAN1	System Fan connector	3-pin header
FAN2	CPU Fan connector	3-pin header
SATA1	Serial ATA connectors	SATA disk drive port
SATA2	Serial ATA connectors	SATA disk drive port
CN1	Front Panel Connector	4-pin header
CN2	ATX +12V Power connector	4-pin header

Page 15

®Technology Corp.

CN3	LAN State LED connectors	4-pin header	
CN4	LAN State LED connectors 4-pin header		
CD-IN	Audio CD in connector	4-pin header	
LINE-IN	Audio LINE in connector	4-pin header	
MIC-IN	Audio MIC in connector	4-pin header	
PW-SW1	ATX Power Button connector	2-pin header	
ATXCTL1	Backplane to Main board ATX power	3-pin header	
	control Connector		

Table 3-1: Peripheral Interface Connectors

#### 3.1.3 Rear Panel Connectors

Technology Corp

 Table 3-2 lists the rear panel connectors on the ROCKY-4786EV/EVG CPU card. Detailed descriptions of these connectors can be found in Section 3.3.

Label	Connector	Туре
KB/MS1	Keyboard or Mouse connector	PS/2
LAN1	Ethernet connector	RJ-45
LAN2	Ethernet connector	RJ-45
SPK_OUT	AUDIO connector	LINE OUT
VGA1	VGA connector	15-pin VGA connector

Table 3-2: Peripheral Interface Connectors

#### **3.2 Internal Peripheral Connectors**

Internal peripheral connectors are found on the CPU card and are only accessible when the CPU board is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the ROCKY-4786EV/EVG CPU board.

#### 3.2.1 FDD Connector

CN Label:	FDD1
CN Type:	2x17 pin header
CN Location:	See Figure 3-2
CN Pinouts:	See Table 3-3

The ROCKY-4786EV/EVG is shipped with a 34-pin daisy-chain drive connector cable. This cable can be connected to the FDD connector.

®Technology Corp.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	2	REDUCE WRITE
3	GND	4	N/C
5	N/C	6	N/C
7	GND	8	INDEX#
9	GND	10	MOTOR ENABLE A#
11	GND	12	DRIVE SELECT B#
13	GND	14	DRIVE SELECT A#
15	GND	16	MOTOR ENABLE B#
17	GND	18	DIRECTION#
19	GND	20	STEP#
21	GND	22	WRITE DATA#
23	GND	24	WRITE GATE#
25	GND	26	TRACK 0#
27	GND	28	WRITE PROTECT#
29	GND	30	READ DATA#
31	GND	32	HEAD#
33	GND	34	DISK CHANGE#

Table 3-3: FDD Connector Pinouts



### ®Technology Corp.

#### **ROCKY-4786EV/EVG User Manual**



#### **3.2.2 IDE Connectors**

CN Label:	IDE1 (primary) and IDE2 (secondary)
СN Туре:	2x20 pin header
CN Location:	See Figure 3-3
CN Pinouts:	See Table 3-4: IDE Connector Pinouts

Two IDE connectors provide connectivity for four IDE devices.

PIN NO. DESCRIPTION		PIN NO.	DESCRIPTION
1	RESET#	2	GND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GND	20	(KEY)
21	IDE DRQ	22	GND
23	IOW#	24	GND
25	IOR#	26	GND
27	IDE CHRDY	28	GND
29	IDE DACK	30	GND
31	INTERRUPT	32	N/C
33 SA1		34	P66DET
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GND

Table 3-4: IDE Connector Pinouts



®Technology Corp.





Figure 3-3: IDE Connector Locations

#### 3.2.3 COM Ports

CN Label:	COM1, COM2
CN Type:	2x5 pin headers
CN Location:	See
CN Pinouts:	See Table-3-5

The ROCKY-4786EV/EVG offers two high speed NS16C550 compatible UART's with 16-byte Read/Receive FIFO serial ports.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	DATA CARRIER DETECT (DCD)	6	DATA SET READY (DSR)
2	RECEIVE DATA (RXD)	7	REQUEST TO SEND (RTS)
3	TRANSMIT DATA (TXD)	8	CLEAR TO SEND (CTS)
4	DATA TERMINAL READY (DTR)	9	RING INDICATOR (RI)
5	GND (GND)	10	GND (GND)

Table-3-5: Internal COM Port Connector Pinouts

Page 21

®Technology Corp.

®Technology Corp.

#### **ROCKY-4786EV/EVG User Manual**



Figure 3-4 COM Port Locations

3.2.4 Parallel Port



CN Label:	LPT1
СN Туре:	2x13 pin header
CN Location:	See Figure-3-5
CN Pinouts:	See Table-3-6

The parallel port is connected to a printer or other parallel device with a 26-pin flat-cable connector.

®Technology Corp.

Page 23

PIN	DESCRIPTION	PIN	DESCRIPTION
1	STROBE#	14	AUTO FORM FEED #
2	DATA0	15	ERROR#
3	DATA1	16	INITIALIZE#
4	DATA2	17	PRINTER SELECT LN#
5	DATA3	18	GND
6	DATA4	19	GND
7	DATA5	20	GND
8	DATA6	21	GND
9	DATA7	22	GND
10	ACKNOWLEDGE#	23	GND
11	BUSY	24	GND
12	PAPER EMPTY	25	GND
13	PRINTER SELECT		

Table-3-6: LPT Connector Pinouts

®Technology Corp

#### **ROCKY-4786EV/EVG User Manual**



Figure-3-5: LPT Connector Location

#### 3.2.5 Internal USB Connectors

CN Label:	USB1, USB2, USB3, USB4
CN Type:	2x4 pin header
CN Location:	See Figure-3-6
CN Pinouts:	See Table-3-7

Four 2x4 pin connectors provide connectivity to eight USB 2.0 ports. The USB ports are used for I/O bus expansion.

®Technology Corp.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	VCC	2	GND
3	DATA0-	4	DATA1+
5	DATA0+	6	DATA1-
7	GND	8	VCC

Table-3-7: USB Port Connector Pinouts

®Technology Corp.

#### **ROCKY-4786EV/EVG User Manual**



Figure-3-6: USB Port Connector Location
# 3.2.6 Cooling Fan Connector

CN Label:	FAN1, FAN2
CN Type:	1x3 pin header
CN Location:	See Figure 3-7
CN Pinouts:	See Table 3-8

The FAN1 and FAN2 cooling fan connectors provide a 12V, 350mA ~ 740mA or 1A ~ 2.2A current to the cooling fans. Each connector has a "rotation" pin to get rotation signals from fans and notify the system so the system BIOS can recognize the fan speed. Please note that only certain fans can issue the rotation signals.

PIN	DESCRIPTION	
1	GND	
2	+12V	
3	Sense Pulse	

Table 3-8 Cooling Fan Connector Pinouts

Page 27

®Technology Corp.

®Technology Corp.

# **ROCKY-4786EV/EVG User Manual**



#### CN Pinouts: See Table 3-9

Connects a power source from a backplane with an ATX Connector.

®Technology Corp.

PIN NO.	DESCRIPTION
1	5VSB
2	ATX-ON
3	GND

Table 3-9: CN7 Connector Pin Outs







# 3.2.8 System Front Panel Connector

UN Label. UNI	CN	Label:	CN1
---------------	----	--------	-----

CN Type: 2x7 pin header

CN Location: See Figure 3-9

CN Pinouts: See Table 3-9

The system panel connector connects to:

- the system chassis front panel LEDs
- the chassis speaker
- the power switch
- the reset button.

	PIN	DESCRIPTION	PIN	DESCRIPTION	
	1	+5V	2	Speaker+	
Power LED	3	N/C	4	N/C	
	5	GND	6	N/C	Speaker
	7	N/C	8	Speaker-	
	9	N/C	10	Reset PIN1	
	11	GND	12	Reset PIN2	Reset Button
HDD LED	13	HDD LED+	14	HDD LED-	HDD LED

# Table 3-10: System Panel Connector Pinouts

Page 31

®Technology Corp.

# R Technology Corp.

# **ROCKY-4786EV/EVG User Manual**



Figure 3-9: System Panel Connector Location

# 3.2.9 IrDA Connector

CN Label:	IR1
CN Type:	1x6 pin header
CN Location:	See Figure 3-10
CN Pinouts:	See Table 3-11

The integrated IrDA connector supports both the SIR and ASKIR infrared protocols.

PIN	DESCRIPTION
1	VCC
2	NC
3	IR-RX
4	GND
5	IR-TX
6	CIRRX

**Table 3-11: IrDA Connector Pinouts** 



Page 33

RTechnology Corp.





CN Pinouts: See Table 3-12

The SATA drive ports provide connectivity to SATA drives with a maximum data transfer rate of 150MB/s.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	5	RX-
2	TX+	6	RX+
3	TX-	7	GND
4	GND		

**Table 3-12: SATA Connector Pinouts** 

# 

Your SATA hard drives may come with both a 4P power connector and a SATA power interface. Attach either the 4P connector or the included SATA power cable to your SATA hard drives. **DO NOT** attach both the power connectors to your SATA hard drives at the same time! Doing so will cause damage.

®Technology Corp.

®Technology Corp.

# **ROCKY-4786EV/EVG User Manual**



Figure 3-11: SATA Connector Locations



- 1. SATA is supported by:
  - Windows 2000 SP4
  - Windows XP SP1
  - Windows 2003, or later versions.
- 2. Older OSes, such as Windows 98SE or ME, do not support the SATA interface.

®Technology Corp.

Page 37

# 3.2.11 Keyboard Connector

CN Label:	CN5
CN Type:	1x5 pin header
CN Location:	See Figure 3-12
CN Pinouts:	See Table 3-13

For alternative application, a keyboard pin header connector is also available on board.

PIN NO.	DESCRIPTION
1	KEYBOARD CLOCK
2	KEYBOARD DATA
3	N/C
4	GND
5	+5V

Table 3-13: CN5 Connector Pinouts

®Technology Corp.

# **ROCKY-4786EV/EVG User Manual**



Figure 3-12: CN5 Connector Location

# 3.2.12 ATX-12V Power Source Connector

CN Label:	CN2
CN Type:	2x2 pin header
CN Location:	See Figure 3-13
CN Pinouts:	See Table 3-14

This connector supports the ATX-12V power supply.

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	GND
3	+12V	4	+12V

Table 3-14: CN2 Connector Pinouts



Page 39

®Technology Corp.





Figure 3-13: ATX Connector Location

# 3.3 External (Rear Panel) Connectors

**Figure 3-14** shows the ROCKY-4786EV/EVG CPU board rear panel. The peripheral connectors on the back panel can be connected to devices externally when the CPU card is installed in a chassis. The peripheral connectors on the rear panel are:

- 1 x PS/2 keyboard connector
- 2 x RJ-45 GbE connectors
- 1 x Line-out connector
- 1 x VGA connector





Figure 3-14: ROCKY-4786EV/EVG CPU Board Rear Panel

# 3.3.1 PS/2 Connector

CN Label:	KB_MS1
CN Type:	PS/2
CN Location:	See Figure 3-14 (labeled number 1)
CN Pinouts:	See Table 3-15
	Figure 3-15 shows PS/2 Pinout locations

Page 41

®Technology Corp.



The PS/2 mouse and keyboard connectors are connected to a mouse and keyboard

PIN	DESCRIPTION	PIN	DESCRIPTION
1	KB Data	2	N/C
3	GND	4	+5V
5	Clock	6	N/C

Table 3-15: PS/2 Pinouts



Figure 3-15: PS/2 Pinout locations

# **3.3.2 Ethernet Connectors**

CN Label:	LAN1, LAN2
CN Type:	RJ-45
CN Location:	See Figure 3-14 (labeled number 2)
CN Pinouts:	See Table 3-16

Two 1Gb connections can be made between the Ethernet connectors and a Local Area Network (LAN) through a network hub. An RJ-45 Ethernet connector is shown in **Figure 3-16**.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	TXD+	8	GND
2	TXD-	9	GRN+
3	RXD+	10	GRN-
4	CT_TXD	11	YEL-
5	CT_RXD	12	YEL+
6	RXD-	13	S GND
7	N/C	14	S GND

BTechnology Corp.

Table 3-16: RJ-45 Ethernet Connector Pinouts



Figure 3-16: RJ-45 Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See **Table 3-17**.

SPEED LED		ACT/LINK LED	
STATUS	DESCRIPTION	STATUS	DESCRIPTION
OFF	10 Mbps connection	OFF	No link
ORANGE	100 Mbps connection	YELLOW	Linked
GREEN	1 Gbps connection	BLINKING	Date activity

Table 3-17: RJ-45 Ethernet Connector LEDs

# 3.3.3 LINE OUT Connector

Connect an audio device to the line out connector on the rear panel Figure 3-14 (labeled number 3).





# 3.3.4 VGA Connector

CN Label:	VGA1
CN Type:	See Figure 3-17
CN Location:	See Figure 3-14 (labeled number 4)

The standard 15-pin VGA connector connects to a CRT or LCD display monitor.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	Red	9	No Connect
2	Green	10	Ground
3	Blue	11	No Connect
4	No Connect	12	DDC DAT
5	Ground	13	Horizontal Synchronization
6	Ground	14	Vertical Synchronization
7	Ground	15	DDC Clock
8	Ground	7	

Table 3-18: VGA Connector Pinouts

Figure 3-17: VGA Connector



Page 45

®Technology Corp.

# Installation

# **4.1 Anti-static Precautions**

Technology Corp



Failure to take ESD precautions during the installation of the ROCKY-4786EV/EVG may result in permanent damage to the ROCKY-4786EV/EVG and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the ROCKY-4786EV/EVG. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the ROCKY-4786EV/EVG or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- Wear an anti-static wristband: Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- Self-grounding: Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- Use an anti-static pad: When configuring the ROCKY-4786EV/EVG, place it on an antic-static pad. This reduces the possibility of ESD damaging the ROCKY-4786EV/EVG.
- Only handle the edges of the PCB: When handling the PCB, hold the PCB by the edges.

# 4.2 Installation Considerations

# NOTE:

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.



The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

RTechnology

Page 47

Corp

Before and during the installation please DO the following:

- Read the user manual:
  - The user manual provides a complete description of the ROCKY-4786EV/EVG installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
  - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the ROCKY-4786EV/EVG on an antistatic pad:
  - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- Turn all power to the ROCKY-4786EV/EVG off:
  - When working with the ROCKY-4786EV/EVG, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the ROCKY-4786EV/EVG DO NOT:

Remove any of the stickers on the PCB board. These stickers are required for warranty validation.

Use the product before verifying all the cables and power connectors are properly connected.

Allow screws to come in contact with the PCB circuit, connector pins, or its components.



# 4.3 ROCKY-4786EV/EVG CPU Card Installation

# 🖄 warning!

- 1. Never run the CPU board without an appropriate heat sink and cooler that can be ordered from IEI Technology or purchased separately.
- Be sure to use the CPU 12V power connector (CN10007) for the CPU power.



Please note that the installation instructions described in this manual should be carefully followed in order to avoid damage to the CPU Card components and injury to you.



When installing electronic components onto the CPU Card always take the following anti-static precautions in order to prevent ESD damage to your board and other electronic components like the CPU and DIMM modules

The following components must be installed onto the CPU Card or connected to the CPU Card during the installation process.

- CPU
  - CPU cooling kit
  - DIMM modules
  - Peripheral device connection



# 4.3.1 CPU Installation

# 

CPUs are expensive and sensitive components. When you install the CPU, please be careful not to damage it in anyway. Make sure you install it properly and ensure that a heat sink and CPU cooling fan is properly installed before you run the CPU Card or else both the CPU and the board will be damaged.

**BTechnology** Corp.

Page 49

To install Intel 478-pin CPU onto your motherboard, follow the steps below:

- Step 1: Inspect the CPU socket. Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.
- Step 2: Correctly position the CPU. Make sure the pin 1 mark matches the cut edge on the CPU socket. Carefully place the CPU on top of the socket. When properly placed, the CPU should be easily inserted into the socket.
- Step 3: Insert the CPU. To insert the CPU into the socket, first lift the lever on the side of the CPU socket (See Figure 4-1) and then follow the instructions below:
- Step 4: Correctly orientate the CPU with the IHS (Integrated Heat Sink) side facing upward.
- Step 5: Locate the pin 1 mark on the CPU.
- Step 6: Gently insert the CPU into the socket.
- Step 7: Lower the lever into the locked position.





# 4.3.2 Cooling Kit CF-519 Installation

IEI provides a cooling kit designed for socket 478 CPUs. The cooling kit is comprises a CPU heat sink and a cooling fan.



The CF-519 heat sink comes with a sprayed layer of thermal paste. Make sure you do not accidentally wipe away the thermal paste while unpacking or installing the heat sink. Thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the CF-519 cooling kit, please follow the steps below.

Step 1: Install the cooling kit bracket. A cooling kit bracket is installed on the rear of the CPU card. Align the bracket with the four retention holes at the back of the CPU card. Once properly aligned, insert four retention screws from the front of the CPU card.



**BTechnology** Corp.

Figure 4-2: Cooling Kit Support Bracket

- Step 2: Open the lever at the top of the heat sink. Lift the lever at the top of the cooling kit to loosen the cooling kit clamps.
- Step 3: Secure the cooling kit. Gently place the heat sink and cooling kit onto the CPU. Make sure the hooks are properly secured to the bracket. To secure the cooling kit, close the top lever.

# 4.3.3 DIMM Module Installation

# 4.3.3.1 Purchasing the Memory Module

When you purchase your DIMM modules, the following considerations should be taken into account:

- Each DIMM module can support a memory chip with a maximum size of 1GB
- It is recommended that you use memory modules of identical brand, size, chips, and speed.
- DIMMs must use the same density memory chips
- Both DIMMs must use the same DRAM bus width
- Both DIMMs must be either single-sided or dual-sided.





# 4.3.3.2 DIMM Module Installation

**BTechnology Corp** 

The ROCKY-4786EV/EVG CPU Board has two DDR SDRAM DIMM sockets. To install the DIMM modules, follow the instructions below.

- **Step 4:** Pull the two white handles on either side of the DIMM socket down.
- Step 5: Align the DIMM module with the DIMM socket making sure the matching pins are correctly aligned.
- **Step 6:** Insert the DIMM module slowly. Once you are sure it is correctly inserted, push down firmly. The white handles on either side of the socket will move back up and lock the module into the socket.

#### 4.3.4 Backplane Installation

Before the ROCKY-4786EV/EVG can be installed into the chassis, a backplane must first be installed. Please refer to the installation instructions that came with the backplane and the chassis to see how to install the backplane into the chassis.



IEI has a wide range of backplanes available. Please contact your ROCKY-4786EV/EVG vendor, reseller or and IEI sales representative at <u>sales@iei.com.tw</u> or visit the IEI website at <u>http://www.ieiworld.com</u> to find out more about the available chassis.

# 4.3.5 CPU Card Installation

To install the ROCKY-4786EV/EVG CPU card onto the backplane, carefully align the CPU card interface connectors with the corresponding socket on the backplane. To do this, please refer to the reference material that came with the backplane. Next, secure the CPU card to the chassis. To do this, please refer to the reference material that came with the chassis.

# **4.4 Jumper Settings**



A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with



®Technology Corp.

the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

The ROCKY-4786EV/EVG includes one jumper shown in table and figure below.

Description	Label	Туре
CF Setup	JP1	2-pin header
Clear CMOS jumper	JP2	3-pin header

Table 4-1: Jumpers







Figure 4-3: Jumper Locations

# 4.4.1 CF Card Setup

Jumper Label:	JP1
Jumper Type:	2-pin header
Jumper Settings:	See Table 4-2
Jumper Location:	See Figure 4-3

The CompactFlash® slot is connected through an IDE connection. This jumper sets the CompactFlash® card as the master or slave IDE device.

Technology Corp.

Setting	Description	
Open	Slave	
Closed	Master	

Table 4-2: CompactFlash® Setup Jumper Settings

# 4.4.2 Reset CMOS Jumper

Jumper Label:	JP2
Jumper Type:	3 pin header
Jumper Settings:	See Table 4-3
Jumper Location:	See Figure 4-3

If the CPU Card fails to boot due to improper BIOS setting, use this jumper to clear the CMOS data and reset the system BIOS information. To do this, use the jumper cap to close pins 2 and 3 for a few seconds then reinstall the jumper clip back to pins 1 and 2.

If the "CMOS Settings Wrong" message displays during the boot up process, you may then try to correct the fault by pressing the F1 to enter the CMOS Setup menu. You may then do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.





After you have done one of the above, save your changes and exit the CMOS Setup menu.

JP2	CLEAR CMOS
1-2 closed	Normal (default)
2-3 closed	Clear CMOS

Table 4-3: Reset CMOS Jumper Settings

**BTechnology Corp** 

# 4.5 Internal Peripheral Device Connections

This section outlines the installation of peripheral devices to the onboard connectors.

# 4.5.1.1 IDE Disk Drive Connector (IDE1)

The cable used to connect the CPU card to the IDE HDD is a standard 44-pin ATA 66/100 flat cable. To connect an IDE HDD to the CPU Card, follow the instructions below.

- Step 1: Find the ATA 66/100 flat cable in the kit that came with the CPU Card.
- **Step 2:** Connect one end of the cable to the IDE1 connector on the CPU card. A keyed pin on the IDE connectors prevents it from being connected incorrectly.
- Step 3: Locate the red wire on the other side of the cable that corresponds to the pin 1 connector.
- **Step 4:** Connect the other side of the cable to the HDD making sure that the pin 1 cable corresponds to pin 1 on the connector.

# NOTE:

When two EIDE disk drives are connected together, back-end jumpers on the drives must be used to configure one drive as a master and the other as a slave.

# 4.5.1.2 Floppy Drive Connector (FDD1)

This connector provides access to two externally mounted 3.5" floppy drives. To connect the CPU Card to a FDD, follow the instructions below.

**R**Technology

Page 57

Corp

- Step 1: Insert one side of the cable into the FDC making sure that the red wire on the cable corresponds to pin one on the connector.
- **Step 2:** Attach the connector on the other side of the cable to the floppy drive(s). You can only use one connector in the set. The connection sequence determines which of the two connected floppy drives is drive A: and which is drive B.

# 4.6 External Peripheral Interface Connection

This section describes connecting devices to the external connectors on the ROCKY-4786EV/EVG.

#### 4.6.1 Audio Line-out Connector

The audio jack on the external peripheral interface enables the ROCKY-4786EV/EVG to be connected to a stereo sound setup. To install the audio devices, follow the steps below.

- Step 1: Identify the audio plugs. The plugs on your home theater system or speakers may not match the colors on the rear panel. If audio plugs are plugged into the wrong jacks, sound quality will be very bad.
- Step 2: Plug the audio plugs into the line-out audio jack. Plug the audio plugs into the audio jack. If the plugs on your speakers are different, an adapter will need to be used to plug them into the audio jacks.
  - **Line Out port:** Connects to headphones or speakers.

**Step 3:** Check audio clarity. Check that the sound is coming through the right speakers by adjusting the balance front to rear and left to right.



# 4.6.2 LAN Connection

Technology Corp

There are two external RJ-45 LAN connectors. The RJ-45 connectors enable connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

- Step 1: Locate the RJ-45 connectors. The locations of the USB connectors are shown in Chapter 4.
- Step 2: Align the connectors. Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the ROCKY-4786EV/EVG. See Figure 4-4.



Figure 4-4: LAN Connection

Step 3: Insert the LAN cable RJ-45 connector. Once aligned, gently insert the LAN cable RJ-45 connector into the on-board RJ-45 connector.

# 4.6.3 VGA Monitor Connection

Page 58

The ROCKY-4786EV/EVG has a single female DB-15 connector on the external peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a monitor to the ROCKY-4786EV/EVG, please follow the instructions below.

Step 1: Locate the female DB-15 connector. The location of the female DB-15 connector is shown in Chapter 3.

**Step 2:** Align the VGA connector. Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.

Technology

Page 59

Corp.

Step 3: Insert the VGA connector Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the ROCKY-4786EV/EVG. See Figure 4-5.



Step 4: Secure the connector. Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

# 4.7 Software Installation

All the drivers for the ROCKY-4786EV/EVG are on the CD that came with the system. To install the drivers, please follow the steps below.

**Step 1:** Insert the CD into a CD drive connected to the system.



**BTechnology Corp** 

If the installation program doesn't start automatically: Click "Start->My Computer->CD Drive->autorun.exe"

Step 2:	The driver main menu appears	(Figure 4-6).
---------	------------------------------	---------------



Figure 4-6: Introduction Screen

Step 3: Click ROCKY-4786EV/EVG.

Step 4: A new screen with a list of available drivers appears (Figure 4-7).





Chapter

# 5 Award BIOS Setup
# 5.1 Introduction

A licensed copy of Phoenix Award BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration. This chapter describes how to access the BIOS setup program and the configuration options you may change.

## 5.1.1 Starting Setup

The Phoenix Award BIOS is activated when you turn on the computer. The setup program can be activated in one of two ways.

- 1. Press the DELETE key as soon as the system is turned on or
- 2. Press the **DELETE** key when the "**Press Del to enter SETUP**" message appears on the screen.

If the message disappears before you respond, you must restart your computer and try again.

## 5.1.2 Using Setup

Use the arrow keys to highlight items, press ENTER to select, use the PageUp and PageDown keys to change entries, press F1 for help and press Esc to quit. Navigation keys are shown in.

Кеу	Function	
Up arrow	Move to the item above	
Down arrow	Move to the item below	
Left arrow	Move to the item on the left hand side	
Right arrow	Move to the item on the right hand side	
+/Page up	Increase the numeric value or make changes	
-/Page down	Decrease the numeric value or make changes	
Esc	Main Menu – Quit and not save changes into CMOS	
	Status Page Setup Menu and Option Page Setup Menu	
	Exit current page and return to Main Menu	



Page 63

BTechnology Corp.

F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Item help
F5	Previous values for the page menu items
F6	Fail-safe defaults for the current page menu items
F7	Optimized defaults for the current page menu items
F9	Menu in BIOS
F10	Save changes and Exit BIOS

Table 5-1: BIOS Navigation Keys

# 5.1.3 Getting Help

**Technology Corp** 

When you press **F1** a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press the **Esc** key again.

# 5.1.4 Unable to Reboot After Configuration Changes

If you are unable to boot your computer after you have made changes to the system configuration, you must restore the CMOS defaults. Use the jumper described in **Section 4.4.2**.

## 5.1.5 Main BIOS Menu

Once the BIOS opens, the main menu (BIOS Menu 1) appears.

Phoenix - AwardBIOS CMOS Setup Utility				
<ul> <li>Standard CMOS Features</li> <li>Advanced BIOS Features</li> <li>Advanced Chipset Features</li> </ul>	<ul> <li>Frequency/Voltage Control</li> <li>Load Fail-Safe Defaults</li> <li>Load Optimized Defaults</li> </ul>			
► Integrated Peripherals	Set Supervisor Password			
▶ Power Management Setup	Set User Password			
<ul> <li>PnP/PCI Configurations</li> <li>PC Health Status</li> </ul>	Save & Exit Setup Exit Without Saving			
Esc : Quit F9 : Menu in BIOS ↑↓ → ← : Select Item F10 : Save & Exit Setup				
Time, Date, Hard Disk Type				

®Technology Corp.

BIOS Menu 1: Award BIOS CMOS Setup Utility



The following sections will completely describe the menus listed below and the configuration options available to users.

The following menu options are seen in **BIOS Menu 1**.

- Standard CMOS Features: Changes the basic system configuration.
- Advanced BIOS Features: Changes the advanced system settings.
- Advanced Chipset Features: Changes the chipset configuration features
- Integrated Peripherals: Changes the settings for integrated peripherals
- Power Management Setup: Changes power saving options



- PCIPnP Configurations: Changes the advanced PCI/PnP Settings
- PC Health Status: Monitors essential system parameters
- Frequency/Voltage Control: Configures the CPU Clock Ratio, Auto Detect DIMM/PCI CLk and Spread Spectrum settings

The following user configurable options are also available in the BIOS Main Menu

#### → Load Fail-Safe Defaults

**BTechnology** Corp

This option allows you to load failsafe default values for each of the parameters on the Setup menus. **F6 key can be used for this operation on any page.** 

#### ➔ Load Optimized Defaults

This option allows you to load optimal default values for each of the parameters on the Setup menus. **F7 key can be used for this operation on any page.** 

#### → Set Supervisor Password

By default, no **Supervisor Password** is set. If you wish to install a supervisor password, select this field and enter the password. After this option has been selected, a red dialogue box with "**Enter Password:** " will appear. You will be asked to confirm your password. Retype the original password into the "**Confirm Password:** " dialogue box and press enter.

#### Set User Password

By default, no **User Password** is set. If you wish to install a user password, select this field and enter the password. After this option has been selected, A red dialogue box with "**Enter Password:** " will appear. You will be asked to confirm your password. Retype the original password into the "**Confirm Password:** " dialogue box and press enter.

#### Save & Exit Setup

If you have finished making the configuration changes and wish to save them and exit the BIOS menus, select this option.

#### → Exit Without Saving

If you have finished making configuration changes but do not want to save them and you want to exit the BIOS menus, select this option.

**BTechnology** Corp.

## **5.2 Standard CMOS Features**

The Standard CMOS Features menu (**BIOS Menu 2**) changes basic BIOS configuration options.

Phoenix - AwardBIOS CMOS Setup Utility Standard CMOS Features				
Date (mm:dd:yy)	Thu, May 18 2006	Item Help		
<ul> <li>IDE Channel 0 Master</li> <li>IDE Channel 0 Slave</li> </ul>	17 . 15 . 50	Menu Level ► Change the day, month,		
► IDE Channel 1 Master ► IDE Channel 1 Slave	[ None]	year and century		
Drive A Drive B	[1.44M, 3.5 in.] [None]			
Video Halt On	[EGA/VGA] [All , But Keyboard]			
Base Memory Extended Memory Total Memory	640K 65472K 1024K			
<pre>↑↓→+:Move Enter:Select E5: Previous Values</pre>	+/-/PU/PD:Value F10:Save F6: Fail-Safe Defaults	ESC:Exit F1:General Help F7: Optimized Defaults		

**BIOS Menu 2: Standard CMOS Features** 

The Standard CMOS Features menu allows you to set both the date and the time field:

**Date [mm:dd:yy]**: Allows you to set the system date.

Time [Day hh/mm/ss]: Allows you to set the system time.

#### IDE Master and IDE Slave

When entering setup, BIOS auto detects the presence of IDE devices. This displays the status of the auto detected IDE devices. The following IDE devices will be detected and are shown in the **Standard CMOS Features** menu:

Primary IDE Master



- Primary IDE Slave
- Secondary IDE Master
- Secondary IDE Slave

The IDE Configuration menu (**BIOS Menu 3**) allows you to set or change the configurations for the IDE devices installed in the system. If an IDE device is detected, and one of the above listed four BIOS configuration options are selected, the IDE configuration options shown in **Section 5.2.1** appear.

#### → Drive A [1.44M, 3.5in]

**RTechnology Corp** 

The **Drive A** configuration option determines the type of floppy drive installed in the system. The floppy drive configuration options are listed below.

- None
- 360K, 5.25 in
- 1.2M, 5.25 in
- 720K, 3.5 in
- 1.44M, 3.5 in (DEFAULT)
- 2.88M, 3.5in

#### → Drive B [1.44M, 3.5in]

The **Drive B** configuration option determines the type of floppy drive installed in the system. The floppy drive configuration options are listed below.

- None
- 360K, 5.25 in
- 1.2M, 5.25 in
- 720K, 3.5 in
- 1.44M, 3.5 in (DEFAULT)
- 2.88M, 3.5in

### Video [EGA/VGA]

Page 68

The **Video** configuration option allows you to select the adapter for the primary system monitor. Although secondary monitors are supported, you do not have to select the type in the BIOS setup. Video configuration options are listed below.

<b>→</b>	EGA/VGA	(Default)	Selected when the adapter for the primary system monitor is one of the following:
			→ EGA
			→ VGA
			→ SEGA
			→ SVGA
			→ PGA
→	CGA 40		The system will power up in 40 column mode
→	CGA 80		The system will power up in 80 column mode
<b>→</b>	MONO		A monochrome monitor is used. High-resolution monochrome monitors are also supported.

®Technology Corp.

#### → Halt On

The **Halt On** category allows users to determine whether the computer will stop if an error is detected during power up.



→ Base Memory:



The **Base Memory** is NOT user configurable. The POST will determine the amount of base (or conventional) memory installed in the system. The value of the base memory is typically 512K for systems with 512K memory installed on the CPU card or 640K for systems with 640K or more memory installed on the motherboard.

#### → Extended Memory

Technology Corp

The **Extended Memory** is NOT user configurable. The BIOS determines how much extended memory is present during the POST. This is the amount of memory above 1MB located in the memory address map of the CPU.

#### ➔ Total Memory

The **Total Memory** is NOT user configurable.

#### 5.2.1 IDE Channel Master

The **IDE Channel Master** menu (**BIOS Menu 3**) allows you to set or change the configurations for the master and slave IDE devices for both channel 0 and channel 1.

IDE HDD Auto-Detection	[Press Enter]	Item Help
IDE Channel 0 Master Access Mode	[Auto] [Auto]	Menu Level 🍽
Capacity	0 MB	To auto-detect th HDD's size, head
Cylinder Head Precomp Landing Zone Sector		Cris channer

**BIOS Menu 3: IDE Channel Master** 

→ IDE HDD Auto-Detection [Press Enter]

Page 70

Selecting **IDE HDD Auto-Detection** option and pressing the "**ENTER**" key will enable the BIOS to automatically detect the HDD type. Do not set this option manually.

Technology Corp.

#### → IDE Channel 0/1 Master/Slave [Auto]

The IDE Channel option allows you to activate or deactivate the following drive channels:

- Channel 0 Master
- Channel 0 Slave
- Channel 1 Master
- Channel 0 Slave

→	None		If no drives are connected to the IDE channel select this							
			option.	Once	set,	this	IDE	channel	will	become
			inaccess	ible an	d any	drive	es atta	ched to it	unde	tected.
<b>→</b>	Auto	(Default)	Setting this option allows the device to be automatically detected by the BIOS							
<b>→</b>	Manual		Selecting this option allows you to manually configure the device on the IDE channel in BIOS.		configure					

#### ➔ Access Mode [Auto]

The **Access Mode** option allows you to determine the hard disk BIOS translation modes. Most systems now use hard drives with large capacities and therefore either the LBA translation mode or auto mode should be selected.



Select this mode if the HDD capacity is less than 504MB.

Select this mode if the HDD capacity is more than 8.4GB.

This mode is an extended ECHS mode and while it supports HDDs larger than 504MB, it is not recommended.

(DEFAULT) If you are unsure of what access mode to set, select this option



#### → Capacity

Technology Corp

The **Capacity** specification tells the user the storage capacity of the HDD installed in the system.

#### → Cylinder

The **Cylinder** specification shows the number of cylinders (tracks) on the HDD installed in the system.

#### → Head

The **Head** specification shows the number of logical heads on the HDD installed in the system.

#### ➔ Precomp

The **Precomp** specification indicates on which track the write precompensation begins.

#### ➔ Landing Zone

The **Landing Zone** specification tells the user where the disk head will park itself after the system powers off.

#### → Sector

The **Sector** specification tells the user how many logical sectors the HDD has been divided into.

# **5.3 Advanced BIOS Features**

The Advanced BIOS Features menu (**BIOS Menu 4**) provides access to CPU and peripheral device configuration options.

Page 72

Phoenix – AwardBIOS CMOS Setup Utility Advanced BIOS Features				
<pre>     Hard Disk Boot Priority [Press Enter]     CPU L1 &amp; L2 Cache [Enabled]     Hyper-Threading Technology [Enabled]     Quick Power On Self Test [Enabled]     Quick Power On Self Test [Enabled]     First Boot Device [Hard Disk]     Third Boot Device [LS120]     Boot Other Device [Enabled]     Swap Floppy Drive [Disabled]     Boot Up Floppy Seek [Enabled]     Boot Up Floppy Seek [Enabled]     Boot Up Floppy Seek [Enabled]     Gate A20 Option [Fast]     Typematic Rate Setting [Disabled]     X Typematic Delay (Msec) 250     Security Option [Setup]     APIC Mode [Enabled]     MPS Version Control For OS [1.4]     OS Select For DRAM &gt; 64MB [Non-OS2] </pre>	Item Help Menu Level ► Select Hard Disk Boot Device Priority			
→+:Move Enter:Select +/-/PU/PD:Value F10:Save E F5: Previous Values F6: Fail-Safe Defaults F	SC:Exit F1:General Help 7: Optimized Defaults			

#### **BIOS Menu 4: Advanced BIOS Features**

Once the **Advanced BIOS Features** menu is selected, two menu options and a host of configuration options are available. The two menu options are:

- CPU Feature
- Hard Disk Boot Priority

To access these menus, use the arrow keys to select the menu option and press the "ENTER" button. The menu will appear. The menus are discussed fully in Section 5.3.1: CPU Feature and Section 5.3.2: Hard Disk Boot Priority below.

#### → Virus Warning [Disabled]

When the virus warning is enabled, the BIOS will monitor the boot sector and partition table of the HDD for any attempt at modification. If an attempt is made, the BIOS will halt the system and an error message will appear. Afterwards, if necessary, run an anti-virus program to locate and remove the problem before any damage is done.

Enabled Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or HDD partition table.

Disabled (Default) No warning message will appear when anything attempts



Technology Corp.



to access the boot sector or HDD partition table.



Many disk diagnostic programs can cause the above warning message to appear when the program attempts to access the boot sector table. If you run such a program, it is recommended that you first disable the virus protection function before hand.

### → CPU L1 & L2 Cache [Enabled]

The **CPU L1 & L2 Cache** option allows users to select whether the CPU primary cache (L1) and secondary cache (L2) will be turned on or off.

- Enabled (DEFAULT) The L1 and L2 CPU caches are both turned on
- Disabled The L1 and L2 CPU caches are both turned off
- → Quick Power On Self Test [Enabled]

The **Quick Power On Self Test** configuration option speeds up the POST after you turn on the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.

Enabled (DEFAULT) Quick POST will occur after the computer is turned on

**Disabled** Normal POST will occur after the computer is turned on

#### Boot Device

Page 74

There are three **Boot Device** configuration options. They are:

- First Boot Device [DEFAULT: Hard Disk]
- Second Boot Device [DEFAULT: Hard Disk]

Third Boot Device [DEFAULT: LS120]

The **Boot Device** configuration options allow you to select the order of devices the computer will boot from. Using the default values, the system will first look for an HDD to boot from. If an HDD is unavailable then the system will boot from a LS120 drive.

**BTechnology** Corp.

Boot Device configuration options are:

- Hard Disk
- CDROM
- ZIP100
- USB-FDD
- USB-ZIP
- USB-CDROM
- LAN
- Disabled
- Floppy
- LS120

#### ➔ Boot Other Device [Enabled]

The **Boot Other Device** option determines whether the CPU card will use a second or third boot device if the first boot device is not found.

**Enabled** (DEFAULT) The system will look for second and third boot devices if the first one is not found.

The system will not look for second and third boot device if the first one is not found.

#### Swap Floppy Drive [Disabled]

Disabled

The **Swap Floppy Drive** option is effective only in systems with two floppy drives. Selecting **Enabled** assigns physical drive B to logical drive A, and physical drive A to logical drive B.

Enabled

Assigns physical drive B to logical drive A, and physical drive A to logical drive B.



➔ **Disabled** (DEFAULT) Default physical/logical drive assignations.

### Boot Up Floppy Seek [Enabled]

Technology Corp

During the POST, BIOS will determine if the floppy disk drive installed has 40 or 80 tracks. 360K FDDs have 40 tracks while 760K, 1.2M and 1.44M FDDs all have 80 tracks

→	Enabled	(DEFAULT)	BIOS searches for a FDD to determine if it has 40 or 80
			tracks. Note that BIOS cannot tell the difference between
			720K, 1.2M or 1.44M drives as they all have 80 tracks.
<b>→</b>	Disabled		BIOS does not search for the type of FDD drive by track
			if the drive installed is 360K.

#### Boot Up Numlock Status [On]

The Boot Up Numlock Status option allows you to determine the default state of the numeric keypad.

→	Off		The keys on the keypad will be arrow keys
→	On	(DEFAULT)	The keys on the keypad will be number keys

Gate A20 Option [Fast]

The Gate A20 Option option refers to the way the system addresses memory above 1 MB (extended memory). Setting Gate A20 to Fast improves system speed, particularly with OS/2 and Windows.

(DEFAULT) Lets the system chipset control Gate A20 Fast

Normal A pin in the keyboard controller controls Gate A20

#### Typematic Rate Setting [Disabled]

Disabling the **Typematic Rate Setting** configuration option only allows one character to appear onto the screen if a key is continuously held down. In other words, the BIOS will only report the key is down. When this option is enabled, the BIOS will report as before,



but it will then wait a moment, and, if the key is still down, it will begin to report that the key has been depressed repeatedly. Such a feature would be used to accelerate cursor movements with the arrow keys.

Technology Corp.

- → **Disabled** (DEFAULT) Disables the typematic rate
- Enabled
   Enables the typematic rate

#### → x Typematic Rate (Chars/sec) [6]

The **Typematic Rate** can only be configured if the **Typematic Rate Setting** is Enabled. The **Typematic Rate** configuration field determines the rate keys are accelerated.

→	6	(DEFAULT)	6 characters per second
→	8		8 characters per second
→	10		10 characters per second
→	12		12 characters per second
→	15		15 characters per second
→	20		20 characters per second
→	24		24 characters per second
→	30		30 characters per second

#### → x Typematic Delay (Msec) [250]

The **Typematic Delay** can only be configured if the **Typematic Rate Setting** is enabled. The **Typematic Delay** configuration field allows you to select the delay between when the key was first depressed and when the acceleration begins.

<b>→</b>	250	(DEFAULT)	250 milliseconds
→	500		500 milliseconds
→	750		750 milliseconds
→	1000		1000 milliseconds

→ Security Option [Setup]



The **Security Option** configuration option allows you to limit access to the system and Setup or just to the Setup.

Setup	(DEFAULT)	The system will not boot and access to Setup will be
		denied if the correct password is not entered at the
		prompt.
System		The system will boot, but access to Setup will be denied if
		the correct password is not entered at the prompt.
	Setup System	Setup (DEFAULT) System



**Technology Corp** 

To disable security, select the password setting in the **Main Menu**. When asked to enter a password, do not type anything, press, "**ENTER**" and the security is disabled. Once the security is disabled, the system will boot and you can enter Setup freely.

#### → APIC Mode [Enabled]

The **APIC Mode** (Advanced Programmable Interrupt Controller mode) option is a BIOS setting made available to Windows 2000 and Windows XP systems that increases the number of IRQ (Interrupt Request) lines available to the processor from 16 to 23.

**Enabled** (DEFAULT) IRQ lines increased from 16 to 23

Only 16 IRQ lines are available to the CPU

#### → MPS Version Control for OS [1.4]

Disabled

Page 78

The Multiprocessor Specification (MPS) for OS specifies the MPS version to be used.

- 1.1 MPS version 1.1 is used
- **1.4** (DEFAULT) MPS version 1.4 is used

#### → OS Select For DRAM > 64MB [Non-OS2]

The **OS Select For DRAM > 64MB** option allows you to specify the operating system you are using.

Technology Corp.

Page 79

- OS2 Only select this if you are using the OS/2 operating system
- → Non-OS2 (DEFAULT) If you are not using the OS/2 operating system then disable this function.

#### → Small Logo (EPA) Show [Disabled]

The **Small Logo (EPA) Show** option determines if the Environmental Protection Agency (EPA) logo will appear during the system boot-up process. If it is enabled then the boot up process may be delayed.

- ➔ Enabled EPA logo will appear during the boot up process.
- Disabled (DEFAULT) EPA logo will not appear during the boot up process.

## 5.3.1 CPU Feature

The CPU Feature menu (BIOS Menu 5) shows CPU configuration options.

Theoremal Management	Thermal Manitor 1	Item Help
inermai Management	inermal Monitor I	Menu Level 🍽

#### **BIOS Menu 5: CPU Feature**

**BTechnology Corp** 

#### → Thermal Management [Thermal Monitor 1]

The **Thermal Management** configuration option allows you to select the thermal monitor the CPU will use to monitor its own operating temperature. Once the thermal monitor detects that the CPU is reaching its maximum operating temperature, the thermal monitor will automatically throttle the CPU (reduce the number of CPU processing cycles) in order to cool the CPU down to a safe operating temperature. Once at a safe operating temperature, the CPU will continue to perform at its peak capacity.



Thermal Monitor 1 uses an on-die temperature sensing circuit in the CPU that can act quickly in response to thermal issues. This circuit monitors the most active areas of the CPU-die at all times and will quickly lower the CPU temperature by throttling the internal CPU clock speed when the CPU approaches its maximum operating temperature.

**Page 80** 

# 5.3.2 Hard Disk Boot Priority

The Hard Disk Boot Priority menu (**BIOS Menu 6**) is shown below.

L. Bootable Add-in Cards	Item Help
	Menu Level Use <1> or <1> to select a device, then press <+> to move it up, or <-> to move it down the list. Press <esc> to exit this menu.</esc>

®Technology Corp.

BIOS Menu 6: Hard Disk Boot Priority





# **5.4 Advanced Chipset Features**

The Advanced Chipset Features menu (**BIOS Menu 7**) allows you to change the configuration for the chipset configuration options.

– Phoenix Adva	AwardBIOS CMOS Setup l anced Chipset Features	Utility
DRAM Timing Selectable	[By SPD]	Item Help
Active to Precharge Delay DRAM RAS# to CAS# Delay DRAM RAS# to CAS# Delay DRAM RAS# Precharge Memory Frequency For System BIOS Cacheable Video BIOS Cacheable Memory Hole At 15M-16M Delay Prior to Thermal AGP Aperture Size (MB) Init Display First	[2] [8] [4] [Auto] [Enabled] [Disabled] [Disabled] [16 Min] [128] [PCI Slot]	Menu Level
<b>** On-Chip VGA Setting **</b> On-Chip VGA On-Chip Frame Buffer Size Boot Display	[Enabled] [16MB] [Auto]	

**BIOS Menu 7: Advanced Chipset Features** 

#### → DRAM Timing Selectable [Manual]

**Page 82** 

The **DRAM Timing Selectable** configuration option allows you to select whether the manufacturer recommended settings for the following DRAM configuration options are automatically detected by the BIOS or if you manually select the DRAM settings. The DRAM configuration options are:

- CAS Latency Time [2]
- Active to Precharge Delay [6]
- DRAM RAS# to CAS# Delay [3]
- DRAM RAS# Precharge [3]
- Manual (DEFAULT) You set the above configuration options manually
- ➔ By SPD The BIOS automatically detects the settings recommended by the manufacturer

#### → CAS Latency Time [2]

The **CAS Latency Time** configuration option refers to the Column Address Strobe (CAS) delay time. (To be able to change this configuration option the **DRAM Timing Selectable** configuration option must be set to "**Manual**") The following configuration options are available

**BTechnology** Corp.

- 2 nanoseconds (DEFAULT)
- 2.5 nanoseconds
- 3 nanoseconds

#### → Active to Precharge Delay [6]

This feature controls the memory bank's minimum row active time (**tRAS**). This constitutes the time when a row is activated until the time the same row can be deactivated. (To be able to change this configuration option the **DRAM Timing Selectable** configuration option must be set to "**Manual**") The following configuration options are available

- 8 nanoseconds
- 7 nanoseconds
- 6 nanoseconds (DEFAULT)
- 5 nanoseconds

#### ➔ DRAM RAS# to CAS# Delay [3]

The **DRAM RAS# to CAS# Delay** option allows you to set the delay between the RAS and CAS signals. (To be able to change this configuration option the **DRAM Timing Selectable** configuration option must be set to "**Manual**") The following configuration options are available

- 4 nanoseconds
- 3 nanoseconds (DEFAULT)
- 2 nanoseconds

#### DRAM RAS# Precharge [3 clocks]

The **DRAM RAS# Precharge** option indicates how fast your RAM can terminate the access of one row and start accessing another. (To be able to change this configuration





option the **DRAM RAS# Precharge** configuration option must be set to "**Manual**") The following configuration options are available

- 4 clocks
- 3 clocks (DEFAULT)
- 2 clocks

#### → Memory Frequency For [DDR266]

The **Memory Frequency For** configuration option allows you to manually select the DDR type. The default value is DDR266. If you are not certain of what value to select, select "**Auto**" and the BIOS will automatically detect the DDR type. The following configuration options are available,

- DDR266 (DEFAULT)
- DDR333
- Auto

#### → System BIOS Cacheable [Enabled]

The **System BIOS Cacheable** option allows the system BIOS to be cached in the L2 cache.

→	Disabled	Sys	tem BIOS is	not cached	in the L2	cache

Enabled (DEFAULT) System BIOS is cached in the L2 cache

#### → Video BIOS Cacheable [Disabled]

The Video BIOS Cacheable option allows the video BIOS to be cached in the L2 cache.

- **Disabled** (DEFAULT) Video BIOS is not cached in the L2 cache
- Enabled Video BIOS is cached in the L2 cache

#### Memory Hole At 15M – 16M [Disabled]

Page 84

The **Memory Hole At 15M – 16M** reserves the memory space between 15MB and 16MB for ISA expansion cards that require a specified area of memory to work properly. If you

are using older ISA expansion cards, please refer to the documentation that came with the card to see if it is necessary to reserve the space.

Technology Corp.

- **Disabled** (DEFAULT) Memory is not reserved for ISA expansion cards
- Enabled
   Memory is reserved for ISA expansion cards

#### ➔ Delay Prior to Thermal [16 Min.]

The **Delay Prior to Thermal** option controls when the thermal monitor can be activated in automatic mode after the system boots. The following configuration options are available,

- 4 Min
- 8 Min
- 16 Min (DEFAULT)
- 32 Min

#### → AGP Aperture Size (MB) [128]

The AGP Aperture Size option selects the size of the AGP aperture. The following configuration options are available,







#### ➔ Init Display First [PCI Slot]

**BTechnology Corp** 

The **Init Display First** option selects whether to boot from the PCI slot or the onboard AGP.

→	PCI Slot (DEFAULT) The system w		The system will boot from the PCI graphics card.
→	Onboard/AGP		The system will boot from the AGP graphics card

#### → On-Chip VGA [Enabled]

The **On-Chip VGA** option is found on motherboards that have a built-in graphics processor as well as a PCI-E port. It allows you to select whether to use the onboard graphics processor or the PCI-E card.

- Enabled (DEFAULT) The system will boot up using the on-chip graphics processor regardless of whether or not a PCI graphics card is installed.
   Disabled The system will boot up using the installed PCI
  - The system will boot up using the installed PCI graphics card.

#### → On-Chip Frame Buffer Size [16MB]

The **On-Chip Frame Buffer Size** option allows you to allocate a predetermined amount of system memory to the graphics processor when the system boots up.



#### Boot Display [Auto]

**Page 86** 

The Boot Display option allows you to select the display device the system will boot with.

→	Auto	(DEFAULT)	The system will automatically determine the display
			device type.
→	CRT		The display device type will be set as CRT
→	EFP		The display device type will be set as EFP

**BTechnology** Corp.

# **5.5 Integrated Peripherals**

The Integrated Peripherals menu (BIOS Menu 8) allows you to change the configuration option for peripheral devices.

Phoen	ix - AwardBIOS CMOS Setup U Integrated Peripherals	tility
<ul> <li>OnChip IDE Device</li> <li>Onhoard Device</li> </ul>	[Press Enter]	Item Help
<ul> <li>Ofboard Device</li> <li>SuperIO Device Watch Dog Timer Unit</li> </ul>	[Press Enter] [Press Enter] [Second]	Menu Level ►
†↓→+:Move Enter:Select F5: Previous Values	+/-/PU/PD:Value F10:Save F6: Fail-Safe Defaults	ESC:Exit F1:General Help F7: Optimized Defaults

#### **BIOS Menu 8: Integrated Peripherals**

The Integrated Peripherals menu (BIOS Menu 8) has four options listed below:

- OnChip IDE Device
- Onboard Device
- Super IO Device
- Watch Dog Timer Unit

# 5.5.1 OnChip IDE Device

The OnChip IDE Device menu (BIOS Menu 9) allows you to change the IDE device configurations.



Phoenix - AwardBIOS CMOS Setup Ut OnChip IDE Device	ility
IDE HDD Block Mode [Enabled]	Item Help
ON-CHIP Primary Master PIO[Auto]IDE Primary Master PIO[Auto]IDE Primary Slave PIO[Auto]IDE Primary Slave UDMA[Auto]On-Chip Secondary PCI IDE[Enabled]IDE Secondary Master PIO[Auto]IDE Secondary Slave PIO[Auto]IDE Secondary Slave PIO[Auto]IDE Secondary Slave PIO[Auto]IDE Secondary Slave VDMA[Auto]IDE Secondary Slave UDMA[Auto]IDE Secondary Slave UDMA[Auto]Secondary Slave UDMA[Auto]Secondary Slave UDMA[Auto]Serial ATA Portal ATA[Auto]Serial ATA Portal Mode[Primary Master]Serial ATA Portal ModePrimary Master	Menu Level If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support
→+:Move Enter:Select +/-/PU/PD:Value F10:Save F5: Previous Values F6: Fail-Safe Defaults	ESC:Exit F1:General Help F7: Optimized Defaults

#### **BIOS Menu 9: Integrated Peripherals**

**Technology Corp** 

#### → IDE HDD Block Mode [Enabled]

The **IDE HDD Block Mode** option should only be enabled if your IDE HDD device supports block mode. Please refer to the documentation that came with your IDE HDD device to check the compatibility.

- Disabled The BIOS will not detect block data transfers.
- Enabled (DEFAULT) The optimal number of block read/writes per sector the drive can support will be automatically detected.

#### → On-Chip Primary PCI IDE [Enabled]

The **On-Chip Primary PCI IDE** option allows you to determine whether or not the ROCKY-4786EV/EVG will use the integrated primary IDE channel.

- Disabled
   The CPU card will not use the primary IDE channel
- Enabled (DEFAULT) The CPU card will use the primary IDE channel

#### → IDE PIO [Auto]

**Page 88** 

The Programmed Input/Output (PIO) mode for the following HDDs can all be selected.

- IDE Primary Master PIO
- IDE Primary Slave PIO
- IDE Secondary Master PIO
- IDE Secondary Slave PIO

<b>→</b>	Auto	(DEFAULT)	Allows the computer to select the correct mode	
→	0		PIO mode 0 selected with a maximum transfer rate of 3.3MBps	
	1		PIO mode 1 selected with a maximum transfer rate of 5.2MBps	
	2		PIO mode 2 selected with a maximum transfer rate of 8.3MBps	
	3		PIO mode 3 selected with a maximum transfer rate of 11.1MBps	
	4		PIO mode 4 selected with a maximum transfer rate of 16.6MBps	

**RTechnology** Corp.

#### → IDE UDMA [Auto]

The Ultra DMA (UDMA) mode for the following HDDs can all be selected.

- IDE Primary Master UDMA
- IDE Primary Slave UDMA
- IDE Secondary Master UDMA
- IDE Secondary Slave UDMA
- ➔ Auto
- (DEFAULT) Allows the computer to select the correct UDMA
- Disabled

Disables the UDMA for the HDD device

## On-Chip Secondary PCI IDE [Auto]

The **On-Chip Secondary PCI IDE** option allows you to determine if the motherboard should or should not use the integrated primary IDE channel. Disable this if you use an IDE adapter card for your IDE hard drives.

Disabled
 The CPU card will not use the integrated primary IDE channel

**Enabled** (DEFAULT) The CPU card will use the integrated primary IDE





channel

## → On Chip Serial ATA [Disabled]

The **On Chip Serial ATA** (SATA) option allows you to determine the operational status of the onboard SATA controller.

→	Disabled	(DEFAULT)	The SATA controller is disabled
→	Auto		The SATA controller is automatically arranged by the BIOS
<b>→</b>	Combined Mode		PATA and SATA modes are combined together. A maximum of 2 IDE drives in each channel
<b>→</b>	Enhanced Mode		Enable both PATA and SATA. A maximum of 6 IDE drives are supported.
→	SATA Only		SATA is operating in legacy mode.

#### → x PATA IDE Mode [Secondary]

When the **On Chip Serial ATA** option is in the combined mode, the PATA IDE Mode will be selected as **secondary**.

#### → SATA Port

The **SATA Port** parameter is automatically detected by the system BIOS and shown on the screen. This parameter is not user configurable.

## 5.5.2 Onboard Device

The **Onboard Device** menu (**BIOS Menu 10**) allows you to change the USB, Audio and LAN device configurations.

Page 90

Phoenix -	• AwardBIOS CMOS Setup U Onboard Device	tility
USB Controller	[Enab]ed]	Item Help
USB 2.0 Controller USB Keyboard Support AC97 Audio I82562ET LAN (10/100M) CSA LAN (Giga-LAN)	[Enabled] [Enabled] [Auto] [Enabled] [Auto]	Menu Level ►►
<pre>↑↓→+:Move Enter:Select +/- E5: Previous Values E6</pre>	/PU/PD:Value F10:Save	ESC:Exit F1:General Help E7: Optimized Defaults

**RTechnology** Corp.

BIOS Menu 10: OnBoard Device [Integrated Peripherals]

→ USB Controller [Enabled]

The **USB Controller** option allows you to activate or deactivate the onboard USB controller.

**Enabled** (DEFAULT) The USB controller is activated

Disabled

The USB controller is deactivated

→ USB 2.0 Controller [Enabled]

The **USB 2.0 Controller** option allows you to activate or deactivate the onboard EHCI controller.

**Enabled** (DEFAULT) The EHCI controller is activated

**Disabled** The EHCI controller is deactivated

#### USB Keyboard Support [Disabled]

The **USB Keyboard Support** is only applicable if you are using a USB keyboard. Some OSes do not support USB keyboards. Enabling this option in BIOS will allow users using an OS that does not support USB keyboard to implement a USB keyboard.



- Disabled (DEFAULT) USB keyboard support no provided by BIOS
- **Enabled** USB keyboard support is provided by BIOS

### → AC97 Audio Select [Auto]

**RTechnology Corp** 

The **AC97** Audio Select option allows the user to select the standard that will be used by the system.

Auto (DEFAULT) The BIOS automatically detects the audio standard
 Disabled No audio standard is set

#### → I82562ET LAN (10/100M) [Disabled]

The **I82562ET LAN (10/100M)** allows you to boot your system from a LAN server. For this to be possible the LAN card installed on your system must have boot ROM. If you choose to boot your system from a server using the LAN boot ROM functionality, you do not need a boot disk installed on the system.

- Disabled (DEFAULT) If disabled, you will not be able to boot your system from a server.
- Enabled
   You will be able to boot your system from a server if the LAN card installed in the system has boot ROM
- 5.5.3 SuperIO Device

The SuperIO Device menu (BIOS Menu 11) allows you to change the super IO device configurations.

Page 92

Phoenix – AwardBIOS CMOS Setup Utility SuperIO Device				
POWER ON Function KB Power ON Password	[BUTTON ONLY] [Enter]	Item Help		
Hot Key Power ON Onboard FDC Controller Onboard Serial Port 1 Onboard Serial Port 2 UART Mode Select RxD , TXD Active IR Transmission Delay UR2 Duplex Mode Use IR Pins Onboard Parallel Port Parallel Port Mode EPP Mode Select ECP Mode Use DMA PWRON After PWR-Fail	[Ctrl-F1] [Enabled] [3F8/IRQ4] [2F8/IRQ3] [Normal] [Hi,L0] [Enabled] [Half] [IR-Rx2Tx2] [378/IRQ7] [SPP] [EPP1.7] [3] [0ff]	Menu Level ►►		
<pre>↑↓→+:Move Enter:Select +/ F5: Previous Values F</pre>	-/PU/PD:Value F10:Save 6: Fail-Safe Defaults	ESC:Exit F1:General Help F7: Optimized Defaults		

®Technology Corp.

#### BIOS Menu 11: SuperIO Device [Integrated Peripherals]

### → POWER ON Function [BUTTON ONLY]

The **POWER ON Function** option allows you to select the method you use to turn on the system.





# RTechnology Corp.

# **ROCKY-4786EV/EVG User Manual**

keyboard's wake-up or power-on button to start up the computer.

### → x KB Power ON Password [Enter]

The **KB** Power ON Password option can only be specified if you have selected the **Password** as the **POWER ON Function** option. To set the password, place the cursor on the password option and click "ENTER." You will be prompted to enter a password. Select you password and press "ENTER." You will be asked to confirm the password. Confirm it and then press "ENTER" and the password will be set.

## → x Hot Key Power ON [Ctrl-F1]

The Hot Key Power ON option can only be specified if you have selected the Hot KEY as the POWER ON Function option. The following key combinations can be selected as the hot keys that will turn your computer on.

- Ctrl-F1
- Ctrl-F2
- Ctrl-F3
- Ctrl-F4
- Ctrl-F5
- Ctrl-F6
- Ctrl-F7
- Ctrl-F8
- Ctrl-F9
- Ctrl-F10
- Ctrl-F11
- Ctrl-F12

## **Onboard FDC Controller [Disabled]**

Page 94

The **Onboard FDC Controller** allows you to select whether the onboard floppy controller will or will not be used.

**Disabled** (DEFAULT) Disable this option if you use an adapter for your FDDs or if you have no FDDs connected

➔ Enabled

Select this option if FDDs are connected to the board and will use the onboard FDD controller.

Technology Corp.

#### → Onboard Serial Port 1 [3F8/IRQ4]

The **Onboard Serial Port 1** option allows you to select the I/O address and IRQ for the onboard serial port. The serial port can be disabled or the I/O address and the IRQ can be automatically selected by the BIOS. The options are listed below:

- Disabled
- 3F8/IRQ4 (DEFAULT)
- 2F8/IRQ3
- 3E8/IRQ4
- 2E8/IRQ3
- Auto

#### → Onboard Serial Port 2 [2F8/IRQ4]

The **Onboard Serial Port 2** option allows you to select the I/O address and IRQ for the onboard serial port. The serial port can be disabled or the I/O address and the IRQ can be automatically selected by the BIOS. The options are listed below:

- Disabled
- 3F8/IRQ4
- 2F8/IRQ3 (DEFAULT)
- 3E8/IRQ4
- 2E8/IRQ3
- Auto

### UART Mode Select [Normal]

The **UART Mode Select** option allows you to select the UART mode for the system.

➔ IrDA

IrDA is set as the IR serial mode. If this option is selected, COM2 will be disabled.

Page 95

ASKIR ASKIR is set as the IR serial mode. If this option is selected, COM2 will be disabled.

→ Normal (DEFAULT) COM2 is enabled and the IR device disabled

## → x RxD, TxD Active [Hi,Lo]

**BTechnology Corp** 

The **RxD**, **TxD** Active BIOS option allows you to set the infra-red reception (RxD) and transmission (TxD) polarity. (This option can only be selected if the UART is set in IrDA mode or ASKIR mode.) The following configuration options are available,

- Hi, Hi
- Hi, Lo (DEFAULT)
- Lo, Hi
- Lo, Lo

## → x IR Transmission Delay [Enabled]

- ➔ Disabled
- Enabled (DEFAULT)

## → UR2 Duplex Mode [Half]

- → Full
- Half (DEFAULT)
- → Use IR Pins [IR-Rx2Tx2]
  - $\rightarrow$  RxD2, TxD2
  - → IR-Rx2Tx2 (DEFAULT)

## Onboard Parallel Port [378/IRQ7]

The **Onboard Parallel Port** option allows you to select the I/O address and IRQ for the onboard parallel port. The following configuration options are available,

- Disabled
- 378/IRQ7 (DEFAULT)
- 278/IRQ5
- 3BC/IRQ7

Page 96

#### ➔ Parallel Port Mode [SPP]

The **Parallel Port Mode** selection allows you to select the mode the parallel port will operate in.

®Technology Corp.

→	SPP	(DEFAULT)	The parallel port will operate in the standard parallel
			port (SPP) mode. This parallel port mode will work with
			most parallel port devices but is slow.
→	EPP		The parallel port will operate in the enhanced parallel
			port mode (EPP). The EPP mode supports bi-directional
			communication between the system and the parallel
			port device and the transmission rates between the two
			are much faster than the SPP mode.
→	ECP		The parallel port will operate in the extended
			capabilities port (ECP) mode. The ECP mode supports
			bi-directional communication between the system and
			the parallel port device and the transmission rates
			between the two are much faster than the SPP mode.
→	ECP+EPP		The parallel port will be compatible with both ECP and
			EPP devices
→	Normal		

→ x EPP Mode Select

If the **EPP mode** is selected in the **Parallel Port Mode** configuration option, you will be able to configure the **EPP Mode Select** option. The EPP parallel port mode has two standards, EPP 1.7 and EP 1.9. This selection allows you to choose the standard the parallel port will operate in. Please refer to the parallel device that your system will be connected to and select the EPP mode accordingly.

EPP1.9 EPP 1.9 is selected as the EPP standard
 EPP1.7 (DEFAULT) EPP 1.7 is selected as the EPP standard

x ECP Mode Use DMA [3]



If the **ECP mode** is selected in the **Parallel Port Mode** configuration option, you will be able to configure the **ECP Mode Use DMA** option. This option determines the DMA channel the parallel port uses when it is in the ECP mode.

→	1		Parallel port uses DMA Channel 1 in the ECP mode
→	3	(DEFAULT)	Parallel port uses DMA Channel 3 in the ECP mode

### → PWRON After PWR-Fail [Off]

**Technology** Corp

This **PWRON After PWR-Fail** option allows you to select the state the system will return to if there is a power failure or power to the system is suddenly cut off.

→	Off	(DEFAULT)	After the power returns the system will remain off.	
→	On		After the power returns, the system will turn on	
→	Former-Sts		After the power returns the system will return to its	
			original state. If it was off, it will remain off. If it was on,	
			it will turn on again.	

## → Watch Dog Timer Unit [Second]

The Watch Dog Timer Unit default is set to second and is non-configurable.

# 5.6 Power Management Setup

The Power Management Setup menu (**BIOS Menu 12**) allows you to set the power management and saving features in the BIOS.

**Page 98**
Power-Supply Type	[ATX]	<b>A</b>	Item Help
ACPI Function ACPI Suspend Type X Run VGABIOS if S3 Resume Power Management Video Off Method Video Off In Suspend Suspend Type MODEM Use IRQ Suspend Mode HDD Power Down Soft-Off by PWR-BTTN Wake Up On LAN(I82562ET) Wake Up On LAN(I82562ET) Wake Up On LAN(CSA) Power On by Ring X USB KB Wake-Up From S3 Resume by Alarm X Date(of Month) Alarm X Time(hh:mm:ss) Alarm	<pre>[Enabled] [S1(POS)] Auto [User Define] [DPMS] [Yes] [Stop Grant] [3] [Disabled] [Disabled] [Instant-Off] [Enabled] [Enabled] [Enabled] Disabled [Disabled] 0 0 : 0 : 0</pre>		Menu Level ►

RTechnology Corp.

#### **BIOS Menu 12: Power Management Setup**

#### → Power-Supply Type [AT]

The following configuration options are available,

- AT (DEFAULT)
- ATX
- ➔ ACPI Function [Enabled]

The **ACPI Function** option allows you to enable or disable the ACPI function.

- Disabled
   The ACPI function is enabled
- Enabled (DEFAULT) The ACPI function is disabled

#### ACPI Suspend Type [S1(POS)]

➔

The **ACPI Suspend Type** option allows you to select the suspend state your computer will go into during the power conservation mode.

S1(POS) (DEFAULT) System appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.





→	S3(STR)	System appears off. The CPU has no power; RAM is in
		slow refresh; the power supply is in a reduced power
		mode.
→	S1&S3	The BIOS will be able to support both the S1 and the S3
		suspend states described above.

## → x Run VGABIOS if S3 Resume [Auto]

If the S3(STR) or S1&S3 option is selected in ACPI Suspend Type above, you will be able to configure the Run VGABIOS if S3 Resume option. This option allows you to select whether or not to run the VGA BIOS after the system wakes up from an S3 sleep state.

- Auto (DEFAULT) The system BIOS automatically decides whether or not to run the VGA BIOS after the system resumes from a S3 sleep state.
- Yes
   The VGA BIOS will be run after the system resumes
   from a S3 sleep state.
- ➔ No The VGA BIOS will not be run after the system resumes from a S3 sleep state.

#### Power Management [User Define]

Page 100

The **Power Management** option allows you to manually define the **Suspend Mode** and the **HDD Power Down** options. BIOS has preset minimum and maximum values for the **Suspend Mode** and the **HDD Power Down** options.

<b>→</b>	User Define	(Default)	The user defines the <b>Suspend Mode</b> time and the <b>HDD Power Down</b> time.
<b>→</b>	Min. Saving		BIOS automatically sets the <b>Suspend Mode</b> time and the <b>HDD Power Down</b> time for minimum power saving.
→	Max. Saving		BIOS automatically sets the Suspend Mode time

and the HDD Power Down time for maximum

Technology

Corp.

power saving.

The minimum and maximum power settings are shown below:

	Suspend Mode	HDD Power Down
Min. Saving	1 hour	15 minutes
Max. Saving	1 minute	1 minute

#### → Video Off Method [DPMS]

The **Video Off Method** option allows you to specify what happens to the monitor in a power down mode.

→	Blank Screen	Writes blanks to the video buffer and the
		monitor is black, but still active (not powered
		down).
→	V/H SYNC + Blank	Writes blanks to the video buffer and the
		monitor is black, but still active (not powered
		down)
→	DPMS (DEFAULT)	If your monitor supports Display Power
		Management Signaling, the monitor uses
		this to enter a power down mode.

→ Video Off In Suspend [Yes]

No

Yes

The **Video Off In Suspend** option allows you to specify whether the display monitor is turned off or remains on when the systems enters a suspend state.

The display monitor will remain on when the system is in suspend mode.

(DEFAULT) The display monitor will be turned off when the system is in suspend mode.

#### Suspend Type [Stop Grant]



The Suspend Type option allows you to determine what suspend state the CPU will go into when the system is in the suspend state.

→ **Stop Grant** 

**BTechnology Corp** 

(DEFAULT) When the CPU is in the stop grant state the bus

clock (BCLK) continues to run. Snoops and interrupts are also allowed in the stop grant state. Thus, the CPU can operate in a lower power state yet can respond to snoops and interrupts.



#### MODEM Use IRQ [3]

The MODEM Use IRQ option tells the power management which IRQ it should monitor for modem wakeup. The following options can be selected.

- N/A
- 3 (Default)
- 4
- 5
- 7
- 9
- 10
- 11

#### Suspend Mode [Disabled]

The Suspend Mode option allows you to specify how long the computer must wait for no activity before it goes into a suspend mode. If you disable this option the system will not go into a suspend mode. Note that if you selected max. or min. as the setting for the Power Management option, you will not be able to configure this setting. The following settings can be made.

- Disable (Default)
- 1 Min
- 2 Min
- 3 Min

- 4 Min
- 8 Min
- 12 Min
- 20 Min
- 30 Min
- 40 Min
- 1 Hour

#### → HDD Power Down [Disabled]

The **HDD Power Down** option allows you to specify how long the computer must wait for no activity before the HDD powers down. If you disable this option the HDD will not power down. Note that if you selected max. or min. as the setting for the **Power Management** option, you will not be able to configure this setting. The following settings can be made.

RTechnology Corp.

- Disable (Default)
- 1 Min
- 2 Min
- 3 Min
- 4 Min
- 5 Min
- 6 Min
- 7 Min
- 8 Min
- 9 Min
- 10 Min
- 11 Min
- 12 Min
- 13 Min
- 14 Min
- 15 Min

Soft –Off by PWR-BTTN [Instant-Off]



The **Soft –Off by PWR-BTTN** option allows you to define how the system responds when the power button is pushed. You may choose to allow the system to be either turned off completely or enter into a suspend mode.

→	Instant-Off	(DEFAULT)	The system will be turned off as soon as the power
			button is pressed.
→	Delay 4 Sec		The power button must be pressed for more than
			four seconds before it is turned off. If it is pressed for
			less than four seconds the system will enter a
			suspend state.

#### → Wake-Up On LAN(I82562ET) [Enabled]

**Technology Corp** 

The **Wake-Up On LAN(I82562ET)** option allows users to wake a system in a suspended state through a network. A wakeup signal from a network can be routed directly through the PCI card.

→	Disabled	The system cannot be woken from a suspend state
		through the network via a PCI card
<b>→</b>	Enabled	(DEFAULT) The system can be woken from a suspend state
		through the network via a PCI card

#### → Power On by Ring [Enabled]

The **Power On by Ring** option allows users to determine whether or not the system can be roused from a suspend state when the modem rings.

→ Disabled		The system will not be woken from a suspend state when the modem rings
→ Enabled	(Default)	The system will be woken from a suspend state when the modem rings

→ x USB KB Wake-Up From S3 [Disabled]

If you selected either the S3(STR) or the S1&S3 option in the **ACPI Suspend Type** option, you will be able to configure the **USB KB Wake-Up From S3**. This option allows you to wake the system from an S3 suspend state using the keyboard.

Technology Corp.

→	Disabled	(DEFAULT)	Keyboard cannot be used to rouse the system from
			the S3 suspend state
→	Enabled		Keyboard can be used to rouse the system from the
			S3 suspend state

#### → Resume by Alarm [Disabled]

The **Resume by Alarm** option allows you tell the computer when it should be roused from a suspend state.

→	Disabled	(DEFAULT)	No time is specified for when the computer should
			be roused from a suspend state
→	Enabled		The date and time the computer must be roused
			from a suspend state is specified

#### → x Date(of Month) Alarm [0]

The **Date(of Month) Alarm** option can only be configured if the **Resume by Alarm** option has been enabled. When you select this option you will be asked to enter a number between 0 and 31 to specify the date of the current month that you would like the system to be roused.

#### → x Time(hh:mm:ss) Alarm [0 : 0 : 0]

The **Time (hh:mm:ss)** Alarm option can only be configured if the **Resume by Alarm** option has been enabled. You will have to set the time you wish the computer to be roused. You will see three zeroes side by side. The first zero is for the hour, the second zero for the minutes and the third zero for the seconds.

- Hour (first zero): Select a number between 0 and 23
- Minute (second zero): Select a number from 0 to 59
- Second (third zero): Select a number from 0 to 59





#### ➔ Reload Global Timer Events

**Technology Corp** 

The Reload Global Timer Events field has the following BIOS configuration options

- Primary IDE 0
- Primary IDE 1
- Secondary IDE 0
- Secondary IDE 1
- FDD, COM, LPT Port
- PCI PIRQ[A-D]#

All the above options have "**Disabled**" as their default value. When disabled, if any activity occurs on these devices during a suspended state, the system will not be roused.

If "**Enabled**" is selected for any of the above devices, and if activity is recorded on an enabled device in the above list the system will be roused from its suspended state.

# 5.7 PnP/PCI Configurations

The PnP/PCI Configurations menu (**BIOS Menu 13**) allows you to set the plug and play, and PCI options.

Phoenix - AwardBIOS CMOS Setup U <sup>.</sup> PnP/PCI Configurations	tility
PNP OS Installed [No] Reset Configuration Data [Disabled] Resources Controlled By [Auto(ESCD)] X IRQ Resources Press Enter Y DMA Resources Press Enter PCI/VGA Palette Snoop [Disabled]	Item Help Menu Level ► Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save F5: Previous Values F6: Fail-Safe Defaults	ESC:Exit F1:General Help F7: Optimized Defaults

**BIOS Menu 13: PnP/PCI Configurations** 

#### → PNP OS Installed [No]

The **PNP OS Installed** option allows you to determine whether the Plug and Play devices connected to your system will be configured by the operating system or the BIOS.

**BTechnology** Corp.

- No (Default) If the operating system does not meet the Plug and Play specifications, this option allows the BIOS to configure all the devices in the system.
- Yes This setting allows the operating system to change the interrupt, I/O, and DMA settings. Set this option if the system is running Plug and Play aware operating systems.

#### ➔ Reset Configuration Data [Disabled]

The **Reset Configuration Data** option allows you to reset the Extended System Configuration Data (ESCD) when you exit setup if you have problems booting the system up after you have installed a new add-on.

Disabled (DEFAULT) ESCD will not be reconfigured

Enabled ESCD will be reconfigured after you exit setup

#### → Resources Controlled By [Auto (ESCD)]

The **Resources Controlled By** option gives you the option of manually configuring all the boot and plug and play devices, or allowing BIOS to configure these devices automatically. If you allow BIOS to configure it automatically you will not be able to select the IRQs, DMA and memory base address fields because BIOS will automatically assign them.



You manually configure the plug and play devices and any other boot devices

- Manual
- ➤ x IRQ Resources [Press Enter]



If you select manual in the **Resources Controlled By** option then you will be able to configure the **IRQ Resources**. To do this, select **IRQ Resources** and press **ENTER**. A new menu will appear (**BIOS Menu 14**).

ku-s assigned	to 🖭	[I Device]	Item Help
RQ-4 assigned RQ-5 assigned RQ-9 assigned RQ-10 assigned RQ-11 assigned RQ-12 assigned RQ-14 assigned RQ-15 assigned	22222222222222222222222222222222222222	II Device] II Device] II Device] II Device] II Device] II Device] II Device] II Device]	Menu Level Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture

#### BIOS Menu 14: IRQ Resources

**Technology Corp** 

The menu will have the following 12 BIOS configuration options:

- IRQ-3 assigned to
- IRQ-4 assigned to
- IRQ-5 assigned to
- IRQ-6 assigned to
- IRQ-7 assigned to
- IRQ-8 assigned to
- IRQ-9 assigned to
- IRQ-10 assigned to
- IRQ-11 assigned to
- IRQ-12 assigned to
- IRQ-13 assigned to
- IRQ-14 assigned to

IRQ-15 assigned to

The above options all have the same default and the same options. These are listed below.

**BTechnology** Corp.

- ➤ PCI Device (DEFAULT) The IRQ is assigned to legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PNP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture.
- Reserved The IRQ is reserved by BIOS

#### → x DMA Resources [Press Enter]

If you select manual in the **Resources Controlled By** option then you will be able to configure the **DMA Resources**. To do this, select **DMA Resources** and press **ENTER**. A new menu will appear.

The menu has the following 6 BIOS configuration options:

- DMA-0 assigned to
- DMA-1 assigned to
- DMA-3 assigned to
- DMA-5 assigned to
- DMA-6 assigned to
- DMA-7assigned to

The above options all have the same default and the same options. These are listed below.

PCI/ISA PnP (DEFAULT) For devices compliant with Plug and Play standard whether designed for PCI or ISA bus architecture.
 Legacy ISA Legacy ISA for devices compliant with the original PC AT bus specification.



#### → PCI/VGA Palette Snoop [Disabled]

Technology Corp

The **PCI/VGA Palette Snoop** option allows you determine whether or not some special VGA cards, high-end hardware MPEG decoders and other similar devices are allowed to look at the VGA palette on the video card so these devices can determine what colors are in use. This option is only *very* rarely needed. It should be left at "Disabled" unless a video device specifically requires the setting enabled upon installation.

→	Disabled	(DEFAULT)	Does not allow the graphics devices to examine the VGA
			palette on the graphics card
Enabled     Does allow the graphics devices to examin		Does allow the graphics devices to examine the VGA palette	
			on the graphics card

## **5.8 PC Health Status**

The **PC Health Status** menu (**BIOS Menu 15**) is a passive menu where you cannot alter any BIOS configurations. This menu shows system operating parameters that are essential to the stable operation of your system.



**BIOS Menu 15: PC Health Status** 

**Page 110** 

The following system parameters are monitored by the PC Health Status menu (**BIOS Menu 15**).

#### → System Temperature

The following temperatures are monitored:

- System Temperature
- CPU Temperature

#### ➔ Voltages

The following voltages are monitored

- CPU Vcore
- +1.5 V
- +3.3 V
- +5 V
- +12 V
- -12 V

#### ➔ Fan Speeds

The following fan speeds are monitored:

- CPU an Speed
- System Fan Speed

# 5.9 Frequency/Voltage Control

The **Frequency/Voltage Control** menu (**BIOS Menu 16**) allows you to configure the Auto Detect DIMM/PCI CLk and Spread Spectrum settings.



®Technology Corp.

Phoenix - AwardBIOS CMOS Setup Utility Frequency/Voltage Control			
CPU Clock Ratio [8 X]	Item Help		
Auto Detect DIMM/PCI CIK [Disabled] Spread Spectrum [Disabled]	Menu Level		
T↓→←:Move Enter:Select +/-/PU/PD:Value F10: F5: Previous Values F6: Fail-Safe Defaul	Save ESC:Exit F1:General Help ts F7: Optimized Defaults		

#### BIOS Menu 16: Frequency/Voltage Control

**Technology** Corp

The following system parameters are controlled by the Frequency/Voltage Control menu (BIOS Menu 16).

#### ➔ Auto Detect DIMM/PCI CLk [Enabled]

The **Auto Detect DIMM/PCI CLk** option allows BIOS to monitor power consumption to the AGP, PCI and SDRAM DIMM slots and reduce EMI (Electromagnetic Interference) by turning them off when unoccupied or inactive.

Enabled (DEFAULT) Bios will monitor and turn off any unoccupied or inactive AGP, PCI and SDRAM DIMM slots

BIOS will not monitor AGP, PCI and SDRAM DIMM slots

#### Spread Spectrum [Disabled]

Disabled

The **Spread Spectrum** option is used to reduce EMI (Electromagnetic Interference) generated by the system clock. This option is disabled by default so that EMI can be controlled by the **Auto Detect DIMM/PCI CLk** option.

➔ Enabled

Monitors system clocking to reduce EMI (Electromagnetic Interference)



Disabled (DEFAULT)

Does not monitor system clocking

®Technology Corp.





Below is a list of BIOS configuration options in the BIOS chapter.

Load Fail-Safe Defaults66
Load Optimized Defaults66
Set Supervisor Password66
Set User Password
Save & Exit Setup
Exit Without Saving
IDE Master and IDE Slave67
Drive A [1.44M, 3.5in]
Drive B [1.44M, 3.5in]
Video [EGA/VGA]68
EGA
VGA
SEGA
SVGA
PGA
Halt On69
Base Memory:
Extended Memory
Total Memory70
IDE HDD Auto-Detection [Press Enter]70
IDE Channel 0/1 Master/Slave [Auto]71
Access Mode [Auto]
Capacity
Cylinder72
Head
Precomp
Landing Zone72
Sector
Virus Warning [Disabled]73
CPU L1 & L2 Cache [Enabled]
Quick Power On Self Test [Enabled]74
Boot Device74
Boot Other Device [Enabled]75



®Technology Corp.

# ®Technology Corp.

# ROCKY-4786EV/EVG User Manual

Swap Floppy Drive [Disabled]75	5			
Boot Up Floppy Seek [Enabled]76				
Boot Up Numlock Status [On]76	5			
Gate A20 Option [Fast]76	5			
Typematic Rate Setting [Disabled]76	5			
x Typematic Rate (Chars/sec) [6]	7			
x Typematic Delay (Msec) [250]77	7			
Security Option [Setup]77	7			
APIC Mode [Enabled]78	3			
MPS Version Control for OS [1.4]78	3			
OS Select For DRAM > 64MB [Non-OS2]79	•			
Small Logo (EPA) Show [Disabled]79	•			
Thermal Management [Thermal Monitor 1]80	)			
DRAM Timing Selectable [Manual]82	2			
CAS Latency Time [2]83	3			
Active to Precharge Delay [6]83	3			
DRAM RAS# to CAS# Delay [3]83	3			
DRAM RAS# Precharge [3 clocks]83				
Memory Frequency For [DDR266]84				
System BIOS Cacheable [Enabled]84	1			
Video BIOS Cacheable [Disabled]84	1			
Memory Hole At 15M – 16M [Disabled]84				
Delay Prior to Thermal [16 Min.]85	5			
AGP Aperture Size (MB) [128]85	5			
Init Display First [PCI Slot]86	3			
On-Chip VGA [Enabled]86	3			
On-Chip Frame Buffer Size [16MB]86	3			
Boot Display [Auto]86	3			
IDE HDD Block Mode [Enabled]88	3			
On-Chip Primary PCI IDE [Enabled]88	3			
IDE PIO [Auto]	3			
DE UDMA [Auto]89	)			
On-Chip Secondary PCI IDE [Auto]89	)			
On Chip Serial ATA [Disabled]90	)			
x PATA IDE Mode [Secondary]90	)			

SATA Port90				
USB Controller [Enabled]91				
USB 2.0 Controller [Enabled]91				
USB Keyboard Support [Disabled]91				
AC97 Audio Select [Auto]92				
I82562ET LAN (10/100M) [Disabled]92				
POWER ON Function [BUTTON ONLY]93				
x KB Power ON Password [Enter]94				
x Hot Key Power ON [Ctrl-F1]94				
Onboard FDC Controller [Disabled]94				
Onboard Serial Port 1 [3F8/IRQ4]95				
Onboard Serial Port 2 [2F8/IRQ4]95				
UART Mode Select [Normal]95				
x RxD, TxD Active [Hi,Lo]96				
x IR Transmission Delay [Enabled]96				
UR2 Duplex Mode [Half]96				
Use IR Pins [IR-Rx2Tx2]96				
Onboard Parallel Port [378/IRQ7]96				
Parallel Port Mode [SPP]97				
x EPP Mode Select				
x ECP Mode Use DMA [3]97				
PWRON After PWR-Fail [Off]98				
Watch Dog Timer Unit [Second]98				
Power-Supply Type [AT]99				
ACPI Function [Enabled]99				
ACPI Suspend Type [S1(POS)]99				
x Run VGABIOS if S3 Resume [Auto]100				
Power Management [User Define] 100				
Video Off Method [DPMS] 101				
Video Off In Suspend [Yes] 101				
Suspend Type [Stop Grant] 101				
MODEM Use IRQ [3] 102				
Suspend Mode [Disabled]102				
HDD Power Down [Disabled] 103				
Soft –Off by PWR-BTTN [Instant-Off] 103				

Page 117

®Technology Corp.

Wake-Up On LAN(I82562ET) [Enabled]10	04		
Power On by Ring [Enabled]10	04		
x USB KB Wake-Up From S3 [Disabled]104			
Resume by Alarm [Disabled] 10	05		
x Date(of Month) Alarm [0]10	05		
x Time(hh:mm:ss) Alarm [0 : 0 : 0]10	05		
Reload Global Timer Events10	06		
PNP OS Installed [No]	07		
Reset Configuration Data [Disabled] 107			
Resources Controlled By [Auto (ESCD)]10	07		
x IRQ Resources [Press Enter]10	07		
x DMA Resources [Press Enter]10	09		
PCI/VGA Palette Snoop [Disabled]1	10		
System Temperature	11		
Voltages 1'	11		
Fan Speeds 1'	11		
Auto Detect DIMM/PCI CLk [Enabled] 12	12		
Spread Spectrum [Disabled]1	12		

Page 118

®Technology Corp.





Page 119

÷.

®Technology Corp.

# Terminology



AC '97	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.	
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.	
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.	
ΑΤΑ	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.	
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.	
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude ("volume") of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.	
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user	
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.	
CompactFlash®	CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types.	
CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.	
СОМ	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.	
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.	
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.	

DMA	Direct Memory Access (DMA) enables some peripheral devices to		
	bypass the system processor and communicate directly with the system		
	memory.		
DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data		
	bus and have separate electrical contacts on each side of the module.		
DIO	The digital inputs and digital outputs are general control signals that		
	control the on/off circuit of external devices or TTL devices. Data can be		
	read or written to the selected address to enable the DIO functions.		
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a		
	register-level interface description for USB 2.0 Host Controllers.		
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data		
	transfer rates between 4.0 MBps and 16.6 MBps.		
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify		
	the power consumption levels and processor performance through		
	application software. The application software changes the bus-to-core		
	frequency ratio and the processor core voltage.		
FSB	The Front Side Bus (FSB) is the bi-directional communication channel		
	between the processor and the Northbridge chipset.		
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0		
	Gbps and complies with the IEEE 802.3-2005 standard.		
GPIO	General purpose input		
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer		
	storage device that stores digitally encoded data.		
існ	The Input/Ouput Controll Hub (ICH) is an Intel® Southbridge chipset.		
IrDA	Infrared Data Association (IrDA) specify infrared data transmission		
	protocols used to enable electronic devices to wirelessly communicate		
	with each other.		
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the		
	system processor.		
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.		

®Technology Corp.





Liquid crystal display (LCD) is a flat, low-power display device that
Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
The Video Graphics Array (VGA) is a graphics display system developed by IBM.



Page 123

®Technology Corp.

# **Digital I/O Interface**



# **C.1 Introduction**

Technology Corp

The DIO connector on the ROCKY-4786EV/EVG is interfaced to GPIO ports on the Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



For further information, please refer to the datasheet for the Super I/O chipset.

# **C.2 DIO Connector Pinouts**

The following table describes how the DIO connector pins are connected to the Super I/O GPIO port 1.

Pin	Description	Super I/O Pin	Super I/O Pin Description
1	Ground	N/A	N/A
2	VCC	N/A	N/A
3	Output 3	GP27	General purpose I/O port 2 bit 7.
4	Output 2	GP26	General purpose I/O port 2 bit 6.
5	Output 1	GP25	General purpose I/O port 2 bit 5.
6	Output 0	GP24	General purpose I/O port 2 bit 4.
7	Input 3	GP23	General purpose I/O port 2 bit 3.
8	Input 2	GP22	General purpose I/O port 2 bit 2
9	Input 1	GP21	General purpose I/O port 2 bit 1
10	Input 0	GP20	General purpose I/O port 2 bit 0

### Table C-1: Digital I/O Connector Pinouts

# C.3 Assembly Language Samples

## C.3.1 Enable the DIO Input Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O input functions is listed below.

MOV	AX, 6F08H	Sets the digital port as input
INT	15H	Initiates the INT 15H BIOS call

## C.3.2 Enable the DIO Output Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O output functions is listed below.

MOV	AX, 6F09H	Sets the digital port as output
ΜΟΥ	BL, 09H	
INT	154	Initiates the INT 15H BIOS call



**BTechnology** Corp.



Appendix

# Watchdog Timer



The following discussion applies to DOS. Contact IEI support or visit the IEI website for drivers for other operating systems.

The Watchdog Timer is a hardware-based timer that attempts to restart the system when it stops working. The system may stop working because of external EMI or software bugs. The Watchdog Timer ensures that standalone systems like ATMs will automatically attempt to restart in the case of system problems.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH	Sub-function:
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.



**BTechnology** Corp.



**RTechnology Corp** 

The Watchdog Timer is activated through software. The software application that activates the Watchdog Timer must also deactivate it when closed. If the Watchdog Timer is not deactivated, the system will automatically restart after the Timer has finished its countdown.

## **EXAMPLE PROGRAM:**





# **Address Mapping**

®Technology Corp.

Appendix

E



# E.1 I/O Address Map

**Technology Corp** 

I/O address Range	Description		
000-01F	DMA Controller		
020-021	Interrupt Controller		
040-043	System time		
060-06F	Keyboard Controller		
070-07F	System CMOS/Real time Clock		
080-09F	DMA Controller		
0A0-0A1	Interrupt Controller		
0C0-0DF	DMA Controller		
OFO-OFF	Numeric data processor		
1F0-1F7	Primary IDE Channel		
2F8-2FF	Serial Port 2 (COM2)		
378-37F	Parallel Printer Port 1 (LPT1)		
3B0-3BB	Intel(R) Graphics Controller		
3C0-3DF	Intel(R) Graphics Controller		
3F6-3F6	Primary IDE Channel		
3F7-3F7	Standard floppy disk controller		
3F8-3FF	Serial Port 1 (COM1)		

Table E-1: IO Address Map

# E.2 1st MB Memory Address Map

Memory address	Description	
00000-9FFFF	System memory	
A0000-BFFFF	VGA buffer	
F0000-FFFFF	System BIOS	
100000-	Extend BIOS	

 Table E-2: 1<sup>st</sup> MB Memory Address Map

# E.3 IRQ Mapping Table

I RQ0	System Timer	IRQ8	RTC clock	
IRQ1	Keyboard	IRQ9	ACPI	
IRQ2	Available	IRQ10	LAN	
IRQ3	COM2	IRQ11	LAN/USB2.0/SATA	
IRQ4	COM1	IRQ12	PS/2 mouse	
IRQ5	SMBus Controller	IRQ13	FPU	
IRQ6	FDC	IRQ14	Primary IDE	
IRQ7	Q7 Available		Secondary IDE	

Table E-3: IRQ Mapping Table

# E.4 DMA Channel Assignments

<b>Channel</b>	Function			
0	Available			
1	Available			
2	Floppy disk (8-bit transfer)			
3	Available			
4	Cascade for DMA controller 1			
5	Available			
6	Available			
7	Available			

Table E-4: IRQ Mapping Table

Page 131

®Technology Corp.





# Hazardous Materials Disclosure



# F.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated "Environmentally Friendly Use Period" (EFUP). This is an estimate of the number of years that these substances would "not leak out or undergo abrupt change." This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

**BTechnology** Corp.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers
						(PBDE)
Housing	Х	0	0	0	0	X
Display	х	0	0	0	0	x
Printed Circuit	Х	0	0	0	0	Х
Board						
Metal	х	0	0	0	0	0
Fasteners						
Cable	х	0	0	0	0	х
Assembly						
Fan Assembly	х	0	0	0	0	х
Power Supply	Х	0	0	0	0	Х
Assemblies						
Battery	0	0	0	0	0	0

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006



Technology Corp
## **ROCKY-4786EV/EVG User Manual**

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符 合中国 RoHS 标准规定的限量要求。

本产品上会附有"环境友好使用期限"的标签,此期限是估算这些物质"不会有泄漏或突变"的 年限。本产品可能包含有较短的环境友好使用期限的可替换元件,像是电池或灯管,这些元 件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯
	(Pb)	(Hg)	(Cd)	(CR(VI))	(PBB)	醚
						(PBDE)
壳体	Х	0	0	0	0	Х
显示	Х	0	0	0	0	Х
印刷电路板	Х	0	0	0	0	Х
金属螺帽	Х	0	0	0	0	0
电缆组装	Х	0	0	0	0	Х
风扇组装	х	0	0	0	0	Х
电力供应组装	х	0	0	0	0	Х
电池	0	0	0	0	0	0
O:表示该有盡有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。						

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。





®Technology Corp.