



Operator's Manual

Serial Number Range

Super-Straddle

from SSP-7000

AUS
Australia

with
Maintenance
Information

Third Edition
First Printing
Part No. 1298031GT

Contents

Introduction	1
Symbol and Hazard Pictorials Definitions.....	5
General Safety	6
Work Area Safety	7
Assembly and Disassembly	9
Legend	11
Inspections	12
Operating Instructions.....	20
Maintenance	23
Specifications	24

Copyright © 1992 Terex Corporation

Third Edition: First Printing, September 2020

Genie is a registered trademark of Terex South Dakota, Inc. in the U.S.A. and many other countries.

These machines comply with
AS 1418.10



Introduction

About this manual

Genie appreciates your choice of our machine for your application. Our number one priority is user safety, which is best achieved by our joint efforts. This book is an operation and daily maintenance manual for the user or operator of a Genie machine.


This manual should be considered a permanent part of your machine and should remain with the machine at all times. If you have any questions, contact Genie.

Product Identification

The machine serial number is located on the serial label.

Serial number (stamped on inside of end frame assembly)

Serial label

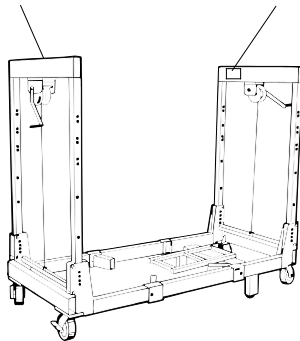


Intended Use and Familiarization Guide

The winch on the Super Straddle is only intended to lift the Genie AWP to the appropriate height. It is not intended to lift people. Before operating the machine, it's the operator's responsibility to read and understand this familiarization guide.

- ☒ Each person must be trained to operate a Mobile Elevating Work Platform (MEWP).
- ☒ Familiarization with the MEWP must be given to each person who is authorized, competent and trained.
- ☒ Only trained and authorized personnel should be permitted to operate the machine.
- ☒ The operator is responsible to read, understand, and obey the manufacturer's instructions and safety rules provided in the Operator's Manual.
- ☒ The Operator's Manual is located in the manual storage container, at the platform.
- ☒ For specific product applications, see **Contacting The Manufacturer.**

Introduction

Related machine movement:

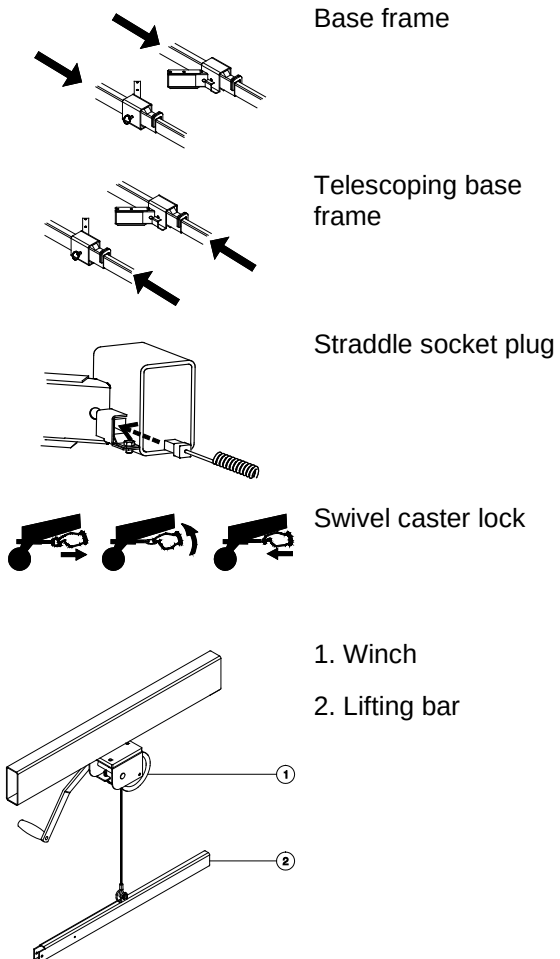

Introduction

Bulletin Distribution and Compliance

Safety of product users is of paramount importance to Genie. Various bulletins are used by Genie to communicate important safety and product information to dealers and machine owners.

The information contained in the bulletins is tied to specific machines using the machine model and serial number.

Distribution of bulletins is based on the most current owner on record along with their associated dealer, so it is important to register your machine and keep your contact information up to date.

To ensure safety of personnel and the reliable continued operation of your machine, be sure to comply with the action indicated in a respective bulletin.

To view any open bulletins for your machine, visit us on the web at www.genielift.com.

Contacting the Manufacturer

At times it may be necessary to contact Genie. When you do, be ready to supply the model number and serial number of your machine, along with your name and contact information. At minimum, Genie should be contacted for:

Accident reporting

Questions regarding product applications and safety

Standards and regulatory compliance information

Current owner updates, such as changes in machine ownership or changes in your contact information. See Transfer of Ownership, below.

Transfer of Machine Ownership

Taking a few minutes to update owner information will ensure that you receive important safety, maintenance and operating information that applies to your machine.

Please register your machine by visiting us on the web at www.genielift.com or by calling us toll free at 1-800-536-1800.

Introduction



Danger

Failure to obey the instructions and safety rules in this manual will result in death or serious injury.

Do Not Operate Unless:

- ☒ You learn and practice the principles of safe machine operation contained in this operator's manual.

1 Avoid hazardous situations.

Know and understand the safety rules before going on to the next section.

- 2 Always perform a pre-operation inspection.
 - 3 Always perform function tests prior to use.
 - 4 Inspect the workplace.
 - 5 Only use the machine as it was intended.
- ☒ You read, understand and obey the manufacturer's instructions and safety rules—safety and operator's manuals and machine decals.
 - ☒ You read, understand and obey employer's safety rules and worksite regulations.
 - ☒ You read, understand and obey all applicable governmental regulations.
 - ☒ You are properly trained to safely operate the machine.

Safety Sign Maintenance

Replace any missing or damaged safety signs. Keep operator safety in mind at all times. Use mild soap and water to clean safety signs. Do not use solvent-based cleaners because they may damage the safety sign material.

Hazard Classification

Decals on this machine use symbols, color coding, and signal words to identify the following:



Safety alert symbol—used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.


 
 




 





⚠ CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.


NOTICE

Indicates a property damage message.

Symbol and Hazard Pictorials Definitions

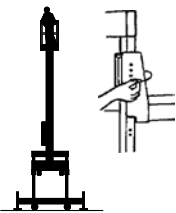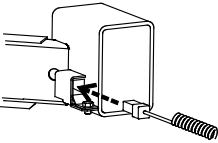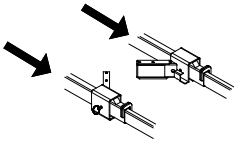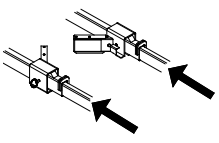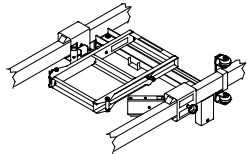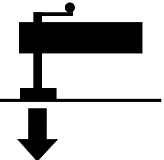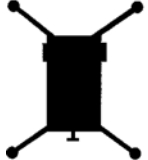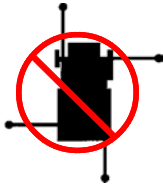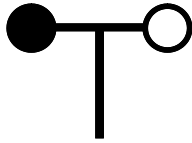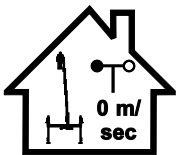				
Read the operator's manual	Tip-over hazard	Insert retaining pins	Tip-over hazard	Insert outriggers
				
Crushing hazard	Keep away from moving parts	Straddle socket plug	Base frame	Telescoping base frame
				
Ladder storage	Pull gray tab to release pin	Outrigger load	Use on X-pattern outriggers.	Do not use on pinwheel outriggers.
				
Maximum wind speed	Indoor Use Only			

General Safety

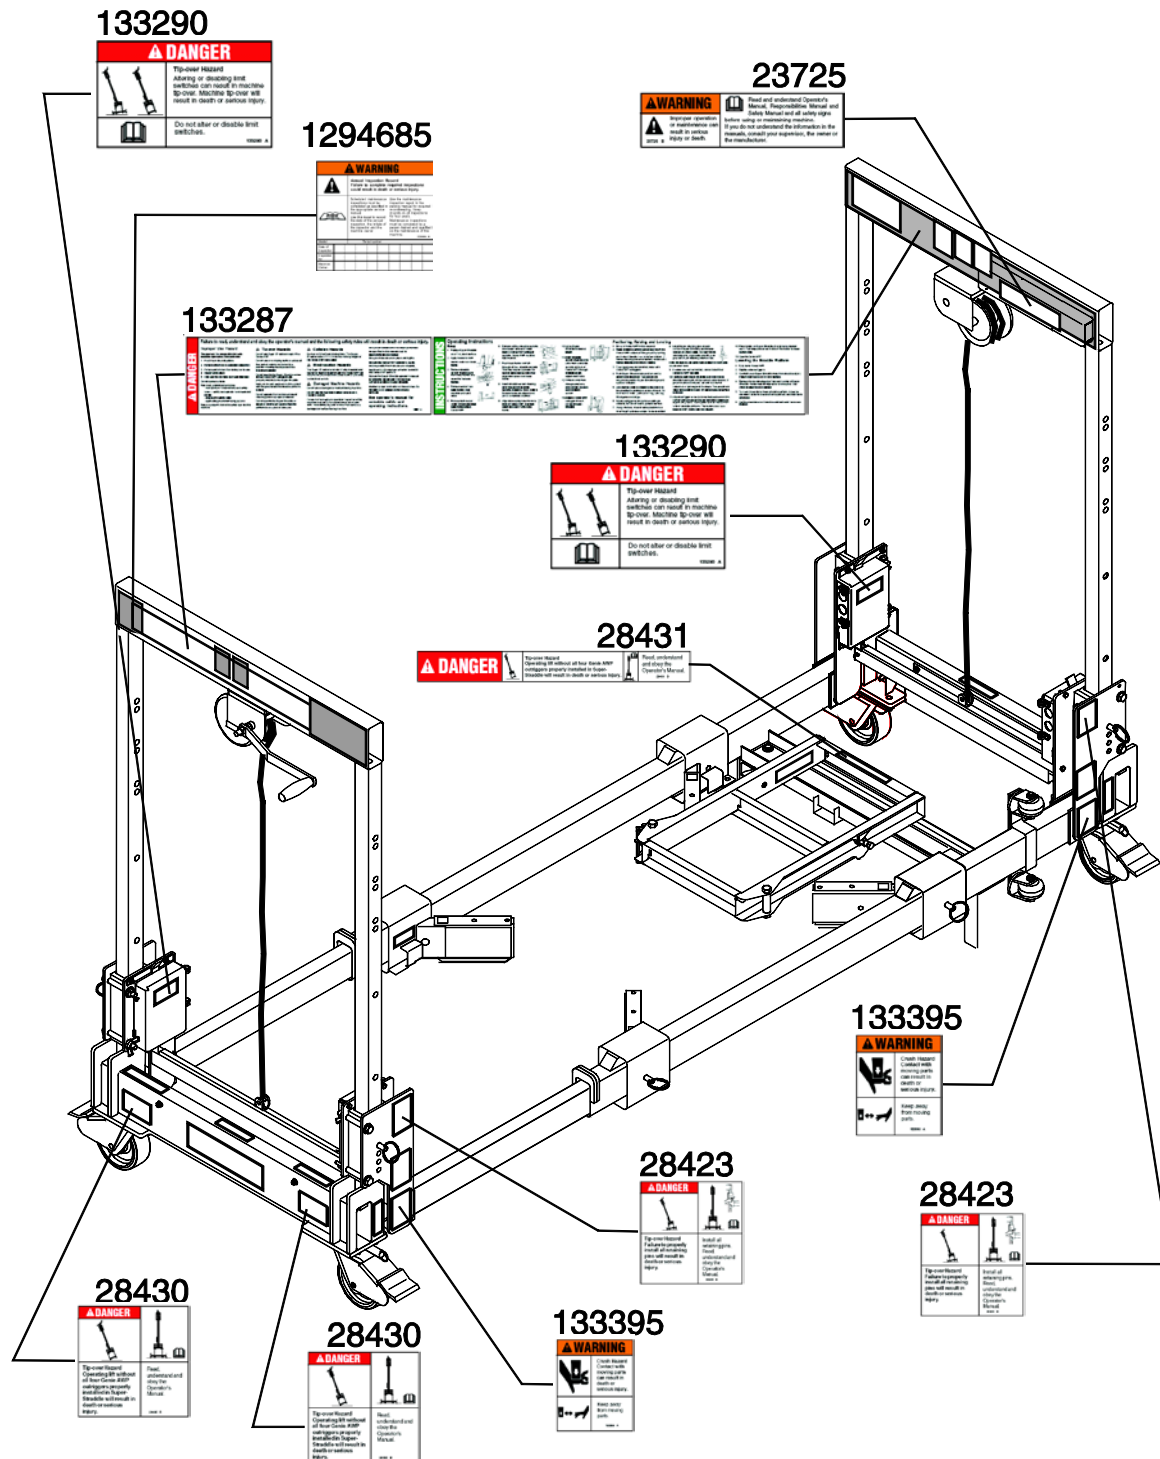

Work Area Safety

⚠ Tip-over Hazards

Do not use the Super-Straddle except with a Genie AWP.


Do not use on a sloping surface unless all four swivel casters are locked in a position crossing the slope and their brakes are applied.

Do not operate the Super-Straddle unless all four Genie AWP outriggers are properly installed in the Super-Straddle base, screw jack pads are in firm contact with the ground and the straddle platform is level.

Do not operate the machine unless all retaining pins are properly installed.

Do not operate the Super-Straddle, or adjust or remove outriggers when the platform is occupied or elevated.

Do not operate the machine on a slope unless it is positioned with the length running with the slope and the straddle platform is level.

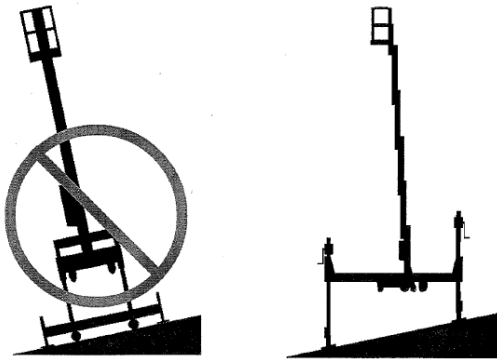

Do not use the Genie Super Straddle outdoors.

Some Genie AWP outriggers are rated for outdoor use. When using these outriggers with the Super-Straddle, the Super-Straddle must only be used indoors.

Do not move or operate the machine on stairs.

Do not push off or pull toward any object outside of the platform.

When raising the AWP platform, follow the ratings for allowable side force and number of occupants in the Genie AWP operator's manual.

Do not alter or disable machine components that in any way affect safety and stability.

Do not alter or modify a mobile elevating work platform without prior written permission from the manufacturer.

Use only Genie approved replacement parts.

⚠ Collision Hazards

Be aware of overhead obstructions. The Super-Straddle adds 4 ft / 1.2 m to the working height of the Genie AWP being used.

⚠ Crushing Hazards

Keep hands away from end frame plates and moving parts when lowering the Super-Straddle.

⚠ Electrocution Hazards

The Super-Straddle is not electrically insulated and neither by itself or together with the Genie AWP will not provide protection from contact with or proximity to electrical current.


Work Area Safety

⚠ Damaged Machine Hazards



Do not use a damaged or malfunctioning machine.

Do not use the machine if either winch cable is worn, frayed or kinked.

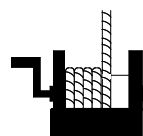

Do not use a machine with less than 4 wraps of cable on the winch drum when the Super Straddle is fully lowered.

Conduct a thorough pre-operation inspection of the machine and test all functions before each work shift. Immediately tag and remove from service a damaged or malfunctioning machine.

Be sure all maintenance has been performed as specified in this manual and the appropriate service manual.

Be sure all decals are in place and legible.

Be sure the Genie AWP operator's, safety, and responsibilities manuals are complete, legible and in the storage container located on the AWP platform.

Be sure the Super-Straddle operator's manual is complete, legible and in the storage container located on the Super-Straddle.

Maintain proper lubrication on the winch. Do not allow oil or grease on braking surfaces.


Assembly and Disassembly



Assembly and Disassembly



To move the Super-Straddle through a doorway or to set it up after shipping, follow these instructions.

- ☑ Assemble or disassemble the Super-Straddle only on a firm, level surface.
- ☑ Two people are required to safely maneuver and support the Super-Straddle components through this procedure.
- ☑ Do not allow Super-Straddle components to drop.

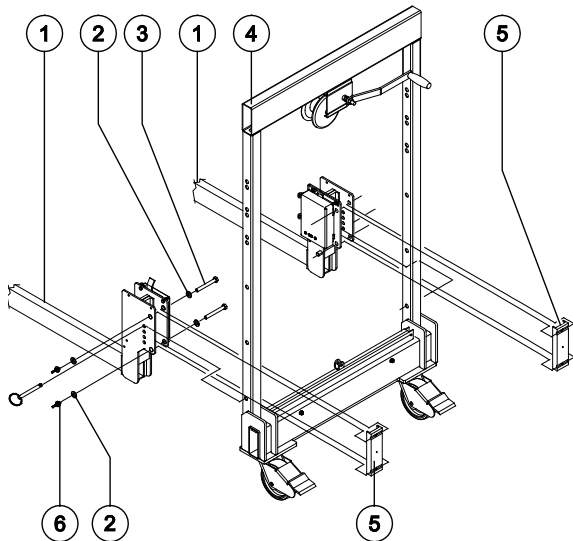

- 1 telescoping tube
- 2 washer
- 3 bolt
- 4 end frame
- 5 wear pad
- 6 wing nut

Assembly

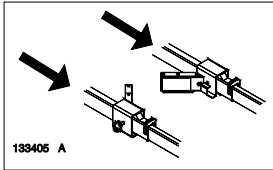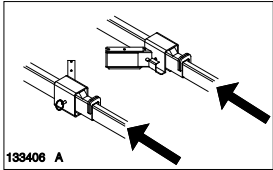- 1 Apply the caster brakes. Set the caster swivel locks parallel to the straddle platform tubes.
- 2 Both winch cables must be fully lowered.
- 3 Be sure that the telescoping tubes are inserted and pinned to the same length in the straddle platform.
- 4 Move the end frame marked Base Frame (refer to decal on base frame) to the end of the straddle platform nearest the cross member.
 
- 5 One person must support the end frame while the other attaches it to the straddle platform. The winch handle should point away from the machine.
- 6 Position the wear pads and attach each one with the supplied bolts, washers and wing nuts.
 
- 7 Move the end frame marked Telescoping Base Frame (refer to decal on telescoping base frame) to the other end of the straddle platform and repeat steps 5 and 6.
- 8 Make sure all wing nuts are tight.
- 9 Connect the electrical cords.

Assembly and Disassembly


Disassembly

- 1 Apply the caster brakes. Set the caster swivel locks parallel to the straddle platform tubes.
- 2 The straddle platform must be fully lowered.
- 3 Disconnect the electrical cables.
- 4 Select an end. While one person supports the end frame, the other can remove the bolts and wear pads, and then they can carefully set the straddle platform on the ground. Set the end frame aside.
- 5 Repeat step 3 and 4 for the opposite end frame.
- 6 Keep the bolts, washers, wing nuts and wear pads together.

Passing Through Doorways

- 1 Complete the disassembly procedure.
- 2 Release the caster brakes and carefully roll each end frame through the doorway to the assembly area.
- 3 Remove the telescoping tubes from the straddle platform and carry them to the assembly area.
- 4 Two people should carefully lift the straddle platform onto its side casters and roll it through the doorway.
- 5 Follow the assembly procedure.

Legend

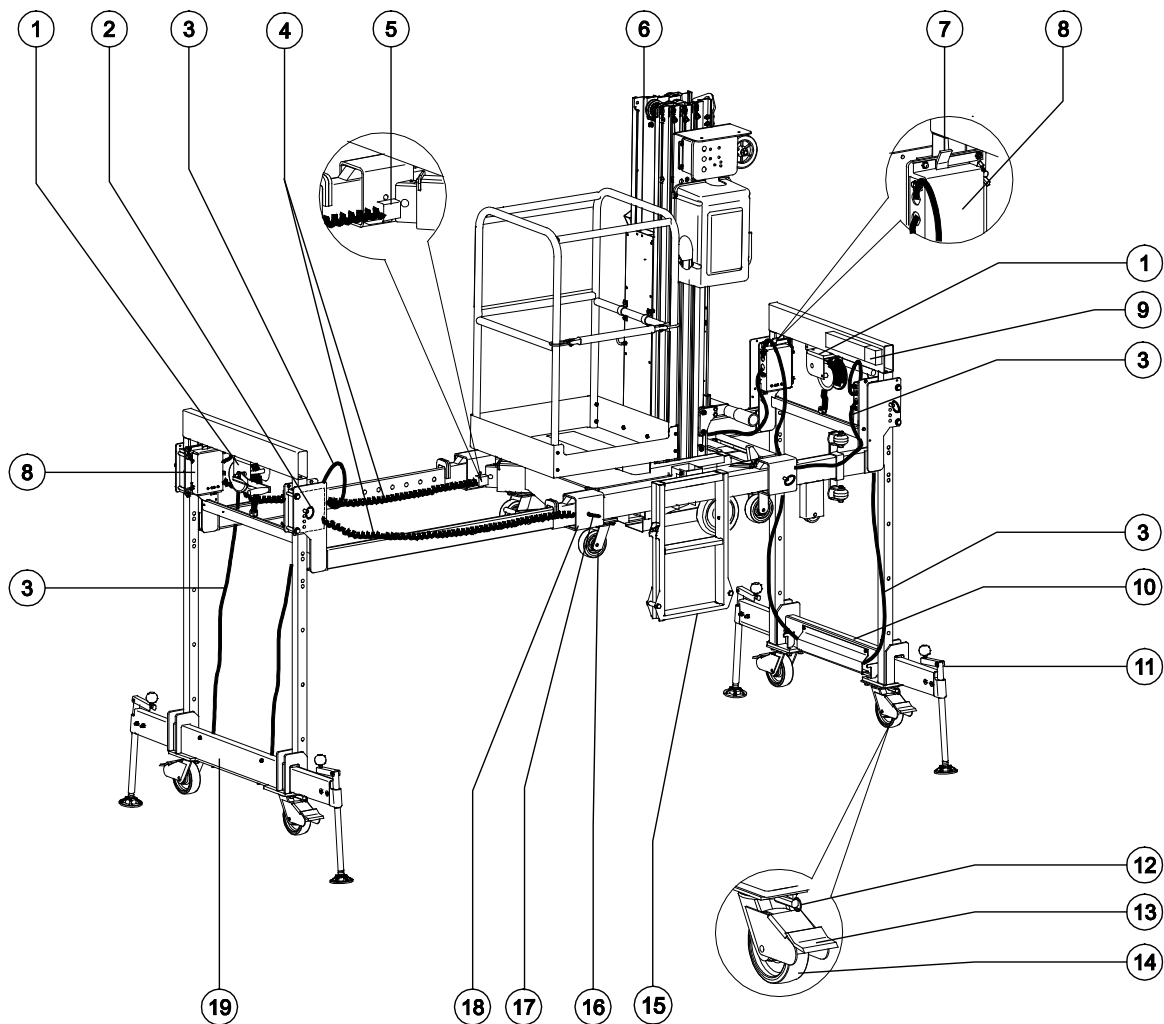

- | | |
|--|----------------------------------|
| 1 Winch | 11 Genie AWP outrigger |
| 2 Frame retaining pin | 12 Caster swivel lock |
| 3 Electrical cord | 13 Caster brake |
| 4 Coil cord | 14 Caster |
| 5 Straddle socket plug | 15 Ladder |
| 6 Genie AWP | 16 Side casters |
| 7 Gray tab for releasing or inserting retaining pins | 17 Straddle socket retaining pin |
| 8 Retaining pin interlock box | 18 Straddle socket |
| 9 Manual storage container | 19 Telescoping base frame |
| 10 Base frame | |

Inspections



Do Not Operate Unless:

- ☑ You learn and practice the principles of safe machine operation contained in this operator's manual.

- 1 Avoid hazardous situations.

- 2 Always perform a pre-operation inspection.**

Know and understand the pre-operation inspection before going on to the next section.

- 3 Always perform function tests prior to use.

- 4 Inspect the workplace.

- 5 Only use the machine as it was intended.

Pre-operation Inspection Fundamentals

It is the responsibility of the operator to perform a pre-operation inspection and routine maintenance.

The pre-operation inspection is a visual inspection performed by the operator prior to each work shift. The inspection is designed to discover if anything is apparently wrong with a machine before the operator performs the function tests.

The pre-operation inspection also serves to determine if routine maintenance procedures are required. Only routine maintenance items specified in this manual may be performed by the operator.

Refer to the list on the next page and check each of the items.

If damage or any unauthorized variation from factory delivered condition is discovered, the machine must be tagged and removed from service.

Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications. After repairs are completed, the operator must perform a pre-operation inspection again before going on to the function tests.

Scheduled maintenance inspections shall be performed by qualified service technicians, according to the manufacturer's specifications and the requirements listed in the responsibilities manual.

Inspections

Pre-operation Inspection

- ☐ Be sure that the operator's, safety and responsibilities manuals are complete, legible and in the storage container located in the AWP platform.
- ☐ Be sure that all decals are legible and in place. See Decals section.

Check the following components or areas for damage, improperly installed, or missing parts and unauthorized modifications:

- ☐ Electrical components, wiring and electrical cables
- ☐ Winches
- ☐ Cables
- ☐ Wear pads
- ☐ Nuts, bolts and other fasteners

Check entire machine for:

- ☐ Cracks in welds or structural components
- ☐ Dents or damage to machine
- ☐ Excessive rust, corrosion or oxidation
- ☐ Verify that all structural and other critical components are present and all associated fasteners and pins are in place and properly tightened.



Do Not Operate Unless:

- ☒ You learn and practice the principles of safe machine operation contained in this operator's manual.

- 1 Avoid hazardous situations.
- 2 Always perform a pre-operation inspection.
- 3 Always perform function tests prior to use.**

Know and understand the function tests before going on to the next section.

- 4 Inspect the workplace.
- 5 Only use the machine as it was intended.

Inspections

Function Test Fundamentals

The function tests are designed to discover any malfunctions before the machine is put into service. The operator must follow the step-by-step instructions to test all machine functions.


A malfunctioning machine must never be used. If malfunctions are discovered, the machine must be tagged and removed from service. Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications.

After repairs are completed, the operator must perform a pre-operation inspection and function tests again before putting the machine into service.



Setup

- 1 Position the Super-Straddle on a firm, level surface.

- 2 Apply the brakes to both swivel casters on the base frame.

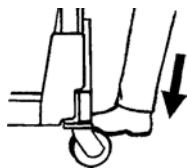

- 3 Remove the straddle socket retaining pins from the base frames and separate the base frames.


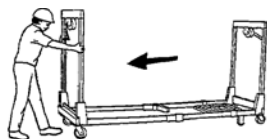
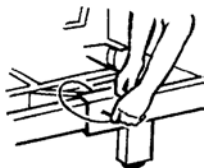


- 4 Remove the ladder from the base frame cross member and set it aside.
- 5 Release both swivel caster brakes and align the base frame behind the Genie AWP.

- 6 Remove all four straddle sockets from the base frame and install them in the Genie AWP outrigger sockets. The Genie AWP must be fully lowered.





- 7 Push the base frame carefully through all four straddle sockets. This may require two people. Be sure the straddle sockets are over the alignment spacers on the base frame.

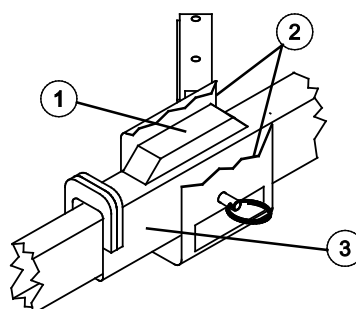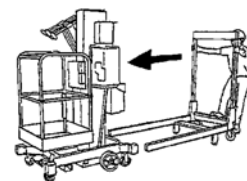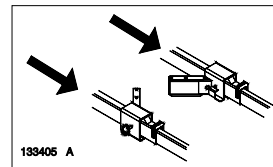


- 1 alignment spacer
- 2 straddle socket
- 3 base frame

- 8 Insert the straddle socket retaining pins through the two straddle sockets closest to the fixed casters. Be sure the holes are aligned and the pin is completely inserted.

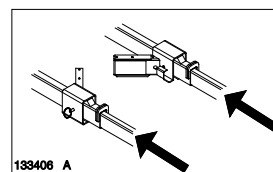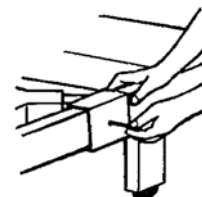


Inspections

- 9 Align the telescoping base frame in front of the Genie AWP, and then insert and push it into the base frame.

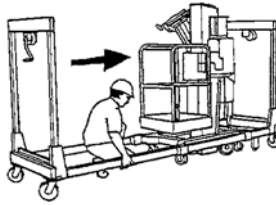

- 10 Adjust the Super-Straddle to the desired length.

- 11 Insert the straddle socket retaining pins (attached to the straddle sockets at the front of the Genie AWP) through the straddle length adjustment holes.

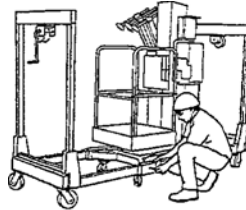

- 12 Unhook the cords from the storage positions, and connect the plugs in each of the straddle sockets.

- 2 Crank the winch and raise the straddle platform about 1 inch /2.5 cm, enough to allow the frame retaining pins at each corner of the Super-Straddle to be inserted into the first set of holes. Do not raise the straddle platform past the first set of holes.
- 3 To insert a frame retaining pin, align the holes and lift up on the gray tab on the pin retaining interlock box. The pin is fully inserted when the gray tab stays up.
- 4 Insert frame retaining pins at each corner of the Super-Straddle.

Note: Be sure to use the same hole position for both pins on one end frame.

- 5 At the interlock display of the Genie AWP, insert the key and turn to platform control.
- 6 Pull out the red Emergency Stop button to the on position.
- Ⓢ Result: The power light and all four outrigger interlock display lights should come on.

Function Tests

- 1 Install a Genie AWP outrigger at each corner of the Super-Straddle. Adjust the outriggers to level the machine and raise the casters slightly off the ground.



Note: The outriggers must be the correct size for the Genie AWP.

Inspections

Test Retaining Pin Interlock

- 7 At the platform controls of the Genie AWP, pull out the red Emergency Stop button.
- 8 Push in the control activate button and rotate the up/down switch in the direction of intended travel.
- ⦿ Result: The up/down functions should operate.
- 9 Remove a frame retaining pin from one corner of the Super-Straddle. The corresponding interlock display light should be off.
- 10 Push in the control activate button and rotate the up/down switch in the direction of intended travel.
- ⦿ Result: The up function should not operate.
- 11 Insert the frame retaining pin.
- 12 Repeat this procedure for each frame retaining pin

Test Outrigger Interlock

- 13 Pull out the red Emergency Stop button at the platform controls.
- 14 Push in the control activate button and rotate the up/down switch in the direction of intended travel.
- ⦿ Result: The up/down functions should operate.
- 15 Unscrew one leveling jack until the corresponding interlock display light turns off.
- 16 Push in the control activate button and rotate the up/down switch in the direction of intended travel.
- ⦿ Result: The up/down function should not operate.
- 17 Return the leveling jack to the previous setting and check the bubble level.
- 18 Repeat this procedure for each outrigger.

Inspections



Do Not Operate Unless:

- ☒ You learn and practice the principles of safe machine operation contained in this operator's manual.

- 1 Avoid hazardous situations.
- 2 Always perform a pre-operation inspection.
- 3 Always perform function tests prior to use.
- 4 **Inspect the workplace.**

Know and understand the workplace inspection before going on to the next section.

- 5 Only use the machine as it was intended.

Workplace Inspection Checklist

Be aware of and avoid the following hazardous situations:

- ☐ drop-offs or holes
- ☐ bumps, floor obstructions or debris
- ☐ improper use on sloped surfaces
- ☐ unstable or slippery surfaces
- ☐ overhead obstructions and high voltage conductors
- ☐ hazardous locations
- ☐ inadequate surface support to withstand all load forces imposed by the machine
- ☐ wind and weather conditions
- ☐ the presence of unauthorized personnel
- ☐ other possible unsafe conditions

Workplace Inspection Fundamentals

The workplace inspection helps the operator determine if the workplace is suitable for safe machine operation. It should be performed by the operator prior to moving the machine to the workplace.

It is the operator's responsibility to read and remember the workplace hazards, then watch for and avoid them while moving, setting up, and operating the machine.

Inspections

Inspection for Decals with Words


Determine whether the decals on your machine have words or symbols. Use the appropriate inspection to verify that all decals are legible and in place.

Part No.	Decal Description	Qty
23725	Danger – Failure to Read,1.5X5	1
28421	Notice – Winch Lubrication	2
28423	Danger – Install Pins	4
28430	Danger – Install O.R. Base	4
28431	Danger – Install O.R. Ladder	1
28432	Notice – Footprint	2
38149	Label – Patents	1
133287	Danger – General Safety Rules	2
133290	Tip-over Hazard, Limit Switch	4
133292	Label – Ladder Storage	1
133395	Label – Crush Hazard, Moving Parts	4
133405	Label – Base Frame	1
133406	Label – Telescoping Base Frame	1
133407	Label – Straddle Socket Plug	4
133412	Label – Retaining Pin Release	4
133420	Label – Outrigger Load	4
1272242	Label – Machine Registration/Owner Transfer	1
1294685	Instructions – Annual Inspection	1



Shading indicates decal is hidden from view, i.e. under covers

Inspections

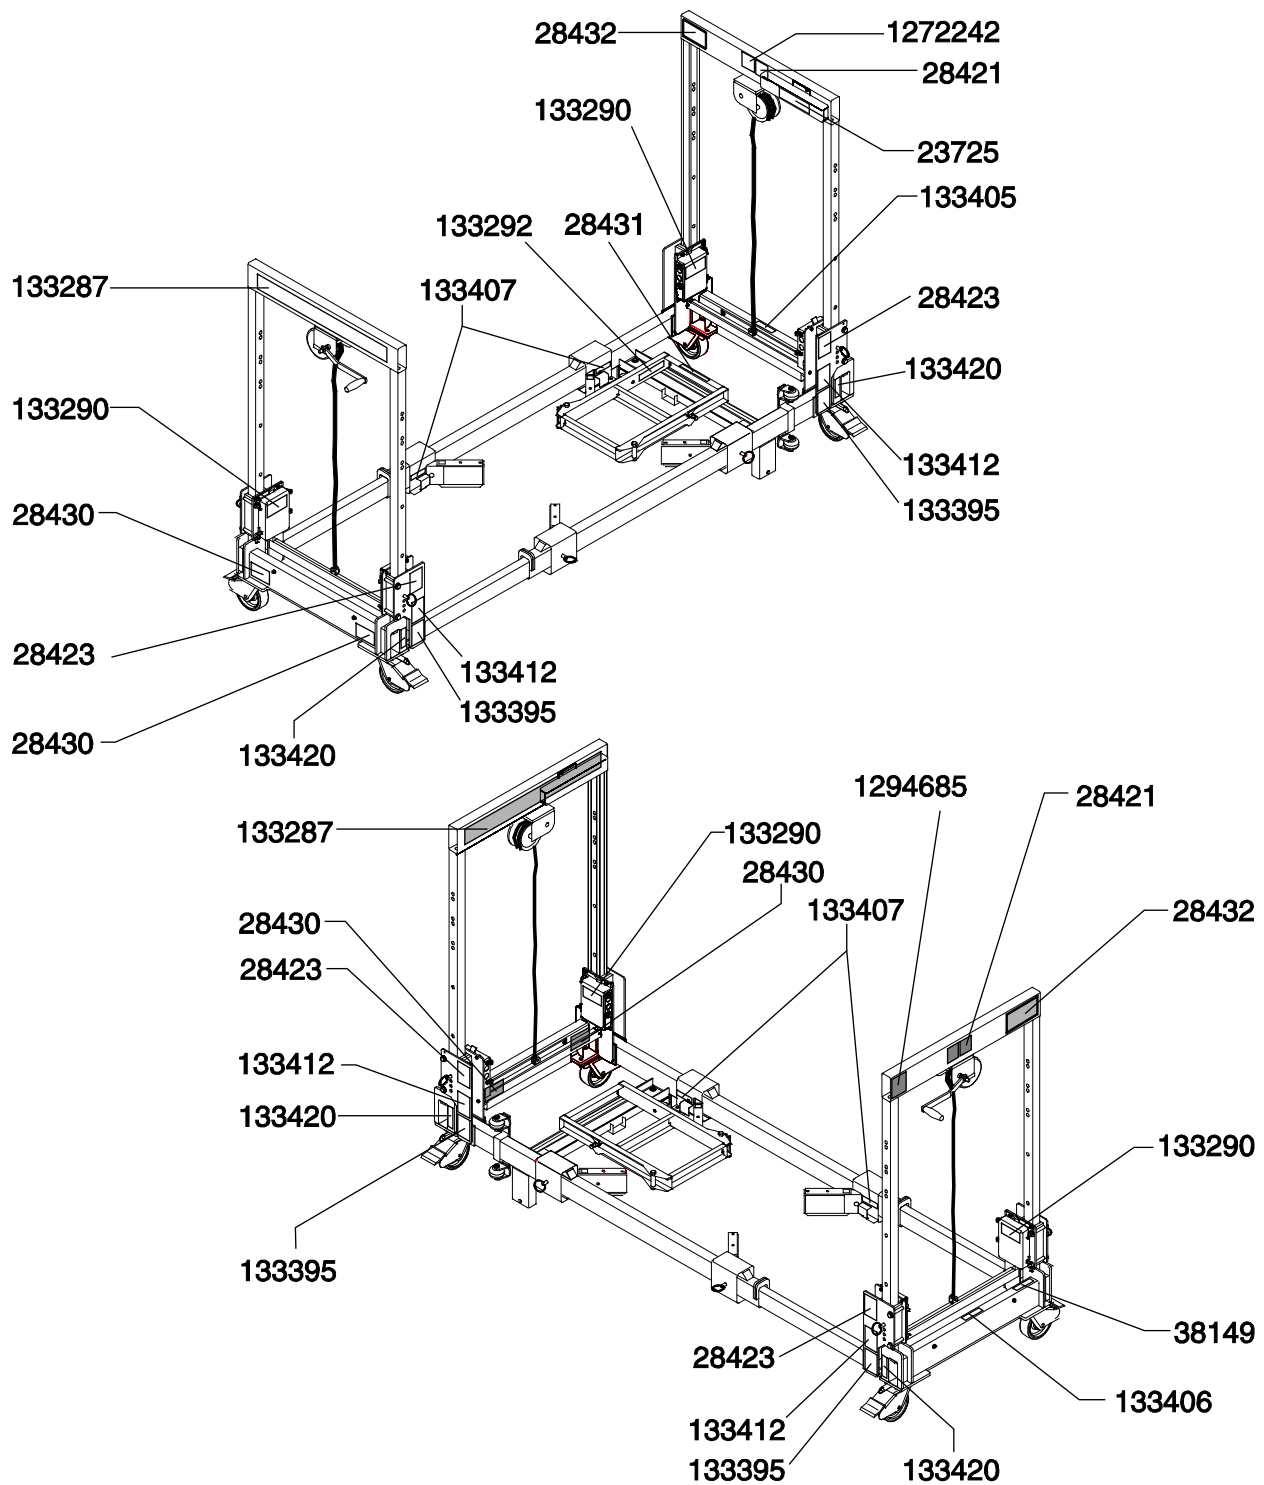

Operating Instructions



Do Not Operate Unless:

- ☑ You learn and practice the principles of safe machine operation contained in this operator's manual.
- 1 Avoid hazardous situations.
- 2 Always perform a pre-operation inspection.
- 3 Always perform function tests prior to use.
- 4 Inspect the workplace.
- 5 **Only use the machine as it was intended.**


Fundamentals

The Operating Instructions section provides instructions for each aspect of machine operation. It is the operator's responsibility to follow all the safety rules and instructions in the operator's, safety, and responsibilities manuals.

Using the machine for anything other than lifting personnel, along with their tools and materials, to an aerial work site is unsafe and dangerous.

Only trained and authorized personnel should be permitted to operate a machine. If more than one operator is expected to use a machine at different times in the same work shift, they must all be qualified operators and are all expected to follow all safety rules and instructions in the operator's, safety, and responsibilities manuals. That means every new operator should perform a pre-operation inspection, function tests, and a workplace inspection before using the machine.

Use only Genie AWP with an X outrigger pattern.

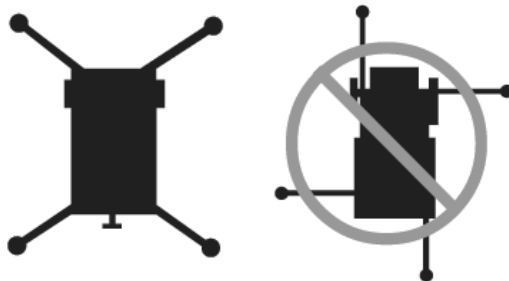

Operating Instructions

Machine Setup

See Setup section in the Function Tests section.


Positioning, Raising and Leveling the Super-Straddle

- 1 Be sure the Genie AWP is fully lowered.
- 2 Raise the straddle platform just enough to lift the Genie AWP casters off the ground by turning each winch handle in a clockwise rotation. If the frame retaining pins are inserted, remove all four frame retaining pins before cranking.
- 3 If the outriggers are not installed, install all four Genie AWP outriggers.
- 4 Push the Super-Straddle into position next to the object to be straddled. Two people are required to position the Super-Straddle if the ground surface is sloped.
- 5 Lock the swivel casters closest to the object to be straddled in the desired direction of travel. To lock the swivel caster, pull out on the ring, turn the ring 90 degrees and let go.




- 6 Adjust the outrigger screw jacks so the pads are close to, but do not touch, the ground surface.

- 7 Using the winches, raise the straddle platform to a level height just above the object to be straddled.

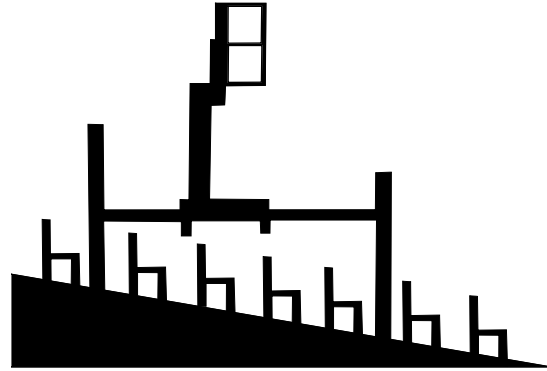

 - 8 Install frame retaining pins at each corner of the Super-Straddle and release the tension on the winch cable. To insert frame retaining pins, align the holes and lift up on the gray tab on the pin retaining interlock box.




Note: Be sure to use the same hole position for both pins on one end frame.

- 9 If the cables are not connected, connect the electrical cables to the AWP sockets.
- 10 Carefully push the Super-Straddle over the object to be straddled and apply all four swivel caster brakes. If the ground surface is sloped, set and lock the swivel casters at a right angle to the slope. Two people are required to position the Super-Straddle if the ground surface is sloped.

Operating Instructions

- 11 Adjust the outrigger screw jacks so that the pads are in firm contact with the ground and the Super-Straddle casters are slightly off the ground. Use the bubble level on the Genie AWP to level the straddle platform. The bubble level is on the base of the AWP, below the interlock display.

- 12 Place the ladder on the Super-Straddle directly below the basket entry. Pull the snap pins on each side of the ladder to lower the bottom step.

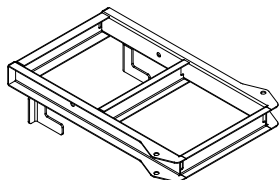


- 13 Operate the Genie AWP.

Lowering the Straddle Platform

- 1 Fully lower the Genie AWP.
- 2 Slightly raise the outriggers.
- 3 Carefully push the Super-Straddle away from the straddle object. Return the machine to a firm level surface.
- 4 Remove the frame retaining pins from each corner of the Super-Straddle. The holes must be aligned to remove the pins. Use the winch to align the holes if needed.
- 5 Turn the winch handle to lower the straddle platform. It may be necessary to lower one end frame part way and then lower the other end.
- 6 Continue turning the winch handles until both end frames are lowered.

Ladder Storage

Store the ladder on the base frame cross membrane.

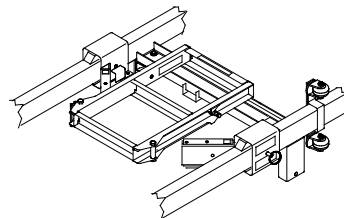

To protect the safety and operating instruction decals from scuffs and scratches, do not store ladder over either end frame.

After Each Use

Select a safe storage location - firm level surface, weather protected, clear of obstruction and traffic.

Coil cord can be hooked to the end frame for storage.

Maintenance



Observe and Obey:

- ☒ Only routine maintenance items specified in this manual shall be performed by the operator.
- ☒ Scheduled maintenance inspections shall be completed by qualified service technicians, according to the manufacturer's specifications and the requirements specified in the responsibilities manual.

For detailed maintenance and repair procedures, refer to the appropriate Service Manual for your machine.

Specifications

Operating Dimensions

Length	110 in	2.8 m
Width	37 in	94 cm
Height	70 in	1.8 m
Adjustable length	110 to 128 in	2.8 to 3.25 m
Straddle clearance height, maximum	48 in	1.2 m

Stowed Dimensions

Length	80 in	2.0 m
Width	37 in	94 cm
Height	24 in	61 cm
Lifting system	Dual winch	
Caster diameter (four 4-position swivel locks with brake)	6 in	15.2 cm
Adjustable outriggers (required from Genie AWP)	4	
Load capacity of Super-Straddle is the same as the load capacity of the Genie AWP being used.		
Weight	580 lbs	263 kg

Outrigger floor loading Information

SS + AWP-20S	525 lbs	239 kg
SS + AWP-25S	507 lbs	230 kg
SS + AWP-30S	554 lbs	252 kg
SS + AWP-36S	601 lbs	273 kg
SS + AWP-40S	602 lbs	274 kg

Note: Floor loading information is approximate and does not incorporate different option configurations. It should be used only with adequate safety factors.

Ambient operating temperature	-20° to 135° F -29° to 57° C
-------------------------------	---------------------------------

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

Distributed By: