

inReach® devices can be paired with the Earthmate app on a compatible\* Android device to create, send and receive messages, navigate, and more from your mobile device, even when you're beyond range of cellphone coverage.

## ⚠ WARNING


Messaging, tracking, and SOS functions require an active satellite subscription. Always test your device before you use it outdoors.

## NOTICE

Some jurisdictions regulate or prohibit the use of satellite communications devices. It is the responsibility of the user to know and follow all applicable laws in the jurisdictions where the device is intended to be used.

## Downloading Earthmate

Download the free app from Google Play™, and read and accept the terms. Once the app is installed, you can pair directly with your assigned inReach device, or log in with your Garmin Explore™ website credentials (if applicable).

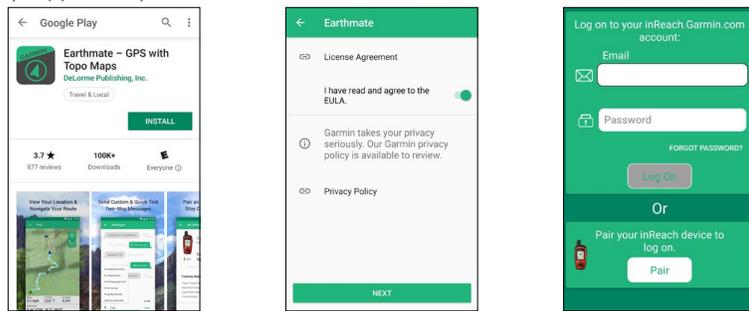

## Pairing an inReach to a Mobile Device or Tablet

inReach devices pair with Earthmate using Bluetooth® technology to send and receive messages from your mobile phone or tablet. Note: inReach devices can maintain one Bluetooth connection at a time.

### Earthmate Compatibility

Android 4.1 or higher.

Go to [garmin.com/earthmatefaq](http://garmin.com/earthmatefaq) for details.

### inReach SE®/SE+ inReach Explorer®/Explorer+

1. On the inReach device, select **Settings > Bluetooth > Pair inReach**.
2. Open the Earthmate app on your device with Android and log in if necessary.
3. Select **⋮**.
4. Select **Pair > Connect**.
5. Select your inReach device.

### inReach Mini

1. From the home screen, press **OK** to open the main menu.
2. Select **Setup > Bluetooth > Pair Device**.
3. Open the Earthmate app on your device with Android and log in if necessary.
4. Select **⋮**.
5. Select **Pair > Connect**.
6. Select your inReach device.

### inReach for Smartphones


1. Open the Earthmate app.
2. Select **⋮**.
3. Select **My inReach**.
4. With the inReach device turned off, hold the power button until the power LED flashes two times per second.
5. Select **⋮**.
6. Select **Pair > Tap Here**.
7. Follow the on-screen instructions.
8. Select your inReach device.

## Main Menu

Select **☰** in the upper-left corner of the app to open the menu. The icon will remain visible on all app screens.


The menu displays the account name; links to the app options including Messages, Weather, and SOS; and navigation tools such as Maps, Tracking, Routes, and Waypoints.

Close the menu by swiping left, or by tapping off the menu.

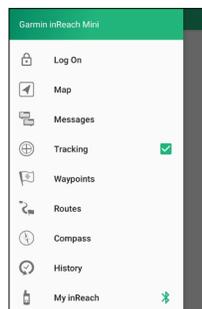

## Sending Messages through Earthmate


1. From the menu, select **Messages**, and select **✉**.
2. Enter the recipient's contact info or search your phone's contacts.
3. Type the message or select **⚡** for Quick Texts.

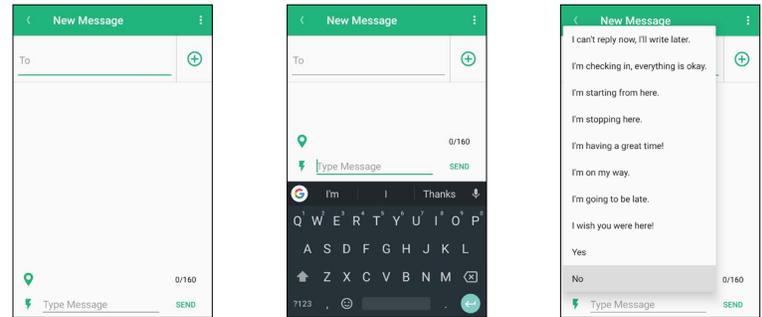

## Maps

From the menu, select **Map**.


- Select **☰** to view map layers.
- Select **📍** to mark waypoints and get maps.
- Select **📍** and **📍** to navigate to a location or waypoint.
- Drag **📏** to view additional trip info.

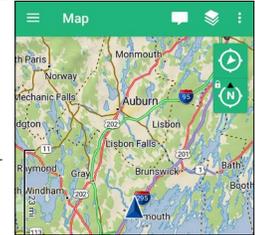

## Tracking

From the menu, select **Tracking**.

- Select **Start** to start tracking.
- Select **📍** to send your location to a contact.
- Select **●●●** to clear the track log.

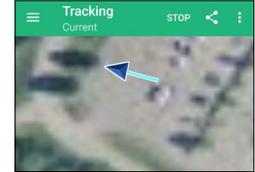

## Weather Forecasts


From the menu, select **Weather**.

### My Location

1. Select **🌐**.
2. Select **My Location**.
3. Select **📍**.
4. Select **Get Forecast**.

### Selected Location

1. Select **🌐**.
2. Select **+**.
3. Select **Select from Map**.
4. Select the location on the map, and select **📍**.
5. Select **📍**.
6. Select **Get Forecast**.

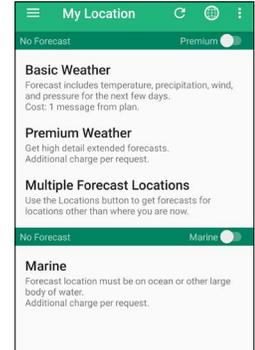


## SOS

During an emergency, you can contact the Garmin International Emergency Response Coordination Center (IERCC) to request help. You should only use the SOS function in a real emergency situation.

1. From the menu, select **SOS**.
2. Slide the SOS button to the right.
3. Send a text message to initiate a rescue.
4. Communicate with the Garmin IERCC by text.


If help is no longer needed, you can cancel an SOS from the app or by holding the SOS button on the inReach device.

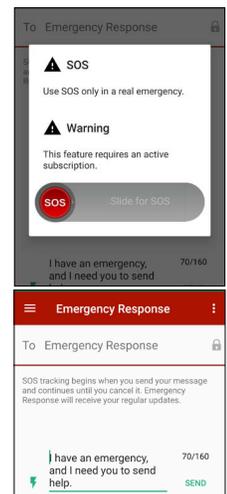

inReach devices can be paired with the Earthmate app on a compatible\* Apple device to create, send and receive messages, navigate, and more from your mobile device, even when you're beyond range of cellphone coverage.

## Downloading Earthmate

Download the free app from the App Store<sup>SM</sup>, and read and accept the terms. Once the app is installed, you can pair directly with your assigned inReach device, or log in with your Garmin Explore website credentials (if applicable).

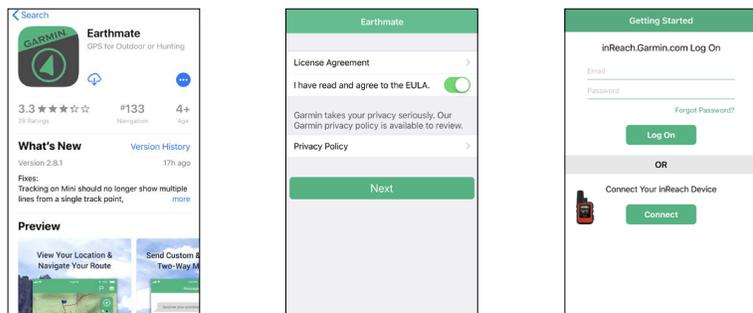

## Pairing an inReach to a Mobile Device or Tablet

inReach devices pair with Earthmate using Bluetooth technology to send and receive messages from your mobile phone or tablet. Note: inReach devices can maintain one Bluetooth connection at a time.

### Earthmate Compatibility

iOS® 9.2 or higher.

Go to [garmin.com/earthmatefaq](http://garmin.com/earthmatefaq) for details.

### inReach SE/SE+ inReach Explorer/Explorer+

1. On the inReach device, select **Settings > Bluetooth > Pair inReach**.
2. On the Apple device, open the Settings app.
3. Select **Bluetooth**.
4. Select your inReach device.
5. Open the Earthmate app.

### inReach Mini

1. From the home screen, press **OK** to open the main menu.
2. Select **Setup > Bluetooth > Pair Device**.
3. Open the Earthmate app on your Apple device and log in if necessary.
4. Select **More**.
5. Select **Options > Pair Device > Connect**.
6. Select your inReach device.


### inReach for Smartphones

1. On the Apple device, open the Settings app.
2. Select **Bluetooth**.
3. With the inReach device turned off, hold the power button until the power LED flashes two times per second.
4. From the list of Bluetooth devices, select your inReach device.
5. Open the Earthmate app.

## App Menus

The iOS version of the app has two menu areas:

- A primary menu with links to messaging, tracking, and navigation tools. This menu appears at the bottom of the screen throughout the app.
- A secondary menu with links to weather, SOS, and more. You can select **More** to open this menu. You can select **Edit** to customize menu options.


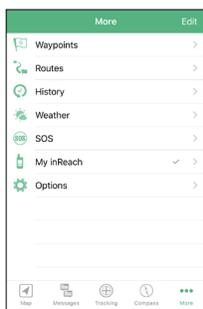


Garmin®, the Garmin logo, Earthmate®, inReach®, inReach Explorer®, and inReach SE® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Explore™ and MapShare™ are trademarks of Garmin Ltd. or its subsidiaries. Powered by Garmin IERCC. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google Inc. Apple® is a trademark of Apple Inc., registered in the U.S. and other countries. App Store<sup>SM</sup> is a service mark of Apple Inc. iOS® is a registered trademark of Cisco Systems, Inc. used under license by Apple Inc. The BLUETOOTH® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Google Play™ is a trademark of Google Inc. Other trademarks and trade names are those of their respective owners.

## Sending Messages through Earthmate


1. From the menu, select **Messages**, and select
2. Enter the recipient's contact info or search your phone's contacts.
3. Type the message or select for Quick Texts.

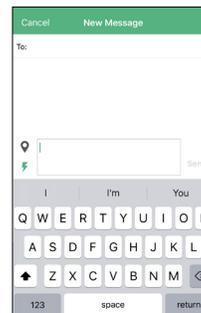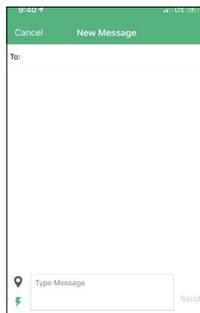

## Maps

From the menu, select **Map**.


- Select to view map layers.
- Select to mark waypoints and get maps.
- Select and to navigate to a location or waypoint.
- Drag to view additional trip info.

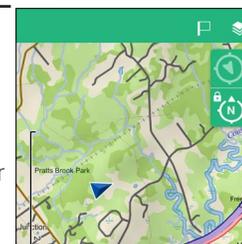

## Tracking

From the menu, select **Tracking**.

- Select **Start** to start tracking.
- Select to send your location to a contact.
- Select to clear the track log.

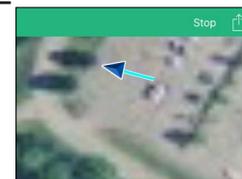

## Weather Forecasts

From the menu, select **Weather**.

### My Location

1. Select .
2. Select **My Location**.
3. Select .
4. Select **Get Forecast**.

### Selected Location

1. Select .
2. Select .
3. Select **Select from Map**.
4. Select the location on the map, and select .
5. Select .
6. Select **Get Forecast**.



## SOS

During an emergency, you can contact the Garmin International Emergency Response Coordination Center (IERCC) to request help.

You should only use the SOS function in a real emergency situation.

1. From the menu, select **SOS**.
2. Slide the SOS button to the right.
3. Send a text message to initiate a rescue.
4. Communicate with the Garmin IERCC by text.

If help is no longer needed, you can cancel an SOS from the app or by holding the SOS button on the inReach device.

