



User Manual

Auto_Configure Server

HyberTone Technology Co.,Ltd.

[Http://www.hybertone.com](http://www.hybertone.com)

Marketing@hybertone.com


Support@hybertone.com

2011-4-11

I Introduction

Auto_Provision server is HyberTone develop for supported HyberTone's VoIP devices. Via this server, the administrator can maintenance all HyberTone terminal devices anywhere. New Auto_Provision server has more new features:

1. New Auto_Provision's maintenance page approximate HyberTone device's maintenance page.
2. New Auto_Provision server embedded Remote Control server, the administrator can direct login to anyone connecting in this server's HyberTone devices anytime without the client side make NAT forward.
3. Auto_Provision server base at WEB, the administrator can maintenance this server and the HyberTone devices anywhere.

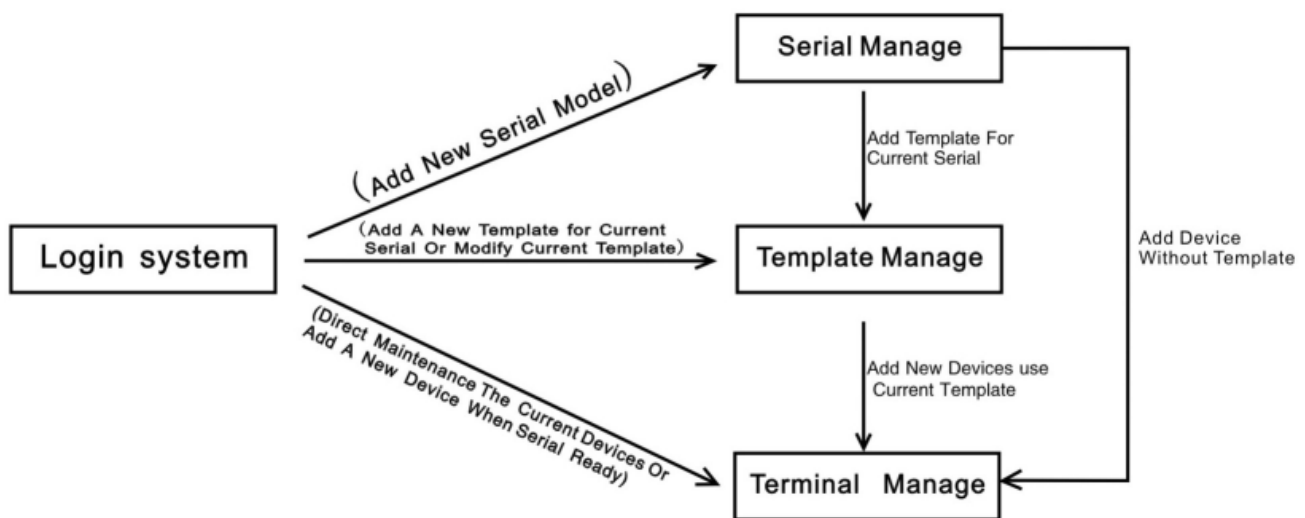

I Server Requirement

Auto_Provision base on LAMP (Linux Apache; MySQL; PHP), it is WEB software and it can work in Linux platform or Windows platform. We will show the install method as Linux, about Windows's install course will be ignore. Before install, you must confirm the follow module is installed in you server:

1. **Apache 2** or later; In Redhat Linux, apache changed name as **httpd**;
2. **PHP** supported;
3. **PHP_MySQL** supported;
4. **MySQL 4** or later;

Note: Auto_Provision's character as UTF-8(Chinese version) or en (for English version), if the maintenance page can't show the word when you login this system, just change the apache's default font to UTF-8 or en.

The above module inside at some Linux's installation disk, please direct choice it when you install a new server.

The above module can work in windows too. It has Windows version.

I Auto_Provision Software Installation

1. Login to your server's apache installed folder, enter the follow command download the Auto_provision software from our server:

wget http://www.hybervoice.com/update/autocfg_en-v2.tgz

Note: If you use Redhat Linux platform, the apache's install folder is: /var/www/html;

2. decompression the **autocfg_en-v2.tgz** file as follow command:

tar -xzvf autocfg_en-v2.tgz

the folder will make a new folder as: **autocfg_en**

3. Login to this new folder, enter follow command to install all database:

mysql < autocfg_en.sql

I Maintenance Auto_Provision Server

Auto-Provision server is WEB; you can maintenance it via **IE Explorer**, enter the follow URL as your IE Explorer's address field and press enter key:

http://Your Server IP/autocfg_en

You can see the page as:



User Name:

Password:


Login Reset

Default user name is: **admin**

Password is: **admin**

The user name and password can change after you login this system;

After the above stop, you can see the page as follow, now you can use it.

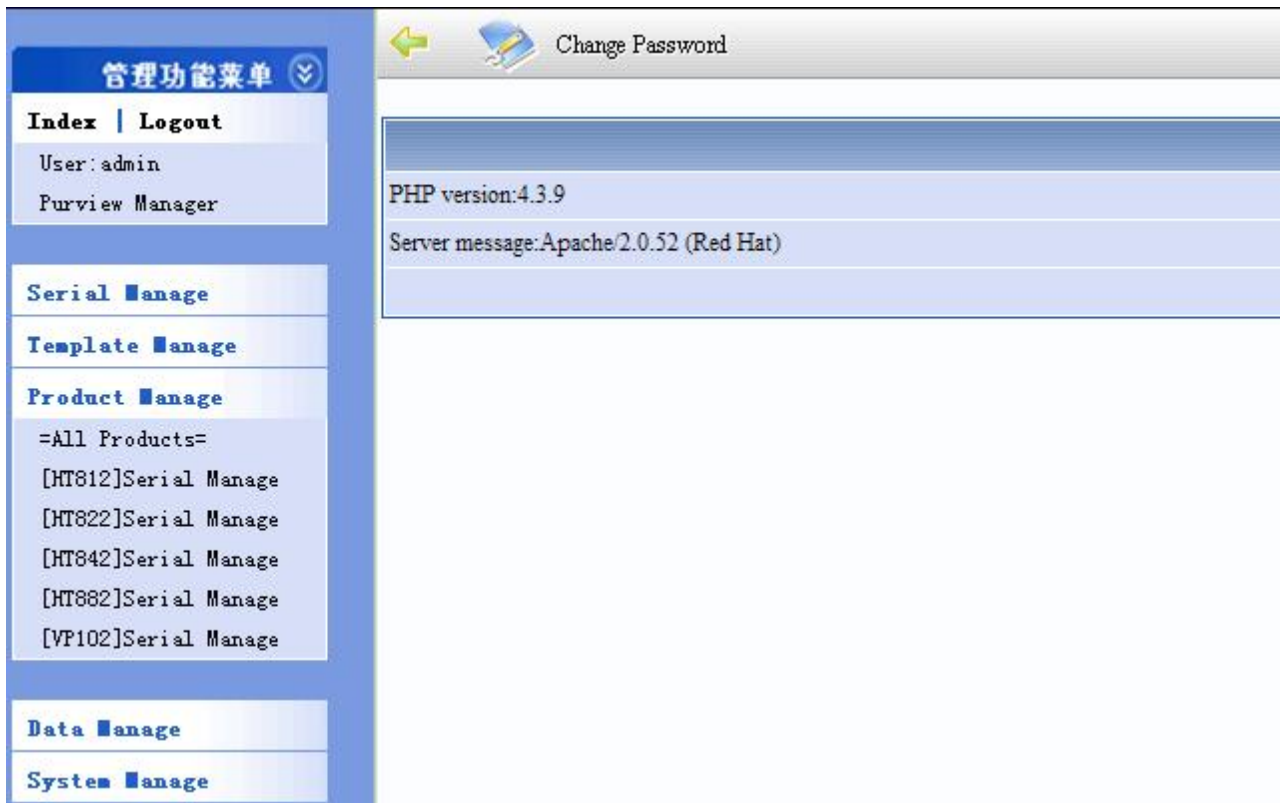

1. Serial Manage:

Serial Manage is use to add one new serial HyberTone VoIP devices, the Auto_Provision embedded some prevalent serial, if it not include your devices; please add one new serial at first.



Serial Add:

Add new devices the server not included;

Serial Manage	
Navigation Manage:	Serial Manage Serial Add
Serial Add	
Serial Name:	
Serial Sort:	6 [Only digit]
Config File:	浏览... Upload
Add Cancel	

Serial Config file is a special file. If default install didn't have serial that you need, please

Connect us to add new serial devices when you need it.

2. Template Manage

Open out the Template Manage, and click the Template Add.



Open the Template Add, you can see the Template setting as like as the Terminal Use Template Manage. You can set the Terminal common setting beforehand, Like the

SIP Proxy, Relay Server, Provision Server and Remote Server settings etc.

Serial Name	HT812	Template Name	HT812
Template Sort Number	2		

Call Settings

Endpoint Type	SIP Phone	Advanced Settings<<	
Single Server Mode		Signaling Port	5060
Phone Number		NAT Keep-alive	☒ Enable ☐ Disable
Phone Number 2		P2P	☐ Enable ☒ Disable
Display Name		Virtual Ringback	☐ Enable ☒ Disable
SIP Proxy	192.168.1.1	Advanced Timing>>	
SIP Registrar Server		DTMF Signaling	Outband
Register Expiry(s)	60	Outband DTMF type	RFC 2833
Outbound Proxy		RTP Payload Type	101
Home Domain		Signaling QoS	None
Authentication ID		Signaling Encryption	None
Password		Signaling NAT Traversal	None
Dial Plan		Media Settings<<	
Call Forward Type	Not Forward	RTP Port Range	16384 - 32768
Call Forward Number		PacketLength(ms)	20
Backup Server	☐ Enable ☒ Disable	Jitter Buffer	Fixed
Auto-provision	☒ Enable ☐ Disable	Delay(ms)	60
Provision Server	http://192.168.2.2/autocfg_	Media QoS	None
Provision Interval		Media Encryption	None

Select a Serial that you want to add in the Server Name, Fill the Template Name to this Template.

Note: the Provision Server address format is:

http://your_server_ip/autocfg_en/index/down.php?file=

Auto Provision Server only supports to configure the Call Setting by default option. If you want configure some special setting. As you want to change the Terminal's Web password. Please fill in the other settings like this.(Match Case)

Other Settings (Format: option=value)

ADMIN_PASSWORD=admin123

If you want need more special configuration, Please contact us to gain it.

Select and fill the common setting that your need. Click the Add button, Template add Complete.

Every serial has a template setting by default; you can modify the default template or delete it.

Navigation Manage:				
Template Manage Template Add				
Serial Sort Number	Serial Name	Template Sort Number	Template Name	Operate
2	HT812	1	HT812	Modify Delete
3	HT822	1	HT822	Modify Delete
4	HT842	1	HT842	Modify Delete
5	HT882	1	HT882	Modify Delete
6	VP102	1	VP102	Modify Delete

3. Product Manage

Open out the **Product Manage**; click the Terminal Serial to add the Terminal.



For example, i add the HT812 Serial Terminal.

Template Name	HT812	Serial Name	HT812
Serial Number(SN)	HT812P090201602	User	DBL

Call Settings

Endpoint Type	SIP Phone	Advanced Settings<<
Single Server Mode		Signaling Port
Phone Number	101	5060
Phone Number 2		NAT Keep-alive
Display Name		☒ Enable ☐ Disable
SIP Proxy	192.168.2.1	P2P
		☐ Enable ☒ Disable
		Virtual Ringback
		☐ Enable ☒ Disable
		Advanced Timing>>

Serial Number (SN) is the Terminal's only identification. Used to identify the one and only setting for the Terminal. You can find the Terminal SN in the Status Web Page or find it in the terminal label.

Note. If you fill the wrong SN, the terminal will not get the auto provision.

User is used to remember customer how use the Terminal. And other settings is as like as the terminal settings.

Click the add button, Product add complete.

Terminal Batch add allow you to add more sequence terminal at a time.

Current position:HT812Model-->Terminal Batch Add

Template Name	HT812	Serial Name	HT812
SN(Input the start and end SN)	HT001	10	USER
			DBL

Call Settings

Endpoint Type	SIP Phone	Advanced Settings<<
Single Server Mode		Signaling Port
Phone Number	101	5060
Phone Number 2		NAT Keep-alive
Display Name		☒ Enable ☐ Disable
SIP Proxy		P2P
		☐ Enable ☒ Disable
		Virtual Ringback
		☐ Enable ☒ Disable
		Advanced Timing>>

For example, you want to add the SN **HT001** to SN **HT010**, 10 sequence terminal. You can fill SN number as HT010 – 10, that can add 10 sequence terminal.

Product Manage you can modify and delete the terminal what you are already add.

Current Position:HT812Serial Manage												
Choice	SN	USER	CLASS	ENDPOINT	CONFIG_MODE	SIP_SERVER	SIP_ID	H323_GK	H323_ID	RELAY_SERVER	UPDATE_TIME	OPERATION
☐	HT001	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT002	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT003	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT004	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT005	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT006	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT007	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT008	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT009	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete
☐	HT010	DBL	HT812	SIP	SINGLE_MODE	192.168.2.1					2009-03-18 16:58:47	Modify Delete

☐ Choice current page

Terminal Search And Batch Modify, you can search the terminal with some condition like SN, SIP Server and Relay Server etc. And modify the terminal that you searched.

Search Field			
Serial Name: HT8122			
SN:		Search	USER:
SIP Server:		Search	SIP ID:
H323 GK:		Search	H323 ID:
Number		Search	Relay Server:

Chose the search result terminals, you can modify some common settings for the terminals.

Batch Modify Setting			
☐ Products Conversion			
SIP Server:	192.168.2.1	SIP Proxy:	
AUTO_CONFIG Server:		Remote Control Server:	
Dial Plan:			
Modification of the selected products			

4. Data Manage

Data Manage, allow you backup and restore your auto provision date in your server.

Data Manage
Data Backup
Data Import

1. **Data Backup**, you can select **Backup all data** to backup all auto provision data, or choose **Leaflets Sheet Data Backup** to backup one serial terminal data. **Choice of target locations** can choose the backup date where to save. Backup to server or backup to your local PC.

Data Backup	
Backup mode	
☒ Backup all data	Backup all data to a backup data sheet paper
☐ Leaflets Sheet Data Backup	Please choose v
Backup selected data to a separate data sheet paper backup	
Separating the use of backup	
☐ Volume backup	K
Choice of target locations	
☒ Backup to serve	☐ Backup local
Backup	

2. **Data Import**, Import the provision data that you have backup from you auto provision server or you local PC.

Data Recovery	
Backup mode	
☒ Resumption of documents from the server	-Please choose- ▼
☐ Resume from the local paper	浏览...
Recovery	

5. System Manage.

Change web administrator password and configure Remote Control web port.

System Manage
User Manage
Remote-Server parameters
This Manage

User Manage. You can change the Auto Provision administrator password.

User's Password Modify	
User Name:	admin
New Password:	
Validate:	
Modify Cancel	

Remote Control Parameter. If you install Remote Control Server, you can fill the Remote Control Server web port. With this web port that Auto Provision can remote access the terminal web page and that needn't to login Remote Control Server.

Remote server's parameters	
Web Port:	8086
Save Cancel	

Back to the **Product Manage**, select a terminal that you have already added. Click Modify. You will see the **Remote to http settings**, click it can remote access to the terminal. (Need your terminal have already connect to your Remote Control Server)

Current position: {}Model-->Terminal Modify		Remote to http settings	
Updatetime	2009-03-18 16:58:47	Serial Name	HT812
Serial Number(SN)	HT001	User	DBL
Call Settings			
Endpoint Type	SIP Phone ▼	Advanced Settings<<	
Single Server Mode		Signaling Port	5060

Remote access to the terminal's web page, make sure you have configure the Remote Control settings.

	RemoteControl<<
Remote Server	192.168.2.2
Remote Server Port	1920
Remote Server ID	{SN}
Remote Server Key	

Remote Server: Fill the Remote Control Server IP address you have input.

Remote Server Port: Fill the Remote Control access port.

Note. This port is terminal connect to Remote Control Server's port, not the Remote Control web port.

Remote Server ID: Auto Provision use the terminal **SN** connects to the Remote Terminal. Please keep the value \${SN}. \${SN} equal the terminal's SN.

Remote Server Key: If the Remote Server set the Remote Server key. Terminal need set the same that terminal can connect to Remote Server.

And more detail about Remote Control Server, please see the Remote Control Server document.

Auto Provision setting complete.

I Terminal Setting:

Finish the Auto Provision setting; now configure your terminal to fetch the configurations from Auto Provision Server.

Open your browser and login the terminal web **configure page**. Enable your terminal Auto provision and configure the Provision Server.

Auto-provision	☒ Enable ☐ Disable
Provision Server	http://192.168.2.2/autocfg
Provision Interval	

Provision Server: Fill the Auto provision URL.

Note: The Provision Server URL format is:

http://Provision_Server_IP/autocfg_en/index/down.php?file=

Use your Provision Server IP instead of **Provision_Server_IP**. If you fill the wrong URL format. Terminal can't get the Provision configure.

Provision Interval: Units is second. If you want to auto provision per out, fill 3600. Or Keep it empty that auto provision when the terminal at the boot time.

Save the terminal configuration, and reboot it. Terminal will fetch the provision configuration at the boot time.