

Operating manual

Measuring amplifier for
instrument panel mounting

MVD2555



Contents	Page
Safety instructions	5
1 Introduction	8
1.1 Scope of supply	8
1.2 General	8
1.3 Block diagram	9
2 Mounting	9
2.1 Pre-installation notes, factory settings	9
2.2 Changing the factory settings	10
2.2.1 Setting the analogue output signal	10
2.2.2 Choosing the operating mode for synchronization ...	10
2.2.3 Replacing the fuses	10
2.3 Installing the amplifier in a panel-frame	11
3 Connections	12
3.1 Connecting the voltage supply	12
3.2 Connecting transducers	13
3.3 Analogue output	15
3.4 Control inputs / outputs	15
3.5 Synchronization	16
3.6 Setting the reading angle of the display	17
3.7 Connecting the serial interface	17
4 Setting up and operation	18
4.1 Commissioning and factory settings	18
4.2 Control concept and functional overview	25
4.3 Button functions in measuring mode	26
4.3.1 Querying and setting limit values in measuring mode	27
4.4 Button functions in programming mode	28
4.4.1 Changing from "Measuring" operating mode to "Programming"	29
4.4.2 Programming	30
4.4.3 Switching from "Programming" mode to "Measuring" .	31
4.5 Overview of all groups and parameters	32
4.5.1 Setting all parameters	33
4.5.2 Dialogue	36
4.5.3 Load/Save in parameter set (PARAM. SET)	37

4.5.4	Adaptation	37
4.5.5	Calibration (CALIBR.)	40
4.5.6	Limit switches 1 ... 4 (LIMITVAL.1 ... 4)	41
4.5.7	Set peak value store (PV STORE)	43
4.5.8	Inputs and outputs (IN/OUT)	45
4.5.9	Additional functions (ADD. FUNCT)	47
5	Example	50
6	Error messages	59
7	Specifications	60
8	Keyword index	65

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*