

# Operating manual

***Digibar<sup>®</sup> II***

**PE300**

| <b>Contents</b>                                                  | <b>Page</b> |
|------------------------------------------------------------------|-------------|
| <b>Safety instructions</b> .....                                 | <b>4</b>    |
| <b>2 Fitting</b> .....                                           | <b>8</b>    |
| <b>3 Connections</b> .....                                       | <b>12</b>   |
| 3.1 Operation with lithium battery (3.6V) .....                  | 12          |
| 3.2 Operation with two miniature cells .....                     | 14          |
| 3.3 Operation with external supply voltage .....                 | 15          |
| 3.4 Operation with relay board .....                             | 18          |
| 3.5 Relay contacts circuit logic .....                           | 18          |
| <b>4 Commissioning</b> .....                                     | <b>19</b>   |
| <b>5 Multi-function display</b> .....                            | <b>20</b>   |
| 5.1 Trend indicator .....                                        | 20          |
| 5.2 Digital measured value display .....                         | 20          |
| 5.3 Bar graph .....                                              | 21          |
| 5.4 Menu block .....                                             | 21          |
| 5.5 Text box (units/function field) .....                        | 21          |
| 5.6 Symbol bar .....                                             | 22          |
| 5.6.1 Battery symbol .....                                       | 22          |
| 5.6.2 Input lock .....                                           | 22          |
| 5.6.3 Limit value/hysteresis warning .....                       | 22          |
| 5.6.4 Analogue output warning .....                              | 22          |
| 5.6.5 MIN/MAX .....                                              | 22          |
| <b>6 Button functions</b> .....                                  | <b>23</b>   |
| 6.1 Operating .....                                              | 24          |
| 6.2 Overview of operating functions .....                        | 25          |
| 6.3 Functions .....                                              | 25          |
| 6.3.1 OPERATION group .....                                      | 25          |
| 6.3.2 CONFIG group .....                                         | 26          |
| 6.3.3 SERVICE group .....                                        | 29          |
| 6.3.4 SPECIAL group .....                                        | 30          |
| 6.4 Typical settings .....                                       | 35          |
| <b>7 Overview of operating functions</b> .....                   | <b>40</b>   |
| <b>8 Technical Data</b> .....                                    | <b>42</b>   |
| <b>9 Dimensions</b> .....                                        | <b>45</b>   |
| <b>10 Adjustment ranges and factory settings for PE300</b> ..... | <b>46</b>   |
| <b>11 Options for PE300</b> .....                                | <b>50</b>   |
| <b>12 Copy of Declaration of Conformity</b> .....                | <b>52</b>   |
| <b>13 Keyword index</b> .....                                    | <b>54</b>   |

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*