



IQ SENSOR NET System 2020 3G

CONTROLLER MIQ/MC3 AND TERMINAL/CONTROLLER MIQ/TC 2020 3G

1	Overview	9
1.1	How to use this system operating manual	9
1.2	The IQ SENSOR NET system 2020 3G	10
1.2.1	Structure of the system	10
1.2.2	Functions in the IQ SENSOR NET	13
1.2.3	Possible ways to communicate with the IQ SENSOR NET	14
1.2.4	Components of the system 2020 3G	15
1.2.5	MIQ modules	19
1.3	Controller MIQ/MC3	21
1.4	MIQ/TC 2020 3G terminal/controller	22
1.4.1	MIQ/TC 2020 3G as controller plus terminal	23
1.4.2	MIQ/TC 2020 3G just as a terminal	24
1.4.3	Backup controller of the MIQ/TC 2020 3G	24
1.4.4	Status LED	25
1.5	Interfaces of the IQ SENSOR NET	25
1.5.1	USB-A interface	25
1.5.2	Ethernet interface	26
1.6	Behavior of the IQ SENSOR NET in case of faults	26
1.6.1	Behavior of the IQ SENSOR NET in case of power failure	26
1.6.2	Behavior of the IQ SENSOR NET if a components fails	27
1.6.3	Availability of the system	28
1.6.4	Compatibility of the controllers of the System 2020 3G (MIQ/MC3, MIQ/TC 2020 3G) with components of an existing IQ SENSOR NET system	28
2	Safety	30
2.1	Safety information	30
2.1.1	Safety information in the operating manual	30
2.1.2	Safety signs on the product	30
2.1.3	Further documents providing safety information	30
2.2	Safe operation	31
2.2.1	Authorized use	31
2.2.2	Requirements for safe operation	31
2.2.3	Unauthorized use	31
2.3	User qualification	31
3	Installation	32
3.1	Scope of delivery	32
3.2	Basic principles of installation	33
3.2.1	System planning	33
3.2.2	Requirements of the measurement location	34
3.3	Safety requirements of the electrical installation	34
3.4	Installation guidelines for lightning protection	35
3.5	Drawing up the power rating	37
3.5.1	Effect of the cable length	40
3.5.2	Optimum installation of MIQ power supply modules	43
3.6	Connecting system components	44
3.6.1	General information	44

3.6.2	Stacked mounting of MIQ modules:	45
3.6.3	Distributed mounting of MIQ modules	54
3.6.4	Connecting IQ sensors	57
3.6.5	Installing terminal components	60
3.7	Installation of the MIQ modules at the installation location	62
3.7.1	General information	62
3.7.2	Mounting on a mounting stand with the SSH/IQ sun shield	63
3.7.3	Mounting under the SD/K 170 sun shield	65
3.7.4	Panel mounting	66
3.7.5	Top hat rail mounting	68
3.8	Electrical connections: General instructions	69
3.9	Connecting the voltage supply	71
3.10	Commissioning	71
3.10.1	Topology and terminator switch	71
3.10.2	Start checklist and system start	73
3.10.3	Checking the voltage supply	76
3.11	System extension and modification	77
4	Operation	80
4.1	Terminal	80
4.1.1	Overview of the operating elements	81
4.1.2	Display	82
4.1.3	Keys	84
4.2	General operating principles	84
4.2.1	Navigating in menus, lists and tables	85
4.2.2	Entering texts or numerals	86
4.3	Access to the IQ SENSOR NET with active access control	88
4.4	Display of current measured values	89
4.4.1	Displaying a single measured value	90
4.4.2	Displaying four measured values	90
4.4.3	Displaying eight measured values	91
4.4.4	Displaying recorded measured values	91
4.4.5	Transmitting recorded measurement data to a PC	93
4.4.6	Display of the measured values of a measurement location or of all IQ sensors in the system	93
4.5	Messages and log book	94
4.5.1	Message types	94
4.5.2	Log book	94
4.5.3	Viewing detailed message texts	97
4.5.4	<i>Acknowledge all messages</i>	98
4.6	Calibration data	98
4.6.1	Calibration entries in the log book	99
4.6.2	Calibration history	99
4.7	Status info of sensors and outputs	100
4.8	General course when calibrating, cleaning, servicing or repairing an IQ sensor	101
4.8.1	Maintenance condition of IQ sensors	102
4.8.2	Switching on the maintenance condition	103
4.8.3	Switching off the maintenance condition	103

4.9	USB interface	104
4.9.1	Saving IQ SENSOR NET data to a USB memory device	104
4.9.2	Saving the system configuration manually	106
4.9.3	Restore system configuration	107
4.10	Info on software versions	107
4.11	Software-Update for IQ SENSOR NET	108
4.12	The MIQ/TC 2020 3G in its function as terminal and backup controller	109
5	Settings/setup	113
5.1	Selecting the language	113
5.2	Terminal settings	113
5.3	Access control	115
5.3.1	Activating the simple access control (<i>Unlock/lock settings</i>)	115
5.3.2	Activating the extended access control	118
5.3.3	Activating the instrument block for a terminal	121
5.3.4	Electronic key	122
5.3.5	Access to the IQ SENSOR NET with active access control	123
5.4	Editing the list of sensors	123
5.4.1	Entering / editing a name for an IQ sensor	123
5.4.2	Changing the display position	124
5.4.3	Erasing inactive sensor datasets	125
5.5	Setting up sensors/differential sensors	126
5.5.1	Creating a differential sensor	126
5.5.2	Erasing a differential sensor	127
5.6	Settings for sensors/differential sensors	129
5.7	<i>Sensor-sensor link</i> (automatic offset of an influencing quantity)	130
5.7.1	Establishing the sensor-sensor link	130
5.7.2	Erasing a <i>Sensor-sensor link</i>	133
5.8	Editing the list of outputs	134
5.8.1	Entering / editing the name of an output	134
5.8.2	Erasing an inactive dataset for an MIQ output module	135
5.8.3	Output links/settings	136
5.9	Settings for a measurement location	136
5.10	Alarm settings	138
5.10.1	General information	138
5.10.2	Setting up / editing alarms	138
5.10.3	Alarm output to display	141
5.10.4	Alarm output as relay action	141
5.10.5	Alarm message as an email	141
5.11	System settings	142
5.11.1	Setting the date and time	142
5.11.2	Location altitude / average air pressure	143
5.11.3	<i>TCP/IP settings</i>	144
5.11.4	<i>E-mail</i>	146
5.11.5	<i>Settings bus interfaces</i>	147
5.11.6	<i>Function code</i>	148

5.12	<i>Measured value logging</i>	148
5.12.1	Setting the recording interval (<i>dt</i>) and recording duration (<i>Dur.</i>)	149
6	Ethernet connection	151
6.1	Configuring the Ethernet network	151
6.1.1	Communication in a local network (LAN)	153
6.1.2	Communication on the Internet	154
6.2	Ethernet connection with installation outdoors (MIQ/MC3)	156
6.3	Establishing the connection with the IQ SENSOR NET via a network	158
6.3.1	Opening the IQ WEB CONNECT	158
6.3.2	IQ WEB CONNECT Terminal	159
6.3.3	IQ WEB CONNECT DatalogTransfer	160
6.3.4	IQ WEB CONNECT ConfigSaveLoad	162
6.4	Communication with fieldbuses (MIQ/MC3[-XX])	162
6.5	Troubleshooting	163
6.6	Technical network terms	166
7	Outputs	168
7.1	Outputs of the System 2020 3G	168
7.1.1	Settings for outputs	168
7.1.2	Functions the outputs	168
7.2	Basic information on relay functions	169
7.2.1	Monitoring	169
7.2.2	Limit indicator	169
7.2.3	Proportional output	171
7.3	Entering / editing the name of an output	178
7.4	Linking the output with a sensor	179
7.5	Deleting a link with an output	180
7.6	Setting the relay outputs (MIQ/CR3, MIQ/R6)	181
7.6.1	Relay action	182
7.6.2	<i>System monitoring</i>	183
7.6.3	<i>Sensor monitoring</i>	184
7.6.4	<i>Limit indicator</i>	184
7.6.5	<i>Frequency controller</i>	185
7.6.6	<i>Pulse-width output</i>	187
7.6.7	<i>Cleaning</i>	187
7.6.8	<i>Sensor-controlled</i>	191
7.6.9	<i>Manual control</i>	192
7.6.10	<i>Alarm contact</i>	192
7.7	Setting the current outputs (MIQ/CR3, MIQ/C6)	192
7.7.1	<i>Recorder</i>	193
7.7.2	<i>PID controller</i>	195
7.7.3	<i>Fixed current value</i>	199
7.8	Setting the valve output (MIQ/CHV Plus)	200
7.9	Checking the condition of the outputs	201
7.10	Behavior of linked outputs	202
7.10.1	Behavior in case of error	202

7.10.2	Behavior in non-operative condition	203
7.11	Maintenance condition of the sensors	203
7.11.1	Switching on the maintenance condition	204
7.11.2	Switching off the maintenance condition	204
8	Maintenance and cleaning	205
8.1	Maintenance	205
8.2	Cleaning	205
9	What to do if ...	206
9.1	Information on errors	206
9.2	Diagnosing faults in the voltage supply	206
9.2.1	Options for checking the voltage	206
9.2.2	Measuring the voltage	206
9.2.3	Tips for clearing errors in the voltage supply	209
9.3	Other errors	210
9.4	Replacing system components	212
9.4.1	Replacing passive components	212
9.4.2	Adding and replacing IQ sensors	212
9.4.3	Adding and replacing MIQ output modules	215
10	Technical data	218
10.1	General system data	218
10.2	General data of MIQ modules	221
10.3	MIQ/MC3	223
10.4	Terminal/Controller MIQ/TC 2020 3G	225
10.5	Space required by mounted components	227
11	Accessories and options	228
12	Messages	229
12.1	Explanation of the message codes	229
12.1.1	Error messages	229
12.1.2	Informative messages	230
13	Index	231
14	Appendix	233
14.1	Forgotten the password? (store separately if required)	233
14.2	Default password	234

1 Overview

1.1 How to use this system operating manual

Structure of the IQ SENSOR NET operating manual

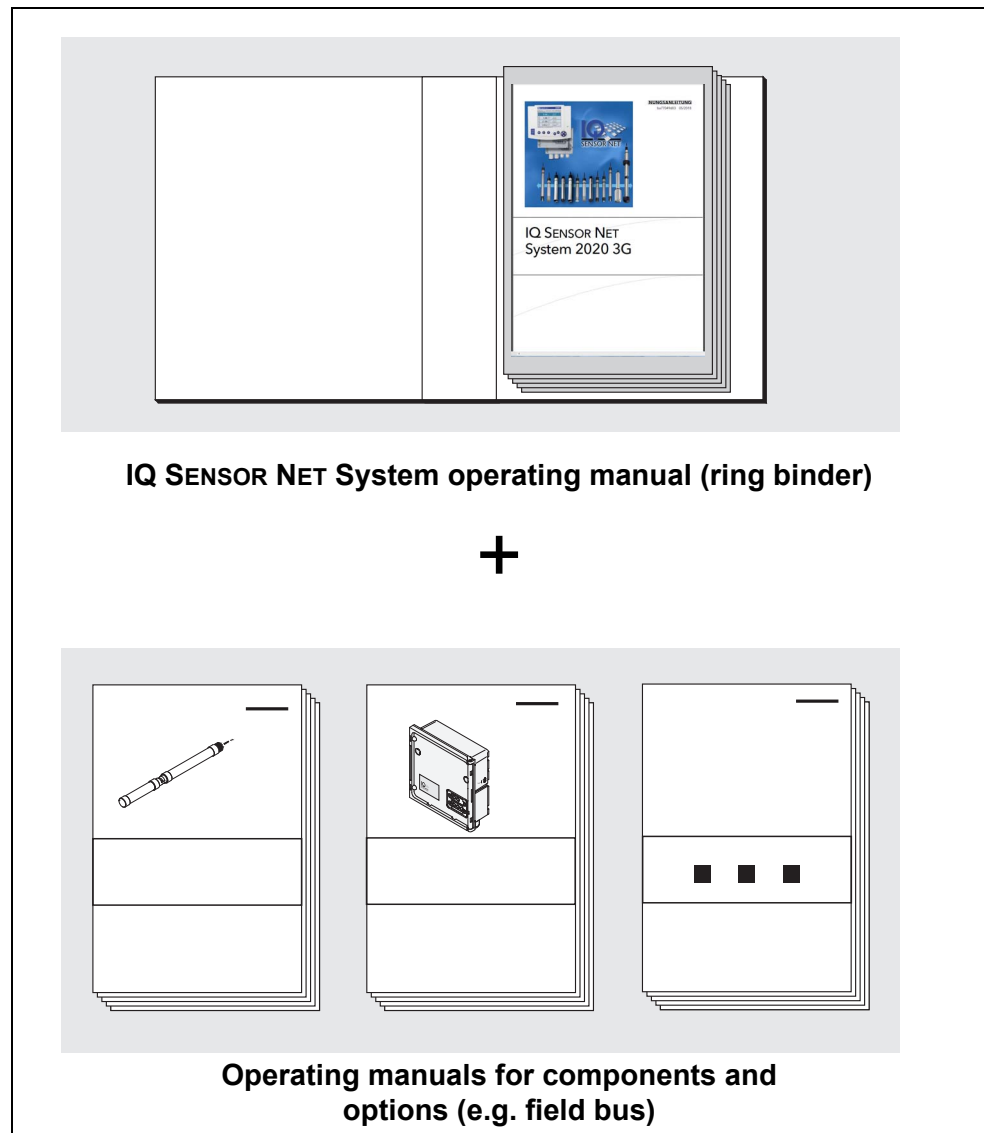


figure 1-1 Structure of the IQ SENSOR NET System 2020 3G operating manual

The IQ SENSOR NET operating manual has a modular structure like the IQ SENSOR NET system itself. It consists of this system operating manual and the operating manuals of all the components used.

The space in the ring binder behind the system operating manual is intended for filing the component operating manuals. Please file all component operating manuals here so that all information is quickly available in one location.

1.2 The IQ SENSOR NET system 2020 3G

1.2.1 Structure of the system

The IQ SENSOR NET is a modular measuring system for online analysis. Modular means that the essential functional units of the measuring system are distributed in components that can be individually compiled for special applications.

The essential functional units of the IQ SENSOR NET System 2020 3G include:

- Controller
- Terminal
- IQ sensors
- Inputs (current inputs)
- Outputs (relay contacts, current outputs, valve outputs)
- Additional terminals (mobile terminal, IQ WEB CONNECT)
- Help functions (e.g. power supply unit).

System communication

The functional units are connected with one another via a common line (figure 1-2). The line consists of two wires and a shield. It transports digital information between the controller and the other modules. At the same time, the line is used to supply all modules with electrical voltage from a power supply unit. The power supply unit is only required for power supply and is not used in the system communication.

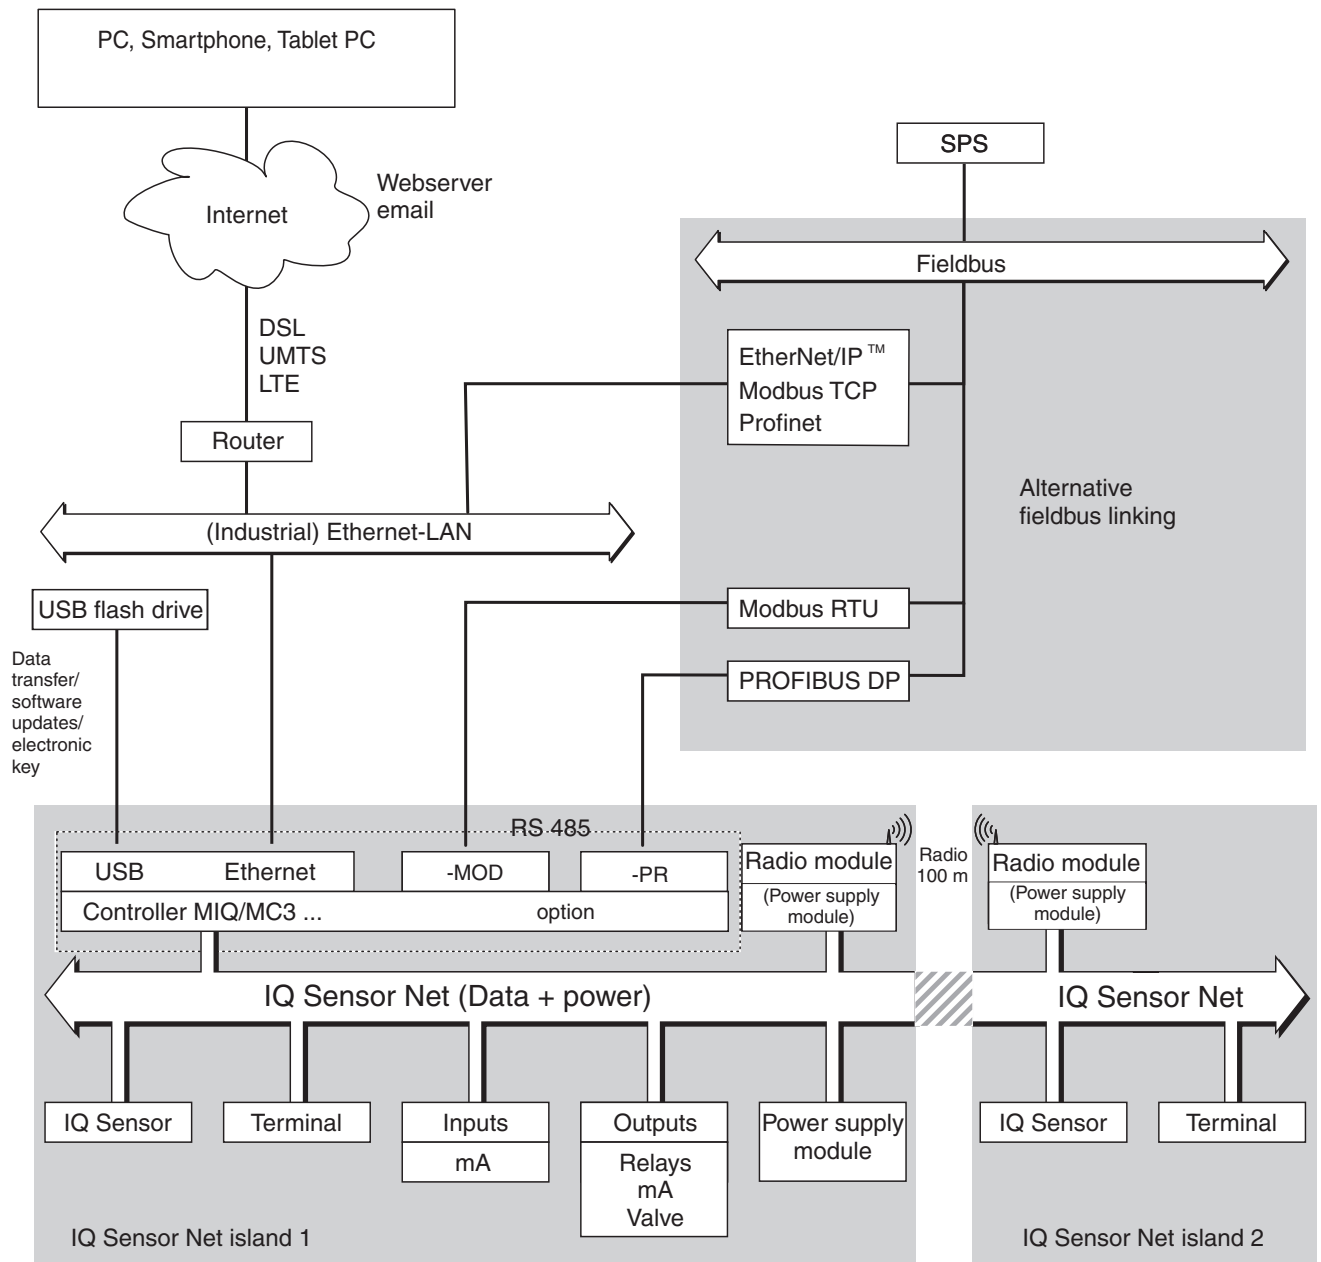


figure 1-2 Functional units of the IQ SENSOR NET with MIQ/MC3

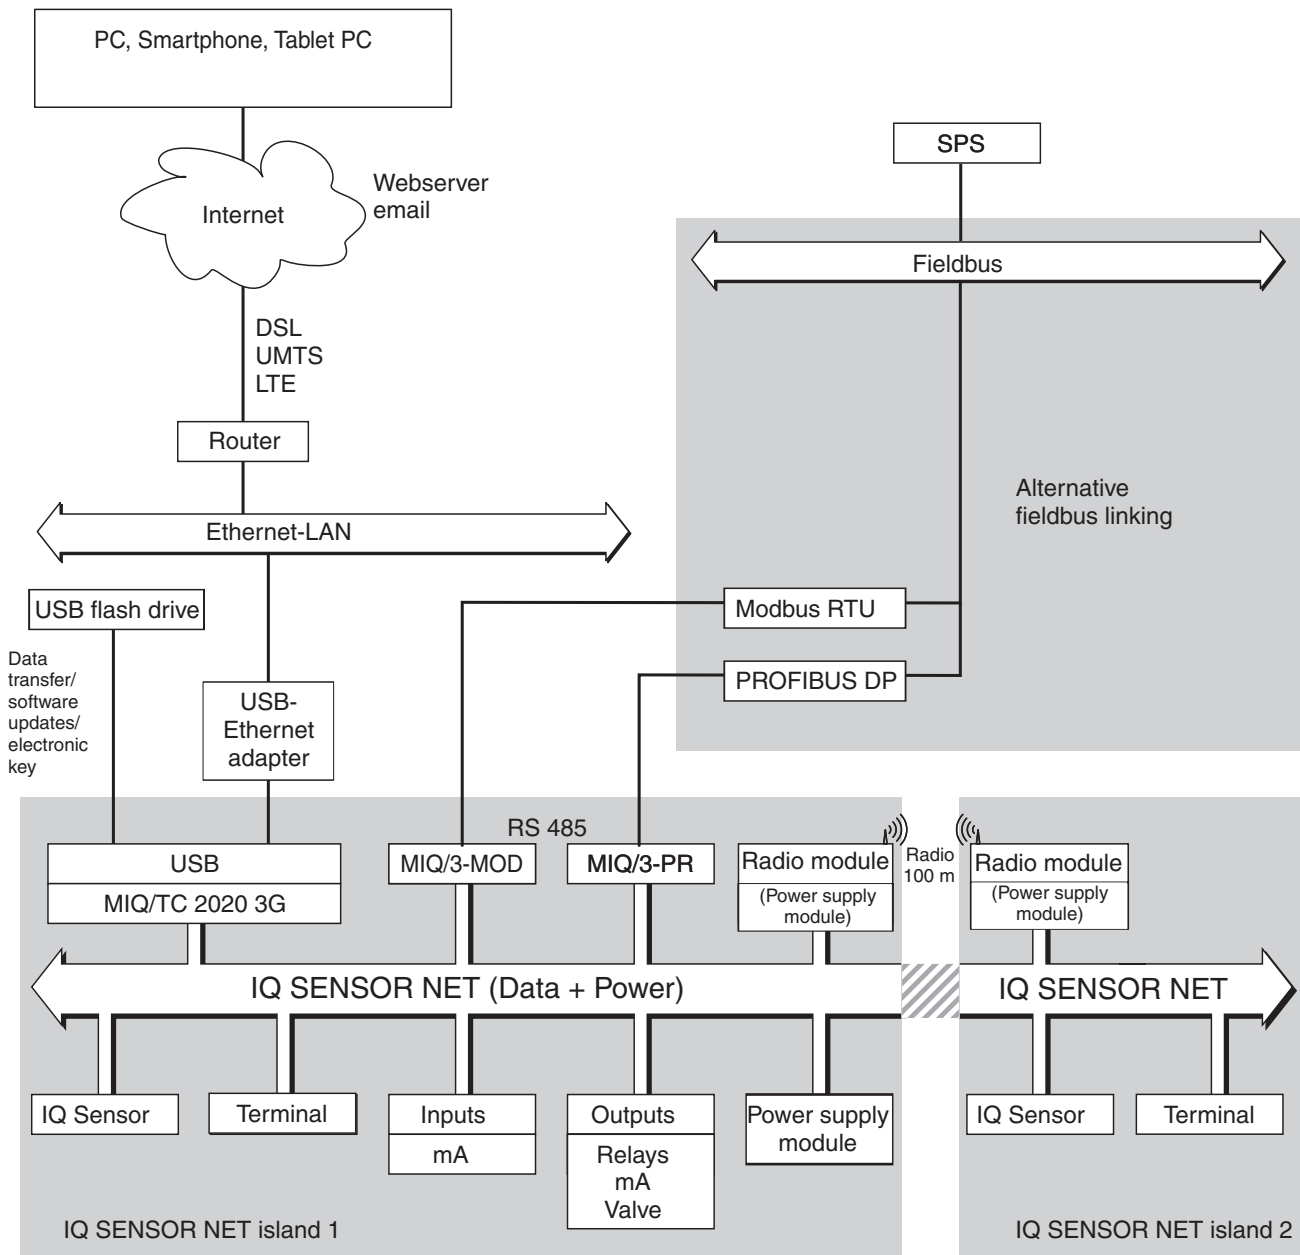


figure 1-3 Functional units of the IQ SENSOR NET with MIQ/TC 2020 3G



If the Ethernet connection is established with the aid of an USB Ethernet adapter, (see section 6), please note that the Ethernet connection may be restricted.

If the Ethernet connection is established via the Ethernet interface of the controller MIQ/MC3, its functionality is unrestricted.

1.2.2 Functions in the IQ SENSOR NET

The functions of the IQ SENSOR NET are provided by the system (controller) and the retrofitting components. Details on the functions listed can be found in the relevant system or components operating manuals.

Function	Operating manual
Alarm messages	System
Analog output	System
Data logging	System
Data recording (PC)	System
Data transmission (PC)	System
Data communication (Profibus DP)	Fieldbus linking
Data communication (Modbus RTU)	Fieldbus linking
Data communication Ethernet	Fieldbus linking
Data communication Ethernet fieldbuses (e.g. Profinet, Modbus TCP, Ethernet/IP)	Fieldbus linking
Data logger	System
Web server	System
Email server	System
Frequency output	System
Transmission path	MIQ/WL PS
Limit monitor	System
Calibration history	System
List of outputs, list of sensors	System
Log book	System
Log book (messages from components)	IQ sensor Output module
Measured value representation (4 types)	System
Password	System
PID controller	System
Pulse-width output	System
Sensor cleaning	System
Local settings	System

Function	Operating manual
Daily load diagram, weekly load diagram, monthly load diagram	System
Monitoring functions (sensors, system)	System Fieldbus interface

1.2.3 Possible ways to communicate with the IQ SENSOR NET

Digital communication The IQ SENSOR NET can communicate with humans and machines via different interfaces.

The following page provides an overview:

- who can communicate with the IQ SENSOR NET
- what interfaces and components are required for this
- which functions are available with which interface

Current and relay interfaces In addition to the digital communication, output modules provide relay and current outputs. These can be used for control, feedback control and monitoring functions.

Available functions Communication path	Direct actions via the terminal user interface	Viewing/transmitting current data: – Measured values – Status info – Alarm messages	Viewing/transmitting logged data: – Measured values – Measured value status	System configuration, – backup / load – view – print	Viewing/transmitting calibration data
Direct operation					
Terminal/controller MIQ/TC 2020 3G	X	X	X	X	X
Fieldbuses					
For details, see the "IQ SENSOR NET fieldbus linking" operating manual		X			
Ethernet-LAN, Internet					
MIQ/MC3(-...) + Router + LAN/Internet +IQ WEB CONNECT	X	X (via web server and Email service of the MIQ/MC3)	X	X	X

Available functions Communication path	Direct actions via the terminal user interface	Viewing/transmitting current data: – Measured values – Status info – Alarm messages	Viewing/transmitting logged data: – Measured values – Measured value status	System configuration, – backup / load – view – print	Viewing/transmitting calibration data
MIQ/TC 2020 3G + USB Ethernet adapter + Router + LAN/Internet +IQ WEB CONNECT	X	X (via web server and Email service of the MIQ/TC 2020 3G)	X	X	X

1.2.4 Components of the system 2020 3G

Minimum configuration (basic components)

The following basic components are required for a System 2020 3G:

- A controller, e.g.
 - MIQ/MC3
- A terminal, to be able to view measurement data and to configure the IQ SENSOR NET system, e.g.
 - Terminal/controller MIQ/TC 2020 3G (configured as terminal)
 - IQ WEB CONNECT, connected to a PC via the Ethernet interface.
- A power supply module (e.g. MIQ/PS)
- At least one IQ sensor.

IQ sensors, main and secondary measured values

Sensors provide main measured values (e.g. pH, D. O. concentration, turbidity value...) and additionally, depending on the type, secondary measured values (e.g. temperature). In the system 2020 3G, digital WTW single sensors and multiple sensors can be used:

- Single sensors provide a main measured value and normally a secondary measured value (example: TriOxmatic 700 IQ → D. O. + temperature).
- All active 0/4-20 mA inputs of the MIQ/IC2 input module rank among the single sensors. Via a 0/4-20 mA input, any external instruments can be connected to the IQ SENSOR NET via their current output. Each input provides a main measured value.
- Multiple sensors provide several main measured values and normally one secondary measured value (example: VARiON 700 IQ → ammonium + nitrate + temperature).

Each main measured value occupies a sensor location in the IQ SENSOR NET. A multiple sensor with two active main measured values thus occupies two sensor locations. The available sensor locations can be occupied by any single or multiple sensors.

Extension components

The system can be adapted to fulfill different specifications by adding further components, e.g.:

- Terminals. They are the operation and communication units for the IQ SENSOR NET. Options available:
 - Mobile terminal/controller MIQ/TC 2020 3G (configured as terminal) for operation of the system from varying locations, for example for calibration of IQ sensors on site.
 - IQ WEB CONNECT. Connection to the PC via the Ethernet interface.
- Output modules with relay, current and valve outputs. Valve outputs enable the time controlled, compressed air operated cleaning of the sensor.

Each current output, relay output and valve output occupies an output channel in the IQ SENSOR NET. The available output channels can be assigned to outputs arbitrarily.

- Power supply modules for power supply
- MIQ/JB and MIQ/JBR branching modules to branch the system and to connect IQ sensors and terminals
- MIQ/WL PS radio modules for wireless connection within the IQ SENSOR NET.

Maximum configuration

Maximum equipment of the IQ SENSOR NET system 2020 3G:

Component or resource	Maximum number
Controller MIQ/MC3(-...)	1
Sensor locations, can be occupied by: <ul style="list-style-type: none"> – Single sensors – Multiple sensors – 0/4-20 mA inputs 	20
Terminal locations, can be occupied by: <ul style="list-style-type: none"> – MIQ/TC 2020 3G 	3
IQ WEB CONNECT Terminal	2 (MIQ/MC3) 1 (MIQ/TC 2020 3G)


Component or resource	Maximum number
Output channels, can be occupied by: <ul style="list-style-type: none"> – Current outputs – Relay outputs – Valve outputs 	8
Power supply modules (e.g. MIQ/PS)	6
MIQ/JB branching modules	25
Signal amplifier modules MIQ/JBR ("repeaters")	2
Radio modules MIQ/WL PS	Radio modules MIQ/WL PS
Fieldbus interfaces	1

Connecting MIQ modules

There are two basic mounting variants for connecting the MIQ modules:

- **Stack mounting** - permanent mechanical and electrical connection.
The housings of the MIQ modules are permanently mounted on one another to form a stack. No cabling is necessary.
- **Distributed mounting** - electrical connection via cable.
Locally separated MIQ modules or module stacks are connected with one another via the SNCIQ or SNCIQ/UG cable.


The following diagram shows an IQ SENSOR NET system with two mounting variants (figure 1-4).

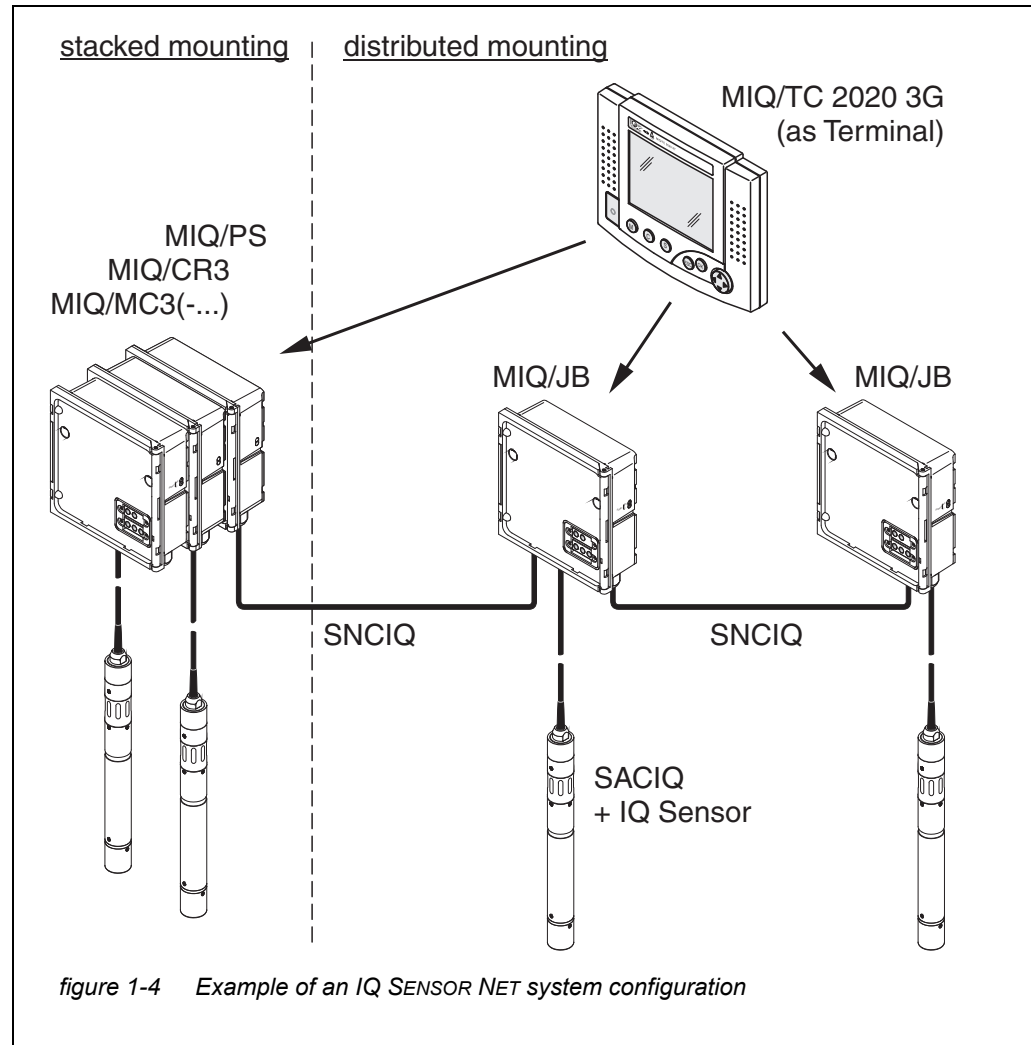

IQ sensors Up to 20 IQ sensors of any type can be used in the 2020 3G system. They can be connected to any MIQ module that has a free connection for the IQ SENSOR NET. The connection between the IQ sensor and MIQ module is made via the SACIQ sensor connection cable. The IQ sensor connection cable is connected with the plug head connector of the IQ sensor via a screwable socket to form a watertight connection. As a result, the IQ sensor can be quickly removed for maintenance activities and then connected again.

1.2.5 MIQ modules

Depending on their type, the MIQ modules have specific features (e.g. controller, relays, digital interfaces). All MIQ modules have a standard housing with the following features (figure 1-5):

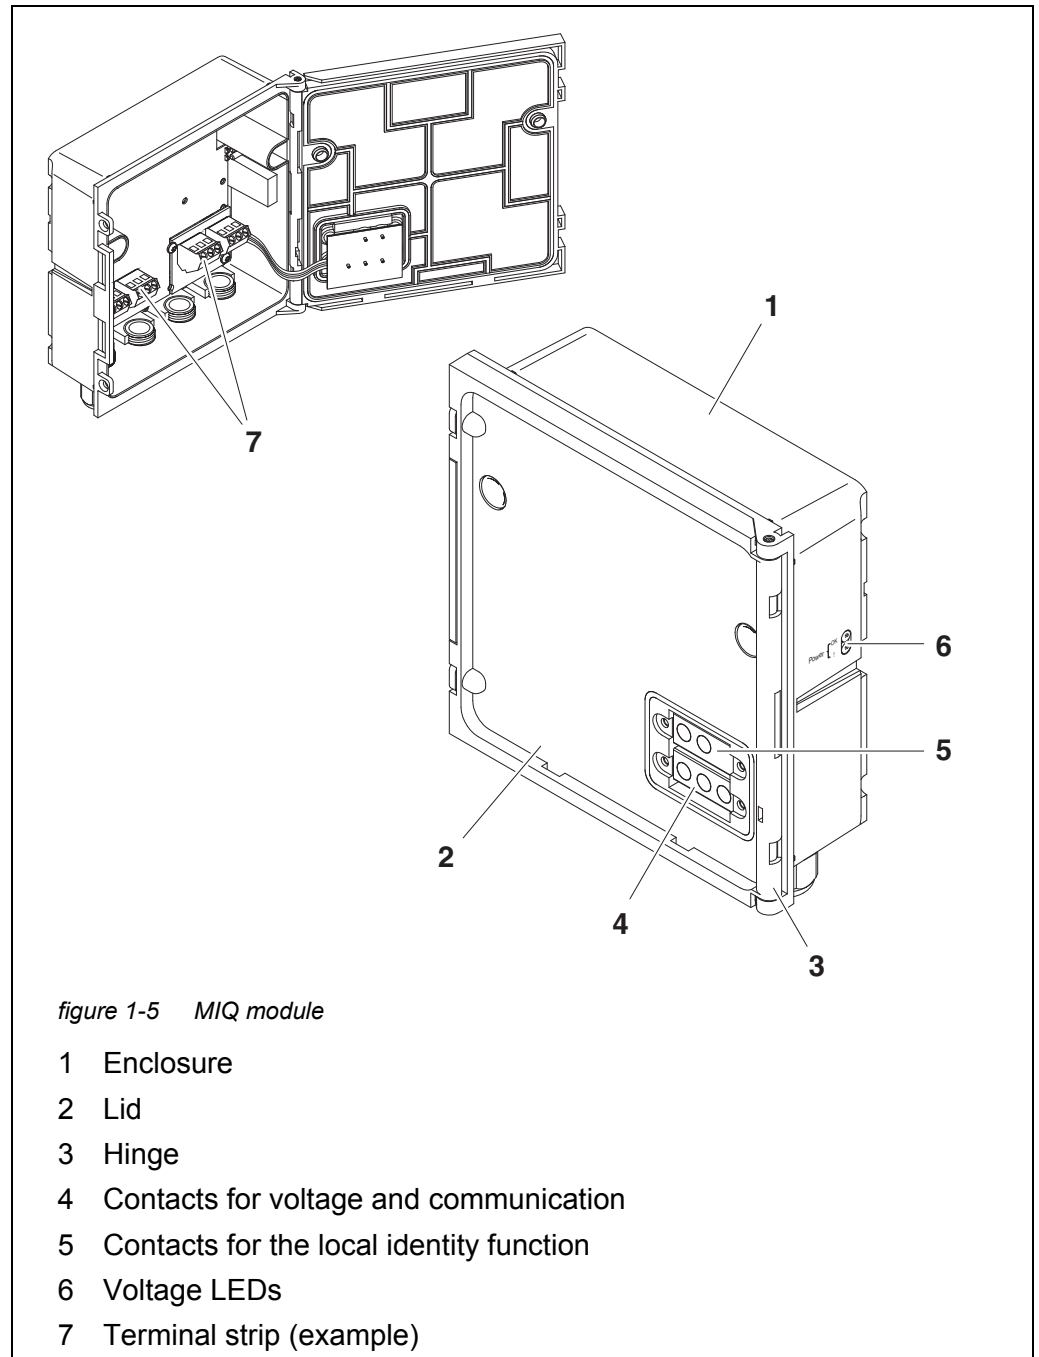

Common characteristics of the MIQ modules


- **Module lid with hinge**
Due to its wide opening angle, the lid provides a large space for working inside the module (e.g. for connecting lines to the terminal strip).
- **Docking facility**
MIQ modules can be mechanically docked onto one another. As a result, several MIQ modules can be mounted in the form of a stack to create a single unit (**stack mounting**). At the same time, docking enables the MIQ modules to be electrically connected with one another via the module contacts on the front and back so that no cabling is required. Even when it is part of a stack, each MIQ module can be opened. In addition, a terminal component can be docked onto each free lid front.
- **Terminal strip**
Further IQ SENSOR NET components can be connected by cable to the terminal strip inside the housing (**distributed mounting**). The terminal strip enables IQ sensors to be connected via the SACIQ sensor connection cable or the IQ SENSOR NET can be further branched and extended here. Certain MIQ modules have a terminal strip with further specific connections (e.g. power connection, relay contacts, current outputs).
- **Local identity function**
The local identity function is integrated in each MIQ module in the form of a memory chip. This memory chip can store information such as the designation of the measurement location and a specific selection of IQ sensors for the measured value display. This information is output when a terminal is docked and, thus, e.g. enables the rapid finding of local IQ sensors for calibration.
- **Voltage diagnosis via LEDs**
Two LEDs, yellow and red, on the side of the housing are used to monitor the operational voltage of each MIQ module.

1.3 Controller MIQ/MC3

The controller does the following jobs:


- Control and monitoring of all IQ sensors
- Control and monitoring of all current and relay outputs
- Continuous diagnosis of the system, i.e. the information and error messages of all components are recorded and entered in the system log book (example: voltage monitoring)
- Recording of measurement data

Digital interfaces The MIQ/MC3 controller is has the following digital interfaces:

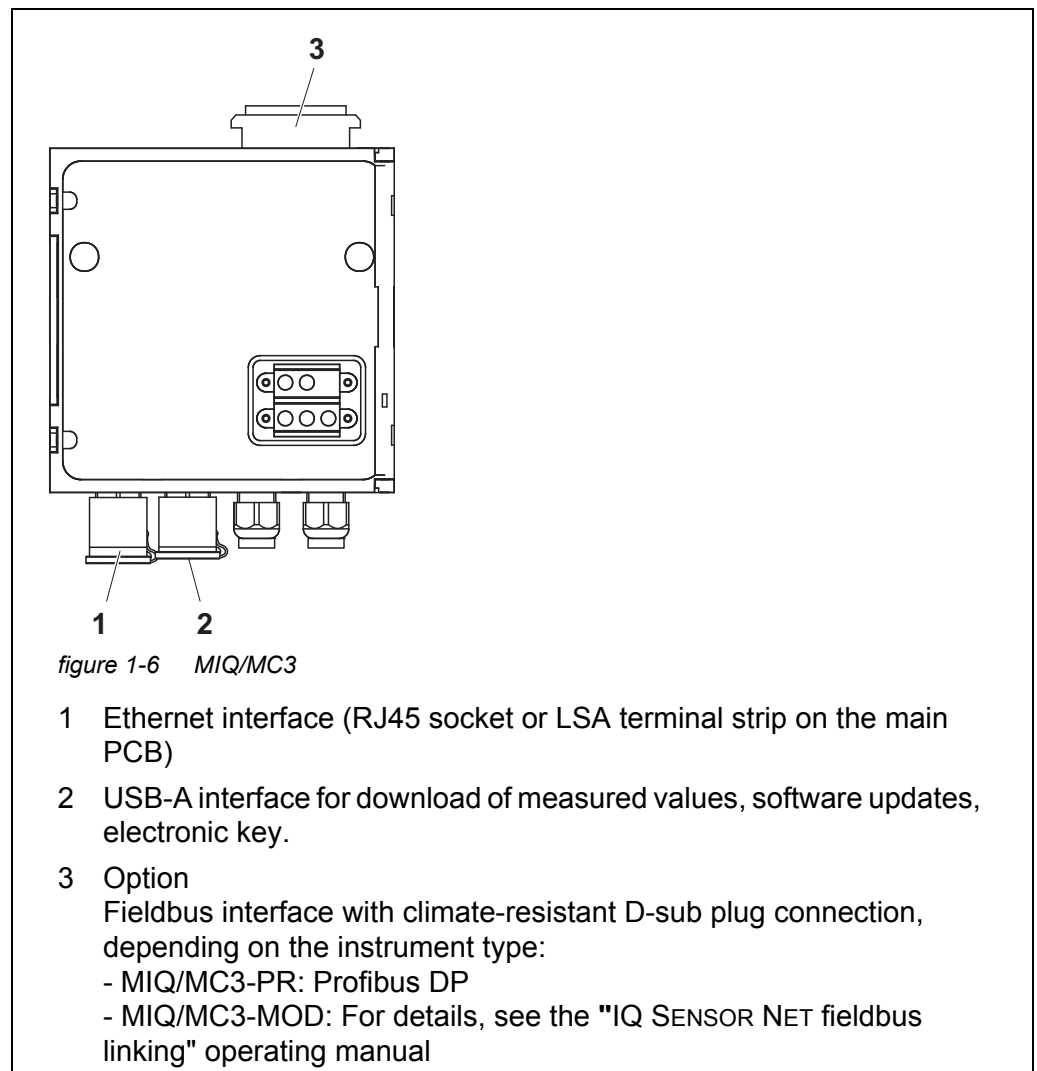





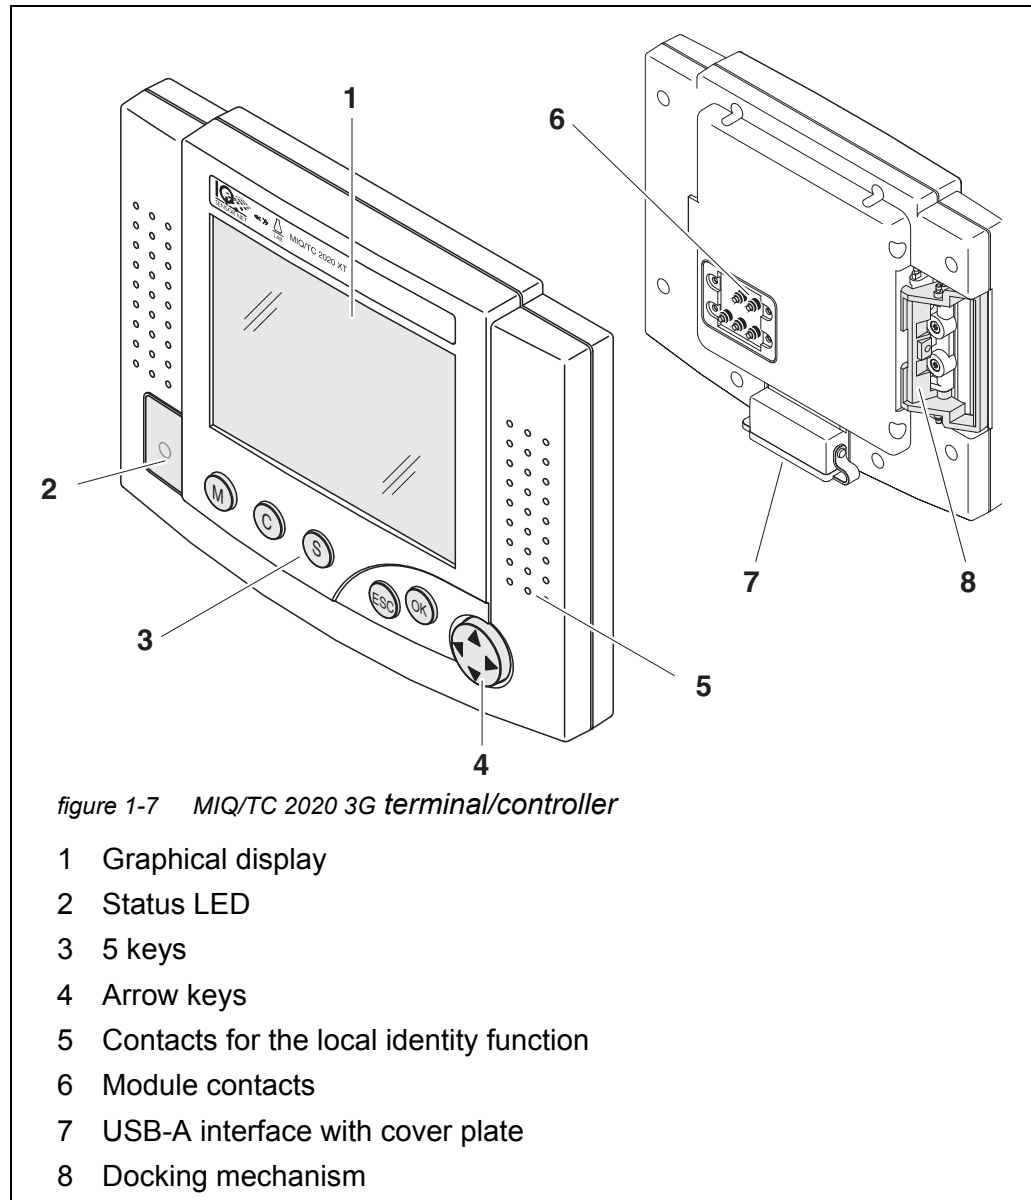

1.4 MIQ/TC 2020 3G terminal/controller

The terminal/controller MIQ/TC 2020 3G can be used in the IQ SENSOR NET either as controller plus terminal (see section 1.4.1) or just as a terminal (see section 1.4.2).



Keys The keys have the following functions:

Key	Designation	Functions
	<M>	– Displays the measured values
	<C>	– Starts the calibration process for the selected sensor
	<S>	– Opens the <i>180 - System settings</i> menu
	<OK>	– Opens the <i>300 - Display/Options</i> menu
	<ESC>	– Leaves the current menu without changing the settings
	<▲> or <▼>	– Moves the selection in menus, lists and table columns by one position upwards or downwards
(arrow keys)	<◀> or <▶>	– Moves the selection in tables by one position left or right – When entering characters, deletes the character left of the cursor

1.4.1 MIQ/TC 2020 3G as controller plus terminal

The MIQ/TC 2020 3G, configured as a controller plus terminal, is a basic component of the 2020 3G system and must therefore remain in the system permanently. The MIQ/TC 2020 3G is connected with the system by docking on to the free front cover of an MIQ module.

The **controller function** takes over the following tasks:

- Control and monitoring of all IQ sensors
- Control and monitoring of all current and relay outputs
- Continuous diagnosis of the system, i.e. the information and error messages of all components are recorded and entered in the system log book (example: voltage monitoring)
- Recording measured data in the fixed interval
- Communication with external digital interfaces such as:
 - USB memory
 - Ethernet (via USB Ethernet adapter)
 - Field bus
 - PC

1.4.2 MIQ/TC 2020 3G just as a terminal

The MIQ/TC 2020 3G, configured as a terminal, is an expansion component for the IQ SENSOR NET system. The System 2020 3G can be docked on all free front covers of MIQ modules as a mobile operating unit and removed again. Docking requires no tools and a simple maneuver by hand is sufficient.

The **terminal function** is the graphical user interface of the system. It is used for the following purposes:

- Display of measured values
- Setting of IQ sensors, outputs, terminal characteristics, date, time, etc.
- Carrying out of maintenance and calibration tasks
- Display of calibration data
- Display of components lists (IQ sensors and outputs)
- Display of log book entries

If the MIQ/TC 2020 3G is registered as a terminal on the system, it is mobile and can be removed at any time. Upon failure of the main controller in the system, the MIQ/TC 2020 3G automatically adopts the job of the failed controller (see section 1.4.3).

1.4.3 Backup controller of the MIQ/TC 2020 3G

Automatic backup function

The MIQ/TC 2020 3G, configured as a terminal, has a backup controller that takes over the core functions of the IQ SENSOR NET controller in the case of its breakdown. Thus, the operating security of the system is significantly increased. For this purpose the System 2020 3G regularly carries out an automatic backup of the system configuration during regular terminal operation.

System configuration,

The system configuration contains the following assignments and settings:

- *Settings of sensors and diff. sensors*
- *Settings of outputs and links*
- *Edit list of sensors*
- *Edit list of outputs*
- *Measured value recording* (datalogger settings)
- List of all components including software statuses but without terminal information.
- Application-related calibrations of sensors (e.g. matrix comparison)



In the IQ SENSOR NET, the system configuration is stored in the controller (MIQ/MC3 or MIQ/TC 2020 3G, configured as controller plus terminal).

Functions

If the MIQ/TC 2020 3G operates as a backup controller, all IQ SENSOR NET core

functions are carried out. Relay- and current interfaces, MIQ/3-PR, MIQ/3-MOD and RS485 operate without restrictions.

Constraints The following functions are not supported:

- Continuation of the datalogger mode of the main controller
- Continuation of the digital communication of the main controller if the communications interface is connected to the main controller.

Manual backup function

In addition to the automatic backup of the system configuration, the system configuration can be backed up manually to a USB memory at any time. In the case of a system failure the saved configuration can then be transferred from the USB memory device to another controller.

1.4.4 Status LED

The status LED provides information on the status of the system:

Status LED	Meaning
Permanently on	– The IQ SENSOR NET is running without any faults
Permanently off	– No power supply or the status LED is switched off
Flashes	<ul style="list-style-type: none"> – The IQ SENSOR NET has detected an alarm. – The IQ SENSOR NET has detected a fault, e.g.: <ul style="list-style-type: none"> – A communication fault in the IQ SENSOR NET – An invalid measured value – The backup controller has taken over the controller function <p>As long as the fault is present, the LED flashes (even when the logbook message on the fault has already been acknowledged). Detailed information on the fault is given in the log book.</p>

1.5 Interfaces of the IQ SENSOR NET

1.5.1 USB-A interface

USB-A interfaces of the IQ SENSOR NET provide the following functions:

- Connection of a USB memory device for the transfer of data (see section 4.9)
 - Measured data
 - Calibration data
 - Configuration data

- Log book
- IQ LabLink data
- Connection of an electronic key for simple access to the system when access control is switched on (see section 5.3.4)
- Connection of a USB hub for the reproduction of the USB interface.
(Recommended: Use a USB hub with extra power pack.)



The USB interface is equipped with a protective cover.
Only remove the protective cover when you want to connect a USB device. Immediately close the USB connection again when you have removed the USB device.
When the USB connection is open, there is a danger of corrosion.

1.5.2 Ethernet interface

The Ethernet interface provides the following functions:

- Integration into an Ethernet network (see section 6)
- Web server feature IQ WEB CONNECT for the remote monitoring and remote control of the IQ SENSOR NET (see section 6)
- Email feature (see section 5.11.4)



With a USB Ethernet adapter, an Ethernet interface with a limited functional range can be provided at the MIQ/TC 2020 3G terminal/controller.

Communication with Ethernet fieldbuses is not possible with a USB Ethernet adapter.

1.6 Behavior of the IQ SENSOR NET in case of faults

1.6.1 Behavior of the IQ SENSOR NET in case of power failure

- The system configuration (*Settings of sensors and diff. sensors* and *Settings of outputs and links*) is stored permanently
- All stored measured data remain permanently available
- Linked current outputs and relay outputs switch to the non-active condition.
Current output: 0 mA current
Relay output: Relays open
For details, refer to the component operating manual of the current or relay output module.
- When the power supply is available again, the system is automatically restarted, starts working again and switches to the measured value display

- During the restart, an entry informing of the power failure is made in the log book.

1.6.2 Behavior of the IQ SENSOR NET if a components fails

- If the operating voltage is too low, the LEDs on the MIQ modules extinguish.
- If active components (e.g. sensors or output modules) cannot be contacted, an entry is made in the log book. The error symbol flashes on the display.
- The *Edit list of sensors* or *Edit list of outputs* display shows a question mark "?" for the component.

Component	Behavior
IQ sensor	<ul style="list-style-type: none"> ● The configuration for the IQ sensor (<i>Settings of sensors and diff. sensors</i>) remains stored. ● Current measured values are not available. ● The measured value display shows <i>ERROR</i>.
MIQ modules	<ul style="list-style-type: none"> ● If an active module fails, an entry is made in the log book. The error symbol flashes on the display. ● The configuration for these modules is retained (e.g. links in the case of output modules).
Controller	<ul style="list-style-type: none"> ● No current measured data can be displayed, processed or stored. ● If communication with the controller is disturbed, output modules activate the error behavior after 2 minutes (see component operating manual of the output module). ● If communication with the controller is disturbed, the fieldbus interfaces and web server will set the sensor status of all sensors to "UNUSED ID" after 2 minutes (see components operating manual of the fieldbus module).
Output module	<ul style="list-style-type: none"> ● The configuration for the output module (<i>Settings of outputs and links</i>) remains stored.
Terminal	<ul style="list-style-type: none"> ● The measured value display is not updated. ● The display does not react to entries. ● The system continues working. ● Stored measured data and the system configuration remain stored.
Power supply module	like power failure (see section 1.6.1)

1.6.3 Availability of the system

The IQ SENSOR NET was optimized to achieve a very high availability. The high availability is achieved through

- The two-wire connection technique that is not interference-prone
- The digital signal transmission resulting from this
- Tools for error diagnosis
 - LEDs on the MIQ modules to check the available voltage
 - Log book messages with instructions to eliminate problems
- Quick replacement of components with minimum configuration requirements (see section 9.4). The system configuration (*Settings of sensors and diff. sensors* and *Settings of outputs and links*) and the measured data are stored in the controller and remain stored when other components are used.

Preventive actions to optimize the availability of the system

If the requirements of the availability are especially high, you can further improve the availability of the system as follows:

- Install identical components in the system.
If the requirements of the availability are high, components can be installed doubly in the system (exception: controller component).
- Back up the controller function with the aid of a MIQ/TC 2020 3G terminal/controller, configured as terminal.
The MIQ/TC 2020 3G terminal/controller has a redundant controller function. It maintains all essential functions of the system in the case of controller malfunction and saves all settings. Controller operation starts automatically.
- Keep substitute components ready.
The system automatically recognizes substitute components of active components (IQ sensors and the output modules). They are easily integrated in the system by assigning them as substitute components.
- Save the system configuration.
The system configuration (*Settings of sensors and diff. sensors* and *Settings of outputs and links*) can be saved to a PC. The data is then transferred via the USB interface or a network connection: The stored system configuration can be loaded from the PC to a substitute controller that might be necessary.

1.6.4 Compatibility of the controllers of the System 2020 3G (MIQ/MC3, MIQ/TC 2020 3G) with components of an existing IQ SENSOR NET system

If a controller of the System 2020 3G replaces a controller in an existing IQ SENSOR NET system, the following compatibilities apply:

Existing IQ SENSOR NET system (controller)	Compatibility
System 2020 XT (MIQ/MC2, MIQ/TC 2020 XT)	All existing components of the existing system are fully compatible with a controller (MIQ/MC3, MIQ/TC 2020 3G)
System 2020 (MIQ/MC)	<p>>The following terminal components are not compatible with a controller (MIQ/MC3, MIQ/TC 2020 3G):</p> <ul style="list-style-type: none">– Terminal T2020– Terminal T2020 (Plus)

2 Safety

2.1 Safety information

2.1.1 Safety information in the operating manual

This operating manual provides important information on the safe operation of the system. Read this operating manual thoroughly and make yourself familiar with the system before putting it into operation or working with it. The operating manual must be kept in the vicinity of the system so you can always find the information you need.

Important safety instructions are highlighted in this operating manual. They are indicated by the warning symbol (triangle) in the left column. The signal word (e.g. "CAUTION") indicates the level of danger:

**WARNING**

indicates a possibly dangerous situation that can lead to serious (irreversible) injury or death if the safety instruction is not followed.

**CAUTION**

indicates a possibly dangerous situation that can lead to slight (reversible) injury if the safety instruction is not followed.

NOTE

indicates a situation where goods might be damaged if the actions mentioned are not taken.

2.1.2 Safety signs on the product

Note all labels, information signs and safety symbols on the product. A warning symbol (triangle) without text refers to safety information in this operating manual.

2.1.3 Further documents providing safety information

The following documents provide additional information, which you should observe for your safety when working with the measuring system:

- Operating manuals of other components of the IQ SENSOR NET system (power packs, controller, accessories)
- Safety datasheets of calibration and maintenance equipment (e.g. cleaning solutions).

2.2 Safe operation

2.2.1 Authorized use

The authorized use of the IQ SENSOR NET System 2020 3G consists of its use in online analysis. Only the operation and running of the sensor according to the instructions and technical specifications given in this operating manual is authorized (see chapter 10 TECHNICAL DATA). Any other use is considered unauthorized.

2.2.2 Requirements for safe operation

Note the following points for safe operation:

- The product may only be operated according to the authorized use specified above.
- The product may only be operated under the environmental conditions mentioned in this operating manual.
- The product may only be supplied with power by the energy sources mentioned in this operating manual.
- The product may only be opened if this is explicitly described in this operating manual (example: connecting electrical lines to the terminal strip).

2.2.3 Unauthorized use

The product must not be put into operation if:

- it is visibly damaged (e.g. after being transported)
- it was stored under adverse conditions for a lengthy period of time (storing conditions, see chapter 10 TECHNICAL DATA).

2.3 User qualification

Target group	The IQ SENSOR NET system was developed for online analysis. Some maintenance activities, e.g. changing the membrane caps in D.O. sensors, require the safe handling of chemicals. Thus, we assume that the maintenance personnel is familiar with the necessary precautions to take when dealing with chemicals as a result of their professional training and experience.
Special user qualifications	<p>The following installation activities may only be performed by a qualified electrician:</p> <ul style="list-style-type: none">● Connection of power supply modules to the power supply (see module operating manual).● Connection of external, line voltage-carrying circuits to relay contacts (see module manual of the relay output module).

3 Installation

3.1 Scope of delivery

- Controller MIQ module MIQ/MC3 or Terminal/Controller MIQ/TC 2020 3G
- Only for MIQ/MC3:
 - Safety screw to secure the terminal/controller to an MIQ module
 - Option: with MODBUS or PROFIBUS connection
- Only for MIQ/TC 2020 3G:
Accessory set, including:
 - 4 x cable glands (clamping range 4.5-10 mm) with seals and blind plugs
 - 4x ISO blind nuts M4 with suitable cheese-head screws and plain washers
 - 2x countersunk screws M3x6 to close the module lid
(+ 2 replacement screws)
 - 1 x contact base with fixing screws
- Operating manual.

3.2 Basic principles of installation

3.2.1 System planning

START

Planning criteria

- Number and types of the sensors required
- Measuring locations to be designed
- Number of operating locations required
- Distances
- Infrastructure, process environment etc.

Rough planning

**IQ SENSOR NET
topology + layout**

- Sum of all line lengths max. 1000 m
- Of these, max. 500 m branch lines
- Individual branch lines max. 250 m

Total line lengths of > 1000 m can be realized with the MIQ/JBR signal amplifier module

Rough determination of power requirement

**Power requirement
of components**

Power requirement =
sum P of all consumers

Consideration of cable losses

**Total power
requirement**

More power required due to cable losses:
– From 400 m total line length:
1 watt per 100 m additional line length.

Total line lengths < 400 m:
do not have to be taken into account

Power rating

**Number of power
supply modules
required**

Sum P of all power supply modules > total
power requirement

Fine adjustment

**Arrangement of the
power supply mod-
ules**

- Position power supply modules near main consumers (e.g. spectral sensors)
- If necessary, further power supply module or
- adjustment of infrastructure.

END

figure 3-1 System planning (planning steps)

3.2.2 Requirements of the measurement location

The respective measurement locations of all IQ SENSOR NET components must meet the environmental conditions specified in section 10.1 GENERAL SYSTEM DATA.

Controlled environmental conditions

Work on the open instrument (e.g. during mounting, installation, maintenance) may only be carried out under controlled environmental conditions:

Temperature	+ 5 °C ... + 40 °C (+ 41 ... +104 °F)
Relative humidity	≤ 80 %

3.3 Safety requirements of the electrical installation

Electrical equipment (such as motors, contactors, cables, lines, relays, switches, instruments) must meet the following requirements:

- Compliance with national regulations (e.g. NEC, VDE and IEC)
- Suitability for the electrical conditions at the place of installation
 - Maximum operational voltage
 - Maximum operational current
- Suitability for the ambient conditions at the place of installation
 - Temperature resistance (minimum and maximum temperature)
 - Stability against UV light in the case of outdoor usage
 - Protection against water and dust (Nema or IP type of protection).
- Suitable fuse protection of the electrical circuit
 - Overcurrent protection devices
(according to the technical data of the instrument input or output)
 - Overvoltage limitations of overvoltage category II
- Suitable external separator (e.g. switch or circuit-breaker) for the power supply of permanently installed instruments with separate power connection
 - compliant with the following regulations
 - IEC 60947-1
 - IEC 60947-3
 - in the vicinity of the instruments (recommendation)
- Cables and lines fire resistant and compliant with the following regulations
 - UL 2556 VW-1 (for USA, Canada)
 - IEC 60332-1-2 (outside the USA, Canada)

3.4 Installation guidelines for lightning protection

When installing and using the IQ SENSOR NET instrumentation, particularly in outdoor areas, adequate protection against (electrical) surges must be provided. A surge is a summation phenomenon of surge voltage and surge current. It is generated through the indirect effect of a lightning event or switching operation in the mains, in the grounding system and in information technology lines.

To be adequately protected against the damaging effects of surges, an integrated concept of the following protective measures is required:

- internal device-related protective measures and
- external protective measures of the installation environment.

The internal device-related protective measures are already integrated in the IQ SENSOR NET online instrumentation as so-called 'lightning protection' (see chapter 10 TECHNICAL DATA).

The external protective measures of the installation environment can be carried out with respect to the following guidelines:

- 1 All lines of IQ SENSOR NET systems must be
 - a) installed inside (or else close to) the grounded metallic mounting constructions, e.g. handrails, pipes and posts if possible
 - b) or, particularly in the case of longer lines, laid in the ground.

Background: The formation of highly lightning hazardous inductive loops between the cables and ground is avoided through the low clearance of the grounded metal construction or by installation in the ground.

- 2 Only the SNCIQ or SNCIQ-UG cable material must be used. This cable material, particularly the high line cross section of the cable shielding (1.5 mm²), is an important prerequisite for the hazard-free discharging of the surge without inadmissibly high overvoltages developing along the line at the same time that could have a damaging effect on the individual IQ SENSOR NET components. It is not recommended to use cables from other manufacturers with usually appreciably lower shielding conductor cross sections.

- 3 All metallic mounting constructions, handrails, pipes, posts etc. on which any IQ SENSOR NET instrumentation is installed must be connected to the local potential equalization system and the grounding system or must be individually sufficiently grounded locally according to the codes of practice.

For the individual grounding of the measuring point the mounting construction must be solidly connected by means of a large-area auxiliary electrode with the measuring medium.

Metallic control shafts/pipes and other large-area metallic bodies that reach into the measuring medium are, for example, ideal for use in the grounding of the mounting construction.

This creates a set path for the main surge. As a result it is possible to avoid the surge being discharged via the IQ SENSOR NET cable and via the valuable sensors in the measuring medium.

- 4 The contacts of the MIQ modules always have to be protected with the respective contact covers when they are not used by terminal components. The

contact cover provides improved insulation against the electric fields of a thunderstorm event through the extension of the air and creepage paths.

- 5 It is recommended to attach a metallic or nonmetallic sun shield to each outside location of any IQ SENSOR NET instrumentation. Sun shields serve as a protection due to an advantageous development of the electrical field lines and promote the dissipation of the surge via the mounting construction.
- 6 The line voltage for the supply of the IQ SENSOR NET instrumentation must comply with overvoltage category II. Generally this is ensured through the public operator of the power supply networks. In company-owned networks, e.g. in all power supply systems owned by wastewater treatment plants, this must be kept separate by a potential equalization and a surge protection system for the plant.
- 7 One part of the IQ SENSOR NET safety and lightning protection concept is based on high-grade protective insulation of the IQ SENSOR NET instrumentation. It does not normally have any protective ground conductor or earth terminal. Avoid any direct connection of the IQ SENSOR NET connections or the metallic sensor enclosures with the local grounding or potential equalization system and with metallic construction elements (see point 9).
- 8 Additional external lightning protection measures directly on the IQ SENSOR NET system or its components, e.g. the use of overvoltage surge arresters, are not necessary for protection against the indirect effects of lightning and could possibly result in malfunctions.
- 9 For the realization of the internal lightning protection of the system (e.g. wastewater treatment plant control stands) and for the protection of IQ SENSOR NET external resources, cable entry points into buildings or distributions coming from the IQ SENSOR NET instrumentation must be carried out as follows:
 - The shield of SNCIQ or SNCIQ-UG cables can be connected to the local potential equalization with a gas overvoltage arrester. Shielding terminals (e.g. of the PROFIBUS system) have to be used for the contacting of the shield. The shield of the cable must not be opened under any circumstances.
 - 0/4-20 mA interfaces must be realized with shielded cables. The cable shield must be connected directly to the potential equalization(s) provided. If plant potential equalization systems are provided on both sides, the shield must also be connected on both sides. The inner conductors must have no contact with the potential equalization.
 - The PROFIBUS and Modbus cables have to be installed according to the rules of the respective bus system.
 - Relay lines should be connected to the local potential equalization in order to provide general and consistent protection via gas overvoltage surge arresters.
 - Connect any Ethernet interfaces with a shielded Ethernet cable, especially if installed in an open air location.
 - Do not operate any USB devices permanently at the USB-A interface in

an open air location.

3.5 Drawing up the power rating

General information

The IQ SENSOR NET supplies all components with low voltage as well as digital communication via a shielded 2-wire line.

Due to this characteristic, the following factors must be taken into account in the planning of an IQ SENSOR NET system:

- Power consumption of all components (power rating). Primarily, this determines the number of MIQ power supply modules required (section 3.5).
- Distance of the components from one another. Large distances may require a further MIQ power supply module and/or an MIQ/JBR signal amplifier module (section 3.5.1).
- Placement of the MIQ power supply modules in the IQ SENSOR NET (effect on the power supply - section 3.5.1).



Only IQ SENSOR NET products may be used in the IQ SENSOR NET.

Power rating - why?

All components in the system require a specific level of electrical power for operation. Thus, it is necessary to draw up a power rating after selecting the desired components. At the same time, this can determine whether the entire power requirement of all components (consumers) is covered by the existing MIQ power supply modules. If this is not the case, the power available in the system must be increased by further MIQ power supply modules.



The power rating provides an initial guide value. In specific limiting cases, the power supply may be insufficient despite the positive power rating. Long cable lines, for example, result in additional power losses that may have to be compensated by further MIQ power supply modules. This can be checked for the planned installation by following section 3.5.1.

The power requirement of the individual components is listed in the following table:

Power requirement of IQ SENSOR NET components	IQ sensors		Power requirement [W]
	Sensolyt [®] 700 IQ (SW)		0.2
	TriOxmatic [®] 70x IQ (SW)		0.2
	FDO [®] 70x IQ (SW)		0.7
	TetraCon [®] 700 IQ (SW)		0.2

IQ sensors	Power requirement [W]
VisoTurb® 700 IQ (SW)	1.5
ViSolid® 700 IQ (SW)	1.5
AmmoLyt® <i>Plus</i> 700 IQ	0.2
NitraLyt® <i>Plus</i> 700 IQ	0.2
VARiON® <i>Plus</i> 700 IQ	0.2
Spectral sensors XXXVis® 7YY IQ (e.g. NiCaVis® 705 IQ)	8.0
UV 70x IQ NOx	8.0
UV 70x IQ SAC	8.0
IFL 700 IQ	5.5
IFL 701 IQ	3.0
P 700 IQ (MIQ/WCA 232)	0.5

MIQ modules	Power requirement [W]
MIQ/JB	0.1
MIQ/JBR	0.2
MIQ/CR3	3.0
MIQ/C6	3.0
MIQ/R6	1.5
MIQ/IC2	0.2 + 2.2 W per connected WG 21 A7 power supply/isolator
MIQ/CHV	2.2
MIQ/CHV PLUS	2.5
MIQ/WL PS	0.6
MIQ/3[-PR]/[-MOD]	3.0
MIQ/2-PR	2.0
MIQ/2-MOD	1.6

Terminal, Controller	Power requirement [W]
MIQ/MC3	2.5
MIQ/MC3PR	3.0
MIQ/MC3-MOD	3.0
MIQ/TC 2020 XT	3.0
MIQ/TC 2020 3G	3.5
USB devices	Power requirement [W]
USB memory	approx. 0.5 ... 2
USB Ethernet adapter	approx. 0.5 ... 2

Determining the number of MIQ power supply modules

From the value determined for the power requirement, determine the number of the MIQ power supply modules (MIQ/PS or MIQ/24V) as follows:

Total power requirement P	Number of MIQ power supply modules
$P \leq 18 \text{ W}$	1
$18 \text{ W} < P \leq 36 \text{ W}$	2
$36 \text{ W} < P \leq 54 \text{ W}$	3
$54 \text{ W} < P \leq 72 \text{ W}$	4
$72 \text{ W} < P \leq 90 \text{ W}$	5
$90 \text{ W} < P \leq 108 \text{ W}$	6

Sample configuration	Power requirement [W] (component)	Total power requirement P [W] (sum of the components)	Number of MIQ power supply modules required
1 MIQ/MC3	2.5	2.5	1
+ 1 MIQ/TC 2020 3G	+ 3.5	6.0	1
+ 1 NiCaVis [®] 705 IQ	+ 8.0	14.0	1
+ 1 VisoTurb [®] 700 IQ	+ 1.5	15.5	1
+ 1 MIQ/CR3	+ 3.0	18.5	2

+ 1 SensoLyt® 700 IQ	+ 0.2	18.7	2
+ 1 MIQ/CR3	+ 3.0	21.7	2
+ 1 MIQ/TC 2020 3G	+ 3.5	25.2	2



The number of MIQ power supply modules required in the IQ SENSOR NET that was determined can be higher in the case of:

- Great cable lengths (see section 3.5.1).
- If any USB devices with high power consumption are connected

Power supply with the aid of the MIQ/WL PS radio module

The MIQ/WL PS radio module can also supply power to components with a total of up to 7 W power consumption on an IQ SENSOR NET island. Details of this are given in the operating manual of the MIQ/WL PS.

3.5.1 Effect of the cable length

The length of the cables in the IQ SENSOR NET affects

- the operating voltage available for a component
- the quality of data transmission.



All information applies to SNCIQ cable material only. As regards the copper wire diameter and dielectric, this cable is especially designed for the combined energy and data transmission via great distances and ensures the lightning protection characteristics stated in chapter 10 TECHNICAL DATA.

Voltage drop due to cable lengths

Very long cables in the IQ SENSOR NET cause voltage drops with growing distance from the MIQ power supply module. If the voltage is under the limit values, further IQ power supply modules must be used to compensate.

Guideline

If the MIQ power supply modules are positioned in the vicinity of the main consumers and the total cable length is no more than 400 m, no additional cable losses have normally to be taken into account. Main consumers are components with a power consumption of 5 W or more.



When determining the number of MIQ power supply modules required, the most unfavorable design has to be taken into account for mobile components (MIQ/TC 2020 3G). I. e., take into account

- the maximum number of mobile components and
- their greatest possible installation distance from the MIQ power supply unit.


Determining the length of the cable section

A diagram is used to determine whether an additional MIQ power supply module is necessary for the planned installation. To do so, the length of the cable section must be determined.

A cable section is the longest continuous length of cable from an MIQ power supply module to a consumer. Sensor connection cables up to 15 m are not taken into account in this.

Example The following figure shows the length of the cable section L made up of the partial lengths L1, L2 and L3 as the cable section L4 is shorter than L3:

$$L = L1 + L2 + L3$$

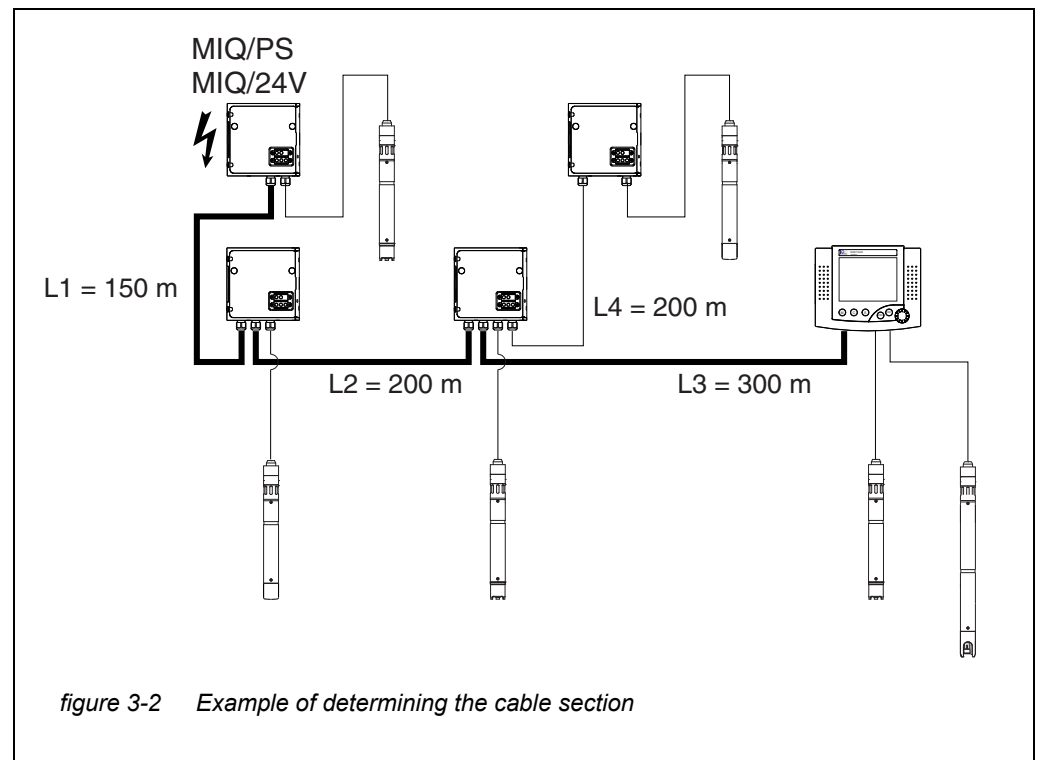


Checking the power supply

- 1 Determine the length of the cable section for the planned installation.
- 2 Determine the sum of the power consumption of all consumers along the cable section (including IQ sensors).
- 3 Enter both values determined as a point in the following diagram.



To make it easier it is assumed that all consumers are placed at the end of the cable section.

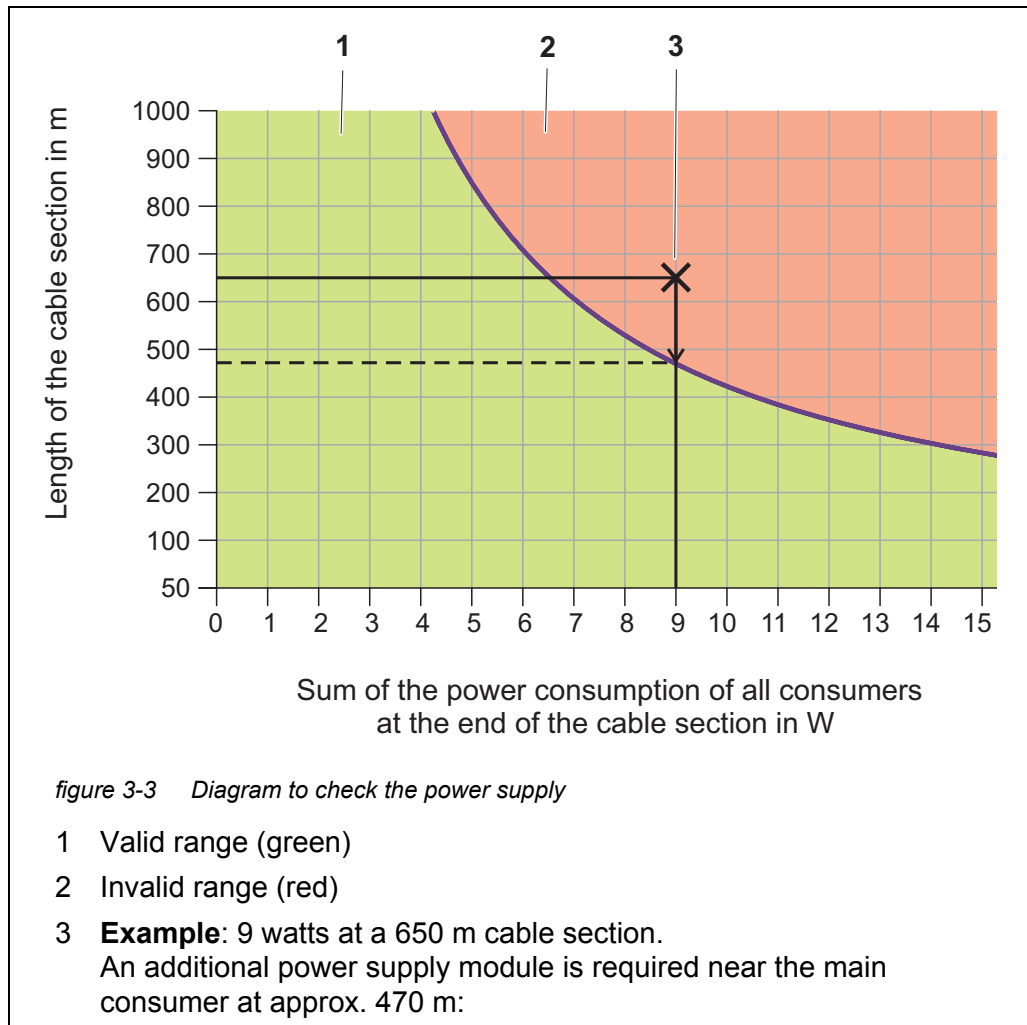

- 4 **Evaluation:**
- If the point is in the lower, valid range, no additional MIQ power supply module is required.
- If the point is in the upper, invalid range, an additional MIQ power supply module is required. Install this MIQ power supply module in the vicinity of the main consumers of this section, or, if not possible, - starting from the primary MIQ power supply module - approx. at that point of the section where the maximum cable length is exceeded (see following example).

Example Problem:

Consumers with a total power requirement of 9 W are positioned on a cable sec-

tion of 650 m. Is the power supply with one MIQ power supply module sufficient? At which point must a further MIQ power supply module be installed if necessary?

Proceeding:

- Enter both values as a point in the diagram (point "x" in figure 3-3).
- Result: the point is in the invalid range. I. e. the power supply is not sufficient.
- Draw down a vertical line from the point until the line crosses the limit between the upper and lower range. The intersecting point specifies the maximum cable length for the existing power requirement (at approx. 470 m). This is the place where the additional MIQ power supply module is required.
- If any main consumers are near this place, the MIQ power supply module should be installed in their vicinity (ideally, directly on them).



After commissioning, you can check the voltage directly on the MIQ modules or on the terminal connections of the IQ sensors (see section 9.2.2). The limits of the voltage levels are given in this operating manual in section 9.2.2 MEASURING THE VOLTAGE.

Quality of data transmission

If the sum of all line lengths (including the SACIQ sensor connection cable) exceeds 1000 m, an MIQ/JBR signal amplifier module must be installed in the system. More details of this are given in the MIQ/JBR component operating manual.

3.5.2 Optimum installation of MIQ power supply modules

Basic rules

- Install the MIQ power supply modules as near as possible to the IQ SENSOR NET components with the highest power consumption. This also applies in the case of several MIQ power supply modules in the system.
- If possible, assemble the IQ SENSOR NET in a star configuration from the MIQ power supply modules.

3.6 Connecting system components

3.6.1 General information

The IQ SENSOR NET system components are connected to form a functioning unit in the following ways:

- **Stacked mounting of MIQ modules**

Up to three MIQ modules can be installed and mechanically connected with one another to form a stack at a single location. The contacts on the front and rear automatically create the electrical connection between the MIQ modules in the stack (section 3.6.2).

- **Distributed mounting of MIQ modules**

Individual MIQ modules or an assembled module stack are installed at various locations (for example, a central control unit and an MIQ branching module for connecting IQ sensors at the edge of the basin). The spatial distance is bridged with the aid of the SNCIQ or SNCIQ/UG cable (section 3.6.3).

- **Connection of IQ sensors:**

IQ sensors are connected to an MIQ module with the aid of the SACIQ cable. This cable is available in different lengths. The MIQ module must have a free SENSORNET connection on the terminal strip. On the sensor side, the connection is made with a plug that is standard for all IQ sensors (section 3.6.4).

- **Docking of a terminal unit:**

A terminal unit is attached to the lid of a free MIQ module with the aid of a quick-release locking mechanism.



Distributed mounting is only allowed in a star configuration. The system must nowhere be closed to form a ring. Only use the assembly material provided for the installation.

3.6.2 Stacked mounting of MIQ modules:




For optimum stability, a maximum of three MIQ modules can be mounted in any one stack. Only one MIQ power supply module may be mounted per module stack.

Mounting direction

MIQ modules can be stacked on top of one another from both sides. All the required installation materials are contained in the scope of delivery of the MIQ modules.


Variant 1 - stack expansion forwards.

The back of an MIQ module is attached to the lid of another MIQ module (page 46).

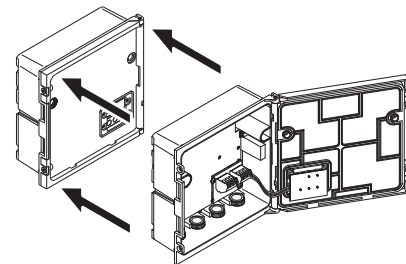

Variant 2: - stack expansion backwards.

The lid of an MIQ module is attached to the back of another MIQ module (page 50).

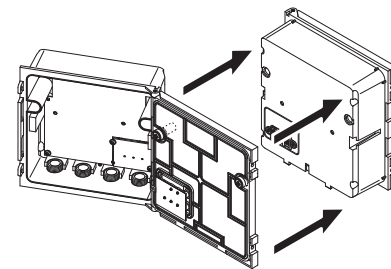

Which variant is suitable for a specific case depends on whether and how an MIQ module is already permanently installed at a location (e.g. on a wall or in a panel), among other factors.



In the case of panel mounting, the front MIQ module can only be installed individually in the switch cabinet aperture. Only then can further MIQ modules be added to its back (variant 2). If necessary, dismantle the front MIQ module from an already mounted stack before mounting.


Materials required

- 2 x ISO blind nuts (M4)
- 2 x cheese-head screws (M4x16) with plastic washer
- 1 x contact base with two plastic tapping screws.


Tools

- Phillips screwdriver.

Both installation variants are described below. To dismantle a module stack, proceed in the reverse order to mounting the stack.

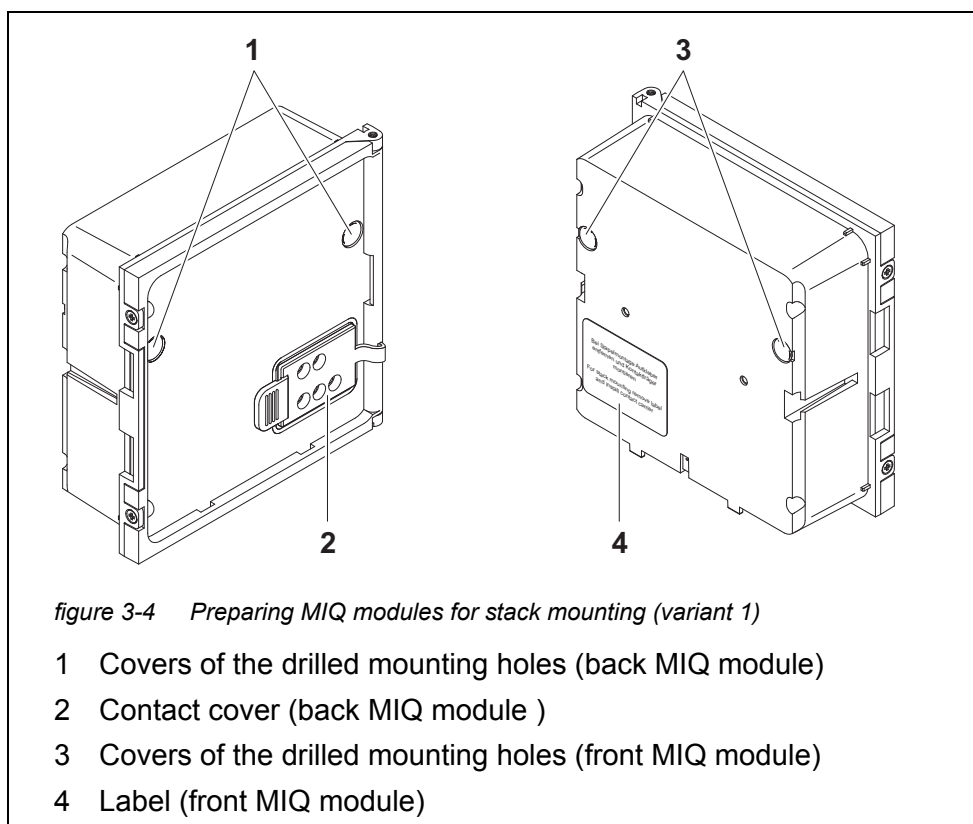
Variant 1: Stack expansion forwards**Preparing the
stack mounting**

- 1 Remove the covers from the drilled mounting holes (pos. 1 and 3 in figure 3-4).
- 2 Remove the contact cover (pos. 2).
- 3 Pull off the adhesive label (pos. 4).

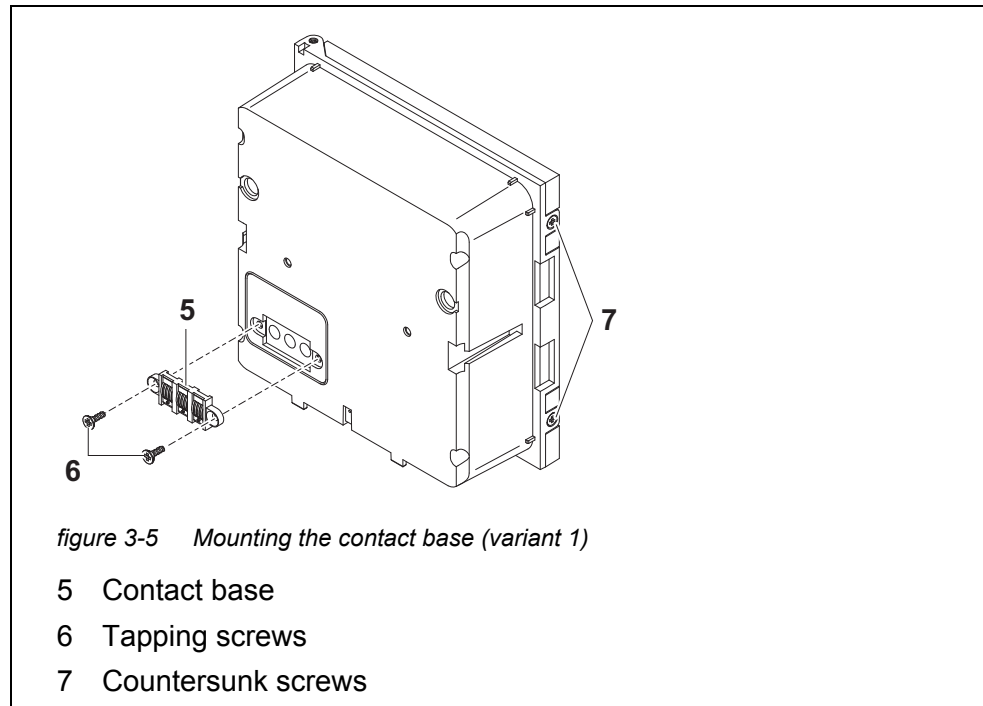
Mounting the contact base

Only IQ Sensor Net products may be used in the IQ Sensor Net.


- 4 Attach the contact base (pos. 5 in figure 3-5) on the front MIQ module with the two plastic tapping screws (pos. 6).
- 5 On the front MIQ module, remove the two countersunk screws (pos. 7 in figure 3-5) and swing open the module lid.

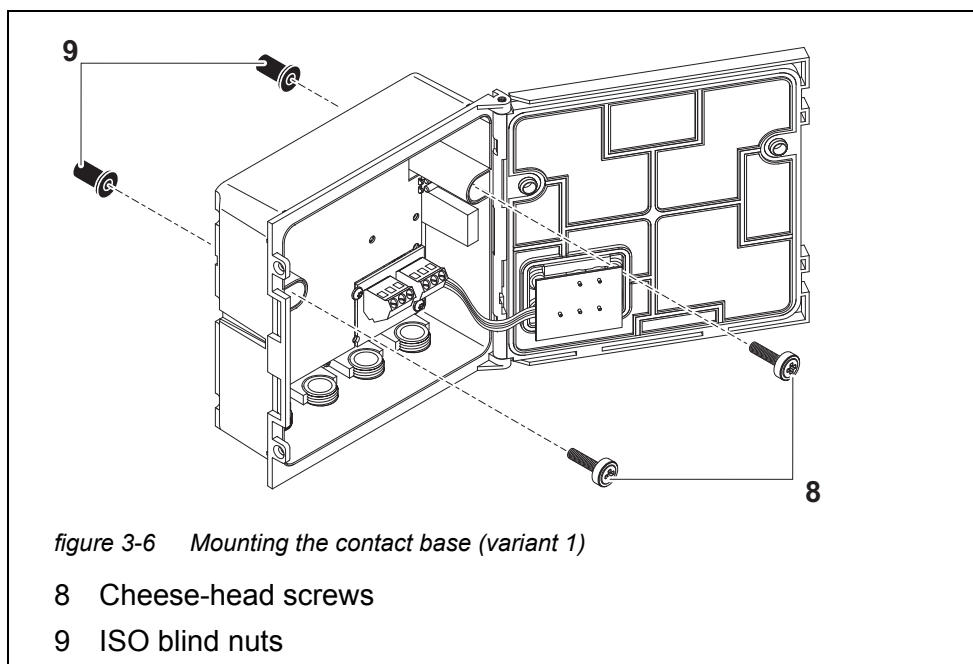**Premounting the
ISO blind nuts**


- 6 Insert the cheese-head screws (pos. 8 in figure 3-5) with the plastic washers in the drilled mounting holes in the enclosure and loosely screw in the ISO blind nuts (pos. 9).

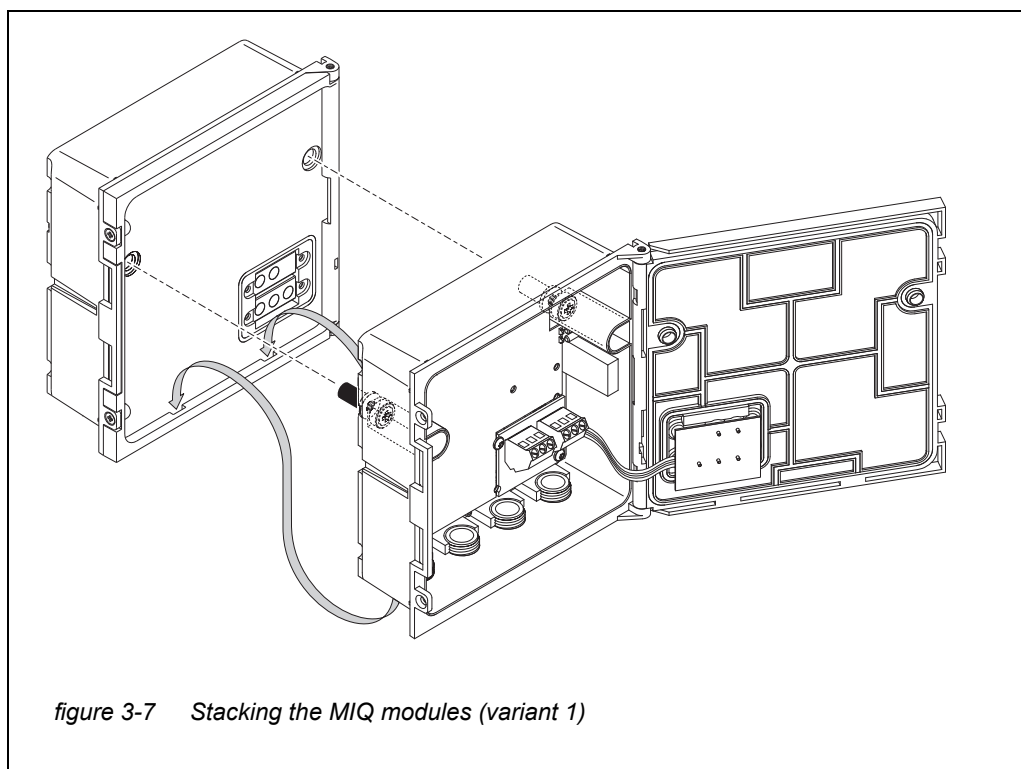**Stacking the
MIQ modules**

- 7 Attach the prepared MIQ module to the lid of the back MIQ module. At the same time, ensure that the two clips on the front MIQ module click into place in the lid of the back MIQ module. Subsequently, tighten the two screws (pos. 8 in figure 3-6).
- 8 Check the position of the SN terminator switch and correct it if necessary (see section 3.10.1).

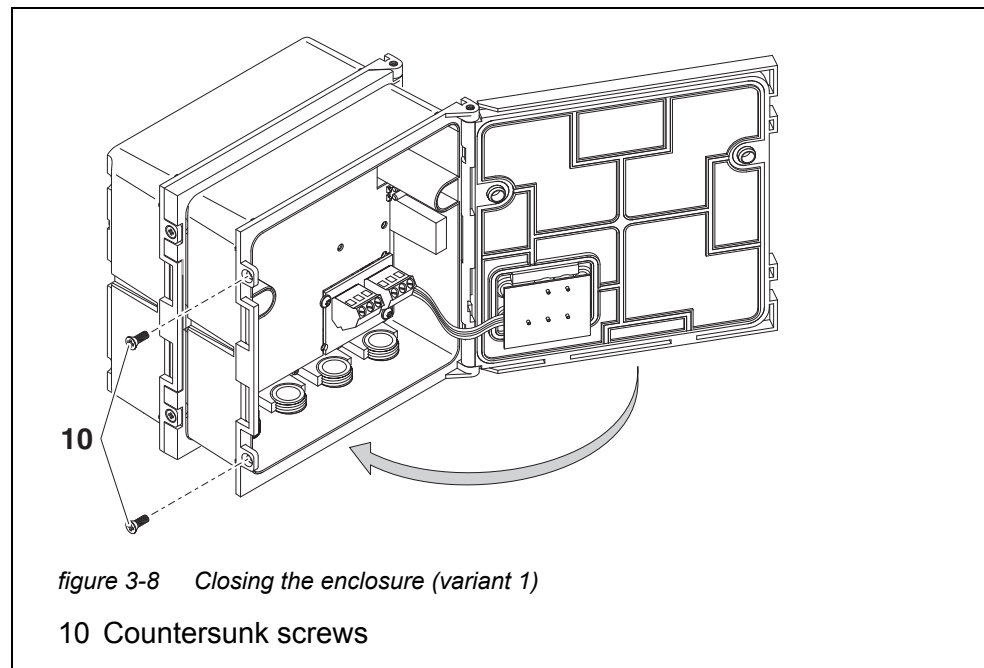


- 9 Close the lid of the front MIQ module and fix it with the two countersunk screws (pos. 7 in figure 3-8).

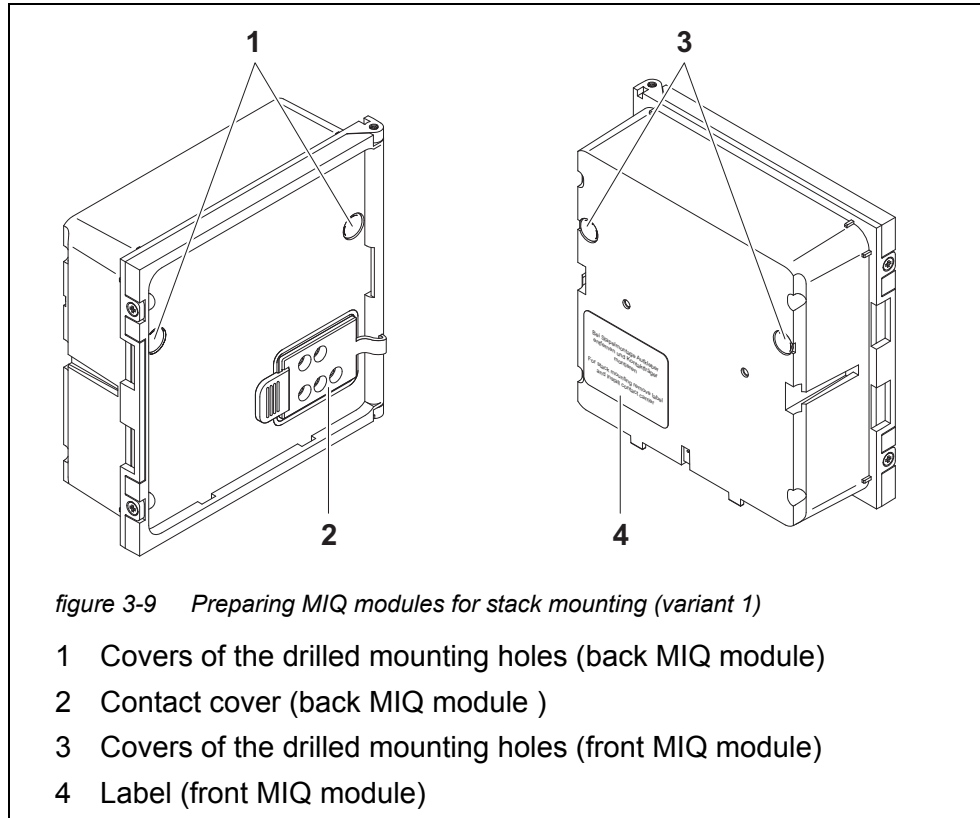Variant 2: stack expansion backwards**Preparing the
stack mounting**


- 1 Remove the covers from the drilled mounting holes (pos. 1 and 3 in figure 3-10).
- 2 Remove the contact cover (pos. 2).
- 3 Pull off the adhesive label (pos. 4).
- 4 On the back MIQ module, remove the two countersunk screws (pos. 5) and swing open the module lid.

Mounting the contact base

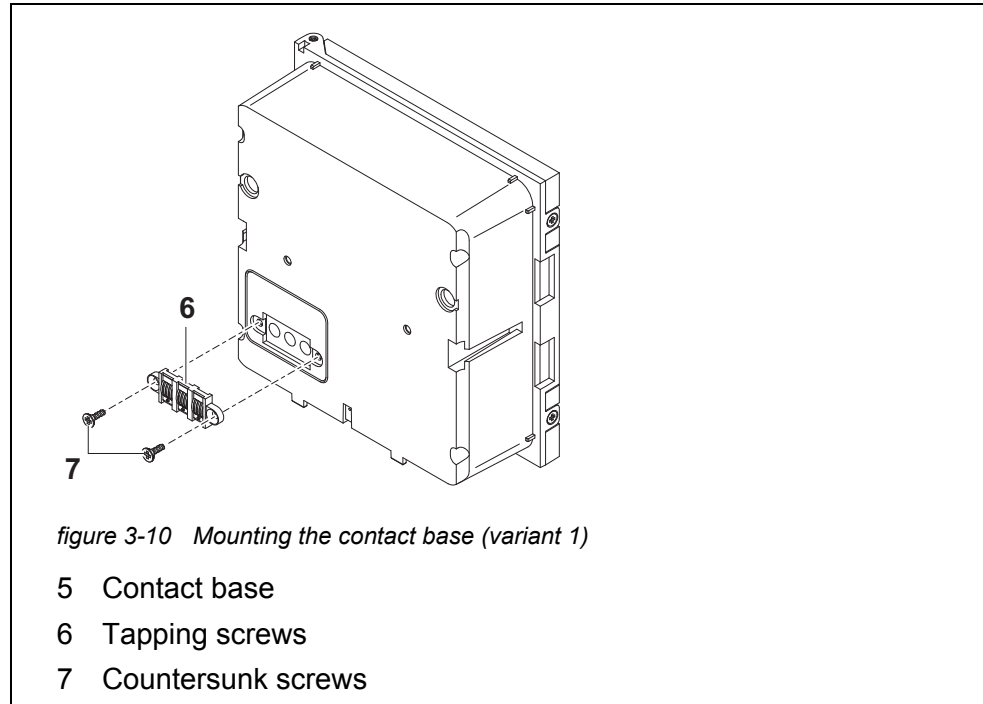


Only use the plastic tapping screws supplied for attaching the contact base. They ensure the correct fit.


- 5 Attach the contact base (pos. 6 in figure 3-10) on the front MIQ module with the two plastic tapping screws (pos. 7).

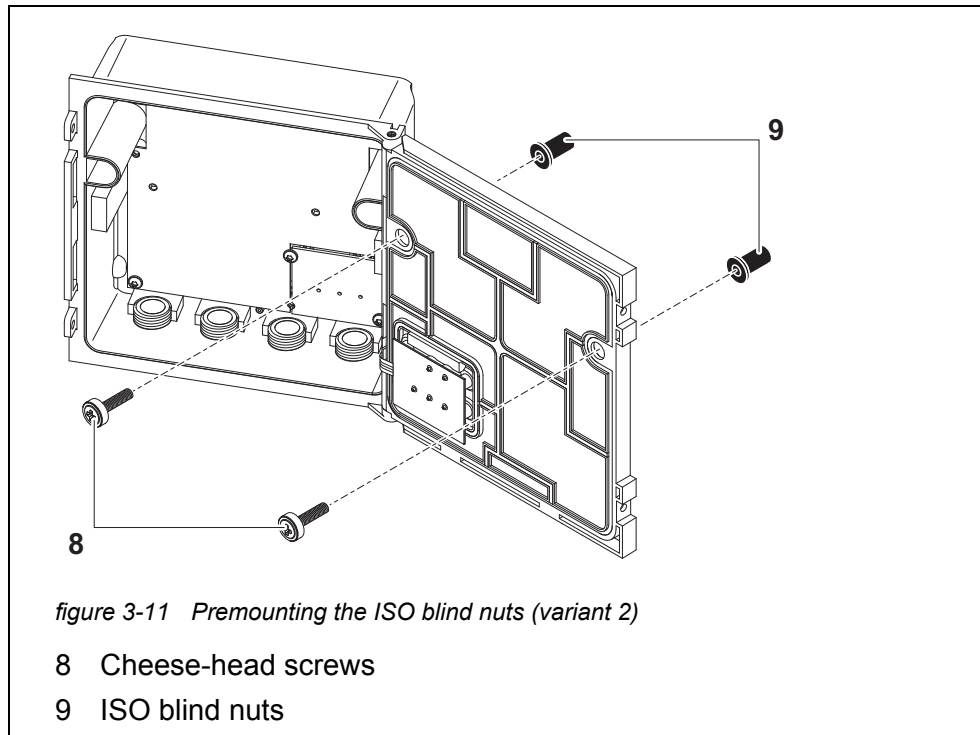**Premounting the
ISO blind nuts**

- 6 Insert the cheese-head screws (pos. 8 in figure 3-11) with the plastic washers in the drilled mounting holes in the module lid and loosely screw in the ISO blind nuts (pos. 9).

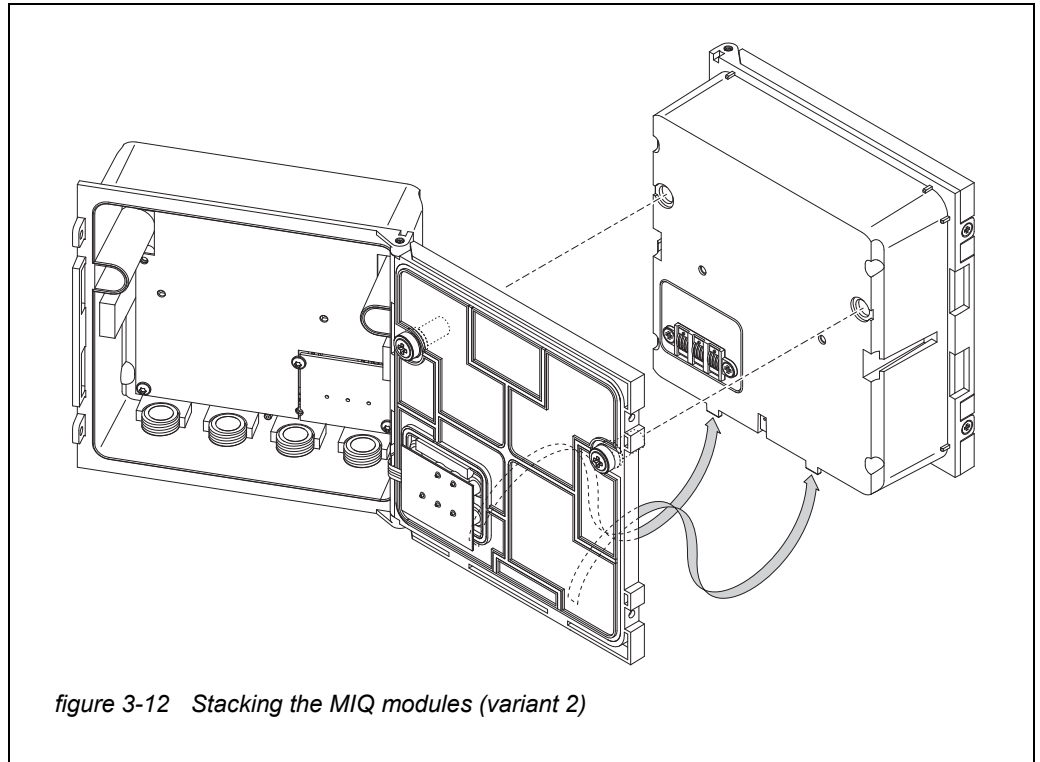**Stacking the
MIQ modules**

- 7 Attach the prepared MIQ module to the back of the front MIQ module. At the same time, ensure that the two clips on the front MIQ module click into place in the lid of the back MIQ module. Subsequently, tighten the two screws (pos. 8 in figure 3-11).
- 8 Check the position of the SN terminator switch and correct it if necessary (see section 3.10.1).

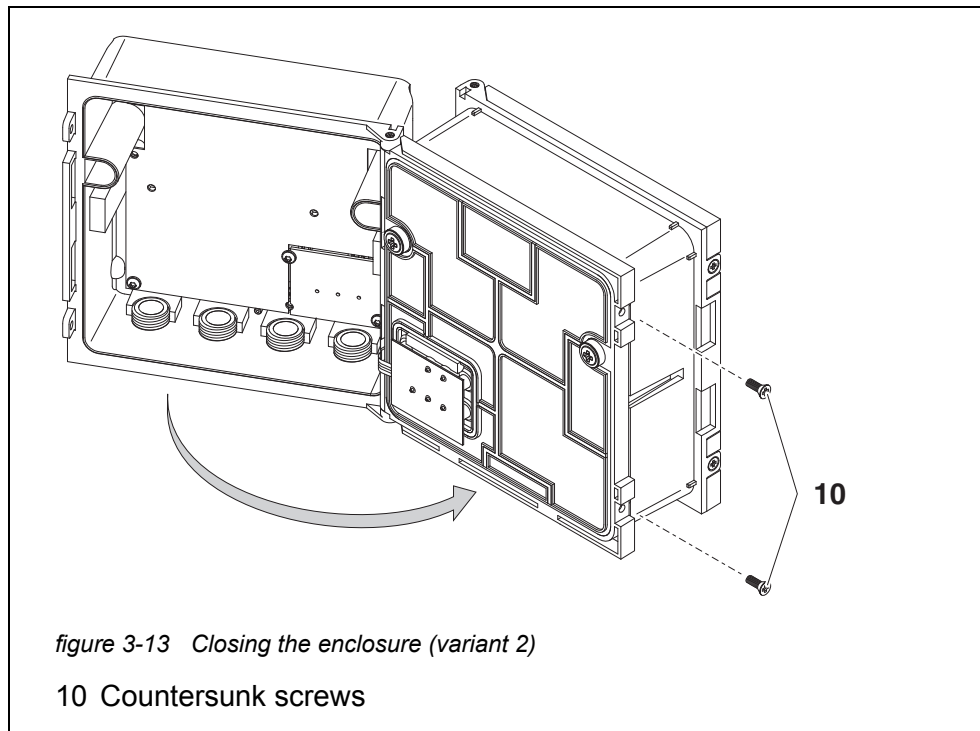

- 9 Close the back MIQ module and fix it with the two countersunk screws (pos. 5 in figure 3-13).

3.6.3 Distributed mounting of MIQ modules

General information

The following IQ SENSOR NET cables can be used for distributed mounting:

- SNCIQ cable
- SNCIQ/UG earth cable - suitable for underground laying in accordance with VDE 01816, Part 2 and DIN/VDE 0891, Part 6.

The cables are delivered as piece goods (please specify length when ordering!).

Each MIQ module has a row of terminal strips in the housing. The two 3-fold terminal strips on the right are always reserved for the connection of further IQ SENSOR NET components (designation "SENSORNET 1" and "SENSORNET 2").

Some MIQ modules have additional "SENSORNET" connections ("SENSORNET 3" and "SENSORNET 4") on the left of the terminal strip.




The IQ SENSOR NET cable may only be connected to the SENSORNET connections. No wire of the cable may be connected with an external electrical potential. Otherwise, malfunctions could occur.

- Materials required**
- 1 x SNCIQ or SNCIQ/UG connection cable (see chapter 11 ACCESSORIES AND OPTIONS)
 - Wire end sleeves for 0.75 mm² wire cross-section with matching crimping tool
 - 1 x cable gland with seal (scope of delivery of MIQ module).

- Tools**
- Cable stripping knife
 - Wire stripper
 - Phillips screwdriver
 - Small screwdriver.

Preparing the cable ends

- 1 Cut off the cable to the required length.
- 2 Remove approx. 45 mm of cable insulation (in the case of the SNCIQ/UG earth cable, remove both the inner and outer insulation).
- 3 Only for the SNCIQ/UG earth cable: strip the outer insulation for a further 35 mm.
- 4 Shorten the exposed shielding braid up to the cable sheath.
- 5 Shorten the two fillers (plastic inlays) up to the cable sheath.
- 6 Bare the red and green wires and fit them with wire end sleeves.
- 7 Fit the filler stranded wire with a wire end sleeve.

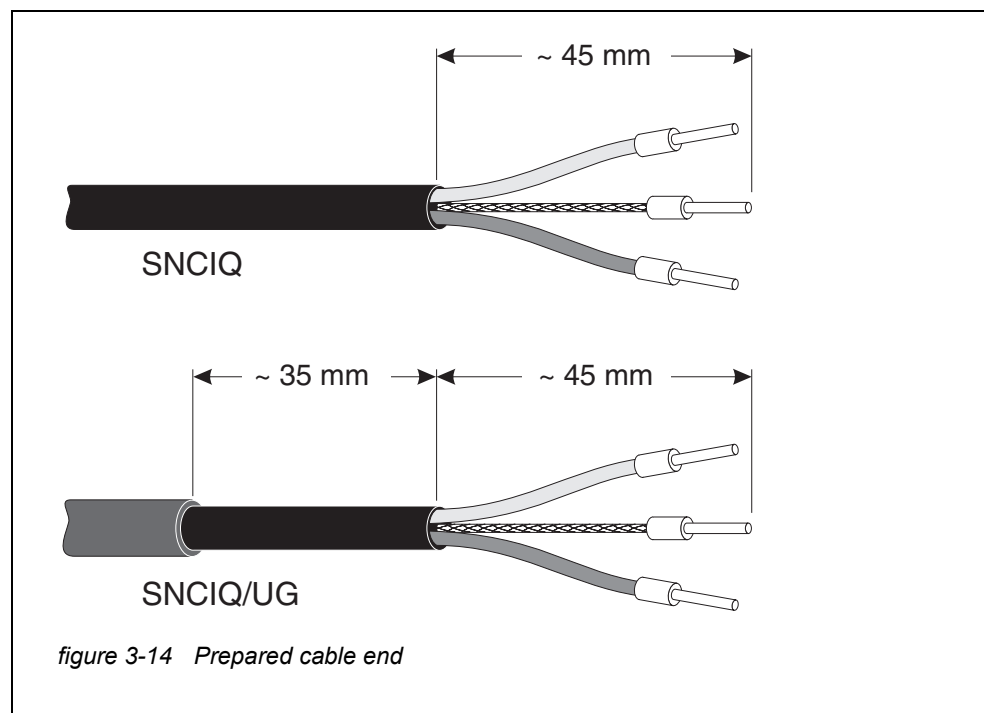

Connecting the cables The SNCIQ and SNCIQ/UG cables are connected to the terminal strip in the same way as the SACIQ sensor connection cable (see section 3.6.4):

- 1 Open the MIQ module.
- 2 Select any SENSORNET connection. At the same time, look out for the SENSORNET designation.

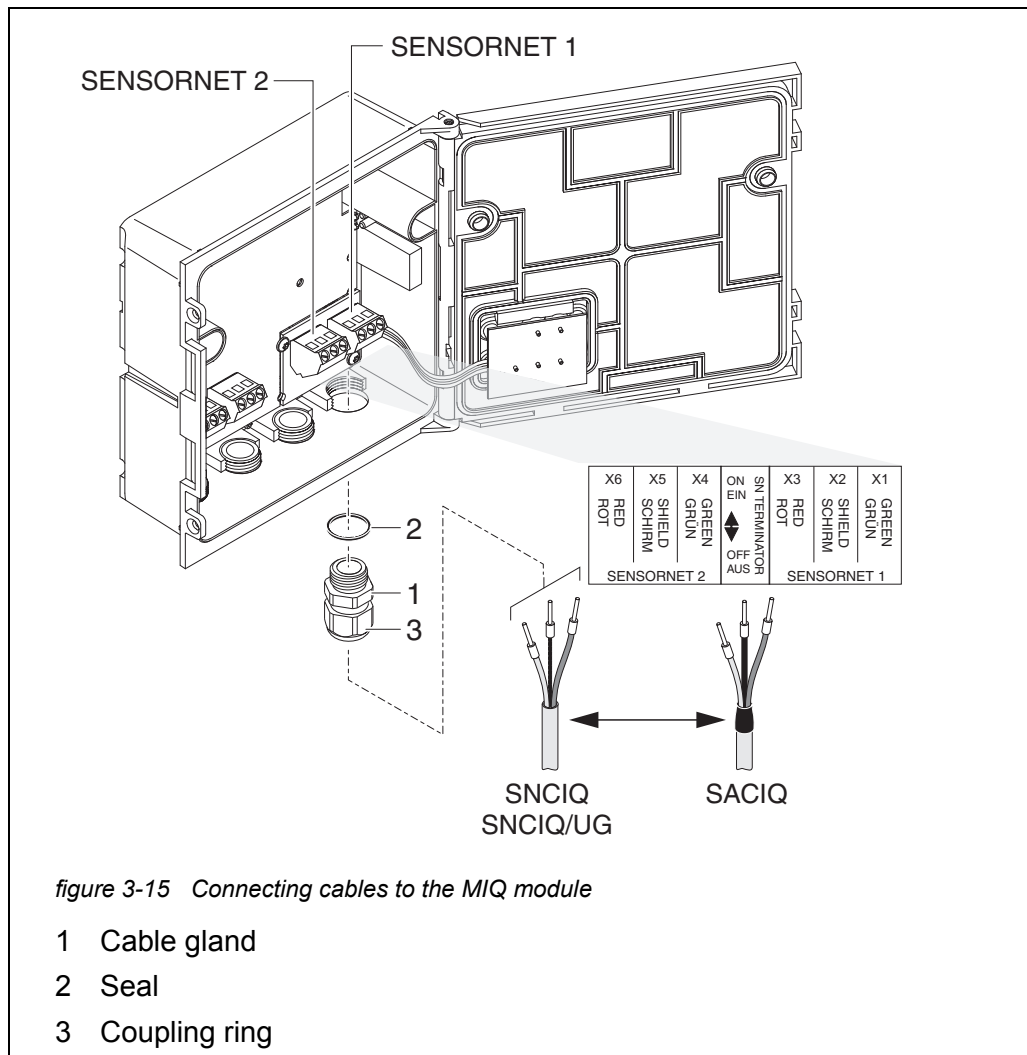


figure 3-15 Connecting cables to the MIQ module

- 3 Screw the cable gland (pos. 1 in figure 3-15) with the sealing ring (pos. 2) into the module housing.
- 4 Loosen the cap nut (pos. 3 in figure 3-15).
- 5 Feed the cable through the cable gland into the module housing.
- 6 Connect the cable ends to the terminal strip. At the same time, look out for the designations of the terminals (red / shield / green).

- 7 Tighten the cap nut (pos. 3 in figure 3-15).
- 8 Check the position of the SN terminator switch and correct it if necessary (see section 3.10.1).
- 9 Close the MIQ module.

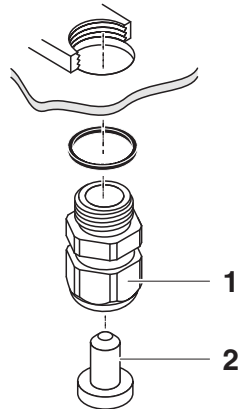


figure 3-16 Closing the cable opening

- 1 Coupling ring
- 2 Blind plug

- 10 Screw the remaining cable glands with the sealing rings into the remaining free openings and close them with the enclosed blind plugs (pos. 2 in figure 3-16) and tighten the cap nuts (pos. 1) if they are not used.

Installation with conduits



Cables in conduits can be connected with a conduit adapter available as an accessory (for details, see the operating manual of the flexible conduit adapter CC-Box).

3.6.4 Connecting IQ sensors

- Materials required**
- 1 x SACIQ connection cable (see chapter 11 ACCESSORIES AND OPTIONS)
 - 1 x cable gland with seal

The module end of the connection cable already has the sheath removed in the factory and all the wires are fitted with wire end sleeves.

- Tools**
- Phillips screwdriver
 - Small screwdriver.

Differentiating IQ sensors of the same type in the system

For the simpler correlation of measured value and measurement location, the system provides the option of giving each IQ sensor a user-defined name (see section 5.4.1). This name appears on the measured value display.

When the IQ sensor is delivered, the name is identical with the serial number. Therefore, after the initial commissioning, IQ sensors of the same type can only be differentiated by the serial number that appears on the measured value display. In order to prevent confusing the IQ sensors when assigning the name, you can proceed according to one of the two methods:

- Note the serial number of the IQ sensor at the respective measurement location before installation. Then, install all IQ sensors. After the commissioning, open the list of sensors on the controller. Then assign a suitable sensor name using the sensor type and the noted serial number.
- Disconnect the IQ sensors of the same type from the connection cables before commissioning the system. Then, put the system into operation. After the commissioning, connect the IQ sensors individually to the SACIQ connection cable. To do so, proceed step-by-step sensor for sensor. After each newly connected IQ sensor, select the *Edit list of sensors* menu on the terminal and assign a suitable sensor name to the sensor.



The list of sensors and the assignment of sensor names is described in section 5.4.1 on page 123.

Connect the SACIQ cable to the MIQ module


The connection of the SACIQ cable to the terminal strip of an MIQ module is described in section 3.6.3 (see CONNECTING THE CABLES, page 56).



The SACIQ sensor connection cable may only be connected to the SENSORNET connections. No wire of the cable may be connected with an external electrical potential. Otherwise, malfunctions could occur.

Connecting the sensor to the connection cable

- 1 Remove the protective caps from the plug connections of the IQ sensor and SACIQ sensor connection cable and keep them safe.

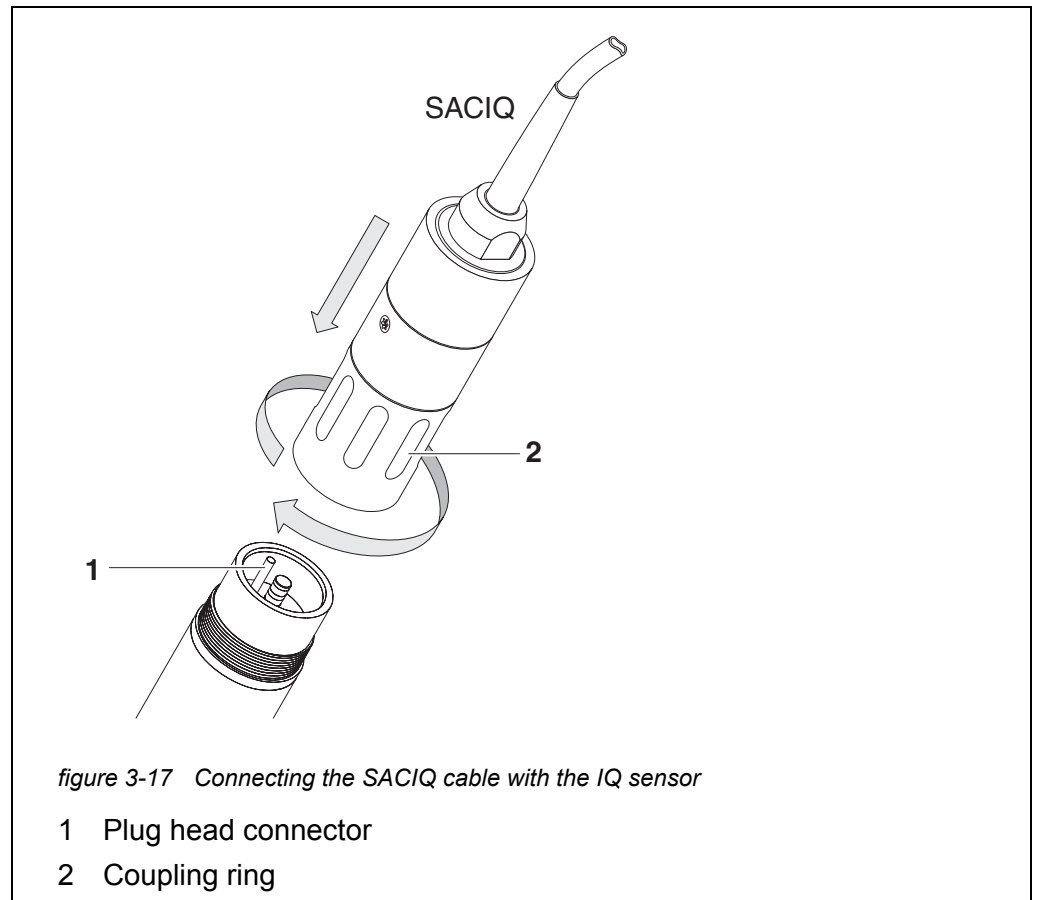

- 2 Plug the socket of the SACIQ sensor connection cable onto the plug head connector of the IQ sensor. At the same time, rotate the socket so that the pin in the plug head connector (1) clicks into one of the two holes in the socket.
- 3 Then, screw the coupling ring (2) of the IQ sensor connection cable on the IQ sensor up to the stop.



For further instructions on the mounting of IQ sensors at the application location, please see the respective manuals (immersion depths, etc.).

3.6.5 Installing terminal components

The terminal component is the operating and control unit of the IQ SENSOR NET. It serves as an input and output device and is necessary to operate the IQ SENSOR NET.

You can install the following terminal components:

- TerminalMIQ/TC 2020 3G
- Terminal MIQ/TC 2020 XT

The terminal component is installed on the lid of any free MIQ module.


The MIQ/TC 2020 3G, configured as a terminal, is docked on the lid of a free MIQ module.

If the MIQ/TC 2020 3G is configured as a terminal/controller, the MIQ/TC 2020 3G, unlike a mobile terminal (e.g. MIQ/TC 2020 3G configured as a terminal), may not be removed during active operation. To protect against any inadvertent removal, the MIQ/TC 2020 3G can be secured with a locking screw.

Materials required Safety screw
(protection against inadvertent removal of the terminal component)

Tools Phillips screw driver
(to tighten the safety screw)


Docking the terminal component

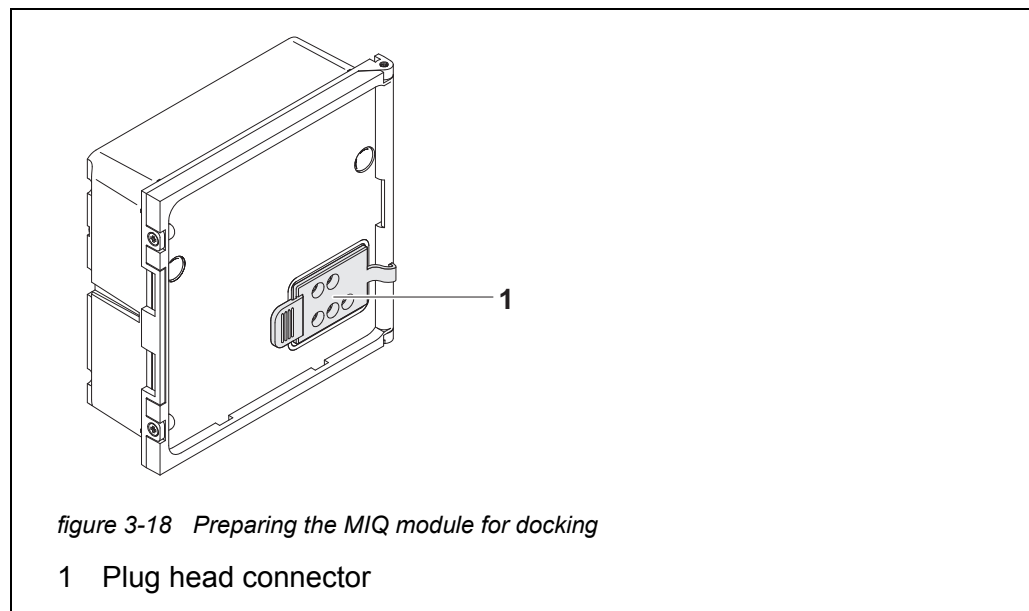

- 1 Pull the cover off the contacts (pos. 1 in figure 3-18) on the lid of the MIQ module.



For the temporary docking of a mobile terminal, do not remove the whole contact cover. Leave it hanging on the side of the MIQ module. After removing the terminal, replace the cover again to protect the contacts.

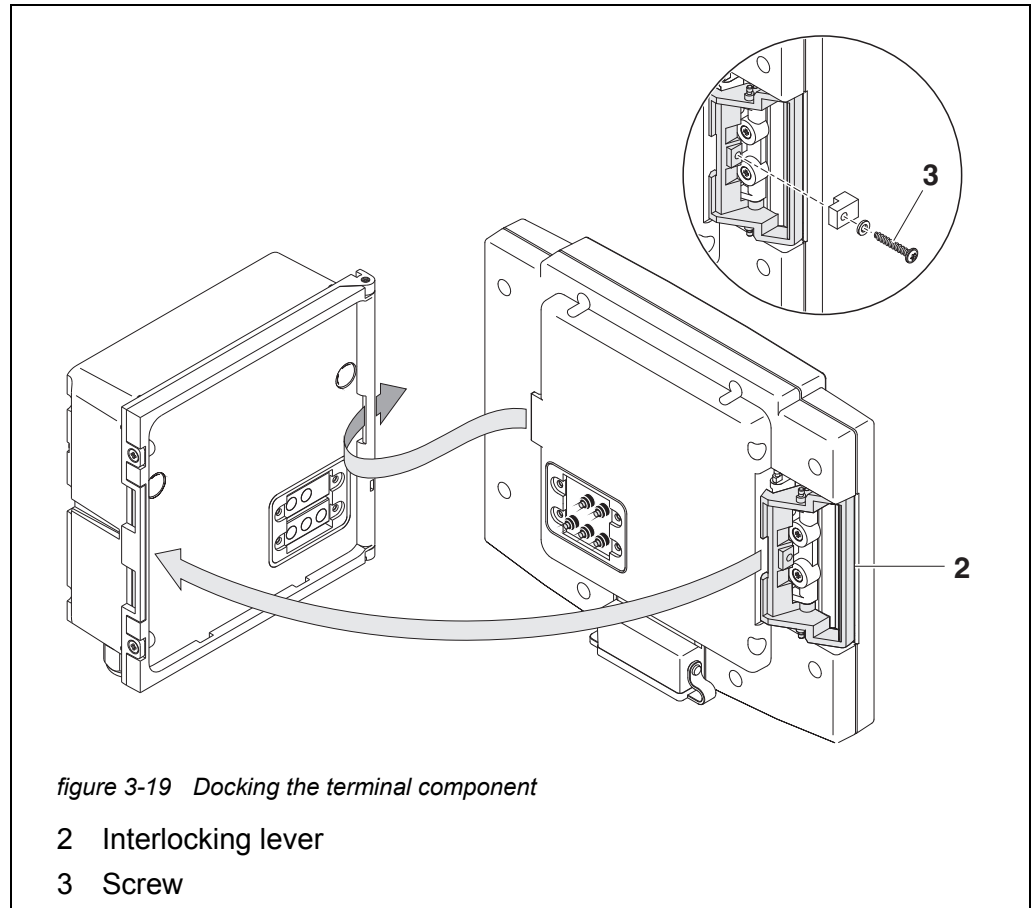**CAUTION**

Risk of injury due to spring tension.

Fingers may be trapped and crushed.

Do not put your fingers under the interlocking lever while it is pulled back.

- 2 Disconnect any USB devices from the USB interface of the terminal component.
The terminal only starts correctly if no USB devices are connected.
- 3 Attach the terminal component to the module lid. To do so, insert the flap on the back of the terminal into the slot on the door hinge of the MIQ module. Then, pull back the interlocking lever (pos. 2 in figure 3-19), place the terminal completely on the MIQ module and release the interlocking lever.



To dock the terminal component tightly onto the module lid, the interlocking lever is fixed in position with a strong spring.

- 4 To protect any inadvertent removal of the terminal component, fix the interlocking lever in place with the screw (pos. 3 in figure 3-19).

Configuring the MIQ/TC 2020 3G as a mobile terminal

During the commissioning of the MIQ/TC 2020 3G on the IQ SENSOR NET a prompt appears as to whether the MIQ/TC 2020 3G should work as a terminal or as a controller. Select *Terminal*: (see section 3.10.2).

3.7 Installation of the MIQ modules at the installation location

3.7.1 General information

The IQ SENSOR NET system has a comprehensive program of mounting accessories, which can be used to adapt the installation to the most varied requirements.



MIQ modules installed outside must always be protected by a sun shield against the effects of the weather (snow, ice and direct solar radiation). Otherwise, malfunctions can result. Always mount MIQ modules vertically. Do not under any circumstances install MIQ modules without rain protection with the lid facing upwards (danger of retained humidity and penetration of moisture).

Installation options

The most important types of installation for MIQ modules and module stacks are described in the following chapters:

- **Mounting on a mounting stand with the SSH/IQ sun shield:**
The SSH/IQ sun shield provides enough space for one unit of up to three stacked MIQ modules and a docked terminal (section 3.7.2).
- **Mounting on the SD/K 170 sun shield**
The SD/K 170 sun shield provides enough space for a single MIQ module with a docked terminal. The sun shield can be mounted on round or square section pipes (e.g. rails) with the aid of the MR/SD 170 mounting kit (section 3.7.3).
- **Wall mounting:**
The back MIQ module of a module stack or a single MIQ module is permanently screwed to a wall. For wall mounting, use the WMS/IQ mounting set (see chapter 11 ACCESSORIES AND OPTIONS).
- **Panel mounting:**
The front MIQ module of a module stack or a single MIQ module is installed in the aperture of a panel. The aperture dimensions are 138 x 138 mm + 1 mm (maximum thickness 10 mm) according to DIN 43700 or IEC 473

(section 3.7.4).

- **Top hat rail mounting:**

The back MIQ module of a module stack or a single MIQ module is mounted on a 35 mm top hat rail with the aid of a bracket in accordance with EN 50022, e.g. in a control cabinet. The connection can be released again with one simple movement (section 3.7.5).



CAUTION

No contact base may be mounted on the back of the module (danger of short-circuit!) if the module is mounted on a wall, a sun shield, or a top hat rail.

3.7.2 Mounting on a mounting stand with the SSH/IQ sun shield

Materials required

- SSH/IQ sun shield (see chapter 11 ACCESSORIES AND OPTIONS).

Tools

- 4 mm set screw wrench
- Phillips screwdriver.

Mounting the sun shield on a mounting stand


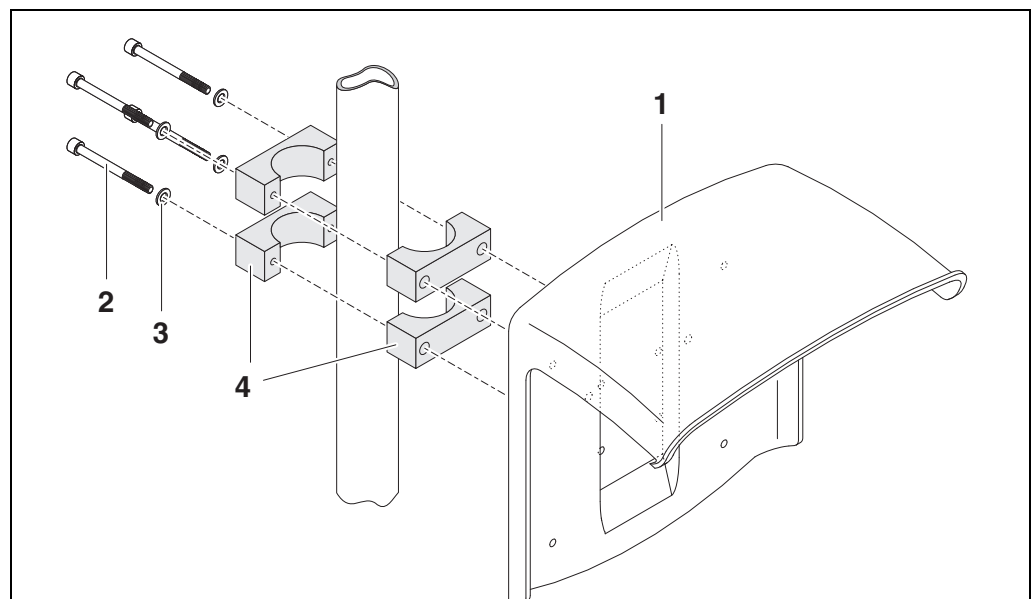


figure 3-20 Mounting the SSH/IQ sun shield on a mounting stand

- 1 Sun shield
- 2 Hexsocket head screws
- 3 Plain washers
- 4 Clamps

- 1 Screw the sun shield (pos. 1 in figure 3-20) with the four hexsocket head screws (pos. 2), the washers (pos. 3) and the clamps (pos. 4) at the required height on the mounting stand from the back.

Premounting the ISO blind nuts

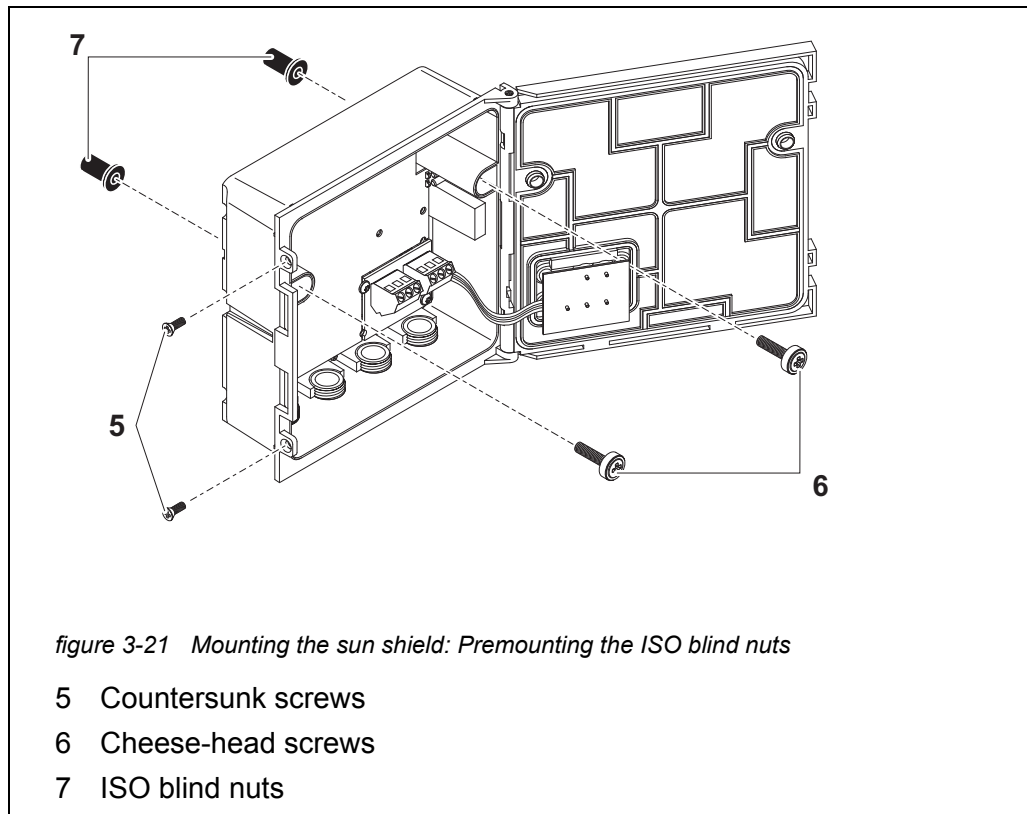

- 2 Remove the two countersunk screws (pos. 5 in figure 3-21) and swing open the module lid.
- 3 Insert the cheese-head screws (pos. 6 in figure 3-21) with the plastic washers in the drilled mounting holes and loosely screw in the ISO blind nuts (pos. 7).

Mounting the MIQ module under the sun shield

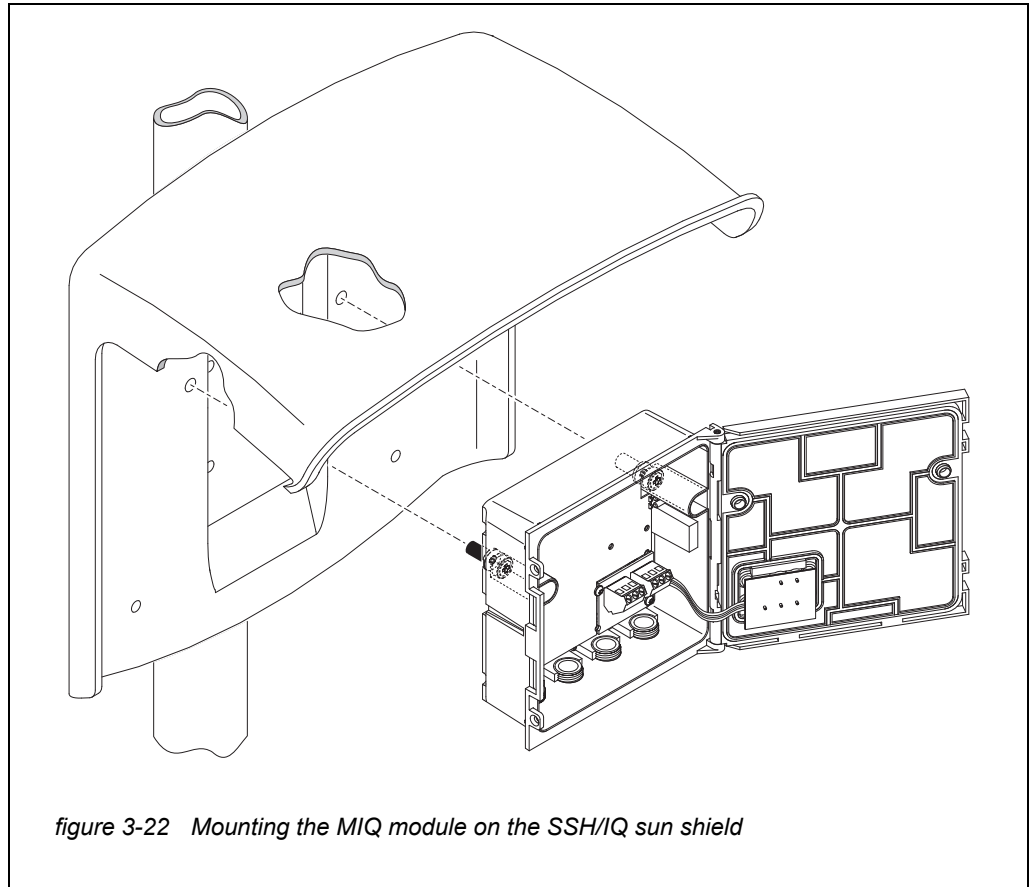


figure 3-22 Mounting the MIQ module on the SSH/IQ sun shield

- 4 Position the MIQ module on the sun shield and fix it into place with the two screws (pos. 6 in figure 3-21).
- 5 Close the module lid and fix it with the two countersunk screws (pos. 5 in figure 3-21).

3.7.3 Mounting under the SD/K 170 sun shield

If a single MIQ module is to be installed outside, it must be provided with a sun shield that protects it against the effects of weather. The SD/K 170 sun shield can be mounted directly on a wall, on a mounting stand or on a railing. The MR/SD 170 mounting kit is also required for mounting on a mounting stand or railing.




How to mount the sun shield at the installation location is described in the instructions for the sun shield or mounting kit.

Materials required

- SD/K 170 sun shield (see chapter 11 ACCESSORIES AND OPTIONS)
- The MR/SD 170 mounting kit is also required for mounting the sun shield on a mounting stand or railing (see chapter 11 ACCESSORIES AND OPTIONS).

Tools ● Phillips screwdriver.

**Mounting the
MIQ module under
the sun shield**

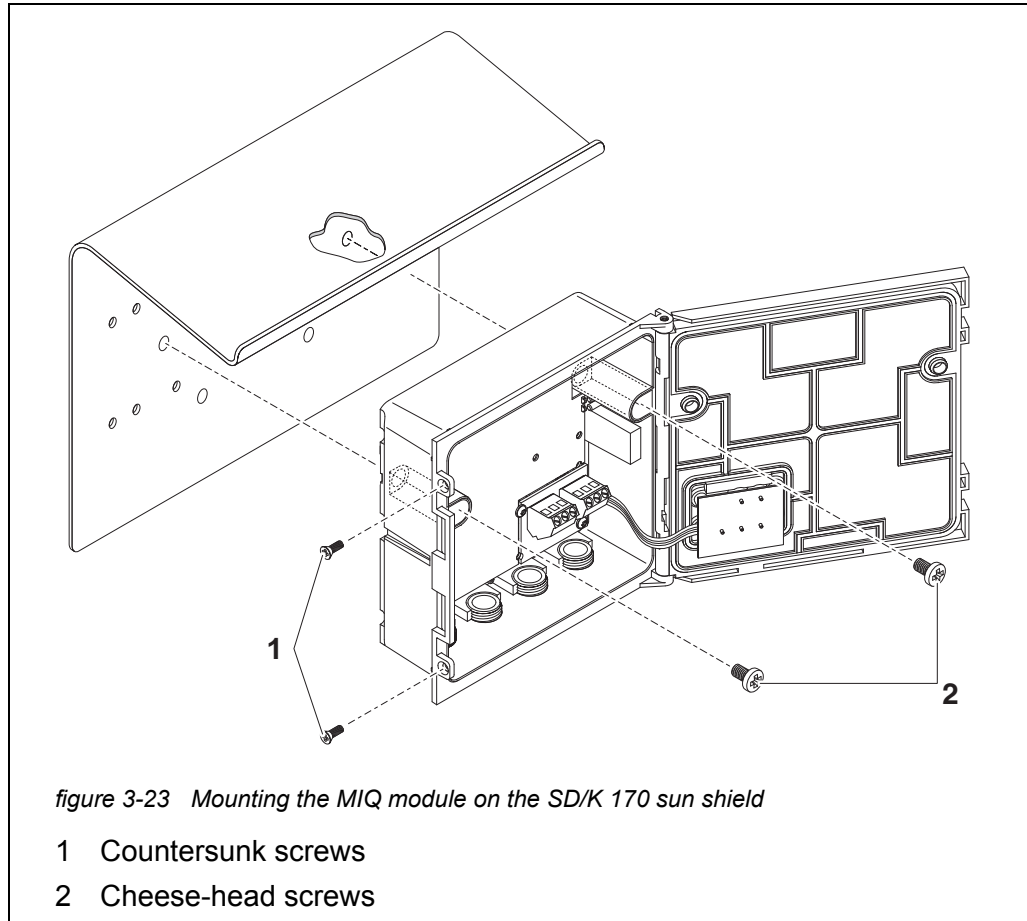

- 1 Remove the two countersunk screws (pos. 1 in figure 3-23) and swing open the module lid.
- 2 Position the MIQ module on the sun shield and fix it into place with the two screws (pos. 2 in figure 3-23).
- 3 Close the module lid and fix it with the two countersunk screws (pos. 1 in figure 3-23).

3.7.4 Panel mounting



The space required on the panel for a module stack is given in the dimension drawings in section 10.3.




The front MIQ module of the preassembled module stack must be removed in order to install the stack. After the installation of the front MIQ module, the remaining part of the stack can be added to the installed MIQ module (see section 3.6.2 - Variant 2).

Materials required ● PMS/IQ kit for panel mounting (see chapter 11 ACCESSORIES AND OPTIONS).

Tools ● 3 mm set screw wrench (contained in the panel installation kit).

Mounting the MIQ module on a panel

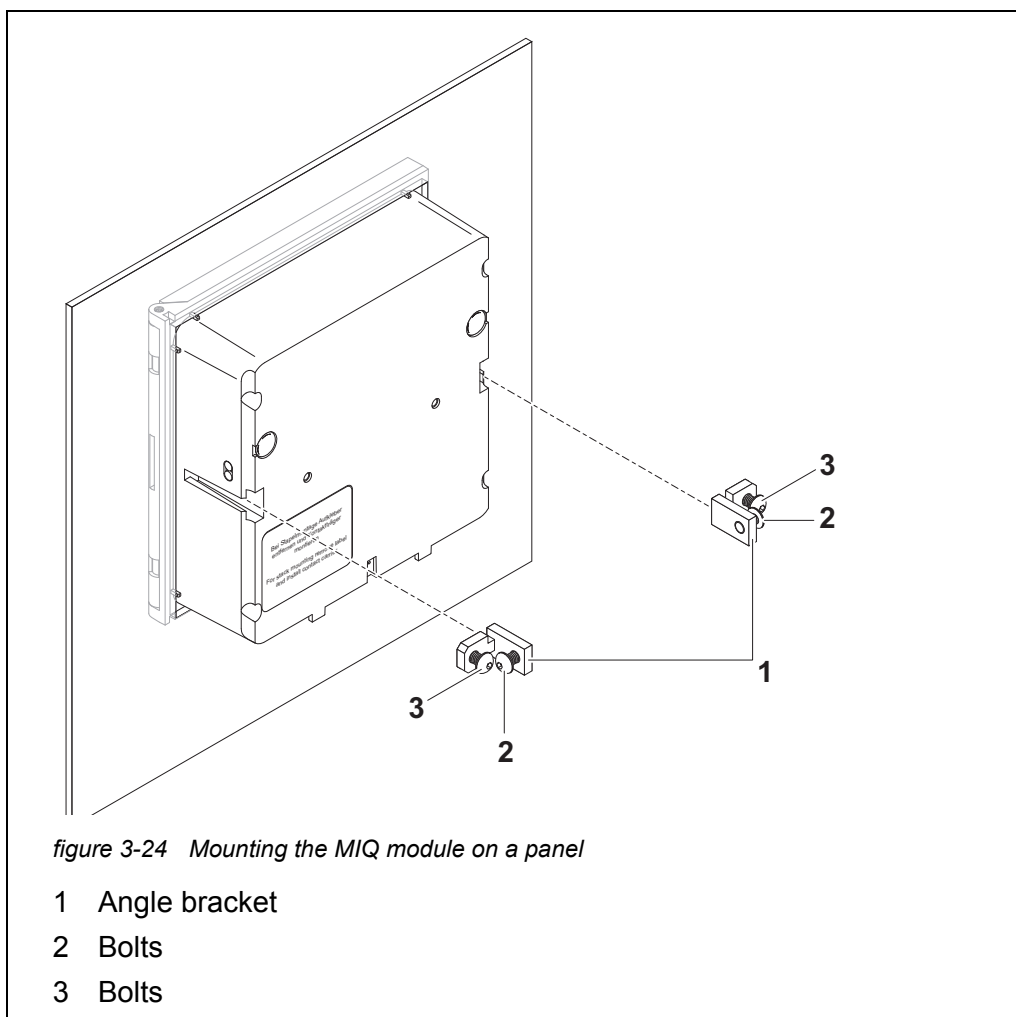

- 1 Insert the MIQ module in the panel aperture from the front.
- 2 Slightly unscrew the screws (pos. 2 and 3) of the two angle brackets (pos. 1 in figure 3-24), but do not remove them.
- 3 Push in the two angle brackets - as shown in figure 3-24 - into the lateral guides of the MIQ module up to the stop.


- 4 Tighten the screws (pos. 2).
- 5 Screw in the screws (pos. 3) until the screws rest snugly against the panel.

3.7.5 Top hat rail mounting

Materials required ● THS/IQ kit for top hat rail mounting (see chapter 11 ACCESSORIES AND OPTIONS).

Tools ● Phillips screwdriver.

Mounting the MIQ module on a top hat rail

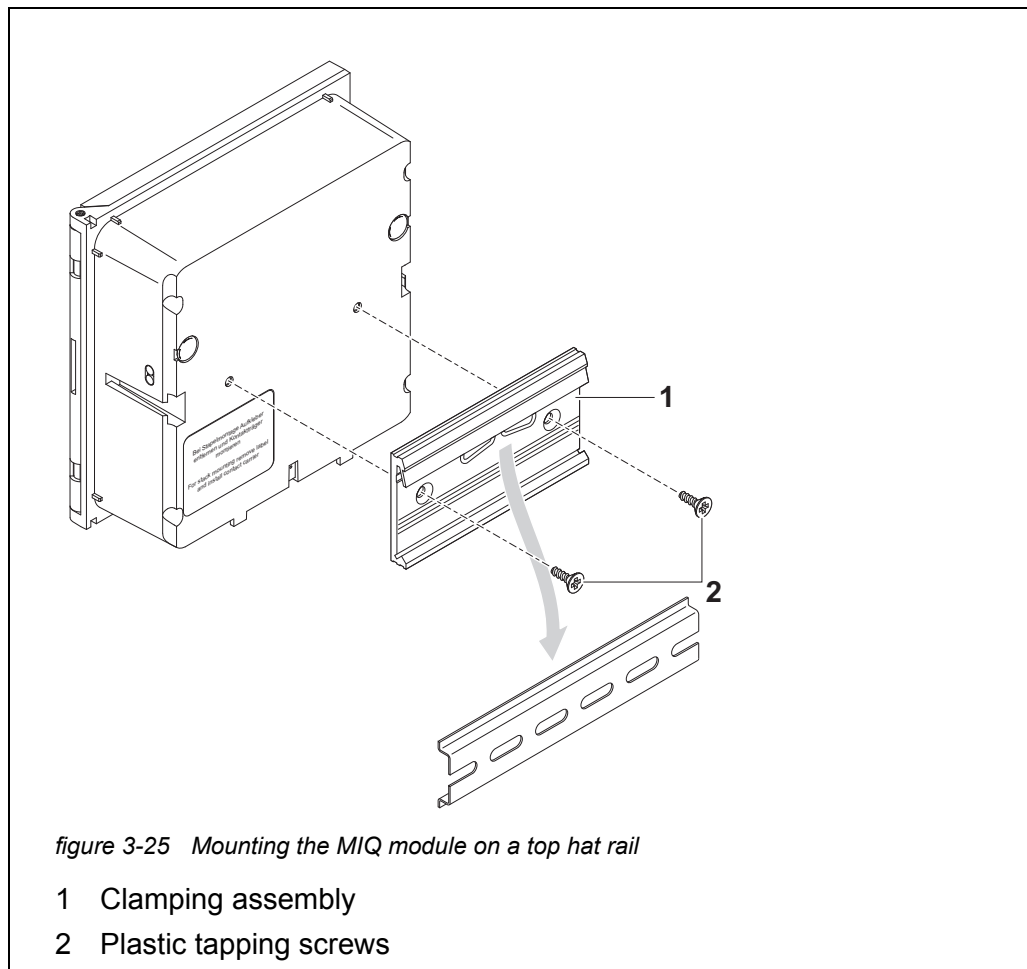

- 1 Screw the clamping assembly (pos. 1 in figure 3-25) onto the back of the MIQ module with the two plastic tapping screws (pos. 2).
- 2 Attach the MIQ module onto the top hat rail from above using the clamping assembly and press against the rail until the clamping assembly clicks into place. The MIQ module can be moved sideways afterwards.


- 3 To unhook the MIQ module, press it downwards and pull it forwards at the bottom.

3.8 Electrical connections: General instructions


Cable glands

All electric cables are fed from below via prepared openings in the enclosure of the MIQ modules. Cable glands with different clamping ranges are included with most MIQ modules to provide sealing between the cable and enclosure as well as for strain relief. Select the matching cable gland for the respective cable diameter:

- **Small**, clamping range 4.5 to 10 mm. This cable gland is suitable for all IQ SENSOR NET cables (including earth cable after stripping the outer insulation, see section 3.6.3) and IQ SENSOR NET sensor connection cable.

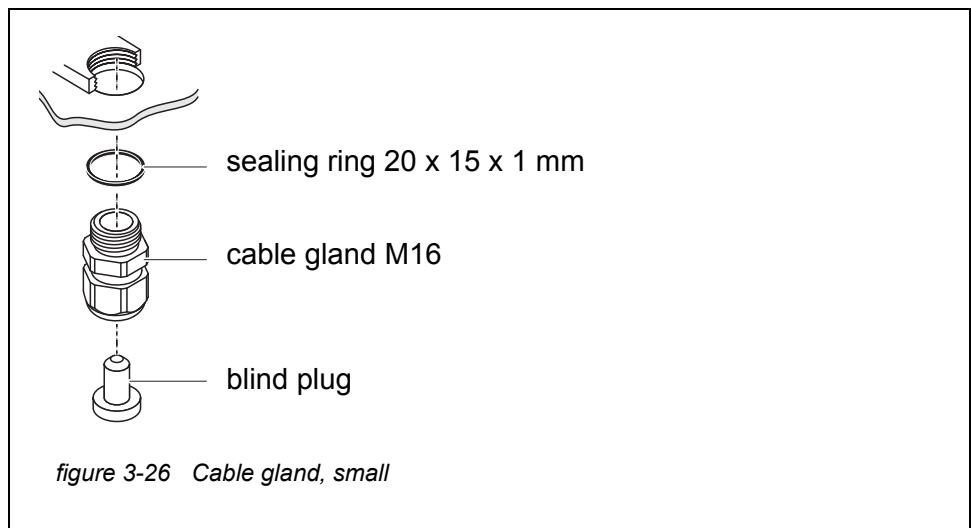

- **Large**, clamping range 7 to 13 mm. This cable gland is required for cable sheaths with an outside diameter of more than 10 mm and is screwed into the enclosure via an extension piece.

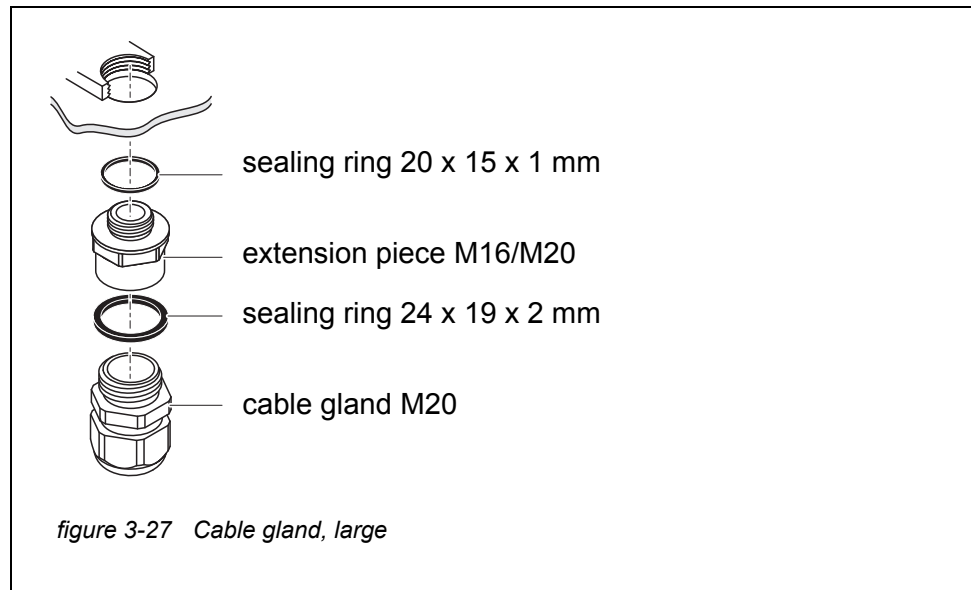

If necessary, you can order other sizes of cable gland (see chapter 11 ACCESSORIES AND OPTIONS).

General installation instructions

Observe the following points when attaching connecting wires to the terminal strip

- Shorten all wires to be used to the length required for the installation
- Always fit all the ends of the wires with wire end sleeves before connecting them to the terminal strip
- Any wires that are not used and project into the enclosure must be cut off as closely as possible to the cable gland.
- Screw a small cable gland with sealing ring into each remaining free opening and close it with a blind plug.



WARNING

No free wires are allowed to project into the housing. Otherwise, there is a danger that areas safe to contact could come into contact with dangerous voltages. This could result in life threatening electric shock when working with the IQ SENSOR NET. Always cut off any wires that are not in use as closely as possible to the cable gland.

3.9 Connecting the voltage supply

How to connect the power supply is described in detail in the operating manual of the MIQ power supply module (e.g. MIQ/PS, MIQ/24V).



WARNING

If the power supply is connected incorrectly, there may be danger to life from electric shock.

When installing the power supply, observe the safety instructions in the operating manual of the MIQ power supply module (e.g. B. MIQ/PS, MIQ/24V).

3.10 Commissioning

3.10.1 Topology and terminator switch

For failure-free operation, the terminator switches (terminating resistors) must always be set to ON on two MIQ modules. On which modules this has to be done can be taken from the topology of the IQ SENSOR NET system:

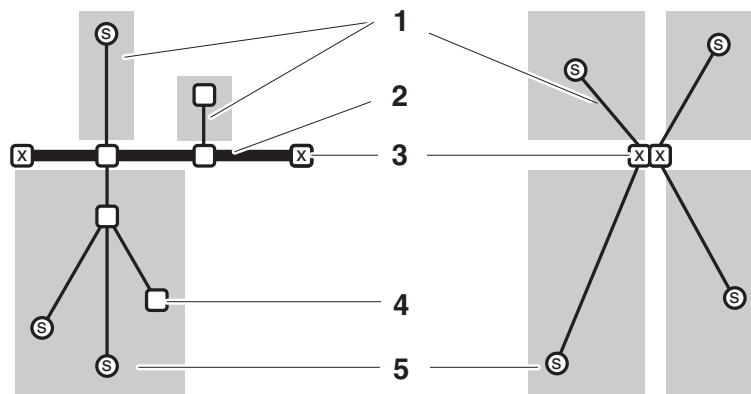


figure 3-28 Correct setting of the terminator switches

- 1 Branch lines
- 2 Main line ("longest cable section")
- 3 MIQ/... with terminator ON
- 4 MIQ/... mit Terminator OFF
- 5 Sensor


Definitions	Main line	<u>Longest</u> cable section with terminator switches at its ends. The terminator switches on both ends must be set to ON. If all MIQ modules are at one location, i. e. in a module stack, the length of the main line is zero (star-shaped wiring).
	Branch line	All lines that branch from the main line. Branch lines can be branched further.

- Installation rules**
- The sum of the lengths of all branch lines may not be more than 500 m.
 - The length of a single branch line including the sub-branches may not be more than 250 m.
 - The sum of the lengths of all lines (main line and branch lines) may not be more than 1000 m. This length can be restricted due to the first two rules, if
 - a.) the sum of the length of all branch lines is huge, and
 - b.) the main line is very short.
 Greater systems that exceed the maximum line length can be installed with the aid of the signal amplifier module MIQ/JBR.

Example of determining the main line

The following figure shows the length of the main line L made up of the partial lengths L1, L2 and L3 as the cable section L4 is shorter than L3:


Length of the main line = $L1 + L2 + L3$

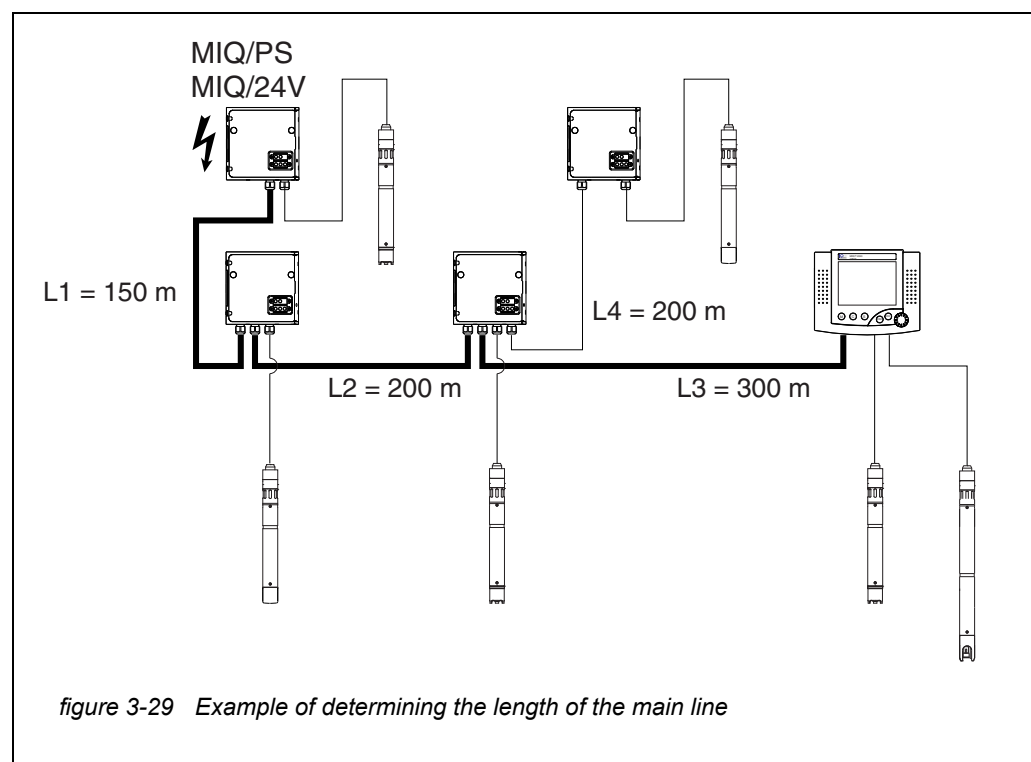

Example: star-shaped wiring

Here, the length of the main line is zero, i.e. all lines are branch lines -> the sum of all lines must not be more than 500 m (individual branch line max. 250 m).

Terminator switches Terminator switches are located in each MIQ module between the two SENSORNET connections on the right of the terminal strip (designation "SN TERMINATOR"):

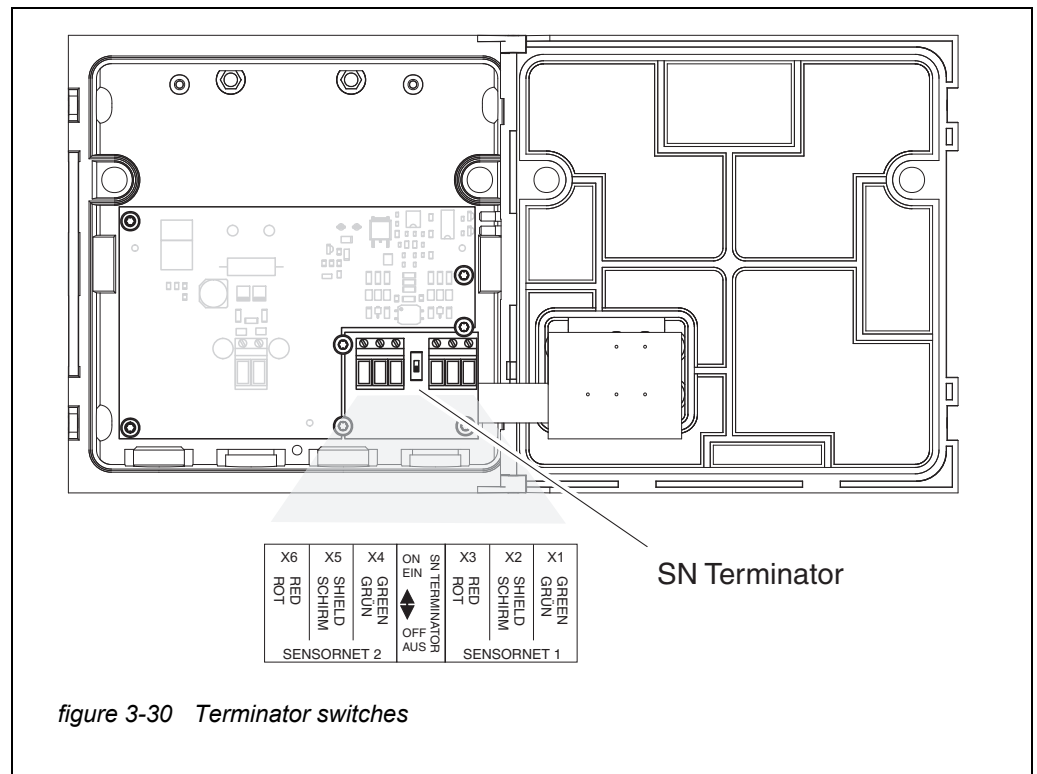

3.10.2 Start checklist and system start

Before starting the system, carry out the system check using the following checklist. Always carry out the check:

- before the initial commissioning
- before any further commissioning if the system has been previously extended or modified.

Start checklist:

- 1 Is the sum of the power consumption of the components smaller than the sum of the power delivery of all MIQ power supply modules (see section 3.2.1)?
- 2 Are all IQ SENSOR NET components correctly connected with one another (see section 3.6)?
- 3 Are all SN terminator switches correctly set (see section 3.10.1)?
- 4 Is the MIQ power supply module correctly connected to the voltage supply?
- 5 Do the line voltage and line frequency agree with the data on the name plate of the MIQ power supply module?
- 6 Are all IQ sensors ready to measure?

Starting the system

Switch on the voltage supply of the MIQ power supply module(s).



Select your system language during the first system start. The selected system language can be changed in the *Settings* menu at any time.

Configuration of the MIQ/TC 2020 3G

During the commissioning of the MIQ/TC 2020 3G on the IQ SENSOR NET a query appears as to whether the MIQ/TC 2020 3G should work as a controller or only as a terminal. Select the desired function for each MIQ/TC 2020 3G.

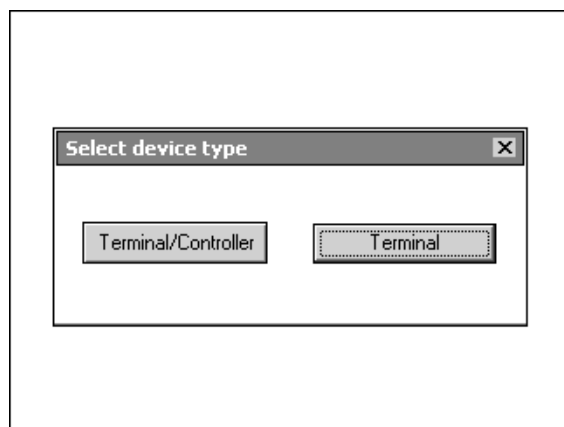


figure 3-31 Selecting the instrument type

The MIQ/TC 2020 3G then tries to register on the IQ SENSOR NET with the selected functionality. Note, however, that only one controller can be active in an IQ SENSOR NET.

For details for the configuration of the MIQ/TC 2020 3G, see section 1.4.



During the first system start, select the configuration of the MIQ/TC 2020 3G. The selected configuration can be changed by resetting the system to the default condition and a restart.

Initial start phase

In the initial start phase, all IQ SENSOR NET components are automatically registered on the MIQ/MC3 controller module and the terminal is initialized. The system then performs a self test. This process can take several seconds. During this period, the following display appears:


 
CONTROLLER					
Initialization					
checking internal software...done checking hardware...done reading EEPROM...done waiting for data...					
please wait...					

figure 3-32 Display during the initialization process

Second start phase

 As soon as the terminal is successfully initialized, the measured value display appears (fourfold display). In the case of IQ sensors that are not yet providing measured values, "Init" appears temporarily






CONTROLLER		30 July 2016	10 47			
Values: location						
01	3.90		pH	25.0 °C 99160001		
02	1.1		mg/l NH4-N	22.8 °C 04460001		
03	29.1		mg/l NO3-N	22.8 °C 04460001		
Next sensor   Display/Options ⁰⁸						

figure 3-33 *Display after initialization of the terminal*



   Assign a name to each IQ sensor after putting it into operation for the first time so you can identify it more easily. How to assign a sensor name is described in section 5.4.1 on page 123.

If the system start failed, see chapter 9 WHAT TO DO IF

3.10.3 Checking the voltage supply

This test should always be performed:

- after the initial commissioning
- after any system extension or modification.


This test checks the power supply and the communication of the components after the system has been started.

Test procedure

- 1 Check the status of the LEDs on the MIQ power supply modules (figure 3-34):
 - Yellow lights up: Operational voltage OK
 - Red lights up: The MIQ power supply module is too heavily used. Operation is possibly not stable.
 - No LED lights up: Operational voltage too low or not available.
- 2 Dock any available mobile terminals MIQ/TC 2020 3G on the system as far away as possible from an MIQ power supply module (i.e. test the power supply in the most unfavorable possible conditions).
- 3 Check the status of the LEDs on all MIQ modules (except for the MIQ power supply modules, see step 1) (figure 3-34):
 - Yellow lights up: Operational voltage OK
 - Red lights up: Operational voltage in warning range. The component is fully functional. However, any further slight drop in voltage can lead to failure
 - No LED lights up: Operational voltage too low or not available.



The relationship between the supply voltage, the LED status and the log book entries is described in the section 10.1 GENERAL SYSTEM DATA.

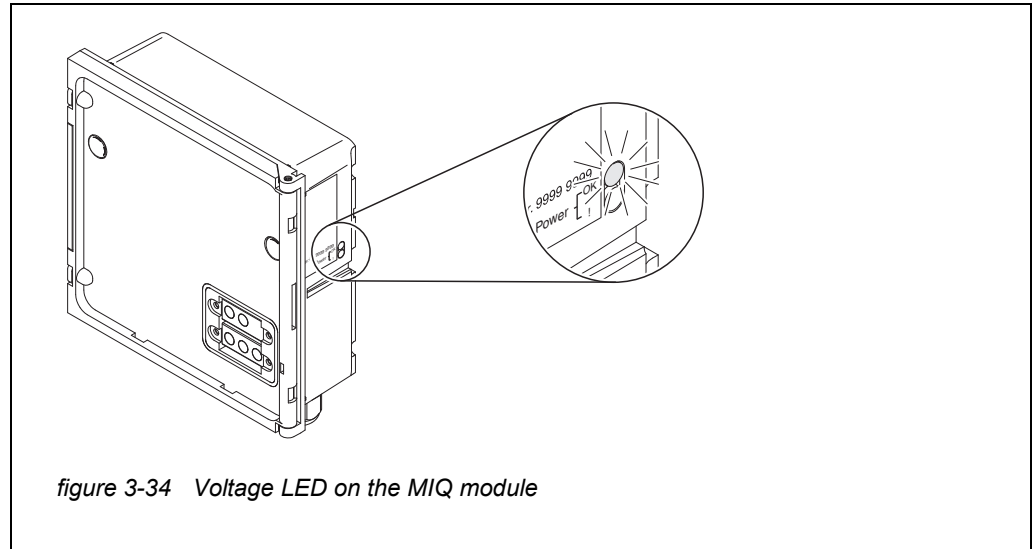

You can measure the voltage that is actually available at the MIQ modules or IQ sensors (see section 9.2.2).

- 4 Wait until the system start is completed and the measured value display appears.
- 5 If necessary, select another display language (see section 5.1 SELECTING THE LANGUAGE).
- 6 Check that all the IQ sensors are listed in the measured value display.
- 7 Check that all the MIQ output modules are listed in the *Edit list of outputs* menu (see section 5.8 EDITING THE LIST OF OUTPUTS).
- 8 If a component is not listed, carry out troubleshooting according to chapter 9 WHAT TO DO IF
- 9 Open the log book and acknowledge the messages. In the case of error messages, follow the instructions for clearing the error. For more details on the log book, see section 4.5.

3.11 System extension and modification

The modular structure of the IQ SENSOR NET system makes it easy to carry out subsequent extensions and modifications. The system automatically identifies new active modules and includes them in the list of modules. Added IQ sensors immediately deliver measured values without the necessity for special settings.

**WARNING**

If the system is switched on while the MIQ/PS power supply module is open, there is a danger to life due to possible hazard of electric shock from line voltage. There is also a danger to life inside the relay output modules (e.g. MIQ/CR3, MIQ/R6) if voltages are applied to the relay contacts that may present a hazard of electric shock. Before opening the MIQ modules, switch off the system and all external voltages that present a hazard of electric shock and secure the system against being inadvertently switched on again.

Installation instructions

Note the following points in any system extension or modification:

- Before any extension or modification, check that the planned number of MIQ power supply modules is sufficient for the planned installation (see section 3.2.1 SYSTEM PLANNING)
- Before beginning the installation tasks, always switch off the system. Also, switch off all external voltages
- Clean the MIQ module stack to remove the worst of any dirt before taking it apart or opening it (see section 8.2 CLEANING)
- Before mounting the stack, check the contacts on the front and back of any MIQ modules that were already in use somewhere else. Clean any dirty contacts
- After any change to the system, check the setting of the SN terminator switches and adjust it if necessary (see section 3.10.1 TOPOLOGY AND TERMINATOR SWITCH).

Installing new components

Install new components as described in section 3.6 CONNECTING SYSTEM COMPONENTS. Then put the system into operation again (section 3.10 COMMISSIONING). Active modules are automatically recognized by the controller and included in the corresponding module lists.



If a new component is not included, the maximum number of datasets (active and inactive datasets) may be exceeded.

The maximum number of datasets for IQ sensors is 20. For MIQ output modules, the maximum number of datasets (active and inactive datasets) is 48.

When this number of datasets is already stored, no further component can be installed.

If necessary, an inactive dataset has to be erased to make an extension possible (how to erase inactive datasets is described in section 5.4.3 or section 5.8.2).



New modules are first registered on the system when the measured value display is opened.

**Replacing
components**

The replacement of components is described in detail in section 9.4 REPLACING SYSTEM COMPONENTS.

4 Operation

4.1 Terminal

The IQ SENSOR NET is operated via a terminal. For this, the following options with the same functional range are available:

- MIQ/TC 2020 3G, configured as (mobile) terminal or as (permanently installed) controller. Operation is carried out with keys and display.
- IQ WEB CONNECT, if the IQ SENSOR NET is connected to a network via the Ethernet interface. Operation is done with an end device (e.g. PC, tablet PC, smartphone, ..) via a web browser.



The display and keys of the MIQ/TC 2020 3G appear on the IQ WEB CONNECT as a graphical user interface. Both terminals are operated in exactly the same way.

On a terminal, you can

- Display measurement results
- Carry out calibration routines
(to carry out a complete calibration procedure, the sensor has to be operated on site)
- Perform system and terminal settings
- Display messages.



To guarantee data safety within the IQ SENSOR NET, access to the following functions is only possible from one terminal at the same time:


- Opening the *Settings* menu
- Starting calibration
- Assigning IQ sensors or MIQ output modules as substitutes.

If one of these functions is already active at another terminal, a note appears on the display.

4.1.1 Overview of the operating elements

The terminal is equipped with a large display for the clear presentation of current measured values, the graph of measured values, status displays and message texts.

Use the 5 keys **<M>**, **<C>**, **<S>**, **<ESC>**, **<OK>** and the arrow keys **<▲▼◀▶>** to operate the IQ SENSOR NET system.

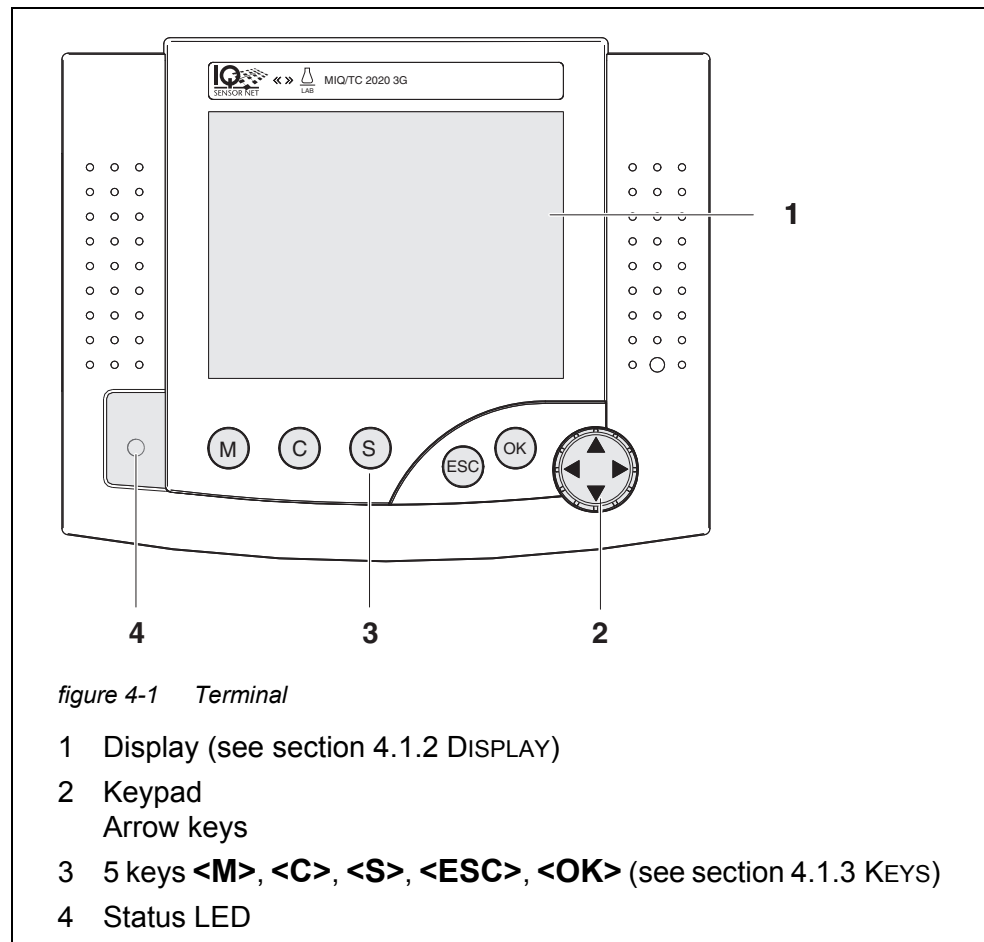

4.1.2 Display

The display contains the following information:

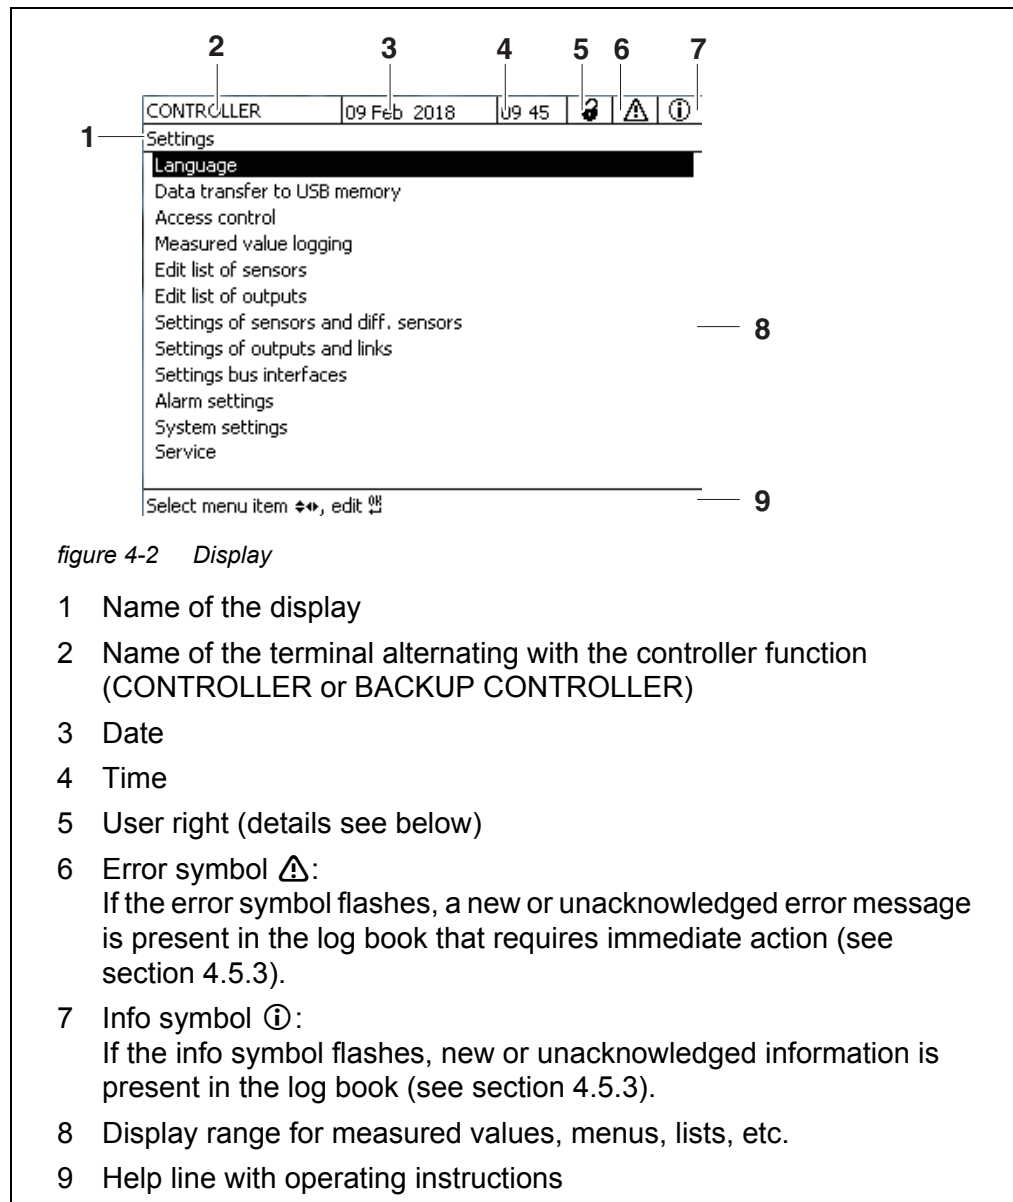


figure 4-2 Display


- 1 Name of the display
- 2 Name of the terminal alternating with the controller function (CONTROLLER or BACKUP CONTROLLER)
- 3 Date
- 4 Time
- 5 User right (details see below)
- 6 Error symbol :
If the error symbol flashes, a new or unacknowledged error message is present in the log book that requires immediate action (see section 4.5.3).
- 7 Info symbol :
If the info symbol flashes, new or unacknowledged information is present in the log book (see section 4.5.3).
- 8 Display range for measured values, menus, lists, etc.
- 9 Help line with operating instructions

Detail on the user right (5)

	<u>Lock open</u> : No access control, settings released System settings can be changed
	<u>Crown</u> : Administrator authorization Configuration and running operation of the system
	<u>Tool</u> : Maintenance authorization Running operation of the system and maintenance activities
	<u>Eye</u> : Monitoring permission Only read permission, no operation of the system

Measured value display

The measured value display contains the following information for each IQ sensor/differential sensor:

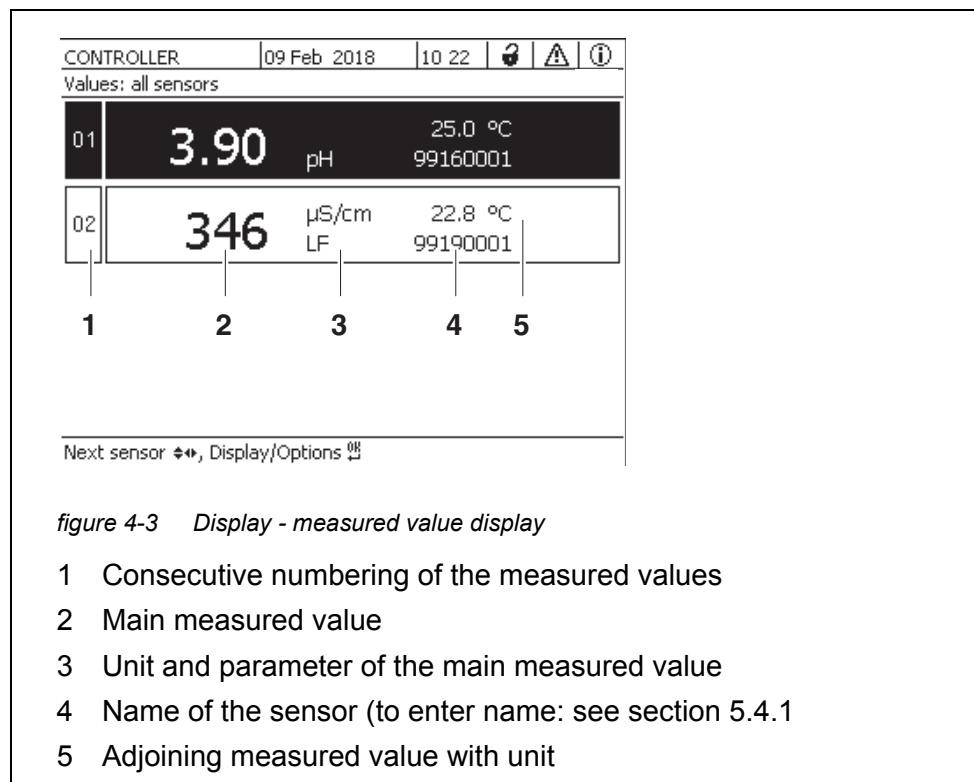**Special displays**

<i>Init</i>	Sensor is being initialized <ul style="list-style-type: none"> ● during commissioning or ● if a new IQ sensor is recognized that is not yet giving measured values
<i>----</i>	Invalid measured value
<i>Cal</i>	Sensor is being calibrated
<i>Clean</i>	Cleaning system active, sensor is offline
<i>Error</i>	Sensor is inactive or defective
<i>OFL</i>	Measuring range undercut or exceeded (overflow)
Display flashes	Sensor in maintenance condition

4.1.3 Keys

Key	Function
<M>	Display measured values
<C>	Start calibration of the IQ sensor selected in the measured value display
<S>	Open the <i>Settings</i> menu
<ESC>	Change to the higher menu levels or abort entries without storing them
<OK>	Confirm selection
<▲▼◀▶> (arrow keys)	Highlight and select: <ul style="list-style-type: none"> ● Menu items ● Entries ● Columns or fields ● Letters or numerals



The selection highlighted with the arrow keys is displayed as white text on a dark background.

4.2 General operating principles

The operation of the IQ SENSOR NET is standardized and user-friendly.

- Select an item with the arrow keys <▲▼◀▶>
 - Highlight individual elements in menus, lists and tables, e.g. menu entries, list elements, columns or fields
 - Select a setting in selection fields
 - Select a character in text entry fields
- Confirm a selection with the <OK> key.
- Break off an action and change to the next higher level with the <ESC> key.
- Start a calibration procedure with the <C> key.
- Switch to the settings with the <S> key.
- Change to the measured value display and break off current actions with the <M> key.



Short operating instructions are given in the help lines on the display.

Examples of the operating principles are given below:

- Navigation in menus, lists and tables (see chapter 4.2.1)
- Entering text and numerical values (see chapter 4.2.2)



If two or more terminals are used in an IQ SENSOR NET, access to the functions **<C>** and **<S>** is blocked when the functions are already being used on another terminal.

4.2.1 Navigating in menus, lists and tables

- 1 Open the *Settings* menu with **<S>**.
Menu appear in the form of a list on the display, e.g. the *Settings* menu shown here.

CONTROLLER	30 July 2016	10:14			
Settings					
Language					
Data transfer to USB memory					
Access control					
Select measured values of location					
Measured value logging					
Edit list of sensors					
Edit list of outputs					
Settings of sensors and diff. sensors					
Settings of outputs and links					
Settings bus interfaces					
Alarm settings					
System settings					
Service					
Select menu item , edit					

figure 4-4 100 - Settings

- 2 Select a menu item (e.g. *System settings*) with **<▲▼◀▶>**.
Move the highlighting (reverse video display, black background) in the list of menu items with the arrow keys **<▲▼◀▶>**.
- 3 Confirm the menu item (e.g. *System settings*) with **<OK>**.
The display (e.g. *System settings*) opens.
Confirm the selection and move to a new display by pressing the **<OK>** key.

- 4 Return to a higher level with **<ESC>**.
or:
Switch to the measured value display with **<M>**.

4.2.2 Entering texts or numerals

You can assign names to IQ sensors, MIQ output modules, terminals and locations. Example: Entering a sensor name:

- 1 Open the *Settings* menu with **<S>**.
- 2 Select the *Edit list of sensors* menu item with **<▲▼◀▶>**.
- 3 Confirm the *Edit list of sensors* menu item with **<OK>**.
The *Edit list of sensors* display opens. A column is highlighted.
- 4 Select the *Sensor name* column with **<▲▼◀▶>**.
- 5 Confirm the *Sensor name* column with **<OK>**.
A sensor name is highlighted.
- 6 Select a sensor name with **<▲▼◀▶>**.







CONTROLLER		30 July 2016	10:14			
Edit list of sensors						
No.	Model	Ser. no.	Sensor name			
S01	SensolYt700IQ	99160001	99160001			
S05	TetraCon700IQ	99190001	99886699			
S02	TriOxmatic700IQ	01341000	08410001			
S03	VARION A	04460001	08410001			
S04	VARION N	04460001	03270001			
Select  ,  display position/erase sensor 						

figure 4-5 Edit list of sensors

- 7 Confirm the selection with **<OK>**.
The name of the selected sensor is edited.

CONTROLLER		30 July 2016	10:14			
Edit list of sensors						
No.	Model	Ser. no.	Sensor name			
S01	SensoLyt700IQ	99160001	OK			
S05	TetraCon700IQ	99190001	99190001			
S02	TriOxmatic700IQ	01341000	01341000			
S03	VARION A	04460001	04460001			
S04	VARION N	04460001	04460001			
Select , display position/erase sensor						

figure 4-6 Edit list of sensors



The following letters, numerals and special characters can be entered: **AaBb . . Zz0 . . 9µ%&/ () +-=><! ? _ °**.

- 8 Select a letter or numeral with **<▲▼◀▶>**.
- 9 Confirm the letter with **<OK>**.
The character appears behind the last letter.

CONTROLLER		30 July 2016	10:14			
Edit list of sensors						
No.	Model	Ser. no.	Sensor name			
S01	SensoLyt700IQ	99160001	08			
S05	TetraCon700IQ	99190001	99190001			
S02	TriOxmatic700IQ	01341000	01341000			
S03	VARION A	04460001	04460001			
S04	VARION N	04460001	04460001			
Select , display position/erase sensor						

figure 4-7 Edit list of sensors

- 10
 - Add a new character
Select the character to be added with <▲▼◀▶> and confirm with <OK>.
 - or
 - Delete the last character
Select the character with <▲▼◀▶> and confirm with <OK>.
 - or
 - Adopt the name
Select the character with <▲▼◀▶> and confirm with <OK>.
- 11 Repeat steps 8 to 10 until the whole name has been entered.



You can break off entering the name with <ESC>. The old name is retained.

4.3 Access to the IQ SENSOR NET with active access control



Access control is switched off in the delivery condition. No login to the IQ SENSOR NET is required.

As soon as an access control of any type is enabled, access to the IQ SENSOR NET is protected completely or partly.

Access to the system is enabled as follows:

- Connect the electronic key to the USB interface (controller or terminal), if the administrator has enabled this function
- Enter a password

Simple access control



Enter the password for the simple access control with the arrow keys in the menu *Settings / Unlock/lock settings / Unlock settings*.

Extended access control:



In the *Display/Options / Change user rights* menu, enter the password with the arrow keys and confirm with OK.



Extended access control with instrument block:

Press the any button.

In the password query, enter the password with the arrow keys and confirm with OK.



Further details on access control (see section 5.3)

4.4 Display of current measured values

Several options can be selected for displaying the measured values:

- *Measured values (1 sensor)*
The measured value is shown numerically and as a bar graph on the *Measured values (1 sensor)* display (see section 4.4.1)
- *Measured values (4 sensors)*
The *Measured values (4 sensors)* display provides an overview of a maximum of four IQ sensors or differential sensors (see section 4.4.2)
- *Measured values (8 sensors)*
The *Measured values (8 sensors)* display provides an overview of a maximum of eight IQ sensors or differential sensors (see section 4.4.3)
- *Display local values or all values*
Here you can switch between the display of the IQ sensors selected for the measurement location and the display of all the IQ sensors (see section 4.4.6).

Switch between the different types of display as follows:

- 1 Call up the measured value display with **<M>**.
- 2 Open the *Display/Options* menu with **<OK>**.

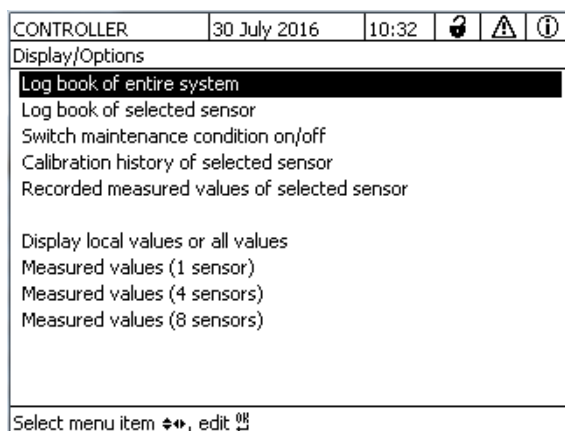


figure 4-8 Display/Options

- 3 Select and confirm a display type with <▲▼◀▶> and <OK>. The selected display type is enabled.

4.4.1 Displaying a single measured value

The measured value is shown numerically and as a bar graph on the *Measured values (1 sensor)* display.

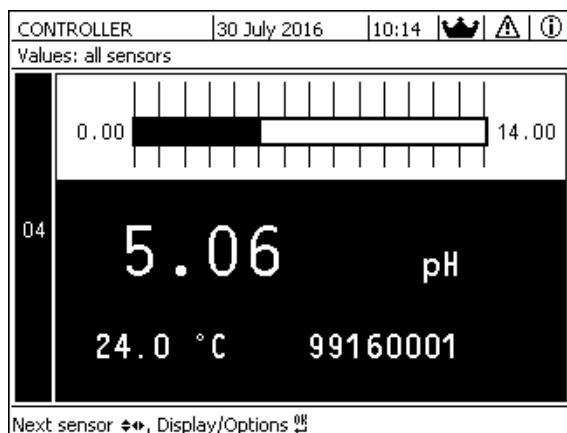


figure 4-9 Values: location -> Measured values (1 sensor)

4.4.2 Displaying four measured values

Up to four measured values of IQ sensors or differential sensors are shown on the display at the same time.




 
 
Terminal 1	15 May 2001	01:38			
Values: all sensors					
01	3.90	pH	25.0 °C	99160001	
02	346	µS/cm LF	22.8 °C	99190001	
03	2.29	mg/l O2	11.7 °C	99010700	
04	1.1	mg/l NH4-N	22.8 °C	04460001	
Next sensor  display options 					

figure 4-10 Values: location -> Measured values (4 sensors)

4.4.3 Displaying eight measured values

Up to eight measured values of IQ sensors or differential sensors are shown on the display at the same time.




 
 
Terminal 1	15 May 2001	01 39			
Values: all sensors					
01	3.90	pH	25.0 °C	99160001	
02	346	µS/cm LF	22.8 °C	99190001	
03	2.29	mg/l O2	11.7 °C	99010700	
04	1.1	mg/l NH4-N	22.8 °C	04460001	
05	29.1	mg/l NO3-N	22.8 °C	04460001	
Next sensor  , display options 					

figure 4-11 Values: location -> Measured values (8 sensors)


4.4.4 Displaying recorded measured values

If the measured value recording has been activated for an IQ sensor (see section 5.12), the temporal course of the recorded measured values can be displayed numerically and graphically.

The following display options are possible:

- *Monthly load of selected sensor* (graphic display)
- *Weekly load of selected sensor* (graphic display)
- *Daily load of selected sensor* (graphic display)

- *Measured value list of selected sensor* (numerical display)

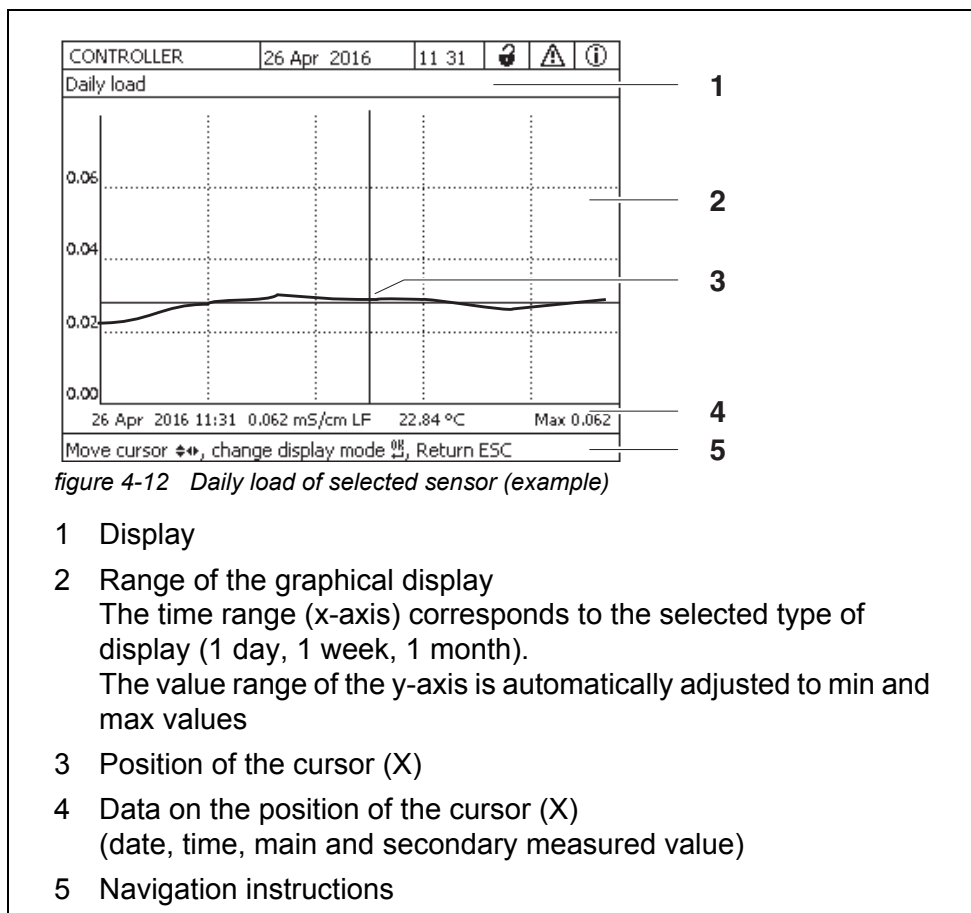

Displaying recorded measured values

- 1 Switch to the measured value display with **<M>**.
- 2 Select an IQ sensor with **<▲▼◀▶>**.
- 3 Open the *Display/Options* menu with **<OK>**.
- 4 Select one of the display types with **<▲▼◀▶>**
 - *Monthly load of selected sensor*
 - *Weekly load of selected sensor*
 - *Daily load of selected sensor*
 - *Measured value list of selected sensor*
and confirm with **<OK>**.
The selected option is displayed.

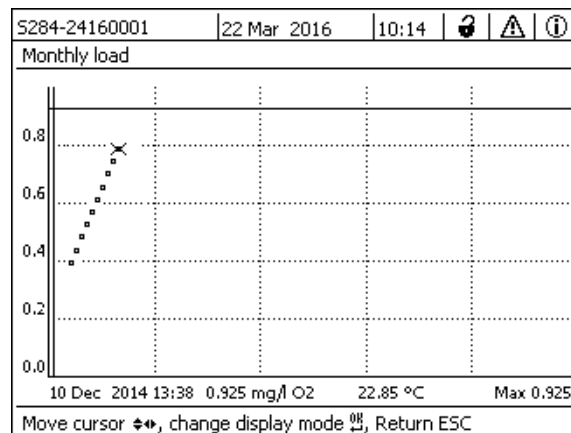


figure 4-13 Monthly load of selected sensor (example)

- 5 Move the cursor (X) along the measured value curve with **<▲▼◀▶>**. The cursor (X) marks the selected measured value.
- 6 Switch to the next display option with a shorter display period with **<OK>**.
or
Switch to the next display option with a longer display period with **<ESC>**.

4.4.5 Transmitting recorded measurement data to a PC

Recorded measured values can be transmitted to a PC via the following interfaces.

- USB interface (see section 4.9.1)
- Ethernet interface (see chapter 6)

4.4.6 Display of the measured values of a measurement location or of all IQ sensors in the system

As soon as a terminal is docked onto a measurement location, the local measured value display becomes active. The IQ sensors selected for the measurement location appear on the measured value display (see section 5.9).

Switch between the measured values for the measurement location and all IQ sensors as follows:

- 1 Switch to the measured value display with **<M>**.
- 2 Open the *Display/Options* menu with **<OK>**.

- 3 Using <▲▼◀▶>, select the menu item, *Display local values or all values* and confirm with <OK>. The measured value display switches between the display of the sensors at the measurement location and all sensors.

4.5 Messages and log book

The IQ SENSOR NET continuously monitors the status of the entire system. If the IQ SENSOR NET identifies system changes, a message appears. New messages can be recognized by the flashing information symbol or error symbol on the display.

All messages are recorded in the log book.

4.5.1 Message types

The system differentiates two types of messages:

- **Error** ⚠
Indicates a critical status in the system or an individual system component that requires immediate action.
In the case of new error messages, the error symbol flashes on the display.
- **Information** ⓘ
Information that does not require immediate action.
In the case of new information, the info symbol flashes on the display.



In the case of errors, immediately open the detailed message text in the log book and perform the recommended actions. If the actions have been performed, mark the message as read (see section 4.5.3).

4.5.2 Log book

The log book is a list with all the messages from all modules. The log book contains up to 1000 entries. If there are more than 1000 messages, the oldest entries are deleted.

New messages can be recognized by the flashing information symbol or error symbol. The log book always contains the latest message in the first position. They do not yet have a checkmark in the status field.

The flashing of the info or error symbol only stops after all detailed message texts in the log book have been opened and marked with a checkmark (✓) (see section 4.5.3).

Structure of the log book

5284-24160001		22 Mar 2016	10:14			
Log book of entire system						
	SYS	EI9141	26 Mai 2008	10:29		
	SYS	II4141	26 Mai 2008	10:29		
	SYS	II2141	26 Mai 2008	10:27		✓
	SYS	EI5141	26 Mai 2008	10:27		✓
	SYS	II2141	26 Mai 2008	10:25		✓
	SYS	EI5141	26 Mai 2008	10:25		✓
	SYS	EI5141	26 Mai 2008	10:25		✓
	SYS	EI5141	26 Mai 2008	10:24		✓
	SYS	II2141	26 Mai 2008	10:22		✓
	SYS	EI5141	26 Mai 2008	10:22		✓
	SYS	II2141	26 Mai 2008	10:08		✓
	SYS	EI5141	26 Mai 2008	09:45		✓
Open	message/acknowledge message					
1	2	3	4	5		

figure 4-14 Log book of entire system

- 1 Message category (error or info symbol)
- 2 Module that triggered the message.
 SYS System (Universal Transmitter, controller)
 S01 IQ sensor (number 01)
 S?? IQ sensor (inactive, dataset erased)
 D01 DIQ output module (number 01)
 D?? DIQ output module (inactive, dataset erased)
- 3 Message code
- 4 Date and time of the message
- 5 Status field of the message
 ✓ Message was acknowledged
 No checkmark Message was not acknowledged

The system provides the following log books:

- *Log book of entire system:*
List of all messages from all modules
- *Log book of selected sensor:*
List of all messages from a single IQ sensor.

There is a detailed message text for each message of a module that is ready for operation. The detailed message text on each message is given in the log book (see section 4.5.3) and in the operating manual of the registering module.

Structure of the message code

The message code consists of 6 characters and can contain numerals and letters, e.g.: II2152.

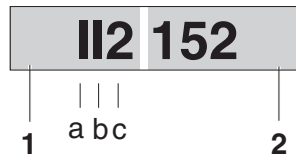


figure 4-15 Structure of the message code

No.	Information	Explanation
1	Short message form	The three-digit short form of the message contains the following information on the message: Category (a), type (b) and type number (c)
A	Category	<ul style="list-style-type: none"> ● Info message (I) ● Error message (E)
b	Type	<ul style="list-style-type: none"> ● Calibration data (C) ● Installation and commissioning (I) ● Instructions for service and repair (S) ● Application instructions (A)
c	Type number	Each type contains subtypes (0..9A..Z)
2	Module code	The three-digit module code designates the module that generated the message. The module code can be found in the chapter LISTS of the respective component operating manual.

Example:
Message code
II2152

The component "152" (MIQ/MC3 controller) sends a message with the short form message "II2". This is an info message (I) of the type Installation (I) with the type number (2). The detailed message text of the short form message (II2) can be found in the log book and in the operating manual of the component that sent it.



The detailed message text in the log book contains a precise description of the message code and, if required, any further actions.

The detailed message texts can also be found in the component operating manuals of the individual components.



The log book shows the current status at the point of time it was opened. If new messages arrive while a log book is open, these do not appear in the log book. As usual, you are informed of new messages by flashing info or error symbols. The current log book with the new messages can be viewed by closing and reopening the log book.

4.5.3 Viewing detailed message texts

- 1 Switch to the measured value display with **<M>**.
- 2 Open the *Display/Options* menu with **<OK>**.
- 3 Using **<▲▼◀▶>** and **<OK>**, select and open the *Log book of entire system*.
A list of log book entries appears.
- 4 Using **<▲▼◀▶>** and **<OK>** select and confirm a new log book entry (unchecked).
The message text with further information on the selected log book entry appears.

CONTROLLER	30 July 2016	10:14			
Log book of entire system					
	SYS	EI9141	26 Mai 2008	10:29	
	SYS	II4141	26 Mai 2008	10:29	
	SYS	II2141	26 Mai 2008	10:27	✓
	SYS	EI5141	26 Mai 2008	10:27	✓
	SYS	II2141	26 Mai 2008	10:25	✓
	SYS	EI5141	26 Mai 2008	10:25	✓
	SYS	EI5141	26 Mai 2008	10:25	✓
	SYS	EI5141	26 Mai 2008	10:24	✓
	SYS	II2141	26 Mai 2008	10:22	✓
	SYS	EI5141	26 Mai 2008	10:22	✓
	SYS	II2141	26 Mai 2008	10:08	✓
	SYS	EI5141	26 Mai 2008	09:45	✓
Open message/acknowledge message					

figure 4-16 Log book of entire system

- 5 Acknowledge the message with **<OK>**. A checkmark appears in the log book entry.
- 6 Exit the message text with **<ESC>**.



Acknowledgment of a new message text in the log book marks the message as read. When all errors or information messages are acknowledged, the symbols no longer flash.

With the *Acknowledge all messages* function you can acknowledge all messages at the same time (see section 4.5.4).



Message texts are stored in the modules that caused them. Therefore, further information on a log book entry for an IQ sensor such as, e.g. calibration messages, instructions and help texts are only accessible in the case of connected components that are ready for operation.

If a message text is not available because, e.g. a module is not connected with the system, you can look up the detailed text of the message as follows:

- Messages of the system are given in this operating manual (see section 12.1).
- Messages of a module are given in the respective component operating manual of the module.

4.5.4 *Acknowledge all messages*

- 1 Switch to the measured value display with **<M>**.
- 2 Open the *Settings* menu with **<S>**.
- 3 Using **<▲▼◀▶>**, select the menu item, *Service* and confirm with **<OK>**.
- 4 Using **<▲▼◀▶>**, select the menu item, *Acknowledge all messages* and confirm with **<OK>**. A security prompt opens.
- 5 Using **<▲▼◀▶>**, select *Acknowledge* and confirm with **<OK>**. All messages are acknowledged. Error symbol and info symbol do no longer flash.

4.6 Calibration data



Details on calibration are given in the operating manual for the IQ sensor.

Each calibration of IQ sensors that are able to be calibrated causes an entry to be made in the log book. Log book entries contain the following information:

- Calibration date
- Calibration successful or not successful.

The detailed calibration data of the last calibrations are integrated in the *Calibra-*

tion history of selected sensor overview.



All calibration data are stored in the IQ sensor. In order to view the calibration data of an IQ sensor, the IQ sensor must be connected to the IQ SENSOR NET and must be ready for operation.

4.6.1 Calibration entries in the log book

The date and time of a calibration are entered in the log book. The respective message text contains an indication as to whether a calibration was successful or not. The values determined with calibration can be viewed in the calibration history (see section 4.6.2).

- 1 Call up the measured value display with **<M>**.
- 2 Using **<▲▼◀▶>**, highlight a sensor and confirm with **<OK>**.
The *Display/Options* menu opens.
- 3 Using **<▲▼◀▶>**, highlight the menu item, *Log book of selected sensor*, and confirm with **<OK>**. Calibration entries in the log book are held in message code (ICxxxx and ECxxxx).
- 4 Select and open a calibration entry (ECxxxx or ICxxxx) with **<▲▼◀▶>** and **<OK>**.
- 5 Exit the *Calibration history of selected sensor* with **<▲▼◀▶>**.

4.6.2 Calibration history

The calibration history contains the detailed calibration data of the last calibrations.

- 1 Call up the measured value display with **<M>**.
- 2 Using **<▲▼◀▶>**, highlight a sensor and confirm with **<OK>**.
The *Display/Options* menu opens.
- 3 Using **<▲▼◀▶>**, highlight the menu item, *Calibration history of selected sensor*, and confirm with **<OK>**.
The calibration history with the results of the last calibration procedures opens.
- 4 Exit the *Calibration history of selected sensor overview* with **<M>**.

4.7 Status info of sensors and outputs

The display of the instrument status provides a simple overview of the current modes of sensors (sensor info) and outputs in the IQ SENSOR NET.

The status display can be reached in the *Settings/Service/List of all components* menu (see section 4.10).

- 1 Call up the *List of all components* (see section 4.10).
- 2 Highlight the required component with **<▲▼◀▶>** and confirm with **<OK>**.
 - Output module: The *Status of output channels* window opens up (for details, refer to the operating manual of the output module).
 - Sensor: The sensor info opens up (for details, refer to the operating manual of the selected sensor).




CONTROLLER		30 July 2016	10:31			
Status of output channels						
No.	Name	Chan.	Status			
D01		R1	open			
D01		R2	open			
D01		R3	open			
D01		C1	0.00 mA			
D01		C2	0.00 mA			
D01		C3	0.00 mA			
Return ESC						

figure 4-17 Status of output channels

- 3 Exit the *Status of output channels* window with **<M>** or **<ESC>**.

4.8 General course when calibrating, cleaning, servicing or repairing an IQ sensor

When an IQ sensor is calibrated, cleaned, serviced or repaired, the maintenance condition for the relevant IQ sensor should always be switched on.

In the maintenance condition

- the system does not react to the current measured value or the condition of the selected IQ sensor
- linked outputs are frozen
- IQ sensor errors do not prompt changes in the conditions of linked outputs.

The maintenance condition for IQ sensors is automatically activated

- during calibration. After a calibration that was started manually, the IQ sensor remains in the maintenance condition until the maintenance condition is switched off manually (see section 4.8.3)
- during a compressed-air cleaning cycle.

Therefore, keep to the following course when you calibrate, clean, service or repair an IQ sensor.

Outlet

- 1 Switch on the maintenance condition for the IQ sensor (see section 4.8.2).
The display of the sensor in the measured value display flashes.
- 2 Pull the sensor out of the sample.
- 3 Perform the calibration in the laboratory, cleaning, maintenance or repair (removing and replacing) of the sensor (about these topics, see the component operating manual of the corresponding sensor).
- 4 Submerge the sensor in the sample again.
- 5 Wait until the measured value no longer changes.
- 6 Switch off the maintenance condition for the sensor (see section 4.8.3).
The display of the sensor in the measured value display no longer flashes.

4.8.1 Maintenance condition of IQ sensors

The following diagram gives you a general overview of when an IQ sensor is in the maintenance condition.

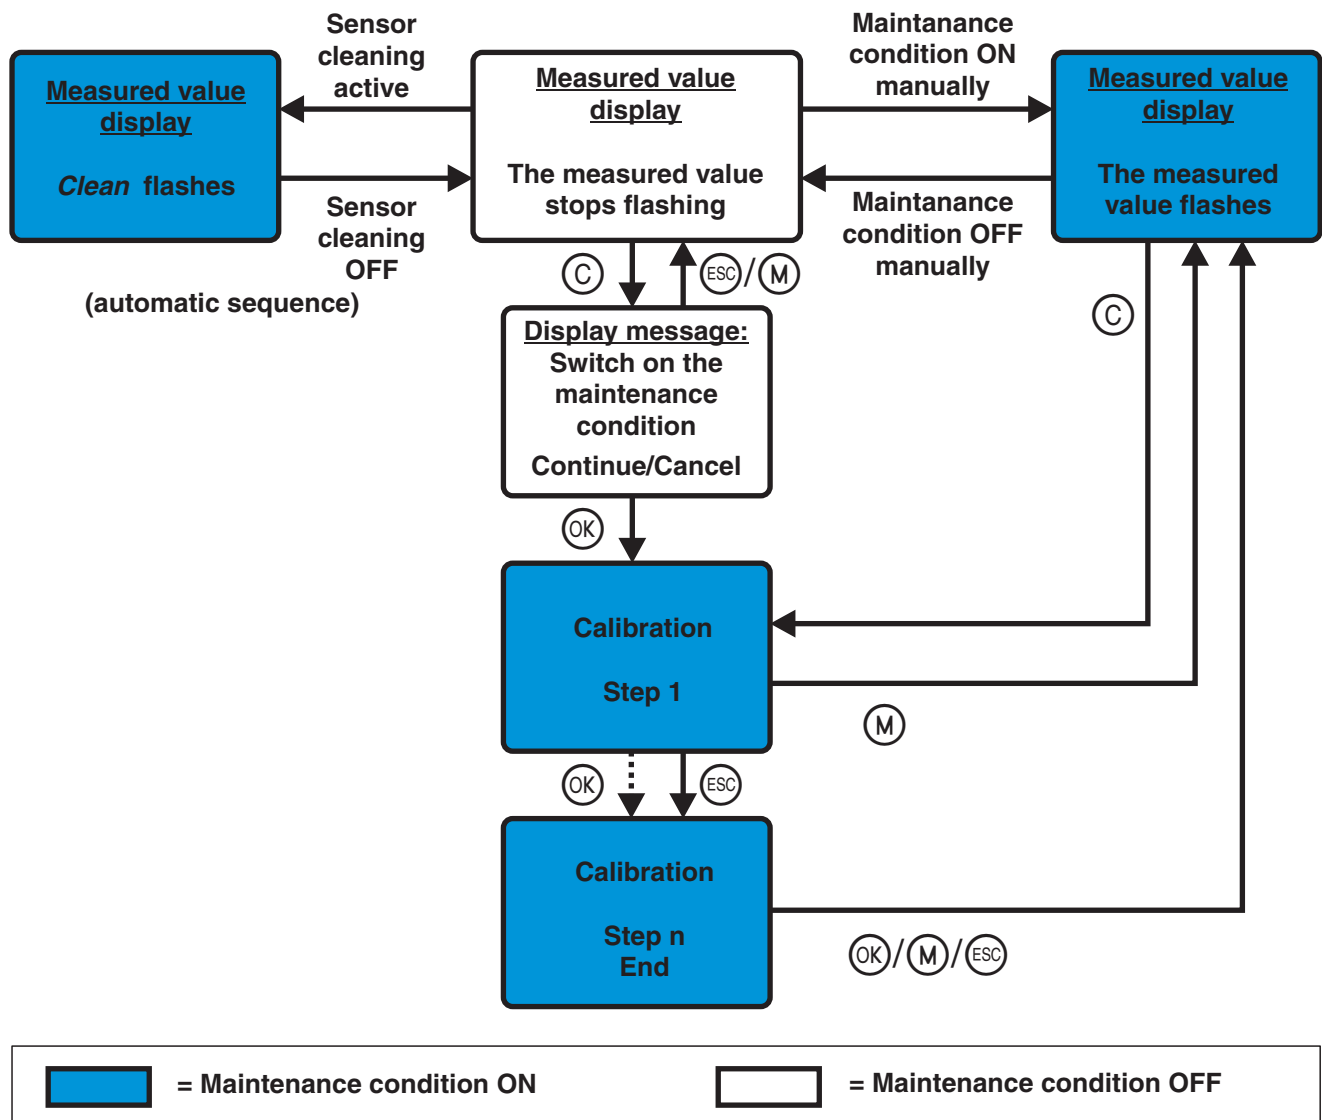


figure 4-18 Maintenance condition of IQ sensors (general information)

4.8.2 Switching on the maintenance condition

Switch on the maintenance condition manually when you want to clean, service or repair (remove and replace) an IQ sensor.

- 1 Call up the measured value display with **<M>**.
- 2 Select the sensor you want to switch on the maintenance condition for with **<▲▼◀▶>**.
The display of the sensor in the measured value display does not flash.
- 3 Open the *Display/Options* menu with **<OK>**.
- 4 Using **<▲▼◀▶>**, highlight the menu item, *Switch maintenance condition on/off*, and confirm with **<OK>**.
A window that informs you about the maintenance condition opens up.
- 5 Use **<OK>** to confirm *Continue*.
The selected sensor is in the maintenance condition. Linked outputs are frozen.
- 6 Call up the measured value display with **<M>**.
The display of the sensor in the measured value display flashes.

Subsequently, perform the cleaning, maintenance or repair work (removal and replacement).

When you have finished calibrating, cleaning, servicing or repairing the sensor, switch off the maintenance condition manually (see section 4.8.3).

4.8.3 Switching off the maintenance condition

- 1 Call up the measured value display with **<M>**.
- 2 Select the sensor you want to switch off the maintenance condition for with **<▲▼◀▶>**.
The display of the sensor in the measured value display flashes.
- 3 Open the *Display/Options* menu with **<OK>**.
- 4 Using **<▲▼◀▶>**, highlight the menu item, *Switch maintenance condition on/off*, and confirm with **<OK>**.
A window that informs you about the maintenance condition opens up.
- 5 Use **<OK>** to confirm *Continue*.
The maintenance condition of the selected sensor is switched off. Linked outputs are released.
- 6 Call up the measured value display with **<M>**.
The display of the sensor in the measured value display does not flash.



If a power failure occurs, the outputs automatically are in the non-operative condition (relays: open, current output: 0 A; see component operating manual of the output module). After the end of the power failure the outputs work as defined by the user again.

If a power failure occurs while an IQ sensor that is linked with an output is in the maintenance condition, the current and relay outputs work as defined by the user after the maintenance condition has been switched off only (see section 4.8.3).

4.9 USB interface

The USB interface on the MIQ/MC3 can be used for the following actions:

- Save data of the IQ SENSOR NET to a USB memory device (see section 4.9.1)
- Configuration data transfer to a USB memory (see section 4.9.2)
- Transmit configuration data to the controller (see section 4.9.3)
- Carry out a software update (see section 4.11)

You can save the following data types:

- Measurement data (see section 4.9.1)
- Log book (see section 4.9.1)
- Calibration history (see section 4.9.1)
- Configuration data (see section 4.9.2)

4.9.1 Saving IQ SENSOR NET data to a USB memory device

The configuration data can be transferred from the USB memory device back to the IQ SENSOR NET. Thus, you can very easily create systems that are configured identically.



In principle, any USB connection on the IQ SENSOR NET system can be used for a data backup. Please note that the data transmission is considerably slower if there is an IQ SENSOR NET connection between the USB connection and controller. Therefore, preferably use the USB connection of the active controller (MIQ/MC3 or MIQ/TC 2020 3G, configured as controller). If this is not possible, you can limit the backup of measurement data to certain sensors.

Data backup

- 1 Switch to the measured value display with **<M>**.
- 2 Open the *100 - Settings* menu with **<S>**.
- 3 Use **<▲▼◀▶>** and **<OK>** to open the *Data transfer to USB memory* menu.
- 4 Select the data to be saved with **<▲▼◀▶>**.
 - *Save configuration*
 - *Measured data storage*
 - *Log book*
 - *Calibration history*
 and confirm with **<OK>**.



Only if the measurement data backup is done via the IQ SENSOR NET connection between USB connection and controller (slower data transmission):

- 4-1 A list of those sensors is displayed for which measurement data are stored.
 - 4-2 Using **<▲▼◀▶>**, select the *Selec.* column. Confirm with **<OK>**.
Using **<▲▼◀▶>**, select the sensor and check it off with **<OK>**.
The measurement data of the sensor are included in the backup.
If necessary, add further sensors to the list of measurement data to be saved.
 - 4-3 Terminate the selection of sensors with **<ESC>**.
 - 4-4 Using **<▲▼◀▶>**, select the menu item, *Transfer data for selected sensors*, and confirm with **<OK>**.
A dialog box pops up for the selection of the decimal separator for the exported *.csv file.
 - 4-5 Using **<▲▼◀▶>**, select the decimal separator (comma or point) for the measurement data and confirm with **<OK>**.
A query for the restart of the measured value recording pops up.
 - 4-6 Using **<▲▼◀▶>**, select *Yes* or *No* and confirm with **<OK>**.
If the restart of the measured value recording is selected, the measurement data stored in the IQ SENSOR NET are deleted after the save process. The measured value recording is restarted.
- 5 The data are prepared for the transfer.



You can cancel the data saving process by highlighting and confirming the Cancel menu item with **<▲▼◀▶>** and **<OK>**. In this case the data will not be stored to the USB memory device.

- 6 Press **<▲▼◀▶>** to highlight the *Save* menu item and confirm with **<OK>**.
The selected data will be stored to the USB memory device.

4.9.2 Saving the system configuration manually

During the normal terminal operation of the MIQ/TC 2020 3G, you can at any time save the system configuration data of the main controller to a USB memory device, in addition to the automatic backup.

The system configuration comprises the following data:

- *Settings of sensors and diff. sensors*
- *Settings of outputs and links*
- *Edit list of sensors*
- *Edit list of outputs*
- *Measured value recording* (data logger settings)
- *Language*
- *Access control*
- *Alarm settings*
- *180 - System settings*



If you want to carry out changes to the system configuration that may have to be canceled again (e.g. if you want to briefly try out certain functions), a manual backup can be carried out beforehand.

To do so, proceed as follows:

- 1 Open the *Settings* menu with **<S>**.
- 2 Press **<▲▼◀▶>** to select the menu item *Data transfer to USB memory* and press **<OK>**.
- 3 Press **<▲▼◀▶>** to select the *Backup configuration* menu item and press **<OK>**. The process is started.
- 4 Wait until the backup is terminated.
- 5 Confirm the concluding message with **<OK>**.

4.9.3 Restore system configuration



If the MIQ/TC 2020 3G is operated as a backup controller, restoration of the last automatic backup of the system configuration is automatically suggested when a new controller is identified by the system.

Proceed as follows to transfer to a controller a system configuration manually stored to a USB memory device (e.g. after replacing a defective controller):

- 1 Open the *Settings* menu with **<S>**.
- 2 Press **<▲▼◀▶>** to select the menu item *Data transfer to USB memory* and press **<OK>**.
- 3 Press **<▲▼◀▶>** to select the menu item *Retransfer configuration* and press **<OK>**. A list with the stored system configurations is displayed.
- 4 Select a stored system configuration with **<▲▼◀▶>** and press **<OK>**. The process is started.
- 5 Wait until the restore is terminated.
- 6 Confirm the concluding message with **<OK>**.

4.10 Info on software versions

The system informs you of the current versions of the software of the individual IQ SENSOR NET components.

- 1 Call up the measured value display with **<M>**.
- 2 Open the *Settings* menu with **<S>**.
- 3 Using **<▲▼◀▶>**, highlight the menu item, *Service*, and confirm with **<OK>**. The *Service* dialog window opens.
- 4 Using **<▲▼◀▶>**, highlight the menu item, *List of all components*, and confirm with **<OK>**. The *List of all components* dialog box opens.






CONTROLLER		30 July 2016	10:14			
List of all components						
No.	Model	Ser. no.	Softw. vers.			
SYS	CTRL TC2020	99000001	9.01			
S01	SensoLyt700IQ	99160001	2.18			
S02	TriOxmatic700IQ	01341000	2.21			
S05	TetraCon700IQ	99190001	2.30			
ADA	VARION700IQ	04460001	9.15			
S03	VARION A	04460001	9.15			
S04	VARION N	04460001	9.15			
D01	MIQCR3	99200001	2.80			
Select  , view component status 						

figure 4-19 List of all components

- 5 Exit the *List of all components* dialog box with **<M>** or **<ESC>**.



If the software version of a component is not up-to-date, you can carry out a software update via the USB interface (see section 4.11).

4.11 Software-Update for IQ SENSOR NET

With a Software-Update, you maintain the latest state of the instrument software for your IQ SENSOR NET system 2020 3G and all active components.

The update packet with the current instrument software for active IQ SENSOR NET components and detailed instructions on how to proceed are available on the Internet under www.WTW.com.

The instrument software is transferred to the System 2020 3G via the USB port and with the aid of a USB memory device.

While a software update is running, the yellow LED on the controller MIQ/MC3 flashes rapidly.



A Software-Update does not change the measurement settings, measurement data and calibration data.



You can view the software versions of all components in the dialog box, *List of all components* (see section 4.11).


While a software update is running, the voltage LEDs on the MIQ/MC3 controller indicate the status of the software update:

LEDs	Status	Status of the update	Next step
Yellow	● Flashing rapidly (5x/s)	Update of the controller is being carried out	Wait until the update is finished (LED flashing slowly)
	● Flashing slowly (1x/s)	Update of the controllers finished	Restart the controller
Red	● Flashing rapidly (5x/s)	Update of the controller was interrupted	Repeat the update
Yellow and red	● Flashing alternately	Update of a component was interrupted	Repeat the update

4.12 The MIQ/TC 2020 3G in its function as terminal and backup controller

If the MIQ/TC 2020 3G was configured as a terminal, the integrated controller works as a backup controller. The backup controller saves the system data at regular intervals and is immediately available in the system as a backup controller if the main controller fails. If several MIQ/TC 2020 3G are configured as terminals in the IQ SENSOR NET, one MIQ/TC 2020 3G takes over the function of the backup controller. The function is shown on the display.

The diagram on the following page shows how the MIQ/TC 2020 3G works when it is configured as a terminal:

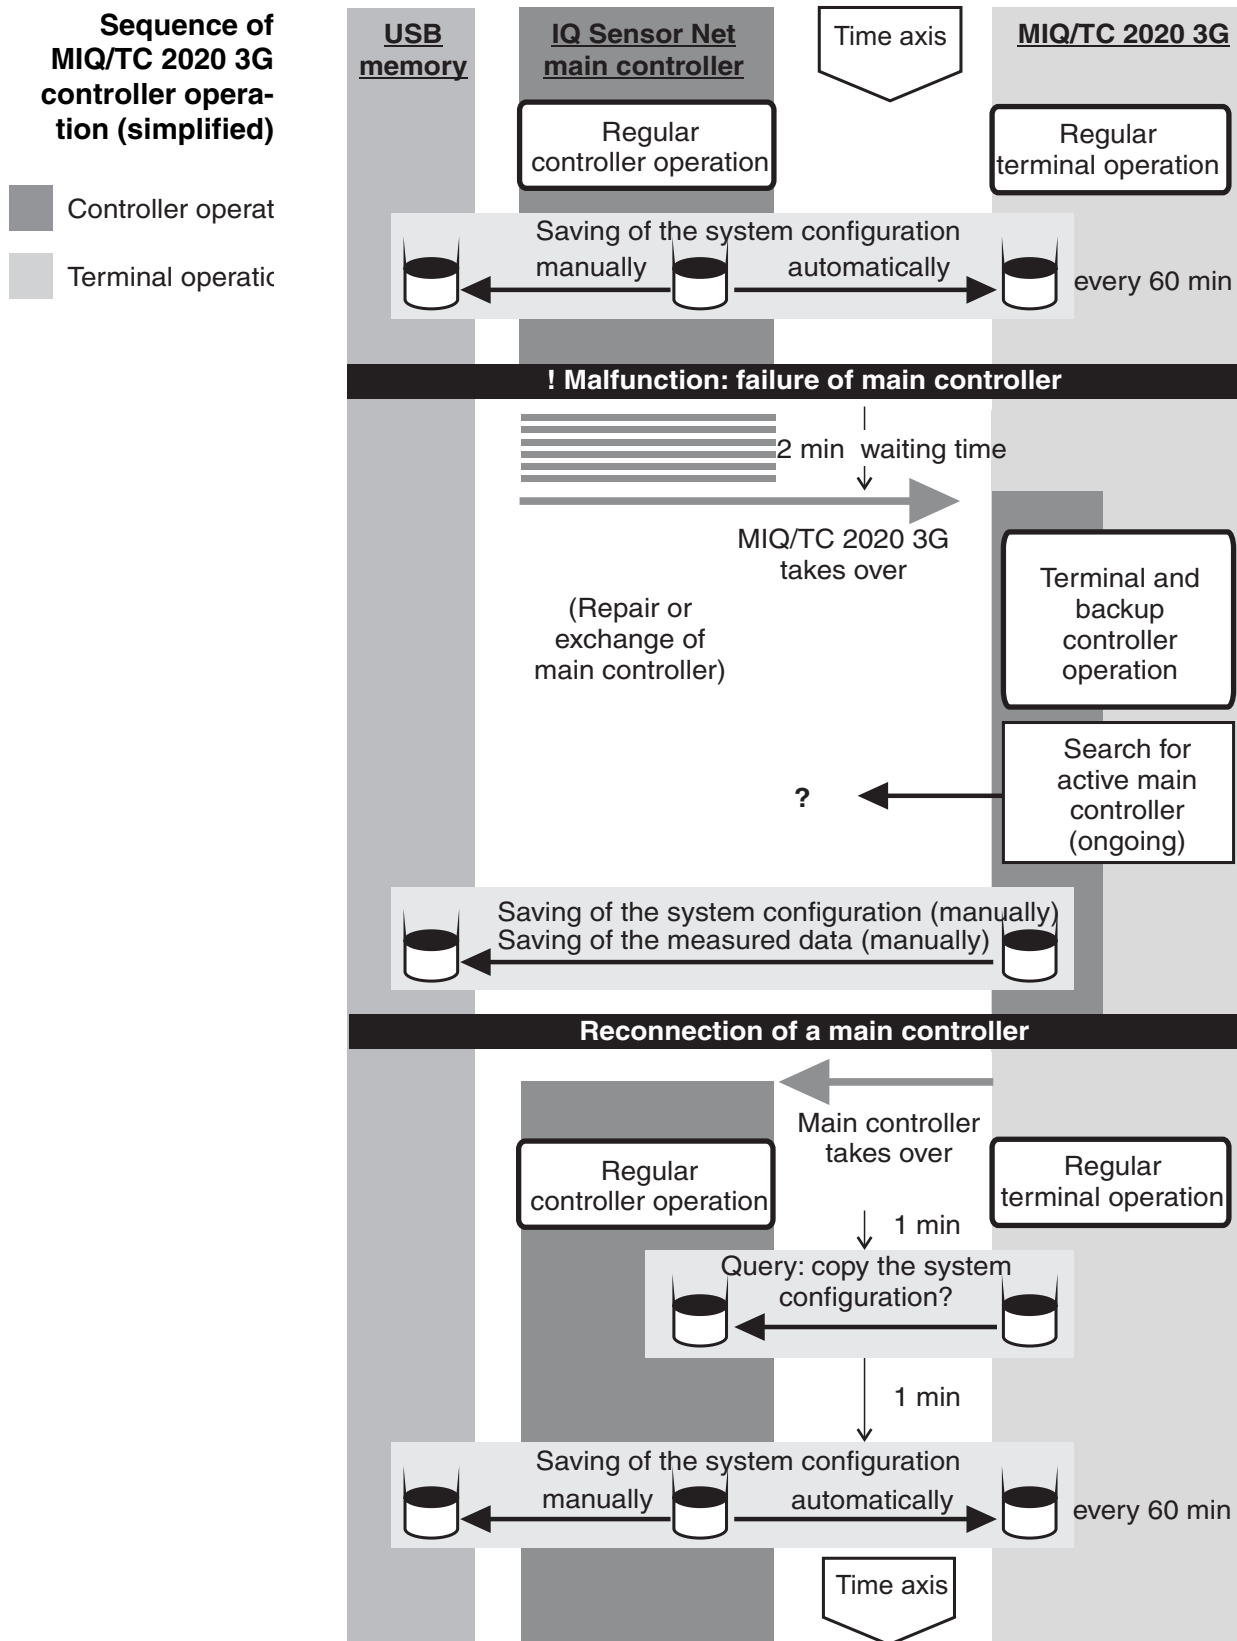

The procedure in detail:

- Normal operation**
- During normal operation the main controller carries out regular controller operation.
 - The MIQ/TC 2020 3G (configured as a terminal) works as a regular terminal.
 - The MIQ/TC 2020 3G (configured as a terminal) backs up the system configuration:
 - Automatic backups are carried out 2 minutes after initialization and then regularly every 60 mins.
 - In addition to the automatic backup, the backup can also be started manually at any time (see section 4.9.2). The timer for the automatic backup is reset for this.
 - Automatic backup is always only carried out in the measuring mode (normal measured value display). If the MIQ/TC 2020 3G is in another operating mode, the next backup is carried out as soon as a switch is made back again to measuring mode.
 - If a backup fails, e.g. because another terminal is in the setting or calibration mode, a new backup is attempted after 30 s. After three failed attempts the next automatic backup takes place after 60 mins.
 - During the backup a message appears on the display. If necessary, the running backup can be cancelled with the **<ESC>** or **<M>** key.
 - The MIQ/TC 2020 3G receives ongoing information on the status of the main controller.

- Event:**
Failure of the main controller (MIQ/TC 2020 3G controller operation)
- If the MIQ/TC 2020 3G (configured as a terminal) receives no more valid telegrams from the main controller **for a period of 2 min**, it takes over controller operation as a backup controller. The MIQ/TC 2020 3G is reinitialized.
 - On takeover of the controller operation a logbook message is generated.
 - In MIQ/TC 2020 3G backup controller operation
 - the status LED flashes
 - BACKUP CONTROLLER appears alternately with the terminal name on the display
 - the MIQ/TC 2020 3G (configured as a terminal) keeps its own logbook. The logbook is empty when controller operation is adopted. The topmost message contains the reference to controller operation. It can neither be acknowledged nor deleted. The logbook is deleted when controller operation is terminated.

- Event: main controller goes back into operation**
- As soon as the MIQ/TC 2020 3G (configured as terminal) again receives a valid telegram from a main controller in the IQ SENSOR NET, it is reinitialized as a regular terminal. The main controller again works as a regular controller. It uses its own settings for this (or the factory settings in the case of a brand new controller).
 - The MIQ/TC 2020 3G (configured as terminal) detects whether the system configuration in the main controller differs from the backed-up system config-

uration and, if necessary, offers to restore the backed-up system configuration to the main controller.

If the system configuration is not transferred to the main controller, the first regular backup from the main controller to the MIQ/TC 2020 3G is carried out after 2 minutes.

5 Settings/setup

5.1 Selecting the language

A list shows all the available system languages.

- 1 Open the *Settings* menu with **<S>**.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Language*.
The *Language* display opens.

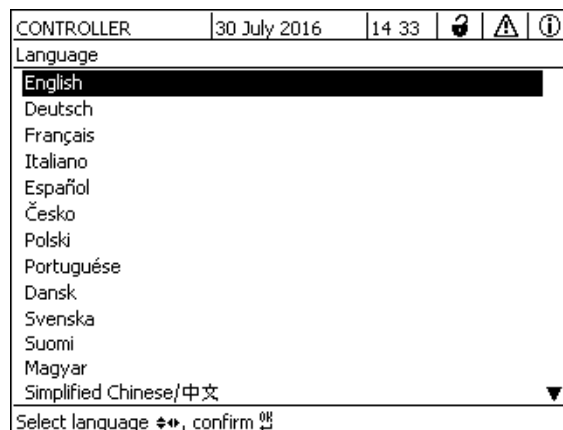


figure 5-1 Language

- 3 Select a language from the list with **<▲▼◀▶>** and confirm with **<OK>**.
The active language is marked with a checkmark.
- 4 Switch to the higher menu level with **<ESC>**.
or:
Switch to the measured value display with **<M>**.



If the selected system language is not available in a component, all indications of this component (e.g. sensor, controller, terminal, output module) appear in the standard language, *English*. To activate the selected system language for this component, a software update of the component is required (see section 4.11).

5.2 Terminal settings

The terminal settings include:

- *Terminal name*

- *Illumination brightness*
- *Illumination brightness (standby)*
- *Display contrast*
- *Status LED*



Terminal settings cannot be made with access via IQ WEB CONNECT.






CONTROLLER	30 Juli 2014	10:14			
Terminal settings					
Terminal name	Terminal 1				
Illumination brightness	100 %				
Illumination brightness (standby)	0 %				
Display contrast	50 %				
Status-LED	active				
Select  , confirm 					

figure 5-2 Terminal settings

Setting	Selection/Values	Explanation
<i>Terminal name</i>	AaBb..Zz 0..9µ%&/() +.-=><!?_°	User-defined character string with max. 15 characters
<i>Illumination brightness</i>	Auto 0 ... 100 %	Brightness of the display during operation of the terminal AUTO: Automatic brightness regulation according to the ambient brightness.
<i>Illumination brightness (standby)</i>	Auto 0 ... 50 %	Brightness of the display during operation if no key is pressed for a longer period of time AUTO: Automatic brightness regulation according to the ambient brightness.
<i>Status LED</i>	<i>active</i> <i>not active</i>	The blue status LED on the MIQ/TC 2020 3G can be switched on or off.

Terminal name in the Ethernet network

The terminal name of the controller is part of the network address of the IQ SENSOR NET system.

To create a valid network address for the IQ SENSOR NET, the terminal name may only contain letters, numerals and the special characters _+.

5.3 Access control

Use the *Access control* function to define the safety settings for the IQ SENSOR NET.

The MIQ/TC 2020 3G configured as a terminal/controller provides the following steps of system security:

- No/simple access control
(see section 5.3.1)
- Extended access control
(3 authorization levels, see section 5.3.2):
 - Administrator authorization
 - Maintenance authorization
 - Read permission
- Extended access control with instrument block for the terminal (see section 5.3.3):



Access to the system with active access control (see section 4.3).

Default settings

Access control is switched off in the delivery condition. Every user can carry out all functions.

Saving the password

If access control for the IQ SENSOR NET is active and the administrator password is lost, rapid administrator access to the IQ SENSOR NET is no longer possible.

To avoid losing the administrator password, we recommend saving it. This also applies to the use of the electronic key.

To save the administrator password, you can save it on an electronic key, for example, and/or note it down on paper or on a PC. Keep the passwords in a safe place.

5.3.1 Activating the simple access control (Unlock/lock settings)

The simple access control can be switched on or off with the *Unlock/lock settings* function. The current setting is displayed in the safety field. The lock symbol is open or closed. Before the user rights can be changed a password query

appears.

User right The current user right is shown on the display with the following symbols.

Simple access control	Symbol	User rights
Settings are unlocked (access control switched off)	🔓	All functions in the system are accessible to all users
Settings are locked	🔒	Access to the system settings is only possible with a password Unprotected functions: <ul style="list-style-type: none"> ● Calibration ● Data backup ● View measured values



If the closed lock symbol 🔒 is visible on the display, changes to the system settings are only possible after entering a password.

Switching on the simple access control

- 1 If necessary, switch off the extended access control (see section 5.3.2).
- 2 Using **<S>**, open the *Settings* menu.
- 3 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Access control -> Unlock/lock settings*.
The *Unlock/lock settings* dialog window opens.

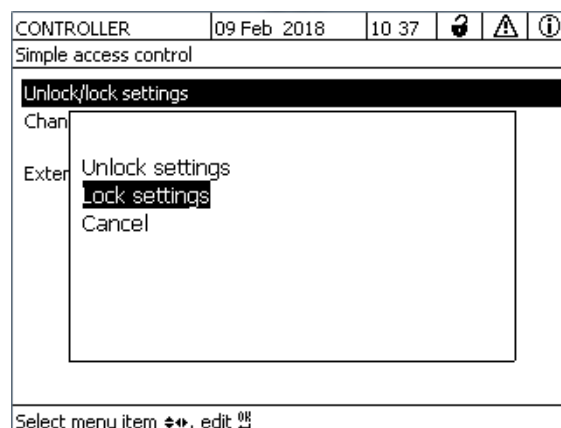


figure 5-3 Settings -> Unlock/lock settings

- 4 Press <▲▼◀▶> and <OK> to select a function and <OK> to confirm. The dialog window for entering the password opens.
- 5 Press <▲▼◀▶> and <OK> to enter the valid password and press <OK> to confirm. The setting is changed.



Forgotten the password? You can display the valid password on the screen (see section 14.1).

Switching off the simple access control (open system)

The simple access control is switched off as follows:

- 1 Using <S>, open the *Settings* menu.
- 2 Using <▲▼◀▶>, select the menu item, *Access control* and confirm with <OK>.
- 3 Press <▲▼◀▶> to select the *Enable/Block settings* menu item and confirm with <OK>.
- 4 Press <▲▼◀▶> to select the *Enable settings* menu item and confirm with <OK>.
All system functions can be accessed without a password.

Changing the password

A password protects the system settings against inadvertent changes. The password must always be entered in order to change the release of the settings.
The password is set to 1000 in the delivery state.

- 1 Using <S>, open the *Settings* menu.
- 2 Using <▲▼◀▶> and <OK>, select and confirm the menu item, *Access control -> Change password*.
The *Change password* dialog window opens.

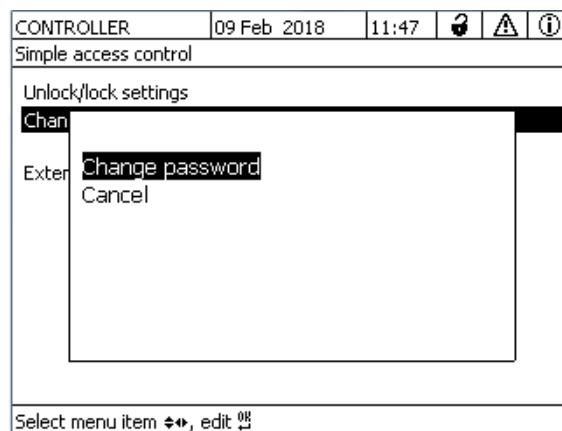


figure 5-4 System settings -> Change password

- 3 Using <▲▼◀▶> and <OK>, select and confirm the menu item, *Change password*. The dialog window for entering the password opens.
- 4 Press <▲▼◀▶> and <OK> to enter the new password and press <OK> to confirm. The setting is changed.





Forgotten the password? You can display the valid password on the screen (see section 14.1).

5.3.2 Activating the extended access control

Extended access control provides three preconfigured user rights in the system. Each user type can be protected with its own password.

User right The current user right is shown on the display with the following symbols.

Validity	User right	Symbol	User rights
System-wide	<i>Administration</i>	👑	<ul style="list-style-type: none"> ● Access only with password ● Change system settings ● Assign user rights ● Calibration ● Data backup ● Restore configuration ● View measured values ● Carry out software updates

Validity	User right	Symbol	User rights
	<i>Maintenance</i>		<ul style="list-style-type: none"> ● Access only with password ● Calibration ● Data backup ● View measured values
	<i>Viewer</i>		<ul style="list-style-type: none"> ● Without instrument block: Access without password ● With instrument block: Access only with password ● Data backup ● View measured values
For the terminal on which the function was activated	Instrument block		<ul style="list-style-type: none"> ● Instrument block switched off: User rights as for <i>Viewer</i>. ● Instrument block active: The System 2020 3G is blocked. Only the IQ SENSOR NET logo is displayed. Access only with password.

Switching on the extended access control

- 1 If necessary, switch off the simple access control (see section 5.3.1).
- 2 Open the *Settings* menu with **<S>**.
- 3 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Access control*.
The *Simple access control* dialog window opens.
- 4 Using **<▲▼◀▶>**, select the function, *Activate extended access control* and confirm with **<OK>**.
User right and instrument block can be selected.

CONTROLLER	30 July 2016	15 25			
Extended access control					
User right			Access code		
Administration			1111		
Maintenance			2222		
Viewer			3333		
Device lock			active		
Extended access control			active		
Apply settings					
Select menu item , edit					

figure 5-5 Settings -> Access control -> Extended access control

The instrument automatically generates a password for each user right. This password can be accepted or changed.

- 5 Press **<▲▼◀▶>** to select a user right and confirm with **<OK>**.
If necessary, change the password in the selection dialog and/or save the password to a connected USB memory.
- 6 Note passwords.
For reasons of safety the administrator password at least should be saved in such a way that it can be accessed in an emergency.
- 7 Press **<▲▼◀▶>** to select the *Apply settings* function and confirm with **<OK>**.
A security prompt opens.
- 8 Using **<▲▼◀▶>**, select *OK* and confirm with **<OK>**.
The settings are adopted.
The *Extended access control* window is still open.
The current passwords are visible.
The *Viewer* user right is active.

Switching off the extended access control

- 1 Press **<OK>** to open the *Display/Options / Change user rights* menu.
The password query is displayed.
- 2 Enter and confirm the administrator password with **<▲▼◀▶>** and **<OK>**.
- 3 Using **<S>**, open the *Settings* menu.
Deactivate extended access control.
Take over the setting.



Forgotten the password? Then you can release the IQ SENSOR NET again (see section 14.1).

5.3.3 Activating the instrument block for a terminal

Use the *Device lock* function to protect the terminal on which this function is activated – not only against unauthorized operation, but also against unauthorized reading of the current measured values. By activating the *Device lock* function the password for viewing the measured values is activated.

After an interval (approx. 10 min) without any user input the system is automatically blocked. In this case the display only shows the IQ SENSOR NET logo.

Switching on the *Device lock*

- 1 Call up extended access control (see section 5.3.2).
- 2 Press **<▲▼◀▶>** to select the *Device lock* function and confirm with **<OK>**.
A checkmark appears next to the function.
- 3 Press **<▲▼◀▶>** to select the *Apply settings* function and confirm with **<OK>**.
A security prompt opens.
- 4 Using **<▲▼◀▶>**, select *OK* and confirm with **<OK>**.
The settings are adopted.
The *Access control* dialog window is still open.
The current passwords are visible.

If the *Device lock* function is switched on, the system is automatically blocked after an interval (approx. 10 min) without any user input. The system can also be blocked with the menu *Display/Options / Activate device lock*.

The display of the blocked instrument shows only the IQ SENSOR NET logo.

Switch off *Device lock*

- 1 Press **<OK>** to open the *Display/Options / Change user rights* menu. The password query is displayed.
- 2 Enter and confirm the administrator password with **<▲▼◀▶>** and **<OK>**.
- 3 Using **<S>**, open the *Settings* menu.
Deactivate extended access control.
Take over the setting.

5.3.4 Electronic key

The administrator can simplify access to the IQ SENSOR NET by saving the password to USB memory. The USB memory thereby becomes an electronic key.

When the electronic key is connected to the System 2020 3G, the user right stored there with the relevant password is automatically read out. The user of the electronic key is logged on to the system with his user right without any further password prompt.

When the electronic key is disconnected, the IQ SENSOR NET automatically switches to the lowest user right.

Passwords for different IQ SENSOR NET systems can be saved to every electronic key.

For each IQ SENSOR NET system only one password can be saved to each electronic key.

Saving a password to an electronic key

Simple access control

- 1 Connect the USB memory to the USB-A interface.
- 2 Using **<S>**, open the *Settings* menu.
- 3 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Access control*.
The *Access control* dialog window opens.
- 4 Press **<▲▼◀▶>** and **<OK>** to select and confirm the menu item, *Change access control*.
- 5 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Save access code on USB memory*.
The password for the system settings is saved to the USB memory.

Extended access control:

- 1 Connect the USB memory to the USB-A interface.
- 2 Using **<S>**, open the *Settings* menu.
- 3 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Access control*.
The *Access control* dialog window opens.
- 4 Press **<▲▼◀▶>** to select an authorization level and confirm with **<OK>**.
- 5 Using **<▲▼◀▶>**, select the menu item, *Save access code on USB memory* and confirm with **<OK>**.
The password for the system settings is saved to the USB memory.

5.3.5 Access to the IQ SENSOR NET with active access control

Simple access control

- Administrator access after entering the password in order to take over a changed setting:
The protection is automatically reactivated after the one setting was changed.
- Administrator access through connecting the electronic key: The protection is restored by disconnecting the electronic key

Extended access control (with instrument block):

- Administrator access through entering the password:
 - After 10 minutes without key-pressing, the highest protection level is automatically activated.
 - Select the menu *Display/Options / Viewing only*.
The highest level of protection is activated.
- Administrator access through connecting the electronic key: The protection is restored by disconnecting the electronic key

5.4 Editing the list of sensors

The *Edit list of sensors* display provides an overview of all IQ sensors, differential sensors and inactive datasets (see section 9.4.2).

In the *Edit list of sensors* display, you can:

- assign sensor names (see section 5.4.1)
- delete inactive datasets (see section 5.4.3)
- change the order of the display of measured values on the measured value display (see section 5.4.2).

5.4.1 Entering / editing a name for an IQ sensor

For the easier identification of the IQ sensors and differential sensors, you can assign an individual name to each IQ sensor.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Edit list of sensors*.
The *Edit list of sensors* display opens.
- 3 Using **<▲▼◀▶>**, highlight the *Sensor name* column. Confirm with **<OK>**.

- 4 Using, <▲▼◀▶> highlight the name of a sensor and confirm with <OK>.

CONTROLLER		30 July 2016	10:14			
Edit list of sensors						
No.	Model	Ser. no.	Sensor name			
S01	Sensolyt700IQ	99160001	99160001			
S05	TetraCon700IQ	99190001	99190001			
S02	TriOxmatic700IQ	01341000	01341000			
S03	VARION A	04460001	04460001			
S04	VARION N	04460001	04460001			
Select , display position/erase sensor						

figure 5-6 Edit list of sensors

- 5 Enter the name with <▲▼◀▶> and <OK> and confirm with <OK> (see section 5.4.1).

5.4.2 Changing the display position

The numbering of the sensors is generated by the system. The order of the sensors in the measured value display and in the *Edit list of sensors* overview can be individually determined.

- 1 Using <S>, open the *Settings* menu.
- 2 Using <▲▼◀▶> and <OK>, select and confirm the menu item, *System settings -> Edit list of sensors*. The *Edit list of sensors* display opens.
- 3 Using <▲▼◀▶>, highlight the *Model* column. Confirm with <OK>.
- 4 Press <▲▼◀▶> to highlight a *Model* and confirm with <OK>. A dialog window opens.

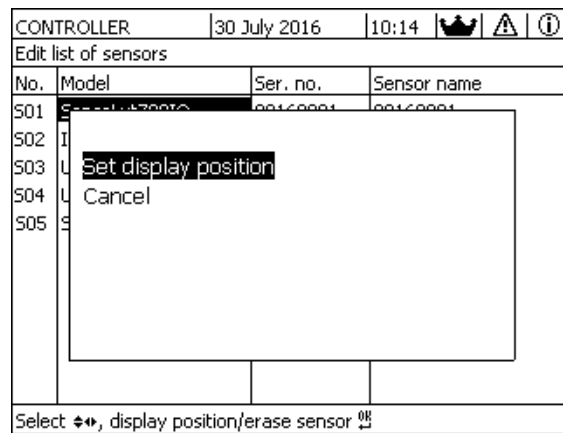


figure 5-7 Edit list of sensors -> Set display position

- 5 Using **<▲▼◀▶>**, select the menu item, *Set display position* and confirm with **<OK>**.
A dialog window opens.
- 6 Press **<▲▼◀▶>** to select the required number for the display position and confirm with **<OK>**.
The sensor is displayed at the new position in the list of sensors. The other sensors are moved accordingly.

5.4.3 Erasing inactive sensor datasets

An inactive dataset for an IQ sensor arises if the controller receives no signals from a registered IQ sensor. The *Error* display appears on the measured value display instead of a measured value. Inactive datasets can be recognized by a question mark, e.g. "?01" in the *Edit list of sensors* overview.

An inactive dataset can be reactivated by assigning it, e.g. to an IQ sensor of the same type (see section 9.4.2). All settings are retained. If these data are no longer required, they can be erased. All the data and settings belonging to this IQ sensor, as well as differential sensors and the link with an output, are erased by this action.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Edit list of sensors*.
The *Edit list of sensors* display opens.
- 3 Using **<▲▼◀▶>**, highlight the *Model* column. Confirm with **<OK>**.
- 4 Press **<▲▼◀▶>** to highlight a *Model* and confirm with **<OK>**.

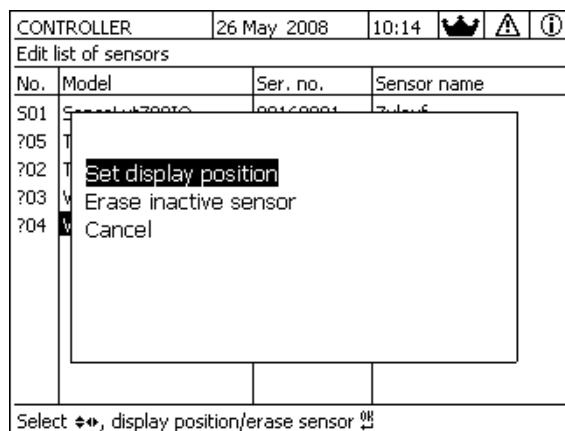


figure 5-8 Edit list of sensors -> Erase inactive sensor

- 5 Using <▲▼◀▶>, select *Erase inactive sensor* and confirm with <OK>.
The dialog window for the security prompt appears.
- 6 Using <▲▼◀▶>, select *Erase inactive sensor* and confirm with <OK>.
The inactive sensor is erased.

5.5 Setting up sensors/differential sensors

5.5.1 Creating a differential sensor

A differential sensor is a virtual sensor. It shows the differential value of two IQ sensors that measure the same parameter and have the same settings. This is used to display the difference, e.g. before and after a water treatment.

Differential IQ sensors can be recognized in the *Edit list of sensors* overview in the *Ser. no.* field by the specification of the two sensors involved.

A link with another IQ sensor in the *Settings of sensors and diff. sensors* menu can be recognized in the *&* field by the sensor number of the linked sensor.

- 1 Using <S>, open the *Settings* menu.
- 2 Using <▲▼◀▶> and <OK>, select and confirm the menu item, *System settings -> Settings of sensors and diff. sensors*.
The *Settings of sensors and diff. sensors* display opens.
- 3 Using <▲▼◀▶>, select a sensor and confirm with <OK>.
The display for the selection of the second sensor opens.

CONTROLLER		30 July 2016	10:14			
Link with...						
	No.	Sensor name	Measuring range			
	503	01351000	O2	0 ... 60,0 mg/l		
Select sensor , confirm						

figure 5-9 Settings of sensors and diff. sensors -> Link with...

- 4 Using **<▲▼◀▶>**, select a sensor and confirm with **<OK>**.
The sensors are linked.
The link in both sensors is entered in the *Edit list of sensors* overview.
The linked sensor is created as a new sensor and also appears in the measured value display.

5.5.2 Erasing a differential sensor

If a differential sensor is no longer required, it can be erased from the list of sensors.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Settings of sensors and diff. sensors*.
The *Settings of sensors and diff. sensors* display opens.
- 3 Press **<▲▼◀▶>** to highlight the & column and confirm with **<OK>**.
- 4 Press **<▲▼◀▶>** to highlight a differential sensor and confirm with **<OK>**.

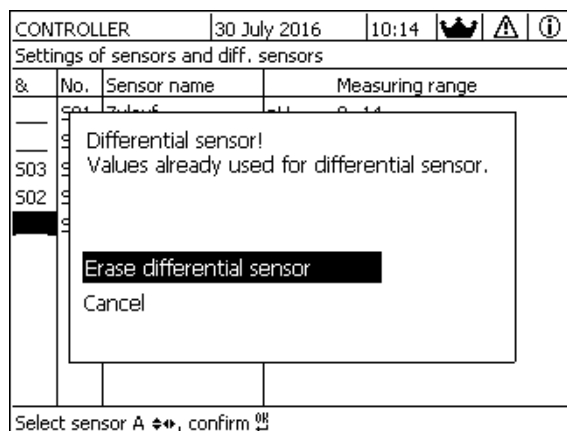


figure 5-10 Settings of sensors and diff. sensors -> Erase differential sensor

- 5 Using <▲▼◀▶>, select *Erase differential sensor* and confirm with <OK>.
The differential sensor is erased.

5.6 Settings for sensors/differential sensors

Sensor settings include the measured parameter, measuring range and, if necessary, compensations.

Enhanced sensor functions

For certain sensors, special representation types and settings are available in the menu, *Extended sensor functions*. An example for an enhanced sensor function is the editing of measured values as a graphic representation with cursor and zoom function (e.g. echo profile for the sludge level sensor IFL 700 IQ).

Sensor settings

The following diagram shows the operating steps to call up the sensor setting menu and enhanced sensor functions:

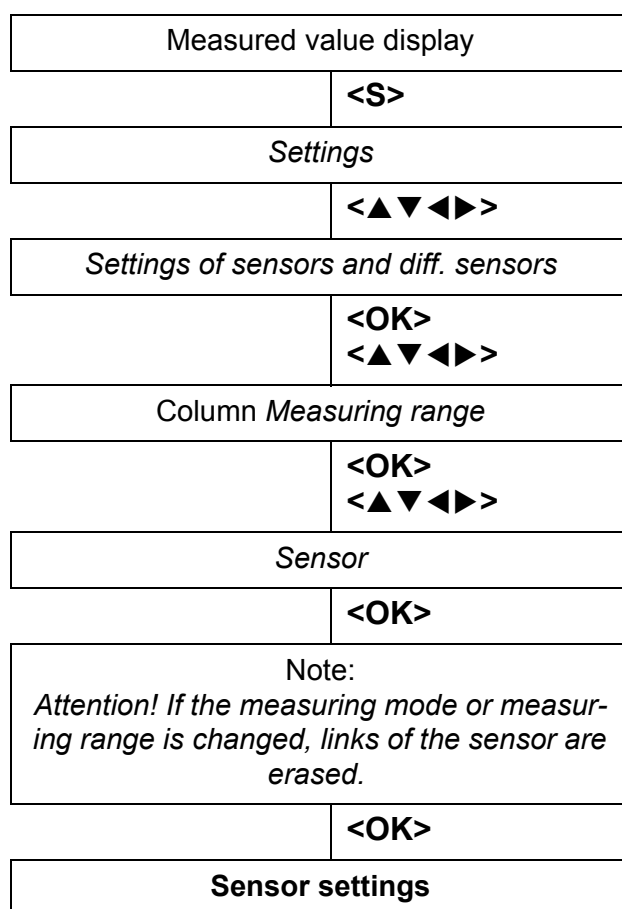


figure 5-11 Calling up the sensor settings



If the measuring mode or measured parameter are changed, a link of the sensor with a relay is erased!

Details on sensor settings are given in the operating manual for the IQ sensor.

5.7 *Sensor-sensor link* (automatic offset of an influencing quantity)

The *Sensor-sensor link* function automatically makes available the measured value of a sensor to another sensor in the IQ SENSOR NET system.

Example: Measuring the D.O. concentration

D.O. sensors measure the D.O. partial pressure and use the solubility function of oxygen in the test sample to calculate the D.O. concentration (mg/l). The solubility of oxygen in water is influenced by the salt content (the salinity) of the solution and other factors such as the temperature or air pressure.

Static salinity correction

To take into account the influence of the salinity on the D.O. concentration, many D.O. measuring systems provide a function where you can manually enter the salinity value. The sensor includes the salinity and provides a corrected measured value.

This type of static salinity correction is especially suitable for test samples with almost unchanging salinity.

To obtain optimum measurement results even with changing salinity values, the actual salinity has to be newly determined and entered for each measurement of the D.O. concentration.

Dynamic salinity correction

A dynamic salinity correction is provided by the *Sensor-sensor link* function. This function supplies the D.O. sensor continuously with the current salinity value and is thus especially suitable for the continuous measurement of the D.O. concentration with changing salinity values.

5.7.1 Establishing the sensor-sensor link

Requirements for a sensor-sensor link

The following requirements have to be met for a sensor-sensor link:

- Hardware
 - A sensor for which an influence quantity can be corrected (e. g. FDO® 700 IQ, TriOxmatic® 700 IQ) is in the IQ SENSOR NET system.
 - A sensor that measures the influence quantity (e.g. TetraCon® 700 IQ) is in the IQ SENSOR NET system.
- Software
 - The software of the sensor with correction function (e.g. FDO® 700 IQ) supports the *Sensor-sensor link* function.
 - The software of the sensor measuring the influence quantity (e.g. TetraCon® 700 IQ) supports the *Sensor-sensor link* function.
- Sensor settings
 - The correction function is enabled in the setting menu for the sensor with correction function (e.g. FDO® 700 IQ).
 - The automatic (dynamic) correction is enabled in the setting menu for the sensor with correction function (e.g. FDO® 700 IQ).
 - A sensor measures the influence quantity and displays it with the unit which is used for manual input in the menu of the sensor with correction

function (e.g. TetraCon[®] 700 IQ measures the salinity - salinity is quoted dimensionless).

- The manually entered value for the static correction is set to the mean value of the influence quantity (e.g. salinity value) of the test sample. If no measured value for the influence quantity is available, the correction is made with the value that was manually entered (static correction).

Establishing the link

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲><▼>** and **<OK>**, select and confirm the menu item, *System settings -> Sensor-sensor link*.
The *Sensor-sensor link* overview opens.
The displayed list includes all sensors with which the correction of an influence quantity is possible (e.g. FDO[®] 700 IQ).




CONTROLLER	30 July 2016	10 48			
Link (sensor to sensor)					
No.	Model	Sensor name	&		
S01	SC FDO 700	03270001	-		
◆◀-Select parameter, ESC - back					

figure 5-12 System settings -> Sensor-sensor link

- 3 Using **<▲><▼>**, highlight a sensor and confirm with **<OK>**.
The influence quantity to be linked and the current state of the link are displayed.

CONTROLLER	30 July 2016	10:55	🔒	⚠	ℹ
Link (sensor to sensor)					
S01 SC FDO 700 03270001					
Parameter	Linked sensor				
&1 SAL	-				
◆◆-Select parameter, ESC - back					

figure 5-13 System settings -> Sensor-sensor link

- 4 Using **<▲><▼>**, highlight a parameter to be linked, and confirm with **<OK>**.
The displayed list includes all sensors that measure an influence quantity with the correct unit (e.g. TetraCon[®] 700 IQ, which measures the salinity in mg/l).

CONTROLLER	30 July 2016	10:21	🔒	⚠	ℹ
Link (sensor to sensor)					
S01 SC FDO 700 03270001					
Parameter	Linked sensor				
&1 SAL	-				
S03 TetraCon700IQ 99190001	SAL				
Erase link					
◆◆-Select parameter, ESC - back					

figure 5-14 System settings -> Sensor-sensor link

- 5 Using **<▲><▼>**, highlight a sensor that can be linked, and confirm with **<OK>**.
The sensors are linked. The influence quantity to be linked and the linked sensor are displayed.
- 6 Leave the system settings with **<M>**.
In the measured value display, the corrected measured value is marked by an asterisk (*).

Behavior if there is no measured value for the influence quantity	Cause	Behavior
	– Sensor failure	<ul style="list-style-type: none"> – The manually entered value for the influence quantity is automatically used for correction. An exclamation mark (!) indicates the interrupted link. – The sensor-sensor link is reactivated as soon as the measured value for the influence quantity is available again.
	– Maintenance condition active	<ul style="list-style-type: none"> – The value last measured for the influence quantity is automatically used for correction. – The current measured value is used for correction as soon as the measured value for the influence quantity is available again.

5.7.2 Erasing a Sensor-sensor link

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲><▼>** and **<OK>**, select and confirm the menu item, *System settings -> Sensor-sensor link*.
The *Sensor-sensor link* overview opens.
The displayed list includes all sensors with which the correction of an influence quantity is possible (e.g. FDO[®] 700 IQ).
- 3 Using **<▲><▼>**, highlight a sensor and confirm with **<OK>**.
The displayed list includes all linked sensors.
- 4 Using **<▲><▼>**, highlight a sensor and confirm with **<OK>**.
The displayed list includes all sensors that measure an influence quantity with the correct unit (e.g. TetraCon[®] 700 IQ, which measures the salinity in mg/l) and the menu item *Erase link*.
- 5 Using **<▲><▼>**, highlight the menu item, *Erase link*, and confirm with **<OK>**.
The sensor-sensor link is erased.
- 6 Leave the system settings with **<M>**.
In the measured value display, the measured value is corrected by the manually entered value.



The *Sensor-sensor link* function is automatically deactivated if the measured parameter of the linked sensor is changed (e.g. by switching the display of the TetraCon[®] 700 IQ conductivity sensor from salinity to conductivity).

5.8 Editing the list of outputs

The *Edit list of outputs* display provides an overview of all outputs, links and inactive datasets (see section 9.4.3).

In the *Edit list of outputs* display, you can:

- assign output names (see section 5.4.1) and
- erase inactive datasets (see section 5.4.2).

5.8.1 Entering / editing the name of an output

For the easier identification of the outputs, you can assign an individual name to each output in the *Edit list of outputs* display.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Edit list of outputs*.
The *Edit list of outputs* overview opens.
- 3 Press **<▲▼◀▶>** to highlight a name in the *Name* column and confirm with **<OK>**.





 
CONTROLLER		30 July 2016	10:14			
Edit list of outputs						
No.	Model/Channel	Ser. no.	Name			
D01	MIQCR3/R1	99200004				
D01	MIQCR3/R2	99200004				
D01	MIQCR3/R3	99200004				
D01	MIQCR3/C1	99200004				
D01	MIQCR3/C2	99200004				
D01	MIQCR3/C3	99200004				
Select  , edit output names 						

figure 5-15 *Edit list of outputs -> enter a name*

- 4 Enter the name with **<▲▼◀▶>** and **<OK>** and confirm with **<OK>** (see also section 4.2.2).

CONTROLLER		30 July 2016	10:14			
Edit list of sensors						
No.	Model	Ser. no.	Sensor name			
S01	SensoLyt700IQ	99160001	08			
S05	TetraCon700IQ	99190001	99190001			
S02	TriOxmatic700IQ	01341000	01341000			
S03	VARiON A	04460001	04460001			
S04	VARiON N	04460001	04460001			
Select >< , display position/erase sensor						

figure 5-16 Edit list of sensors

5.8.2 Erasing an inactive dataset for an MIQ output module

An inactive dataset for an MIQ output module arises if the system receives no signals from a registered MIQ output module. Inactive datasets can be recognized by a question mark, e.g. "?01" in the *Edit list of outputs* overview.

An inactive dataset can be reactivated by assigning it, e.g. to an MIQ output module of the same type (see section 9.4.3). All settings are retained. If you no longer require the stored data, you can erase them.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Edit list of outputs*.
The *Edit list of outputs* display opens.
- 3 Using **<▲▼◀▶>** and **<OK>**, highlight and confirm the *Model/Channel* column. This column can only be highlighted if an inactive dataset (?xx) is present.
- 4 Press **<▲▼◀▶>** to highlight a *Model/Channel* and confirm with **<OK>**.

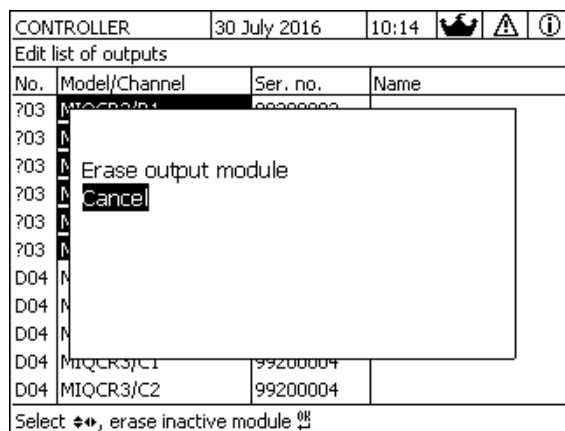


figure 5-17 Edit list of outputs -> Erase output module

- 5 Using **<▲▼◀▶>**, select *Erase output module* and confirm with **<OK>**. The dialog window for the security prompt appears.
- 6 Using **<▲▼◀▶>**, select *Erase output module* and confirm with **<OK>**. The output is erased.

5.8.3 Output links/settings

The proceeding and the possible settings for the linking of outputs with sensors are described with the description of the outputs (see chapter 7).

5.9 Settings for a measurement location

Primarily, the settings for a measurement location simplify the calibration of IQ sensors if several IQ sensors of the same type are operated on the system. The option of hiding IQ sensors on the measured value display that are not operated at the measurement location helps to find IQ sensors at the measurement location quickly.

Measurement location-related settings become effective as soon as a terminal is docked on an MIQ module. Measurement location-related settings include:

- the location name (module name)
- the selection of the sensors for the measured value display.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Location display*. The *Location display* display opens.




CONTROLLER		30 July 2016	10:14			
Location display:						
loc	Model	Ser. no.	Sensor name			
✓	SensoLyt700IQ	99160001	99160001			
✓	TetraCon700IQ	99190001	99190001			
✓	TriOxmatic700IQ	01341000	01341000			
✓	VARION A	04460001	04460001			
✓	VARION N	04460001	04460001			
Edit name of location						

figure 5-18 Location display

Entering the name of a measuring location

The name of the measurement location is displayed in the line with the name of the display. 15 characters are available for the name of the measurement location.

- 3 Press **<▲▼◀▶>** to select the name of the display, *Location display* and confirm with **<OK>**.
- 4 Press **<▲▼◀▶>** and **<OK>** to enter the location name and finally confirm with **<OK>** (see also section 4.2.2).

Selecting sensors for the measured value display on the measurement location

The measured value display provides the option of displaying either all sensors or a selection of sensors (see section 4.4.4).

As soon as a terminal is docked on any MIQ module, the selected sensors at the measurement location are displayed. All sensors for the display at the measurement location are activated in the delivery state.

You can select your sensors in the menu *Location display*. This selection is stored in the MIQ module on which the terminal is docked.

- 5 Select and confirm sensors for the local measured value display with **<▲▼◀▶>** and **<OK>**. This sets or removes a tick (✓) for the individual sensors.
Sensors selected for the display are marked with a tick (✓).

5.10 Alarm settings

5.10.1 General information

Under this menu item you can specify reactions on certain alarm events.

An alarm event is when a certain measured value (limiting value) of a sensor is exceeded or undercut. You can configure up to 20 alarm events.

Alarm events can be relayed as follows:

- As a message on the display
- As a relay action (with corresponding output module)
- As an E-mail (see section 5.11.4)



An alarm message via display or relay cannot be acknowledged or switched off. An alarm only disappears if the cause for the alarm was eliminated or the *Alarm settings* were changed or erased.

5.10.2 Setting up / editing alarms

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Alarm settings*.

The *Alarm link overview* dialog window opens.

Alarms that have already been set up have entries in the *Sensor* column.






CONTROLLER		30 July 2016	10:14			
Alarm link overview						
Alarm	Sensor	Designation				
A01						
A02	S03 01341000	lack of oxygen				
A03	S02 99191001	cond. too high				
A04						
A05						
A06						
A07						
A08						
A09						
A10						
Select  . Set alarm 						

figure 5-19 Alarm settings -> Alarm link overview



In the *Sensor* column, the sensor number (corresponding to the list of sensors) and series number is named.

- 3 Select an alarm A01 to A20 to be edited with <▲▼◀▶>. To set up a new alarm without entry select in the *Sensor* column. Then confirm with <OK>. When a new alarm is set up a list with all sensors appears first. Alarm links that are already available can be erased or edited (for editing continue with step 5).




CONTROLLER		30 July 2016	10:14			
Select sensor for alarm link						
No.	Model	Ser. no.	Sensor name			
S01	SensoLyt700IQ	99160001	Zulauf			
S05	TetraCon700IQ	99190001	Zulauf			
S02	TriOxmatic700IQ	01341000	Belebung 1			
S03	VARION A	04460001	04460001			
S04	VARION N	04460001	04460001			
Select sensor ◀▶, confirm ^{OK}						

figure 5-20 Select sensor for alarm link

- 4 To set up a new alarm, select a sensor from the list with <▲▼◀▶> and confirm with <OK>. The *Set alarm link* display opens.






CONTROLLER	30 July 2016	10:14			
Set alarm link					
Measured variable	Main variable				
Limit value	Upper limit				
Upper limit	48.0 mg/l				
Hysteresis	6.00 mg/l				
Designation					
Relay output	D01 R1				
Accept					
Cancel					
Adjust setting   confirm ⁰⁸					

figure 5-21 Set alarm link


- 5 Edit the setting table. The required operating steps are described in detail in section 4.2 GENERAL OPERATING PRINCIPLES.

Alarm links setting table

Menu item	Selection/Values	Explanations
<i>Measured variable</i>	<ul style="list-style-type: none"> ● <i>Main variable</i> ● <i>Adjoining variable</i> 	<i>Main variable</i> designates the actual measured parameter of the sensor (e.g. pH, oxygen, etc.). <i>Adjoining variable</i> designates an additional measured parameter (e.g. temperature).
<i>Limit value</i>	<ul style="list-style-type: none"> ● <i>Lower limit</i> ● <i>Upper limit</i> 	Type of the alarm event. <i>Lower limit</i> : An alarm is triggered if the defined limit value is undercut. <i>Upper limit</i> : An alarm is triggered if the defined limit value is exceeded.
<i>Lower limit / Upper limit</i>	within the measuring range (sensor-dependent)	Limit value for the alarm event
<i>Hysteresis</i>	0 - 10 % of the measuring range	Hysteresis for the limit value
<i>Designation</i>	(max. 20 characters)	User-defined designation for easier identification in the alarm message.
<i>Relay output</i>	Dxx / .../Ry <i>No relay output</i>	Opens a list with all relay outputs where the <i>Alarm contact</i> is set. Dxx: number of the output module .../Ry: relay output channel Here you can select a relay output. When the alarm event occurs, it carries out the specified action (Open or Close). For details, see section 5.10.3 ALARM OUTPUT TO DISPLAY.
<i>Accept</i>		The settings are taken over in the setting table by pressing <OK> . The display switches to the next higher level.
<i>Cancel</i>		The display switches to the next higher level without storing the new settings.

5.10.3 Alarm output to display

When an alarm event occurs, a window with a text message appears.

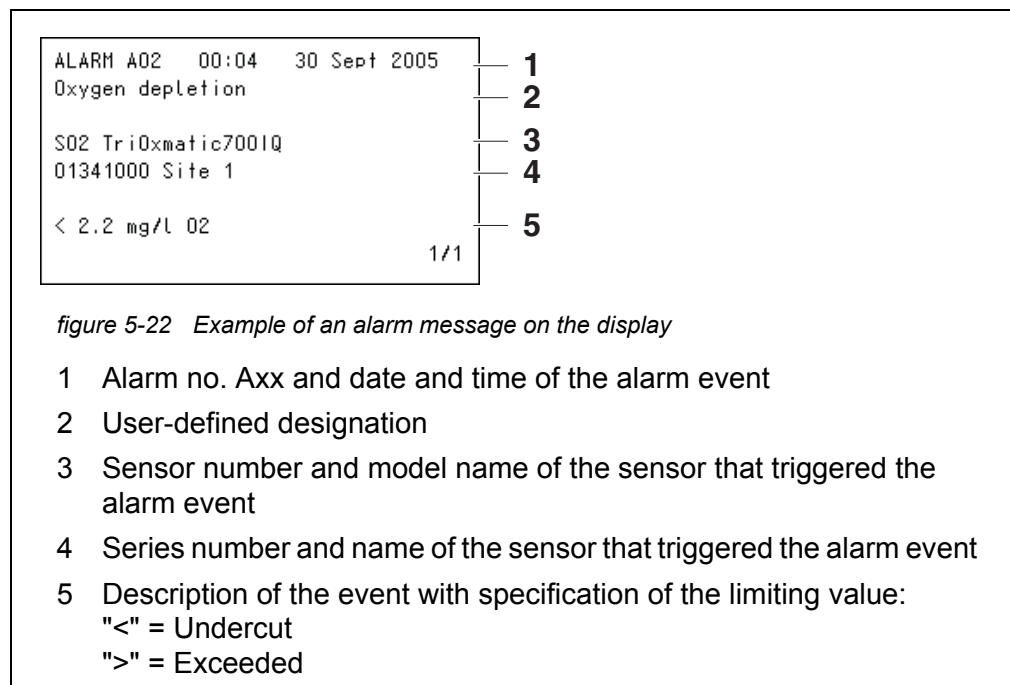

Operating instructions

If there are several alarm messages indicated on the display, you can scroll through the messages with **<▲▼◀▶>**. This can be recognized from the page number in the right lower corner. The latest message is always on the first position.

Pressing **<M>** hides the alarm messages and switches to the measured value display. After one minute the alarm messages appear again if what caused them is still present.

5.10.4 Alarm output as relay action

The relay outputs of the IQ SENSOR NET can be configured so a relay action is triggered when an alarm event occurs (Open or Close). For this the *Alarm contact* function must be set for the relay output in the *Settings of outputs and links*.

The *Alarm contact* function is only available for relays that are not linked with a sensor. If necessary, an existing link must be erased. For details please refer to the operating manual of the output module.

5.10.5 Alarm message as an email

All alarm messages can be sent to an email address. In this case, the same information that is output on the display is transmitted. For details, see

section 5.11.4.

Prerequisite A connection to the Internet exists (see chapter 6 ETHERNET CONNECTION).



For critical alarm events take into account that Email messages may possibly be received delayed.

5.11 System settings

System settings include:

- *Language* (see section 5.1)
- *Date/Time* (see section 5.11.1)
- *Location altitude/Air pressure* (see section 5.11.2)
- *TCP/IP settings*
- *E-mail*
- *Settings bus interfaces*
- *Function code*

5.11.1 Setting the date and time

The real time clock is used for the display of date and time in the measured value display and in log book entries.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Date/Time*.
The *Date/Time* display opens.
- 3 Press **<▲▼◀▶>** to select *Set date* or *Set time*.
- 4 Confirm the selection with **<OK>**.
A field is highlighted, e.g. *Year*.

CONTROLLER	30 July 2016	10:14			
Date/Time					
Set date					
Year	2008				
Month	May				
Day	26				
Set time					
Hour	10				
Minute	43				
Select , confirm					

figure 5-23 Date/Time

- 5 Press **<▲▼◀▶>** and **<OK>** to select and confirm a number. The next field is highlighted, e.g. *Month*.
- 6 Complete the entries on the display *Date/Time*.



The clock in the MIQ/MC3 and MIQ/TC 2020 3G bridges periods of power failure for several hours. After a longer power failure, the time is reset. A message and an entry in the log book provide information on the power failure and the necessity for resetting the clock.

5.11.2 Location altitude / average air pressure

Automatic air pressure measurement

In systems with automatic air pressure measurement, the currently measured air pressure value is displayed in the menu *System settings -> Location altitude/Air pressure*. Values that are manually set are not accepted by the system.

Setting the air pressure manually

If the automatic air pressure measurement does not work, and in systems without automatic air pressure measurement, air pressure values can be set within a range of 500 to 1100 mbar.

- 1 Using **<S>**, open the *Settings* menu.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Location altitude/Air pressure*. The *Location altitude/Air pressure* display opens.

CONTROLLER	30 Juli 2014	10:14	👑	⚠	ℹ
Location altitude/Air pressure					
Set altitude of location					
Loc. altitude:		590 m	amsl		
Set air pressure					
Air pressure:		1013 mbar			
Select ⬅➡, confirm ⏹					

figure 5-24 Location altitude/Air pressure

- 3 Press <▲▼◀▶> to select *Set altitude of location* or *Set air pressure* and confirm with <OK>.
- 4 Press <▲▼◀▶> to change the values for *Loc. altitude* or *Air pressure* and confirm with <OK>.

5.11.3 TCP/IP settings

The *TCP/IP settings* menu includes functions and settings for the operation of the IQ SENSOR NET in an Ethernet network.

- 1 Using <S>, open the *Settings* menu.
- 2 Using <▲▼◀▶> and <OK>, select and confirm the menu item, *System settings* -> *TCP/IP settings*.
The *TCP/IP settings* display opens.

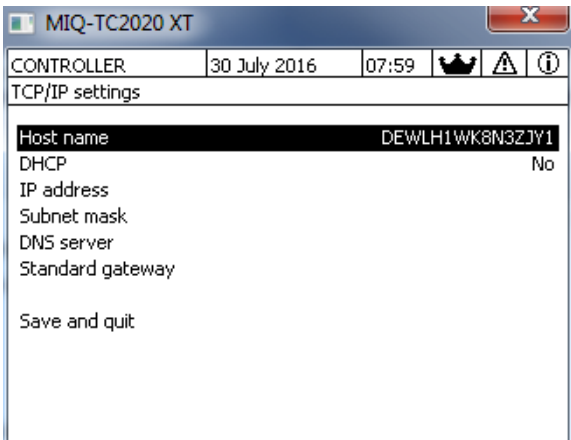


figure 5-25 TCP/IP settings

- 3 Press <▲▼◀▶> and <OK> to select and confirm a menu item.
An entry field or selection list opens up.

Setting	Selection/Values	Explanation
DHCP	Yes	The IQ SENSOR NET is configured as a DHCP client. If a DHCP server is in the network, the IQ SENSOR NET receives all further network settings from the DHCP server.
	No	The IQ SENSOR NET is not configured as a DHCP client. All other settings have to be made as necessary.
IP address	Address	Permanent IP address for the IQ SENSOR NET in the LAN (if DHCP No).

Setting	Selection/Values	Explanation
<i>Subnet mask</i>	Address	Subnet mask (if <i>DHCP No</i>). The subnet mask depends on the network size (for small networks: e.g. 255.255.255.0).
<i>DNS server</i>	Address	Entry for fieldbuses not required. For a connection with the Internet (if <i>DHCP No</i>), e.g.: <ul style="list-style-type: none"> ● IP address of the DNS server in the network ● Entry of <i>IP address</i> or e.g. 127.0.0.1
<i>Standard gateway</i>	Address	Entry for fieldbuses not required. For a connection with the Internet (if <i>DHCP No</i>), e.g.: <ul style="list-style-type: none"> ● IP address of the instrument providing access to the Internet ● Entry of <i>IP address</i> or e.g. 127.0.0.1

- 4 Enter texts with <▲▼◀▶> and <OK>, or select and confirm an option from the list.
- 5 Complete the entries on the display *TCP/IP settings*.

5.11.4 E-mail

Prerequisite An Internet connection exists.

The *E-mail* menu contains functions and settings for the sending of alarm messages via email.

- 1 Open the *Settings* menu with <S>.
- 2 Using <▲▼◀▶> and <OK>, select and confirm the menu item, *System settings* -> *E-mail*.
The *E-mail* display opens.

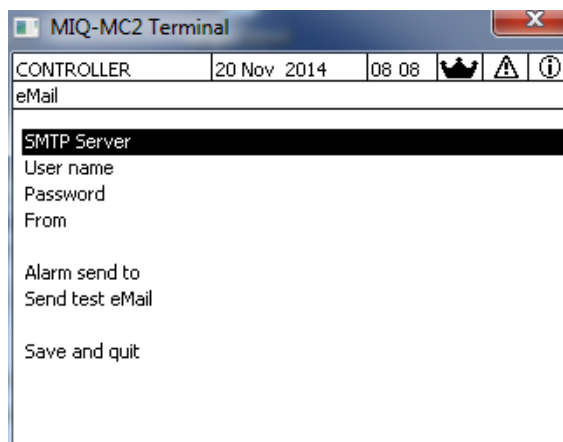


figure 5-26 E-mail settings

- 3 Press <▲▼◀▶> and <OK> to select and confirm a menu item. An entry field or selection list opens up.

Setting	Selection/Values	Explanation
<i>SMTP Server</i>	Address	Address of the SMTP server of the email provider through which the email will be sent.
<i>User name</i>	Name	User name of the email account
<i>Password</i>	Character string	Password to log on to the email account
<i>From</i>	Name	Email sender address
<i>Alarm send to</i>	Name	Email target address
<i>Send test email</i>		A test email with the specified settings is sent.

- 4 Enter texts with <▲▼◀▶> and <OK>, or select and confirm an option from the list.
- 5 Complete the entries on the display *E-mail*.
- 6 Using <▲▼◀▶> and <OK>, select and confirm the menu item, *Save and quit*.
The settings are stored. The menu is closed.

5.11.5 Settings bus interfaces

The *Settings bus interfaces* menu contains functions and settings for the com-

munication of the IQ SENSOR NET with a fieldbus. Prerequisite: An interface to a fieldbus is available (hardware, optional).

For details, see operating manual ba77010 "IQ SENSOR NET Fieldbus linking", for download under www.WTW.com.

5.11.6 Function code

Function for the service staff.

5.12 Measured value logging

As soon as the IQ SENSOR NET system identifies a sensor, the recording of measured values start automatically (recording interval 1 min, recording duration 14 days).

You can display the stored measured values

- as a list or
- display the temporal course of the stored measured values graphically (see section 4.4.4).
- display the stored measured values to a PC.

You can adjust to your requirements the standard settings for the measured value recording of IQ sensors or differential sensors in the menu, *Measured value logging*.

The system allocates memory blocks to an IQ sensor for the *Measured value logging*. With a recording interval of 1 measurement dataset per minute, a recording duration of 1 day per memory block is possible. 360 memory blocks are available and can be distributed to the sensors.

The recording duration directly depends on the recording interval. If a recording duration of 0 d is set for a sensor, there is no memory block allocated to the IQ sensor. The *Dur.* setting also contains the number of the allocated memory blocks (see table).

Recording interval	Possible recording durations with the given recording interval					
1 min	0 d	1 d	2 d	3 d	...	360 d
5 min	0 d	5 d	10 d	15 d	...	1800 d
10 min	0 d	10 d	20 d	30 d	...	3600 d
15 min	0 d	15 d	30 d	45 d	...	5400 d
30 min	0 d	30 d	60 d	90 d	...	10800 d
60 min	0 d	60 d	120 d	180 d	...	21600 d

5.12.1 Setting the recording interval (*dt*) and recording duration (*Dur.*)

- 1 Open the *Settings* menu with **<S>**.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Measured value logging*.
The *Measured value logging* display opens.
It contains a list of all sensors and inactive sensors.





 
Terminal PC		01 Jan 2001	00:50			
Measured value logging						
No.	Model	Sensor name	dt	Dur.		
S01	SensoLyt700IQ	Zulauf	1 min	1 d		
S05	TetraCon700IQ	Zulauf	5 min	5 d		
S02	TriOxmatic700IQ	Belebung 1	10 min	30 d		
S06	TriOxmatic701IQ	01341001	15 min	15 d		
Save and quit		Quit				
Free storage: 100 %						
select  , edit log interval 						

figure 5-27 Measured value logging

- 3 Press **<▲▼◀▶>** and **<OK>** to select and confirm the *dt* column.
- 4 Select and confirm a sensor with **<▲▼◀▶>** and **<OK>**.
- 5 Determine the recording interval with **<▲▼◀▶>** and **<OK>**.
When the recording interval is changed, the recording duration changes at the same time (*Dur.*), because the recording duration results from the recording interval due to a fixed number of memory blocks.
- 6 Switch to the selection of columns with **<ESC>**.
- 7 Press **<▲▼◀▶>** and **<OK>** to select and confirm the *Dur.* column.
- 8 Select and confirm a sensor with **<▲▼◀▶>** and **<OK>**.
- 9 Select the recording duration with **<▲▼◀▶>** and **<OK>**.
The recording duration is always increased or decreased in the same steps.



The percentage of the memory blocks not yet allocated is shown on the display. If all memory block are occupied (*Free storage: 0%*), the number of memory blocks allocated to another IQ sensor may have to be reduced.

When the number of memory blocks for a sensor is reduced, the memory block

with the oldest data is erased. All other data is retained.



For inactive IQ sensors, the *Dur.* setting can only be reduced.

- 10 Switch to the selection of columns with **<ESC>**.
- 11 Press **<▲▼◀▶>** and **<OK>** to select and confirm the *Save and quit* column.
The changes are stored.
The *Settings* display opens.



If the changes made for recording duration or recording interval should not be stored, press **<▲▼◀▶>** and **<OK>** to select and confirm the *Quit* field.

6 Ethernet connection

The Ethernet interface for the IQ SENSOR NET system is on the MIQ/MC3 controller.



If, in the IQ SENSOR NET system, no MIQ/MC3 controller is available, an Ethernet connection can also be realized via the USB interface of the MIQ/TC 2020 3G controller and an external USB Ethernet adapter.

Please note the following restrictions with an Ethernet connection via a USB Ethernet adapter:

- no connection to Ethernet fieldbuses
- possible interferences due to electromagnetic influences

If the IQ SENSOR NET system is connected to an Ethernet network, communication with the IQ SENSOR NET is enhanced and facilitated.

- The Ethernet interface allows the IQ SENSOR NET to be integrated into a local network and to be connected to other networks (e.g. Internet) using commercially available network technology.
- The web server of the controller makes available the measurement data of the IQ SENSOR NET as a web page.
- Communication with the IQ SENSOR NET is possible via a large number of network-capable terminals.
 - Internet-capable devices with web browser (e.g. PC, smartphone, tablet PC) can display the measurement data of the IQ SENSOR NET.
 - The programs of the IQ WEB CONNECT can be used to operate and manage the IQ SENSOR NET on a PC.
- Extraction of the data provided by the web server is possible using commercially available or self-created programs (DataLogger).
- With the Ethernet interface of the MIQ/MC3, the instrument can additionally be integrated into an EtherNet/IP™, Profinet and Modbus TCP environment. Details on this subject are given in the operating manual ba77010e ("IQ SENSOR NET fieldbus linking"). The current version can be found on the Internet at www.WTW.com.

6.1 Configuring the Ethernet network

The following overview helps in the planning, project planning and installation of a network connection of the IQ SENSOR NET.

A basic understanding of network technology is useful for setting up a local network and especially the connection to the Internet.

Various settings are to be made on the individual network subscribers according to the configuration of the network.

Insofar as the settings affect network subscribers of third-party vendors (e.g. the router), only a general reference is made here to the setting. For details, of the menus in which the settings are made, please refer to the respective operating manual for your device.

If you have no knowledge of networks, please contact your network administrator.

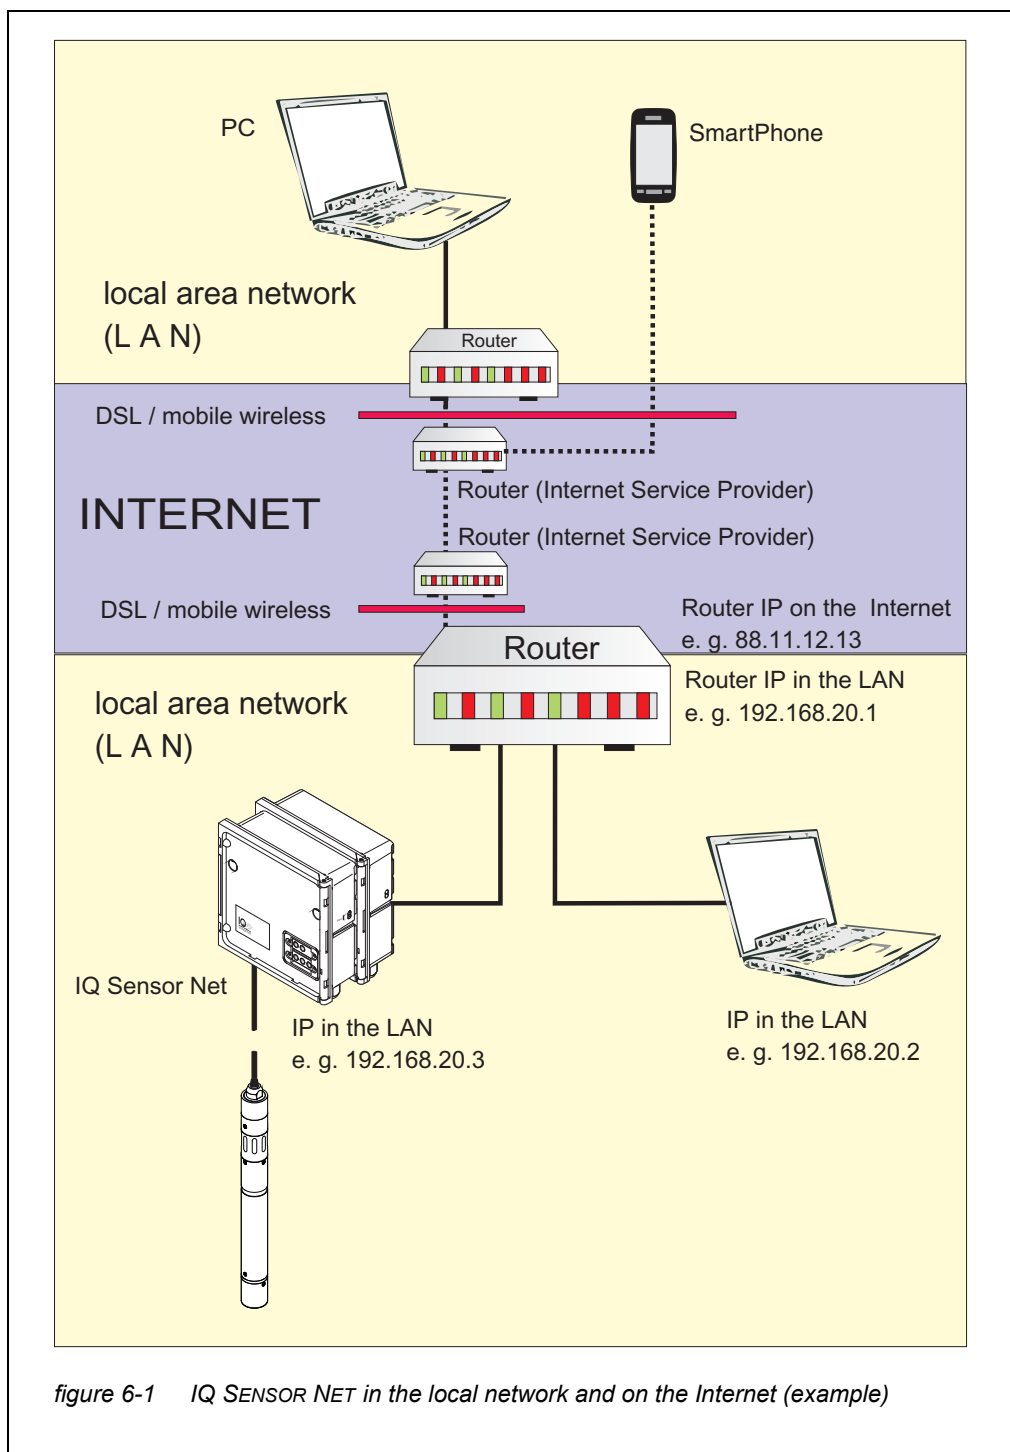


figure 6-1 IQ SENSOR NET in the local network and on the Internet (example)

USB Ethernet adapter for MIQ/TC 2020 3G

With the MIQ/TC 2020 3G as controller, the connection to the Ethernet takes place via a USB Ethernet adapter. Suitable are USB/Ethernet adapters with Asix AX88772(A/B/C) chip set. We recommend the following adapters:

- DIGITUS 10/100 ETHERNET ADAPTER USB2.0 (VERSION A)
- TRENDNET TU-ET100(V3_DR)
- Edimax EU-4208
- I-tec U2LAN



Operating a USB Ethernet adapter on the MIQ/TC 2020 3G can increase the electromagnetic susceptibility of the MIQ/TC 2020 3G.

Especially for permanent operation with a USB Ethernet adapter, we recommend operating the system in an environment with a rather low electromagnetic load.

Interference free operation (e.g. in an industrial electromagnetic environment) is possible via the Ethernet interface of the MIQ/MC3.

Please keep in mind that if any USB Ethernet adapters are used, we cannot guarantee a fault-free functioning and cannot answer any requests for support.

6.1.1 Communication in a local network (LAN)

	Prerequisites	Details / Examples / Designations
Hardware	IQ SENSOR NET System 2020 3G	IQ SENSOR NET controller:MIQ/MC3 or MIQ/TC 2020 3G, configured as controller, with USB Ethernet adapter
	Ethernet cable	RJ45 cable to connect the IQ SENSOR NET and router. <u>Note:</u> If the MIQ/MC3 is operated outdoors, note section 6.2.
	Terminal equipment (a network subscriber that sets up the communication), e.g.:	<ul style="list-style-type: none"> ● PC ● Tablet PC ● Smartphone
Software	Communication software on the terminal equipment, e.g.:	<ul style="list-style-type: none"> ● Web browser

	Prerequisites	Details / Examples / Designations
Network address of the controller in the LAN	Network services (e.g. on the terminal device or router)	<ul style="list-style-type: none"> ● WINS server ● DHCP and DNS servers (for network access in the LAN via the name of the MIQ/MC3 or MIQ/TC 2020 3G)
	Configuration of the terminal or controller	<ul style="list-style-type: none"> ● Instrument name (is defined in the terminal settings (see section 5.2) In the default condition, the name is the combination "instrument name-serial number (e.g. "MC3-16160001"). or <ul style="list-style-type: none"> ● Fixed local IP address of the controller (defined in the settings of the controller (see section 6.1.2).

6.1.2 Communication on the Internet

	Prerequisite	Details / Examples / Designations
Hardware	IQ SENSOR NET System 2020 3G	IQ SENSOR NET controller:MIQ/MC3 or MIQ/TC 2020 3G, configured as controller, with USB Ethernet adapter
	Router, e.g.	<ul style="list-style-type: none"> ● DSL router ● Mobile wireless router
	Ethernet cable	RJ45 cable to connect the IQ SENSOR NET and router. <u>Note:</u> If the MIQ/MC3 is operated outdoors, note section 6.2.
Software	Terminal equipment (network subscriber that sets up the communication), e.g.:	<ul style="list-style-type: none"> ● PC ● Tablet PC ● Smartphone
	Communication software on the terminal equipment, e.g.:	<ul style="list-style-type: none"> ● Web browser
Network address of the MIQ/MC3 on the Internet	Internet services	The network address of the router on the Internet is configured via an Internet service (see below).


	Prerequisite	Details / Examples / Designations
Internet services	Internet access with data flat rate, e.g.:	<ul style="list-style-type: none"> ● DSL connection ● Mobile wireless connection (SIM card)
	Internet service which makes the router publicly addressable on the Internet, e.g.:	<ul style="list-style-type: none"> ● A public IP address (e.g. available at an Internet service provider) ● A service (e.g. DynDNS), which assigns a fixed name to a changing IP address of an Internet subscriber so that the subscriber is always accessible under the same name
Special settings of the network subscriber	IQ SENSOR NET	<p>Menu: <i>System settings / TCP/IP settings:</i></p> <ul style="list-style-type: none"> ● <i>DHCP: No</i> ● <i>IP address:</i> Enter static IP address Default setting: MIQ/MC3: 192.168.1.200 MIQ/TC 2020 3G: 192.168.1.201 The IP address must lie outside the address range of the DHCP server (the DHCP server is often a network service of the router). ● <i>Subnet mask:</i> Default setting: 255.255.255.0 The IP address depends on the local network. ● <i>DNS server:</i> Local IP address of the router (e.g. 129.168.179.1) ● <i>Standard gateway:</i> Local IP address of the router (e.g. 129.168.179.1)
	Router (see operating manual for your router)	<ul style="list-style-type: none"> ● Data for Internet access (from Internet service provider) ● Port forwarding of port 8080 to port 80 of the fixed IP address of the MIQ/MC3

6.2 Ethernet connection with installation outdoors (MIQ/MC3)


When plugged in, the RJ45 socket is not sufficiently protected against moisture. With open air installation, the Ethernet cable must therefore be clamped directly onto the PCB of the MIQ/MC3 controller to ensure a safe Ethernet communication. For this purpose there is a 4-pole terminal strip and a shielding terminal on the main PCB. An LSA punch down tool is required for the assembly.

Connecting the Ethernet cable with the main PCB

- 1 Open the MIQ module.
- 2 Remove the anti-twist protection on the RJ45 socket enclosure (pos. 2 in) with a Torx screw driver (Tx10). The anti-twist protection consists of 2 plastic parts and a screw.
Caution: Do not lose the parts!

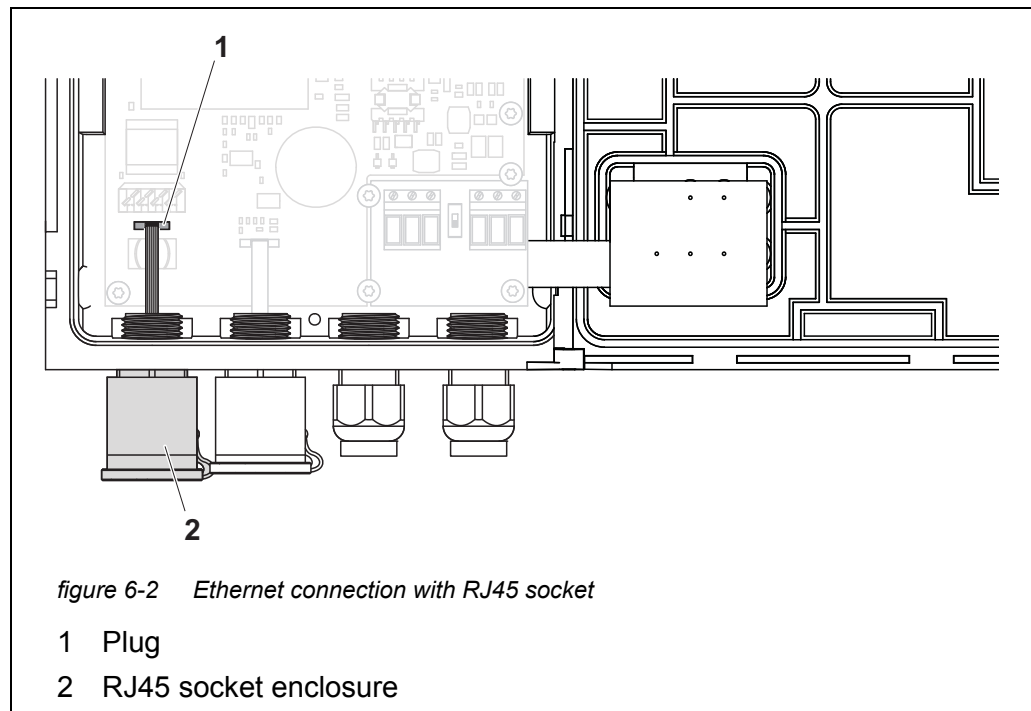

- 3 Disconnect the flat flexible cable from the plug (pos. 1) on the main PCB.
- 4 Unscrew the RJ45 socket enclosure (pos. 2).
- 5 Screw a cable gland with sealing ring into the free duct.
- 6 Remount the anti-twist protection. If necessary, screw out the cable gland somewhat so the anti-twist protection can be mounted.

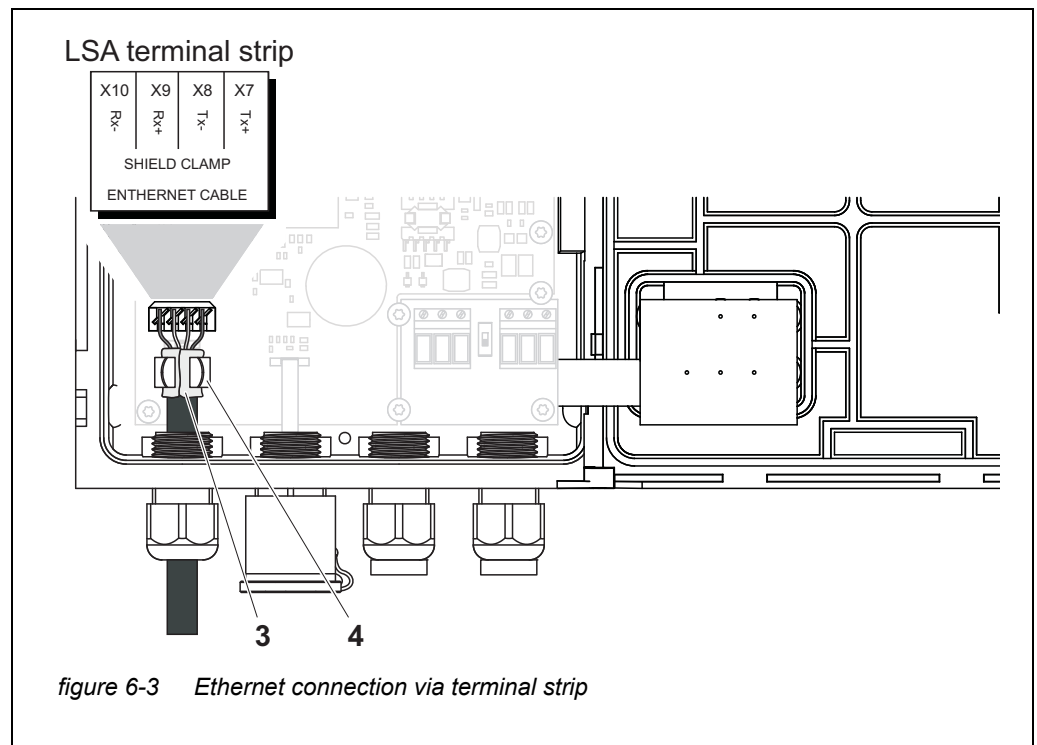

- 7 Strip the Ethernet cable for approx. 2 cm and untwist the Rx+, Rx-, Tx+ and Tx- wires.
- 8 Carefully slash the cable shield (foil + netting) lengthwise and put it backwards over the cable sheath (pos. 3 in figure 6-3).
- 9 Loosen the coupling ring of the cable gland and feed the Ethernet cable into the module housing.
- 10 Where the cable shield was put backwards, press the Ethernet cable into the shielding terminal (pos. 4 in figure 6-3). The shielding terminal must contact the cable shield across a wide area.
- 11 Connect the Rx+, Rx-, Tx+ and Tx- wires to the LSA terminal strip with the aid of an LSA punch down tool. Make sure that the cable assignment agrees with the specification on the terminal label under the terminal strip.
- 12 Fasten the cap nut of the screwed cable gland.
- 13 Close the module.

6.3 Establishing the connection with the IQ SENSOR NET via a network

6.3.1 Opening the IQ WEB CONNECT

The web server of the MIQ/MC3 provides functions for the (remote) operation of the MIQ/MC3 and for the data exchange (e.g. with a PC) via a network address.

Prerequisites

- All network components (Universal Transmitter, router, network-capable devices with browser) are connected
- The network services are active
- Web browser (HTML 5)



The IP address and the other network settings for the Universal Transmitter MIQ/MC3 are configured in the *System settings* -> *TCP/IP settings* menu.

Procedure

Enter the network address of the MIQ/MC3 in the address line in the web browser

- 1 Enter the network address of the MIQ/MC3 in the address line of the web browser
 - in the LAN
e.g. name or IP address of the MIQ/MC3
 - On the Internet,
e.g. fixed IP address of the router or DynDNS name

The network connection to the MIQ/MC3 is established.
The start page of the IQ SENSOR NET is displayed.

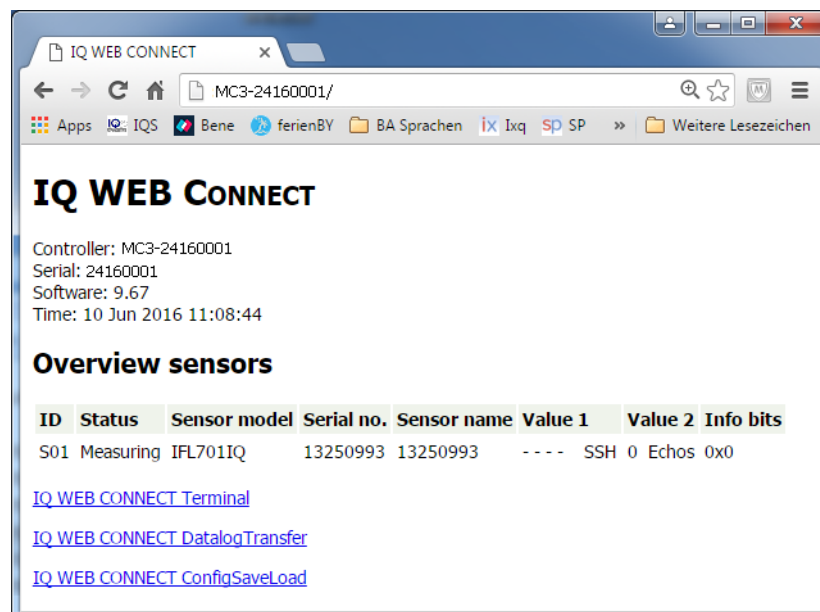


figure 6-4 IQ WEB CONNECT start page

The IQ WEB CONNECT start page of the MIQ/MC3 provides links to the following functions of the controller (MIQ/MC3 or MIQ/TC 2020 3G):

- "IQ WEB CONNECT Terminal"
(Operating the controller)
- "IQ WEB CONNECT DatalogTransfer"
(transmitting measurement data)
- "IQ WEB CONNECT ConfigSaveLoad"
(Saving and loading the system configuration)

- 2 Open a link on the IQ WEB CONNECT start page.
- 3 Enter the user name and password
(User name: "ADMIN"
Password: is determined in the setting of the extended access control on the MIQ/MC3 (factory setting of the password: "1111")
The selected website is displayed.

6.3.2 IQ WEB CONNECT Terminal

With the "IQ WEB CONNECT Terminal", you can operate your MIQ/MC3 just like you are used to on the instrument.



You can save data to a USB memory device connected to the instrument (similar to operation of the instrument). To save data to a PC, select the function "IQ WEB CONNECT DatalogTransfer" (see section 6.3.3).

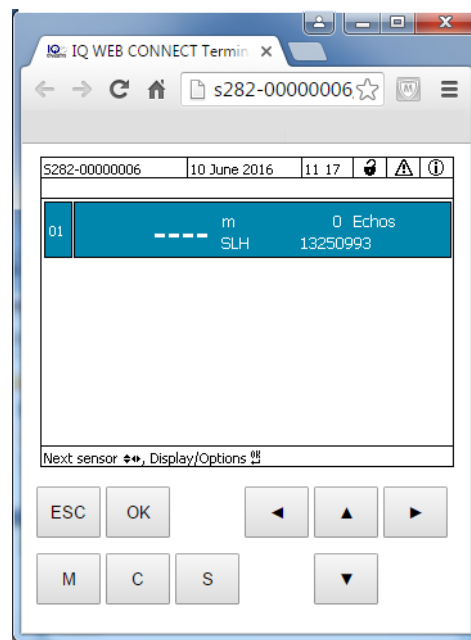


figure 6-5 IQ WEB CONNECT Terminal

6.3.3 IQ WEB CONNECT DatalogTransfer



"IQ WEB CONNECT DatalogTransfer" exchanges data with the terminal device with which you are carrying out IQ WEB CONNECT functions. The data exchange is optimized for the following operating systems:

- Microsoft® Windows®
- Linux

Via the website "IQ WEB CONNECT DatalogTransfer", you can save measurement data of the MIQ/MC3 directly to a PC.

The transmitted measurement data are stored in a separate file in CSV data format for each sensor. The file name (e. g. S03_TriOxmatic700IQ_1.csv) is automatically assigned and includes:

- sensor number (e. g. S03)
- sensor model (e. g. TriOxmatic700IQ)
- consecutive number.

For processing you can open the csv file, e.g. with Microsoft Excel.

	2	3	4	5	6	7	8	9
1	S01	TetraCon700IQ	Bio1	12010002	01.02.2012 11:42			
2	01.02.2012 9:00	Valid	0.00433635	mS/cm	Cond	Valid	24.437	°C
3	01.02.2012 8:58	Valid	0.00433578	mS/cm	Cond	Valid	24.341	°C
4	01.02.2012 8:57	Valid	0.00433541	mS/cm	Cond	Valid	24.327	°C
5	01.02.2012 8:56	Valid	0.00433485	mS/cm	Cond	Valid	24.313	°C
6	01.02.2012 8:55	Valid	0.00433391	mS/cm	Cond	Valid	24.298	°C
7	01.02.2012 8:54	Valid	0.00433344	mS/cm	Cond	Valid	24.269	°C

figure 6-6 Example of a CSV file after being imported into Microsoft Excel

- 1 Identification of the measurement data (from left to right, line 1)
 - Sensor number (Sxx)
 - Sensor model
 - Sensor name
 - Serial number (sensor)
 - Date and time of the file save
- 2 Date and time of the measured value save
- 3 Measured value status
- 4 Measured value
- 5 Unit of the measured value
- 6 Measured parameter
- 7 Measured value status of the secondary measured value
- 8 Secondary measured value
- 9 Unit of the secondary measured value



The measured values are transmitted unprocessed. Therefore, the measured values may have a number of decimal places that exceeds the display accuracy of the respective sensor.

When you want to display and process the transmitted measured values, it may be required to limit the number of digits (e. g. by rounding).

6.3.4 IQ WEB CONNECT ConfigSaveLoad



"IQ WEB CONNECT DatalogTransfer" exchanges data with the terminal device with which you are carrying out IQ WEB CONNECT functions. The data exchange is optimized for the following operating systems:

- Microsoft® Windows®
- Linux

Via the website IQ WEB CONNECT ConfigSaveLoad, you can display or save the system configuration of the MIQ/MC3 or load it to a MIQ/MC3.

The system configuration contains the same data as with the backup via the USB :interface (see section 4.9.2).

6.4 Communication with fieldbuses (MIQ/MC3[-XX])

Details on communication with fieldbuses are given in the operating manual ba77010e ("IQ SENSOR NET fieldbus linking"). The current version can be found on the Internet at www.WTW.com.

6.5 Troubleshooting

The IQ SENSOR NET provides an Ethernet interface for the connection of the IQ SENSOR NET to private networks, company networks and public networks.

To establish accessibility of the IQ SENSOR NET in a public network (e.g. Internet), external services (e.g. Internet access, fixed public IP address etc.) are required.

A detailed error analysis for connection errors is not possible within the scope of the IQ SENSOR NET operating manual because of the multitude of service providers, network architectures and connection options involved.

Ethernet LED (MIQ/MC3)

A working Ethernet data connection is displayed by means of an LED in the MIQ/MC3:

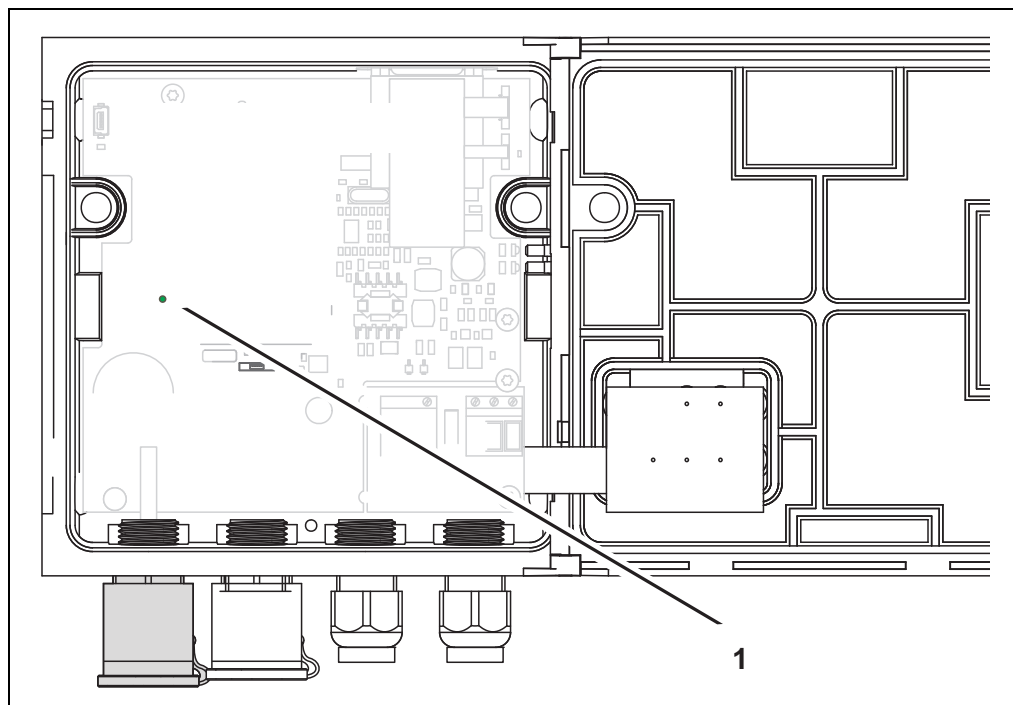


figure 6-7 MIQ/MC3 Ethernet LED

1 MIQ/MC3 Ethernet LED

- Lights up yellow: Data connection OK, no data traffic
- Flashing yellow: Data connection OK, data traffic

Here is a selection of possible causes for network/connection problems. If there are other connection problems, contact your network administrator or a network specialist.

No network connection	Cause	Remedy
	<ul style="list-style-type: none"> – Ethernet hardware defective, e.g. <ul style="list-style-type: none"> – Ethernet cable defective – Ethernet connection on the MIQ/MC3 or router defective 	<ul style="list-style-type: none"> – Open the MIQ/MC3 and check the yellow Ethernet LED. <ul style="list-style-type: none"> – The yellow Ethernet LED is not illuminated (hardware defective): Use different hardware, e.g.: Ethernet cable, Ethernet socket on the router, router – The yellow Ethernet LED lights up or flashes (hardware OK): Check for other errors (see below)
	<ul style="list-style-type: none"> – Incorrect network address entered in the LAN (name) 	<ul style="list-style-type: none"> – Enter the correct name: "Device name-series number", replace special characters (/ , blanks etc.) with "-", e.g. MC3-16340001 – Ascertain or define the correct IP address of the controller in the local network (e.g. IQ SENSOR NET setting + router setting) and enter
	<ul style="list-style-type: none"> – Incorrect network address on the Internet (IP address of the router) 	<ul style="list-style-type: none"> – Ascertain or define the correct Internet IP address of the router (e.g. FixedPublicIP) and enter
	<ul style="list-style-type: none"> – the maximum number of IQ WEB CONNECT network connections from an end device to the controller is exceeded 	<ul style="list-style-type: none"> – terminate an IQ WEB CONNECT connection (maximum number of IQ WEB CONNECT connections, see section 1.2.4)
	<ul style="list-style-type: none"> – Incorrect setting in the router (e.g. Internet access data, port forwarding) 	<ul style="list-style-type: none"> – Correct settings
	<ul style="list-style-type: none"> – Incorrect setting in the IQ SENSOR NET (System menu/ <i>TCP/IP settings</i>) 	<ul style="list-style-type: none"> – Correct settings

Cause	Remedy
<ul style="list-style-type: none"> Ports which are used by the IQ SENSOR NET are already assigned to other devices in the network (e.g. another IQ SENSOR NET system) 	<ul style="list-style-type: none"> Have your network administrator assign free ports to you Specify the port (1-65535) manually in the address line of the browser/IQ WEB CONNECT (example: http://10.11.12.13:65535) Forward this port (65535) in the router to the IP address of the controller.
<ul style="list-style-type: none"> Blocking by firewall 	<ul style="list-style-type: none"> Contact your network administrator or a network specialist

Interrupted Ethernet connection

Cause	Remedy
<ul style="list-style-type: none"> Electromagnetic interferences in the vicinity of the Terminal/Controller MIQ/TC 2020 3G interrupt the Ethernet connection via a USB Ethernet adapter 	<ul style="list-style-type: none"> Establish an Ethernet connection via the IQ SENSOR NET controller MIQ/MC3 Increase the shielding of the cable at the USB Ethernet adapter against electromagnetic interference

6.6 Technical network terms

DHCP **(Dynamic Host Config- uration Protocol)**

DHCP is a network service which automatically assigns an IP address to a network subscriber.

In local networks, this function is mostly carried out by the router.

DNS **(Domain Name Sys- tem)**

DNS is a network service which manages the name of a subscriber on the Internet (e.g. www.google.com) and the associated IP address e.g. "http://74.125.224.72/".

In local networks, this function is mostly carried out by the router.

DynDNS **(Dynamic DNS)**

DynDNS is an Internet service which makes a subscriber with changing (dynamically issued) IP address accessible under a fixed name on the Internet.

Prerequisite: The router in the local network must support DynDNS and must always send its current dynamic public IP address to the Internet service.

Firewall

A firewall protects a device or a local network against attacks from the Internet.

A firewall blocks the communication interfaces (ports) that are not used for standard communication (web browser, email etc.).

IP address

A network address identifies a subscriber in a network.

Private IP addresses are IP addresses specially reserved for home networks (range 192.168.0.0 to 192.168.255.255). In most cases, they are automatically assigned by the router which manages the local network. They are used to uniquely identify the individual subscribers within a local network.

Routers provide the possibility to manually assign a fixed local IP address for individual devices.

Public IP addresses are automatically assigned to the router in the local network (LAN) by the Internet Service Provider (ISP). They are used to uniquely identify an Internet subscriber (a home network or even an individual device) to the Internet. They are mostly only valid for the duration of an Internet session (dynamic IP address) and are released again upon ending the Internet connection.

An Internet user can also be assigned a fixed public IP address via (chargeable) Internet services.

ISP **(Internet Service Pro- vider)**

An ISP is an Internet service provider which provides Internet access.

Port	<p>A port is the communication interface of an application (possible port numbers: 0-65535).</p> <p>Some ports (port numbers) are reserved for special applications, e.g.:</p> <ul style="list-style-type: none">● 21: FTP (File Transfer Protocol)● 25: SMTP (Simple Mail Transfer Protocol)● 80: HTTP (Hypertext Transfer Protocol) (used by the web browser for communication with web servers)
Port release	<p>To allow communication with a device behind a firewall, ports must be released for specific applications. The firewall then forwards incoming or outgoing data to this port.</p> <p>In local networks, this function is often assumed by the router.</p> <p>The IQ SENSOR NET controller MIQ/MC3 uses port 80.</p>
Port forwarding	<p>If a router receives a communication request on a port for which forwarding is configured, communication is forwarded to the port of a network subscriber which is defined in the forwarding rule.</p> <p>In local networks, this function is mostly carried out by the router.</p>
Router	<p>A router fulfills the following tasks as an interface between two networks:</p> <ul style="list-style-type: none">● It connects the local network to the Internet.● It controls the communication of network devices within a local network and manages the local IP addresses of the subscriber. In the local network, it is also possible to manage names for individual IP addresses (DHCP) in most cases. <p>Routers often assume other services in a network, e. g.:</p> <ul style="list-style-type: none">● DNS (assigning of names to IP addresses)● Firewall (protects the network subscriber against attacks from the Internet)● Port forwarding
TCP/IP (Transmission Control Protocol / Internet Protocol)	<p>The Internet Protocol is the common language (protocol) of the network subscriber.</p>

7 Outputs

7.1 Outputs of the System 2020 3G

Extension modules with outputs extend your IQ SENSOR NET System 2020 3G by the following types of outputs:

MIQ module	Outputs		
	Current (C)	Relays (R)	Valve (V)
MIQ/CR3	3	3	-
MIQ/CR	-	6	-
MIQ/C6	6	-	-
MIQ/CHV PLUS	-	-	1

Functioning of the outputs

- Relay outputs work as openers or closers.
- Current outputs provide a variable or fixed current value.
- Valve outputs switch on or off the compressed air for sensor cleaning functions.

7.1.1 Settings for outputs

On the terminal of the IQ SENSOR NET System 2020 3G

- Assign names for the outputs (see section 7.3).
- Link outputs with sensors (see section 7.4)
- Erase links between outputs and sensors (see section 7.5)
- Set up outputs (see section 7.6 and section 7.7)
- Check the conditions of the outputs (see section 7.9)

7.1.2 Functions the outputs

Relays outputs (see section 7.6)

- *System monitoring*
- *Sensor monitoring*
- *Limit indicator*
- *Frequency controller*
- *Pulse-width output*
- *Cleaning*

- *Sensor-controlled*
- *Manual control*
- *Alarm contact*

Basis information on the use of relay outputs is given in section 7.2.

**Current outputs
(see section 7.7)**

- *Recorder*
- *PID controller*
- *Fixed current value*

**Valve outputs
(see section 7.8)**

- *Cleaning*
(Setting of the cleaning procedure in the menu *Settings of outputs and links*)
- *Sensor-controlled*
(Setting of the cleaning procedure in the menu *Settings of sensors and diff. sensors* of the respective sensor)
- *Manual control*

7.2 Basic information on relay functions

This chapter describes general basic information concerning the following relay functions:

- Monitoring (see section 7.2.1)
- Limit indicator (see section 7.2.2)
- Proportional output (see section 7.2.3)

7.2.1 Monitoring

When using a relay for monitoring, a relay action (*Open*, *Close*) occurs when certain states occur. This function is suitable, for example, for the monitoring of errors in the system.



For monitoring functions, use the relay preferably as normally closed (see section 7.6.1). In the case of an error, the relay opens. As a result, the monitoring function operates even if, for instance, the supply voltage fails.

7.2.2 Limit indicator

With a limit indicator, a relay switches when a specified limiting value is exceeded or undercut.


Limit indicators can be used in the following way:

- Monitoring a limiting value using a relay:
when a limiting value (upper or lower limiting value) is exceeded or undercut, a relay switches. The *Open* or *Close* relay actions are possible in each case (see page 170).
- Monitoring two limiting values using two relays:
If the upper limiting value is exceeded or undercut, a relay switches, and if the lower limiting value is exceeded or undercut, another relay switches. The *Open* or *Close* relay actions are possible in each case (see page 170).



If the simple monitoring function (*Open*, *Close*) with one or two relays is not sufficient, use proportional output (see section 7.2.3).

Monitoring limiting values using one or two relays

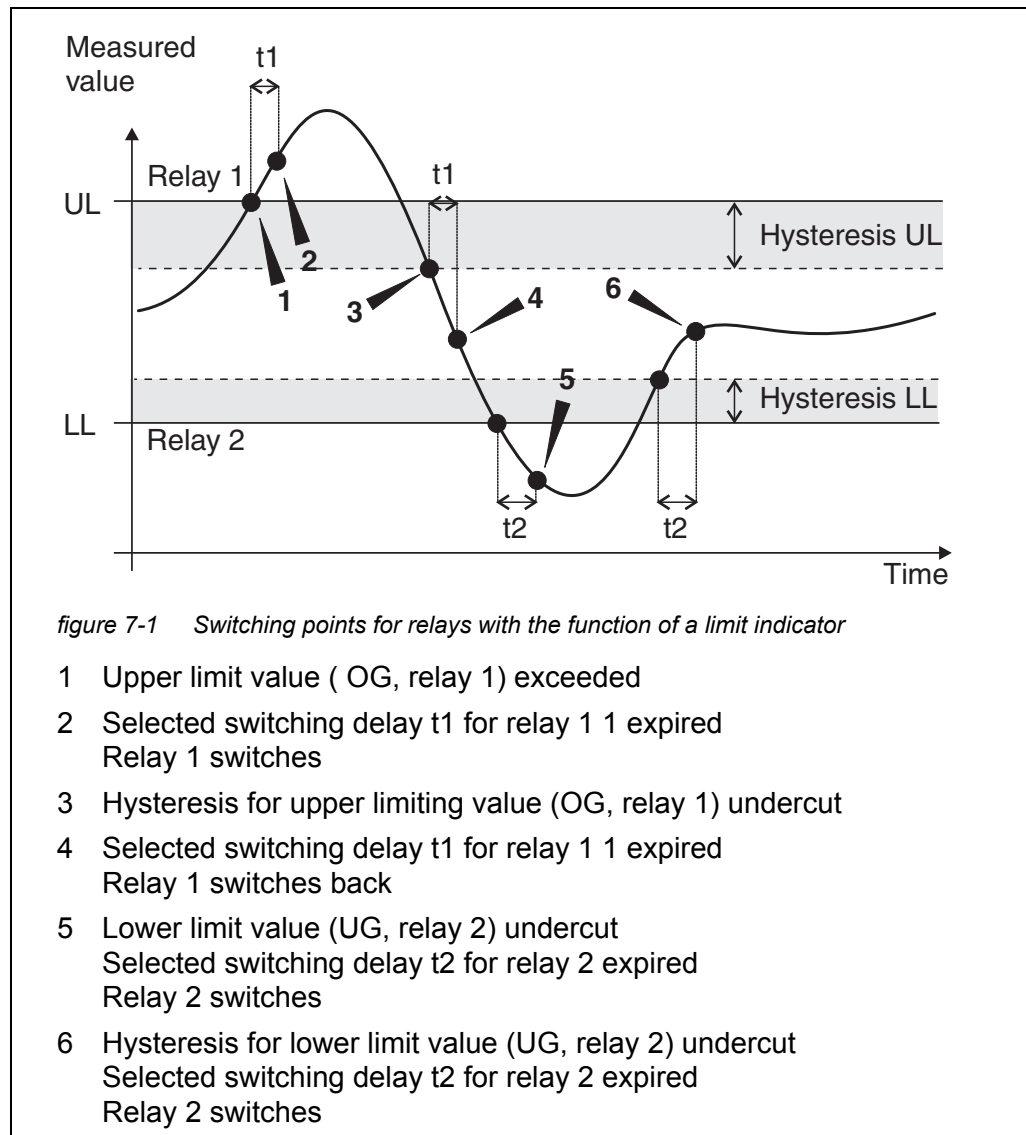

A switching delay (t) can be set up for each relay for switching processes. This is the time period for which a limiting value must be exceeded before the relay switches. This prevents frequent switching if the measured values are close to the limiting value.

7.2.3 Proportional output


In the case of proportional output, a relay switches cyclically on and off in a defined measured value range (proportional range). At the same time, the relay switches with a:


- duration of operation that corresponds to the measured value (pulse-width output, see page 172) or
- switching frequency (frequency output, see page 173).

Proportional outputs can be used in the following way:

- Output with one relay:
An output range is defined with a *Start value* and an *End value*. No output takes place above and below the output range (see page 171).
- Output with two relays:
An output range is defined for each relay with a *Start value* and an *End value*. One relay outputs in the upper output range and a further relay in the lower output range (see page 172).


Output with one relay

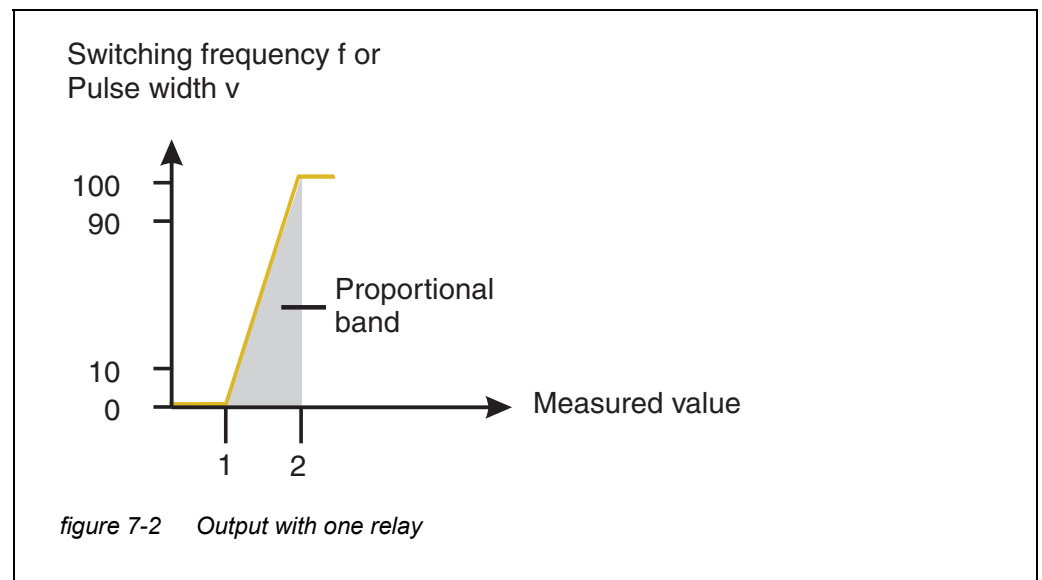

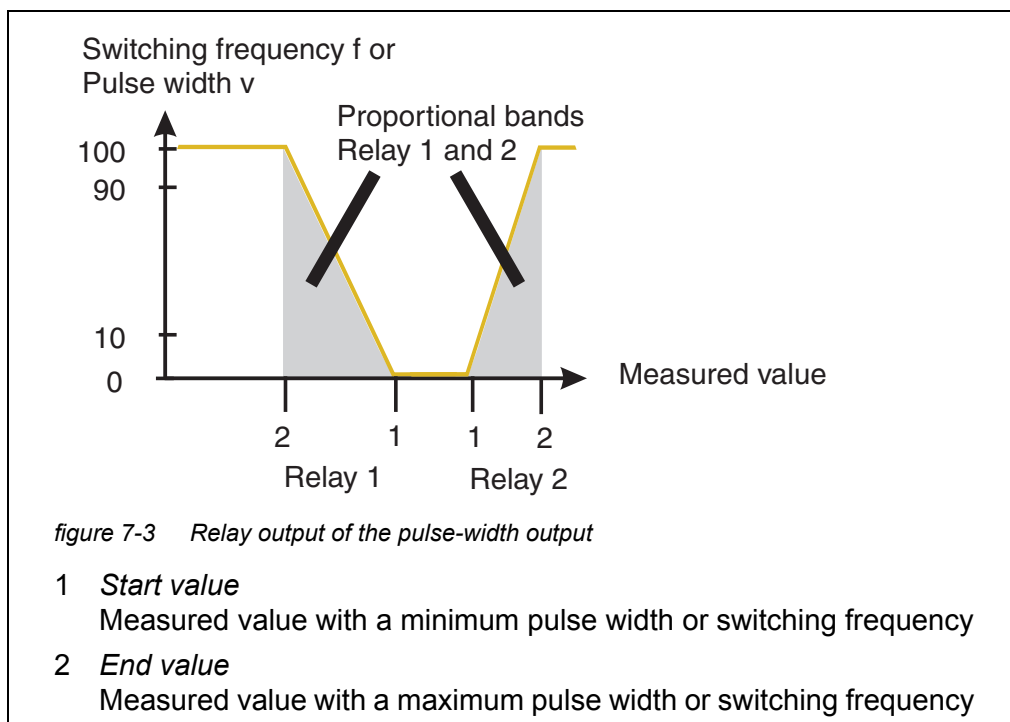Output with two relays

Pulse width output The output of the pulse width is used, e.g. for controlling valves.

Pulse-width regulation changes the duration of operation (t_{on}) of the output signal. Depending on the position of the measured value in the proportional range, the relay is operated for a longer or shorter period.

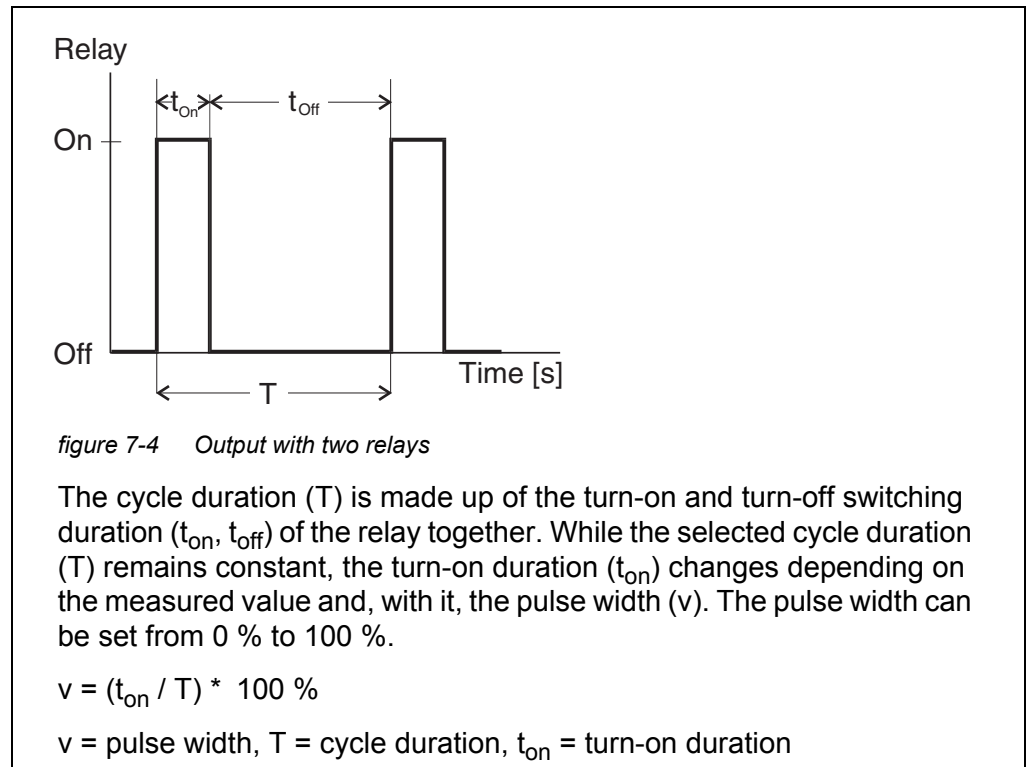

- If the measured value is at the end of the proportional range (*End value*), the turn-on duration (t_{on}) is long, the turn-off duration is short. This means the relay operates for a longer period.
- If the measured value is at the beginning of the proportional range (*Start value*), the turn-on duration (t_{on}) is short, and the relay operates for a correspondingly shorter period.




If the duration of the closing or opening pulse is shorter than 0.1 s, the relay remains open or closed for the complete cycle duration.

Frequency output Switching frequency output is used, e.g. for controlling dosing pumps.

In contrast to the pulse-width output, the pulse width is not modulated with the frequency output but the switching frequency of the output signal. Depending on the position of the measured value in the proportional range, the relay is

switched more often or less often.


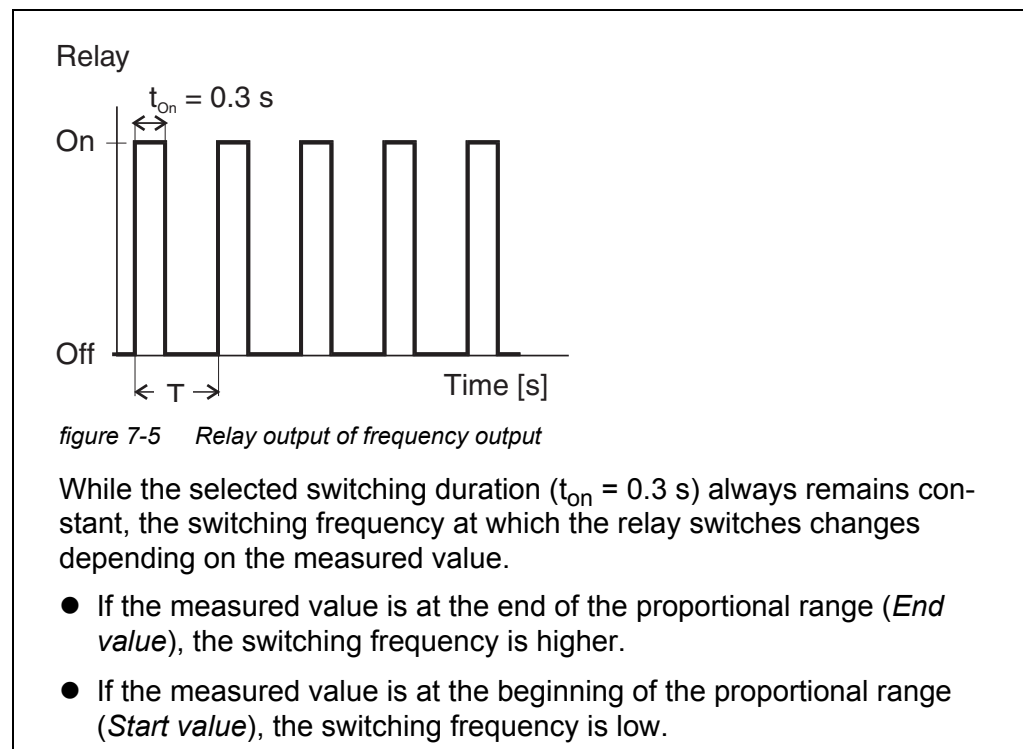


Characteristic curves

Through the selection of the *Start value* and *End value*, the proportional output can be operated with a positive or negative characteristic curve.

- Positive characteristic curve:
Select the *End value* to be greater than the *Start value*.
The turn-on duration or frequency increases with an increasing measured value (see page 176).
- Negative characteristic curve:
Select the *End value* to be smaller than the *Start value*.
The turn-on duration or frequency decreases with an increasing measured value (see page 177).

The maximum values for the pulse width or switching frequency are assigned to the *End value* value and the minimum values for turn-on duration or frequency are assigned to the *Start value* value.

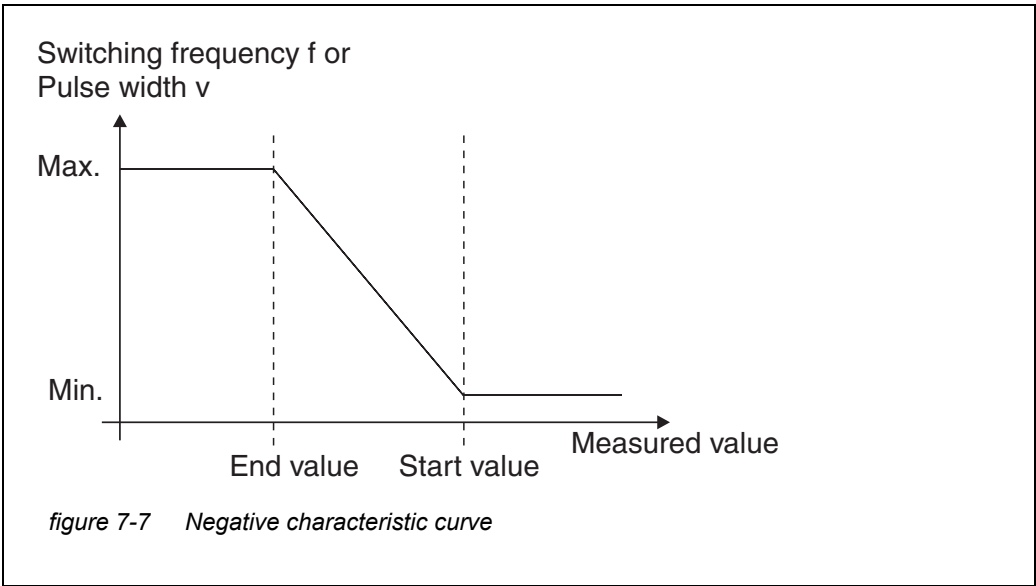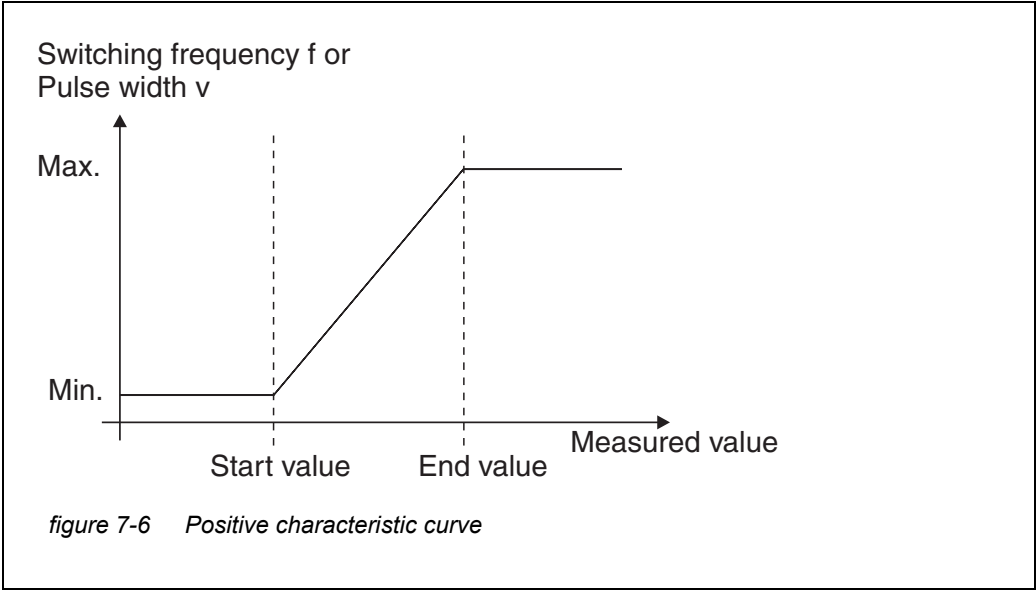

Positive characteristic curve

The proportional output range begins above the initial value. If the proportional range is undercut or exceeded, the selected behavior comes into force.

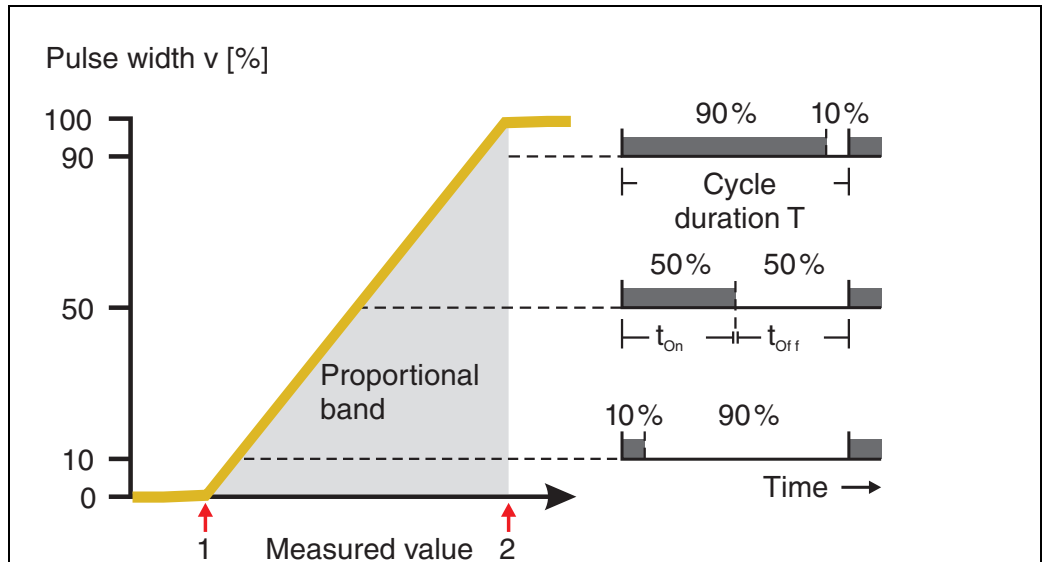


figure 7-8 Pulse width output

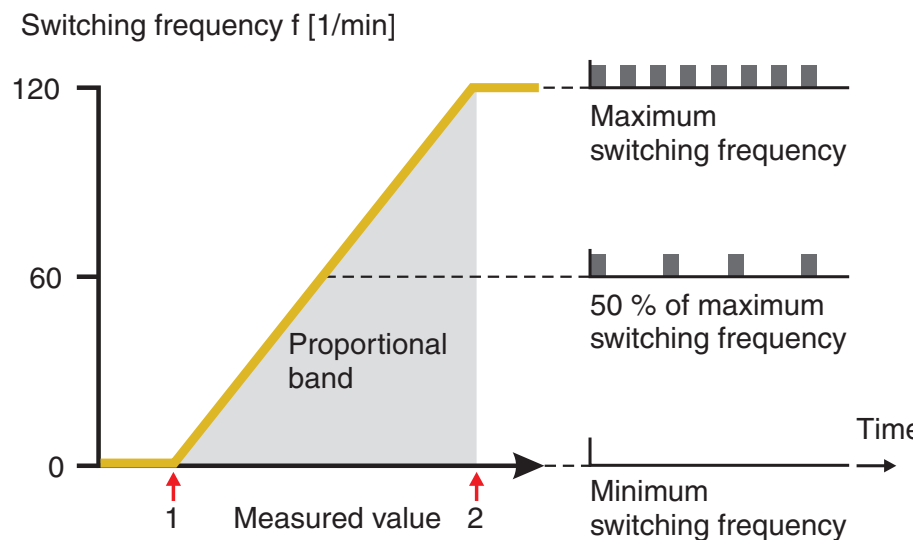


figure 7-9 Frequency output

- 1 **Start value**
Measured value with a minimum pulse width or switching frequency
- 2 **End value**
Measured value with a maximum pulse width or switching frequency

Negative characteristic curve

The proportional output range begins below the initial value. If the proportional range is undercut or exceeded, the selected behavior comes into force.

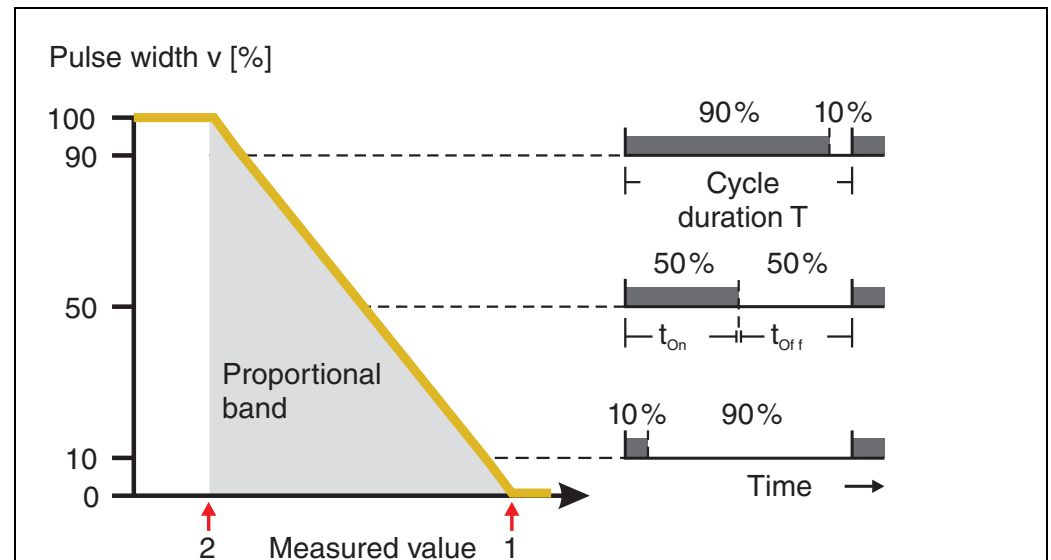


figure 7-10 Pulse width output

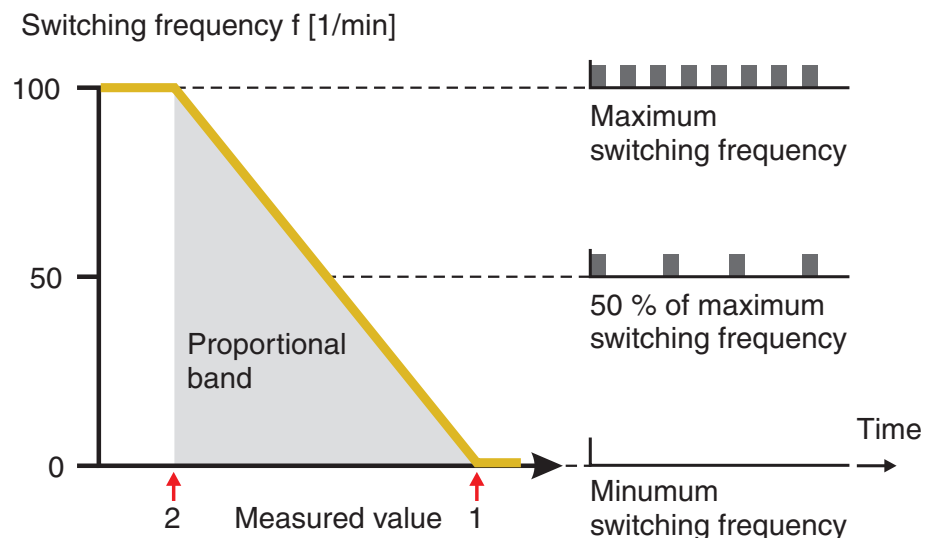


figure 7-11 Frequency output

1 *Start value*

Measured value with a minimum pulse width or switching frequency

2 *End value*

Measured value with a maximum pulse width or switching frequency

7.3 Entering / editing the name of an output

For easier identification of the outputs, an individual name can be given to each output in the *Edit list of outputs* overview.

- 1 Open the *Settings* menu with **<S>**.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings* -> *Edit list of outputs*.
The *Edit list of outputs* display opens.
- 3 Press **<▲▼◀▶>** to highlight a name in the *Name* column and confirm with **<OK>**.






CONTROLLER		30 July 2016	10:14			
Edit list of outputs						
No.	Model/Channel	Ser. no.	Name			
D01	MIQCR3/R1	99200004				
D01	MIQCR3/R2	99200004				
D01	MIQCR3/R3	99200004				
D01	MIQCR3/C1	99200004				
D01	MIQCR3/C2	99200004				
D01	MIQCR3/C3	99200004				
Select   , edit output names ⁰⁸						

figure 7-12 Edit list of outputs

- 4 Select a letter, number or special character with **<▲▼◀▶>** and confirm with **<OK>**.
- 5 Complete the name of the output and confirm with **<OK>**.

7.4 Linking the output with a sensor

- 1 Open the *Settings* menu with **<S>**.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Settings of outputs and links*.
The *Settings of outputs and links* display opens.
- 3 Press **<▲▼◀▶>** to highlight the **&** column and confirm with **<OK>**.
- 4 Select an output with **<▲▼◀▶>** and confirm with **<OK>**. The *Link with...* display opens.
The display shows a list of sensors that can be linked.

CONTROLLER		26 Apr 2016	09 47			
Link with...						
	No.	Sensor name	Measuring range			
	503	99190001	COND	AutoRange		
Select sensor , confirm						

figure 7-13 Settings of outputs and links: Link with...

- 5 Using **<▲▼◀▶>**, select a sensor and confirm with **<OK>**.
The output is linked with the sensor.



In the overview *Settings of outputs and links*, field *Ser. no.*, outputs that are linked with sensors have the name of the linked sensor.

7.5 Deleting a link with an output

If a link between a current or relay output and a sensor is no longer required, you can erase the link.

- 1 Open the *Settings* menu with **<S>**.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *System settings -> Settings of outputs and links*.
The *Settings of outputs and links* display opens.
- 3 Press **<▲▼◀▶>** to highlight the **&** column and confirm with **<OK>**.
- 4 Select a linked output with **<▲▼◀▶>** and confirm with **<OK>**.

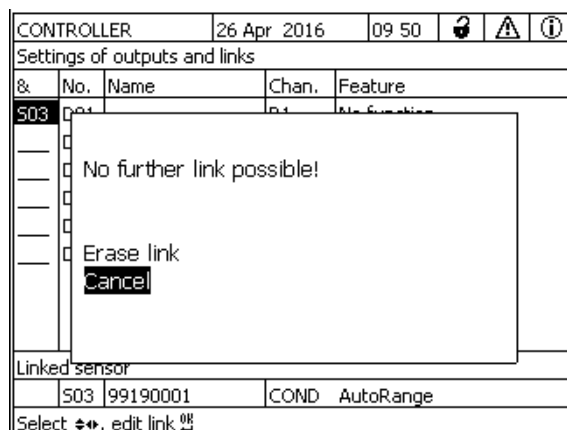


figure 7-14 *Settings of outputs and links: Erase link*

- 5 Select and confirm *Erase link* with **<▲▼◀▶>** and **<OK>**.
A safety query appears.
- 6 Select and confirm *Erase link* with **<▲▼◀▶>** and **<OK>**.
The link is deleted.

7.6 Setting the relay outputs (MIQ/CR3, MIQ/R6)

- 1 Call up the measured value display with **<M>**.
- 2 Open the *Settings* menu with **<S>**.
- 3 Using **<▲▼◀▶>**, highlight the menu item, *Settings of outputs and links*, and confirm with **<OK>**. The *Settings of outputs and links* display appears.
- 4 Using **<▲▼◀▶>**, highlight the *Feature* column. Confirm with **<OK>**.
- 5 Using **<▲▼◀▶>**, highlight a line for a relay output (Rx) in the column *Feature*. Confirm with **<OK>**.
The *Settings of outputs and links* display opens.
- 6 Using **<▲▼◀▶>**, highlight the menu item, *Relay function*, and confirm with **<OK>**.

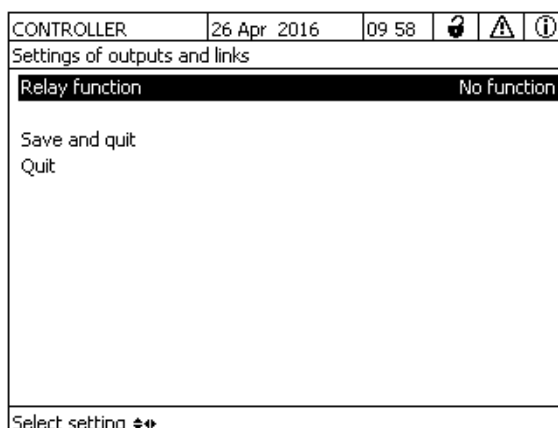


figure 7-15 Settings of outputs and links

- 7 Using **<▲▼◀▶>**, select one of the functions listed below. Confirm with **<OK>**.

Function	Description
<i>No function</i>	The relay output is not used.
<i>System monitoring</i>	see section 7.6.2
<i>Sensor monitoring</i>	see section 7.6.3
<i>Limit indicator</i>	see section 7.6.4
<i>Frequency controller</i>	see section 7.6.5
<i>Pulse-width output</i>	see section 7.6.6
<i>Cleaning</i>	see section 7.6.7
<i>Sensor-controlled</i>	see section 7.6.8
<i>Manual control</i>	see section 7.6.9
<i>Alarm contact</i>	see section 7.6.10

- 8 Make the settings for the relay outputs with **<▲▼◀▶>** and **<OK>**. The settings comprise the relay action (see section 7.6.1) and sensor dependent settings.
- 9 Using **<▲▼◀▶>** and **<OK>**, highlight and confirm *Save and quit*. The new settings are stored.

As soon as a function was selected for a relay output, you can select a relay action (see section 7.6.1).

7.6.1 Relay action

The following actions of the relay can be defined in the *Action* setting:

Settings	Explanations
<i>Open</i>	The relay should open on every event.
<i>Close</i>	The relay should close on every event.



Preferably set up the relay output as normally closed for monitoring functions (*Action*, *Open*).

7.6.2 System monitoring

Function The *System monitoring* function enables the monitoring of system errors. In order to set up the *System monitoring* function for a relay output, the relay output must not be linked with a sensor (see section 7.4).

It can be used to monitor the following system errors.

Settings	Settings	Selection	Explanations
	<i>Power failure</i>	On Off	The <i>Power failure On</i> function monitors the supply voltage in the IQ SENSOR NET at the controller or the combination output module. If the voltage falls below the critical value, the relay switches.
	<i>Communication</i>	On Off	The <i>Communication On</i> function monitors the functioning of the controller and the communication to the combi output module.
	<i>Collective error message</i>	On Off	<i>Collective error message On</i> function simultaneously monitors the proper functioning of all sensors and the functioning of the combination output module to be monitored. (for details, see below this table)
	<i>Action</i>	Open	For all functions of the <i>System monitoring</i> , the relay action is set to <i>Open</i> .

Collective error message In the case of a *Collective error* message, the relay opens if one of the following malfunctions occurs:

- One of the sensors properly registered at the controller does not supply a valid main measured value
- One of the sensors properly registered at the controller does not supply a valid secondary measured value
- The monitoring combi output module has not received any new data from the controller for two minutes.

In any case, the relay remains open for 10 seconds and only closes when the malfunction is no longer present.

In the following cases, the relay does not open despite an invalid measured value:

- The sensor is being calibrated
- The sensor is in the maintenance condition
- The sensor is being cleaned with the aid of a valve module in the system (compressed air operated cleaning system).

7.6.3 Sensor monitoring

Function The *Sensor monitoring* function enables the monitoring of sensor errors and the monitoring of the maintenance condition.

In order to set up the *Sensor monitoring* function for a relay output, the relay output must be linked with a sensor (see section 7.4).

Settings	Setting	Selection	Explanation
	<i>Error</i>	<i>Special</i>	Special sensor errors are monitored and can prompt a relay action.
		<i>All</i>	All sensor errors (special ones and general ones) are monitored and can prompt a relay action.
		<i>Off</i>	Sensor errors are not monitored.
	<i>Mainten. Condition</i>	<i>On</i> <i>Off</i>	Switching on and off the maintenance condition (see section 7.11) is monitored and can prompt a relay action.
	<i>Action</i>	<i>Open</i> <i>Close</i>	Relay action (see section 7.6.1)



Preferably set up the relay output for monitoring functions as an opener (*Action Open*, see section 7.6.1).

Sensor messages include errors and information that are registered by the sensor.

Special sensor errors The special sensor errors are sensor-dependent. Details of this are given in the component operating manual of the respective sensor.

General Sensor errors	<i>Init</i>	This can prompt a relay action for a short time, depending on the starting behavior of the system
	<i>----</i>	Invalid measured value, or defective sensor
	<i>Error</i>	Communication with sensor interrupted
	<i>OFL</i>	Measuring range undercut or exceeded (overflow)

7.6.4 Limit indicator

Function The characteristic of the limit indicator is laid down in the *Limit value UL*, *Limit*

value LL, *Hysteresis UL* and *Hysteresis LL* settings. The fundamentals of the function are described in the introductory chapter (see section 7.2.2).

In order to set up the *Limit indicator* function for a relay output, the relay output must be linked with a sensor (see section 7.4).

Settings	Setting	Selection/Values	Explanation
	<i>Limit values</i>	<i>UL main variable</i> <i>LL main variable</i> <i>UL adjoining var.</i> <i>LL adjoining var.</i>	<i>Main variable</i> designates the actual measured parameter of the sensor (e.g. pH, oxygen, etc.). <i>Adjoining variable</i> designates an additional measured parameter (e.g. temperature).
	<i>Limit value UL</i>	Upper or lower limiting value	Minimum difference between the upper and lower limit value: 5 % of the measuring range
	<i>Limit value LL</i>	Any value within the measuring range (sensor-dependent)	
	<i>Hysteresis UL</i>	0 - 5% of the measuring range	Hysteresis for <i>Limit value UL</i> and <i>Limit value LL</i> .
	<i>Hysteresis LL</i>		
	<i>Behavior at error</i>	<i>Open</i> <i>Close</i> <i>Unchanged</i>	The relay opens, closes or remains unchanged in the case of system errors or sensor errors (see page 202).
	<i>Action</i>	<i>Open</i> <i>Close</i>	Relay action (see section 7.6.1)
	<i>Switching delay</i>	0 ... 3600 s	The time period for which a limiting value must be exceeded before the relay operates. Prevents frequent switching for measured values that are close to the limiting value.

7.6.5 Frequency controller

Function The characteristic of the frequency output is laid down in the *Start value*, *End value*, *Frequency (f) min.* and *Frequency (f) max.* settings. The fundamentals of the function are described in the introductory chapter (see section 7.2.3).

In order to set up the *Frequency controller* function for a relay output, the relay output must be linked with a sensor (see section 7.4).

Settings	Setting	Selection/Values	Explanation
	<i>Measured variable</i>	<i>Main variable</i> <i>Adjoining variable</i>	<i>Main variable</i> designates the actual measured parameter of the sensor (e.g. pH, oxygen, etc.). <i>Adjoining variable</i> designates an additional measured parameter (e.g. temperature).
	<i>Start value</i>	within the measuring range (sensor-dependent)	Minimum spacing: 5 % of the measuring range
	<i>End value</i>		
	<i>Frequency (f) min.</i>	0 to 120 1/min	Minimum spacing: 10 1/min
	<i>Frequency (f) max.</i>		
	<i>Frequency with error</i>	0 to 120 1/min	In case of system errors or sensor errors (see page 202), the relay switches with the frequency specified.
	<i>Action</i>	<i>Open</i> <i>Close</i>	Relay action (see section 7.6.1)

Characteristic curve If for *End value* a value is entered that is greater than the value *Start value*, the output has a positive characteristic curve.

In order to obtain a negative characteristic curve, a value for *End value* must be entered that is smaller than the value for *Start value*.

7.6.6 Pulse-width output

Function The characteristic of the pulse width output is laid down in the *Start value*, *End value*, *Pulse width (v) min.* and *Pulse width (v) max.* settings. The fundamentals of the function are described in the introductory chapter (see section 7.2.3).

In order to set up the *Pulse-width output* function for a relay output, the relay output must be linked with a sensor (see section 7.4).

Settings	Setting	Selection/Values	Explanation
	<i>Measured variable</i>	<i>Main variable</i> <i>Adjoining variable</i>	<i>Main variable</i> designates the actual measured parameter of the sensor (e.g. pH, oxygen, etc.). <i>Adjoining variable</i> designates an additional measured parameter (e.g. temperature).
	<i>Start value</i>	within the measuring range (sensor-dependent)	Minimum spacing: 5 % of the measuring range
	<i>End value</i>		
	<i>Pulse width (v) min.</i>	0 ... 100 %	Minimum spacing: 10 % of the <i>Cycle duration (T)</i>
	<i>Pulse width (v) max.</i>		
	<i>Cycle duration (T)</i>	5 ... 100 s	Length of the switching period T $T = (t_{on} + t_{off})$
	<i>Error pulse width</i>	0 ... 100 %	In case of system errors or sensor errors (see page 202), the relay switches with the pulse-width specified.
	<i>Action</i>	<i>Open</i> <i>Close</i>	Relay action (see section 7.6.1)

Characteristic curve You can specify the minimum and maximum pulse width (v). This determines the steepness of the characteristic curve of the output.

7.6.7 Cleaning



If the valve module MIQ/CHV PLUS is used, it is best to set the *Cleaning* function directly at the valve output (V) of the MIQ/CHV PLUS (see operating manual MIQ/CHV PLUS).

Function The *Cleaning* function enables the time-controlled automatic start of the sensor cleaning function with the aid of a relay of the combination output module. The relay controls the valve module MIQ/CHV and switches on or off the compressed air.

In order to set up the *Cleaning* function for a relay output, the relay output must be linked with a sensor (see section 7.4).

The relay of the combination output module assigned always works as a closer.

The cleaning cycle consists of *Cleaning duration* and *Adjustment time*.

During the cleaning cycle the *Clean* display flashes. The outputs linked with this sensor are frozen. The maintenance condition (see section 7.11) is active.

After the *Cleaning duration*, the relay is opened. During the following *Adjustment time* the outputs remain blocked.

The outputs linked with this sensor are only released when the cleaning cycle is complete. The *Clean* display disappears. The maintenance condition is finished.

Testing the operativeness

You can test the operativeness of the cleaning system as follows: Manually open or close the relay with the *Manual control* function (see section 7.6.9) and, while doing so, check the behavior of the cleaning system.

Alternatively, you can test the operativeness of the cleaning system by checking the performance of the function at the start time set up (reference time \pm interval). To perform a test immediately, the reference time can be set so that the next cleaning cycle will start in a few minutes (settings: see following table).

Settings	Setting	Selection/Values	Explanation
	<i>Reference time (h)</i>	0 ... 23 h	Time at which a cleaning cycle is started. Further cleaning cycles will be performed at the times specified by the cleaning interval.
	<i>Reference time (min)</i>	0 ... 60 min	
	<i>Interval unit</i>	1 .. 7 d 1 .. 24 h 5 .. 60 min	Selection of range and unit for the <i>Cleaning interval</i> .
	<i>Cleaning interval</i>	1/2/3/4/5/6/7 d or: 1/2/3/4/6/8/12/24 h or: 5/10/15/20/30/60 min	Repeat interval for the cleaning function: Time between the start time of a cleaning cycle and the start time of the next cleaning cycle*.
	<i>Cleaning duration</i>	0 ... 300 s	Duration of the cleaning

Setting	Selection/Values	Explanation
<i>Adjustment time</i>	0 ... 900 s	Time extension to allow the sensor to adjust to the test sample after cleaning.

* With short cleaning intervals, the adjustable values for the *Cleaning duration* and *Adjustment time* are limited. The following values apply:


<i>Cleaning interval</i>	<i>Cleaning duration</i>	<i>Adjustment time</i>
≤ 10 min	max. 60 s	max. 120 s
≤ 20 min	max. 180 s	max. 300 s



With this, the cleaning times are fixed. They only change when the *Reference time (h)* is changed.

The reference time and all further cleaning times relate to the date and time of the system clock. How to set the system clock is described in the system operating manual.

Example	Setting	Result
	<i>Reference time (h):</i> 12	Reference time: 12:00 hours
	<i>Reference time (min):</i> 0	This specifies the following start times:
	<i>Interval unit:</i> <i>Hours (h)</i> 8 h	04:00, 12:00 and 20:00 hours
	<i>Cleaning interval:</i>	

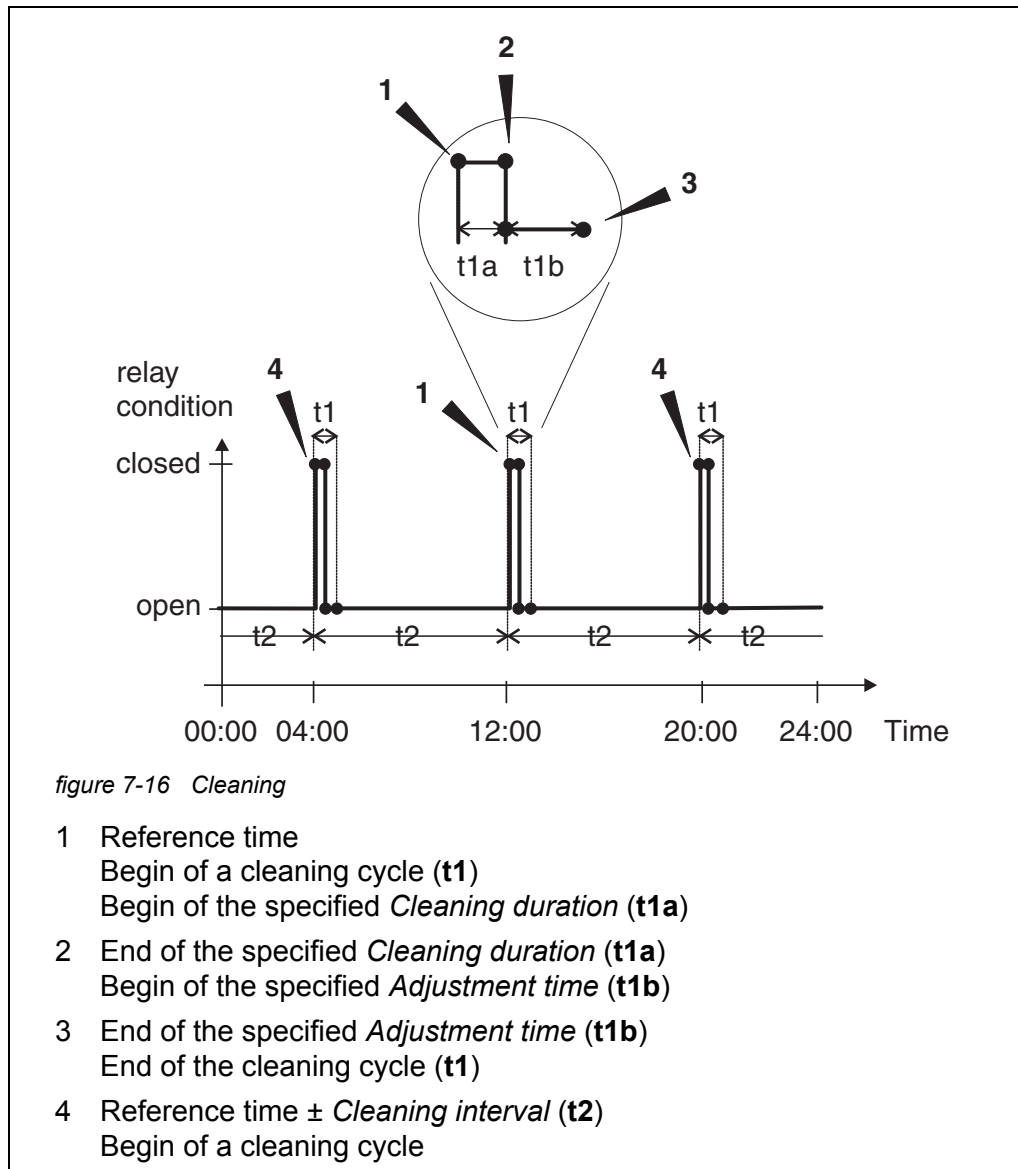

Canceling the cleaning

A running cleaning cycle is canceled:

- Automatic
 - if the sensor switches to the inactive condition during the cleaning cycle
- Manual
 - By pressing the **<C>** key
 - By switching on the maintenance condition

Each time the cleaning cycle is canceled, the relay opens immediately.

If the cleaning cycle is canceled automatically, the outputs linked to the sensor are released immediately.

If the cleaning cycle is canceled manually, the sensor is in the maintenance con-

dition. The linked outputs are only released after the maintenance condition was terminated manually.

The next cleaning cycle will be performed at the time set up.



In case of a power failure, all relays open. The cleaning cycle is canceled. The outputs linked with the sensor change to the non-active condition (see section 7.10.2). As soon as the power is available, the outputs are released again. The next cleaning cycle will be performed at the time set up.

7.6.8 Sensor-controlled

With the *Sensor-controlled* function, the relay is controlled by a linked sensor.

Prerequisites ● Sensor that sends signals to trigger a cleaning cycle, e.g. UV/VIS sensor

Settings	Setting	Selection/Values	Explanation
	<i>Pulse length</i>	<i>Automatic</i>	The duration of the cleaning procedure with air is programmed in the sensor. The relay automatically takes over from the sensor the cleaning duration.
		0.5 s 1 s 2 s 3 s	The relay finishes the cleaning procedure after the interval selected here.



Set up the cleaning process in the menu *Settings of sensors and diff. sensors* of the relevant sensor.

7.6.9 Manual control

Function The *Manual control* function can be used to test the operativeness of an instrument that is connected to the relay. To do so, close or open the relay manually and, while doing so, check the behavior of the connected instrument.

Setting	Selection/Values	Explanation
<i>Relay function</i>	<i>Manual control</i>	The selected relay action is carried out with <i>Save and quit</i> .
<i>Action</i>	<i>Open</i> <i>Close</i>	Relay action (see section 7.6.1)



The settings for other functions in the *Relay function* menu as, for example, *Frequency controller* and *Pulse-width output* are retained while the *Manual control* is carried out.

7.6.10 Alarm contact

Function The *Alarm contact* function triggers a relay action (opening or closing) if a defined alarm event takes place. The *Alarm contact* function is only available for relays that are not linked with a sensor. If necessary, an existing link must be erased.

Setting	Selection/Values	Explanation
<i>Relay function</i>	<i>Alarm contact</i>	The selected relay action is carried out with <i>Save and quit</i> .
<i>Action</i>	<i>Open</i> <i>Close</i>	Relay action (see section 7.6.1)

7.7 Setting the current outputs (MIQ/CR3, MIQ/C6)

- 1 Call up the measured value display with **<M>**.
- 2 Open the *Settings* menu with **<S>**.
- 3 Using **<▲▼◀▶>**, highlight the menu item, *Settings of outputs and links*, and confirm with **<OK>**. The *Settings of outputs and links* display appears.
- 4 Using **<▲▼◀▶>**, highlight the *Feature* column. Confirm with **<OK>**.

- 5 Using $\triangleleft \blacktriangle \blacktriangledown \blacktriangleright \blacktriangleright$, highlight a line for a current output (Cx) in the column *Feature*. Confirm with $\blacktriangleleft \text{OK} \blacktriangleright$.
The *Settings of outputs and links* display opens.
- 6 Using $\triangleleft \blacktriangle \blacktriangledown \blacktriangleright \blacktriangleright$, highlight the menu item, *Current output*, and confirm with $\blacktriangleleft \text{OK} \blacktriangleright$.

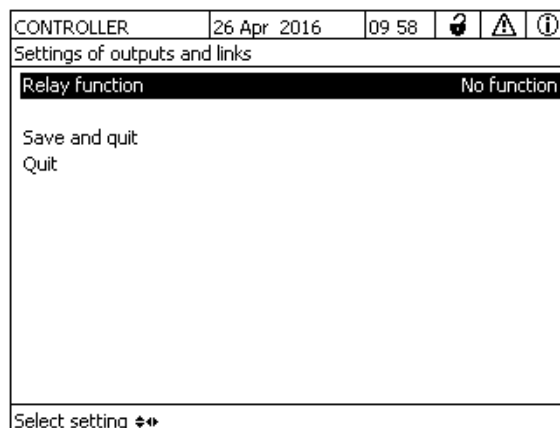


figure 7-17 Settings of outputs and links

- 7 Select and confirm a function with $\triangleleft \blacktriangle \blacktriangledown \blacktriangleright \blacktriangleright$ and $\blacktriangleleft \text{OK} \blacktriangleright$.

Function	Settings
<i>No function</i>	The current output is not used.
<i>Recorder</i>	see section 7.7.1
<i>PID controller</i>	see section 7.7.2
<i>Fixed current value</i>	see section 7.7.3

- 8 Make the settings for the current output with $\triangleleft \blacktriangle \blacktriangledown \blacktriangleright \blacktriangleright$ and $\blacktriangleleft \text{OK} \blacktriangleright$.
- 9 Using $\triangleleft \blacktriangle \blacktriangledown \blacktriangleright \blacktriangleright$ and $\blacktriangleleft \text{OK} \blacktriangleright$, highlight and confirm *Save and quit*.
The new settings are stored.

7.7.1 Recorder

Function The measured values of the linked sensor at the current output are set up as current intensity in the *Recorder* application. The output of measured values is laid

down in the *Recorder type*, *Start value* and *End value* settings.

Settings	Setting	Selection/Values	Explanation
	<i>Recorder type</i>	0 to 20 mA or 4 to 20 mA	
	<i>Start value</i>	(sensor dependent)	Minimum spacing: ≤ 5 % of the measuring range (sensor-dependent)
	<i>End value</i>		
	<i>Measured variable</i>	<i>Main variable</i> <i>Adjoining variable</i>	<i>Main variable</i> designates the actual measured parameter of the sensor (e.g. pH, oxygen, etc.). <i>Adjoining variable</i> designates an additional measured parameter (e.g. temperature).
	<i>Attenuation</i>	0 ... 40 mA/s	Speed of change of the output current (mA/s) in the case of erratic changes of the input signal.
<i>I -> UFL/OFL</i>		<i>Error</i>	Current values outside the range between <i>Start value</i> and <i>End value</i> are regarded as an error. The current output reacts as specified under <i>Behavior at error</i> (see below).
		<i>Limitation</i>	The current at the output is limited to the <i>Start value</i> or <i>End value</i> .
<i>Behavior at error</i>		<i>Fixed current value</i>	In the case of system errors and sensor errors, the current output delivers the fixed current value that was specified. Possible values: 0 ... 21 mA.
		<i>Unchanged</i>	The current at the output remains unchanged.

7.7.2 PID controller

Function The *PID controller* function can use an output as a controller output. The regulator can be configured as a **P**roportional regulator with switchable **I**ntegral and **D**ifferential regulator parts (**PID** Controller).

The control response of the PID controller is described by the following formula:

$$I_{Regler} = I_0 + K \left(x_e + \frac{I}{T_i} \int x_e dt + T_d \frac{dx_e}{dt} \right)$$

with:

$$K = \frac{I_{max} - I_{min}}{X_p}$$

$$x_e = x_{soll} - x_{ist}$$

$$I_{min} \leq I_{Regler} \leq I_{max}$$

$I_{Controller}$ Current on the controller output at time t

I_0 Current on the output if $x_{actual} = x_{set}$

K Amplification

X_p Proportional range

x_e Control difference

x_{actual} Actual value (current measured value)

x_{set} Set value

ti Integral algorithm

td Differential control part

t Time

I_{min} Lower current limitation

I_{max} Upper current limitation

The adjustable control parameters are x_{target} , I_0 , X_p , I_{min} , I_{max} , ti and td (see setting table on page 198).


By activating or deactivating the **I**ntegral (ti) and **D**ifferential (td) controller part,

the following controller types can be configured:

Regulator type	t_d [s]	t_i [s]
P controller	0	0
PI controller	0	1 to 9999
PD controller	1 to 9999	0
PID controller	1 to 9999	1 to 9999

Characteristic curve of the proportional controller

For a pure P controller the correlation between the measured value and current I on the controller output results in the following characteristic curve:

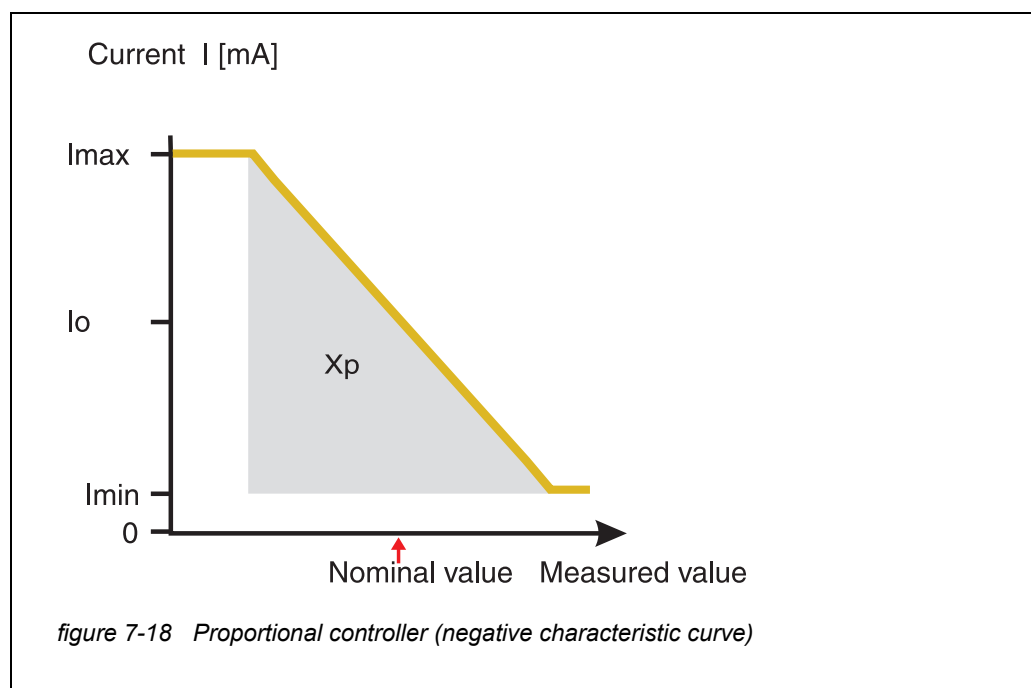


The proportional range X_p is limited by the measurement range of the linked sensor. If a value is entered for the parameter X_p that is greater than zero, the controller has a positive characteristic curve (example figure 7-18). To obtain a positive characteristic curve, a negative value must be entered for X_p .

Application example

- Regulation of the oxygen concentration
- Sensor: TriOxmatic 700 IQ (measuring range: 0 to 60 mg/l)

Control parameter	Value
<i>Nominal value</i>	4 mg/l
<i>Xp</i>	10 % of the measuring range or 6 mg/l
<i>Imin</i>	8 mA
<i>Imax</i>	14 mA
<i>Io</i>	12 mA
<i>ti</i>	0 s (no I algorithm)
<i>td</i>	0 s (no D algorithm)

The control parameters result in the following (negative) characteristic curve:

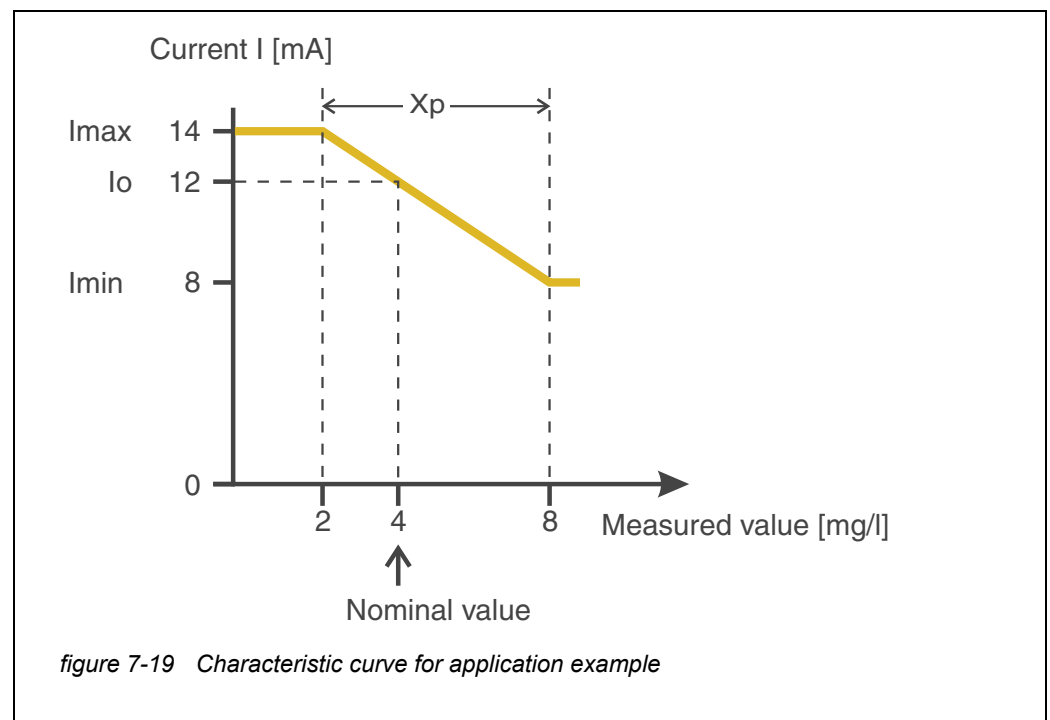

The controller works with the following amplification:

$$K = \frac{6 \text{ mA}}{6 \text{ mg/l}} = 1 \frac{\text{mA}}{\text{mg/l}}$$

Within the proportional range an increase of the concentration by 1 mg/l causes a reduction of the output current by 1 mA. If the measured concentration is 5 mg/l, for example, 11 mA is output:

$$I_{\text{Regler}} = 12 \text{ mA} + 1 \frac{\text{mA}}{\text{mg/l}} \cdot (4 \text{ mg/l} - 5 \text{ mg/l})$$

$$I_{\text{Regler}} = 12 \text{ mA} + 1 \frac{\text{mA}}{\text{mg/l}} \cdot (-1 \text{ mg/l}) = 11 \text{ mA}$$

The highest concentration at which the controller still works in the proportional range is 8 mg/l (corresponding to $I_{\text{min}} = 8 \text{ mA}$) and the lowest is 2 mg/l (corresponding to $I_{\text{max}} = 14 \text{ mA}$).

Settings	Setting	Selection/Values	Explanation
	<i>Measured variable</i>	<i>Main variable</i> <i>Adjoining variable</i>	<i>Main variable</i> designates the actual measured parameter of the sensor (e.g. pH, oxygen, etc.). <i>Adjoining variable</i> designates an additional measured parameter (e.g. temperature).
	<i>Nominal value</i>	within the measuring range (sensor-dependent)	Nominal value the measured value is regulated to
	<i>Xp</i>	5 ... 100 % -5 ... -100 % % of the measuring range	Proportional range of the controller. Negative values result in a positive characteristic curve.
	<i>Imin</i>	0 ... 20 mA	Lower current limitation *
	<i>Imax</i>	0 ... 20 mA	Upper current limitation * * Note: Spacing between <i>Imin</i> and <i>Imax</i> : at least 5 mA

Setting	Selection/Values	Explanation
<i>lo</i>	0 ... 20 mA	Current value on the output if the measured value equals the <i>Nominal value</i>
<i>ti</i>	0 ... 9999 s	Hold-back time: Integral part of the controller (0 = not effective)
<i>td</i>	0 ... 9999 s	Reset time: Differential part of the controller (0 = not effective)
<i>Behavior at error</i>	<i>Fixed current value</i>	In the case of an error, the current output supplies the current value defined in the <i>Current with error</i> field (any in the range 0 ... 21 mA).
	<i>Unchanged</i>	In the case of an error, the current on the output remains unchanged.

7.7.3 Fixed current value

Function The *Fixed current value* function can be used to test the operativeness of the instruments connected to the outputs: output different current values to the output and, while doing so, check the behavior of the connected instrument.

Setting	Selection/Values	Explanation
<i>Current output</i>	<i>Fixed current value</i>	Using <i>Save and quit</i> , the nominal amperage that was input as <i>Inom</i> is output.
<i>Inom</i>	0 ... 20 mA	The nominal amperage that is output.



The settings for other functions in the *Current output* menu as, for example, *PID controller* and *Recorder* are retained while the *Fixed current value* is carried out.

7.8 Setting the valve output (MIQ/CHV Plus)

- 1 Call up the measured value display with **<M>**.
- 2 Open the *Settings* menu with **<S>**.
- 3 Using **<▲▼◀▶>**, highlight the menu item, *Settings of outputs and links*, and confirm with **<OK>**. The *Settings of outputs and links* display appears.
- 4 Using **<▲▼◀▶>**, highlight the *Feature* column. Confirm with **<OK>**.
- 5 Highlight the cell for the valve output (Vx) with **<▲▼◀▶>** in the *Feature* column and confirm with **<OK>**. The *Settings of outputs and links* display opens.
- 6 Using **<▲▼◀▶>**, highlight the menu item, *Valve function*, and confirm with **<OK>**.

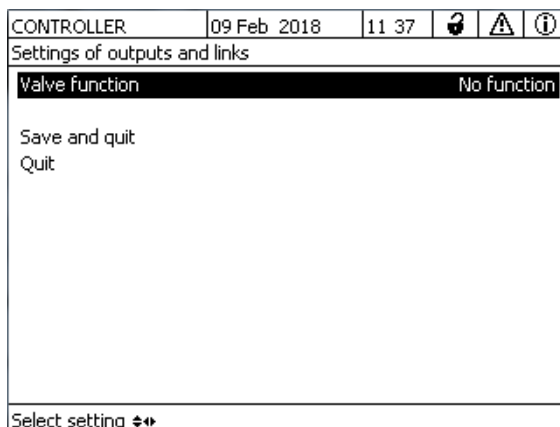


figure 7-20 150 - Settings of outputs and links

- 7 Using **<▲▼◀▶>**, select one of the functions listed below. Confirm with **<OK>**.



The settings and functions correspond to the setting for the relays.

Function	Description
<i>No function</i>	The valve output is not used.
<i>Cleaning</i>	see section 7.6.7
<i>Sensor-controlled</i>	see section 7.6.8

Function	Description
<i>Manual control</i>	see section 7.6.9

- 8 Make the settings for the relay outputs with **<▲▼◀▶>** and **<OK>**.
- 9 Highlight and confirm *Save and quit* with **<▲▼◀▶>** and **<OK>**. The new settings are stored.

7.9 Checking the condition of the outputs

This function provides a simple overview of the conditions of all outputs of the combination output module.

For the relays, the displayed condition is *open* or *closed*.

For the current outputs, the current value present at the outputs is displayed.

- 1 Call up the measured value display with **<M>**.
- 2 Open the *Settings* menu with **<S>**.
- 3 Using **<▲▼◀▶>**, highlight the menu item, *Service*, and confirm with **<OK>**. The *Service* dialog window opens.
- 4 Using **<▲▼◀▶>**, highlight the menu item, *List of all components*, and confirm with **<OK>**. The *List of all components* dialog window opens.
- 5 Highlight the required component with **<▲▼◀▶>** (column *Model*, entry *MIQCR3*) and confirm with **<OK>**. The *394 - Status of output channels* window opens.




S284-24160001	26 Apr 2016	10 43			
Status of output channels					
No.	Name	Chan.	Status		
D01	GW Lft 1	R1	open		
D01	GW Lft 2	R2	open		
D01	GW Lft 3	R3	open		
D01	O2 Bel 1	C1	6.78 mA		
D01	O2 Bel 2	C2	0.00 mA		
D01	O2 Bel 3	C3	10.13 mA		
Return ESC					

figure 7-21 394 - Status of output channels

- 6 Exit the 394 - *Status of output channels* window with **<M>** or **<ESC>**.

7.10 Behavior of linked outputs

7.10.1 Behavior in case of error

For linked relay outputs or current outputs, you can determine the behavior of the outputs in case of errors.

Depending on the use of the output, the behavior in case of errors is set in the following menus:

Output	Menu
<i>Frequency controller</i>	<i>Frequency with error</i> (see section 7.6.5)
<i>Pulse-width output</i>	<i>Error pulse width</i> (see section 7.6.6)
<i>Recorder</i>	<i>Current with error</i> (see section 7.7.1)

Error events The specified behavior occurs with the following events or conditions:

- The linked sensor does not provide any valid measured value (display of *Init*, *Error*, "-----", or *OFL*)
- Communication with the controller is interrupted for more than 2 minutes.
- The supply voltage for the controller is too low.
- In the function *Recorder*, the measured value of the linked sensor is outside the range between *Start value* and *End value*.

Freezing the conditions of the outputs

Irrespective of the behavior in case of error that was defined, the following situations cause the conditions of the outputs to be frozen:

- The linked sensor is in the maintenance condition (display of *Cal*, *Clean*, or flashing measured value).
- Communication with the controller is temporarily interrupted. After an interruption of 2 minutes the output changes to the behavior defined for error.

Restoring the normal functioning

The relay or current output automatically returns to its normal condition as soon as all errors have been eliminated and all conditions that caused the freezing of the outputs were eliminated.

7.10.2 Behavior in non-operative condition

An output is non-operative when no function is activated for the output.

An output becomes non-operative in case of

- Power failure
(As soon as the supply voltage is sufficient again, the non-operative condition of the outputs ends. The outputs function as specified by the user again.)
- Erasing a link to a sensor
- Changing the *Measuring mode* sensor setting for a linked sensor
- Changing the *Measuring range* sensor setting for a linked sensor



Before editing sensor settings a note appears on the display to inform you that links will be erased when you change the *Measuring mode* or *Measuring range* sensor setting.

**Settings in the
non-active
condition**

Current output

Current: 0 A

Relay output

Relay: Open

7.11 Maintenance condition of the sensors

The maintenance condition of the sensors is used for calibrating, cleaning, servicing and repairing (removing and exchanging) the sensors.

In the maintenance condition

- the system does not react to the current measured value or the condition of the selected sensor
- linked outputs are frozen
- sensor errors do not prompt changes in the conditions of linked outputs.

The maintenance condition is automatically activated

- during calibration. After calibration the sensor remains in the maintenance condition until the maintenance condition is switched off manually (see section 7.11.2)
- during the cleaning cycle (see section 7.6.7)

If you want to calibrate, clean, service or repair (remove and exchange) a sensor, switch on the maintenance condition manually (see section 7.11.1).

When you have finished cleaning, servicing or repairing the sensor, switch off the maintenance condition manually (see section 7.11.2).



If the maintenance condition is activated for a sensor, the measured values or status indicators of this sensor flash in the measured value display.

7.11.1 Switching on the maintenance condition

- 1 Call up the measured value display with **<M>**.
- 2 Select the sensor you want to switch on the maintenance condition for with **<▲▼◀▶>**. The measured values of the sensor do not flash.
- 3 Open the *Display/Options* menu with **<OK>**.
- 4 Using **<▲▼◀▶>**, highlight the menu item *Switch maintenance condition on/off* or *Maintenance Sensor S0x* and confirm with **<OK>**. A window that informs you about the maintenance condition opens up.
- 5 Confirm with **<OK>** *Continue*.
The selected sensor is in the maintenance condition. Linked outputs are frozen.
- 6 Call up the measured value display with **<M>**.
The measured values of the sensor flash.

7.11.2 Switching off the maintenance condition

- 1 Call up the measured value display with **<M>**.
- 2 Select the sensor you want to switch off the maintenance condition for with **<▲▼◀▶>**. The measured values of the sensor flash.
- 3 Open the *Display/Options* menu with **<OK>**.
- 4 Using **<▲▼◀▶>**, highlight the menu item *Switch maintenance condition on/off* or *Maintenance Sensor S0x* and confirm with **<OK>**. A window that informs you about the maintenance condition opens up.
- 5 Confirm with **<OK>** *Continue*.
The maintenance condition of the selected sensor is switched off. Linked outputs are released.
- 6 Call up the measured value display with **<M>**.
The measured values of the sensor do not flash.

8 Maintenance and cleaning

8.1 Maintenance

Maintenance activities	Component	Maintenance
	IQ sensors	Depending on the type of sensor (see the component operating manual of the sensor)
	Other components	No maintenance required

8.2 Cleaning

MIQ modules and control units

Clean components mounted in the open of gross contamination as necessary. We recommend to clean the worst of the dirt on the MIQ module and the area around it each time before opening in order to prevent gross contamination from entering the open enclosure.

To clean the module, wipe the enclosure surfaces with a damp, lint-free cloth. If compressed air is available on site, blow off the worst of the dirt beforehand. Keep the enclosure closed while doing so.



The housings are made of synthetic material. Thus, avoid contact with acetone and similar detergents. Remove any splashes immediately.

Never use high-pressure cleaners to clean components of the IQ SENSOR NET.

IQ sensors

The cleaning of the IQ sensors depends greatly on the respective application. Instructions for this are given in the respective component operating manual.

A valve module for the compressed air-operated cleaning of sensors is available as an accessory.

9 What to do if ...

9.1 Information on errors

Log book The IQ SENSOR NET system performs a comprehensive cyclical self test during operation. While doing so, the system identifies all states that deviate from normal operation and enters corresponding messages in the log book (information or error message).

With the aid of the log book, you can call up instructions on how to clear the error directly on the terminal. The log book is described in detail in section 4.5 MESSAGES AND LOG BOOK.



Information on possible errors in IQ sensors and MIQ output modules is given in the chapter WHAT TO DO IF ... of the respective component operating manual.

Status LED of the MIQ/TC 2020 3G

In addition to the logbook entries, pending errors and alarms or system faults are indicated by the flashing of the status LED on the MIQ/TC 2020 3G (see section 1.4.4).

9.2 Diagnosing faults in the voltage supply

9.2.1 Options for checking the voltage

The following options are available for checking the correct voltage supply of the individual components:

- **Checking the log book entries**

Log book entries can only be generated by components with a processor (e.g. IQ sensors and MIQ output modules). The log book entries contain information on how to clear errors. For more details on the log book, see section 4.5.

- **Checking the LED status on the MIQ module housing**

This check is described within the framework of the commissioning in section 3.10.3 CHECKING THE VOLTAGE SUPPLY.

- **Measuring the voltage on the MIQ modules**

(see section 9.2.2 MEASURING THE VOLTAGE).



The relationship between the supply voltage, the LED status and the log book entries is described in the section 10.1 GENERAL SYSTEM DATA.

9.2.2 Measuring the voltage

If an MIQ module shows an error condition (both LEDs off), this can be due to

the following causes:

- The voltage supply has been interrupted
- The available voltage is not sufficient; the voltage is below the warning range.

These two cases can be differentiated with a voltmeter.

Measuring points of MIQ modules

The supply voltage is tapped at the following points (figure 9-1 on page 208):

- Outside on the free contacts on the front of the SENSORNET module
- Inside on the SENSORNET connections of the terminal strip (see section 9.2.2 MEASURING THE VOLTAGE).

Measuring points for IQ sensors

The supply voltage is measured on the MIQ module to which the IQ sensor is connected via the SACIQ sensor connection cable.

Systematic voltage measurement

Dock all mobile components (terminals) on the modules with greatest distance to the next power supply module. Begin measuring the voltage at the MIQ modules that are directly connected with an MIQ power supply module. Continue to measure the voltage systematically to the end of each cable section, i. e. along the voltage drop. Thus, in combination with the log book entries, you can narrow down the error location.



WARNING



If the MIQ/PS power supply module is opened during operation, there is a danger to life due to possible hazard of electric shock. There is also a danger to life from voltages that may present a hazard of electric shock on the relay contacts of open MIQ output modules (e.g. MIQ/CR3, MIQ/R6). Note the following points in the case of voltage measurement during operation:

- The voltage measurement may not be performed on the open MIQ/PS power supply module. The MIQ/PS may only be opened when the line voltage is switched off.
- The voltage measurement at an open MIQ output module with relays may only be performed if all external voltages have been previously switched off.
- Secure all voltages that have been switched off against being switched on again for the duration of the work.



Safe voltage measurement is possible on the module contacts on the outside of MIQ/PS and relay output modules (see figure 9-1).

Tapping points for measuring the voltage

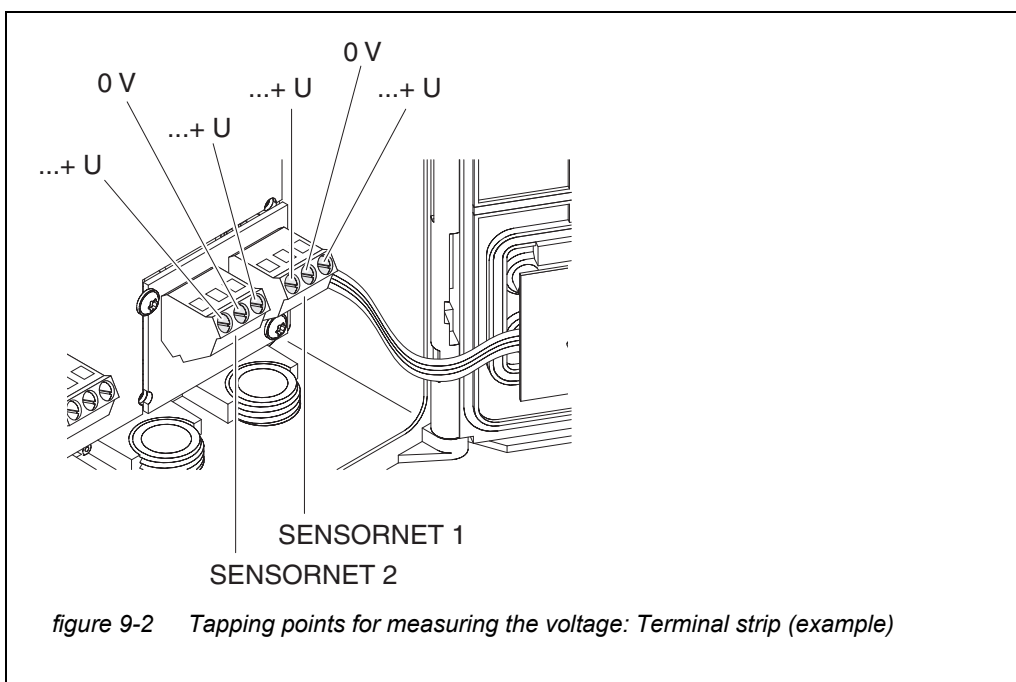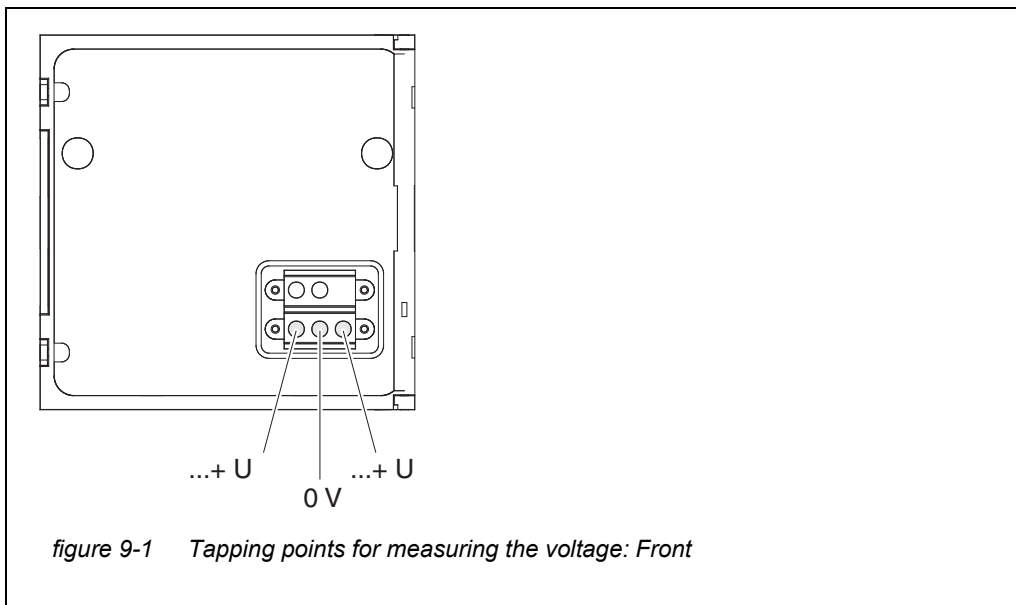

The supply voltage ($\dots + U$) must be measurable at both SENSOR-NET wires, i. e. left and right of the shielding. Otherwise, the functioning of the component is not ensured. Admissible values for the internal voltage supply ($+U$) are given in section 10.1.

9.2.3 Tips for clearing errors in the voltage supply



Admissible values for the internal voltage supply (+U) are given in section 10.1.

Supply voltage not present or in the warning or error range	Cause	Remedy
	– Number of power MIQ power supply modules is not sufficient	– Check power rating. If necessary, install another MIQ power supply module (for details of how to do this, see section 3.5 DRAWING UP THE POWER RATING).
	– Cable section is too long	– Check length of the cable section. If necessary, install another MIQ power supply module (for details of how to do this, see section 3.5.1 EFFECT OF THE CABLE LENGTH).
Malfunctions despite adequate supply voltage on both +U wires	– Electrical connection between MIQ power supply module and component is defective (distributed mounting)	– Check cable connection step-by-step starting with the MIQ power supply module, and replace defective cable sections. – Check contacts on the MIQ modules (stack mounting). Clean any dirty contacts. Carefully bend back any contact springs that have been pressed flat or bent (pay attention to sufficient spring tension). – Tighten all screws on the terminals.
	Cause	Remedy
	– Signal transmission faulty	– For terminal components, check/correct their seating on the MIQ module. – Check the log book for error messages (for details on the log book, see section 4.5). – Check/correct the position of the SN terminator switches (for the correct settings, see section 3.10.1). – Check the total line length within the IQ SENSOR NET. For a total line length of more than 1000 m, an MIQ/JBR signal amplifier module is required.

Cause	Remedy
– Component is defective	<ul style="list-style-type: none"> – Check the log book for error messages (for details on the log book, see section 4.5). – If no log book entry exists, send the component back.

Component is not registered on the system despite sufficient supply voltage on both +U wires (with no error message)

Cause	Remedy
IQ sensors	
– IQ sensor connection cable is not correctly connected or defective	<ul style="list-style-type: none"> – Check the IQ sensor cable connection on the terminal strip. – Check the IQ sensor cable and, if necessary, replace it. Another IQ sensor can be used for the test.
– IQ sensor is defective	<ul style="list-style-type: none"> – Test the IQ sensor at another measurement location. – If the IQ sensor still does not work, contact Service.

Cause	Remedy
Other components	
– Component is defective	<ul style="list-style-type: none"> – If possible, test component at another measurement location. – If the IQ component still does not work, contact Service.

9.3 Other errors

Status LED of the MIQ/TC 2020 3G flashes

Cause	Remedy
– A fault is present	<p>Fault remedy according to the logbook:</p> <ul style="list-style-type: none"> – More detailed information on the current fault and its remedy is given in the logbook (see section 4.5.2)

The system no longer reacts to entries	Cause	Remedy
	– System error	Reset the system: – Switch off the power supply and switch it on again after 10 s
"Error" in the measured value display	Cause	Remedy
	– Communication with the IQ Sensor interrupted	– Check the cable connection
	– Error in the IQ sensor	– Disconnect the IQ sensor and reconnect it after 10 s
Local settings cannot be displayed	Cause	Remedy
	– The contacts of two MIQ modules are not correctly connected to each other	– Clean the contacts
"no sensor" in the measured value display though an IQ sensor is connected	Cause	Remedy
	– Local display has been set up and the IQ sensor is not included in the local display	– Add the sensor to the local display (see section 5.9) – Switch to the <i>All sensors</i> display with <i>Display local values or all values</i> (see section 4.4.6)
The selected system language was not activated for all components	Cause	Remedy
	– A system language was selected that is not available in at least one component (sensor, controller, terminal, output module). The standard language, <i>English</i> , was activated instead of the selected system language.	– Contact the service department, as a software update is required for the relevant components.

9.4 Replacing system components



It is always possible to replace components and assign a substitute if the software state of the substitute component is as high as or higher than the software version of the original component.

9.4.1 Replacing passive components

Passive components include all components that the controller cannot recognize.

These include:

- MIQ power supply modules
- MIQ branching modules
- Cables (SNCIQ, SACIQ).



WARNING

If the MIQ/PS power supply module is opened during operation, there is a danger to life due to possible hazard of electric shock. The MIQ/PS may only be opened when the line voltage is switched off. Secure the line voltage against being switched on again.

Only ever replace components when the IQ SENSOR NET system is switched off. Defective components are removed in the reverse order to the installation (see chapter 3 INSTALLATION).

9.4.2 Adding and replacing IQ sensors

Inactive datasets of IQ sensors

If an IQ sensor is removed from the system, its settings remain stored in the IQ SENSOR NET controller. A "?" appears in the left column of the *Edit list of sensors* menu. This indicates an "inactive dataset". A dataset contains the following information:

- Serial number of the IQ sensor
- Sensor type
- Display position
- All sensor settings including differential sensor
- All characteristics of the link with an output.

If no suitable inactive dataset is available, a newly connected IQ sensor is automatically recognized as a new module and added to the list of sensors (see section 3.11 SYSTEM EXTENSION AND MODIFICATION).



The maximum number of data sets (active and inactive datasets) for IQ sensors is limited to 20 in the IQ SENSOR NET system 2020 3G. When this number is reached, no further IQ sensor can be installed. If necessary, an inactive dataset has to be erased to make an extension possible.



The current calibration data of the IQ sensor is always stored in the sensor. If an IQ sensor is connected that is ready for operation and calibrated, this can be used immediately without the need for recalibration.



To erase inactive datasets, see section 5.4.3.

If an IQ sensor is connected to the system when an inactive dataset is present, the following cases are possible:

Case 1:

The serial number of the IQ sensor is identical with the serial number of an inactive dataset.

The connected IQ sensor is automatically assigned to the inactive dataset and starts to operate again.

Example: Maintenance or repair.

This mechanism ensures that all IQ sensors retain their settings and links if an IQ sensor was removed for maintenance, or if the system was temporarily switched off.

Case 2:

The type of sensor is identical with the type of sensor in an inactive dataset (or several inactive datasets), but the serial numbers differ.

Operator intervention is required here. The connected IQ sensor can:

- be assigned to the inactive dataset (or one of the inactive datasets).

Example: Replacing an IQ sensor.

Make sure that the substitute sensor has at least the software status of the active IQ sensor.

- be included as a new module in the list of the sensors.

The operating sequence to do this is described below.

Operating sequence in case 2

1

Connect a new IQ sensor.

- 2 Switch to the measured value display with **<M>**. The component database is updated. The following display appears (example):

CONTROLLER	30 July 2016	10:14			
Add/replace sensor					
New sensor recognized:					
Model	TriOxmatic700IQ				
Ser. no.	01349999				
Add new sensor					
Assign sensor as a substitute					
Select , confirm					

figure 9-3 510 - Add/replace sensor

- 3 Select the required option with **<▲▼◀▶>** and confirm with **<OK>**.
- If *Add new sensor* was selected, the system changes directly to the measured value display. As soon as the IQ sensor is ready for operation, it delivers a measured value.
 - If *Assign sensor as a substitute* was selected, a list of matching inactive datasets appears:

CONTROLLER	30 July 2016	10:14			
Assign sensor as a substitute					
No.	Model	Ser. no.	Sensor name		
716	TriOxmatic700IQ	01341000	01341000		
Substitute sensor					
	TriOxmatic700IQ	01349999			
Select sensor , confirm					

figure 9-4 520 - Assign sensor as a substitute

- 4 Select the required inactive dataset with <▲▼◀▶> and confirm with <OK>. The system changes to the measured value display. The IQ sensor takes over all settings of the inactive dataset. As soon as the IQ sensor is ready for operation, it delivers a measured value.

9.4.3 Adding and replacing MIQ output modules



WARNING

There may be a danger of life threatening electric shock at the relay contacts of open MIQ output modules (such as MIQ/CR3, MIQ/R6) if (external) voltages subject to the danger of physical contact are used. MIQ output modules with relays may only be opened if all external voltages have previously been switched off. Secure all external voltages against being switched on again for the duration of the work.



When replacing MIQ modules make sure that the substitute module has at least the software status of the active module.

Only replace any MIQ output modules (all MIQ modules with relay contacts and/or electrical signal outputs) when the IQ SENSOR NET system is switched off. Defective MIQ output modules are removed in the reverse order to the installation. The installation is described in the INSTALLATION chapter of the respective component operating manual.

Inactive datasets in MIQ output modules

If an MIQ output module is removed from the system, its settings remain stored in the IQ SENSOR NET controller. A "?" appears in the left column (= inactive dataset) of the *Edit list of outputs* menu. The dataset contains the following information:

- All settings of the relays and valves
- All settings of the current outputs.

If no inactive dataset is available, a newly connected MIQ output module is automatically recognized as a new module and added to the list of outputs (see section 3.11 SYSTEM EXTENSION AND MODIFICATION).



The maximum number of data sets (active and inactive datasets) for MIQ output modules is limited to 8 in the IQ SENSOR NET system 2020 3G. When this number is reached, no further MIQ output module can be installed. If necessary, an inactive dataset has to be erased to make an extension possible.



To erase inactive datasets, see section 5.8.2.

If an MIQ output module is connected to the system when an inactive dataset is present, the following cases are possible:

Case 1:

The serial number of the MIQ output module is identical with the serial number in an inactive dataset.

The connected MIQ output module is automatically assigned to the inactive dataset and starts to operate again.

Example: In the case of repair.

Case 2:

The type of the MIQ output module is identical with the type in an inactive dataset (or several inactive datasets), but the serial numbers differ.

Operator intervention is required here. The connected MIQ output module can:

- be assigned to the inactive dataset (or one of the inactive datasets).
Example: Replacing an MIQ output module.
- be included as a new module in the list of outputs.

The operating sequence to do this is described below.

**Operating
sequence in case 2**

- 1 Remove the (defective) MIQ output module. The output module is removed in the reverse order to the installation. The installation is described in the INSTALLATION chapter of the respective component operating manual.
- 2 Install the new MIQ output module (INSTALLATION chapter of the respective component operating manual).
- 3 Switch to the measured value display with **<M>**. The component database is updated. The following display appears (example):

CONTROLLER	30 July 2016	10:14			
Add/replace output module					
New output module recognized:					
Model	MIQCR3				
Ser. no.	99200004				
Add new output module					
Assign output module as a substitute					
Select , confirm					

figure 9-5 410 - Add/replace output module

- 4 Select the required option with **<▲▼◀▶>** and confirm with **<OK>**.
 - If *Add new output module* was selected, the system changes directly to the measured value display.
 - If *Assign output module as a substitute* was selected, a list of the matching inactive datasets appears:

CONTROLLER	30 July 2016	10:14			
Assign output module as a substitute					
No.	Model/Channel	Ser. no.	Name		
701	MIQCR3/R1	99200001			
701	MIQCR3/R2	99200001			
701	MIQCR3/R3	99200001			
701	MIQCR3/C1	99200001			
701	MIQCR3/C2	99200001			
701	MIQCR3/C3	99200001			
Substitute module					
	MIQCR3	99200004			
Select output module , confirm					

figure 9-6 420 - Assign output module as a substitute

- 5 Select the required inactive dataset with **<▲▼◀▶>** and confirm with **<OK>**. The system changes to the measured value display. The MIQ output module takes over all settings of the inactive dataset.

10 Technical data

10.1 General system data

Test certificates CE

Ambient conditions

Temperature

Mounting/installation/ maintenance	+ 5 °C ... + 40 °C (+ 41 ... +104 °F)
Operation	- 20 °C ... + 55 °C (- 4 ... + 131 °F)
Storage	- 25 °C ... + 65 °C (- 13 ... + 149 °F)

Relative humidity

Mounting/installation/ maintenance	≤ 80 %
Yearly average	≤ 90 %
Dew formation	Possible

Site altitude	Max. 2000 m above sea level
---------------	-----------------------------

Electrical data

Nominal voltage of the power supply	See operating manual of the MIQ power supply modules used
Protective class	II
Overvoltage category	II
Maximum power consumption	Depending on the number of MIQ power supply modules
Number of MIQ power supply modules in an IQ SENSOR NET system	Up to 6 (MIQ/PS or MIQ/24V), depending on the total power requirement of the system (see section 3.5 DRAWING UP THE POWER RATING)
Voltage monitoring	<ul style="list-style-type: none"> – Optically via 2 LEDs on each MIQ module – Additional monitoring of all components by the controller software

Internal voltage supply

Relationship between the supply voltage U , the LED status on the MIQ module and the log book entries (figure 10-1):

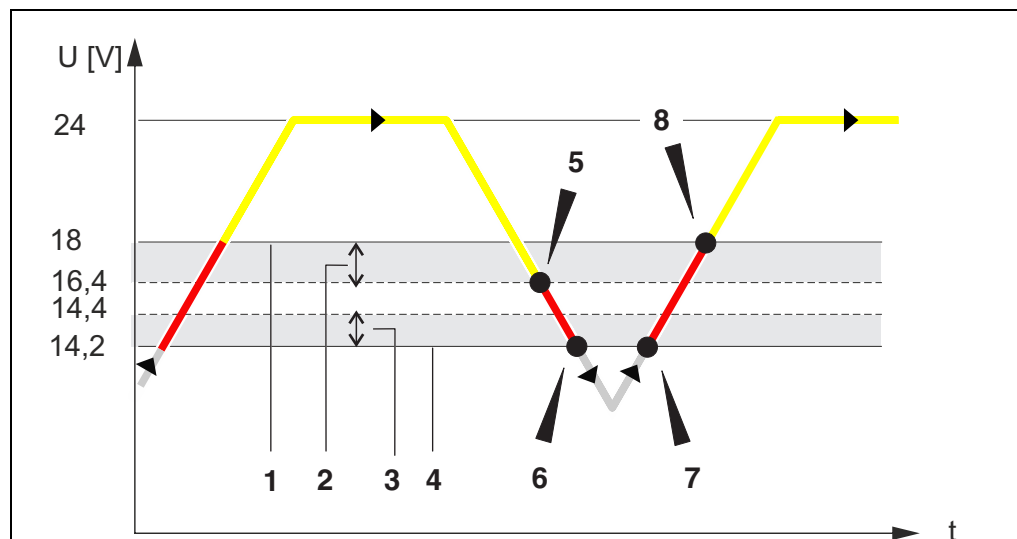


figure 10-1 Relationship of supply voltage - LED states - log book

- 1 Upper limit value
- 2 Hysteresis for upper limit value
- 3 Hysteresis for lower limit value
- 4 Lower limit value

	Voltage U [V]	LED	Log book
5	Hysteresis for upper limit value undercut	red	error message
6	Lower limit value undercut	Off	2nd error message (or switch-off)
7	Hysteresis for lower limit value undercut	red	error message
8	Upper limit value exceeded	Yellow	No log book entry



Instructions of how to measure the actual supply voltage on individual IQ SENSOR NET components are given in this operating manual in section 9.2 DIAGNOSING FAULTS IN THE VOLTAGE SUPPLY.

Meter safety	Applicable norms	<ul style="list-style-type: none"> – EN 61010-1 – UL 61010-1 – CAN/CSA C22.2#61010-1
---------------------	------------------	---

EMC product and system characteristics

EN 61326

EMC requirements for electrical resources for control technology and laboratory use

- Resources for industrial areas, intended for indispensable operation
- Interference emission limits for resources of class A

System lightning protection

Significantly extended qualitative and quantitative protective characteristics as opposed to EN 61326

FCC

class A




Any combination of IQ SENSOR NET products in a user-specific system fulfills these listed EMC characteristics.

10.2 General data of MIQ modules



Technical data on special MIQ modules are given in the respective operating manuals.


Dimensions

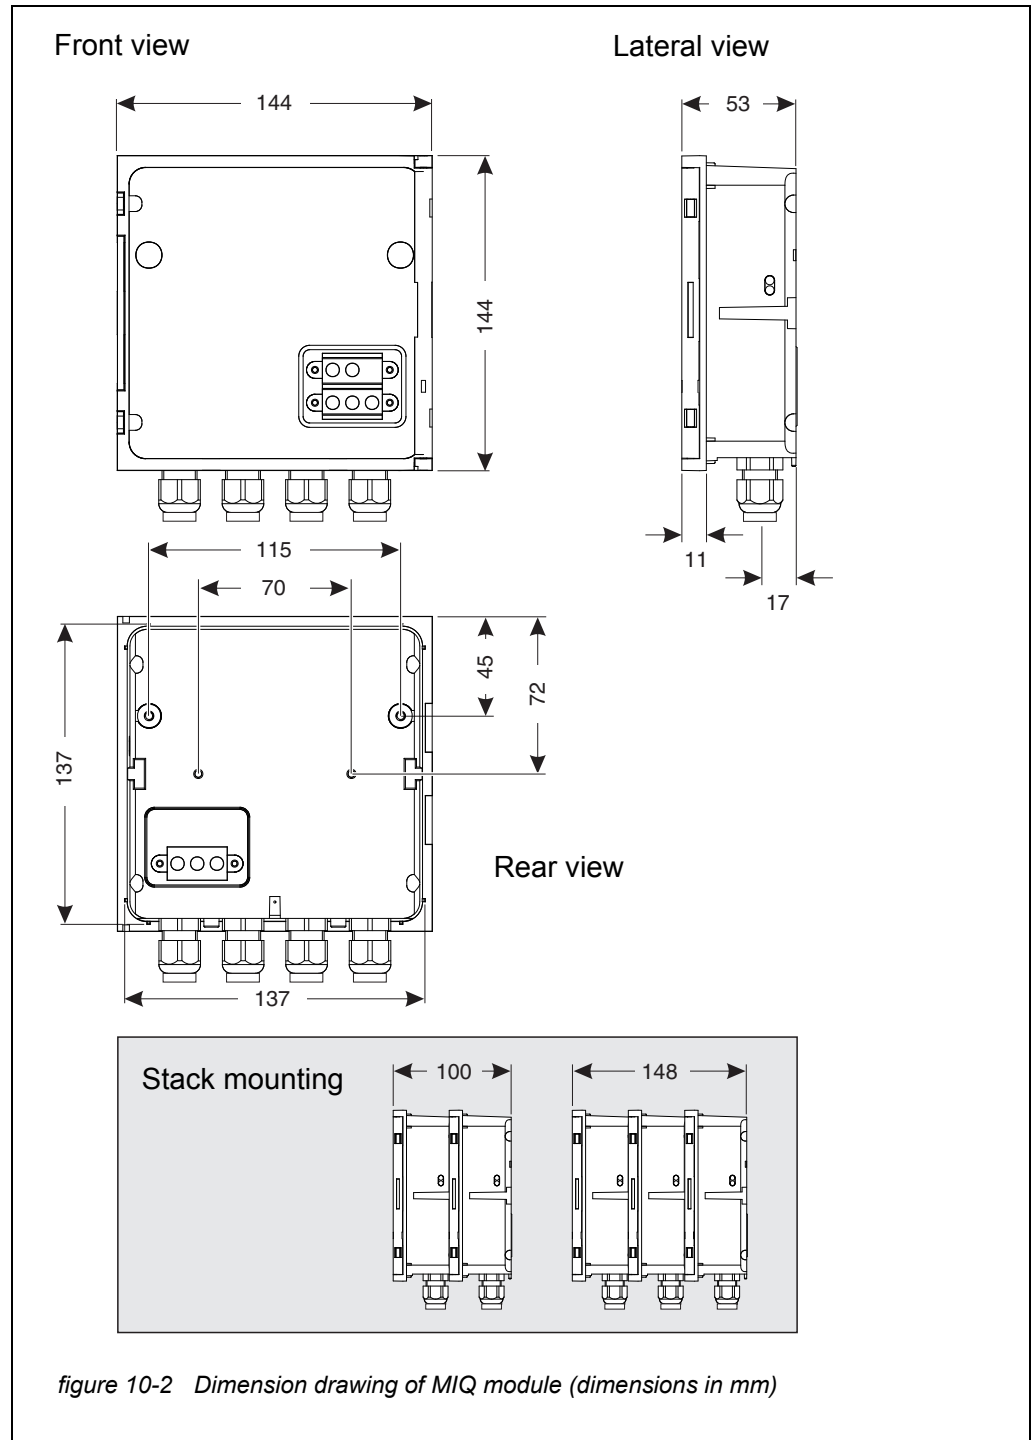


Mechanical structure	Maximum number of MIQ modules in a module stack	3 plus terminal component
	Enclosure material	Polycarbonate with 20 % glass fiber
	Weight	Approx. 0.5 kg
	Type of protection	IP 66 (not suitable for conduit connection)
Electrical data	Nominal voltage	Max. 24 VDC via the IQ SENSOR NET (for details, see section 10.1 GENERAL SYSTEM DATA)
	Power consumption	Module-dependent (see section 3.5 DRAWING UP THE POWER RATING)
Terminal connections	IQ SENSOR NET connections	At least two in each MIQ module. Additional connectable SENSORNET terminator (terminating resistor)
	Further connections	Module-dependent
	Terminal type	Screw-type terminal strip, accessible by raising the lid
	Terminal ranges	Solid wires: 0.2 ... 4.0 mm ² AWG 24 ... 12 Flexible wires: 0.2 ... 2.5 mm ²
	Cable feeds	4 cable glands M16 x 1.5 on the underside of the module
Cable glands	Suitable for cable sheath diameter	4.5 - 10 mm or 9.0 - 13 mm

10.3 MIQ/MC3

Dimensions

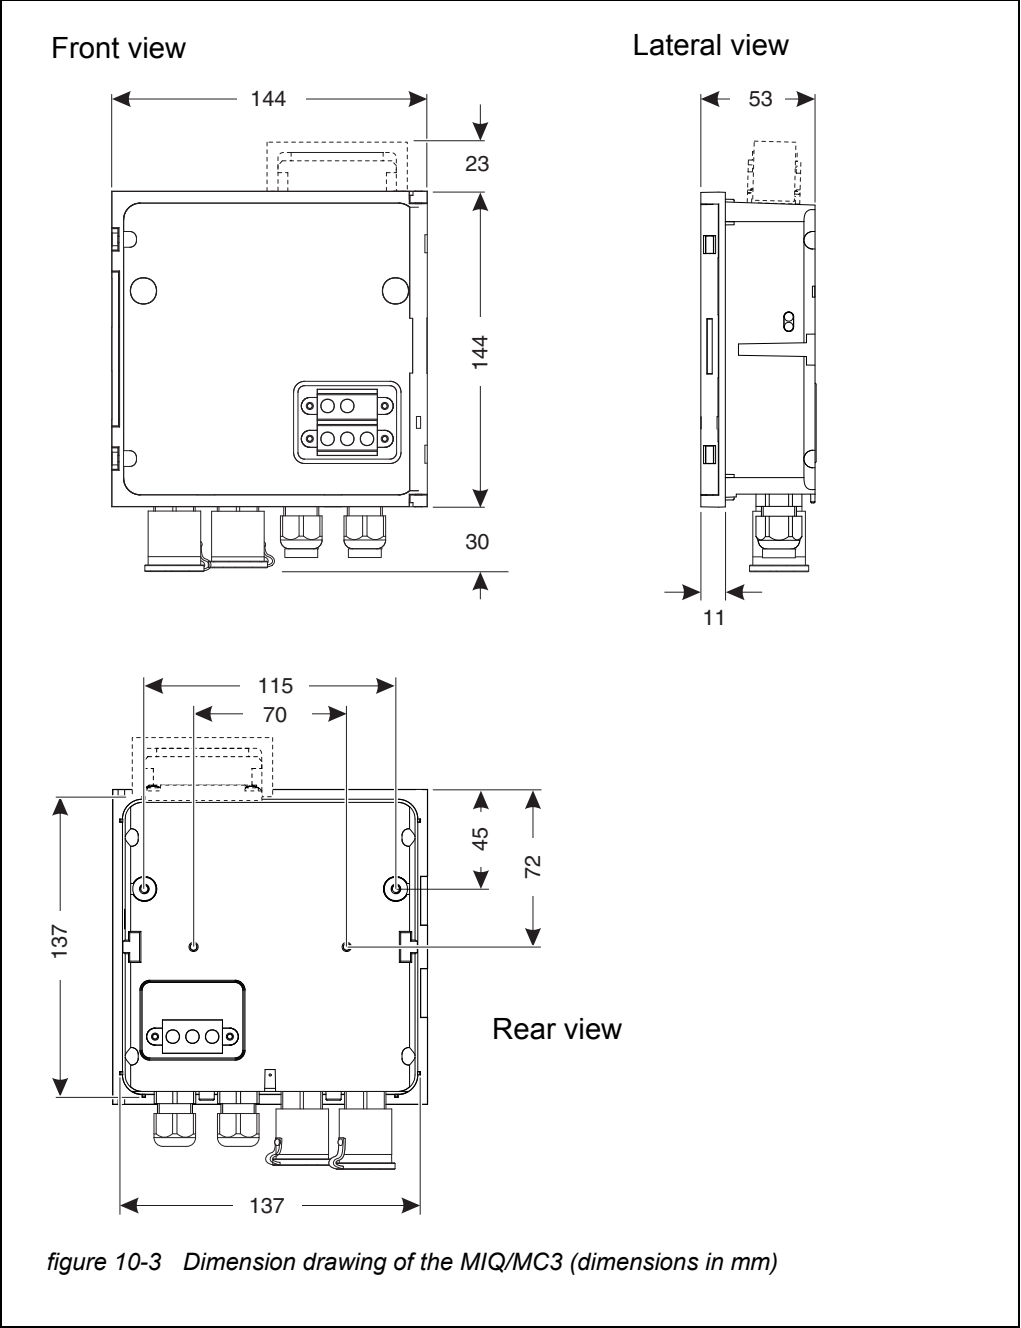

Terminal strip

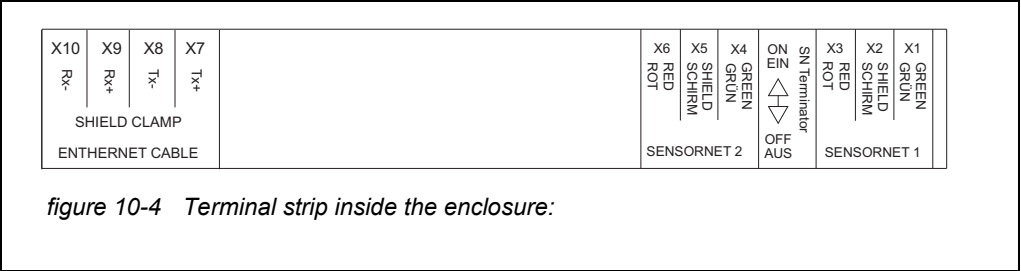

Electrical data	Supply voltage	Max. 24 VDC via the IQ SENSOR NET (for details, see section 10.1 GENERAL SYSTEM DATA)	
	Power consumption	MIQ/MC3	2.5 W
		MIQ/MC3-PR	3.0 W
		MIQ/MC3-MOD	3.0 W

USB-A interface	Version	USB 2.0
	Usage	Download of measurement data, software updates, electronic key



Immediately close the USB connection with the protective cover when you have removed the USB device.
When the USB connection is open, there is a danger of corrosion.

Ethernet interface	Type	RJ45 socket
	For permanent outside operation, you can convert the Ethernet interface to a climate resistant connection by means of fixed wiring to the main PCB via the LSA terminal strip.	



Immediately close the RJ45 connection with the protective cover after you have disconnected the RJ45 cable.
When the RJ45 connection is open, there is a danger of corrosion.


Fieldbus interface	MIQ/MC3	-
	MIQ/MC3PR	PROFIBUS DP
	MIQ/MC3-MOD	Modbus RTU/RS 485

Connection via 9-pin D-SUB socket on the top of the enclosure, compatible with Phoenix connector (IP67).

Air pressure measurement	Automatic air pressure compensation when measuring with galvanic D.O. sensors.	
	Measuring range	500 mbar ... 1100 mbar

10.4 Terminal/Controller MIQ/TC 2020 3G

Dimensions

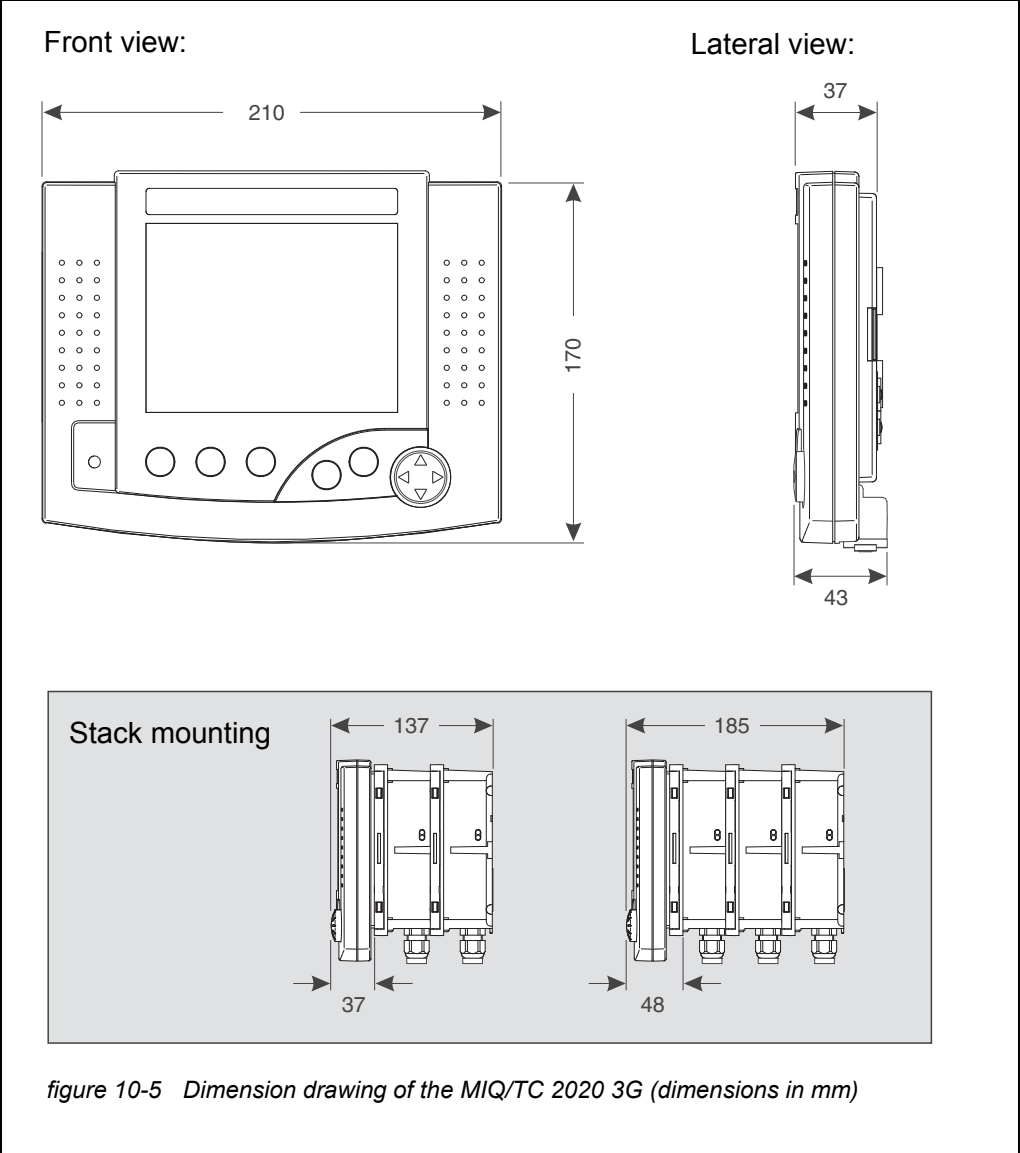

Mechanical structure	Enclosure material	ASA (Acrylonitrile Styrene Acrylesterpolymer)
	Weight	Approx. 0.9 kg
	Type of protection	IP 66 (not suitable for conduit connection)
Electrical data	Supply voltage	Max. 24 VDC via the IQ SENSOR NET (for details, see section 10.1 GENERAL SYSTEM DATA)
	Power consumption	3.5 W

USB-A interface	Version	USB 2.0
	Usage	Download of measurement data, software updates, electronic key




Immediately close the USB connection with the protective cover when you have removed the USB device.
When the USB connection is open, there is a danger of corrosion.


Air pressure	Setting range	500 mbar ... 1100 mbar
	(e.g. in a system without automatic air pressure compensation)	

10.5 Space required by mounted components

Wall mounting and
top hat rail
mounting

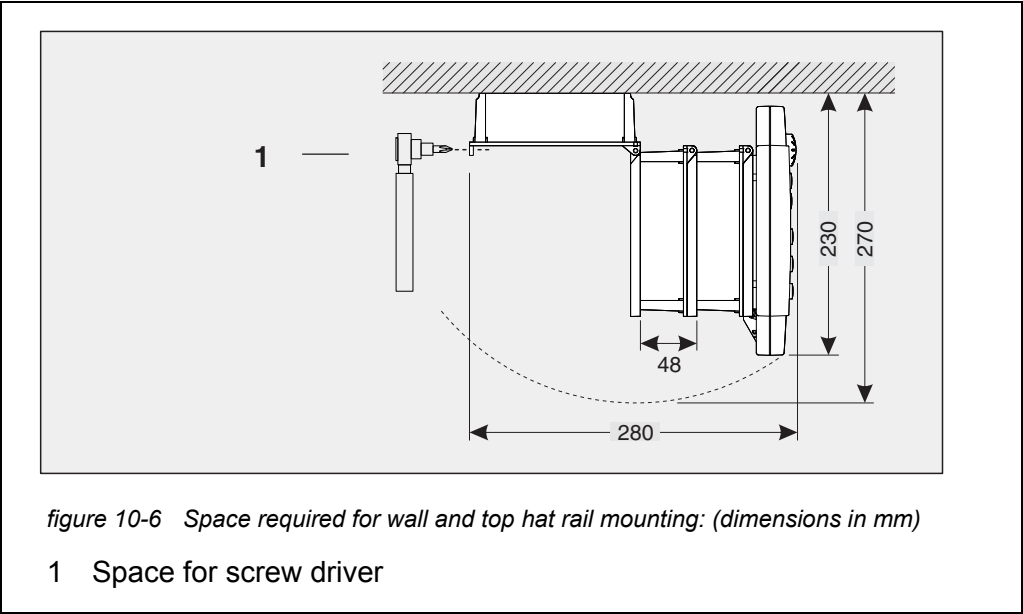

Panel mounting

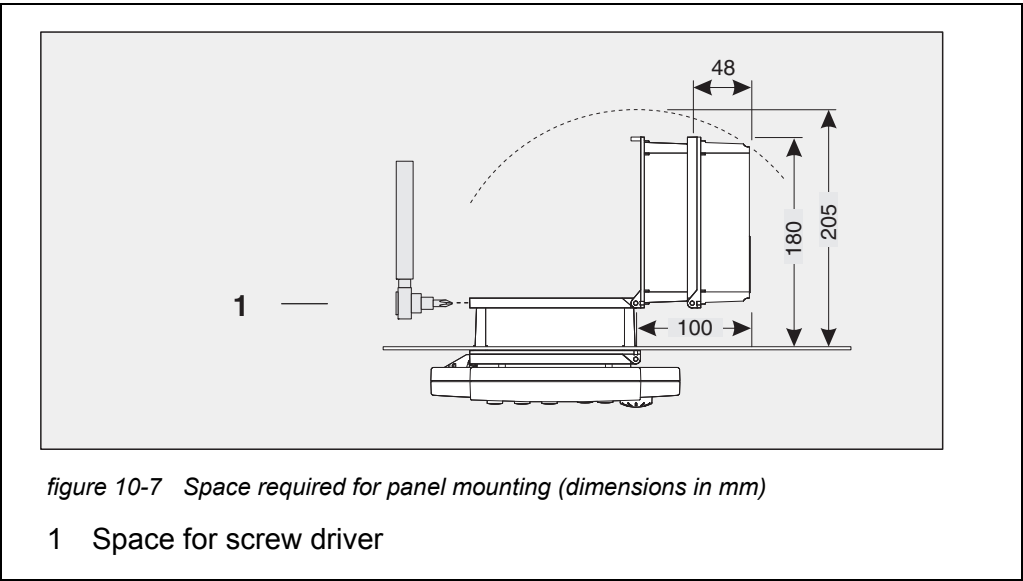

11 Accessories and options

Description	Model	Order no.
IQ SENSOR NET cable - please specify required length in m when ordering	– SNCIQ – SNCIQ/UG	– 480 046 – 480 047
IQ sensor connection cable		
– 1.5 m	– SACIQ-1.5	– 480 040
– 7.0 m	– SACIQ-7.0	– 480 042
– 15.0 m	– SACIQ-15.0	– 480 044
– Special length up to max. 100 m	– SACIQ-SO	– 480 041V
– 20 m (seawater version)	– SACIQ-20.0 SW	– 480 045
– 25 m (seawater version)	– SACIQ-25.0 SW	– 480 066
– 50 m (seawater version)	– SACIQ-50.0 SW	– 480 060
– 75 m (seawater version)	– SACIQ-75.0 SW	– 480 067
– 100 m (seawater version)	– SACIQ-SO SW	– 480 062
– Special length (seawater version)	– SACIQ-SO SW	– 480 064V
Set of 4 cable glands M20 for cable sheaths with an outer diameter greater than 10 mm	EW/1	480 051
Sun shield for a unit of up to three stacked MIQ modules plus docked terminal	SSH/IQ	109 295
Sun shield for a single MIQ module plus docked terminal	SD/K 170	109 284
Mounting kit for fixing the SD/K 170 sun shield on horizontal or vertical pipes	MR/SD 170	109 286
Kit for wall mounting of a MIQ module	WMS/IQ	480 052
Set for panel mounting of MIQ modules; switch panel aperture 138 x 138 mm according to DIN 43700 or IEC 473 (max. thickness 15 mm)	PMS/IQ	480 048
Kit for mounting of MIQ modules on a 35 mm top hat rail in accordance with EN 50022	THS/IQ	480 050



Other accessories for the IQ SENSOR NET are given in the WTW catalog or on the Internet.

12 Messages

12.1 Explanation of the message codes

The log book contains a list with all the messages from all modules. Each message consists of message code, date and time. You can obtain more detailed information by opening the full message text (see section 4.5).

The full message text comes from the component that has triggered the message. Therefore, these texts are only available from components which are connected to the system and ready for operation.

If a message text is not available, because the component is not connected to the system, you can look up the texts of the messages in the operating manual of the respective component.

The following lists contain the message codes and the related message texts that are shown on the display. Error messages and info messages are listed separately.

General explanations on the subjects of messages, message codes and log book are given in section 4.5 of this system operating manual.

Module code	Component
152	MIQ/MC3
153	MIQ/TC 2020 3G

12.1.1 Error messages

Message code	Message text
EI4152	<i>Max. components of this component type exceeded Danger of system overload * Check and adapt the components for this type</i>
EI5152	<i>Component cannot be reached or not present * Component has been removed from the system, insert component again * Connex. to component cut., Check sys. installation acc. to op. manual</i>
EI6152	<i>Incompatible terminal software * Contact service</i>
EI7152	<i>Incompatible controller software * Contact service</i>

Message code	Message text
EI8152	<i>Connection to the component instable</i> <i>* Check installation and cable lengths,</i> <i>Follow installation instructions</i> <i>* Set SN terminator switch acc. to operating manual</i> <i>* Check environmental effects</i> <i>* Component defective, contact service</i>
EI9152	<i>Power failure occurred</i> <i>* Check date and time and, if necessary, adjust them</i>
EA8152	<i>Error at automatic air pressure measurement</i> <i>An air pressure value of 1013 mbar is used for air pressure compensation</i> <i>* Contact service</i>

12.1.2 Informative messages

Message code	Message text
II2152	<i>New IQ Sensor Net component identified</i>
II3152	<i>New IQ Sensor Net component recorded</i> <i>* See component lists</i>
II4152	<i>IQ Sensor Net component recorded as replacement component</i> <i>* See component lists</i>
II5152	<i>Link sensor - output has been erased</i> <i>* if necessary, link sensor again</i>
II9152	<i>Date and time have been set</i>

13 Index

A

Access control 115
 Air pressure 143
 Ambient conditions 34, 218
 Arrow keys 84, 169, 170, 173, 179, 182, 184,
 187, 189, 191, 192, 199, 203, 204

B

Basic components 15
 Bus interfaces 147

C

Cable section
 Length 41, 72
 Calibration data 98
 Calibration history 99
 Communication options 14
 Contact base 47, 51

D

Daily load diagram of selected sensor 91
 Data transmission 93
 Differential sensor 126
 Create 126
 Erase 127
 Dimensions 225
 MIQ modules 221, 223
 Display 82
 Display of measured values 89
 Display position 124
 Display switchover
 measurement location/all sensors 93
 Distributed mounting 17, 44

E

Effects of the weather 62
 Electrical data 218
 MIQ modules 222
 MIQ/MC 224
 Total system 218
 Email 146
 Email settings 146
 Entering texts 86
 Error 94
 Ethernet 151

External voltages 207, 215

F

Fieldbus 162
 Function code 148

I

Inactive dataset
 Output module 135, 215
 Sensors 125, 212
 Information 94
 Initialization 75
 IQ Web Connect 158

K

Keys 84

L

Language 113
 LED
 red 76
 Yellow 76
 LED status 76
 Lightning protection
 External protective measures 35
 Installation guidelines 35
 Internal protective measures 35
 Local identity function 20
 Log book 94, 206
 Calibration entry 99
 Structure 95

M

Maintenance condition 101
 Measured value display 75, 83
 Measured value recording 148
 Displaying recorded measured values ..91
 Recording duration 148
 Recording interval 148
 Setting the recording duration 149
 Setting the recording interval 149
 Settings 149
 Measuring location name 137
 Messages 94
 Code 95

Texts	97
Types	94
Monthly load diagram of selected sensor ...	91
Multiple sensors	15

N

Name	
Measurement location	137
Output	134
sensor	123
Network	151

O

Operating elements	81
Operating principles	84
Output channels	16
Output name	134

P

Password	
change	117
PID controller (mA output)	195
Power rating	37
Power requirement	37
Power requirement of individual components	
37	
Power supply	219
Check	76, 206
Connection	71
Error elimination	209
Measurement	207

R

Retrofitting components	16
-------------------------------	----

S

Self-test	75
Sensor connection cable SACIQ	58
Sensor locations	16
Sensor name	123
Sensor-controlled cleaning	191
Sensors	
Multiple sensors	15
Selection for the measured value display .	
137	

Single sensors	15
Sensor-sensor link	130
Setting the date	142
Setting the time	142
Settings	113
Air pressure	143
Alarms	138
Date	142
Measurement location	136
Sensors/differential sensors	130
Site altitude	143
Terminal	113
Time	142
Settings of bus interfaces	147
Settings TCP/IP	144
Signal amplifier module	43
Single sensors	15
Site altitude	143
SN terminator switch	78
SNCIQ cable	54, 56
SNCIQ/UG earth cable	54, 56
Software status	
Of all components	107
Special user qualifications	31
Stack expansion	
backwards	50
forwards	46
Stack mounting	17, 44
Start checklist	73
Starting the system	74
Status info	100
System settings	142

T

Target group	31
TCP/IP	144
Terminal connections	220
Terminal settings	113
Types of installation	62

W

Weekly load diagram of selected sensor ...	91
--	----

14 Appendix

14.1 Forgotten the password? (store separately if required)

Extended access control

The administrator can view and change all stored passwords (see section 5.3). If the IQ SENSOR NET is locked and the administrator password lost, you can unlock the system with a master password. The master password is available from your instrument manufacturer.

The master password is valid for 7 days.

If you have unlocked the IQ SENSOR NET with the master password, we recommend to note down the normal administrator password and keep it in a safe place.

Simple access control

Proceed as follows to show the currently valid password on the display:

- 1 Open the *Settings* menu with **<S>**.
- 2 Using **<▲▼◀▶>** and **<OK>**, select and confirm the menu item, *Access control -> Change password*. The *Change password* dialog box opens.

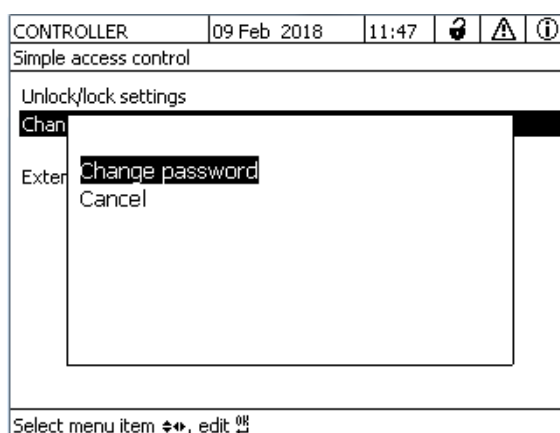


figure 14-1 System settings -> Change password

- 3 Press **<C>** and then **<S>**. The current password is displayed.

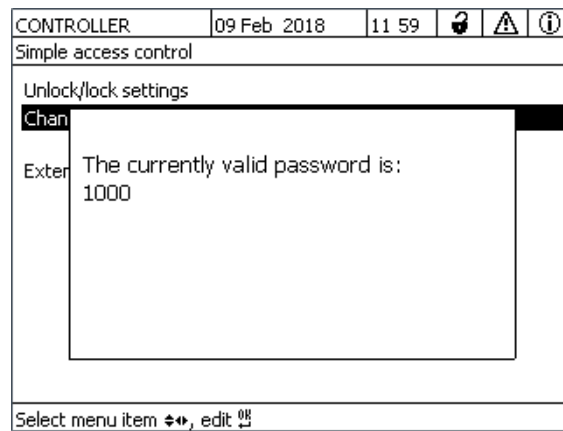


figure 14-2 System settings -> Display password

- 4 Quit the display of the password with **<OK>**.

14.2 Default password

Simple access control

The password of the controller is set to 1000 in the delivery state.

Was kann Xylem für Sie tun?

Wir sind ein globales Team, das ein gemeinsames Ziel eint: innovative Lösungen zu schaffen, um den Wasserbedarf unserer Welt zu decken. Im Mittelpunkt unserer Arbeit steht die Entwicklung neuer Technologien, die die Art und Weise der Wassernutzung und Wiedernutzung in der Zukunft verbessern. Wir bewegen, behandeln, analysieren Wasser und führen es in die Umwelt zurück, und wir helfen Menschen, Wasser effizient in ihren Haushalten, Gebäuden, Fabriken und landwirtschaftlichen Betrieben zu nutzen. In mehr als 150 Ländern verfügen wir über feste, langjährige Beziehungen zu Kunden, bei denen wir für unsere leistungsstarke Mischung aus führenden Produktmarken und Anwendungskompetenz, unterstützt durch eine Tradition der Innovation, bekannt sind.

Weitere Informationen darüber, wie Xylem Ihnen helfen kann, finden Sie auf xyleminc.com



Serviceadresse:

Xylem Analytics Germany
Sales GmbH & Co. KG
WTW
Dr.-Karl-Slevogt-Str. 1
82362 Weilheim
Germany

Tel.: +49 881 183-325
Fax: +49 881 183-414
E-Mail wtw.rma@xyleminc.com
Internet: www.WTW.com



Xylem Analytics Germany GmbH
Dr.-Karl-Slevogt-Str. 1
82362 Weilheim
Germany