

Brake

Brake drums and shoes (I: )	Rear	–	I	–	I	–	I	–	I	–	I	–	I
Brake hoses and pipes (I: )		–	I	–	I	–	I	–	I	–	I	–	I
Brake fluid (R: )		–	R	–	R	–	R	–	R	–	R	–	R
Brake (Pedal and fluid level) • Brake pedal (I: ) • Brake fluid level (I: )		I	I	I	I	I	I	I	I	I	I	I	I
Brake lever and cable (I: )	I: 1st 20,000 km (12,500 miles) only	I	–	–	–	–	–	–	–	–	–	–	–
Chassis and Body													
Clutch fluid: (R: )		–	R	–	R	–	R	–	R	–	R	–	R
Clutch (Pedal and fluid level) • Clutch pedal: (I: ) • Clutch fluid level: (I: )		I	I	I	I	I	I	I	I	I	I	I	I
Tires / Wheels • Tires: (I: ) • Wheels: (I: )		I	I	I	I	I	I	I	I	I	I	I	I
Wheel bearings (I: )		–	I	–	I	–	I	–	I	–	I	–	I
Propeller shafts (I: )		–	I	–	I	–	I	–	I	–	I	–	I
Suspension system (I: )		–	I	–	I	–	I	–	I	–	I	–	I
Steering system (I: )		–	I	–	I	–	I	–	I	–	I	–	I
Manual transmission oil (R: )	Genuine “SUZUKI GEAR OIL 75W”	Inspect every 40,000 km (25,000 miles) or 24 months.											
	Other than “SUZUKI GEAR OIL 75W”	–	R	–	R	–	R	–	R	–	R	–	R
Automatic transmission	Fluid level (I: )	–	I	–	I	–	I	–	I	–	I	–	I
	Fluid change (R: )	Replace every 165,000 km (99,000 miles).											
	Fluid hose (I: )	–	–	I	–	–	I	–	–	I	–	–	I
Transfer oil (I:  , R: )	Genuine “SUZUKI GEAR OIL 75W”	Inspect every 40,000 km (25,000 miles) or 24 months.											
	Other than “SUZUKI GEAR OIL 75W”	–	R	–	R	–	R	–	R	–	R	–	R
Differential oil (I:  , R: )	Genuine “SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC”	R	–	I	–	I	–	I	–	I	–	I	–
All latches, hinges and locks (I: )		–	I	–	I	–	I	–	I	–	I	–	I
Air conditioner filter element (if equipped) (I:  , R: )		–	I	R	–	I	R	–	I	R	–	I	R

NOTE:

- “R”: Replace or change
- “I”: Inspect, clean, adjust, lubricate or replace it if necessary
- *1: For “Oil change reminder light” or “Information display”, refer to [Oil Life Monitoring System Description](#).
- *2: If SUZUKI super long life coolant (coolant color: Blue) is replaced with the other coolant, follow schedule for SUZUKI long life coolant (coolant color: Green).