

# Jabra Elite 7 Pro



## User manual

© 2021 GN Audio A/S. All rights reserved. Jabra® is a trademark of GN Audio A/S. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by GN Audio A/S is under license.

---

Made in China

MODEL: OTE140R / OTE140L  
/ CPB140



---

**Declaration of Conformity** can be found on  
[www.jabra.com/doc](http://www.jabra.com/doc)

|   |    |
|---|----|
| 1. Welcome.....   | 5  |
| 2. Jabra Elite 7 Pro overview .....                                     | 6  |
| 2.1 Included accessories  |    |
| 3. How to wear .....  | 8  |
| 3.1 Changing EarGels  |    |
| 4. How to charge .....  | 10 |
| 4.1 Charging the earbuds  |    |
| 4.2 Fast charge the earbuds   |    |
| 4.3 Charging the charging case<br>using USB                             |    |
| 4.4 Charging the charging case using the Jabra<br>wireless charging pad |    |
| 5. What the LEDs mean .....   | 14 |
| 6. How to pair.....   | 16 |
| 6.1 Pairing with a mobile device  |    |
| 7. How to use .....   | 17 |
| 7.1 Power the earbuds off/on  |    |
| 7.2 Music controls  |    |
| 7.3 Call controls   |    |
| 7.4 ANC, HearThrough and Voice assistant controls                       |    |
| 7.5 Adjustable Active Noise Cancellation (ANC)                          |    |
| 7.6 HearThrough   |    |
| 7.7 Sidetone  |    |
| 7.8 Mono earbud use   |    |
| 7.9 Auto-pause music and calls  |    |

|      |                                   |    |
|------|-----------------------------------|----|
| 7.10 | Sleep mode                        |    |
| 7.11 | MyControls                        |    |
| 7.12 | Multiple call handling            |    |
| 7.13 | Voice assistant                   |    |
| 7.14 | Voice guidance and languages      |    |
| 7.15 | Update firmware                   |    |
| 7.16 | Reset the earbuds                 |    |
| 8.   | Jabra Sound+ app.....             | 32 |
| 9.   | Support .....                     | 33 |
| 9.1  | FAQ                               |    |
| 9.2  | How to care for your earbuds      |    |
| 9.3  | Replacement accessories           |    |
| 9.4  | Using replacement earbuds         |    |
| 9.5  | Using a replacement charging case |    |

# 1. Welcome


Thank you for using the Jabra Elite 7 Pro. We hope you will enjoy it!

## **Jabra Elite 7 Pro features**


- Jabra MultiSensor Voice™ for revolutionary call performance
- Adjustable Active Noise Cancellation (ANC) and HearThrough
- Rich, powerful, personalized sound
- Ultra-compact design for maximum comfort
- Up to 8 hours of battery, 30 with the case

## 2. Jabra Elite 7 Pro overview

### Jabra Elite 7 Pro

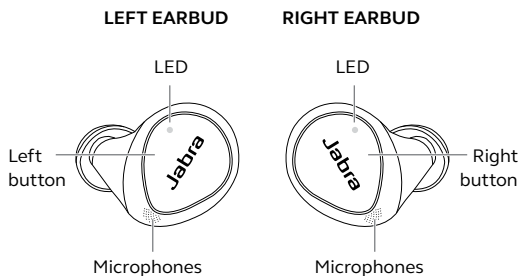


### Wireless charging case

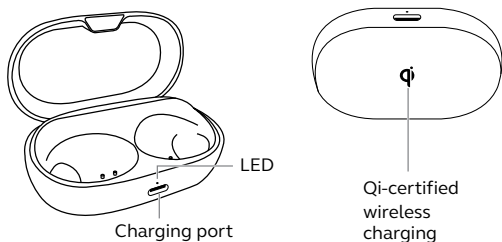


## 2.1 Included accessories

---

### EarGels

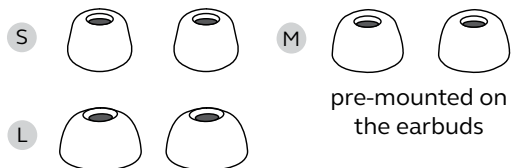

### 3. How to wear

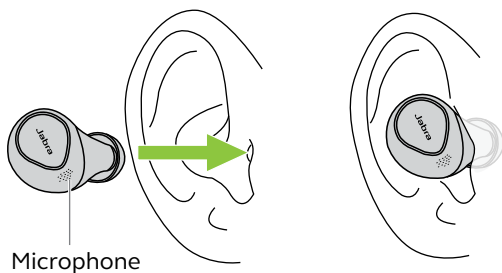


Insert each earbud into your ear and ensure the microphones are pointed towards your mouth.



## 3.1 Changing EarGels

---

For the optimal audio and ANC experience, it is recommended to take the MyFit test in the Sound+ app to ensure you have the best fit. If you don't have a good fit, try a different eargel size. The fit should feel light and comfortable and you may need a different size EarGel for each ear. The medium EarGels are pre-mounted on the earbuds.

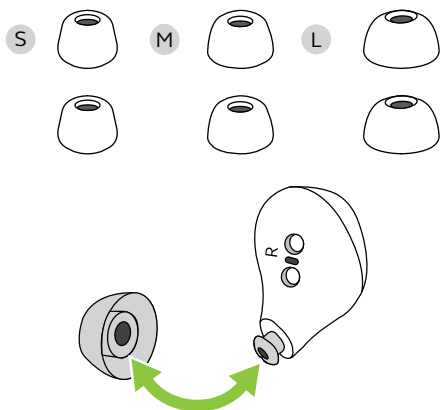

## 4. How to charge


Get up to 8 hours on a single charge with ANC on, with a total charge of up to 30 hours with the charging case. If you use the earbuds without ANC and HearThrough, you'll get even more battery, with up to 10 hours in the earbuds and a total of 35 hours with the charging case.

### 4.1 Charging the earbuds

---

Place the earbuds in the charging case and close the lid. It takes up to 2.5 hours to fully recharge the earbuds.

When the charging case is opened, the LEDs on the earbuds will light up red, yellow or green to indicate the battery status of the earbuds. The LED on the front of the charging case indicates the battery status of the charging case.

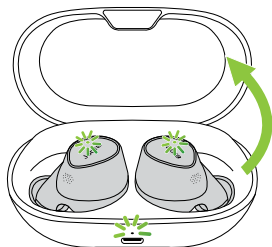

## 4.2 Fast charge the earbuds

---


When the earbuds are at low battery, placing them in the charging case for 5 minutes will fast charge the earbuds and give up to 1 hour of battery. Fast charging the earbuds requires that the charging case has a minimum of 30% battery.

You can see the current battery status of the earbuds and charging case using the Jabra Sound+ app.

## 4.3 Charging the charging case using USB

---

It takes up to 2 hours and 30 minutes to fully charge the earbuds and the charging case using a USB-C charging cable.

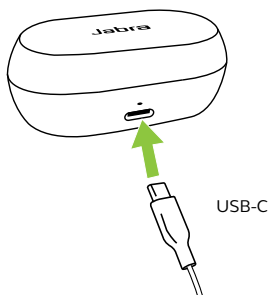


The charging case uses the standard USB voltage of 5V  $\pm$  0.25V. It is not recommended to charge the earbuds using a power supply with a higher voltage.


## 4.4 Charging the charging case using the Jabra wireless charging pad

---

The charging case is Qi-certified. Place the charging case in the center of the Jabra wireless charging pad. The LED on the charging case will flash to indicate the charging case is placed correctly. It takes up to 2 hours and 30 minutes to fully charge the earbuds and the charging case.

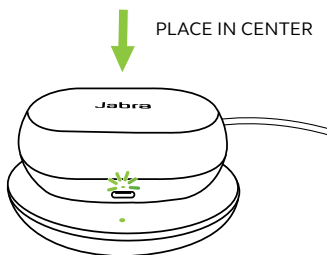

## 5. What the LEDs mean

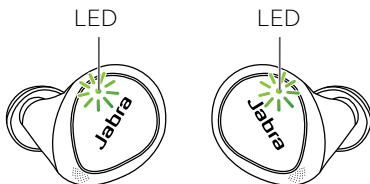

### EARBUD STATUS

● High battery

● Medium battery

● Low battery



Power on




Power off



Pairing



Resetting

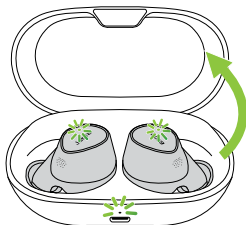

### BATTERY STATUS WHEN OPENING CHARGING CASE

● High battery


● Medium battery







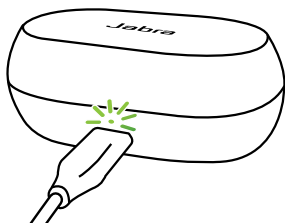

Low battery




Critically low battery  
(earbuds not charging)





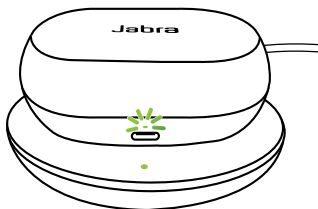


## CHARGING CASE STATUS WITH USB CABLE

- |   |                |   |  |
|---|----------------|---|--|
|   | High battery   |  | Firmware updating                        |
|   | Medium battery |  | Firmware update error (see Section 7.16) |
|   | Low battery    |   |  |
|  | Fully charged  |   |  |



## CHARGING CASE STATUS WITH WIRELESS CHARGING PAD


- |  |                |   |  |
|--|----------------|---|--|
|  | High battery   |  | Firmware updating                        |
|  | Medium battery |  | Firmware update error (see Section 7.16) |
|  | Low battery    |   |  |

Note: When fully charged, the LEDs on the charging case and wireless charging pad will turn off.

## 6. How to pair

### 6.1 Pairing with a mobile device


---

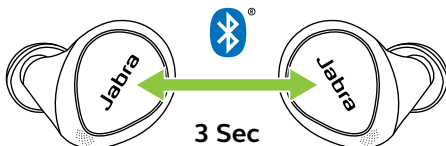

1. Power on the earbuds by removing them from the charging case. Alternatively, press the **Left** and **Right** buttons simultaneously to power the earbuds on.
2. Press and hold (3 sec) the **Left** and **Right** buttons simultaneously until the earbud LEDs flash blue. The earbuds will now be ready to pair to your phone.
3. Wear the earbuds and follow the voice-guided pairing instructions to pair to your mobile device.



## 7. How to use

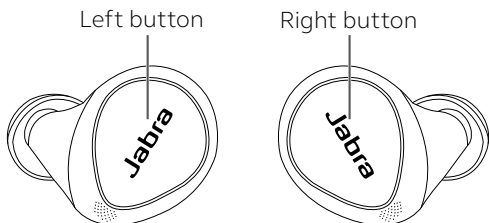

### 7.1 Power the earbuds off/on

---

 
 
To power off the earbuds, place them in the charging case.

To power on the earbuds, remove them from the charging case.

Alternatively, the earbuds can be manually powered off by pressing the **Left** and **Right** buttons on the earbuds simultaneously. To power on, press and hold (1 sec) the **Left** or **Right** buttons to power on each earbud individually.

## 7.2 Music controls

---





| Left earbud                           | Function                        | Right earbud   |
|---------------------------------------|---------------------------------|--|
|                                       | Play/pause music                | Press the <b>Right</b> button when not on a call   |
|                                       | Volume up                       | Press and hold the <b>Right</b> button   |
| Press and hold the <b>Left</b> button | Volume down                     |  |
|                                       | Next track                      | Double-press the <b>Right</b> button when listening to music   |
|                                       | Restart track or previous track | Triple-press the <b>Right</b> button when listening to music<br><br>Repeat to skip to the previous track |

All button functions can be reassigned using MyControls in the Jabra Sound+ app.

## 7.3 Call controls

  ---





| Left earbud   | Function               | Right earbud  |
|---|------------------------|---|
| Press the <b>Left</b> or <b>Right</b> button        | Answer call            | Press the <b>Left</b> or <b>Right</b> button        |
| Double-press the <b>Left</b> or <b>Right</b> button | End/Reject call        | Double-press the <b>Left</b> or <b>Right</b> button |
| Press the <b>Left</b> or <b>Right</b> button        | Mute/unmute microphone | Press the <b>Left</b> or <b>Right</b> button        |
|   | Volume up              | Press and hold the <b>Right</b> button              |
| Press and hold the <b>Left</b> button               | Volume down            |   |

All button functions can be reassigned using MyControls in the Jabra Sound+ app.

## 7.4 ANC, HearThrough and Voice assistant controls

  ---



| Left earbud  | Function  | Right earbud |
|--|---|--------------|
| Press the <b>Left</b> button when not on a call        | Cycle between HearThrough, ANC* and Off                         |              |
| Double-press the <b>Left</b> button when not on a call | Activate Voice assistant (Siri, Google Assistant, Amazon Alexa) |              |

---

All button functions can be reassigned using MyControls in the Jabra Sound+ app.

\*ANC must first be configured using the Jabra Sound+ app.

## 7.5 Adjustable Active Noise Cancellation (ANC)

---

Active Noise Cancellation (ANC) counters noise by detecting and analyzing the pattern of incoming sound and then generating an anti-noise signal to cancel noise out. As a result, you experience a reduced level of surrounding noise during music.

Adjustable ANC must first be configured to your specific hearing profile using the Jabra Sound+ app before it can be used.

Left button

ANC



Cycle between HearThrough, ANC and Off

Press the **Left** button when not on a call

Sound modes

☒ Active Noise Cancellation



☐ HearThrough

☐ Off

## 7.6 HearThrough

---

HearThrough lets you pay attention to your surroundings and engage in conversation, when not on a call, without needing to remove the earbuds. The microphones pick up surrounding sounds and transmit them to the speakers.

**Left button**

**HearThrough**




Cycle between  
HearThrough,  
ANC\* and Off

Press the **Left** button  
when not on a call

---

HearThrough can be adjusted using the Jabra Sound+ app.

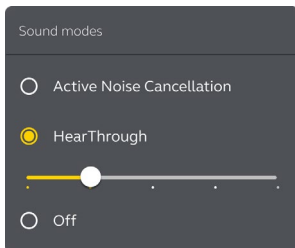


\*ANC must first be configured using the Jabra Sound+ app.

## 7.7 Sidetone

---

Sidetone enables you to hear your own voice when you are on a call. The benefit of Sidetone is that it enables you to determine how loud you are speaking.

Sidetone is on by default during calls and can be turned on/off using the Jabra Sound+ app.

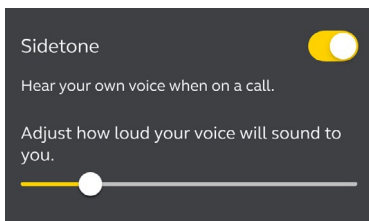


By default, Sidetone on/off cannot be controlled using the earbuds. However, it can be added to the earbuds using MyControls in the Jabra Sound+ app.

## 7.8 Mono earbud use

---


The right or left earbud can be used individually for music playback or for calls. To activate mono earbud mode, place the unused earbud into the charging case.

| Left button  | Left earbud only                        |  |
|--|---|--|
|  | Cycle between HearThrough, ANC* and Off | Press the <b>Left</b> button when listening to music   |
|  | Answer call                             | Press the <b>Left</b> button                           |
|  | End/Reject call                         | Double-press the <b>Left</b> button                    |
|  | Mute/unmute microphone                  | Press the <b>Left</b> button when on a call            |
|  | Activate Voice assistant                | Double-press the <b>Left</b> button when not on a call |
|  | Adjust volume                           | Use the volume controls on the connected mobile device |

---

\*ANC must first be configured using the Jabra Sound+ app.



| Right button  | Right earbud only  |
|---|--|
| Play/pause music  | Press the <b>Right</b> button when listening to music        |
| Answer call   | Press the <b>Right</b> button                                |
| End/Reject call   | Double-press the <b>Right</b> button                         |
| Mute/unmute microphone  | Press the <b>Right</b> button when on a call                 |
|  | Next track   |
|   | Double-press the <b>Right</b> button when listening to music |
|   | Triple-press the <b>Right</b> button when listening to music |
| Restart track or previous track   | Repeat to skip to the previous track                         |
| Adjust volume   | Use the volume controls on the connected mobile device       |


The left and right earbuds will automatically relink when both are placed in your ears.

## 7.9 Auto-pause music and calls

---

When one of the earbuds is removed from your ear, music will automatically pause.

To resume the music, return the earbud to your ear within 60 seconds. After 60 seconds, the music can be manually resumed by pressing the **Right** button.

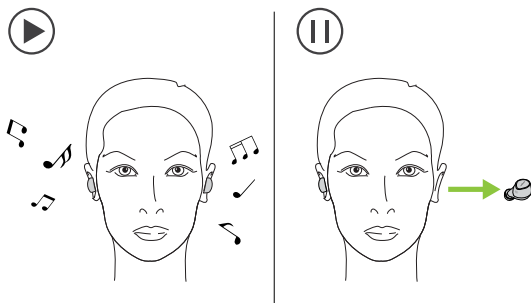


## 7.10 Sleep mode

---

To conserve battery, the earbuds will automatically power off when they are out of range of your mobile device for 15 minutes and are not in the charging case, or when they have been inactive for 30 minutes.

To exit sleep mode, press and hold (1 sec) the button on each earbud. Alternatively, place the earbuds in the charging case and then remove them from the charging case.

Sleep mode can be configured in the Jabra Sound+ app.

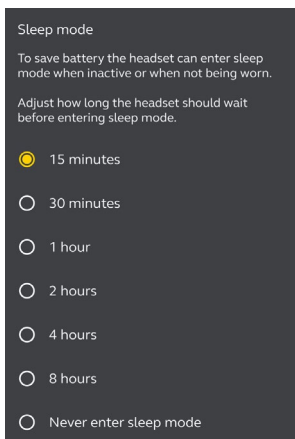

## 7.11 MyControls

---

MyControls is a feature in the Jabra Sound+ app that enables you to reassign any function to each of the earbud buttons, offering you the flexibility to configure the earbuds precisely to your personal preference.

 

By default, the functions listed below cannot be controlled using the earbuds, however these functions can be added to the earbuds using MyControls in the Jabra Sound+ app.

- Sidetone on/off
- Hold current call and answer incoming call
- Switch between held call and current call

## 7.12 Multiple call handling

---


The earbuds can accept and handle multiple calls at the same time.

| Multiple call handling  |   |   |
|---|---|---|
|  | End current call and answer incoming call | Press the <b>Left</b> or <b>Right</b> button        |
|  | Reject incoming call, when on a call      | Double-press the <b>Left</b> or <b>Right</b> button |

---

## 7.13 Voice assistant

---

| Right button  | Voice assistant  |  |
|---|--|--|
|  | Activate Siri, Google Assistant, Amazon Alexa (device dependent) | Double-press the <b>Left</b> button when not on a call |

---

Voice assistant settings can be configured using the Jabra Sound+ app.

## 7.14 Voice guidance and languages

---

Voice guidance can be turned on/off and the language can be changed using the Jabra Sound+ app.

The following languages are available: English, French, German, Japanese, Mandarin Chinese, Korean.

## 7.15 Update firmware

---

The Jabra Elite 7 Pro can be updated to the latest firmware version using the Jabra Sound+ app.

If notifications are enabled in the Jabra Sound+ app, you will receive an automatic notification when a firmware update is available.

If an error occurs during the firmware update, the LED on the charging case will flash red. To complete the update, connect the charging case to a power supply, remove the earbuds from the charging case and then place the earbuds back in the charging case and close the lid. The firmware update will restart.

## 7.16 Reset the earbuds

---

Resetting the earbuds clears the list of paired devices and resets all settings.

1. Place both earbuds in the charging case.
2. Press and hold (10 sec) the **Left** and **Right** buttons on the earbuds simultaneously until the LEDs on the earbuds flash pink.
3. Close the lid of the charging case for 5 seconds to complete the reset.

The earbuds will need to be re-paired to your mobile device. Remember to delete/forget the pairing in the Bluetooth menu on your mobile device.

## 8. Jabra Sound+ app



### Jabra Sound+ app



Personalize your music  
with MySound



Customize ANC, HearThrough  
and MyControls



Register your  
2-year warranty





# 9. Support

## 9.1 FAQ

---

View the FAQs on [Jabra.com/help/elite7](https://Jabra.com/help/elite7)

## 9.2 How to care for your earbuds

---


- Always store the earbuds in the charging case and safely protected.
- To prevent the depletion of the battery lifetime or capacity, avoid storing the earbuds in hot or cold environments, such as a closed car in summer, or in winter conditions.
- It is recommended to store the earbuds between -20°C and 45°C (-4°F and 113°F).
- Do not store the earbuds for extended periods of time without recharging them (max. three months).
- If the earbuds or the charging case become dirty, it is recommended to clean them with a soft, lint-free cloth that has been dampened with clean water.
- The charging case uses the standard USB voltage of 5v +- 0.25v. It is not recommended to charge the earbuds using a power supply with a higher voltage.

## 9.3 Replacement accessories


---

Replacement or additional accessories can be purchased online at [jabra.com/accessories](https://jabra.com/accessories).


### Left and right earbud set

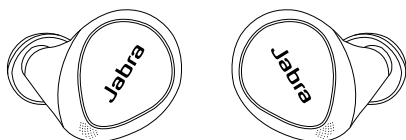


### Charging case

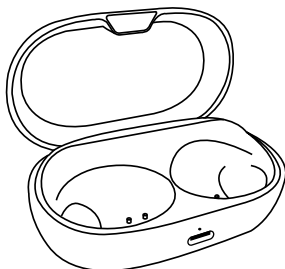


### EarGels

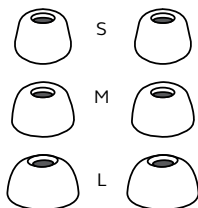


## Jabra wireless charging pad

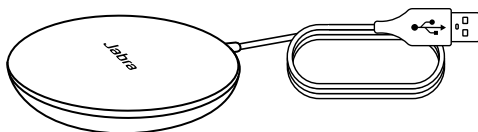

## USB charging cables

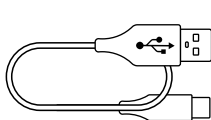

0.3 m

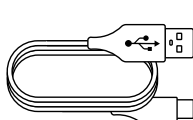

1.2 m

## 9.4 Using replacement earbuds

---

1. Place the replacement earbuds into the charging case and close the lid.
2. Open the charging case lid and remove the earbuds.
3. Wear the earbuds and follow the voice instructions to pair to your mobile device.
4. Update the earbud firmware using the Jabra Sound+ app.

## 9.5 Using a replacement charging case

---

Before using a replacement charging case for the first time, it will need to be synced with your current earbuds and charged for 1 hour.

To begin syncing, place your current earbuds inside the replacement charging case and close the lid for 10 seconds. If the LED on the charging case flashes pink this indicates that the firmware is being updated. Please wait until the LED stops flashing pink before opening the charging case.