

LOGIK

Micro Hi-Fi System

Instruction Manual
LCDHF512



Contents

Unpacking	5
Product Overview	6
Front View.....	6
Rear View	7
Top View	7
Remote Control	8
Operating Your Remote Control	9
Battery Installation for the Remote Control	9
Handling the Battery	10
Handling the Remote Control.....	10
Remote Control Operation Range	10
Connections	11
Speaker Connections	11
Playing music from an Audio Device.....	11
Using Earphones.....	12
Mains Power	12
Basic Operation	13
Powering ON/OFF.....	13
Selecting Modes.....	13
Adjusting the Volume.....	13
Mute Function.....	13
Setting the Clock.....	13
Setting the Alarm Clock.....	14
Setting the Sleep Timer	14
Snooze Function	15
X-Bass Function	15
RADIO Operation	16
AM	16
FM.....	16
Audio Mode	16
Compatible Disc Types	17

CD/MP3 Operation	17
Playback	17
To Pause Playback.....	17
To Stop Playback.....	17
Skipping to Another Track.....	18
Repeat Playback.....	18
Programme Setting.....	19
Programme Play.....	19
Programme Cancel.....	19
AUX IN Operation	20
Maintenance	21
Cleaning the Unit.....	21
Handling Discs.....	21
Cleaning Discs.....	21
Storing Discs.....	21
Hints and Tips	22
Specifications	23
Safety Warnings.....	24

Thank you for purchasing your new Logik Hi-Fi with CD Player.

 
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

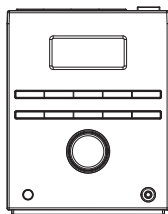

Main Unit x 1

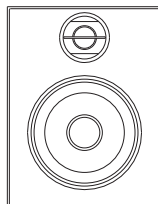 

Speakers x 2

 

Remote Control x 1



 
Instruction Manual x 1



If items are missing, or damaged please contact Partmaster (UK only).
Tel: 0844 800 3456 for assistance.

Product Overview


Front View

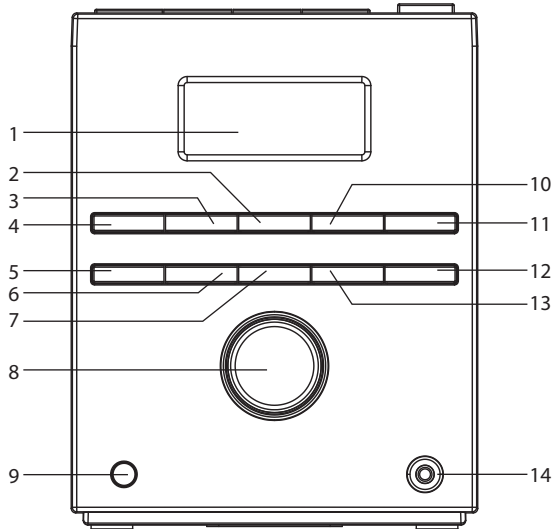

- | | |
|------------------------------------|--|
| 1. LCD Display | 8. TUNING Knob |
| 2. PLAY MODE Button | 9. Remote Control Sensor |
| 3. PROGRAM / CLOCK Button | 10. STOP/FM MONO/ST. ■ Button |
| 4. STANDBY/ON ⏻ Button | 11. PLAY/PAUSE/BAND ▶/ Button |
| 5. SLEEP Button | 12. SKIP/SEARCH ▶▶ Button |
| 6. ALARM 1 SET / OFF Button | 13. SKIP/SEARCH ◀◀ Button |
| 7. ALARM 2 SET / OFF Button | 14. Headphones Socket |


Rear View

 1. Speaker L/R Sockets
2. Radio Aerial
3. AUX IN Socket
4. Main Cable

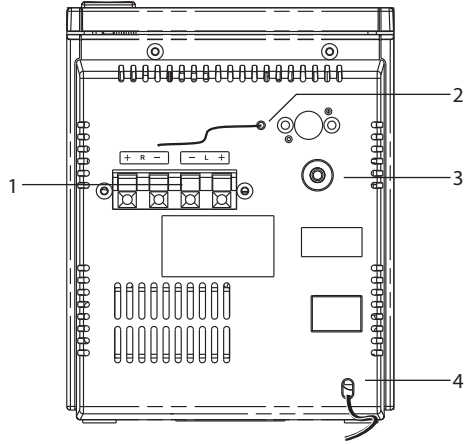


Top View

 1. CD Door
2. SNOOZE Button
3. FUNCTION Button
4. VOLUME - Button
5. VOLUME + Button
6. OPEN Button

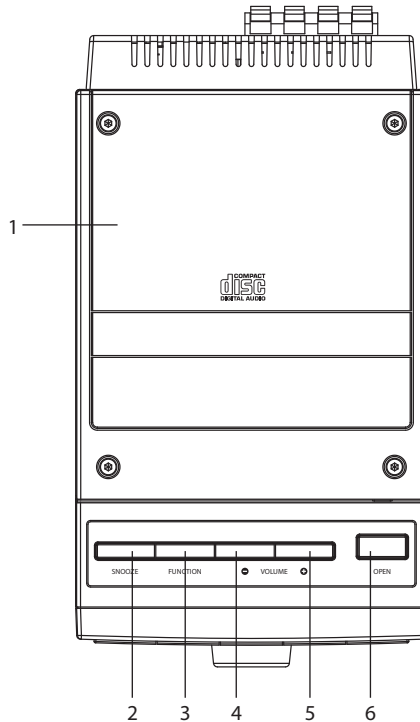


Remote Control

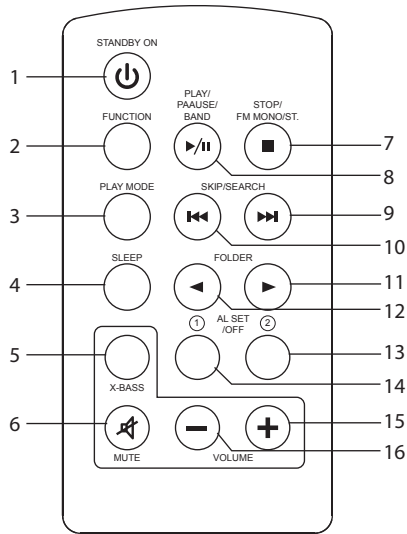 

- | | |
|--|--|
| 1. STANDBY/ON  Button | 9. SKIP/SEARCH  Button |
| 2. FUNCTION Button | 10. SKIP/SEARCH  Button |
| 3. PLAY MODE Button | 11. FOLDER  Button |
| 4. SLEEP Button | 12. FOLDER  Button |
| 5. X-BASS Button | 13. ALARM 2 SET / OFF Button |
| 6. MUTE  Button | 14. ALARM 1 SET / OFF Button |
| 7. STOP/FM MONO/ST.  Button | 15. VOLUME + Button |
| 8. PLAY/PAUSE/BAND  Button | 16. VOLUME - Button |

Operating Your Remote Control




 
Remove the insulating mylar strip from the remote control if the battery is being used for the first time. It is located at the bottom back side of the remote control.

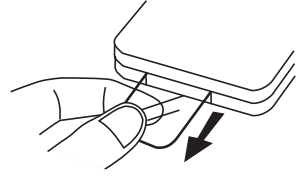

Battery Installation for the Remote Control

The remote control requires a CR2032, 3V Lithium battery.

    1. Slide and hold the battery release tab in the direction of the arrow.
2. Pull out the battery holder and remove the old battery.
3. Replace with a new battery.
4. Insert the battery holder back into the remote control.

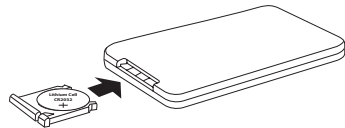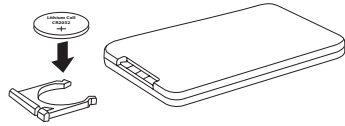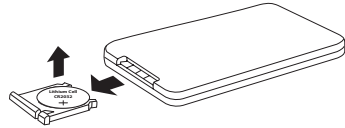

Handling the Battery

 
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly by following the polarity (+ and -) indications in the battery compartment.
- When the battery is exhausted, the remote control will not function.
- Only use the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with the local regulations.
- Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous. Keep loose button cells away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.

Handling the Remote Control

- If you are finding it difficult to remove the battery, use a paperclip to slide the battery tab.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as it could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.

Remote Control Operation Range


Point the remote control at the unit no more than 5 metres from the remote control sensor and within 60° of the front of the unit. The operating distance may vary depending on the brightness of the room.

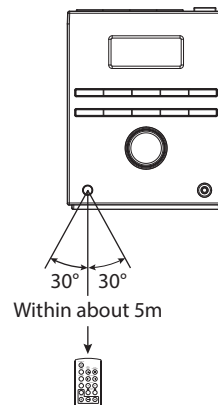

Connections


Speaker Connections

 Connect the speaker cables at the back of the speakers to the **Speaker L/R** sockets at the rear of the unit. (+: Black wire; -: Black/White wire)

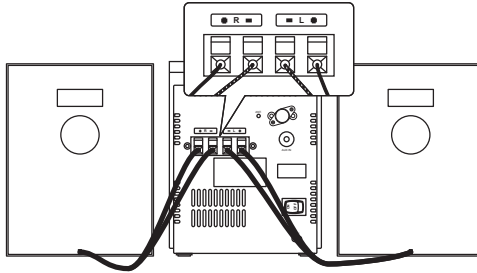


Playing music from an Audio Device

 The AUX input is located on the rear side of the unit. Use a 3.5mm audio stereo cable (not included) to connect the audio device through the **AUX IN** socket.

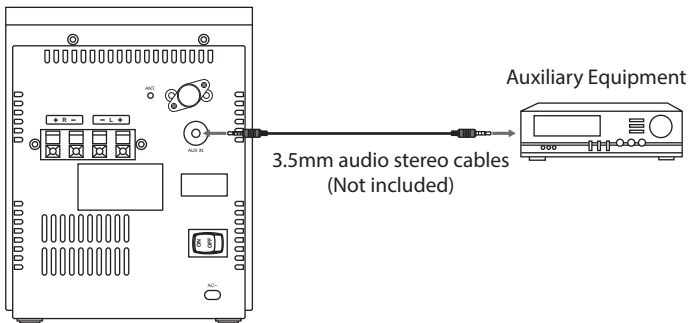

Using Earphones

 
Turn down the volume before connecting the earphones. Slowly raise the volume with the earphones on until you reach your desired volume. When earphones are connected, the speaker is automatically muted.

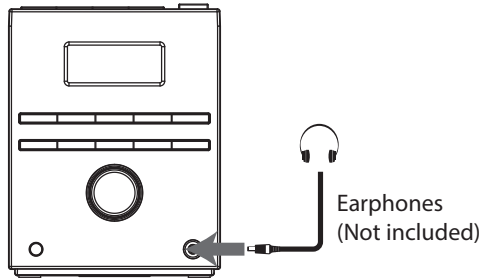

Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones, especially for extended periods.

 Mains Power

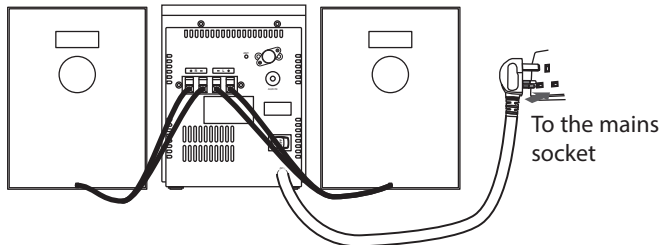

- This unit was designed to operate with an AC 230-240V~50Hz power supply.
- Connecting the unit to any other power source may cause damage to the unit. Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket. The unit is now connected and ready to use.
- To switch the unit off completely, withdraw the mains plug from the mains socket.



Basic Operation

Powering ON/OFF

When you first connect the unit to the mains socket. The unit will be in **STANDBY** mode.

- Press the **STANDBY/ON**  button to switch the unit on.
- Press the **STANDBY/ON**  button again to switch the unit to **STANDBY** mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.



The memory will be lost if the power is switched-off completely.



Selecting Modes

Press the **FUNCTION** button repeatedly to switch between **RADIO**, **CD** and **AUX** modes.

Adjusting the Volume

Press the **VOLUME +/-** button on the unit or the remote control to increase/decrease the volume.

Mute Function

1. When you press the **MUTE**  button once on the remote control, the "**MUTE**" will light on the audio output will be temporarily terminate.
2. Press the **MUTE**  button again, the "**MUTE**" will light off and the audio output will return to normal.



Setting the Clock

During in the **STANDBY** mode.

1. Press and hold the **PROGRAM / CLOCK** button until the time displays will change to 12-hour (or 24-hour) digit and flash.
2. Press the **SKIP / SEARCH** (UP or DOWN) button to adjust 12-hour or 24-hour digit.
3. Press the **PROGRAM / CLOCK** button again, the HOUR digit will flash on the display, press the **SKIP / SEARCH** (UP or DOWN) button to adjust HOUR digit.
4. Press the **PROGRAM / CLOCK** button once more, the MINUTE digit will flash on the display, press the **SKIP / SEARCH** (UP or DOWN) button to adjust MINUTE digit.
5. Press the **PROGRAM / CLOCK** button again to confirm the time.
6. Each enable states as shown above will be cleared if the key is not pushed in 10 seconds.

Setting the Alarm Clock

During the unit in **STANDBY** mode: To set the correct "ALARM 1 or 2":

1. Press the "**ALARM 1 or 2 SET / OFF**" button once on the unit or remote control. The "AL 1 or 2 BELL SYMBOL" indicator will light on. Press the "**ALARM 1 or 2 SET / OFF**" button one more time and hold it for a few seconds, then the "HOUR" indicator will flash. Adjust to the correct "HOUR" by pressing the "**SKIP / SEARCH**" (UP or DOWN) button.
2. Press the "**ALARM 1 or 2 SET / OFF**" button again. The "MINUTE" indicator will flash. Adjust to the correct "MINUTE" by pressing the SKIP / SEARCH (UP or DOWN) button.
3. Press the "**ALARM 1 or 2 SET / OFF**" button again to display the alarm modes (TUNER, CD and BUZZER), select your preferred alarm mode by pressing the "**SKIP/SEARCH**" button.
4. Press the "**ALARM 1 or 2 SET / OFF**" button repeatedly to confirm the "ALARM 1 or 2" function; the "HOUR / MINUTE" indicator will flash and switch to "CLOCK", and then the "AL 1 or 2 BELL SYMBOL" indicator will light on the LCD display.



- There is no alarm setting in AUX Mode.
- The buzzer will alarm under the CD mode if no CD in the compartment.

Setting the Sleep Timer

Use the sleep timer to turn the system off after a certain number of minutes in play mode. By setting the sleep timer, you can fall asleep to music and know that your system will turn off by itself rather than play all night.

To set the sleep timer press the **SLEEP** button on the remote control repeatedly, it changes the number of minutes shown on the display in this sequence:



Snooze Function

1. Press the **SNOOZE** button after the TUNER, CD or BUZZER alarm sounded. The alarm will go off and will come on again in approximately 9 minutes.
2. The alarm will keep alarming 60 minutes, if no button pressed; however, all set SNOOZE time will go off automatically after 60 minutes.



- When the bell is ringing, you can press the "STANDBY" button once or press the "ALARM 1 SET / OFF or ALARM 2 SET / OFF" button once on the remote control to stop the "ALARM 1 or 2" function. The "AL 1 or 2 BELL SYMBOL" indicator will still light on the LCD display. (It may keep the "ALARM 1 or 2" function in next day.)
- When the bell is not ringing, if you want to stop the "ALARM 1 or 2" function fully, you can press the "ALARM 1 SET / OFF or ALARM 2 SET / OFF" button once on the remote control only. The "AL 1 or 2 BELL SYMBOL" indicator will turn off on the display. The function of the "ALARM 1 or 2" will cancel at once.

X-Bass Function

You can press the X-BASS button to enhance the level of bass.

RADIO Operation


Press the **FUNCTION** button repeatedly to select **RADIO** mode. And then press the **PLAY/PAUSE/BAND ►/II** button to select **AM** mode or **FM** mode.

AM

Press the **PLAY/PAUSE/BAND ►/II** button to select **AM** mode. Turn the **TUNING** knob to select the required station. For operation on AM the set control a built-in ferrite aerial which is directional. Therefore, the set should be positioned for the best signal strength.

FM

Press the **PLAY/PAUSE/BAND ►/II** button to select **FM** mode. Turn the **TUNING** knob to select the required station.

The “ ST. ►” indicator will show a stereo broadcast is being received. Fully extend the FM antenna and adjust its direction for best FM reception.




Audio Mode

Press the **STOP/FM MONO/ST. ■** button on the unit or on the remote control to toggle between the Auto or Mono selection.



The unit will automatically switch between stereo and mono in Auto mode depending on the station, but you can override this and switch this function manually set to Mono mode. This is helpful when receiving poor signal reception.

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable)		AUDIO
CD-RW (CD-Rewritable)		AUDIO
AUDIO-CD (Compact Disc Digital Audio)		AUDIO

CD/MP3 Operation

Press the **FUNCTION** button repeatedly to select **CD** mode.

Playback

 
1. Press the **▲** button on the unit and the disc tray will open automatically.
2. Place a disc with the label side up into the CD compartment, and then press the right bottom corner of the CD door to close the door.
3. The total number of tracks will show on the display, the unit will play the first track of the disc automatically.
 - This unit can play CD, CD-R, CD-RW, MP3 disc, 8 cm and Multi Section of MP3 DISC types.
 - It can "Playback Transfer Rate in 8-320 kbps"; Max Readable Folders 200 and 999 tracks.
 - If no disc or the disc can't be read, "No Disc" will show on the display.



If there is no signal under CD mode, the unit will automatically switch off within 15 minutes.

To Pause Playback

1. Press the **PLAY/PAUSE/BAND ►/II** button to pause the playback.
2. To resume playback, press the **PLAY/PAUSE/BAND ►/II** button again.



To Stop Playback

Press the **STOP/FM MONO/ST. ■** button to stop playback.

 
Skipping to Another Track

- Press the **SKIP/SEARCH** **◀◀▶▶** buttons to skip backwards to the beginning of the track or previous track or skip forwards to the next track.
- Press and hold the **SKIP/SEARCH** **◀◀▶▶** buttons to perform fast forward/reverse playback.

Repeat Playback

CD

1. Press the **PLAY MODE** button once on the unit or remote control, "**◀**" will show on the display. The CD will play the current track repeatedly.
2. Press the **PLAY MODE** button twice, "**◀ ALL**" will show on the display. The CD will play all the tracks repeatedly.
3. Press the **PLAY MODE** button thrice, "**RAND**" will show on the display. The CD will play all the tracks randomly.
4. Press the **PLAY MODE** button once more again, the **PLAY MODE** function will turn off.



MP3

1. Press the **PLAY MODE** button once on the unit or remote control, "**◀**" will show on the display. It will play the current track repeatedly.
2. Press the **PLAY MODE** button twice, "**◀ FOLDER**" will show on the display. It will play all the tracks in the current folder repeatedly.
3. Press the **PLAY MODE** button thrice, "**◀ ALL**" will show on the display. It will play all the tracks repeatedly.
4. Press the **PLAY MODE** button four times, "**RAND**" will show on the display. It will play randomly the current album.
5. Press the **PLAY MODE** button once more again, the **PLAY MODE** function will turn off.



Programme Setting

You can program up to 32 tracks in **CD** mode or 64 tracks in MP3 mode in any desired order. Programme mode is activated while in **STOP** mode.

CD

1. Press the **PROGRAM / CLOCK** button, shift to **PROGRAM** mode.
2. Press the **SKIP / SEARCH** (UP or DOWN) button, the track number will be changed.
3. Press the **PROGRAM / CLOCK** button to confirm the track number.
4. Repeat steps 2-3 for programming **P02, P03**, etc.



MP3

1. Press the **PROGRAM / CLOCK** button, shift to PROGRAM mode.
2. Press the **SKIP / SEARCH** (UP or DOWN) button, the album number will be changed.
3. Press the **PROGRAM / CLOCK** button, the first track number will be displayed.
4. Press the **SKIP / SEARCH** (UP or DOWN) button, the track number will be changed.
5. Press the **PROGRAM / CLOCK** button to confirm the favourite track number.
6. Repeat steps 2-5 for programming **P02, P03**, etc.



During Programme Mode

- Press the **PLAY MODE** button once, "◀" will show on the display. The CD will play the current track repeatedly.
- Press the **PLAY MODE** button twice, "◀ ALL" will show on the display. The CD will play all the tracks repeatedly.
- Press the **PLAY MODE** button once more again, the **REPEAT** function will turn off.

Programme Play

Press the **PLAY/PAUSE/BAND ▶/II** button. The unit will play the first track of the program. When all the tracks have been played, the display will show the number of tracks of the CD / MP3 songs.

Programme Cancel

Press the **STOP/FM MONO/ST. ■** button once, or open the CD tray door and close it again to erase the memory.

AUX IN Operation

There is a **AUX IN** socket located on the rear of the unit. Analogue audio sound signals from other sources can be input to the unit.

1. Connect the input of another audio device via a 3.5mm audio stereo cable (not included) with the **AUX IN** socket at the rear of the unit.
2. Press the **FUNCTION** button repeatedly to select **AUX** mode until "**AUX IN**" shows on the display.
3. Press the **VOLUME +/-** buttons on the unit or press the **VOLUME +/-** buttons on the remote control to adjust the volume control for your desired sound output level.
4. In **AUX** mode, operate your audio device directly for playback features.



While in AUX mode, the unit will automatically switch to STANDBY mode in about 4 hours. "AUTO OFF" will flash on the display 10 minutes before switching to STANDBY mode. You can reset the 4-hour countdown by pressing the SNOOZE button while "AUTO OFF" is flashing.

Maintenance

Cleaning the Unit



Ensure to unplug the unit from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.

 
Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.



Cleaning Discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.

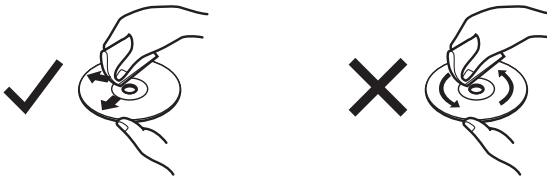

- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips.

Menu	Description
No power.	<ul style="list-style-type: none">• Ensure the mains plug is connected.• Make sure that the unit is turned on.
The remote control does not function.	<ul style="list-style-type: none">• Use the remote control near the unit.• Point the remote control at the remote control sensor on the unit.• Replace the battery in the remote control with a new one.• Make sure the plastic sheet has been removed from the remote control.• Remove any obstacles between the remote control and the unit.
The unit does not respond when pressing any buttons	<ul style="list-style-type: none">• The unit may freeze up during use. Switch the unit off and then on again to reset the unit.
CD	
The disc does not play.	<ul style="list-style-type: none">• There is no disc inside the unit ("No Disc" appears on the display).• Insert the disc correctly with the label side facing up.• Clean the disc.• PAUSE mode may be activated, deactivate it.• A non-valid disc has been inserted.• Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.
Disc skips	<ul style="list-style-type: none">• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.
Radio	
Poor FM reception.	<ul style="list-style-type: none">• Make sure the FM aerial wire is fully extended.• Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Desired station not found.	<ul style="list-style-type: none">• Weak signal. Use the manual tune function.

Specifications

Model	LCDHF512
Disc Format	CD, CD-R, CD-RW, MP3
Audio	2-Channel Analogue
Frequency Range	FM: 88 – 108 MHz AM: 530 – 1600 kHz
Compact Disc Frequency Response	Optical Pickup: 3 - Beam Laser 100Hz – 16 kHz
Power Adapter: Power Supply Power Consumption Standby Power Consumption	AC 230-240V~50Hz 23W ≤ 0.5W
Output Power	2W x 2
Net Weight:	3.04kg
Dimensions: Unit Speaker	135mm(W) x 249mm(D) x 170mm(H) 130mm(W) x 130mm(D) x 170mm(H)

Features and specifications are subject to change without prior notice.

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- A minimum distance of 5cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit’s surface.
- Do not use liquids to clean the unit.



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.

DSG Retail Ltd • Maylands Avenue • Hemel Hempstead
Herts • HP2 7TG • England

227-0263DN-023V2

