

OWNER'S MANUAL

# Mini Hi-Fi System

Please read this manual carefully before operating  
your set and retain it for future reference.

MODEL

CJ45 (CJ45, CJS45F, CJS45W)



## Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.



**CAUTION:** This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

**CAUTION concerning the Power Cord**

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

**Symbols**

|     |                                    |
|-----|------------------------------------|
| ~   | Refers to alternating current(AC). |
| --- | Refers to direct current(DC).      |
| ⊞   | Refers to class II equipment.      |
| ⏻   | Refers to stand-by.                |
| I   | Refers to "ON" (power).            |
| ⚡   | Refers to dangerous voltage.       |

# Table of Contents

## 1 Getting Started

---

- 2 Safety Information
- 4 Table of Contents
- 6 Unique Features
- 7 Playable file Requirement
- 7 – Music file requirement
- 7 – Compatible USB Devices
- 7 – USB device requirement
- 8 Remote control
- 10 Front panel
- 12 Rear Panel

## 2 Connecting

---

- 13 Connecting to speakers
- 13 – Attaching the speakers to the unit
- 13 – Attaching the subwoofer to the unit
- 14 Optional Equipment Connection
- 14 – AUX IN Connection
- 14 – PORTIN Connection
- 14 – Listening to music from your portable player or external device
- 15 – USB Connection
- 15 – Antenna Connection

## 3 Operating

---

- 16 Basic Operations
- 16 – CD/USB Operations
- 16 – Auto Play
- 17 – Selecting a folder and an MP3/WMA file
- 18 – Deleting a file/folder or format
- 18 – AUTO DJ
- 19 Using a BLUETOOTH® wireless technology
- 19 – Listening to music stored on the Bluetooth devices
- 22 Using the Music Flow Bluetooth App
- 22 – About “Music Flow Bluetooth” App
- 22 – Install “Music Flow Bluetooth” App onto Your Bluetooth Device
- 23 – Activate Bluetooth with “Music Flow Bluetooth” App
- 24 Radio Operations
- 24 – Listening to the radio
- 24 – Improving poor FM reception
- 24 – Presetting the Radio Stations
- 24 – Deleting all the saved stations
- 25 Sound adjustment
- 25 – Setting the sound mode
- 26 Advanced Operations
- 26 – Recording to USB
- 28 – Programmed Playback
- 29 Other Operations
- 29 – Turn off the sound temporarily
- 29 – DEMO
- 29 – Resume stop
- 29 – Using Microphone

|    |                                                           |
|----|-----------------------------------------------------------|
| 31 | – Sleep Timer Setting                                     |
| 31 | – Dimmer                                                  |
| 31 | – Auto power down                                         |
| 32 | – AUTO POWER On                                           |
| 32 | – Auto function change                                    |
| 33 | Setting the Clock                                         |
| 33 | – Setting the Clock through<br>“Music Flow Bluetooth” App |
| 33 | – Using your player as an alarm clock                     |
| 34 | LG Sound Sync                                             |
| 35 | WIRELESS PARTY LINK Connection                            |

## **4 Troubleshooting**

---

|    |                 |
|----|-----------------|
| 36 | Troubleshooting |
| 36 | – General       |

## **5 Appendix**

---

|    |                         |
|----|-------------------------|
| 38 | General specifications  |
| 39 | Speaker specifications  |
| 39 | Trademarks and Licenses |
| 40 | Maintenance             |
| 40 | – Notes on Discs        |
| 40 | – Handling the Unit     |

## Unique Features

### **BLUETOOTH®**

Listens to music stored on your **Bluetooth** device.

### **Portable In**

Listens to music from your portable device. (MP3, Notebook, etc.)

### **AUTO DJ**

Blends the end of one song into the beginning of another for seamless playback.

### **USB Direct Recording**

Records music to your USB device.

### **Music Flow Bluetooth**

Music Flow Bluetooth is an app designed to let you take control of some of LG's latest audio devices.

(Page 22)

### **LG Sound Sync**

Controls volume level of this unit by the remote control of your LG TV that is compatible with LG Sound Sync.

# Playable file Requirement

## Music file requirement

MP3/WMA file compatibility with this unit is limited as follows.

- Sampling frequency : within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate : within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Maximum files : Data CD : 999 / USB : 2,000
- Maximum folders : Data CD : 99 / USB : 200
- File extensions : ".mp3"/".wma"
- Certain MP3/WMA files may not be played depending on the type or format of the file.
- CD-ROM file format : ISO 9660/JOLIET
- We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.

The DTS is not supported. In case of DTS audio format, audio is not output.

You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.

(Mastered/Live File System : Disc format system for Windows Vista)


## Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive :  
Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.


## USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/32) file system is supported.)
- This unit recognizes up to 2,000 files.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.
- Some USB may not work with this unit.

# Remote control

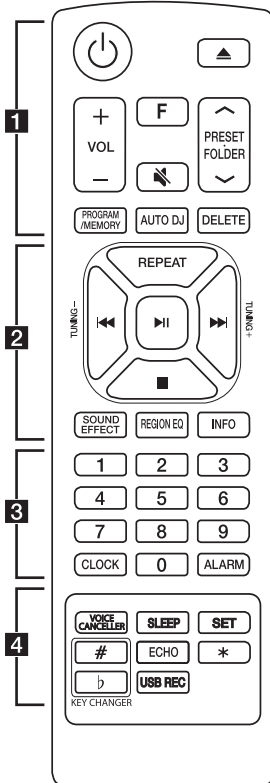

## Replacement of battery

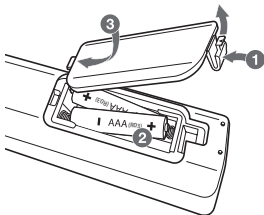

Remove the battery cover on the rear of the remote control, and insert the battery with **+** and **-** matched correctly.

.....**1**.....

**⏻** (Standby) : Turns the power on or off.

**⬆️/⬆️** (Open/Close) : Opens and closes the disc tray.

**VOL** (Volume) **+/-** : Adjusts speaker volume.

**F** (Function) : Selects the function and input source.

| Input source / Function  | Display     |
|--------------------------|-------------|
| Disc                     | CD          |
| USB                      | USB1 / USB2 |
| AUX input                | AUX         |
| Portable input           | PORTABLE    |
| <b>Bluetooth</b>         | BT          |
| LG Sound Sync (Wireless) | LG TV       |
| Radio                    | FM          |

**🔇** (Mute) : Mutes the sound.

**PRESET-FOLDER** **⬆️/⬆️** :

- Chooses a preset number for a radio station. (Page 24)
- Searches for a folder of MP3/WMA files. When a CD/USB containing MP3/WMA files in several folders is being played, press **PRESET-FOLDER** **⬆️/⬆️** to select the folder you want to play.

**PROGRAM/MEMORY** :

- Stores radio stations. (Page 24)
- Deletes all the saved stations.
- Selects a programmed list mode. (Page 28)
- Makes the programmed list.

**AUTO DJ** : Selects the AUTO DJ mode. (Page 18)

**DELETE** :

- Deletes MP3/WMA files. (USB only) (Page 18)
- Deletes a song on the programmed list.



2

**REPEAT** : Listens to your tracks/files repeatedly or randomly.

**⏮/⏭** (Skip/Search) :

- Skips backward or forward.
- Searches for a section within a track/file.

**TUNING +/-** : Selects the radio stations.

**⏸** (Play/Pause) :

- Starts or pauses playback.
- Selects stereo/mono.

**■** (Stop) :

- Stops playback.
- Cancels DELETE function.

**SOUND EFFECT** : Chooses sound impressions.

**REGION EQ** : Chooses region equalizer.

**INFO** :

- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BT READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- In status of WIRELESS PARTY LINK Connection, device name of SLAVE (Secondary) unit appears in the MASTER (Primary) unit and device name of MASTER (Primary) unit appears in the SLAVE (Secondary) unit.

3

**0 to 9** numerical buttons : Selects numbered tracks, files, or preset number.

**CLOCK** : Sets a clock and checks a time.

**ALARM** : With the ALARM function you can turn on CD, USB play and tuner reception on at a desired time.

4

**VOICE CANCELLER** : You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

**SLEEP** : Sets the system to turn off automatically at a specified time.

(Dimmer : The display window will be darkened by half.)

**SET** : Confirms the setting.


**KEY CHANGER( # / ♭ )** : Changes the key to suit your vocal range.

**ECHO** : Selects ECHO mode.

**★** : The button is not available.

**USB REC** : Records to USB.

# Front panel

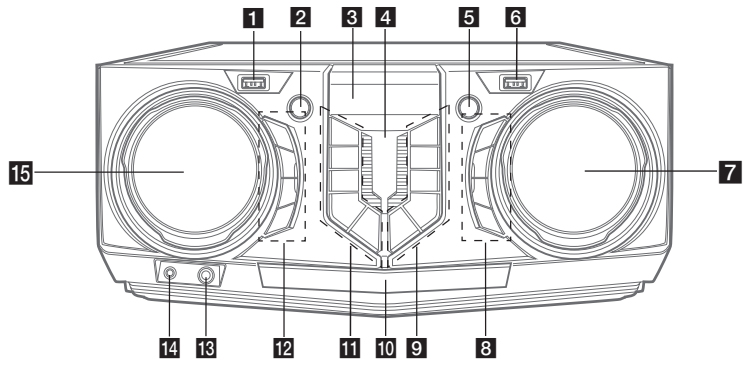

- 1** USB 1 Port  
You can play sound files by connecting the USB device.
- 2** (Standby)  
Turns the power on or off.
- 3** Display window
- 4** (Remote sensor)
- 5** **WIRELESS LINK**  
- Selects MASTER (Primary) or SLAVE (Secondary) on WIRELESS PARTY LINK mode.  
- Enable or disable WIRELESS PARTY LINK mode.
- 6** USB 2 Port  
You can play sound files by connecting the USB device.
- 7** **VOLUME**  
Adjust speaker volume.
- 8** **MIC** (Microphone) +/-  
Adjust microphone volume.
- VOICE CANCELLER**  
You can reduce the vocal tones during music playback from various input sources.
- ECHO**  
Selects ECHO mode.

- 9** **F (Function)**  
Selects the function and input source.

| Input source / Function  | Display     |
|--------------------------|-------------|
| Disc                     | CD          |
| USB                      | USB1 / USB2 |
| AUX input                | AUX         |
| Portable input           | PORTABLE    |
| <b>Bluetooth</b>         | BT          |
| LG Sound Sync (Wireless) | LG TV       |
| Radio                    | FM          |

- >||** (Play/Pause)  
- Starts or pauses playback.  
- Selects stereo/mono.
- >>|** (Skip/Search)  
- Searches forward.  
- Searches for a section within a track/file.  
- Selects the radio stations.
- KEY CHANGER ( # / b )**  
Changes the key to suit your vocal range.

**10** Disc tray

**11 USB REC / DEMO**

- Records to USB.
- In power off status, if you press **USB REC / DEMO**, show demo mode.

 (Stop)

Stops playback or cancels DELETE function.

 (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

 (Open/Close)

Opens and closes the disc tray.

**AUTO DJ**

Selects the AUTO DJ mode.  
(Page 18)

**12 SOUND EFFECT**

Chooses sound impressions.

**REGION EQ / BASS BLAST**

- Chooses region equalizer.
- Press and hold to select BASS effect directly.

**SEARCH**

Moves to folder or file in selection mode.

**OK**

Selects a folder when searching a file.


**13 MIC** (Microphone) jack

**14 PORT.** (Portable) **IN** jack

**15**  **SEARCH** 

- Searches a folder or a file.
- Turns clockwise or counterclockwise to control the SOUND EFFECT, REGION EQ mode.

## Rear Panel

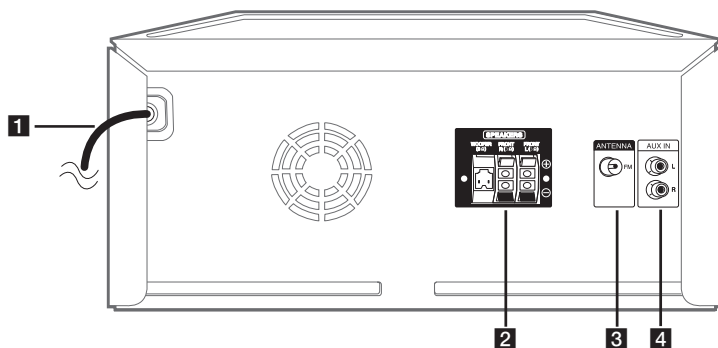


- 1** Power cord
- 2** **SPEAKERS** connector/terminals
- 3** **ANTENNA** (FM)
- 4** **AUX IN** (L/R)  
Connect an auxiliary device.

## Connecting to speakers

### Attaching the speakers to the unit


To connect the cable to the unit, press each plastic finger pad to open the connection terminals on the unit. Insert the wire and release the finger pad.

Connect the black of each wire to the terminals marked - (minus) and the other end to the terminals marked + (plus).

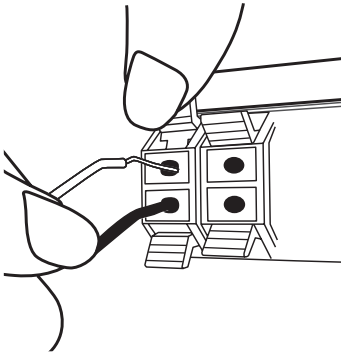

### Attaching the subwoofer to the unit

Connect a subwoofer cord to the player. When connecting a subwoofer cord to the player, insert the connector until it clicks.

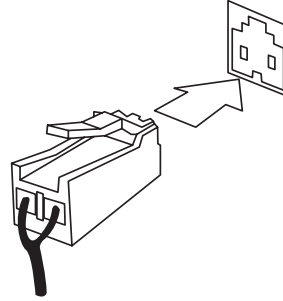

#### Caution


- When you connect the speakers to the unit, make sure to connect the speaker's cable and plug to the corresponding speaker connector.
- Check the volume level before playing music to prevent infirm, child, and pregnant women from being shocked by the sudden and loud sound from the unit.
- Do not use the unit in a limited space. It may damage a person's hearing. It is recommended to use it in a wide space.
- Be careful to make sure children do not put their hands or any objects into the \*speaker duct.  
\* speaker duct : A hole for plentiful bass sound on speaker cabinet (enclosure)
- Use the speaker supplied with this unit only. Using any other speaker may cause malfunction.
- The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor.

## Optional Equipment Connection

### AUX IN Connection


Connect an output of auxiliary device (Camcorder, TV, Player, etc) to the **AUX IN** (L/R) connector.

If your device has only one output for audio (mono), connect it to the left (white) audio jack on the unit.

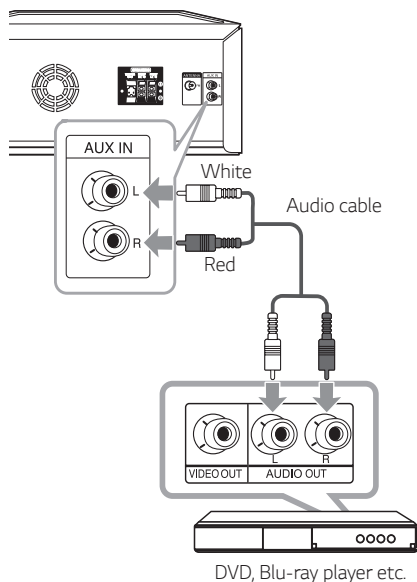

### PORT.IN Connection

Connect an output (earphone or line out) of portable device (MP3 or PMP etc.) to the **PORT.IN** (3.5 mm) connector.

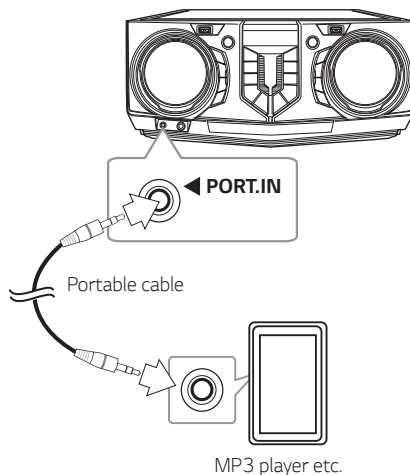

### Listening to music from your portable player or external device

The unit can be used to play the music from many types of portable player or external device.

1. Connect the portable player to the **PORT.IN** connector of the unit.

Or

Connect the external device to the **AUX IN** connector of the unit.


2. Turn the power on by pressing .
3. Press **F** to select AUX or PORTABLE function.
4. Turn on the portable player or external device and start it playing.

#### Note

Automatically switches to the PORTABLE function when you connect the portable device to the **PORT.IN** connector.

## USB Connection

Connect a USB device (or MP3 player, etc.) to the USB ports on the unit.

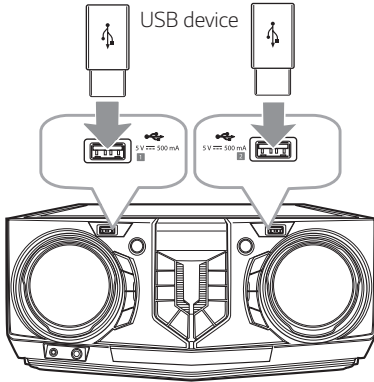

### ! Note


Removing the USB Device from the unit :

1. Choose a different function/mode or press  on the remote control or  on the unit twice in a row.
2. Remove the USB device from the unit.

## Antenna Connection

Connect the supplied FM antenna for listening to the radio.

Connect the FM wire antenna to the FM antenna connector.

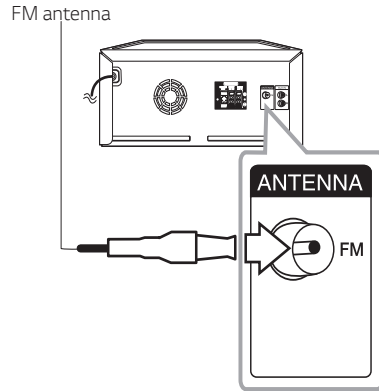

### ! Note

Be sure to fully extend the FM wire antenna.

# Basic Operations

## CD/USB Operations

1. Insert the disc by pressing on the remote control or on the unit.  
Or connect the USB device to the USB port.
2. Select CD or USB function by pressing **F**.

| To                                          | Do this                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stop                                        | Press  on the remote control or  on the unit.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Playback                                    | Press  on the remote control or  on the unit.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Pause                                       | Press  on the remote control or  on the unit during playback.                                                                                                                                                                                                                                                                                                                                                                                                             |
| Searching for a section within a track/file | Press and hold /  on the remote control or /  on the unit during playback and release it at the point you want to listen to.                                                                                                                                                                                                                                                                                                                                              |
| Selecting a track/file directly             | Press <b>0</b> to <b>9</b> numerical buttons on the remote control to go to the desired file or track directly.                                                                                                                                                                                                                                                                                                                                                           |
| Skipping to the next/previous track/file    | <div>- In stop status,<br/>Press /  on the remote control or /  on the unit to go to the next/previous track/file.</div> <div>- During playback,<br/>press  on the remote control or  on the unit to go to the next track/file.<br/>Playing less than 2 seconds, press  on the remote control or  on the unit to go to the previous track/file.<br/>Playing after 3 seconds, press  on the remote control or  on the unit to go to the beginning of the track/file.</div> |
| Playing repeatedly or randomly              | Press <b>REPEAT</b> on the remote control repeatedly. Refer to the note for details about the display change.                                                                                                                                                                                                                                                                                                                                                             |

### Note

- The display changes in the following order.

| USB      | MP3/WMA CD | AUDIO CD |
|----------|------------|----------|
| *RPT 1   | RPT 1      | RPT 1    |
| RPT**DIR | RPT DIR    | -        |
| RPT ALL  | RPT ALL    | RPT ALL  |
| RANDOM   | RANDOM     | RANDOM   |
| OFF      | OFF        | OFF      |

\*RPT : Repeat

\*\*DIR : Directory

- When you play the programmed list, only RPT 1 and RPT ALL are available.
- Even after restarting the unit or switching one function to another, you can listen to music from the point where it's last been played.
- If you leave the disc tray open for 5 minutes, it will close automatically.

## Auto Play

- AUDIO/MP3/WMA CD is played automatically after disc tray is opened and then closed.
- Automatically the unit switches to the CD function if disc tray is opened and then closed even when there is no disc in disc tray.



## Selecting a folder and an MP3/WMA file

### On the unit


1. Press **SEARCH** and rotate **SEARCH** until a desired file appears. You can also search a folder if you press **SEARCH** again.
2. Press **OK** or **>||** to play the selected file. When you search a folder, press **OK** to select a file in the folder, then press **OK** or **>||** again. The selected file is played.

### On the remote control

1. Press **PRESET-FOLDER** **^/V** repeatedly until a desired folder appears.
2. Press **▶||** to play it. The first file of the folder will be played.

### Note

- CD/USB Folders/Files are recognized as below.

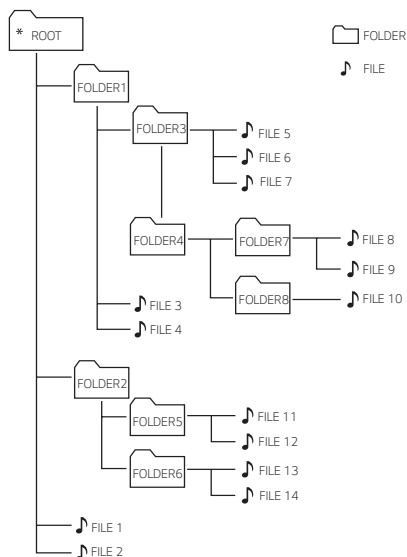

- If there is no file in a folder, the folder will not appear.
- Folders will be presented as the following order,  
ROOT → FOLDER 1 → FOLDER 3 →  
FOLDER 7 → FOLDER 8 → FOLDER 5 →  
FOLDER 6
- File will be played from **FILE** No.1 to **FILE** No.14 one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.

\*ROOT : The first screen you can see when a computer recognize the CD/USB is "ROOT".

## Deleting a file/folder or format

You can delete file, folder on your USB or format the USB.

1. Select USB function by pressing **F**.
2. -Deletes file : Select the file you want to delete and select "DEL FILE" by pressing **DELETE** on the remote control.  
  
-Deletes folder : Select the folder you want to delete and select "DEL DIR" by pressing **DELETE** on the remote control.  
  
-Formats USB : Select "FORMAT" by pressing **DELETE** on the remote control to format the USB device.

If you want to exit the current mode, press  on the remote control or  on the unit.

3. To delete file/folder or format, press and hold **DELETE** on the remote control.

### **Caution**

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

## AUTO DJ

Auto DJ blends the end of one song into the beginning of another for seamless playback. It equalizes volume across tracks/files for uninterrupted playback.

Press **AUTO DJ** repeatedly, the display changes as followings.

AUTO DJ RANDOM → AUTO DJ SEQUENTIAL → AUTO DJ OFF

| Mode   | Display Window     | Description                                  |
|--------|--------------------|----------------------------------------------|
| OFF    | AUTO DJ OFF        | -                                            |
| RANDOM | AUTO DJ RANDOM     | The music is played randomly on this mode.   |
| REPEAT | AUTO DJ SEQUENTIAL | The music is played repeatedly on this mode. |

### **Note**

- AUTO DJ mode does not support searching for a section within a track/file or to play repeatedly or randomly.
- If you move to other functions or stop the music using  on the remote control or  on the unit on AUTO DJ mode, AUTO DJ will be disabled.
- AUTO DJ is not supported in the music file whose length is less than 60 seconds.
- Only AUTO DJ SEQUENTIAL is selected when played the programmed list.

# Using a BLUETOOTH® wireless technology

## About Bluetooth

**Bluetooth** is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices : Smart phone, MP3, Notebook, etc.
- Version : 4.0
- Codec : SBC

## Bluetooth Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

# Listening to music stored on the Bluetooth devices

## Pairing your unit and Bluetooth device

Before you start the pairing procedure, make sure the **Bluetooth** feature is activated on your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Turn on the unit.



### Note

When Bluetooth connection lock is activated, you can search **Bluetooth** device in BT function.

2. Operate the **Bluetooth** device and perform the pairing operation. When searching for this unit with the **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device. Your unit appears as "LG CJ45 (XX)":



### Note

- XX means the last two digits of **Bluetooth** address. For example, if your unit has a **Bluetooth** address such as 9C:02:98:4A:F7:08, you will see "LG CJ45 (08)" on your **Bluetooth** device.
- Depending on the **Bluetooth** device type, some devices may have a different pairing process. Enter the PIN code (0000) as needed.
- You can connect this unit with up to 3 **Bluetooth** devices simultaneously using the same method as described above, only in the **Bluetooth** function.
- The multi pairing connection is only supported on Android devices. (Multi pairing connection may not be supported depending on the connected device specifications.)
- Removable/detachable **Bluetooth** devices (Ex : Dongle etc.) will not support multi pairing.

3. When this unit is successfully connected with your **Bluetooth** device, "PAIRED" appears on the display window and change to **Bluetooth** device name soon. Then "BT" will appear on the display window.

### ! Note

- "PAIRED" will momentarily appear on the display when you connect other devices for multi pairing
- If the device name is unavailable, " \_ " will be displayed.

4. Listen to music.

To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide.

### ! Note

- When using **Bluetooth** technology, you have to make a connection between the unit and the **Bluetooth** device as close as possible and keep the distance.  
However, it may not work well in certain situations as described below:
  - There is an obstacle between the unit and the **Bluetooth** device.
  - There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless LAN device.
- You should connect your **Bluetooth** device to this unit again when you restart it.
- Even if this unit connected up to 3 **Bluetooth** devices in the **Bluetooth** mode, you can play and control music by using only one of the connected devices.

## Controls connected Bluetooth device

You can control connected **Bluetooth** device by the unit; play, pause, stop, skip.

### ! Note

- Only Android OS and iOS is available to use this function.
- This function may not be supported depending on the **Bluetooth** device, or operated differently.

## Bluetooth connection lock (BT LOCK)

You can limit **Bluetooth** connection to only BT (**Bluetooth**) and LG TV function to prevent unintended **Bluetooth** connection.

To turn on this function, press and hold ►|| on the remote control or ►|| on the unit for about 5 seconds in BT (**Bluetooth**) function.

"BT LOCK" appears then you can limit **Bluetooth** connection.

To turn off this function, press and hold ►|| on the remote control or ►|| on the unit for about 5 seconds in BT (**Bluetooth**) function.

"BT UNLOCK" appears.

 **Note**

- The sound may be interrupted when the connection has interference from other electronic devices.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy wireless system using phone, MP3, Notebook, etc.
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- **Bluetooth** connection will be disconnected when the unit is turned off or the **Bluetooth** device gets far from the unit.
- When **Bluetooth** connection is disconnected, connect the **Bluetooth** device to the unit again.
- When a **Bluetooth** device is not connected, "BT READY" appears on the display window.
- When you use **Bluetooth** function, adjust the volume to a proper level on the **Bluetooth** device.
- If a **Bluetooth** device is connected when using LG TV, LG TV is disconnected and the **Bluetooth** device is connected.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- **Bluetooth** connection will be disconnected when you change the **Bluetooth** function to the others. In "Music Flow Bluetooth" app connection, only one device which you are playing keeps **Bluetooth** connection. You can control the **Bluetooth** device with this unit but you cannot use sound output.
- When entering **Bluetooth** function, this unit automatically connect to **Bluetooth** device which is connected the last.  
(Auto connection may not be supported depending on the connected device specifications.)

## Using the Music Flow Bluetooth App

### ! Note

- Only Android OS is available to use "Music Flow Bluetooth" app with this unit.
- It is recommended to use the latest version of app.

## About "Music Flow Bluetooth" App

"Music Flow Bluetooth" app brings a suite of new features to this unit.

To enjoy more features, you are recommended to download and install free "Music Flow Bluetooth" app.

Here is introduce a few of the many features of "Music Flow Bluetooth" app.

**Multi Juke box** : Your entertainment increases three fold when you connect up to 3 **Bluetooth** phones at the same time. Play music from all three phone and create a customized playlist from all the phones.

## Install "Music Flow Bluetooth" App onto Your Bluetooth Device

There are two ways to install "Music Flow Bluetooth" app onto your **Bluetooth** device.

### Install "Music Flow Bluetooth" App through QR code

1. Install "Music Flow Bluetooth" app through QR code. Use the scanning software to scan the QR code.



2. Tap an icon for installation.

### ! Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device has a scanning software application. If you don't have one, download one from "Google Android Market (Google Play Store)".
- Depending on the area, QR code may not work.

## Install “Music Flow Bluetooth” App through “Google Android Market (Google Play Store)”

1. Tap the “Google Android Market (Google Play Store)” icon.
2. In the search bar, type in the “Music Flow Bluetooth” and search it.
3. In the search result list, find and tap “Music Flow Bluetooth” to start downloading **Bluetooth** app.
4. Tap an icon for installation.
5. Tap an icon for downloading.

### ! Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device is equipped with “Google Android Market (Google Play Store)”.

## Activate Bluetooth with “Music Flow Bluetooth” App

“Music Flow Bluetooth” app helps to connect your **Bluetooth** device to this unit.

1. Tap “Music Flow Bluetooth” app icon on the home screen to open “Music Flow Bluetooth” app, and go to the main menu.
2. If you want to get more information to operate, tap [Setting] and tap [Help] menu.

### ! Note

- “Music Flow Bluetooth” app will be available in the software version as follow;
  - Android O/S : Ver 4.0.3 (or later)
- If you use “Music Flow Bluetooth” app for operation, there would be some differences between “Music Flow Bluetooth” app and the supplied remote control. Use the supplied remote control as necessary.
- Depending on the **Bluetooth** device, “Music Flow Bluetooth ” app may not work.
- After connection of “Music Flow Bluetooth” app, music may be output from your device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your **Bluetooth** device while using “Music Flow Bluetooth” app, “Music Flow Bluetooth” app may operate abnormally.
- When “Music Flow Bluetooth” app operates abnormally, check your **Bluetooth** device and the connection of “Music Flow Bluetooth” app and then try to connect again.
- Depending on the smart phone's operating system, you have some differences for “Music Flow Bluetooth” operation.
- Check **Bluetooth** setting on your **Bluetooth** device if “Music Flow Bluetooth” app connection does not work well.

## Radio Operations

Be sure that FM aerials are connected.  
(Page 15)

### Listening to the radio

1. Press **F** until FM appears in the display window.  
The last received station is tuned in.
2. Auto tuning :  
Press and hold **TUNING -/+** on the remote control or **|<< / >>|** on the unit for about two seconds until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.

Or

Manual tuning :

Press **TUNING -/+** on the remote control or **|<< / >>|** on the unit repeatedly.

3. Adjust the volume by pressing **VOL +/-** on the remote control or rotating volume knob on the unit repeatedly.

### Improving poor FM reception

Press **▶||** on the remote control or **>||** on the unit.  
This will change the tuner from stereo to mono and usually improve the reception.

## Presetting the Radio Stations

You can preset 50 stations for FM.  
Before tuning, make sure to turn down the volume.

1. Press **F** until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING -/+** on the remote control or **|<< / >>|** on the unit.
3. Press **PROGRAM/MEMORY** on the remote control. A preset number will blink in the display window.
4. Press **PRESET-FOLDER ^ / V** on the remote control to select the preset number you want.
5. Press **PROGRAM/MEMORY** on the remote control. The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET-FOLDER ^ / V** or **0** to **9** numerical buttons on the remote control.

## Deleting all the saved stations

1. Press and hold **PROGRAM/MEMORY** on the remote control for two seconds.  
"ERASEALL" will flash up on the unit display.
2. Press **PROGRAM/MEMORY** on the remote control to erase all the saved radio stations.



# Sound adjustment

## Setting the sound mode

This system has a number of pre-set surround sound fields. The displayed items for the Equalizer may be different depending on sound sources and effects. You can select a desired sound mode by using **SOUND EFFECT**.

| On Display                     | Description                                                                                                                                 |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| BASS (BASS BLAST)              | Reinforces the treble, bass and surround sound effect.                                                                                      |
| POP<br>CLASSIC<br>ROCK<br>JAZZ | This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert. |
| FOOT BALL                      | You can enjoy the sound effect FOOTBALL STADIUM.                                                                                            |
| STANDARD                       | You can enjoy optimized sound.                                                                                                              |

You can select a desired sound mode by using **REGION EQ** on the remote control or **REGION EQ / BASS BLAST** on the unit.

| On Display                                                   | Region        | Description                                                          |
|--------------------------------------------------------------|---------------|----------------------------------------------------------------------|
| FUNK, REGUETON, SAMBA, MERENGUE, AXE, SALSA, SERTANEJ, FORRO | Latin America | Optimized sound effect for the music genre preferred in each region. |
| ARABIC                                                       | Middle East   |                                                                      |
| DANGDUT                                                      | Indonesia     |                                                                      |
| AFRO                                                         | Africa        |                                                                      |
| INDIA                                                        | India         |                                                                      |

**Note**

- On some speakers, sound may not be heard or heard in low sound depending on the sound mode.
- By pressing and holding **REGION EQ / BASS BLAST** on the unit for 3 seconds on the unit you can directly select BASS (BASS BLAST) effect.

# Advanced Operations

## Recording to USB

You can record a various sound source to USB.  
(CD, USB1, AUX, PORTABLE, FM)

1. Connect the USB device to the unit.
2. Press **F** to select a function you want to record.
3. Start the recording by pressing **USB REC** on the remote control or **USB REC / DEMO** on the unit.

| Function                | Status                   | Result                                                                                                                                                                                                                                                                                             |
|-------------------------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CD, USB                 | Play/Pause               | Recorded until stop                                                                                                                                                                                                                                                                                |
|                         | Resume stop<br>(Page 29) | Quick recorded the latest song                                                                                                                                                                                                                                                                     |
|                         | Full stop                | Quick recorded All songs<br><br>In case below, scope is limited.<br>- After File search (Page 17), quick recorded an indexed song<br>- After Folder search (Page 17), quick recorded All songs on Folder<br>- After the programmed list (Page 28), quick recorded All songs of the programmed list |
| AUX,<br>PORTABLE,<br>FM | -                        | Recorded until stop                                                                                                                                                                                                                                                                                |

- If you connect both USB1 and USB2, press **USB REC** on the remote control or **USB REC / DEMO** on the unit when USB1 or USB2 which you want to record blinks in the display window.
- 4. To stop recording, press and hold **USB REC** on the remote control or **USB REC / DEMO** on the unit for 3 seconds. Otherwise, the recording continues.

## Pausing recording

During CD/USB playback or pause, or external sound source recording, press **USB REC** on the remote control or **USB REC / DEMO** on the unit to pause recording. Press it again to restart recording.

### ! Note

- VOICE CANCELLER or KEY CHANGER will be reset, if you use recording function during operating VOICE CANCELLER or KEY CHANGER.
- VOICE CANCELLER or KEY CHANGER can not be operated during recording.

## To select recording bit rate

1. Press and hold **USB REC** on the remote control or **USB REC / DEMO** on the unit for 3 seconds.
2. Press **◀◀/▶▶** on the remote control or **◀◀/▶▶** on the unit to select a bit rate.
3. Press **USB REC** on the remote control or **USB REC / DEMO** on the unit to finish the setting.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible  
Respect copyrights**

**! Note**

- When you stop recording, the file that has been recorded at that time will be stored. (Except when recording MP3/ WMA files that are in stop status.)
- Do not remove the USB device or turn off the unit during USB recording. If does not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like “NO USB”, “ERROR”, “USB FULL”, “NOT SUPPORT” or “FILE MAX” is displayed on the display window.
- Multi card reader device or external HDD can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.

**! Note**

- You can record MIC. (Except when recording USB/ CD that are in stop status.)
- You can control recorded microphone sound according to microphone volume.
- You may not store more than 2,000 files.
- In case of the unsupported MP3/WMA file, the file recording may be stopped.
- When you are recording during playback, the sound now playing is output.
- It'll be stored as follows.

| AUDIO CD                                                                           | MP3/WMA                                                                                  |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| Play or pause status<br>■ CD_REC<br>├ AUDIO_0001<br>├ AUDIO_0002<br>├ ...<br>└ ... | Play or pause status<br>■ FILE_REC<br>├ AUDIO_0001<br>├ AUDIO_0002<br>├ ...<br>└ ...     |
| The other status<br>■ CD_REC<br>├ TRACK_0001<br>├ TRACK_0002<br>├ ...<br>└ ...     | The other status<br>■ FILE_REC<br>├ ABC(File name)<br>├ DEF(File name)<br>├ ...<br>└ ... |
| The other source*                                                                  | Tuner                                                                                    |
| ■ OTHERS_REC<br>├ AUDIO_0001<br>├ AUDIO_0002<br>├ ...<br>└ ...                     | ■ TUNERS_REC<br>├ AUDIO_0001_107-7FM<br>├ ...<br>├ ...<br>└ ...                          |

\* : AUX and the like.

Tuner : The current recording frequency is shown.

## Programmed Playback

The program function enables you to make a playlist of your favorite tracks/files from a disc or USB device. A program can contain 20 tracks/files for each media. Possible to save a total of 60 tracks/files.

### Making Programmed list

1. Press **PROGRAM / MEMORY** on the remote control in stop status.
2. Select a track/file by pressing **◀◀/▶▶** on the remote control.
3. Press **PROGRAM/MEMORY** on the remote control to save the track/file.
4. Repeat steps 2 - 3 to store other tracks/files. (You can modify the list by pressing **PRESET-FOLDER ▲/▼** on the remote control to select the program number.)
5. Press **PROGRAM/MEMORY** on the remote control once again.

To play the programmed list, press **▶▶** on the remote control after you make the list.



#### Note

When making or modifying the programmed list, REPEAT mode is off.

### Deleting Programmed list

Deleting function only works in the edit mode.

1. Press **PROGRAM/MEMORY** on the remote control in stop status.
2. Select a song by pressing **PRESET-FOLDER ▲/▼** or **PROGRAM/MEMORY** on the remote control repeatedly.
3. Press **DELETE** on the remote control while a song is selected.



#### Note

- Programmed list is switched off in the case below.
  - Changing to a different function.
  - Turning off and on the unit.
  - Operating the numeric buttons on the remote control.
  - Playing a file by using **SEARCH** and **◀SEARCH▶** on the unit.
- Programmed list is cleared in the case below.
  - Removing the disc or the USB device.
  - Deleting or recording music files in the USB device.
  - Unplugging the Power Cord.

### Editing Programmed list

1. Press **PROGRAM/MEMORY** on the remote control in stop status.
2. Press **PRESET-FOLDER ▲/▼** or **PROGRAM/MEMORY** on the remote control to select a track/file to edit.
3. Press **◀◀/▶▶** on the remote control.
4. Press **PROGRAM/MEMORY** on the remote control once again.
5. Repeat 2 to 4 to store the other tracks/files.

To play the programmed list, press **▶▶** on the remote control after you edit the list.

## Other Operations

### Turn off the sound temporarily

Press  on the remote control to mute your sound.

You can mute your unit, for example, to answer the telephone, the "MUTE" will appear in the display window.

To cancel it, press  on the remote control again or change the volume level.

### DEMO

In the power off state, press **USB REC / DEMO** on the unit once. The unit will power on and display the each of functions in the display window.

To cancel the DEMO function, press **USB REC / DEMO** on the unit once more.



#### Note

You can enjoy other functions during the DEMO, the DEMO will temporarily pause.

- Without input key in 10 sec, the DEMO will playback automatically.

### Resume stop

The unit records the point where you pressed the  on the remote control or  on the unit depending on the disc or USB.

If you press  on the remote control or  on the unit twice, the unit will clear the stopped point.

## Using Microphone

1. Connect your microphone to the MIC jack.
2. Play the music you want.
3. Sing along with the accompaniment.  
Adjusts the microphone volume by pressing **MIC +/-** on the unit.



#### Note

- When not using the microphone, set the MIC volume to minimum or turn off the MIC and remove the microphone from the MIC jack.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the **MIC -** on the unit.
- If sound through the microphone is extremely loud, it may be distorted. In this case, press **MIC -** on the unit to minimum.
- You can give an echo effect to the sound from the microphones by pressing **ECHO**.

## VOICE CANCELLER

You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

Press the **VOICE CANCELLER** and "ON" will appear in display window.

To cancel it, press **VOICE CANCELLER** again.

The quality of the VOICE CANCELLER may be different depending on the recording conditions of music files.

### ! Note

- This function is available CD, USB or BT (**Bluetooth**) function.
- If the function is not available, "NOT SUPPORT" appears in the display window.
- This function is available to use only when a microphone is connected.
- If a microphone is not connected, "INSERT MIC" appears in the display window.
- It is not available on the mono source.
- To initialize it, change the function or disconnect the microphone.
- This function may not be initialized depending on the status of connected devices.

## KEY CHANGER

You can adjust the key to 9 steps (4 steps higher, 4 steps lower and the original key).

- To sharp the key one by one, press **KEY CHANGER (#)** repeatedly during playback.
- To flatten the key one by one, press **KEY CHANGER (b)** repeatedly during playback.

### ! Note

- This function is available CD, USB or BT (**Bluetooth**) function.
- To initialize it, change the function, disconnect the microphone or change the music.
- This function may not be initialized depending on the status of connected devices.
- If the function is not available, "NOT SUPPORT" appears in the display window.
- If a microphone is not connected, "INSERT MIC" appears in the display window.

## ECHO

When you connect your microphone to the MIC jack, you can give an echo effect to the sound from the microphones by pressing **ECHO**.

ECHO 1 → ECHO 2 → ECHO OFF

### ! Note

If a microphone is not connected, "INSERT MIC" appears in the display window.

## Sleep Timer Setting

Press **SLEEP** on the remote control repeatedly to select delay time between 10 and 180 minutes. After the delay time, the unit will be turned off.

To cancel the sleep function, press **SLEEP** on the remote control repeatedly until "SLEEP 10" appears, and then press **SLEEP** on the remote control once again while "SLEEP 10" is displayed.

### ! Note

- You can check the remaining time before the unit is turned off. Press **SLEEP** on the remote control to check or change the remaining time.
- You can edit the remain time when displays the remaining time or "DIMMER."

## Dimmer

Press **SLEEP** on the remote control once. The display window will be darkened by half.

To cancel it, press **SLEEP** on the remote control repeatedly until dim off.

## Auto power down

This unit will turn itself off to save electricity in the case were the main unit is not connected to an external device and is not used for 15 minutes.

The unit will also turn itself off after six hours if the main unit has been connected to another device using the analog inputs.

Auto power down function is applied to only MASTER (Primary) unit in case of WIRELESS PARTY LINK connection. In case of SLAVE (Secondary) unit, Auto power down is available after disconnection SLAVE (Secondary) unit and MASTER (Primary) unit.

## AUTO POWER On

This unit automatically turns on by an input source : LG TV or **Bluetooth**

When you turn on your TV connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from the unit.

If you try to connect your **Bluetooth** device, this unit turns on and connect your **Bluetooth** device.

You can play your music.

### ! Note

- Depending on the connected device, this function may not operate.
- Depending on the connected device, the unit turns on but **Bluetooth** function may not be connected.
- If you disconnect **Bluetooth** connection by this unit, some **Bluetooth** devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turning off the unit.
- If you try to connect to the "Music Flow Bluetooth" app, **Bluetooth** function of this unit is turned on.
- If you turn on the unit using LG TV or **Bluetooth** function, proper function of this unit is turned on.
- If you have already paired with this unit, automatically this unit can turn on by an input source when this unit is turned off.
- If you turn off the unit by pressing the power button for more than 5 seconds, Auto Power On function is disabled.  
To activate it, turn on the unit.

## Auto function change

This unit recognizes input signals such as **Bluetooth** and LG TV or connected portable device, and then changes suitable function automatically.

### When you try to connect Bluetooth device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected.

Play your music on the **Bluetooth** device.

### When PORT.IN connection is connected

When you connect the portable device to the **PORT.IN** connector, **PORTABLE** function is selected. Play your music on the portable device.

### When LG TV is connected

When you turn on your LG TV connected by LG Sound Sync, this unit changes the function to LG TV. You can hear the sound from your TV.

### ! Note

- This function is not available during recording or deleting.
- This function only works with devices that were previously connected.
- If the **Bluetooth** connection lock function is set, **Bluetooth** and LG TV connection will be only available on **Bluetooth** and LG TV function.



## Setting the Clock

1. Turn the unit on.
2. Press and hold **CLOCK** on the remote control.
3. Select time mode by pressing **◀◀/▶▶** on the remote control.  
- AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **SET** on the remote control to confirm your selection.
5. Select the hours by pressing **◀◀/▶▶** on the remote control.
6. Press **SET** on the remote control.
7. Select the minutes by pressing **◀◀/▶▶** on the remote control.
8. Press **SET** on the remote control.

## Setting the Clock through “Music Flow Bluetooth” App

Install “Music Flow Bluetooth” app on your Android device. (Page 22-23)

Your unit's clock will be automatically synchronized with your device by activating **Bluetooth** connection through “Music Flow Bluetooth” app.

## Using your player as an alarm clock

1. Turn the unit on.
2. Press and hold **ALARM** on the remote control.
3. Press **◀◀/▶▶** on the remote control to change the hours and minutes and press **SET** on the remote control to save.
4. Press **◀◀/▶▶** on the remote control to select function and press **SET** on the remote control to save.
  - Press **◀◀/▶▶** on the remote control to select a preset number when you select Tuner and then, press **SET** on the remote control. If there is no preset number, this step is skipped.
5. Press **◀◀/▶▶** on the remote control to change the volume and press **SET** on the remote control to save.

### ! Note

- If you set the clock time, you can check the time by pressing **CLOCK** on the remote control even when the player is turned off.
- You can set alarm after you set the clock time.
- If you set the clock time and alarm, you can check the alarm setting information by pressing **ALARM** on the remote control even when the unit is turned off.
- You can select ALARM ON/OFF mode by pressing **ALARM** on the remote control.

## LG Sound Sync



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with LG TV that supports LG Sound Sync. Make sure your TV has the LG Sound Sync logo.

Controllable function by LG TV's remote control :  
Volume up/down, mute

Refer to the TV's instruction manual for the details of LG Sound Sync.

1. Turn on the unit by pressing .
2. Press **F** until LG TV function is selected.
3. Set up the sound output of TV to listen to the sound through this unit :  
TV setting menu [Sound] → [TV Sound output]  
→ [LG Sound Sync (Wireless)]

"PAIRED" appears on the display window for about 3 seconds and then you can see "LG TV" on the display window if the TV and this unit are connected normally.


### Note

- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV.
- If the connection fails, check the conditions of this unit and your TV : power, function.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
  - The unit is turned off.
  - Changing to a different function.
  - Disconnecting the wireless connection caused by interference or a distance.
- The amount of time to turn off this unit is different depending on your TV.
- If you try to change the function on using the LG TV function, volume will be changed according to the LG TV volume level.
- Details of TV setting menu vary depending on the manufacturers or models of your TV.
- If you connect LG Sound Sync when "Music Flow Bluetooth" app is connected, control through the app is available.
- If you turned off the unit directly by pressing , LG Sound Sync will be disconnected. To use this function again, you should reconnect the TV and the unit.
- If an LG TV is connected when using **Bluetooth**, **Bluetooth** is disconnected and the LG TV is connected.
- The volume may be increased when the TV and this unit is connected by LG Sound Sync. Decrease the TV volume and then connect with this unit.
- When you turn on your LG TV connected by LG Sound Sync or enter LG TV function, this unit changes the function to LG TV automatically.
- You should set the TV Sound output manually depending on the LG TV version.

## WIRELESS PARTY LINK Connection

The output sound of **A** (MASTER (Primary)) unit is expanded to **B** (SLAVE (Secondary)) unit. It is compatible with unit that supports WIRELESS PARTY LINK.

The name of function about sound expansion between the compatible products wired or wirelessly was changed to PARTY LINK or WIRELESS PARTY LINK.

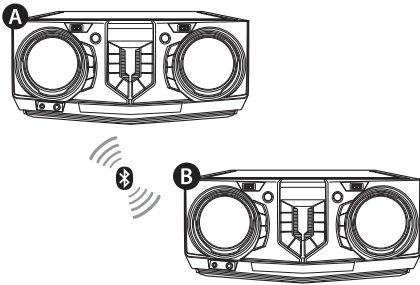

1. Press **WIRELESS LINK** on the unit. PARTY LINK MODE SELECT appears in the display window.
2. Press **WIRELESS LINK** on the unit to select MASTER (Primary) or SLAVE (Secondary).
  - **A** unit : Selects MASTER (Primary).
  - **B** unit : Selects SLAVE (Secondary).
 Two units try to connect with each other.
3. When this unit is successfully connected each other, "Slave (Secondary) Device Name CONNECTED" appears in the MASTER (Primary) unit.  
"CONNECTED TO Master (Primary) Device Name" appears in the SLAVE (Secondary) unit and change to SLAVE (Secondary) soon.

### ! Note

- If you using the LG Sound Sync, this function is not available. If you connect the LG TV function, "NOT SUPPORT" appears in the display window.
- You can use microphone in the SLAVE (Secondary) unit only. In case of SLAVE (Secondary) unit, some functions are supported only.
- When WIRELESS PARTY LINK is disconnected, SLAVE (Secondary) unit is changed to BT function.
- If the connection is failed, "FAILED" appears in the display window.
- Mute function is synchronized with each other.
- WIRELESS PARTY LINK connection will be disconnected when you turn off the unit or press **WIRELESS LINK** on the unit.
- Sound of MASTER (Primary) unit and SLAVE (Secondary) unit may be different depending on playback status or source.
- Check the following information when connecting to **Bluetooth**.
  - You can connect only one **Bluetooth** device in the MASTER (Primary) unit. You cannot connect **Bluetooth** device to the SLAVE (Secondary) unit.
  - WIRELESS PARTY LINK connection is only supported on Android devices. (WIRELESS PARTY LINK connection may not be supported depending on the connected device specifications or OS.)
  - Removable/detachable **Bluetooth** devices (ex. Dongle etc.) will not support WIRELESS PARTY LINK connection.
  - When WIRELESS PARTY LINK is connected, **Bluetooth** connection is not available in status of recording or deleting.

# Troubleshooting

## General

| Problem                                     | Cause & Correction                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The unit does not work properly.            | <ul style="list-style-type: none"><li>• Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again.</li><li>• Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again.</li><li>• Previous setting may not be saved when device power is shut off.</li></ul> |
| No Power.                                   | <ul style="list-style-type: none"><li>• The power cord is not plugged in. Plug in the power cord.</li><li>• Check whether electricity failed.<br/>Check the condition by operating other electronic devices.</li></ul>                                                                                                                                                                                                       |
| No sound.                                   | <ul style="list-style-type: none"><li>• Check whether you select right function.<br/>Press function button and check the selected function.</li><li>• Check to see if the Speakers are connected correctly. Speaker cables connected correctly.</li></ul>                                                                                                                                                                    |
| The unit does not start playback.           | <ul style="list-style-type: none"><li>• An unplayable disc is inserted. Check the playable disc.</li><li>• No disc is inserted. Insert a disc.</li><li>• The disc is dirty. Clean the disc. (Page 40)</li><li>• The disc is inserted upside down.<br/>Place the disc with the label or printed side facing upwards.</li></ul>                                                                                                |
| Radio stations cannot be tuned in properly. | <ul style="list-style-type: none"><li>• The antenna is positioned or connected poorly.<br/>Connect the antenna securely.</li><li>• The signal strength of the radio station is too weak.<br/>Tune to the station manually.</li><li>• No stations have been preset or preset stations have been cleared (when being tuned by scanning preset channels).<br/>Preset some radio stations, see page 24 for details.</li></ul>    |

| Problem                                    | Cause & Correction                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The remote control does not work properly. | <ul style="list-style-type: none"><li>• The remote control is too far from the unit.<br/>Operate the remote control within about 7 m (23 feet).</li><li>• There is an obstacle in the path of the remote control and the unit.<br/>Remove the obstacle.</li><li>• The batteries in the remote control are exhausted.<br/>Replace the batteries with new ones.</li></ul> |
| LG Sound Sync does not work.               | <ul style="list-style-type: none"><li>• Check whether your LG TV supports LG Sound Sync.</li><li>• Check connection of LG Sound Sync.</li><li>• Check sound setting of your TV and this unit.</li></ul>                                                                                                                                                                 |

# General specifications

| General                |                                                                    |
|------------------------|--------------------------------------------------------------------|
| Power requirements     | Refer to the main label on the unit.                               |
| Power consumption      | Refer to the main label on the unit.                               |
| Dimensions (W x H x D) | Approx. 350 mm x 163 mm x 251 mm (13.8 inch x 6.4 inch x 9.9 inch) |
| Operating temperature  | 5 °C to 35 °C (41 °F to 95 °F)                                     |
| Operating humidity     | 60 %                                                               |

| Inputs                   |                                                       |
|--------------------------|-------------------------------------------------------|
| Analog audio in (AUX IN) | 1.0 Vrms (1 kHz, 0 dB), 75 $\Omega$ , RCA jack (L, R) |
| Portable in (PORT.IN)    | 500 mVrms (3.5 mm stereo jack) x 1                    |
| Microphone (MIC)         | Sensitivity 20 mV (1 kHz), 6.3 mm jack x 1            |

| Tuner           |                                          |
|-----------------|------------------------------------------|
| FM Tuning Range | 87.5 to 108.0 MHz or 87.50 to 108.00 MHz |

| System                 |                                                                                              |
|------------------------|----------------------------------------------------------------------------------------------|
| Frequency Response     | 100 to 20,000 Hz                                                                             |
| Signal-to-noise ratio  | More than 75 dB                                                                              |
| Dynamic range          | More than 75 dB                                                                              |
| Bus Power Supply (USB) | 5 V  500 mA |

| Amplifier (RMS Output power) |                                               |
|------------------------------|-----------------------------------------------|
| Total output                 | 720 W RMS                                     |
| Front                        | 240 W RMS X 2 (3 $\Omega$ at 1 kHz, 20 % THD) |
| Subwoofer                    | 240 W RMS (3 $\Omega$ at 60 Hz, 20 % THD)     |

- Design and specifications are subject to change without notice.

## Speaker specifications

| Front speaker              |                                  |
|----------------------------|----------------------------------|
| Type                       | 2 Way 2 Speaker                  |
| Impedance                  | 3 $\Omega$                       |
| Rated Input Power          | 240 W RMS                        |
| Max. Input power           | 480 W RMS                        |
| Net Dimensions (W x H x D) | Approx. 266 mm x 314 mm x 234 mm |

| Subwoofer                  |                                  |
|----------------------------|----------------------------------|
| Type                       | 1 Way 1 Speaker                  |
| Impedance                  | 3 $\Omega$                       |
| Rated Input Power          | 240 W RMS                        |
| Max. Input power           | 480 W RMS                        |
| Net Dimensions (W x H x D) | Approx. 266 mm x 314 mm x 300 mm |

- Design and specifications are subject to change without notice.

## Trademarks and Licenses



The **Bluetooth**® word mark and logos are owned by the **Bluetooth**® SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.

## Maintenance

### Notes on Discs

#### Handling Discs

Never stick paper or tape on the disc.

#### Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

#### Cleaning Discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center to out.

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for old vinyl records.

## Handling the Unit

### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

### Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.

### Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

### Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.



