



Perma-Tork® HB-12 Instruction Manual

All of the information herein is the exclusive proprietary property of maxcess international, and is disclosed with the understanding that it will be retained in confidence and will neither be duplicated nor copied in whole or in part nor be used for any purpose other than for which disclosed. Copyright 2004, 2018 all rights reserved.


Periodically there will be updates to this manual. The latest version is available on our website or by calling your regional office listed on the back page of this publication.

Handling

Handle and install with care. This is a precision-assembled unit with close internal clearances. Magnetic materials used are brittle by nature. Avoid subjecting to shock loads. **DO NOT DROP**.

Installation

The HB-12 must be securely mounted to a bracket or plate using the 1/4-20 mounting stud as shown.

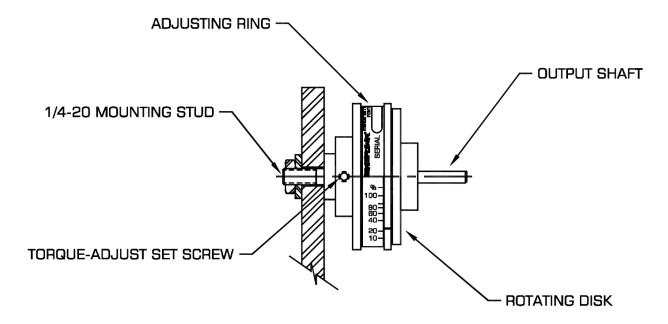

www.maxcessintl.com HB-12 MI 850A114 1 C Page 1 of 2

Overhung Load Capacity

Unit must be protected from excessive overhung loads. When coupling to a shaft, a flexible coupling must be used. The maximum recommended shaft side load is 1 pound. This load should be applied at a point within 1.0 inch from the rotating disk.

Adjusting Torque

Loosen the torque adjust set screw and rotate the adjustment ring to the desired setting. Tighten the set screw.

Cogging

With Hysteresis units, there can be a slight "memory" effect on the Hysteresis disc when changing from a high to a low torque setting. This can result in "magnet lobes" or detents, causing a minor cogging. It is correctable by rotating the output shaft slowly (25 to 250 rpm) while moving the adjustment from maximum to minimum.

