

Manual

Notice



Read this assembly manual carefully, and verify that you have all the parts listed before you begin. Keep your assembly manual for future reference.



Move this stand gently with 2 persons.



Protect finishes by placing furniture pieces on a soft carpeted surface during assembly.



Do not place very hot/cold objects on top of any surface. Always use a coaster or mat. Never leave liquids on the surface: Clean immediately with a mild soap and a damp cloth. Never use scouring powder based cleanser. Don't touch the glass surface with a hard/acute object it may cause the glass to shatter.

 
 
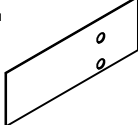
 
 


DO NOT ASSUME CHILD SAFETY WITH ANY PIECE OF FURNITURE!

Do not allow children to climb on furniture. Improper use can cause death or serious injury. If you are placing a TV on top use safety straps on your TV to prevent the risk of a toppling television. Furniture straps fastened to a wall can also be used to help ensure safety.

Damaged parts or furniture put together incorrectly can lead to serious injuries. Make sure to follow instructions correctly.

Parts list

11x1  Top MDF	22x1  Bottom MDF	33x1  Door MDF	44x1  Middle MDF	55x1  Left MDF
66x1  Right MDF	77x1  A1 X12	88x1  A2 X12	99x1  B1 X14	1010x2  B2 X12
1111x2  C1 X2	1212x1  C2 X2	1313x2  C3 X2	1414x2  D1 X4	
A  A1 X12 A2 X12	B  B1 X14 B2 X12	C  (Rubber washer) C1 X2 C2 X2	D  D1 X4	E  E1 X2 E2 X2
		 C3 X2		 E3 X2
F  F1 X1 F2 X1	G  G1 X4 G2 X4	H  H1 X4 H2 X4	I  I1 X1 I2 X1	S Screws for TV
				 Tools Required(Not included)