


☐

I'm not robot


reCAPTCHA

I'm not robot!

Bosch avantixx 8kg condenser dryer manual

Bosch condenser dryer instructions. Why won't my bosch dryer start. How to clean bosch avantixx dryer.

Tags related: Bosch Series 8 Self Cleaning Condenser Dryer, Bosch Serie 6 Condenser Dryer Manual, Bosch Series 4 Condensing Tumble Dryer, Bosch Series 6 Condenser, Bosch Dryer Series 6 Self Cleaning Condenser, Bosch 9kg Series 8 Front Loader, Bosch Series 8 Dryer, Bosch Washer And Dryer, Bosch Serie 8 Dryers, Bosch Serie 6 8kg Washer Dryer, Bosch Dryer Series 6 With Self Cleaning Condenser, Bosch Series 8 Front Loader The E-Nr is shown on the type plate of your appliance. A Bosch model number always starts with three letters followed by a mix of numbers and letters and ends with an "/" and two numbers. For mobile phone users: Take a picture of your type plate If you are using your mobile phone you can click on the camera icon in the field below, then take a picture of the type plate and our system will identify the E-Nr and transfer the correct data. Intended use Your new dryer Congratulations - You have chosen a modern, high-quality Bosch for domestic use only, domestic appliance. only to be used for drying fabrics that have been The condensation dryer is distinguished by its economical energy washed with water. consumption. Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Do not leave children unsupervised near the dryer. Should you have any questions, our after-sales service will be pleased Keep pets away from the dryer, to help. The dryer can be operated by children 8 years old and older, by persons with reduced physical, Disposal in an environmentally-responsible manner sensory or mental abilities and by persons with Dispose of packaging in an environmentally-responsible manner. insufficient experience or knowledge if they are This appliance is labelled in accordance with the European supervised or have been instructed in its use by guideline 2002/96/EG on waste electrical and electronic a responsible adult. equipment - WEEE. The guideline provides an EU-wide framework for the return and recycling of old appliances. For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com Observe the safety instructions on page 11.



Read these instructions and the separate Additional Display panel Energy-saving mode instructions before operating the dryer. functions Contents Page Preparation 2 Setting the programmes 2 Drying



3/4 Information on laundry



. . . . 5 Fine adjustment of the drying result . . 5/6 Care and cleaning

. 6 Programme overview .

. 7 Installation

. . . . 8 Frost protection / Transport . . .

. 9 Service What to do if... / After-sales service 10 indicators Safety instructions 11 Container Empty the condensation container. Clean Clean the fluff filter and/or air cooler under running water. Fine The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) adjustment of for the Cottons,

Reduced temperature for delicate fabrics that require a longer Low Heat the drying After one of these programmes has been finely adjusted, the setting is retained for the drying time; e.g. for polyacrylics, polyamide, elastane or acetate. result others. Further information 1 Preparing for installation, see Page 8 Never start the dryer if it is damaged! Inspecting the Inform your after-sales service. dryer Make sure your hands are dry. Connecting the Hold the plug only. mains plug Sorting and loading laundry Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading. See programme overview on page 7. See also separate instructions for "Woolens basket" (depending on model) Selecting and adjusting the programme 1 Select the drying programme.

2. ... and adapt to individual requirements Programme selector All buttons are sensitive and only need to be touched lightly. 3 Press the Start/Stop button Only operate the dryer with the fluff filter inserted! Page 4/6. 0, 1, 2, 3 Easy-Care and SuperQuick 40' programmes presetting = 0. Page 5/6. 2 Drying Emptying condensation Empty container after each drying operation! 1.

Pull out condensation container keeping it horizontal. 2. Pour out condensation. 3. Always push container in fully until it clicks into place. If Container flashes in the display panel What to do if... Page 10. Condensation container Cleaning the fluff filter Control panel Drum interior light (depending on model) Clean the fluff filter after each drying operation. 1. Open the door, remove fluff from door/door area. 2. Pull out and fold open the fluff filter. 3. Remove the fluff (by wiping the filter with your hand). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.

4. Close and reinsert the fluff filter. Switching off the dryer Turn the programme selector to Off. Do not leave laundry in the dryer. Removing the laundry The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the additional depending on model). Maintenance Air inlet flap Programme end Fluff filter once lights up in the display. Drum interrupt programme removing or adding laundry. The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The programme selected must then be resumed and completed. Never switch the dryer off before the drying process has ended.

Drying at low temperature also select Low Heat. Do not machine dry. Observe safety instructions without fail Page 11! Do not tumble-dry the following fabrics for example: - Impermeable fabrics (e.g. rubber-coated fabrics). - Delicate materials (silk or curtains made from synthetic material) - Laundry contaminated with oil. Drying tips - To ensure a consistent result, sort the laundry by fabric type and drying programme. - Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel). - Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together - Do not over-dry easy-care laundry risk of creasing! Allow laundry to finish drying in the air. - Do not dry woolens in the dryer, only use to freshen them up Programme (depending on model). - Do not iron laundry immediately after drying, fold items up and leave for a while the remaining moisture will then be distributed evenly. - The drying result depends on the type of water used during washing. of the drying result Page 5/6. Reduced Ironing function is also selected. - Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried do not use the Extra Dry programme. - Starched laundry is not always suitable for dryers starch leaves behind a coating that adversely affects the drying operation. - Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.

- Use the timer programme for small loads this improves the drying result. Environmental protection / Energy-saving tips - Before drying, spin the laundry thoroughly in the washing machine speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry. - Put in, but do not exceed, the maximum recommended quantity of laundry programme overview Page 7. - Make sure the room is well ventilated during drying. - Do not obstruct or seal up the air inlet. - Keep the air cooler clean Page 6 "Care and cleaning". Fine adjustment of the drying result Adjustment of the levels of dryness Turn to Off 1 x to the right Press and hold Low Heat Press and turn 5 x to the right the required level is reached 4 Fine adjustment of the drying result Drying , Iron Dry , Cupboard Dry , Anti-Crease/End are displayed in sequence. Short signal when changing from level 3 to 0, otherwise long signal. Care and cleaning Only when switched off! Dryer housing, control panel, air cooler, moisture sensors - Wipe with a soft, damp cloth. they may crease - Do not use harsh cleaning agents and solvents. - Remove detergent and cleaning agent residue immediately. Clean the protective filter 5 - 6 times a year or if Clean flashes after cleaning the fluff filter. Air cooler / Protective filter When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year. - Allow the dryer to cool. - Residual water may leak out, so place an absorbent towel underneath the maintenance door.

Page 7, Woolens finish 1. Unlock the maintenance door. 2. Open the maintenance door fully. Fine adjustment 3. Turn both locking levers towards each another.

4. Pull out the protective filter/air cooler. Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects, the higher the spin 5. Clean the protective filter/ air cooler thoroughly, Allow to drip dry. 6. Clean the seals. 7. Re-insert the protective filter/air cooler, with the handle facing down. 8. Turn back both locking levers. 9. Close the maintenance door until the lock clicks into place.

Moisture sensors The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors. 1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface. Low Heat until Turn to Off Do not use steel wool or abrasive materials.