
HD Digital Television Recorder

User's Manual

HDR-7500T

The default password is 0000.



HUMAX

Thank you for purchasing a HUMAX product. Please read this user's manual carefully to be able to safely install, use and maintain the product at maximum performance. Keep this user's manual next to your product for future reference. The information in this user's manual is subject to change without notice.

Copyright (Copyright © 2011 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

The Copyright Act 1968 only permits to copy broadcasts for Private and Domestic purposes in limited circumstances. Humax does not authorise any use of this feature in any way which may amount to a breach of any law or the rights of the owner of copyright in film or broadcast.

Warranty

The warranty does not cover parts which may become defective due to misuse of the information contained in this manual.

Meaning of Symbols



To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates dangerous voltage inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

Warning

Indicates a hazardous situation which could result in serious injury.

Caution

Indicates a situation which could damage the equipment or other apparatus.

Notice

Note

Indicates additional information to make the user aware of possible problems and information of any importance to help understand, use and maintain the installation.

Disposal Instructions

This product should not be disposed with other household wastes at the end of its working life. Please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. This will prevent possible harm to the environment or human health from uncontrolled waste disposal.

Trademarks

- Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia interface are trademarks and registered trademarks of HDMI Licensing LLC.


This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

IceTV's free trial, discounted annual subscription, life-time subscription, and other offers from time to time are provided by IceTV only. Humax is not responsible for fulfillment of any of these offers and will not accept liability for any loss, financial or otherwise, associated with the acceptance of any of these offers. Humax also does not make any representations or warranties, express or implied, in respect of the offers or such services.

Notice	1		
Quick Start Guide	4		
1. Checking Accessories	4		
2. Product Overview	4		
3. Connections	8		
4. Powering On	12		
5. First Installation Wizard	13		
6. Menu Overview	15		
Basic Operation	16		
Changing Channels	16		
Volume / Mute / Audio	16		
Display Format / Resolution	17		
Programme Information (i-plate)	18		
Sleep Timer	19		
Subtitle	19		
Option	20		
Teletext	20		
Channel List	21		
Changing Channels	21		
Editing Channels in Channel List	22		
Editing Favourite Channels	23		
Editing Channels	25		
TV Guide	27		
Watching Programmes	27		
Setting Reminders or Recordings	28		
Finding Programmes	29		
Schedule	30		
Recording and Playback	31		
Recording	31		
Playback	35		
Playback Controls	36		
Pausing and Rewinding Live TV (TSR)	37		
Media List	38		
Switching Storage	38		
Switching Media	38		
Using the DLNA Media Server	40		
Connecting to Home Network	40		
Playing Files On Your Receiver	40		
Playing Files On Your PC	40		
Using Video List	41		
Playing Files	41		
Using Play Options	41		
Editing Files	42		
Deleting Files	42		
Sorting Files	42		
Locking Files	42		
		Renaming Files	42
		Creating Folder	42
		Moving / Copying Files	43
		Using Music List	44
		Playing Files	44
		Music Player	45
		Editing Files	45
		Using Photo List	46
		Photo Slideshow	46
		Slide Mode	47
		Editing Files	47
		HUMAX TV Portal	48
		Preferences	49
		Parental Control	49
		Language Setting	50
		Setting Power On/Off Timer	50
		Video Setting	51
		Audio Setting	52
		Screen Display	53
		EPG Type Setting	53
		Installation	54
		Automatic Search	54
		Manual Search	55
		Software Update	56
		Dynamic Update	58
		Antenna Power	58
		Factory Default	59
		System	60
		System Information	60
		Signal Detection	60
		Power Management	61
		Data Storage	61
		Internet Setting	62
		Appendix	63
		Specification	63
		Service and Support	65
		Safety Warning	66
		Trouble Shooting	68
		Error Message	70
		Glossary	72
		Remote Control Code List	74
		OPEN SOURCE SOFTWARE NOTICE	105
		Problem Check List	113

Quick Start Guide


1. Checking Accessories

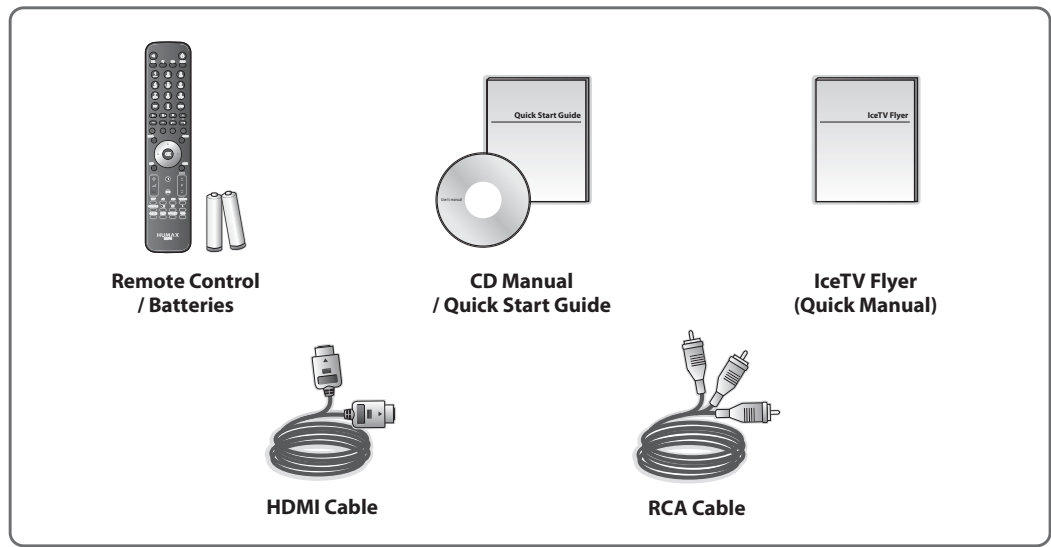

Note: The accessories may vary according to area.

2. Product Overview

Front Panel

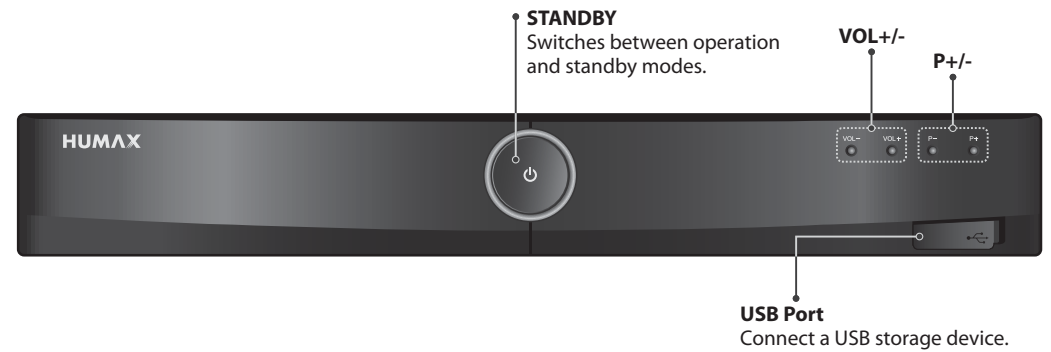


Note: The image shown may differ from the actual product.

Quick Start Guide

English


Rear Panel

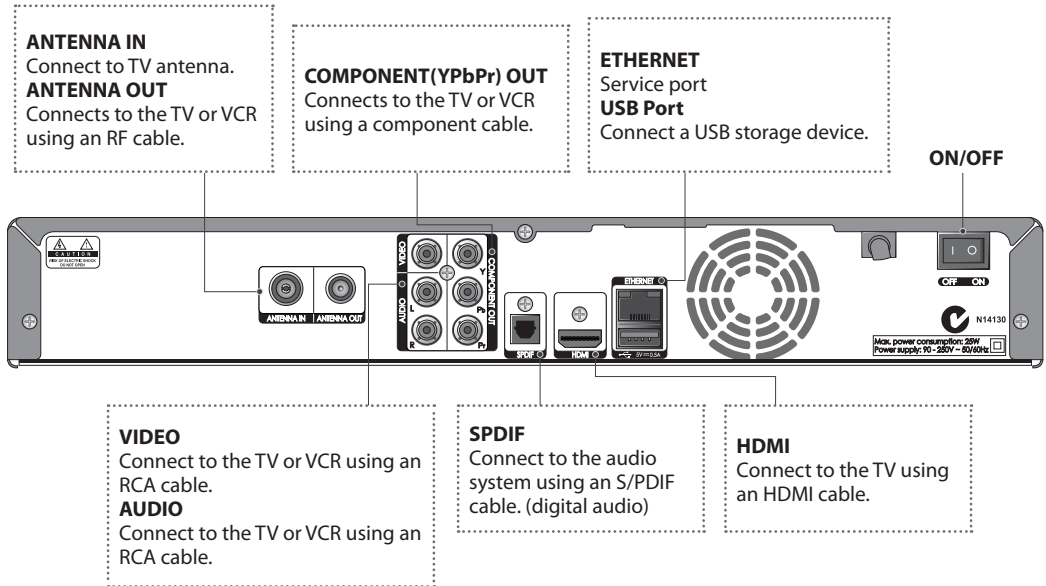

Note: The image shown may differ from the actual product.

Quick Start Guide

Remote Control

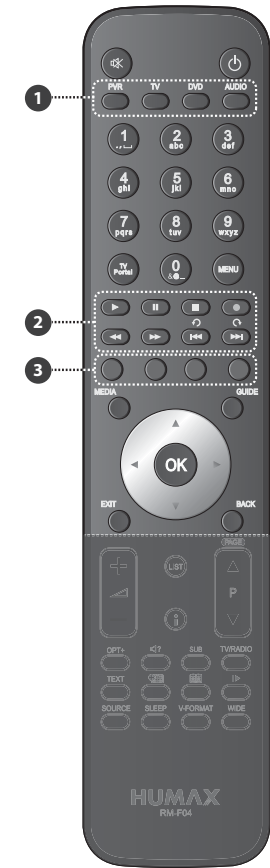

	MUTE	Mutes audio.
	STANDBY	Switches between operation and standby modes.
1	MODE	Changes the mode of remote.
	NUMERIC	(0-9)
	TV Portal	Enters HUMAX TV Portal.
	MENU	Displays the main menu.
2	Playback Control Buttons	▶ Play, Pause, ■ Stop, ● Record, ◀◀ Rewind, ▶▶ Fast Forward, ◀◀ Previous, ▶▶ Next, ⌂ Instant Replay, ⏭ Skip
3	COLOUR Buttons	Colour keys for interactive applications.
	MEDIA	Displays the media list.
	GUIDE	Displays the programme guide.
	ARROW Buttons	Moves the cursor up, down, left or right.
	OK	Selects (Enters) a menu or confirms a selection.
	EXIT	Exits all On-Screen Display (OSD) screens.
	BACK	Returns to the previous channel. Goes back to the previous screen.

Note:

- The image shown may differ from the actual product.
- Some playback control buttons may not function depending on the contents.




▲+/-	Adjusts the audio volume.
P▲/▼	Changes the channel or page.
LIST	Displays the channel list.
i (Information)	Displays the channel and programme information.
OPT+	Displays the channels attributes.
🔊 AUDIO	Displays the audio list.
SUBTITLE	Displays the subtitle language list.
TV/RADIO	Switches between TV and radio modes.
TEXT	Enters the digital text service.
SOURCE	Switches between the input sources.
SLEEP	Sets the sleep timer.
V-FORMAT	Sets the resolution of video.
WIDE	Sets the display format.

4 Playback Control Buttons Add Bookmark, Bookmark List, Slow

Inserting Batteries

1. Press the hook upward and lift the battery cover off.
2. Insert the batteries (supplied) matching the plus(+) and minus(-) at each end.
3. Close the cover.

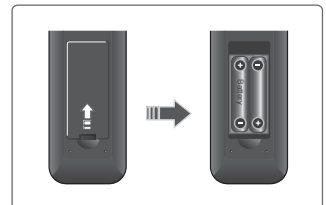


Quick Start Guide

3. Connections

This section describes how to connect your product to match your particular devices setup and to gain optimum signal quality. The product provides various interfaces to connect to the TV, VCR or other devices. Select the most appropriate procedure depending on the device you have.

Note: If you encounter any problems setting up your product, please contact HUMAX Customer Helpline.

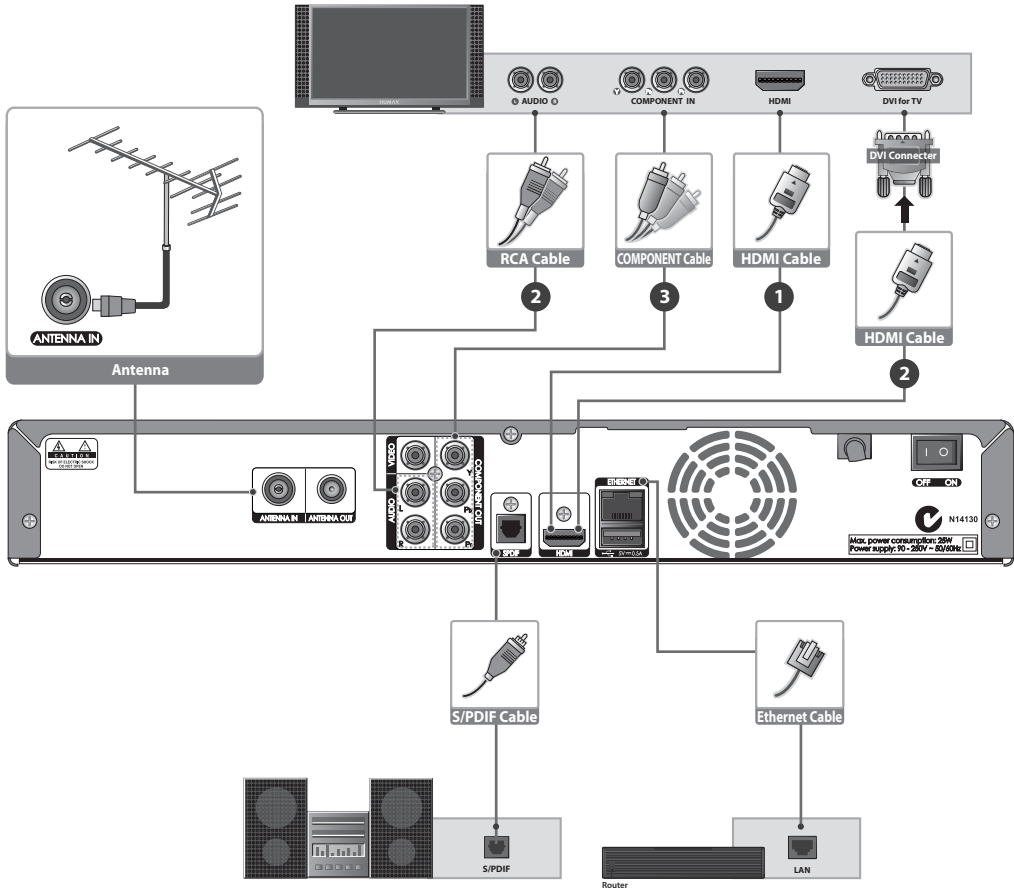

Connecting the Antenna

Connect the aerial to the **ANTENNA IN**.

Connecting the TV

You can select one of the following connections depending on the device you have.

❶ TV with the HDMI connector;

For the best picture quality, connect the product and TV using a HDMI cable.

❷ TV with the DVI connector;

For very good picture quality, connect the product and TV using a HDMI cable and a HDMI-to-DVI converter for video.

You will also require a RCA cable (Audio L/R) connected to the necessary connection(s) on your TV/Display for Audio.

❸ TV with the Component(YPbPr) connector;

For good picture quality, connect the product and TV using a component cable.

For additional audio connections you can either

1. Connect the product and TV using an RCA cable (Audio L/R).
2. When using the digital audio system, connect the product and the digital audio system using an S/PDIF cable.

Note: Connecting your TV directly to the audio/video output of the product will assure a more vivid picture and enhance your viewing enjoyment.

Quick Start Guide

Connecting the Network

❶ Connecting to the LAN;

Connect one end of the Ethernet cable to the product and the other end to the LAN router.

❷ Connecting to the Wi-Fi (Wireless LAN);

1. Power off the receiver and disconnect the Ethernet cable.
2. Insert the HUMAX Wi-Fi dongle into an USB port and power on the receiver.



3. Go to **MENU > Settings > System > Internet Setting > Configure Wi-Fi**.

Note: If **Configure Wi-Fi** is disabled, make sure that the Ethernet cable is disconnected and check if the HUMAX Wi-Fi dongle is inserted correctly into an USB port on the receiver.



4. Select **Network Name** and press the **OK** button. The list of all available Wi-Fi Networks detected will appear. Select the Network you want to connect to and press the **OK** button.
5. Select the **Security Type** of your Wi-Fi router. If you do not know the security type, do not change this option. (Default: WPA-PSK(TKIP))




Quick Start Guide

English

6. Select **Password** and press the **OK** button.
Enter the WEP key/Password of your router.
(This information is normally written on your router.)
7. Press the **YELLOW** button to complete.
8. Select **APPLY** and press the **OK** button.




9. When the connection is complete, press the **OK** button and press the **EXIT** button to return to the menu.

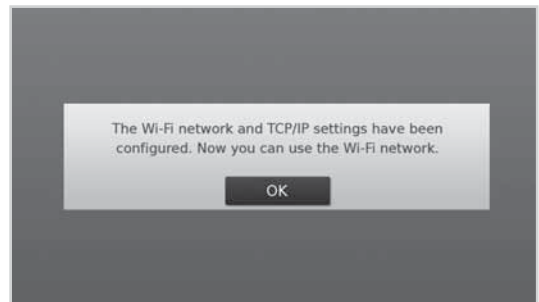

Note:


- Make sure the distance between the Wi-Fi access point and the product is not too far away. This may lower the quality of service.
- It is recommended to purchase a wireless USB dongle distributed by HUMAX. Other products may not function or respond. Go to www.humaxdigital.com/au to purchase a HUMAX Wi-Fi dongle.

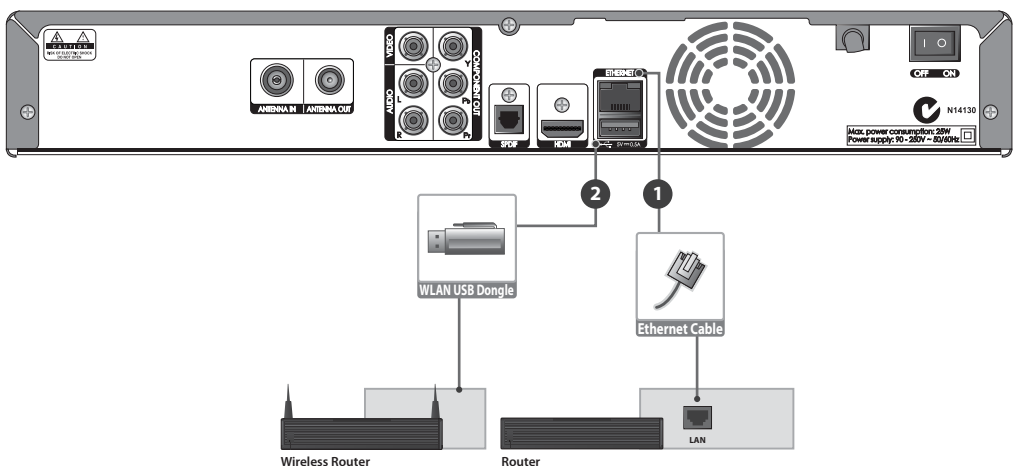

Quick Start Guide

4. Powering On

1. Connect the power cord of the product to a wall outlet.
2. Ensure the **ON/OFF** switch at the rear of the product is switched to **ON**.
3. Power on by pressing the **STANDBY** button on the remote control or the **STANDBY** button at the front of the product.

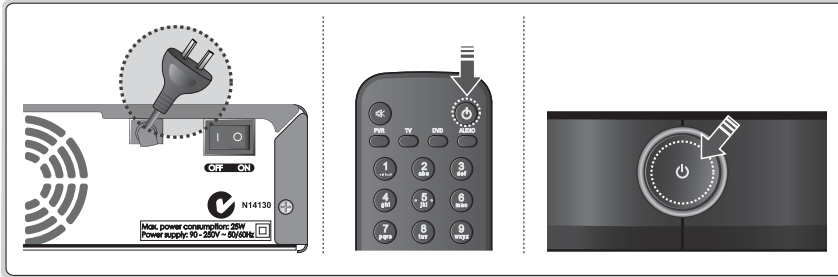


5. First Installation Wizard

When powering on your product for the first time after purchase or performing the factory default in menu, the installation wizard will operate automatically.

Note: If you exit the installation wizard without fully completing the channel searching procedure, you may not have all of the channels available. In this case, you can use the **Settings > Installation** menu to search for more channels.

1. Region

Select the state you currently live in.

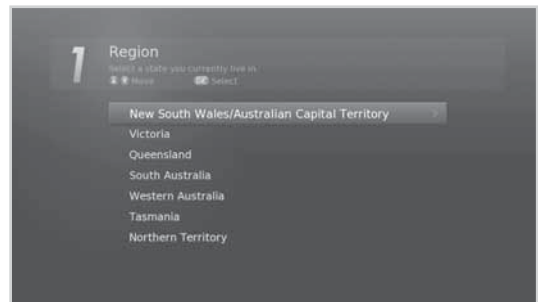

2. Display

Set the video output to your TV.



3. Automatic Search

Channel search will begin automatically.
Save the found channels when the search is complete.



Quick Start Guide

4. EPG Type

Select the **EPG Type** you want.
If you already have an IceTV account or wish to take advantage of the additional features of IceTV, select **IceTV**.

Note: To use the IceTV EPG, connect the receiver to the internet via Ethernet or USB wireless dongle. Refer to **Connecting the Network**.





5. Result

The result of the Installation Wizard is shown.
Select **Finish** to exit the wizard.



6. Menu Overview

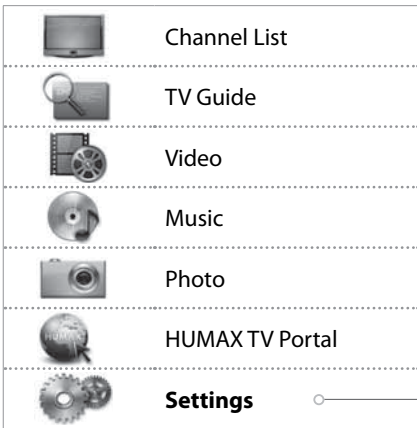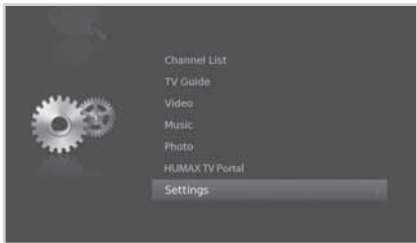

Preference

- Parental Control
- Language
- Time
- Video
- Audio
- Recording
- Screen Display
- EPG Type

Edit Channels

- Edit Favourite List
- Edit Channel List

Installation

- Automatic Search
- Manual Search
- Software Update
- Dynamic Update
- Antenna Power
- Factory Default

System

- System Information
- Signal Detection
- Power Management
- Data Storage
- Internet Setting

How to Navigate



Displays the main menu



or



Selects (Enters) a menu or confirms a selection



Goes back to the previous screen



Exits all On-Screen Display (OSD) screens



Moves among menus or options



Changes or adjusts the option



Enters the number (0~9)

Basic Operation

Changing Channels

You can change the channels in several ways.

- ❖ Press the **P▲/▼** button.
- ❖ Enter the channel number directly. **(0-9)**
- ❖ Go to the channel list and select a channel.

Note: Press the **TV/RADIO** button to switch between TV and radio channels.

Volume / Mute / Audio


- ❖ To adjust the audio volume, press the **▲+/-** button.
- ❖ To mute the audio temporarily, press the **MUTE** button.

Setting Audio Options

Audio options are available only when the programme supports multiple audio languages. Press the **AUDIO** button to change the audio language and direction. Each time you press this button, the value changes.

Note:

- The mute function remains set while you change channels.
- You cannot set the audio direction when the programme is broadcast in Dolby Digital.

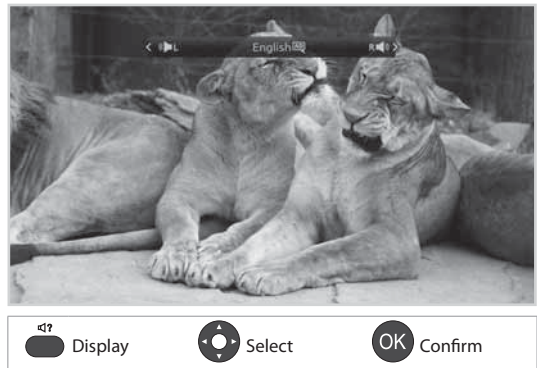

Display Format / Resolution

Setting Display Format

Press the **WIDE** button to set the display format according to the screen ratio.

Each time you press this button, the value changes.

- Screen ratio 4:3: **Auto** – **Letterbox 16:9** – **Letterbox 14:9** – **Centre**
- Screen ratio 16:9: **Auto** – **Pillarbox** – **Zoom**



WIDE
☒ Display

Setting Resolution

Press the **V-FORMAT** button to set the resolution of the screen.

Each time you press this button, the value changes.

- **576i** - **576p** - **720p** - **1080i** - **Original**

Note: When connected with an HDMI cable, you can only change to resolutions the TV supports.




V-FORMAT
☒ Display

Basic Operation

Programme Information (i-plate)

The i-plate is an information banner that is displayed for a certain period of time whenever you change channels. Press the **i** button while watching a programme to display the i-plate. Press the **EXIT** button to hide.

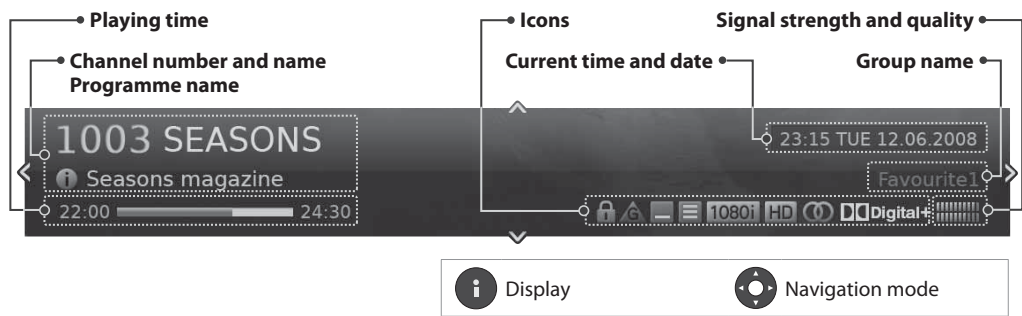

- **Viewing detailed programme information**
Press the **i** button again while the i-plate is displayed.
- **Viewing previous/next programme information**
Press the **◀/▶** button while the i-plate is displayed.
- **Viewing programme information of other channels**
Press the **▲/▼** button while the i-plate is displayed. Press the **OK** button to change to the selected channel.
- **Searching related contents**
Press the **OPT+** button while the i-plate is displayed. This option is supported only when the network is connected.

Icons

The icons represent the information and services provided.

	Locked programme		Teletext
	Pay TV / encrypted programmes (CAS icons)		Resolution
	Parental guidance programme		HD programme
	Subtitle		Multiaudio
	Dolby Digital audio		
	Dolby Digital Plus audio		

Note: Programme information is not displayed when there is no programme information.

Basic Operation

English

Sleep Timer

Press the **SLEEP** button to set the automatic turn off time.
Each time you press this button, the value changes.

➤ 10 - 20 - 30 - 60 - 90 - 120 minutes



Subtitle

You can select the subtitle language when subtitle information is provided.
Press the **SUBTITLE** button to change the subtitle language.
Each time you press this button, the value changes.

Note: You can choose to always display the subtitle when available.




Basic Operation

Option

You can set the options for the watching channel.

1. Press the **OPT+** button.
2. Select an option.
 - **Favourite:** Select the favourite group to add the channel.
 - **Lock:** Select **On** or **Off**.
 - **Delete:** Press the **OK** button.
 - **Rename:** Press the **OK** button and enter the name in the keyboard.
3. Select **OK** to save and exit.

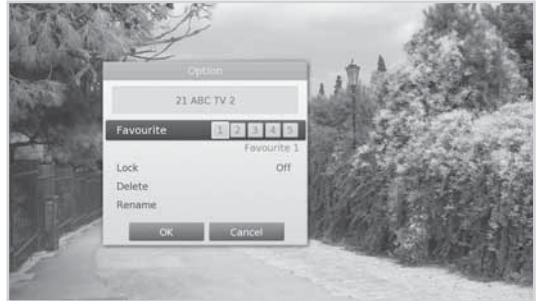

Teletext

Teletext is a free service broadcast which gives the latest information on news, weather and many other topics. You can use interactive services in teletext mode.

All teletext supporting channels have the teletext icon on the i-plate.

1. Press the **TEXT** button.
2. To display the teletext menu, press the **MENU** button in teletext mode.
3. Select the teletext function you want and press the **OK** button.



Channel List

The channel list will help you find the channel you want to watch quickly and easily.

You can access the channel list in several ways.

- ❖ Press the **LIST** button.
- ❖ Press the **MENU** button and select **Channel List**.

Changing Channels

Select the channel you want to watch and press the **OK** button. The displayed channel will change.

Note:

- : Locked channel, : Scrambled channel (CAS icons)
- Press the **i** button to view the detailed channel information.
- Press the **LIST** or **EXIT** button to exit.

Advanced Options

Changing Group

You can display the list of the selected channel group.


➤ **TV, Radio, Favourite 1~5, Recent**

1. Press the **►** button.
2. Select a channel group.
3. Press the **OK** button.

Note: Press the **TV/RADIO** button to switch between TV and Radio groups.

Sorting Channels

Press the **RED** button to sort the list in numerical or alphabetical order.

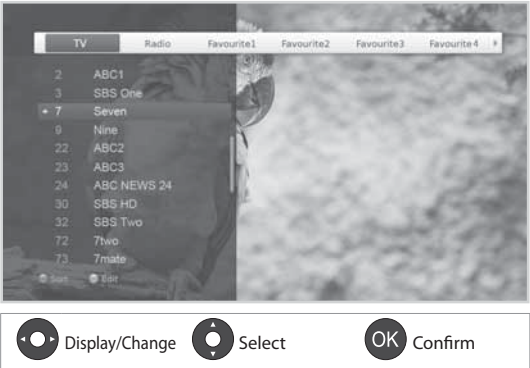

Channel List


Editing Channels in Channel List

You can edit each channel in the channel list, as well as in menu. To edit the multiple channels, go to the **MENU > Settings > Edit Channels**.

Locking / Deleting / Renaming Channels

1. Select a channel you want to edit and press the **GREEN** button.
2. Select an option.
 - **Lock:** Select **On** or **Off**.
 - **Delete:** Press the **OK** button.
 - **Rename:** Press the **OK** button and enter the name in the keyboard.
3. Select **OK** to save and exit.

Note: The default password is 0000. If you have forgotten your password, please contact HUMAX Customer Service.

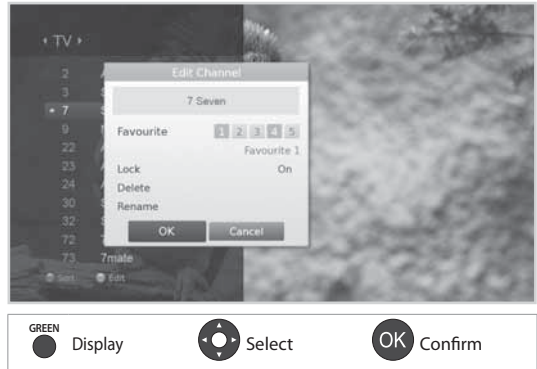

Setting Favourite Channels


You can select your favourite channels and include them in the favourite group.

1. Select a channel and press the **GREEN** button.
2. Select **Favourite** and press the **OK** button.
3. Select a favourite group you want to include the channel in and press the **OK** button.
To remove a channel from a favourite group, select the group and press the **OK** button again.
4. Select **OK** to save and exit.

Editing Favourite Channels

The **Edit Favourite List** menu will help you add or remove channels from the favourite groups.

MENU → Settings → Edit Channels → Edit Favourite List

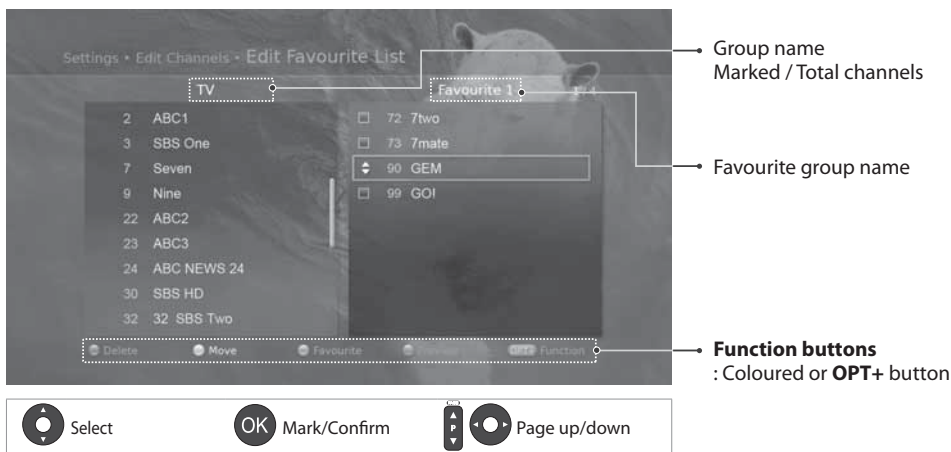

Note:

- Press the **MENU** or **EXIT** button to exit. Press the **BACK** button to return to the previous screen.
- The channels that are automatically numbered by broadcaster cannot be deleted or moved.

Adding / Removing Favourite Channels

1. Press the **YELLOW** button and select the favourite group you want to edit.
2. To add channels to the favourite list, select the channels you want to add using the **▲/▼** and **OK** button in the left column and then press the **RED** button. The added channels will appear in the right column.
3. To remove channels from the favourite list, select the channels you want to remove in the right column and then press the **RED** button.

Moving Channels

1. Select the channels using the **▲/▼** and **OK** button.
2. Press the **GREEN** button.
3. Move the selected channels to the location you want using the **▲/▼** and **OK** button.

Note: You can move the channels in the right column only.

Managing Channels

Renaming Favourite Groups

1. Press the **YELLOW** button and select the favourite group you want to edit.
2. Press the **OPT+** button.
3. Select **Rename Favourite**.
4. Enter the name in the keyboard.

Advanced Options

Changing Group

To list the channels of other groups in the left column, press the **GREEN** button and select a group you want.

Note: Press the **TV/RADIO** button to switch between TV and Radio groups.

Changing Background

You can change the channel displayed in the background while editing.

1. Select the channel you want to watch.
2. Press the **BLUE** button. The displayed channel will change.


Selecting / Releasing All Channels

1. Press the **OPT+** button.
2. Select **Select All**.
3. To release all, select **Release All**.

Editing Channels

The **Edit Channel List** menu will help you delete, move lock or rename multiple channels.

MENU → Settings → Edit Channels → Edit Channel List

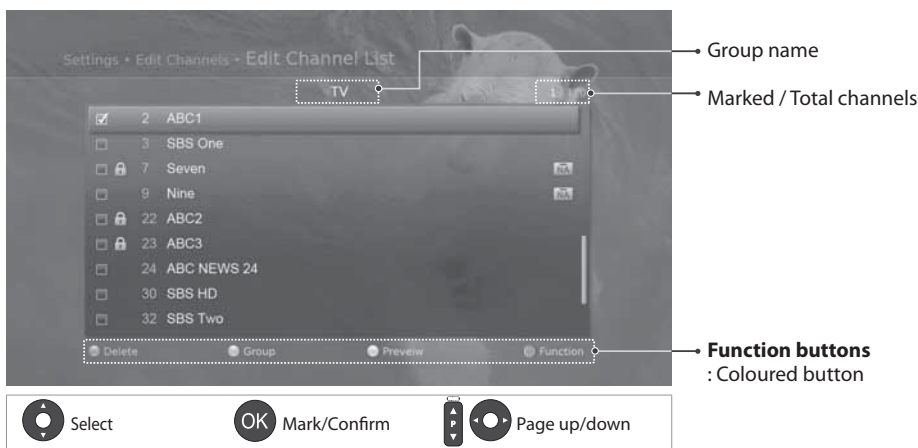

Note:

- : Locked channel, : Scrambled channel (CAS icons)
- Press the **MENU** or **EXIT** button to exit.
- The channels that are automatically numbered by broadcaster cannot be deleted or moved.

Deleting Channels

1. Select the channels using the **▲/▼** and **OK** button.
2. Press the **RED** button.

Managing Channels

Locking / Unlocking Channels

1. Select the channels using the ▲/▼ and **OK** button.
2. Press the **BLUE** button.
3. Select **Lock**. To unlock, select **Unlock**.

Advanced Options

Changing Group

To list the channels of other groups, press the **GREEN** button and select a group you want.

Note: Press the **TV/RADIO** button to switch between TV and Radio groups.

Changing Background

You can change the channel displayed in the background while editing.

1. Select the channel you want to watch.
2. Press the **YELLOW** button. The displayed channel will change.

Selecting / Releasing All Channels

1. Press the **BLUE** button.
2. Select **Select All**.
3. To release all, select **Release All**.

TV Guide


English

The TV guide is an on-screen guide of grid type which displays the programme information of channels in time and date order.

You can access the TV guide in several ways.

- ❖ Press the **GUIDE** button.
- ❖ Press the **MENU** button and select **TV Guide**.

Note: Press the **GUIDE** or **EXIT** button to exit. Press the **BACK** button to return to the previous screen.

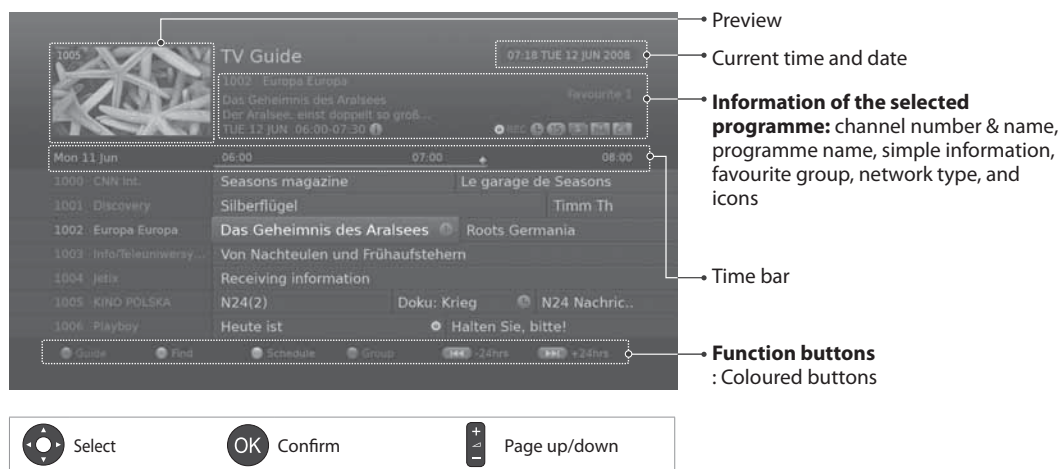

Note:

- Press the **i** button to view the detailed programme information.
- : Scheduled programme (Red: Recording, Blue: Reminder), : Recording programme, : Present time

Watching Programmes

1. Select a programme and press the **OK** button. The programme will be displayed in the preview.
2. Press the **OK** button again to exit the TV guide and watch the programme.

TV Guide

Setting Reminders or Recordings

1. Select a future programme and press the **OK** button.
2. Select **Record the whole programme** or **Reminder** and press the **OK** button.
3. Press the **OK** button again to cancel the reservation.
The reserved programmes will be added automatically in **Schedule**.

Note:

- By selecting **Reminder** an on-screen notification will appear prior to the selected programme starts. Select **OK** to automatically change to the channel the programme commences. Select **Cancel** to continue watching the current programme and not change channels.
- If the programme is conflicted with another programme, adjust the reservation appropriately.
- If the channel is locked, you will be prompted to enter your password to complete the reservation. The default password is 0000. If you have forgotten your password, please contact HUMAX Customer Service.
- You can reschedule reminders or recordings. (Refer to **Scheduling Reminders and Recordings**.)
- If the programme you want to record is a series, you can select to record the whole series. However, this function may not be available depending on the broadcasting environment.



Advanced Options

Quick Navigation

Press the ◀/▶ button to move to the previous/next programme.

Press the ◀◀/▶▶ button to jump back/ahead two hours.

Press the ◀◀◀/▶▶▶ button to move to the previous/next day.

Changing Group

To list the channels of other groups, press the **BLUE** button and select a group you want.

Note:

- Press the **TV/RADIO** button to switch between TV and Radio groups.
- To search specific programmes, go to **Find Programmes** by pressing the **GREEN** button. (Refer to **Finding Programmes**.)

Finding Programmes

Find will help you find the programmes more specifically using the keyword or genre.

By Keyword

1. Press the **GREEN** button.
2. Select **Keyword** and press the ► button.
3. Select a keyword and press the **OK** button.
4. Press the **YELLOW** button to add the selected programme to schedule.


Note: To enter a new keyword, select **New Keyword**, type the new keyword and press the **YELLOW** button to confirm.

By Genre

1. Press the **GREEN** button.
2. Select **Genre** and press the ► button.
3. Select a genre and press the **OK** button.
4. Select the specific genre and press the **OK** or ► button.
5. Scroll through the list and press the **YELLOW** button to add to schedule.

Note:

- Press the **i** button to view the detailed programme information.
- Press the **OK** button to watch a found programme. (Refer to **Changing Channels**.)
- You can set reminders or recordings for future programmes. (Refer to **Setting Reminders or Recordings**.)

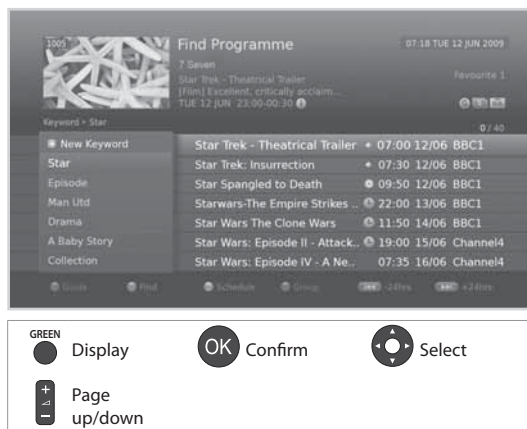

TV Guide

Schedule

Schedule lists all programmes that you have set for recordings or reminders and will help you manage these reservations in more detail.

Adding or editing schedule


1. Press the **YELLOW** button.
2. To add, select **New Reservation** and press the **OK** button.
To edit, select a reminder or recording and press the **OK** button.
3. **Reservation** will pop up. You can change the options you want using the **▲/▼/◀/▶**, **NUMERIC(0~9)** and **OK** buttons.
4. Select **OK** to save and exit.

Deleting schedule

1. Press the **YELLOW** button.
2. To delete, select a reminder or recording and press the **BLUE** button.
3. Select **Yes** and press the **OK** button.

Note:

- Press the **i** button to view the detailed programme information.
- You can easily set reminders or recordings in TV guide, Find Programmes or i-plate navigation mode. (Refer to **Setting Reminders or Recordings**, **Find Programmes** or **Programme Information**)

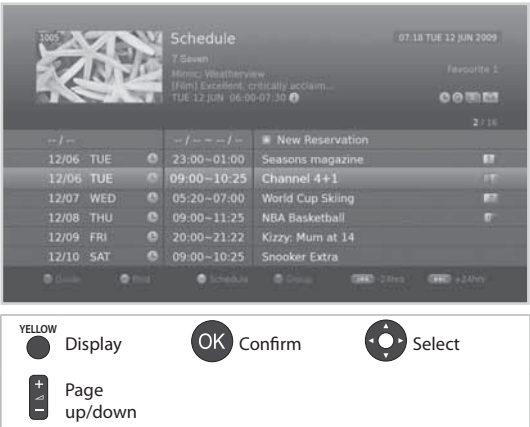

Recording and Playback

English

You can record programmes in the built-in hard disk drive and playback the recorded programmes whenever you want.

Note: Recording or copying is for private and domestic use only.

Recording

You can watch another channel while recording a channel or record programmes from two different channels at the same time.

Instant Recording

You can record the currently watching programme instantly and change the recording duration.

To instantly record the current programme you are watching, press the **RECORD** button.

The recording will start from the current broadcast point and the record banner will be displayed for a few seconds.

Press the **STOP** button to stop recording the programme.

The recording will continue till the end of the current programme. However, if the programme ends in less than ten minutes, it will continue till the end of the next programme. When no programme information is provided, the recording will continue for two hours.

Note: You can also press the **Record** button while in the Guide to start recording a current programme on a different channel.



Delayed Recording


You can record the scenes of a live broadcast you have been watching until now by rewinding with the time shifted recording function.

Find the starting point you want to record by using the ◀◀REWIND, ◀ or ▶ buttons, then press the **RECORD** button.

The recording will start from the point you select.

Changing Recording Duration

1. Press the **RECORD** button on the currently recording channel.
2. Set the duration manually or select till the end of the current programme or the next programme.

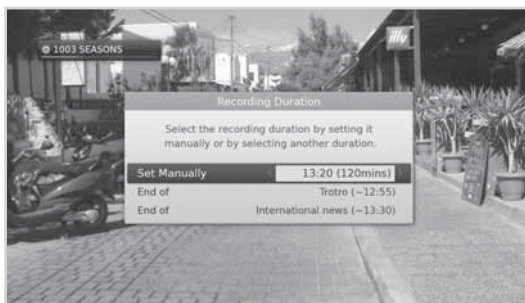

 Record

 Select

 OK Confirm

 Enter 0~9

Recording and Playback

Scheduled Recording

You can easily set the recording reservations in **TV Guide**, **Schedule** or i-plate navigation mode.

- ❖ While in the **TV Guide** highlight a future programme and press the **OK** button.
- ❖ Select from:
 - Record Whole Series
 - Record the Whole Programme
- ❖ Press the **OK** button on a future programme in i-plate and select either **Record the whole series** or **Record the Whole Programme**. (Refer to **Programme Information**.)



The recording will start at the scheduled time and the record banner will be displayed for a few seconds. Press the **STOP** button to stop recording the programme.

Note:

- Press the **GUIDE** button to go to **TV Guide**.
- Press the **GUIDE** button and press **YELLOW** button to go to **Schedule**.
- Press the **i** button while watching a programme to display the i-plate.

Editing Recording Schedule

You can edit or delete your reservations in **Schedule**.

- To edit, select a reservation and press the **OK** button. You can change the options such as channel, date, time, repeat mode, etc.
- To delete, select a reservation and press the **BLUE** button.

Note: Refer to page 30 for instructions on how to Add, Edit or Delete your reservations.



Recording and Playback

English

Recording Conflict

You can watch another channel while recording a channel or record programmes from two different channels at the same time.

Recording Duration Conflict

When an instant recording conflicts with one of the scheduled recordings (or reminders), you can either;


- Record for the automatically modified duration.
- Cancel either of the scheduled recordings (or reminders).
- Cancel the previous recording.



Watching Conflict

When a scheduled recording starts on a different channel while you are watching a channel and recording another channel, a record notice will pop-up 30 seconds before the scheduled recording starts.

- **OK:** The channel will change at the start time and the scheduled recording will start automatically.
- **Cancel:** The scheduled recording will be canceled.

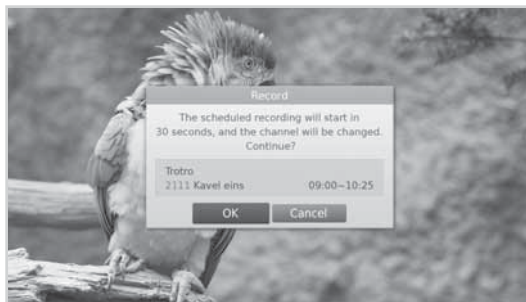

Scheduling Conflict

When a new scheduled recording conflicts with one of the previously set recordings (or reminders), you will be prompted to select up to two programmes you want to keep. Select the programme using the ▲▼ and **OK** button.



Record

Select

Confirm

Enter 0~9

Recording and Playback

Setting Padding / Jump Time

MENU → Settings → Preferences → Recording

Setting Padding Time

You can set the recording padding time in case the recording starts earlier or ends later than scheduled.

- **Start Padding Time:** Additional recording time before the recording starts.
- **End Padding Time:** Additional recording time after the recording ends.



Setting Jump Time

You can set the jump time to replay or skip scenes during playback or time shifted recording.

- **Instant Replay Time:** 7 sec, 15 sec, 30 sec
- **Skip Forward Time:** 30 sec, 60 sec, 120 sec, 240 sec
- **Auto Delete:** Old recordings will be deleted automatically when the HDD becomes full.

Note:

- You can record radio programmes also.
- The record banner will be displayed with the i-plate whenever pressing the **i** button.
- You can change the recording duration by using the **RECORD** button for instant recording or by going to **MENU > TV Guide > Schedule** for scheduled recording.
- When a new scheduled recording starts while a recording is already in progress, the record banner will be displayed for a few seconds to inform you that the recording has been started. If you are not watching the channel being recorded, a record notice will pop-up 30 seconds before the scheduled recording starts, and the channel will switch to the scheduled programme automatically at the start time.
- Pressing the **STANDBY** button while recording will not stop the recording. New recordings will start even in standby mode.
- While watching a recording programme, you can trick-play using the playback control buttons such as pause, fast rewind, instant replay, slow, etc.
- You can record the digital TV or radio programmes only. The external AV inputs cannot be recorded.
- Make sure that there is enough free space before recording. If the free space on the hard disk drive is insufficient, recording will stop. Recording HD programme requires more space than SD programme. The space for recording one hour programme may differ depending on the programme. Recording one hour of HD and SD programmes may require 8 GB and 2~3 GB of hard disk space, respectively.
- To view the recorded programme list, press the **MEDIA** or **MENU** button and select **Video**. (Refer to **Using Video List**.)

Recording and Playback

Playback

You can playback the recorded programmes that are stored in the built-in hard disk drive.

Playing Recordings (Video)

You can access the recorded file list easily and play the recorded programmes.

- ❖ Press the **MEDIA** button.
- ❖ Press the **MENU** button and select **Video**.

Select a file and press the **OK** button. Playback will start.

You can perform fast rewind, fast forward, slow motion and pause while playing back a recorded file. The green playbar is displayed when pressing the **PLAY**, **FAST FORWARD**, **REWIND**, **SLOW** or **PAUSE** button while playing.

Note: Press **BACK** or **EXIT** to hide the playbar.



Recording and Playback

Playback Controls

	Play
	Pause the scene. Press the PAUSE button again to go back to play mode.
	Stop the playback of the current file and go to live TV.
	Fast Rewind
	Fast Forward
	Move to the previous chapter and replay the scenes.
	Move to the next chapter and skip scenes.
	Jump to the previous or next scene.
	Add or delete a bookmark in your desired scene. The bookmarked scene is shown as a yellow pointer.
	Jump to bookmarked scenes directly. The play pointer will first move to the nearest bookmark.
	Watch the recording in slow video.

Note:

- When you press the **BACK** button during playback, the playback stops.
- Chapters are made by dividing the recorded programme into eight portions.
- Bookmarks are available only when playing back the recorded programmes.
- Up to four bookmarks can be used, and the bookmarks will remain even if you stop playback.
- Refer to **Media List > Using Video List** for more details about the recorded files.

Pausing and Rewinding Live TV (TSR)

Time Shifted Recording (TSR) allows you to pause a live broadcast and return to it later and continue where you left off.

The TSR function automatically saves the programmes you watch to the built-in hard disk drive temporarily.

TSR lasts for 120 minutes.



To pause the programme you are watching,

Press the **PAUSE** button. Press the **PLAY** button to return. Pause makes a time gap between the live broadcasting point and watching point. The time gap is equivalent to the period the programme has been paused.

Press the **STOP** button to close the time gap and go to live programme.

To rewind and watch missed scenes,

Press the **REWIND** button. Press the **PLAY** button at the point where you want to start watching. You can pause, rewind or fast forward within the programme.

You can fast rewind to the start point. If you reach the start point while rewinding, the programme is automatically played at the normal speed.

To fast forward and skip scenes,

Press the **FAST FORWARD** button. You can fast forward only when there is a time gap between the current watching point and the live broadcasting point caused by pause, slow motion or fast rewind. You can fast forward up to the current broadcasting point. If you reach the live broadcasting point while fast forwarding, the programme is automatically played at normal speed.

Note: Press the **PREVIOUS/NEXT** button to instantly replay or skip scenes at regular intervals you set in the menu. (Refer to Setting Jump Time.)

To record the Time Shift Recording buffer

Rewind to the point you wish to record by pressing the **REWIND** or **◀** button and press the **Record** button on the remote control.

Note: The recording will not appear immediately in the Media list as time is required to transfer the buffer into a recording.



Record



Select



Confirm



Enter 0~9

Media List

You can retrieve video, music or photo files from the built-in hard disk drive, the USB storage devices, or the DLNA compliant devices.

You can access Media List in several ways.

- ❖ Press the **MEDIA** button.
- ❖ Press the **MENU** button and select **Video**, **Music** or **Photo**.
- ❖ Connect a USB storage device for media and select your desired media type.

Video	Lists TV/Radio recordings or Xvid files.
Music	Lists MP3 files.
Photo	Lists JPEG files.

Note:

- Press the **MEDIA** or **EXIT** button to exit. Press the **BACK** button to return to the previous screen.
- Select **Copy** to copy the media files to the different devices. (Refer to *Using the Video List > Editing Files.*)

Switching Storage

1. Press the **BLUE** button to switch the storage.
2. Select the storage and press the **OK** button.
 - **HDD**: Displays the internal HDD.
 - **USB**: Displays each partition of the connected USB storage devices. Select a USB.
 - **Network**: Displays the connected DLNA compliant devices. Select the server.



Switching Media

1. Press the **YELLOW** button to switch the media type.
2. Select the media type and press the **OK** button.
 - **Video**, **Music**, **Photo**



Note:

- Please use only the USB storage device which was formatted with ext3, FAT or NTFS file system.
- Compatible USB devices include portable flash memory (particularly keydrives) and digital audio players (MP3 players) of format FAT12/16/32. It is not possible to connect this unit to a personal computer for USB playback.
- You can play back Xvid/MP3/JPEG files (except files with copy-protection or restricted playback).
- Supported features according to USB file system
 - **ext3**: Read, Copy (Digital TV/Radio, MP3, JPEG, Xvid)
 - **FAT**: Read, Copy (Digital TV/Radio, MP3, JPEG, Xvid)
 - **NTFS**: Read (MP3, JPEG, Xvid)
- USB ports on your product supply 800mA in total. This 800mA is shared among all devices connected to product.
- Please connect power to a USB storage device which requires an external power supply. If not, the device may not be recognized.
- Please connect a USB storage device with the cable offered by the device maker. If you use a cable which is not offered by the device maker or an excessively long cable (max 5m), the device may not be recognized.
- If the USB storage device is connected in standby mode, it will automatically be recognized when the product is turned on.
- A USB storage device using an automatic recognition programme may not be recognized.
- A USB storage device which uses its own driver may not be recognized.
- The recognition speed of a USB storage device may depend on each device.
- Please do not disconnect or turn off the USB storage device while playing back. When the USB storage device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- Be sure to back up important files since data stored in a USB storage device may be damaged.
- If your USB storage device has multiple partitions, or if you use a USB multi-card reader, you can use up to 4 partitions or USB memory devices.
- If the USB memory stick does not work properly, disconnect and reconnect it.
- Some USB storage devices may not be supported or operated smoothly.
- How fast a USB storage device is detected differs from device to device.
- USB storage devices below USB 2.0 are supported as well. But they may not work properly.
- The system may require a longer time to read large amounts of data stored in a USB device.
- Only one USB icon will appear even when there are more than one USB.
- The network icon is displayed only when the network has been connected.
- HUMAX cannot guarantee compatibility (operation and/or bus power) with all USB mass storage devices and assumes no responsibility for any loss of data that may occur when connected to this unit.

Media List

Using the DLNA Media Server

Your receiver is a DLNA (Digital Living Network Alliance) compliant device capable of sharing media files with other DLNA compliant devices such as the PC, NAS or another HUMAX PVR when they are connected to the same home network.

You can play the video, music or photo files that are stored in your PC on your receiver when the PC is connected to the same home network. You can also play the media files stored in your receiver on your PC.


Connecting to Home Network

1. Connect the receiver to your home network by connecting the router or the Wi-Fi access point.
2. Press the **MENU** button and go to **Settings>System>Internet Setting**.
3. Set the options for the LAN or Wi-Fi. (Refer to **System>Internet Setting** for details.)
4. Set **Content Share** to **On** to allow sharing of the media files.

Playing Files On Your Receiver

: Files stored in the PC, NAS or another HUMAX PVR


1. Press the **MEDIA** button.
2. Press the **BLUE** button and select **Network**.
3. Select a server from the list.
4. Press the **YELLOW** button and select the media type.
5. Select the files you want to play.

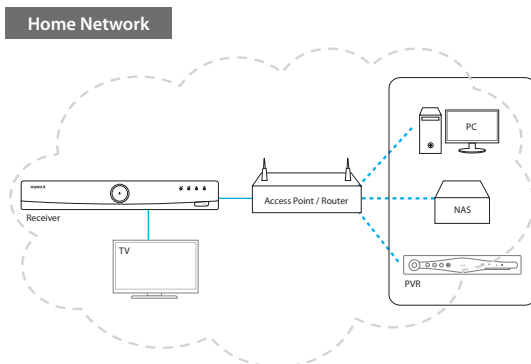

Playing Files On Your PC

: Files stored in your receiver

1. Install and run the DLNA media server software on your PC.
2. Select the name of the receiver in the library list of your PC.
3. Select the files you want to play.

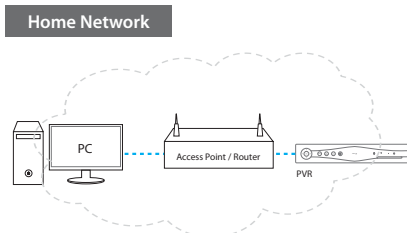

Note:

- The list of supported DLNA media servers will appear automatically.
- DLNA media server software such as Window Media Player 12 must be installed and executed on the PC to share media files stored in the PC. The media files must be stored in the library folder of the PC.
- For more information on DLNA, visit their website. (<http://www.dlna.org/>)

Using Video List

You can play TV/Radio recordings or Xvid files from the internal hard disk drive, USB storage device or the DLNA compliant device.

MENU → Video

Note:

- Press the **YELLOW** button to switch the media type.
- Press the **BLUE** button to switch the storage.
- Press the **i** button to view the detailed programme information.



Note:

- : Recording icon, : Playing icon, : HD icon, : CAS icon, : Lock icon
- When you record the whole series of the programme, the programmes will be recorded in the same series folder.

Playing Files

Select a file and press the **PLAY** button. Playback will start from the recently viewed point.

To play multiple files successively, select the files using the **RED** button and press the **PLAY** button.

Using Play Options

1. Select a file and press the **OK** button.
2. Select a play option.
 - **Resume Play**: Plays from the recently viewed point.
 - **Play from the Start**: Plays from the start.
 - **Delete**: Deletes the selected files.
 - **Rename**: Renames the selected file.
 - **Lock/Unlock**: Locks or unlocks the selected files.
3. Press the **OK** button.

You can perform fast rewind, fast forward, slow motion and pause while playing back a recorded file. Refer to **Recording and Playback > Playback** for details on playback control and playbar.



Media List

Note:

- To play multiple files successively, select the files using the **RED** button and press the **OK** button. When multiple files are selected, **Resume Play** and **Rename** are not available in **Play Options**.
- You will be prompted to enter the password when playing the locked files or the files with guidance policy.
- Some playback control buttons may not function depending on the contents.

Editing Files

Deleting Files

1. Select the file(s) you want to delete and press the **OPT+** button.
2. Select **Delete** and press the **OK** button.
3. Select **Yes** and press the **OK** button.

Sorting Files

1. Press the **OPT+** button.
2. Select **Sort** and press the **OK** button. The files will be sorted in alphabetical order.
3. To sort the files in time order, repeat the above procedure.



Note: Sorting files is available for video files only.

Locking Files

1. Select the file(s) you want to lock and press the **OPT+** button.
2. Select **Lock** and press the **OK** button.
3. To unlock, press the **OPT+** button again and select **Unlock**.
4. Enter the password.

Renaming Files


1. Select the file you want to rename and press the **OPT+** button.
2. Select **Rename** and press the **OK** button.
3. Enter the name of the file in the keyboard and press the **YELLOW** button.

Creating Folder

1. Press the **OPT+** button.
2. Select **New Folder** and press the **OK** button.
3. Enter the name of the folder in the keyboard and press the **YELLOW** button.

Moving / Copying Files

1. Select the file(s) you want to move and press the **OPT+** button.
 2. Select **Move/Copy** and press the **OK** button.
 3. Select the folder or storage you want to move the file(s) to and press the **RED** button.
 - **Moving the file(s) within the same storage**
 - Select or Create the folder you want to move the file(s) to and press the **RED** button.
 - If you want to create a new folder, press the **OPT+** button and enter the folder name and press the **OK** button.
 - **Copying the file(s) to another storage**
 - Press the **BLUE** button to select the storage – Highlight the storage and press the **OK** button.
 - Highlight the folder and then press the **RED** button to copy
 - If you want to create a new folder, press the **OPT+** button and enter the folder name and press the **OK** button.
 - The Copyright Act 1968 only permits to copy broadcasts for Private and Domestic purposes in limited circumstances. HUMAX does not authorise any use of this feature in any way which may amount to a breach of any law or the rights of the owner of copyright in film or broadcast.
- Note:** When moving a locked file, you will be prompted to enter the password.
4. If you want to move or copy a recorded file, a copyright message will appear. Select **Yes** to proceed or **No** to cancel.

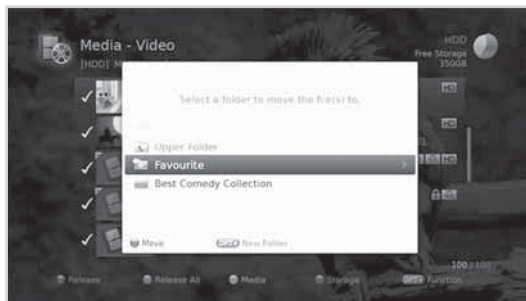


Media List

Using Music List

You can play MP3 audio files from the internal hard disk drive, USB storage device or the DLNA compliant device.

MENU → Music

- Note:**
- Press the **YELLOW** button to switch the media type.
 - Press the **BLUE** button to switch the storage.

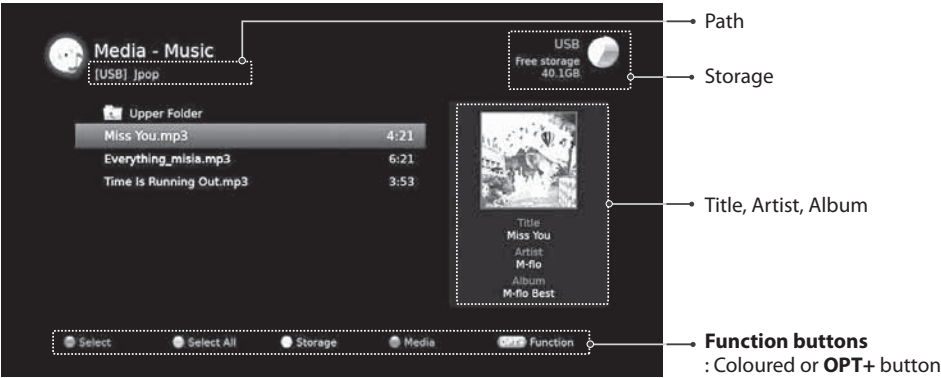


Playing Files

Select a file and press the **OK** or **PLAY** button. All files in the folder will be played successively. To play the selected files only, select the files using the **RED** button and press the **OK** or **PLAY** button.

Music Player

The music player is displayed while playing the music file(s).

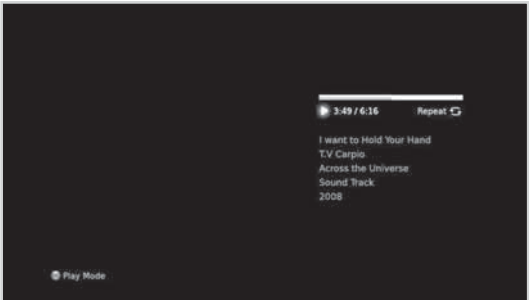

	Plays or pauses		Plays
	Plays the previous file		Pauses
	Plays the next file		Changes the play mode (once, repeat, repeat all, shuffle)
	Plays the first file		Stops the music player and displays the list
	Plays the last file		Exits the music player and goes to live TV

Editing Files

Deleting, moving, renaming the music files or creating new folders are the same as in the video list. Refer to **Using Video List > Editing Files**.

Media List

Using Photo List

You can play JPEG photo files from the internal hard disk drive, USB storage device or the DLNA compliant device.

MENU → Photo

- Note:**
- Press the **YELLOW** button to switch the media type.
 - Press the **BLUE** button to switch the storage.


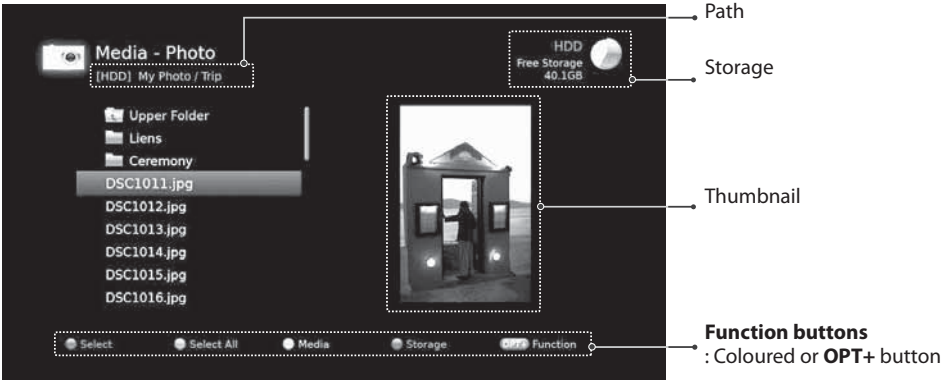


Photo Slideshow

Select a file and press the **OK** or **PLAY** button. All files in the folder will be shown successively. To slideshow the selected files only, select the files using the **RED** button and press the **OK** or **PLAY** button.

The info banner is displayed while slideshow is paused.

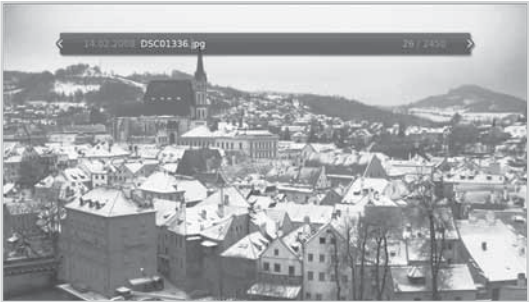

	Pauses or plays		Plays
	Shows the previous photo		Pauses
	Shows the next photo		Stops slideshow and displays photo list
	Shows the first photo		Exits slideshow and goes to live TV
	Shows the last photo		

Slide Mode

You can play music files during slideshow.

1. Press the **OPT+** button.
2. Select **Slide Mode** and press the **OK** button.
 - **Display Time:** The duration a photo is displayed
 - **Music Play:** Select **On** to play music files during slideshow.
 - **Folder:** Select the folder the music files in located in using the **RED** button.
3. Select **OK** to save and exit.



Editing Files

Deleting, moving, renaming the photo files or creating new folders are the same as in the video list. Refer to **Using Video List > Editing Files**.

HUMAX TV Portal

HUMAX TV Portal provides Catch-up TV services and various web applications.

You can access **HUMAX TV Portal** in several ways.

- Press the **TV Portal** button.
- Press the **MENU** button and select **HUMAX TV Portal**.

Note:

- Press the **TV Portal** button to return to TV Portal home while using the portal service.
- Press the **EXIT** button to exit. Press the **BACK** button to return to the previous screen.
- Press the **RED** button to enter the simple mode.
- Press the **BLUE** button to display the HUMAX Privacy Policy.
- HUMAX TV Portal is powered by independent service providers and the services are subject to change without notice.



Disclaimer: You agree that your use of the HUMAX TV Portal Service (“Service”) is at your sole risk and acknowledge that the Service and anything contained therein, including, but not limited to, content, services, goods or advertisements (the “Items”) are provided “AS IS” and that HUMAX makes no warranty of any kind, express or implied, as to the Items, including, but not limited to, merchantability, no infringement, title or fitness for a particular purpose or use. HUMAX is not responsible for the quality of the broadband, and any disruptions or discontinuation of the Services as a result of broadband provided by your Internet Service Provider (“ISP”). HUMAX does not warrant that the Service is compatible with your equipment or that the Service is free of errors or viruses and is not liable for any damage you may suffer as a result of such destructive features. You agree that HUMAX, its Suppliers and its third-party agents shall have no responsibility or liability for any injury or damages, whether caused by the negligence of HUMAX, its employees, subcontractors, agents, Suppliers or otherwise arising in connection with the Service and shall not be liable for any lost profits, losses, punitive, incidental or consequential damages or any claim against HUMAX by any other party or any fault, inaccuracy, omission, delay or any other failure in the Service caused by your equipment or arising from your use of the Service on such equipment. For any issues or questions about the compatibility with your broadband, please contact your ISP.

Note: More applications are to be updated.

In this chapter you can set options for parental control, language, time, video, audio and others.

Note: Press the **MENU** or **EXIT** button to exit.

Parental Control


MENU → **Settings** → **Preferences** → **Parental Control**

You will be prompted to enter the password to access this menu.

Note: The default password is 0000. If you have forgotten your password, please contact HUMAX Customer Service.

Restriction of Access

1. Select **Restriction of Access**.
2. Select an option.
 - > **No Block**
 - > **Block G(General) and above**
 - > **Block PG(Parental Guidance Recommended) and above**
 - > **Block M(Mature Audience 15+) and above**
 - > **Block MA(Mature Adult Audience 15+) and above**
 - > **Block AV(Adult Audience, Strong Violence 15+) and above**
 - > **Block R(Restricted 18+) and above**
 - > **Block All**
3. Press the **OK** button.

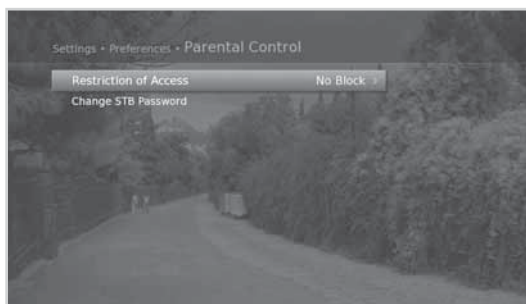

Note: The password is required to view the blocked programmes.

Changing STB Password

1. Select **Change STB Password**.
2. Enter the new password.
3. Enter the new password again for verification.



Preferences

Language Setting

MENU → Settings → Preferences → Language

- 1. Select **System Language**.
- 2. Select the language.


Note: You can change the audio or subtitle language by pressing the **AUDIO** or **SUBTITLE** button while watching a programme.



Setting Power On/Off Timer

MENU → Settings → Preferences → Time

- 1. To turn on the product automatically, select **Power On Timer** and select **Set Timer**.
- 2. Enter the time.
- 3. Set the options for the power on timer.
 - **Channel:** Select the channel to be displayed when powering on.
 - **Volume:** Adjust the volume of the audio when powering on.
 - **Repeat:** Select the repeat mode of the power on timer.
- 4. To turn off the product automatically, select **Power Off Timer** and select **Set Timer**.
- 5. Enter the time.

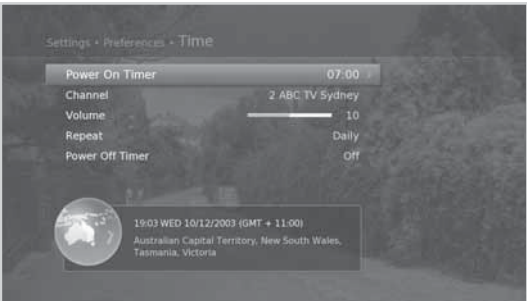

Note: The power on time and power off time should be set different from each other.

Video Setting

MENU → Settings → Preferences → Video

Setting TV Screen Ratio

You can select the screen ratio of your TV.

1. Select **Screen Ratio**.
2. Select an option.
 - **16:9 – 4:3**

Setting Display Format

You can select the display format according to the screen ratio of your TV.

1. Select **Display Format**.
2. Select an option.
 - Screen ratio 4:3: **Auto – 16:9 Letterbox – 14:9 Letterbox – Centre**
 - Screen ratio 16:9: **Auto – Pillar Box – Zoom**



Note: You can set the display format by pressing the **WIDE** button while watching a programme. Refer to *Display Format / Resolution*.

Screen Ratio	Display Format		
4:3	 Auto	 Letterbox	 Centre
	 Auto	 Pillarbox	 Zoom

Preferences

Audio Setting

MENU → Settings → Preferences → Audio

Setting Digital Audio Output

You can select the digital audio signal output of your product.

- 1. Select **Digital Audio Output**.
- 2. Select an option.
 - **Multi-channel – Stereo**

Setting Lip-Sync

You can adjust the sound difference of audio and video.

- 1. Select **Lip-Sync**.
- 2. Adjust the lip-sync using the ◀/▶ button.

Pressing the right button increases the audio speed and pressing the left button decreases it.



Screen Display

MENU → Settings → Preferences → Screen Display

Setting Info Display Time


You can set the duration the information box is displayed every time the channel is switched.

1. Select **Info Display Time**.
2. Select an option.
 - **Off – 1~20 sec**

Setting Transparency

You can the transparency of the On-Screen Display.

1. Select **Transparency**.
2. Select an option.
 - **Off – 25% – 50% – 75%**

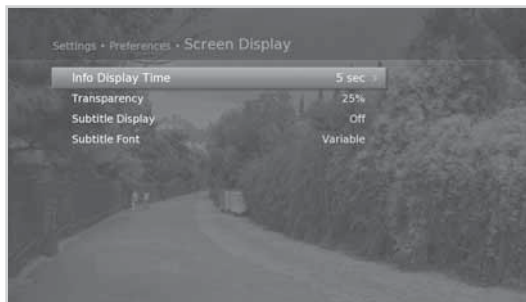

Setting Subtitle Display

You can set to display the subtitle automatically or not.

1. Select **Subtitle Display**.
2. Select an option.
 - **On – Off**

Setting Subtitle Font

You can adjust the subtitle font.

1. Select **Subtitle Font**.
2. Select an option.
 - **Variable – Fixed**

EPG Type Setting

MENU → Settings → Preferences → EPG Type

Setting EPG Type

You can set the EPG type to **HUMAX** mode or **IceTV** mode.

1. Select **EPG Type**.
2. Select an option.
 - **HUMAX**: The HUMAX TV guide and i-plate is displayed.
 - **IceTV**: If you have an IceTV account, select IceTV. Enter the member ID, password, region and device label to proceed.

Installation

Installation menu allows you to search the available TV and radio channels. Software update, dynamic update, antenna power and factory default settings are also available in this section.

MENU → Settings → Installation

You will be prompted to enter the password to access this menu.

Note:

- The default password is 0000. If you have forgotten your password, please contact HUMAX Customer Service.
- Press the **MENU** or **EXIT** button to exit.

Automatic Search


MENU → Settings → Installation → Automatic Search

You can search channels automatically without entering any other information.

1. Select **Automatic Search**. Channel search starts.
2. Select **Save** and press the **OK** button to save the results.

Note:

- Select **Stop** and press the **OK** button to stop the channel search.
- The channels searched from the previous channel search will remain.

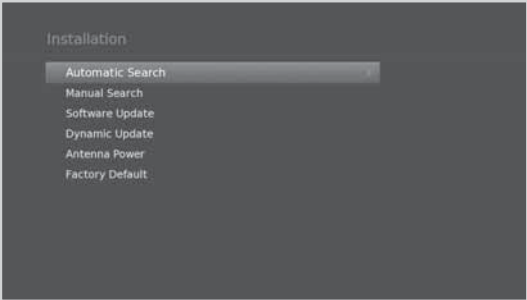


Manual Search

MENU → Settings → Installation → Manual Search

You can search channels manually by searching parameters.

1. Select **Manual Search**.
2. Configure the search options.
 - **Channel:** Select the channel.
 - **Frequency:** Enter the frequency. The corresponding frequency value will be automatically displayed.
 - **Bandwidth:** Select the bandwidth.
 - **Network Search:** Select **On** or **Off**.
3. Select **Search** and press the **OK** button.
4. Select **Save** and press the **OK** button to save the results.

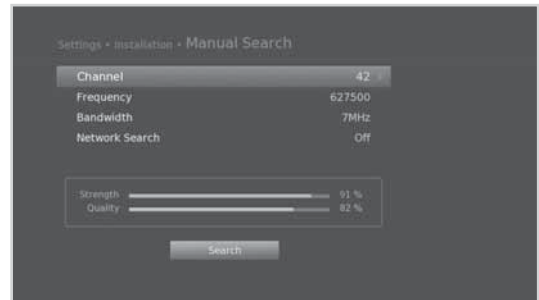

Note:

- Select **Stop** and press the **OK** button to stop the channel search.
- The channels searched from the previous channel search will remain.

Installation

Software Update


The software will be updated automatically through the Regular Update feature as a default. You can also check for newly released software versions by selecting SW Update in HUMAX TV Portal. It is recommended that you periodically check for the availability of software update.

Make sure the internet is connected. You can connect the internet using a wireless USB dongle or a LAN cable. When using a wireless USB dongle, it is recommended to use a USB dongle distributed by HUMAX. Other products may not function or respond. Go to www.humaxdigital.com/au for details of where to buy. If there is no internet connection, visit the HUMAX website for the latest software versions (<http://www.humaxdigital.com/au>) or contact Humax Customer Support on 1800 737 937.

MENU → Settings → Installation → Software Update


Automatic Update

1. Select **Automatic Update** and press the **OK** button to search for new software.
2. When new software is detected, select **Yes** to start the update process now.

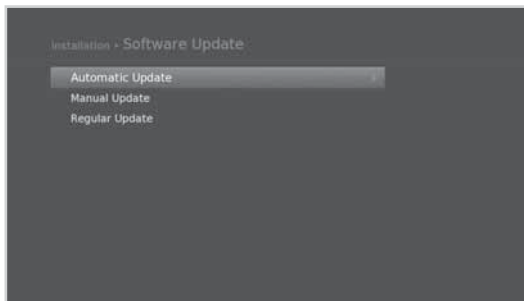

Manual Update

1. Select **Manual Update** and press the **OK** button.
2. Enter the options manually.
 - **Channel:** Select the channel.
 - **Frequency:** Enter the frequency. The corresponding frequency value will be automatically displayed.
 - **Bandwidth:** Select the bandwidth.
3. Select **Search** and press the **OK** button to search for new software.
4. When new software is detected, select **Yes** to start the update process now.

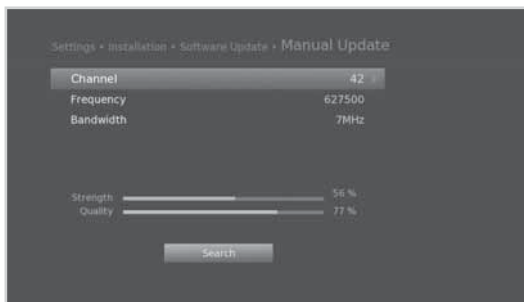

Please wait until the update is complete. When completing the software update, the product is automatically powered off and on again automatically powered off and on again.



Regular Update

You can set the software update to take place automatically at 4a.m. on a daily basis.

1. Select **Regular Update**.
2. Select an option.
 - **On**: Software is updated automatically at 4a.m.
 - **Off**: No automatic software update

Note:

- It may take approximately 40 minutes to update software.
- Other functions such as scheduling programmes will not activate while software update takes place.
- If new software is detected, you can choose either to download immediately or later. If you select **Later**, the message will be displayed again when you switch into standby mode.
- You can also update the software by connecting a USB device which has the new software file. The file can be downloaded from the HUMAX website.



Caution:

- Please be careful to keep the power on and the power cord plugged in during software update. If the power is off during software update, fatal damage may be caused to the product.
- Software update through the network is also possible if you access HUMAX TV Portal.

Software Upgrade via USB Memory Stick

1. Visit HUMAX Australia website (www.humaxdigital.com/au) and go to **Support>Software Download**.
2. Check the latest software version and click the title to commence download and save it to an EMPTY USB memory stick (Make sure you have no other files).
3. Power off the receiver by switching off the switch located on the rear.
4. Insert the USB memory stick into the USB port (located at the rear) of the receiver.
5. Power on the receiver by switching on the switch located on the rear and immediately start tapping the front **Standby** touch button until the letter **R** appears on the front display.
6. The front display will change to **P** and numbers will show indicating the progress. (You can also monitor the progress on the TV screen connected to the receiver.)
7. When the front display changes to **END**, pull out the USB memory stick.
8. To confirm successful update, please go to **Menu>System>System Information** and check **Software Version**.

Note: If the download progress stops around 89%, it may take up to 5 minutes for it to restart. DO NOT TURN OFF the receiver at this point.

Installation

Dynamic Update

MENU → Settings → Installation → Dynamic Update

You can have the real time channel update take place automatically when necessary.

1. Select **Dynamic Channel Update**.
2. Select an option.
 - **On**: Channels are updated automatically when necessary.
 - **Off**: No automatic channel update




Antenna Power

MENU → Settings → Installation → Antenna Power

Active antenna is a portable or indoor antenna which needs power supply from the product because it does not have power cord for itself. Connect an active antenna to the **ANTENNA IN** on the rear of the product. The antenna power should be turned on if your TV is connected to an active antenna that requires external power.

1. Select **5V Antenna Power**.
2. Select an option.
 - **On**: 5V power is supplied from the active antenna cable.
 - **Off**: No power supplied.

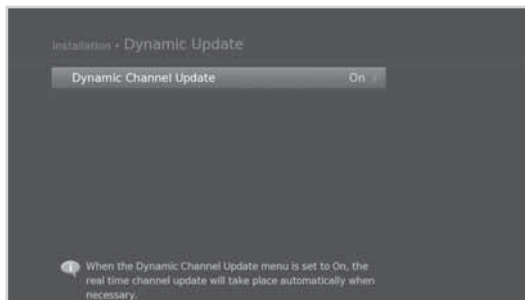

Factory Default


MENU → Settings → Installation → Factory Default

1. Select **Factory Default**.
2. A popup will appear. Select **Yes**.
3. You will be prompted to enter the password.
Enter the password.

Note: The default password is 0000. If you have forgotten your password, please contact HUMAX Customer Service.

Warning:

- To format the HDD, mark **Format HDD**.
- Please note that once you perform Factory Default, all data such as channel list, and all user configured data will be deleted. After completing the default setting, the installation wizard will appear automatically in a few seconds.

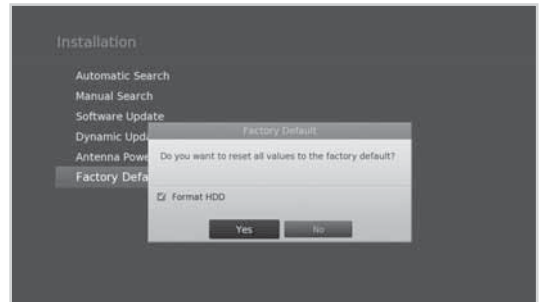

System

In **System**, system information, signal detection, power management, conditional access and data storage options are available.

Note: Press the **MENU** or **EXIT** button to exit.

System Information

MENU → Settings → System → System Information

The system information is displayed.




Signal Detection

MENU → Settings → System → Signal Detection

You can check the signal strength and quality of the searched channels.

Note: This menu will not be activated while recording.

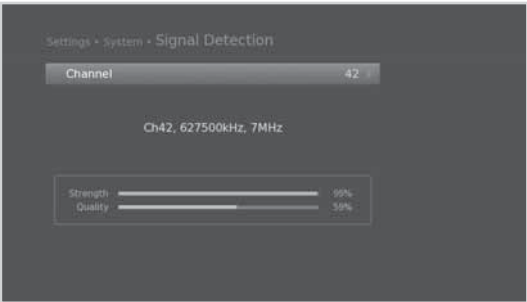

Power Management

MENU → Settings → System → Power Management


Power Saving in Standby

You can minimise the standby power consumption to below 1W.

Setting Automatic Power Down

The receiver automatically enters standby mode for power saving if no user interaction occurs for 3 hours.

1. Select **Automatic Power Down**.
2. Select **On** to enter standby mode automatically if no user interaction occurs for 3 hours.

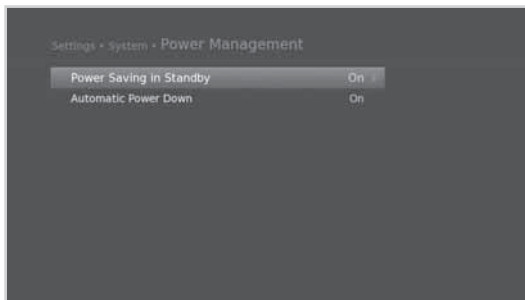

Note: The message will be displayed before entering standby mode. If no selection is made for 30 seconds, the receiver enters standby mode automatically.

Data Storage


MENU → Settings → System → Data Storage

You can check the size of the internal hard disk drive or external USB storage device.

1. Select a storage to display the details for each storage.
2. To format the selected storage, select **Format Storage**. If you select **Yes**, you will be prompted to enter the password.

Note:

- The default password is 0000. If you have forgotten your password, please contact HUMAX Customer Service.
- Supported features according to USB file system
 - **ext3:** Read, Copy (Digital TV/Radio, MP3, JPEG, Xvid)
 - **FAT:** Read, Copy (Digital TV/Radio, MP3, JPEG, Xvid)
 - **NTFS:** Read (MP3, JPEG, Xvid)

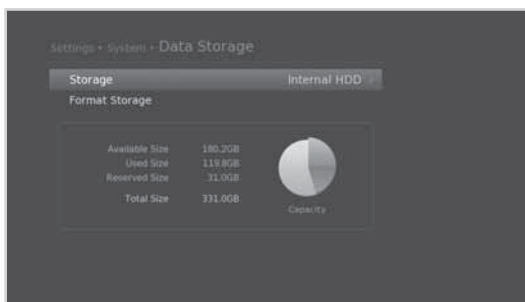

System

Internet Setting

MENU → Settings → System → Internet Setting

Configuring Wi-Fi (wireless)

1. Select **Configure Wi-Fi**.
2. The wireless LAN network list will appear. Select your Wi-Fi network and press the **OK** button.
3. If your Wi-Fi network is not listed, select **Input network name** and enter the name in the keyboard.
4. Configure the Wi-Fi setting options.
 - **Network Name:** The Wi-Fi network name
 - **Security Type:** The Wi-Fi security type
 - **Password:** The Wi-Fi password.



Note: Refer to **Connecting the Network** for details.


Configuring LAN

1. You can configure the Ethernet setting options.
 - **DHCP:** Apply the options according to the DHCP.
 - **Manual:** Enter the options manually,

Select **Apply** and press the **OK** button.

Note:

- When entering the IP address manually, enter 3 digits in a row.
- The network is connected by LAN when both WiFi and LAN are activated.
- HUMAX recommends the network connection over a direct LAN.

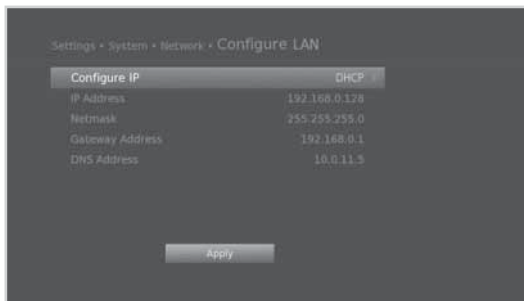

Content Sharing

You can find video, music and photo files in the HDD and play them on your TV or send those files to other devices. (Make sure the network is connected to both devices.)

1. Select **Content Sharing**.
2. Select **On** to connect to the HDD from other devices.

FTP Server

You can use the product as an FTP server to upload or download files.

1. Select **FTP Server**.
2. Select **On** to use the product as an FTP server.

Specification

Tuner & Channel	
No. of Tuners	2
Input Connector	IEC 169-2 female
Frequency Range	174-230MHz(VHF) 520-820MHz(UHF)
Audio/Video Decoding	
Audio Decoding	MPEG/MusiCam Layer I & II, Dolby Digital+
Audio Mode	Single channel/Dual channel/Joint stereo/Stereo
Video Decoding	MPEG-2 ISO/IEC 13818 Transport Stream Specification
Video Format	4:3, 16:9
Video Resolution	1080p, 1080i, 720p, 576p, 576i
Memory	
Flash Memory	32MB
RAM	256MB
EEPROM	8KB
Audio/Video In/Out	
Video	RCA, YPbPr, HDMI/HDCP
Audio	Audio L/R, S/PDIF (Digital Audio Output)
Data In/Out	
USB	USB 2.0 Host (5 V $\overline{=}$ 500, 500mA Max.)
File Format	JPEG(jpeg, .jpg, .jpe, .jfif), MP3(mp3, .mp2, .mp1)
Hard Disk	
HDD	500GB/1TB
Power Supply	
Input Voltage	90-250V a.c., 50/60Hz
Type	SMPS
Power Consumption	Max. 25W (Standby: Max. 1W)
Protection	Separate internal fuse. The input should be protected against lightning.

Appendix

Physical Specification	
Size (w/h/d)	380mm×246mm×55mm
Weight	2.75kg
Operating Temperature	0 °C to +45 °C

Note: The specifications are subject to change without notice.

Service and Support

Information concerning troubleshooting, software upgrade and product support is provided in the following websites and customer service centre. Should your product require warranty service, please contact HUMAX to obtain the appropriate authorization.

HUMAX Customer Service

Australia	Tel: Opening Hours: Address: E-mail: Website: Language:	1300 737 937 Mon-Fri 9:00-17:00 (excluding Public Holidays) 7 / 602 Whitehorse Road, Mitcham, Vic, 3132 ausupport@humaxdigital.com www.humaxdigital.com/au English
------------------	--	---

Note: For hardware repair, please visit our website.

Appendix

Safety Warning

This product has been manufactured to comply with international safety standards. Please read the following safety precautions carefully.

Safety Instructions and Precautions

1. MAINS SUPPLY

- Operate this product only from the type of power supply indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
- Disconnect the product from the mains before you start any maintenance or installation procedures.

2. OVERLOADING

- Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

3. LIQUID

- The product should not be exposed to liquid of any kind. In addition, no objects filled with liquid should be placed on the apparatus.

4. CLEANING

- Disconnect the product from the wall outlet before you clean it.
- Use a moist cloth to clean the product. Do not use solvents. Wipe the surface gently with a soft cloth as it may get scratched.

5. VENTILATION

- Make sure that the top of the product is not blocked. It is necessary to have a sufficient airflow into the unit.
- Do not put the product on soft surfaces.
- Do not put objects on the product. This will block the ventilation or cause damage to the surface.

6. ATTACHMENTS

- Do not use any unsupported attachments as these may be hazardous or cause damage to the product.

7. LIGHTNING, STORM OR NOT IN USE

- Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

8. EXTRANEIOUS OBJECTS

- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

9. REPLACEMENT OF PARTS

- When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitution may result in additional damage to the unit.

10. CONNECTION

[Satellite] CONNECTION TO THE SATELLITE DISH LNB

- Disconnect the product from the mains before connecting or disconnecting the cable from the satellite dish. Failure to do so can damage the LNB.

[Cable] CONNECTION TO THE CABLE TV SIGNAL

- Connect all components before plugging any power cords into the wall outlet. Always turn off the product, TV and other components before you connect or disconnect any cables.

[Terrestrial] CONNECTION TO THE AERIAL

- Disconnect the product from the mains before connecting or disconnecting the cable from the aerial. Failure to do so can damage the aerial.

11. CONNECTION TO THE TV

- Disconnect the product from the mains before connecting or disconnecting the cable from the TV. Failure to do so can damage the TV.

12. EARTHING

[Satellite] The LNB cable must be earthed to the system earth for the satellite dish.

13. LOCATION

- Place the product indoors to avoid exposing it to lightning, rain or sun. Do not place it near a radiator or heat register.
- We recommend that the product has 10 cm clearance from any other appliances susceptible to electromagnetic influences, such as a TV or a VCR.
- Do not block the openings with any object, and do not place the product on a bed, sofa, rug, or other similar surface.
- If you place the product on a rack or a bookcase, ensure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it can fall. A falling product can cause serious injury to a child or adult, and serious damage to the appliance.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

Warning

1. To avoid damage of the power cord or plug;

- Do not modify or process the power cord or plug arbitrarily.
- Do not bend or twist the power cord.
- Make sure to disconnect the power cord holding the plug.
- Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.
- The mains plug, as a disconnection device, shall remain readily accessible by the user.

2. To avoid electrical shock;

- Do not open the main body.
- Do not insert metal or inflammable objects inside the product.
- Do not touch the power plug with wet hands.
- Disconnect the power cord in case of lightning.

3. To avoid damage of product;

- Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused. Make sure to contact HUMAX Customer Service if the product is out of order.
- Do not insert metal or alien substance into the slots for the modules or Smartcards. (where applicable) It may cause damage to the product and reduce its life span.

4. To avoid damage of the hard disk drive (PVR only)

- Do not move the product or turn the power off suddenly while the hard disk drive is running.
- The company shall not be liable for any corruption of data on the hard disk drive caused by carelessness or misuse.

Appendix

Trouble Shooting

Before contacting the customer service centre, please read the tips below carefully. If the problem persists after completing the following procedure, please contact HUMAX Customer Service for further instructions.

1. No message displayed on the front display. (The product will not switch on.)

- Check the main power cable and make sure it is plugged into a suitable power outlet.
- Check that the mains supply is switched on.
- Connect the power cable to a different power outlet.
- Check that the power switch is on at the rear of the product. (where applicable)

2. No picture

- Make sure that the product is powered on and in operation mode. (Press the **STANDBY** button)
- Make sure that the AV cable is firmly connected to the TV.
- Make sure that the antenna cable is properly connected to the product.
- Be sure to activate channel search.
- Check the brightness level of the TV.
- Check if the channel is currently on air. Contact the broadcaster to ensure that the channel is running.
- Press the SOURCE button if the product is in external input mode. (where applicable)
- **Satellite:** Make sure that the antenna setting in the menu is correct.

3. Poor picture/sound quality

- Make sure there is no mobile phone or microwave oven near the product.
- Keep the power and the RF cables apart from each other.

Note: If the antenna is covered with snow or the RF is weakened by heavy rain, the condition of the sound and picture may temporarily be poor. However, the poor sound and picture quality due to weather conditions cannot be accepted as a malfunction of product.

- **[Satellite]** Check that your dish alignment is correct.
- **[Satellite]** Change the satellite dish for a larger one as this will increase the signal levels received.
- **[Satellite]** Replace the LNB with a lower noise factor in cases where the noise factor is too high.
- **[Satellite]** Replace the LNB with a new one in case it is damaged or out of order.
- **[Satellite]** Install the antenna in an obstacle-free place.
- **[Satellite]** Check the signal levels and adjust your antenna if the level is too low. The signal level may be affected by weather conditions.
- **[Terrestrial]** Adjust the antenna direction to get a better picture.
- **[Terrestrial]** Set the antenna power in menu to On, if you use the active antenna to improve the reception. (where applicable)

4. No or poor sound

- Check that your AV cable is connected correctly.
- Check the volume levels of your TV set and the product.
- Check if the product or TV is on mute.
- Check audio type or soundtrack option. (where applicable)

5. Remote control does not operate.

- To control the product, the top end of the remote control should point directly towards the receiving part of the product.
- Remove and reinsert the batteries in the remote control.
- Replace the batteries in the remote control for a new set.
- Set the remote control to STB or PVR mode, if you are using the universal remote control. (where applicable)

6. Cannot make reservations.

- Check that no previous reservations are conflicting with the new reservation.

7. No password information is given.

- The default password is always **0000**.

8. Channel search does not work.

- **[Satellite]** Make sure that the antenna setting in the menu is correct.
- **[Cable]** Make sure that your cable is connected correctly.
- **[Terrestrial]** Use the appropriate antenna capable of receiving VHF or UHF channels for your area.

9. Cannot update new software.

- You can get an update. If the product does not show a message requesting update, this means no software is available.

10. Cannot watch scrambled channels.

- Check that you have the appropriate Smartcard or CI-Module. Reinsert the Smartcard or CI-Module and make sure it initialises correctly.
- Check in the menu that the product is detecting the Smartcard or CI-Module.
- Check in the menu that you have a valid and working subscription to the channels you wish to view.
- Ensure that the Smartcard or CI-Module is not damaged.

11. Cannot watch pay channels.

- Check in the menu that you have a valid and working subscription to the channels you wish to view.
- Contact your network operator for more information.

12. The product makes a humming noise.

- The noise is from the fan; the hard disk is operating normally. This kind of noise is inevitable but seldom noticeable.

13. Cannot record programmes. (PVR only)

- The hard disk is full. Delete unnecessary programmes and make space for new recording.
- Check if recording is conflicted with another channel. Stop the current recording or wait until the recording is finished.
- Check that the product is switched on when recording starts.

14. Cannot operate TSR (Time Shifted Recording). (PVR only)

- TSR may not be available during recording. Wait until recording is finished.
- Delete unnecessary programmes and make space for new recording.

15. Cannot playback. (PVR only)

- To playback the recorded file of a scrambled channel, use the Smartcard. In case it has been a long time since you last recorded, this may not work. Contact Humax Customer Service.
- The signal during recording may be weak or the hard disk too full.

16. Cannot change channels while recording. (PVR only)

- Certain channels may not be changed due to restriction of the tuner or connection type.

Appendix

Error Message

Error message	Possible causes	What to do
No or bad signal [Satellite]	The satellite dish is not pointing at the satellite.	Adjust dish alignment.
	Signal is too weak.	Increase the LNB voltage or connect a signal amplifier.
	Satellite dish is too small.	Change to a larger dish.
	Problem with LNB.	Change the LNB.
	Wrong antenna setting.	Set the antenna correctly.
No or bad signal [Cable]	The cable is not connected.	Make sure the cable is connected correctly.
	The cable may be damaged or defective.	Exchange the cable.
	The channel is not broadcasting.	Exchange the cable.
No or bad signal [Terrestrial]	The aerial is not pointing properly.	Adjust aerial. Check the cable from the aerial. If you cannot resolve the problem, you may need to have your aerial and installation tested by a professional.
The channel is scrambled or not available.	The channel has a signal, but no audio or video.	Confirm if the channel is currently on air.
	The channel has been deleted by the broadcasting company.	Check if the channel is currently on air
	The channel is for data broadcasting.	Remove the channel from the channel list and check for new transponder details.
The audio is not available.	The channel has a video signal, but no audio.	Press the audio button to confirm that the channel has audio options.
No access	No access	Make sure you are subscribed to the channel.
	No authorization.	If the product has been turned off for a long time (standby or power off), please wait for authorization. It may take up to 60 minutes.
No card inserted.	Smartcard is not inserted.	Insert Smartcard.

Error message	Possible causes	What to do
Incorrect card	Wrong Smartcard is inserted.	Insert the correct Smartcard.
	Smartcard is not inserted correctly.	Remove the Smartcard and reinsert it.
	Smartcard is damaged.	Contact your Smartcard retailer or channel broadcaster for a Smartcard replacement.
CI-Module not installed.	CI-Module is not inserted.	Insert CI-Module.
	CI-Module is not inserted correctly.	Remove the CI-Module and reinsert it.
	CI-Module is not recognized.	Insert a different CI-Module to check if your existing module is working.
Invalid CI-Module	Wrong CI-Module.	Insert the correct CI-Module.
	CI-Module is damaged.	Replace the CI-Module.
The antenna cable is short-circuited. [Satellite]	LNB cable is short.	Replace LNB cable.
	LNB is internally short.	Replace LNB.
	Alien substance is inserted in the LNB IN port. The port may be damaged.	Remove the alien substance and contact the local service centre in case damaged has occurred.

Appendix

Glossary

CVBS (Composite Video Baseband Signal)

A technology for transmitting video signals via a cable. Mixes luminance (brightness) and the chrominance (colour) signals together.

DiSEqC (Digital Satellite Equipment Control)

A DiSEqC compatible receiver relies on a switching box which detects the 22kHz tone pulsing rapidly on and off. In this way, a specially designed receiver can control numerous LNBs through a DiSEqC switching box.

Dolby Digital

An encoding system that digitally compresses up to 5.1 discrete channels of audio (left front, centre, right front, left surround, right surround) into a single Bitstream. A low frequency effect (LFE) channel is included providing the sound needed for special effects.

DVB (Digital Video Broadcasting)

Set of standards that define digital broadcasts using satellite, cable or terrestrial systems.

EPG (Electronic Programme Guide)

An electronic equivalent to a printed television listings magazine; it is an application used with digital set-top boxes and digital television sets to list current and scheduled programs that are or will be available on each channel, including a short summary or commentary for each program. The information supplied in the EPG is sent and updated by the channel broadcaster.

FEC (Forward Error Correction)

A technique for error control of data transmission.

Frequency

The property of a signal measured in cycles per second (=Hz).

FTA (Free- To-Air)

An unscrambled broadcaster allowing customers to view channels or services without paying any subscription.

HDD (Hard Disk Drive)

The primary computer storage medium, which is made of one or more aluminum or glass platters, coated with a ferromagnetic material.

HDMI (High-Definition Multimedia Interface)

An all-digital audio/video interface that supports standard, enhanced, or high-definition video, plus multi-channel digital audio on a single cable. It transmits all ATSC HDTV standards and supports 8-channel digital audio.

Hi-Fi (High Fidelity)

The characteristics of audio devices that can play back all the audio frequencies a person can detect, which is the range of 16Hz-20KHz. Sometimes it is used to indicate good quality of audio devices such as stereo tape recorders.

LNB (Low Noise Block)

A device that is mounted on an arm facing your satellite dish, focusing on satellite signals. A LNB converts signals received from satellite to a lower frequency and sends them to a satellite receiver via coaxial cable.

NVOD (Near Video On Demand)

A technology that allows customers to view the start of popular programmes or films within a short period from the time they make their selection. This is possible as the broadcaster sends multiple copies with staggered start times.

OSD (On Screen Display)

OSD displays the basic information necessary for the users to configure monitor or TV settings. OSD information may include brightness, contrast, tuning, RGB adjustment, and screen size and position.

OTA (Over the Air)

A standard for the transmission of software for equipment, through a broadcast system. Manufacturers reserve the right for deciding the release of the software for their products.

PID (Packet Identifier)

A set of numbers identifying stream packets contained within a single data stream.

PIP (Picture In Picture)

A function that allows you to display two different TV channels (or TV inputs) on a single screen.

Polarisation

The direction of the electrical and magnetic fields of a signal. Satellites use both vertical and horizontal polarisation. Means that a frequency can be used twice.

PVR (Personal Video Recorder)

Video recorder that can record and playback programmes directly using the embedded hard disk drive(s).

QPSK (Quadrature Phase Shift Keying)

Digital modulation technique in which the carrier phase can have one of four possible values.

RF (Radio Frequency)

Television signals are modulated onto RF signals and are then demodulated by your television's or STB's tuner.

RF Modulator

Enables you to output the receiver's digital signals to a TV's RF (Aerial) input, allowing you to connect the receiver to a TV set without a SCART connection.

RGB (Red – Green – Blue)

A technology for transmitting video signals via a cable. RGB is a system to represent red, green, and blue colours on a TV or monitor display. Red, green, and blue can be combined in various proportions to obtain any colour.

RS-232C

A connection to allow you to connect to a PC to update receiver's software.

SCART

A 21-pin connector standard to connect two pieces of Audio-Visual equipment such as a TV and a VCR. Each device will have a 21-pin female connection; a cable with male connection at both ends is used for connecting the devices.

Smartcard

A credit card sized card that contains updateable chip memory. It is used for accessing Pay TV (encrypted) channel or services when inserted into an appropriate receiver.

S/PDIF (Sony/Philips Digital Interface format)

A standard format for the transfer of digital audio signals. It allows the transfer of digital audio between two devices without any conversion to and from analogue, which could degrade the signal quality.

S-Video (Super-Video)

Sometimes referred to as Y/C video; a technology for transmitting video signals via a cable. It is a video signal transmission in which the luminance (brightness) and the chrominance (colour) signals are transmitted separately to achieve superior picture clarity.

Transponder

A satellite is divided up in parts called transponders. A transponder is one distribution section of the satellite. Each transponder can be used for distribution of several channels or services.

Trick-Play

Pause, Fast Forward/Fast Rewind, Slow Motion, Instant Replay, Commercial Skip, Repeat A-B.

TSR (Time Shifted Recording)

A function that records the present programme temporarily to support trick-play.

Appendix

Remote Control Code List

1. Using the Universal Remote Control

1. Select the mode(PVR, TV, DVD, AUDIO) you want to set by pressing the corresponding button on the remote control. The button will blink once.
2. Keep pressing the button for 3 seconds until the button lights on.
3. Enter the 3-digit code. Every time a number is entered, the button will blink. When the third digit is entered, the button will blink twice.
4. If a valid 3-digit code is entered, the product will power off.
5. Press the **OK** button and the mode button will blink three times. The setup is complete.
6. If the product does not power off, repeat the instruction from 3 to 5.

Note:

- When no code is entered for one minute the universal setting mode will switch to normal mode.
- Try several setting codes and select the code that has the most functions.

Remote Control Function List

The keys on the remote control function as in the list below.

Note: Some keys may not function depending on the product.

Button	TV	DVD	AUDIO
STANDBY	POWER	POWER	POWER
	MUTE	MUTE	MUTE
PVR			
TV			
DVD			
AUDIO			
1	DIGIT 1	1	INPUT 1
2	DIGIT 2	2	INPUT 2
3	DIGIT 3	3	INPUT 3
4	DIGIT 4	4	INPUT 4
5	DIGIT 5	5	INPUT 5
6	DIGIT 6	6	INPUT 6
7	DIGIT 7	7	INPUT 7
8	DIGIT 8	8	INPUT 8
9	DIGIT 9	9	INPUT 9
0	DIGIT 0, 11	0	INPUT 0
TV Portal			
MENU	MENU	MENU	MENU/MODE

Appendix

English

Button	TV	DVD	AUDIO
▶	TEXT EXPAND	PLAY	PLAY
II	TEXT HOLD	PAUSE	PAUSE
■	PIP INPUT	STOP	STOP
●	PIP MOVE	RECORD, OPEN CLOSE	RECORD
◀◀	PIP OFF	REWIND, SEARCH REVERSE; SCAN	DVD SEARCH REW, CD SEARCH REW, REW
▶▶	PIP	FAST FORWARD, SEARCH FORWARD; SCAN	FAST FORWARD, DVD SEARCH REW, CD SEARCH REW, REW
◀◀	TEXT MIX	SKIP -, TRACK -, CHAPTER -	DVD SKIP -, CD SKIP -, SKIP -
▶▶	TEXT OFF, TV	SKIP, TRACK +, CHAPTER +	DVD SKIP+, CD SKIP +, SKIP +
RED	RED	RED	RED
GREEN	GREEN	GREEN	GREEN
YELLOW	YELLOW	YELLOW	YELLOW
BLUE	BLUE	PROGRAMME	BLUE
MEDIA			
GUIDE	GUIDE	GUIDE	DSP MODE
OK	OK	OK	OK
UP	UP	UP	UP
LEFT	LEFT	LEFT	LEFT
RIGHT	RIGHT	RIGHT	RIGHT
DOWN	DOWN	DOWN	DOWN
EXIT	EXIT	EXIT, RETIRN	EXIT
BACK	LAST, RECALL; PP; LAST CHANNEL	CLEAR	REPEAT
VOL+	VOL+	VOL+	VOL+
VOL-	VOL-	VOL-	VOL-
i	INFO, OSD; DISPLAY	INFO, OSD; DISPLAY	INFO
LIST		LIST	
P+	P+	P+	P+
P-	P-	P-	P-
TEXT	TEXT	PVR MENU	
⏮?		AUDIO, LANGUAGE	SURROUND
SUB	SUBTITLE, LANGUAGE; CC	SUBTITLE	

Appendix

Button	TV	DVD	AUDIO
TV/RADIO	TV/DTV ATV/DTV; D/A; DTV/TV; DTV; DIGITAL	HDD, DVD/HDD	BAND
OPT+			RANDOM
	TEXT SUBPAGE TEXT TIME		RANDOM
	TEXT INDEX	TITLE	
	TEXT POSITION TEXT CANCEL; TEXT UPDATE	SLOW; STEP	
SOURCE	SOURCE, AV, 55INPUT; TV/AV	SOURCE, TV/DVD, TV/DISK	SOURCE, FUNCTION
SLEEP	SLEEP	SLEEP	SLEEP
V-FORMAT	TEXT SIZE; TEXT EXPAND; FTB		
WIDE	WIDE, FORMAT, 16:9, ASPECT; ZOOM	ZOOM	

Note: Some products may not respond depending on the manufacturer.

2. TV Code List

Brand	Code
A.R. Systems	102, 006, 080, 066
Accent	006
Acer	261, 278, 305
Acoustic Solutions	210, 312, 324, 370, 386, 428, 477
Acura	002
ADL	224
Admiral	043, 014, 015, 023
Advent	192, 342
Adyson	034, 035
AEG	211, 256, 327, 489
Agashi	043, 034, 035
AGB	094
Agef	014
Aiko	006, 061, 043, 074, 002, 004, 011, 028, 034, 035, 065
Aim	006, 171
Airis	316, 413, 473
Aiwa	139, 141, 445

Akai	102, 006, 098, 144, 145, 111, 061, 043, 074, 148, 232, 280, 128, 122, 461, 109, 462, 489, 094, 084, 083, 065, 035, 034, 033, 028, 023, 011, 004, 002, 154, 321
Akiba	006, 036, 080, 045
Akito	006, 044
Akura	006, 144, 134, 204, 043, 036, 002, 026, 045, 071, 298, 327, 376, 451
Alaron	034
Alba	006, 144, 134, 204, 087, 064, 036, 005, 108, 473, 455, 447, 388, 099, 084, 077, 072, 065, 059, 034, 023, 002
AlfaView	220
All-Tel	190, 238
Allorgan	032, 035
Allstar	006
Amitech	131, 241
Amoi	315
Amplivision	064, 035, 049

Amstrad	006, 204, 043, 036, 074, 002, 023, 026, 062, 065, 071, 094, 128, 410, 436, 451	Baird	011, 012, 020, 033, 035, 054, 218
Anam	006, 002	Bang & Olufsen	014
Anam National	006, 129	Barco	023
Andersson	210, 211	Basic Line	102, 006, 134, 204, 036, 080, 002, 023, 035, 045, 053, 066, 211
Anglo	043, 002	Bastide	035
Anitech	006, 043, 002, 045	Bauer	171, 344
Ansonic	006, 134, 064, 002, 017, 023, 042, 048, 066, 070, 285	Baur	006, 030, 061, 028, 056, 093, 096, 097, 101
AOC	120, 266, 335	Bazin	035
Apollo	083	Beaumark	027
Apro	420	Beko	006, 144, 086, 145, 111, 064, 072, 172, 361, 405
Arc En Ciel	020	Belson	138, 201, 215
Arcam	034, 035	Belstar	204
Ardem	006, 144	BenQ	223, 328, 329
Arena	006	Bensten	258, 436, 437
Aristona	102, 006	Beon	006, 072
ART	204	Berthen	134
Arthur Martin	023	Best	064
ASA	010, 014, 017, 018, 055	Bestar	006, 064, 066
Asberg	006	Bestar-Daewoo	066
Asora	002	Binatone	035
Asuka	043, 036, 034, 035, 045	Black Diamond	444, 204, 211
Atec	340, 387	Blackway	036, 045
Atlantic	006, 032, 034, 042, 049	Blaupunkt	030, 005, 080, 025, 028, 096, 101
Atori	002	Blue Media	340, 387
Auchan	023	Blue Sky	102, 006, 144, 134, 204, 145, 087, 036, 080, 091, 119, 045, 215, 229, 254, 265, 310, 361, 380, 445
Audiosonic	006, 144, 086, 145, 043, 064, 036, 002, 020, 035, 066, 190, 250, 405, 473	Blue Star	045
Audioton	086, 043, 064, 035	BlueH	391
Audiovox	079	Boca	361
Aumark	009	Boman	256
Autovox	014, 032, 035, 056, 097	Boots	002, 035, 044
AVC	472	Bork	265
Avious	352	Bosch	049
Awa	111, 005, 019, 002, 003, 035, 079, 271	BPL	006, 033, 045, 202
Axxent	002	Brandt	120, 144, 103, 020, 046, 052
Baier	192	Brimax	380
		Brinkmann	006, 134, 086, 072, 095

Appendix

Brionvega	006, 014, 062
Britannia	034, 035
Brother	043
Bruns	014
BSR	023
BTC	036
Bush	102, 006, 144, 134, 204, 138, 087, 061, 043, 036, 005, 108, 376, 373, 370, 361, 355, 352, 327, 388, 430, 431, 432, 440, 448, 451, 473, 476, 477, 478, 002, 033, 035, 044, 045, 056, 059, 065, 066, 095, 133, 164, 210, 213, 229, 232, 250
Canton	036
Capsonic	043
Carad	134, 204, 113
Carena	006, 080
Carrefour	006, 005, 010
Carver	025
Cascade	006, 002
Casio	006
Cat	373, 504
Cathay	006, 386
CCE	006
cello	397, 410, 418, 419, 420
Centrum	204
Centurion	006
Century	014
CGE	064, 023, 072
Changhong	180
Chimei	475, 415
Cimline	036, 002
Cineral	079
Cinex	128, 213, 327
Citizen	009
City	002
Clarivox	006, 010, 072
Classic	091
Clatronic	006, 144, 043, 064, 036, 002, 035, 049, 065, 256
Clayton	204
CMS	034

CMS Hightec	035
Concorde	002
Condor	006, 043, 064, 002, 034, 045, 049, 070, 072
Conia	179, 201, 298, 376
Conrac	172
Contec	006, 005, 002, 034
Continental Edison	087, 020, 046
Cosmel	006, 002
Crosley	014, 023
Crown	006, 144, 134, 204, 086, 145, 087, 111, 143, 064, 361, 135, 072, 071, 053, 033, 002
Crown Mustang	135
CS Electronics	036, 034
CTX	395
Curtis Mathes	009, 015, 021, 024, 079
Cybertron	036
Cytronix	246
D-Vision	102, 006, 451
Daewoo	102, 006, 124, 444, 036, 441, 406, 341, 338, 271, 249, 195, 192, 190, 164, 133, 119, 091, 079, 066, 035, 034, 002
Dainichi	036, 034
Daitsu	237
Dansai	006, 005, 002, 004, 033, 034, 035
Dansette	071
Dantax	144, 204, 086, 145, 064, 361, 445, 450
Datsura	033
Dawa	006
Daytek	221, 269, 271
Dayton	002, 221, 269
Daytron	006, 002, 066
De Graaf	098, 007, 023, 033
DEC	258
Decca	006, 011, 035, 044, 094, 118
Dell	235, 278
Denko	043
Denon	021

Denver	006, 108, 214, 256, 352, 410, 453, 473, 489	Elekta	043, 045
Desmet	006, 002, 014, 049	Element	376
DGM	436	Elfunk	204, 222
Diamant	006	ELG	006
Diamond	181	Elin	006, 098, 061, 002, 017, 056
DiBoss	293	Elite	006, 036, 049
Digatron	006	Elta	043, 002
Digihome	210, 370	Emerson	006, 144, 134, 444, 086, 061, 064, 010, 014, 027, 045, 049, 065, 119
Digiline	006, 134, 018	Emperor	045
Digimate	198	Envision	266
Digital Device	340	Epson	243, 184, 186
Digitek	310, 380	Erae	267
Digitrex	478	Erres	006
Digix Media	195	ESC	006, 035
Dixi	006, 002, 014, 035	Etron	002, 023
DL	199, 258	Eurofeel	043, 035
DMTech	260, 438, 449, 454, 456	Euroman	006, 043, 064, 034, 035
Domeos	134	Europa	006
Dream Vision	379	Europhon	006, 035, 094
DTS	002	Evesham	230, 340, 370, 382, 387
Dual	006, 204, 208, 035, 042, 054, 056, 095, 097, 164, 210, 219, 237, 468	Evesham Technology	387
Dual Tec	035	Evolution	395
Dumont	010, 011, 014, 017, 035	Excors	467
Durabrand	285, 361, 453	Expert	023, 032, 042
Dux	006	Exquisit	006
Dynatech	035	FairTec	268
Dynatron	006	Fenner	002, 066
e-motion	380	Ferguson	006, 120, 098, 103, 030, 204, 012, 020, 029, 046, 052, 054, 077, 292, 447, 476
E:max	256, 316	Fidelity	006, 061, 043, 023, 026, 029, 034, 065, 071, 093, 097
Easy Living	230, 326, 402	Filsai	035
Ecco	162	Finlandia	098, 061, 011, 023, 033, 055
ECE	006	Finlux	102, 006, 144, 145, 333, 327, 172, 122, 118, 094, 089, 084, 083, 070, 055, 035, 023, 018, 017, 014, 011, 010
Edison-Minerva	087	Firstline	102, 006, 144, 134, 204, 061, 341, 267, 265, 250, 215, 172, 119, 097, 070, 066, 056, 050, 035, 034, 033, 011, 002
Eiki	150		
Elba-Sharp	094		
Elbe	102, 006, 113, 036, 028, 035, 042, 048, 062, 070, 075, 094, 099, 121		
Elcit	014, 023, 094		

Appendix

Fisher	061, 064, 005, 008, 011, 014, 017, 033, 035, 056, 097
Flint	006, 113, 043, 036, 080, 011
Force	210
Forgestone	029
Formenti	006, 014, 023, 034, 049
Formenti-Phoenix	034, 049
Fortress	014, 015
Fraba	006, 064
Friac	006, 113, 064, 002, 091
Frontech	043, 002, 023, 035
Fujimaro	190
Fujitsu	002, 011, 032, 035, 042, 137, 173, 187
Fujitsu General	002, 032, 035, 137
Fujitsu Siemens	172, 211, 230, 246, 268, 369
Funai	144, 134, 043, 275, 336, 369, 407
Galaxi	006
Galaxis	006, 064
Gateway	394
GBC	036, 002, 023, 066
GE	015, 027, 045, 052, 079, 150, 442
GEC	006, 061, 011, 023, 035, 056, 094
Geloso	002, 023, 066
General	020, 046, 082
General Technic	002
Genexxa	006, 036, 002, 023, 071
Gericom	172, 190, 195, 220, 224, 246, 340, 388
Go Video	009
Gold	397, 413, 484, 485
Goldfunk	134
GoldHand	034
GoldStar	006, 144, 145, 111, 061, 001, 007, 020, 023, 027, 034, 035, 047, 067
Gooding	087
Goodmans	102, 006, 120, 144, 103, 134, 124, 444, 204, 087, 043, 036, 005, 478, 211, 232, 477, 250, 476, 271, 445, 355, 370, 373, 440, 376, 382, 383, 386, 002, 004, 011, 035, 047, 052, 054, 065, 066, 084, 091, 094, 119, 121, 133, 172, 195, 210

Gorenje	064
GPM	036
Gradiente	006, 025, 207
Graetz	144, 087, 061, 023, 053, 065, 211
Gran Prix	128
Granada	006, 098, 103, 005, 019, 038, 011, 023, 033, 035, 053, 054, 060, 081, 083, 094, 008
Grandin	102, 006, 144, 134, 204, 145, 113, 036, 080, 272, 270, 269, 246, 220, 215, 195, 190, 119, 066, 049, 045, 023, 002
Gronic	035
Grundig	102, 006, 030, 087, 142, 005, 108, 498, 476, 448, 447, 445, 430, 405, 370, 271, 267, 250, 225, 135, 121, 010, 101, 096, 028, 077
Grunkel	211
H & B	172, 456
Haier	138, 344, 392, 339
Halifax	043, 034, 035
Hallmark	027
Hampton	034, 035
Hanimex	036, 443
Hanns.G	402
Hannspree	262, 263, 264, 342, 401, 402, 463
Hanseatic	102, 006, 120, 144, 124, 061, 064, 172, 133, 097, 095, 091, 067, 056, 049, 048, 045, 035, 014, 002
Hantarex	006, 002, 094, 190, 260, 289
Hantor	006
Harsper	190
Harwa	162, 218, 238
Harwood	006, 087, 002, 071
Hauppauge	006
Havermy	015
HCM	006, 043, 036, 002, 035, 045, 071, 072
Hema	002, 035
Hemmermann	056, 097
Hifivox	020
Higashi	034
Highline	006, 043

Appendix

English

Hikona	036, 452	Ingersol	002
Hinari	006, 043, 036, 005, 002, 033, 059, 077, 443	Inno Hit	036, 002, 011, 035, 045, 047, 094, 211
Hisawa	144, 113, 036, 080, 045	Innovation	095
Hisense	102, 092, 165, 254, 265, 366, 491	Innowert	190, 246
Hit	014	Interbuy	006, 043, 002
Hitachi	006, 098, 124, 204, 208, 005, 019, 037, 146, 152, 153, 163, 169, 193, 197, 007, 206, 210, 217, 227, 295, 296, 330, 377, 399, 424, 483, 020, 021, 023, 027, 035, 054, 056, 060, 076, 081, 083, 084, 085, 089, 091, 094, 018, 106, 107, 011	Interfunk	006, 061, 014, 020, 023, 056, 093
Hitachi Fujian	019	Internal	102, 444, 119
Hitsu	113, 036, 080, 002	Intervision	006, 086, 087, 043, 036, 080, 002, 035, 045, 067, 095
HMV	014	Irradio	006, 036, 002, 047, 065, 147
Hoehner	144, 190, 211, 327	Isukai	006, 036, 080, 045
Home Electronics	111	ITC	035, 049
Hornophon	006	ITS	006, 043, 036, 034, 045, 065
Hoshai	036, 080, 045	ITT	098, 113, 061, 023, 029, 033, 053 055, 056, 083, 084, 097
Huanayu	034, 066	ITT Nokia	098, 113, 111, 061, 023, 033, 053 055, 056, 083, 084
Hugoson	198, 224	ITV	006, 043, 066
Humax	505, 299, 506, 507, 245, 319, 322, 411, 433, 479	JDV	451
HYD	271	Jean	005, 307, 308
Hygashi	034, 035	JEC	004
Hyper	002, 034, 035	JMB	102, 124, 077, 091
Hypersonic	061	JNC	378
Hypson	102, 006, 144, 134, 204, 086, 145, 043, 080, 035, 045, 118	Jocel	143
Hyundai	164, 190, 192, 241, 244, 271, 291, 317, 338, 340, 341, 439	Jouge	284
Iberia	006	Jubilee	102
ICE	006, 043, 036, 034, 035, 065	JVC	111, 036, 005, 129, 130, 015, 029 065, 072, 137, 149, 207, 264, 362 408, 496
ICeS	036, 034	Kaisui	006, 036, 080, 002, 034, 035, 045
iDEAL	327	Kamp	034
Igo	226	Kapsch	061, 017, 023, 032, 042
IIsonic	271, 308, 342	Karcher	144, 113, 111, 043, 064, 045, 164, 327, 451
Iiyama	193, 198, 224	Kathrein	102, 195
Imperial	006, 064, 056, 072, 121, 487	Kawa	065
Indiana	006	Kawasho	034
InFocus	212, 220, 283	KB Aristocrat	023
Ingelen	144, 113, 087, 023	Kendo	006, 204, 113, 064, 062, 067, 070, 095, 099, 128, 210, 285, 333
		Kennedy	023, 032, 075

Appendix

Kennex	204
Keymat	258, 300, 398, 436, 437
Kingsley	034
Kioto	142
Kiss	170
Kiton	006, 134
Kneissel	102, 006, 113, 064, 042, 048, 062 066, 070, 075, 091
Kobra	290
Kolster	006, 036, 056
Konig	006, 016
Konka	006, 144, 036, 065, 072, 126, 158, 201
Kontakt	087
Korpel	006
Korting	064, 014, 049
Kosmos	006
Kotron	071, 440
Koyoda	002
Kreisen	192, 293
KTV	035
Kuba	056
Kyoshu	071, 072
Kyoto	023, 034, 035
L&S Electronic	144, 172, 190
LaSAT	086
Lava	293
Lavis	204
Leader	002
Lecson	006
Lemair	070
Lenco	006, 108, 017, 066, 352, 452
Lenoir	002, 214
Lentec	316
Lexsor	218, 303
Leyco	006, 043, 011
LG	102, 006, 144, 145, 138, 061, 064, 248, 281, 354, 367, 368, 384, 396, 416, 417, 425, 426, 215, 209, 067, 047, 035, 034, 027, 023, 002, 001, 236, 257

Liesen & Tter	006
Liesenkotter	006
Lifetec	006, 144, 134, 204, 208, 036, 002 066, 095, 137
Lloyd's	002
Local India TV	002, 033, 109, 280
Lodos	204, 210
Loewe	006, 064, 014, 048, 093, 094, 123 131, 167, 414, 434
Logic	494
Logik	204, 001, 003, 029, 162, 195, 224, 292, 376, 464, 465, 466
Logix	134, 095
Luker	451
Luma	204, 002, 023, 032, 042, 062, 066, 070
Lumatron	006, 043, 012, 023, 032, 035, 042
Lux May	006, 002
Luxor	098, 204, 061, 023, 033, 035, 047, 055, 056, 060, 083, 084, 122, 211
LXI	022
M Electronic	006, 144, 124, 030, 061, 361, 133, 093, 089, 084, 070, 066, 056, 055, 054, 046, 035, 034, 023, 020, 018, 017, 002
Madison	006
MAG	298, 376
Magnadyne	014, 023, 094, 097
Magnafon	012, 034, 094
Magnavox	005, 003
Magnin	442
Magnum	006, 144, 145, 128, 242
Mandor	043
Manesth	006, 043, 004, 035, 049
Manhattan	006, 134, 204, 164, 192, 237, 293
Maqma	290, 340, 378, 404
Marantz	102, 006, 071, 140, 277, 317
Marelli	014
Mark	006, 144, 145, 002, 034, 035, 066
Marks and Spencer	420
Marquant	478
Mascom	327, 432

Master's	091
Masuda	036
Matsui	102, 006, 144, 030, 204, 087, 005, 080, 074, 153, 195, 097, 094, 369, 445, 077, 447, 065, 059, 056, 052, 044, 035, 033, 028, 011, 008, 004, 003, 002
Matsushita	129
Maxent	394, 160
Maxim	213, 327, 451
Medialine	220, 449
Mediator	102, 006
Medion	102, 006, 144, 134, 204, 138, 208, 172, 195, 093, 040, 210, 213, 219, 230, 285, 327, 370, 440, 456
Megas	113
Megatron	021, 027
MEI	204
Memorex	204, 002, 009, 027
Memphis	002, 011
Mercury	006, 002
Metronic	120
Metz	006, 134, 030, 108, 014, 028, 063, 096, 101, 211, 318
MGA	027, 442
Micromaxx	006, 134, 204, 121, 172, 256, 456
Microspot	343
Microstar	172
Mikomi	204, 153, 210
Minato	006
Minerva	030, 087, 019, 010, 028, 094, 096, 101
Minoka	006, 071
Mirai	369, 423, 482
Mirror	440
Mistral Electronics	029
Mitsai	327
Mitsubishi	102, 006, 204, 005, 019, 014, 015, 027, 093, 096, 191, 311
Mivar	034, 035, 047, 048, 094, 112
Mogen	374, 410
Monaco	002

Morgan's	006
Motorola	015
MTC	064, 009, 034, 056, 093
MTEC	044
MTlogic	144, 473
Multibroadcast	029
Multitec	006, 134, 204, 086, 327
Multitech	006, 086, 043, 064, 002, 034, 035
Murphy	017, 023, 034
Musikland	036
Mx Onda	298, 376
MyCom	271
Myrica	369
Myryad	102
NAD	006, 061, 190
Naiko	006, 111, 157, 451
Nakimura	006, 066
Narita	451
NAT	038
National	038
NEC	005, 002, 003, 025, 035, 040, 049, 066, 140, 239, 379
Neckermann	102, 006, 064, 014, 028, 049, 056, 070, 072, 101
NEI	006, 204, 065
Neon	237, 389
Neovia	190, 192, 220, 260, 267, 268, 271, 273, 449, 454
Nesx	389
Netsat	006
NetTV	160
Neufunk	102, 006, 144, 113, 036, 002
New Tech	102, 006, 002, 035, 054
New World	036
Nextier	338
NFREN	170
Nicam	097
Nicamagic	034
Nikkai	006, 043, 036, 005, 002, 004, 011, 034, 035
Nikkei	144

Appendix

Nikko	027
Nobliko	010, 034
Nogamatic	020
Nokia	098, 113, 111, 061, 023, 033, 049, 053, 055, 056, 066, 083, 084, 089, 122
Norcent	266, 335
Nordic	035
Nordmende	006, 144, 103, 030, 020, 046, 054, 242, 280, 499
Normerel	006
Northern Star	220
Novatronic	006, 018, 066
Novita	273
Oceanic	098, 061, 023, 033, 083
Odeon	043
Okano	006, 043, 064, 002, 011
Olidata	271
Omega	043
Onida	207, 226
Onimax	144
Onn	380, 465, 477, 495, 497, 500, 501
Onwa	036, 074, 065, 109
Onyx	380, 397
Opera	006
Optimus	129, 024
Optoma	234, 346, 371
Orbit	006
Orcom	300
Orion	102, 006, 144, 204, 467, 458, 457, 456, 448, 445, 443, 385, 218, 195, 131, 097, 094, 077, 071, 059, 050, 049, 003
Orline	006, 036
Ormond	134, 204
Orsowe	094
Osaki	102, 006, 043, 036, 011, 035, 044, 059, 066, 071
Osio	006, 047
Oso	036
Osume	006, 036, 005, 011
Otic	298, 376

Otto Versand	102, 006, 030, 061, 005, 038, 028, 020, 035, 049, 054, 056, 015, 093, 096, 097, 101
Pacific	102, 144, 204, 208, 077, 256
Packard Bell	254, 293
Pael	034
Palladium	102, 006, 144, 064, 208, 035, 056, 028, 070, 072, 095, 101, 023, 121, 131, 014
Palsonic	006, 138, 043, 001, 035, 072, 218, 238, 303
Panama	006, 043, 002, 034, 035
Panasonic	006, 098, 061, 129, 038, 023, 063, 094, 187, 251, 294, 353, 359, 279, 306
Panavision	006, 070
Pathe Cinema	023, 034, 048, 049
Pathe Marconi	020
Pausa	002
Penney	009, 022, 027, 442
Perdio	006, 011, 023, 034, 045, 049
Perfekt	006
Petters	006
Philco	006, 064, 014, 021, 072
Philex	029
Philharmonic	035
Philips	102, 006, 061, 459, 435, 429, 395, 310, 302, 297, 247, 125, 110, 101, 073, 066, 054, 029, 014, 002
Phocus	144, 242, 250, 361, 405
Phoenix	006, 086, 064, 011, 014, 023, 034, 049
Phonola	102, 006, 014, 029, 034
Pilot	142
Pioneer	006, 086, 061, 064, 020, 023, 024, 046, 073, 093, 136, 159, 233, 277, 286, 381
Pionier	086, 064, 327
Plantron	006, 043, 002
Playsonic	006, 144, 145, 035, 053, 361, 405
Polaroid	298, 312, 355, 376, 383, 390, 240
Poppy	002
Portland	066, 119

Powerpoint	006, 138, 087, 201	RBM	010
Prandoni-Prince	061, 094	RCA	120, 015, 442
Precision	035	RealTV	237
Premier	199	Reality	237
Prima	043, 002, 071, 218, 238, 303	Recor	006
PrimeView	340	Rectiligne	006
Prinston	204, 145	Rediffusion	098, 061, 005, 055
Prinz	061, 011, 056, 097	Redstar	006
Profex	061, 002, 023	Reflex	006, 134, 204
Profi	002	Relisys	190, 192, 193, 194, 220, 221, 271, 310, 333, 338, 341, 355, 390
Profilo	327	Remotec	006, 015, 021, 026
Profitronic	006	Reoc	144
Proline	006, 120, 124, 204, 011, 050, 070, 118, 121, 271, 324, 386, 450	Revox	006
Proscio	002	Rex	043, 023, 032, 042, 070, 099
Prosonic	006, 144, 134, 064, 034, 035, 065, 066, 389, 403, 428, 437, 467, 486	RFT	006, 043, 011, 014
Protech	006, 134, 204, 086, 043, 002, 035, 045, 056, 072	Roadstar	006, 144, 134, 204, 145, 043, 036, 002, 045, 072, 214, 440
Proton	027	Robotron	014
ProVision	102, 006, 144, 256	Rolson	178, 267
Proxima	150, 152	Rover	193
Pvision	192, 310, 456	Royal Lux	064, 052, 071
Pye	102, 006, 014, 056, 066, 101	Saba	120, 098, 144, 103, 061, 014, 020, 023, 046, 052, 054, 090, 094, 335
Pymi	002	Sagem	113, 080, 182, 253, 337
QONIX	352	Saisho	043, 002, 003, 023, 035, 094, 097
Quadral	036	Saivod	006, 134, 204, 143, 211, 327, 451
Quasar	002, 190	Sakai	023
Quelle	006, 134, 030, 204, 061, 101, 097, 096, 093, 056, 028, 020, 017, 010, 003	Salora	098, 061, 023, 033, 047, 056, 060, 084, 094, 118, 122, 213, 219, 327
Questa	005	Salsa	052
R-Line	006	Sambers	094
Radialva	036, 023	Sampo	394, 160
Radiola	102, 006, 035	Samsung	102, 006, 043, 064, 108, 115, 231, 252, 276, 287, 332, 345, 350, 351, 372, 442, 474, 488, 490, 492, 228, 176, 175, 127, 095, 047, 035, 034, 033, 027, 023, 011, 009, 002
Radiomarelli	006, 014, 094	Sandra	034, 035
RadioShack	006, 027	Sansui	006, 142, 131, 148, 189, 267, 326
Radiotone	006, 134, 204, 043, 064, 002, 071, 072, 128	Santon	002
Rank	010		
Rank Arena	005		

Appendix

Sanyo	204, 064, 005, 019, 442, 370, 363, 358, 357, 356, 222, 200, 150, 140, 097, 053, 048, 035, 034, 033, 025, 023, 017, 011, 008, 003, 002, 240
SBR	102, 006, 029
Schaub Lorenz	098, 144, 086, 111, 061, 056, 066, 215, 256, 267
Schneider	102, 006, 144, 134, 204, 061, 208, 036, 451, 450, 293, 128, 097, 095, 065, 056, 054, 042, 035, 023, 010
Scotch	027
Scotland	023
Scott	214
Sears	022, 026, 027
Seaway	124
Seelver	204
SEG	006, 134, 204, 087, 043, 036, 005, 285, 211, 210, 119, 062, 056, 035, 034, 002
SEI	006, 014, 023, 032, 056, 094, 097
Sei-Sinudyne	006, 014, 032, 094, 097
Seleco	023, 032, 042, 055, 062, 065, 070, 075, 099
Semp	022
Sencora	002
Sentra	004
Serino	113, 080, 015, 034
Sharp	005, 130, 216, 015, 029, 088, 094, 177, 274, 334, 365, 409, 166, 288
Shintoshi	006
Shivaki	006, 077
Siarem	014, 023, 094
Siemens	006, 030, 028, 096, 101
Siera	102, 006
Siesta	064
Silva	006, 061, 034, 128
Silva Schneider	006, 213, 327, 451
Silvano	108
Silver	145, 061, 005
SilverCrest	204
Singer	006, 074, 002, 014, 052, 075
Sinotec	162

Sinudyne	006, 061, 014, 023, 032, 056, 094, 097
Skantic	060
SKY	006, 195, 271, 300, 307, 308, 340, 341, 342, 343, 344, 391, 400, 421
SKY Brazil	195
Sliding	170, 190, 195, 256, 269, 270, 272
SLX	134
Smaragd	087
Soemtron	190, 246
Sogera	049
Sogo	271, 473
Solavox	006, 098, 061, 011, 023
Sonawa	036
Soniko	006
Sonitron	064, 033, 035, 053
Sonix	271, 389
Sonneclair	006
Sonoko	006, 043, 002, 035, 045
Sonolor	098, 061, 023, 033, 045
Sontec	006, 064, 002
Sony	006, 301, 005, 446, 412, 393, 375, 360, 325, 255, 203, 185, 174, 058, 003
Sound & Vision	036, 066
Soundesign	027
Soundwave	006, 204, 145, 049, 072, 420
Spectra	002
Squareview	026
Ssangyong	002
Standard	006, 204, 036, 002, 035, 049, 066, 380
Starlite	006, 043, 002, 023
Stenway	036, 045
Stern	043, 023, 032, 042, 070, 099
Strato	006, 043, 002, 403
Strong	210, 211
Stylandia	035
SunBrite	284
Sungoo	470
Sunkai	113, 087, 036, 080, 050, 059, 190

Sunstar	006, 043, 002, 065	Technotrend	316, 378
Sunstech	456	Techwood	204, 211
Sunwood	006	Teckton	271
Superla	034, 035, 094	Tecnimagen	102
SuperTech	102, 006, 036, 002, 034	Teco	205
Supra	002, 066	Tedelex	002, 035, 380
Susumu	036, 046, 052	Teiron	002
Sutron	002	Tek	168
SVA	108, 190	Teknika	009
Swedx	340	TELE System	192
Swissflex	481	Teleavia	046, 054
Swisstec	481, 480, 422, 421, 401, 400, 391, 344, 343, 342, 341, 340, 308, 307, 300, 271, 195, 190	Telecor	006, 036, 023, 035, 042
Sydney	034, 035	Telefunken	006, 120, 144, 103, 086, 320, 202, 105, 090, 082, 055, 054, 052, 046, 020, 016, 012, 348
Sylvania	026, 275, 427	Telefusion	006
Sysline	006	Telegazi	006, 043, 036, 023, 042
Sytong	034	Telemagic	150
Tactus	044	Telemeister	006, 049
Tandberg	061, 020, 063	Telesonic	006
Tandy	036, 011, 015, 023, 035	Telestar	102, 006
Targa	237, 267	Teletech	006, 134, 204, 002
Tashiko	005, 023, 025, 034, 035	Teleton	005, 032, 035, 042, 056
Tatung	006, 003, 011, 035, 044, 094, 118, 215, 230, 256, 267, 326, 327, 382, 383, 395	Televideon	023, 034, 049
TCL	142, 321	Televiow	006
TCM	144, 172, 242, 456	Tempest	002
Teac	006, 144, 134, 138, 143, 043, 080, 002, 025, 026, 027, 056, 093	Tennessee	006
Tec	006, 002, 035, 042, 052, 082	Tensai	006, 204, 145, 036, 002, 017, 018, 035, 049, 065, 066, 067
Tech Line	006, 134, 211, 285	Tenson	002, 049
Tech Lux	214	Tevion	102, 006, 144, 134, 204, 208, 468, 405, 403, 376, 355, 327, 298, 246, 242, 232, 230, 172, 128
Techica	036	Texet	036, 002, 034, 035, 066
Technema	049	Texla	165
Technica	118, 451	Thes	467, 469, 471
Technics	102, 129	Thomson	006, 120, 103, 020, 046, 052, 054, 056, 082, 335
Technika	422, 428, 465, 468, 480, 493	Thorn	006, 061, 005, 100, 096, 093, 091, 054, 052, 044, 029, 020, 017, 012, 011, 004
TechniSat	102, 131, 237	Thorn-Ferguson	012, 029, 052, 054, 091
Technisson	144, 242, 361		
Technosonic	102, 120, 091, 195, 256, 258, 436, 437, 451, 468		

Appendix

Time	378, 454, 455
Tiny	238
TMK	027
Tobishi	310
Tokai	006, 134, 204, 002, 011, 023, 035, 066
Tokaido	204
Tokyo	004, 034
Tomashi	036, 045
Topline	134, 204
Toshiba	030, 204, 005, 115, 129, 092, 447, 364, 313, 304, 242, 212, 211, 183, 100, 039, 022, 020, 010, 009, 004, 236, 257
Tosumi	451
Towada	035, 056
Toyoda	002
Trakton	043
TRANS-continent	102, 006, 134, 204, 035, 118, 190, 269, 272
Transonic	006, 108, 002
Transtec	034
Trident	035, 094
Trio	298, 376
Tristar	043, 036, 029
Triumph	102, 006, 055, 094
Tsoschi	045
TVTEXT 95	102
TWF	432
Uher	006, 086, 064, 032, 042, 049, 066, 072, 084
Ultravox	006, 014, 023 034, 066
UMC	308, 340, 343, 391, 400, 422, 480, 481, 493
Unic Line	006, 080, 083
United	006, 144, 204, 145, 108, 397, 445, 451
Universal	006
Universum	006, 134, 030, 204, 061, 043, 064, 005, 115, 070, 072, 083, 084, 089, 093, 096, 097, 101, 122, 172, 211, 285, 062, 056, 055, 047, 035, 025, 020, 018, 017, 010, 003, 002

Univox	006, 014, 023
V2max	190
V7 Videoseven	195, 224, 237, 271, 369, 394
Venturer	324, 386, 428
Vestel	006, 134, 204, 035, 211, 333, 370
Vexa	006, 002
Vibrant	044
Victor	005
Videocon	092
Videologic	036, 034
Videologique	036, 034, 035
VideoSystem	006
Videotechnic	034, 035, 049, 066
Videoton	023, 060
Vidikron	150, 277
Vidtech	027
Viewpia	192
Viewsonic	307, 308, 323, 335, 349, 391, 394, 259, 331
Visiola	034
Vision	006, 035, 049
Vistar	032
Vistron	265, 460
Vivax	250, 258
Vivid	250
Vortec	006
Voxson	006, 014, 023, 072
Waltham	006, 134, 204, 020, 035, 060, 072, 077
Wards	009, 022, 024, 027
Watson	006, 144, 134, 204, 036, 002, 023, 049, 095, 271, 285
Watt Radio	023, 034, 056, 097
Wega	006, 005, 014
Wegavox	002
Welltech	014
Weltblick	035, 049
Weltstar	204
Westinghouse	189
Wharfedale	102, 006, 095, 189, 256, 327, 370, 452, 453, 477, 502

Appendix

English

White Westinghouse	006, 034, 049, 119
Wilson	102
Windsor	134, 204
Windstar	045
Windy Sam	102
World-of-Vision	190, 193, 195, 198, 224, 242, 246, 340, 389
X-View	215
Xenius	124, 133
XLogic	188
Xomax	397
Xoro	218, 224, 229, 303, 404, 503
Xrypton	006
Yakumo	342
Yalos	398
Yamaha	169, 314, 330, 184
Yamishi	006, 036, 080, 035, 045
Yokan	006
Yoko	006, 043, 064, 036, 002, 034, 035, 053
Yorx	036
Ytawai	316
Zanussi	032, 035
Zenith	119, 236
Zenor	053
TV/VCR Combo	
Aiwa	445
Amstrad	026
Beko	086
Black Diamond	444
Blue Sky	119, 445
Daewoo	444, 119
Dantax	445
Emerson	444, 119
Ferguson	120, 012
Fidelity	026
Finlux	017
Firstline	119
GE	015, 442
GoldStar	006

Goodmans	444, 066, 119, 445
Grandin	119
Grundig	102, 006, 030, 101, 445
Hanimex	443
Hinari	005, 443
Internal	444, 119
Irradio	147
LG	027
Magnin	442
Matsui	445
MGA	442
Mitsubishi	102, 015
Orion	443, 445
Penney	442
Philips	102, 006
Portland	119
Radiola	102
RCA	015, 442
Saba	120
Samsung	442
Sanyo	442
Schneider	102, 006
SEG	119
Sharp	015
Siemens	006
Sony	301, 446
Teac	026
Technics	102
Thomson	120
United	445
Universum	018
White Westinghouse	119
TV/VCR/DVD Combo	
Bush	448
Ferguson	447
Grundig	448
Matsui	447
Orion	448

Appendix

3. DVD Code List

Brand	Code	Brand	Code
3D LAB	038	Belson	136, 181
4Kus	106	Belsonic	136
A-Trend	063	Berthen	156
Acoustic Solutions	066, 062, 114, 193, 208	Binatone	181
AEG	073, 077, 058, 075, 113, 181	Biostek	148
AFK	105, 181	Black Diamond	062
Airis	057, 081, 109, 117, 216	Blu:sens	113, 117
Aiwa	036, 115	Blue Nova International	117
Akai	077, 075, 093, 100, 113, 162, 212	Blue Sky	059, 077, 057, 062, 086
Akira	149	BlueTinum	136
Akura	093, 103, 113, 136	Boghe	094
Alba	038, 059, 066, 057, 062, 064, 103, 140, 162, 185, 216	Boman	093
Alize	104	Bose	189
Altacom	109	Brainwave	073, 100
Amitech	073, 013, 087	Brandt	033, 039
Amstrad	073, 077, 062, 104, 136	Broksonic	059
Amuseer	120	Bush	066, 082, 057, 062, 064, 065, 103, 120, 127, 129, 140, 162, 172, 216, 217
AMW	091	Cambridge Audio	070
Ansonic	082, 071, 120, 136	Cat	076, 181
Apex Digital	057, 094, 116, 134	CCE	066
Arena	100	cello	164, 198, 205
Aristona	038, 052, 214	Centrum	058, 062, 076, 110, 181, 185
ASCOMTEC	181	CGV	070, 100
Asono	109	Chili	135, 136
Atacom	109	Cinea	085
Audiola	149, 224	Cinetec	062, 091
Audiosonic	181, 216	CJ Digital	156, 204
Audix	062	Classic	066, 164
Autovox	062	Clatronic	057, 058, 075, 113, 181
Auvio	086	Clayton	062
Axion	066	CMX	156
Basic Line	062, 185	Coby	066, 120
Baze	093	Codex	113
BBK	109	Commax	117, 135
Bellagio	094	Compacks	081, 211
Bellwood	081	Contel	075
		Continental Edison	082, 091

Appendix

English

Crown	073, 062, 100	ECC	066
Cybercom	082	Eclipse	065, 070
CyberHome	063	Elfunk	062, 087
Cytron	061, 119	Elin	073
D-Vision	100	Ellion	013, 087
Daenyx	091	Elta	073, 057, 075, 087, 100, 104, 113, 161, 204
Daewoo	073, 018, 061, 063, 083, 091, 129, 130, 159	Eltax	113, 117, 149
Dalton	097	Emerson	043, 061
Dansai	073, 100, 162	Enterprise	043
Dantax	038, 077, 062, 065, 122	EuroLine	058, 075, 100, 113, 120, 131, 156
Daytek	091	F&U	203
Dayton	091, 106	Ferguson	059, 062, 093, 162, 164
DCE	082	Finlux	067, 043, 073, 057, 070
Decca	073, 100	Fintec	140
Denon	032, 049, 151	Firstline	062, 086, 090, 140
Denver	057, 075, 093, 117, 128, 136, 148, 181, 216	Fisher	056
Denzel	055	Funai	059, 058
Desay	086	Gateway	106
Dgtec	057	GE	064
Difrnce	211	Global Link	109
Digihome	062	Global Solutions	072
DigiLogic	062, 159	Global Sphere	105
Digitech	172	Go Video	090
Digitek	013	Gold	198
Digitrex	217	GoldStar	067, 043
Digix Media	081	Goodmans	066, 077, 062, 065, 094, 103, 105, 116, 140, 164, 181, 217
DiK	082	GoWell	156
Dinamic	075	GPX	067
Disney	082	Graetz	055
DiViDo	061	Gran Prix	082, 093
DK Digital	082, 116	Grandin	062, 113, 116, 204
Dragon	082	Greenhill	064
DreamX	104	Grundig	038, 039, 059, 077, 056, 061, 062, 094, 097, 129, 156, 162, 164, 172
DSE	164	Grunkel	073, 082, 077, 136
Dual	066, 082, 077, 055, 062, 129, 140	GVG	073
Durabrand	082, 058, 062, 128, 140, 159	H & B	013, 062, 085, 087, 113, 204
E:max	026, 113, 117, 156, 161		
eBench	105		

Appendix

Hanseatic	067, 077
Harman/Kardon	060, 111, 135
Harwa	211
HCM	075
HDT	061
HE	066, 181
Henss	062
Hikona	124
HiMAX	086
Hitachi	042, 054, 062, 185
Hiteker	057, 181
Hoeher	082, 062, 081, 094, 109, 140
Home Electronics	073, 066
Home Tech Industries	109, 156, 181
HotMedia	105
Humax	052, 225
HYD	113
Hyundai	087
Ingelen	075
Inno Hit	062
International	159
Irradio	090, 100, 109, 113
ISP	059
it's	064
Jamo	097
Jaton	055
JDB	066
JGC	140
JMB	059
JVC	045, 038, 033, 107, 147, 176
Kansas Technologies	113, 140
Kazuki	136
Kendo	082, 057, 062
Kennex	073, 062, 093
Kenwood	032, 037
KeyPlug	156
Kiiro	073
King Vision	136, 156
Kiss	055, 085

KXD	088, 117, 135, 181
Lawson	072
Leiker	091
Lenco	073, 062, 124
Lexia	072
LG	067, 043, 077, 090, 143, 179, 186
Lifetec	082, 119
Limit	072
LiteOn	106, 126, 157, 165
LM	156
Lodos	062
Loewe	038, 067
Logic	222
Logik	062
Logix	061
Lumatron	067, 059, 061, 062, 100, 117, 172, 215
Lunatron	067
Luxman	042
Luxor	062, 064, 094, 162, 164
Magnat	181
Magnavox	038, 033, 052, 058, 062, 103
Magnex	065
Magnum	129
Majestic	149, 224
Manhattan	061, 062
Manta	136
Marantz	038
Mark	062
Marquant	073, 217
Matsui	059, 057, 062, 094, 162, 164
Maxim	062, 091, 114
MBO	066, 164
MDS	062
Mecotek	073
Mediencom	070
Medion	067, 082, 119, 157
MEI	077
Memorex	082

Appendix

English

Metz	041, 035, 062, 185	Oopla	106
MiCO	065, 070, 116	Opera	215
Micromaxx	059, 162	Optim	086
Micromedia	038, 033	Optimus	035
Micromega	038	Orbit	091, 156
Microsoft	163, 194	Orion	059, 062, 113, 127, 162
Microstar	082	Ormond	062
Minax	062	Pacific	082, 072, 077, 062, 071
Minoka	073, 100	Packard Bell	082, 117, 158
Mitsubishi	062	Palladium	059, 062, 179
MixSonic	101	Panasonic	032, 146, 155, 173, 178, 180
Mizuda	073	Panda	076, 135
Monyka	055	peekTton	093, 109
MPX	086	Philips	038, 033, 052, 058, 106, 118, 121, 137, 167, 170, 191, 192, 195, 196, 210, 209
MTlogic	216	Pioneer	041, 035, 016, 048, 133, 141, 145, 175, 183, 220
Mustek	066, 148, 164	PJ	181
Muvid	136, 156, 204	Play It	156
Mx Onda	070, 116	Plu2	087
Myryad	116	Polaroid	134
Mystral	082	Powerpoint	091
NAD	067	Prinz	082
Naiko	073, 094	Prism	082, 061
Neom	136, 156	ProCaster	094, 200
Neon	013	Proline	057, 094, 122, 165, 193
Neufunk	055	Proson	062
Nevir	073, 082, 057	Prosonic	130, 208
Nexius	077	ProVision	066, 117, 136, 181
Next Base	160	Pye	038, 052
NFREN	081	QONIX	077
Nikkai	181	Quartek	158
Nikkei	116	Radionette	067, 090, 179
Norcent	181	Radiotone	062
Nordmende	082	Raite	055
Nortek	204	RCA	168
Oasis-Media	148	REC	032
Olidata	057	Redstar	073, 071, 075, 093, 125, 181
Onkyo	033, 046, 169	Relisys	119
Onn	223		
Onyx	198		

Appendix

Reoc	072, 092	SKY	013
Revoy	085	Skymaster	066, 072
Richmond	113	Skyworth	093
Roadstar	066, 057, 062, 093, 110, 172	Sliding	100
Ronin	091	SM Electronic	066, 072, 105
Rotel	045	Smart	061, 062
Rowa	064	Sogo	136, 203, 216
Rownsonic	076	Sontech	131
Saba	039, 204	Sony	036, 089, 096, 098, 139, 142, 150, 171, 177, 184, 188, 190, 201, 202
Saivod	082, 071	Sound Color	113
Salora	067	Soundmaster	072
Sampo	117	Soundwave	062, 140
Samsung	032, 042, 017, 022, 069, 099, 152, 166, 182, 197, 199, 219, 080	Standard	082, 072, 075, 093
Sansui	059, 013, 070	Star Clusters	105, 110
Sanyo	056, 062	Starmedia	109
Scan	061, 087	Stein	148
ScanMagic	066, 164	Strato	105, 123
ScanSonic	162	Strong	062
Schaub Lorenz	073, 075, 100, 104, 156	Sunkai	073, 087
Schneider	038, 082, 052, 077, 061, 062, 075, 090, 110, 122, 214	Sunstar	001
Schoentech	062	Sunstech	082, 148, 149
Scientific Labs	072	Suntronic	001
Scott	057, 097, 113, 125, 181	Sunwood	075, 093
Seeltech	109, 156	Supervision	072, 105
SEG	055, 062, 091, 140, 185, 215	Supratech	203, 213
Shanghai	057	SVA	057
Sharp	058, 062, 090, 127	Swisstec	206, 218
Sherwood	067, 064	Sylvania	058, 207
Shinco	064	Symphonic	058
Siemssen	123	Synn	072
Sigmatek	109, 200	Syscom	081
Siltex	109	Sytech	148, 200
Silva	075, 093	Tamashi	125
Silva Schneider	067, 082, 090, 093	Tandberg	062, 162, 185
SilverCrest	014, 015, 105	Tangent	117
Sinudyne	116	Targa	110, 157, 179
Sistemas	057	Tatung	073, 162
Skantic	038, 062	Tchibo	067

Appendix

English

TCM	067, 077	Walkvision	064
Teac	067, 072, 061, 064, 071, 110	Waltham	062, 140
Tec	093	Welkin	082
Technica	162	Wellington	062
Technics	032, 178	Weltstar	062
Technika	073, 082, 100, 140, 162, 206, 208, 218, 221	Wharfedale	077, 062, 070, 100, 124, 172
Technisson	100	Wilson	082, 113
Technosonic	100	Windsor	062
Techwood	062, 140, 185	Windy Sam	042
Telefunken	039	Wintel	101
Teletech	072, 062	Woxter	104, 109
Tensai	073	Xbox	163, 194
Tevion	093, 097, 110, 123, 131, 164, 181, 215	Xenius	077
Textorm	136	Xomax	198
Theta Digital	041	Xoro	108, 226
Thomson	039, 116, 160, 168	Yakumo	094
Time	013	Yamada	091, 094, 104, 106, 126, 135, 136
Tokai	077, 055, 075, 093, 113	Yamaha	032, 038, 052, 079
Tom-Tec	076, 148	Yamakawa	055, 091, 215
Top Suxess	109	Yukai	066, 164
Toshiba	033, 059, 132, 138, 153, 154, 169, 187	Zenith	033, 043
TRANS-continents	082, 081, 091, 113, 117	TV/DVD Combo	
Tredex	086	Acoustic Solutions	193, 208
Trevi	082	Airis	216
TSM	109	Akai	212
TVE	062	Alba	216
Umax	104	Audiosonic	216
UMC	206, 218, 221	Bush	062, 216, 217
United	059, 066, 058, 062, 075, 081, 100, 105, 113, 120, 131, 156, 172, 198	cello	198, 205
Universum	067, 043, 077, 062, 090, 110, 140	Dantax	122
Vecatech	136	Denver	128, 216
Venturer	077, 169, 193, 208	Digitrex	217
Vestel	062, 140, 185	Gold	198
Vieta	061	Hikona	124
Voxson	066, 082	Logic	222
Waitec	066, 104, 109, 113	Marquant	217
		MTlogic	216
		Onn	223
		Onyx	198

Appendix

Philips	210
Proline	193
Prosonic	208
Sliding	100
Sogo	216
Swisstec	218

Technika	208, 221
UMC	221
Venturer	193, 208
TV/VCR/DVD Combo	
Ferguson	059
Matsui	059

4. VCR Code List

Brand	Code
Accent	009
Adventura	001
Adyson	009
Aiwa	003, 028, 001, 029, 002, 068, 102
Akai	028, 029, 023, 012, 020
Akiba	009
Akura	009
Alba	010, 021, 028, 001, 009, 029, 023
Allorgan	020
Allstar	010
America Action	021
Amstrad	021, 001, 009
Anam	021, 003, 019, 020
Anam National	019
Anitech	009
Ansonic	001
Aristona	010
ASA	010, 003
Asha	020
Asuka	010, 003, 001, 009
Audiolab	010
Audiosonic	021
Audiovox	003
AVP	001, 029
Awa	003, 024, 005
Baird	021, 001, 011, 012
Basic Line	021, 009, 011
Beaumark	020
Beko	011

Bell & Howell	011
Bestar	021
Black Diamond	051
Black Panther	021
Blaupunkt	010, 019
Blue Sky	021, 003, 028, 051, 009, 029, 031, 068, 102
Bondstec	009
Brandt	024, 025
Brinkmann	028
Bush	010, 021, 028, 001, 051, 009, 029, 023, 068
Calix	003
Carena	010
Carrefour	006
Carver	010
Casio	001
Cathay	021
CCE	021, 009
Centrum	044
CGE	001
Cimline	009
Cineral	021
Citizen	021, 003
Clatronic	001, 009
Colt	009
Combitech	029
Condor	021
Craig	003, 009, 020
Crown	021, 003, 009, 031

Appendix

English

Cybernex	020	GEC	010
Cyrus	010	General Technic	028
Daewoo	021, 050, 051, 029, 006	Genexxa	011
Dansai	021, 009	Go Video	030, 102
Dantax	029, 068	GoldHand	009
Daytron	021	GoldStar	003, 001, 031, 102
De Graaf	010, 011, 007, 004	Goodmans	010, 021, 050, 003, 028, 001, 051, 009, 029, 020, 068
Decca	010, 001, 029, 008	GPX	003
Deitron	021	Gradiente	001
Denko	009	Graetz	011, 020
Denon	004	Granada	010, 003, 001, 011, 007, 004, 019, 020
Diamant	003	Grandin	021, 003, 001, 009, 068
Dual	010, 021, 028, 001	Grundig	010, 028, 009, 024, 029, 019, 068
Dumont	010, 001, 011	Hanimex	029
Durabrand	051, 044	Hanseatic	010, 003
Elbe	021	Harley Davidson	001
Elcatech	009	Harwood	009
Electroponic	003	HCM	009
Elin	020	Hinari	021, 009, 029, 020
Elsay	009	Hisawa	029
Elta	021, 009	Hischito	006
Emerex	002	Hitachi	010, 001, 004, 020, 044
Emerson	021, 050, 003, 001, 009, 006, 005	Hoehner	021, 051
ESC	021, 020	Hornophon	010
Ferguson	021, 028, 001, 024, 025, 068	Hughes Network Systems	004
Fidelity	001, 009, 029, 030, 020	Hypson	021, 003, 001, 009, 029, 031
Finlandia	010, 003, 001, 011, 007, 005, 004, 012, 019	Imperial	001
Finlux	010, 001, 011, 004	Ingersol	020
Firstline	021, 003, 028, 009, 006, 005, 004, 031, 102	Inno Hit	009
Fisher	011	Interbuy	003, 009
Flint	028	Interfunk	010, 011
Frontech	009	Internal	021, 050
Fujitsu	001	International	021, 003, 051
Funai	001, 044	Intervision	021, 003, 028, 001
Galaxi	001	Irradio	010, 003, 009, 102
Galaxis	021	ITT	011, 012, 020
Garrard	001	ITV	021, 003
GE	007, 020		

Appendix

JBL	021
JMB	028, 029, 068
Joyce	001
JVC	008
Kaisui	009
Karcher	010, 021, 051
KEC	021, 003
Kendo	021, 003, 028, 051, 009, 023, 012
Kenwood	008
KLH	009
Kneissel	021, 003, 028, 029
Kodak	003
Korpel	009
Kyoto	009
Lenco	021
Leyco	009
LG	021, 003, 001, 031, 102
Lifetec	028
Lloyd's	001
Loewe	010, 144, 003
Logik	009, 012, 020
Lumatron	044, 102
Lunatron	102
Lux May	009
Luxor	009, 011, 007, 005, 023, 012
LXI	003
M Electronic	003, 001
Magnasonic	021, 044
Magnavox	010, 001
Magnin	020
Magnum	051
Manesth	010, 009, 006
Marantz	010
Mark	021, 001
Mascom	051
Mastec	051
Master's	021
Matsui	003, 028, 029, 020, 068
Mediator	010

Medion	028, 051, 029
Memorex	003, 028, 001, 011, 007, 020
Memphis	009
Metronic	010
Metz	010, 144, 003, 019, 084
MGA	005, 020
MGN Technology	020
Micormay	028
Migros	001
Minolta	004
Mitsubishi	010, 051, 008, 007, 005, 031
Motorola	007
MTC	001, 020
Multitec	003
Multitech	001, 009
Murphy	001
Myryad	010
NAD	011
Naiko	028, 051
National	019
NEC	003, 011, 008
Neckermann	010
Nesco	001, 009
Neufunk	102
Nikkai	021, 009
Nikko	003
Noblex	020
Nokia	010, 021, 011, 007, 004, 023, 012, 020
Nordmende	051, 024, 008, 025
Oceanic	010, 001, 024, 011, 007, 012
Okano	021, 028, 009, 023
Olympus	019
Onimax	051
Optimus	007, 030, 044
Orbit	009
Orion	028, 029, 068
Orson	001
Osaki	003, 001, 009

Appendix

English

Osume	009	Royal	009
Otto Versand	010	Saba	021, 024, 025
Pace	029	Saisho	028
Pacific	028, 001, 051, 068	Salora	011, 005, 012
Palladium	003, 028, 009	Samsung	006, 030, 020, 068
Palsonic	001, 009	Sanky	007
Panasonic	144, 019, 084	Sansei	007
Pathe Cinema	005	Sansui	001, 009, 008, 012
Penney	003, 004, 020	Sanyo	011, 008, 007, 020
Pentax	004	Saville	021, 029, 020
Perdio	001	SBR	010
Philco	009	ScanSonic	020
Philips	010, 044	Schaub Lorenz	028, 001, 011, 023, 012
Phoenix	021	Schneider	010, 021, 003, 028, 001, 051, 009, 029, 004, 020, 102
Phonola	010	Scott	005, 044
Pilot	003	Sears	003, 001, 011, 004
Pioneer	010, 008, 004	Seaway	021
Portland	021, 050	SEG	010, 021, 050, 051, 009, 020, 044
Prinz	001	SEI	010
Profitronic	010, 020	Sei-Sinudyne	010
Proline	021, 001, 051, 024, 025	Seleco	003
Proscio	021	Semp	006
Prosonic	021	Sentra	009
Protech	010, 009	Setron	009
ProVision	021	Sharp	007, 040, 102
Pye	010	Shintom	009, 011
Quasar	021	Shivaki	003
Quelle	010	Shogun	020
Radialva	010, 003, 009, 007	Siemens	010, 003, 024, 011
Radiola	010	Siera	010
Radionette	003, 102	Silva	003
RadioShack	003, 001	Silva Schneider	102
Radix	003	Silver	021
Randex	003	SilverCrest	051
RCA	024, 007, 004, 020	Singer	009, 006
Realistic	003, 001, 011, 007	Sinudyne	010, 029
Reoc	028	Smaragd	028
RFT	009	Sonneclair	009
Roadstar	010, 021, 003, 009, 020, 068		

Appendix

Sonorlor	007
Sontec	021, 003
Sony	001, 002, 012, 095, 112
Soundwave	003, 028
Ssangyong	009
Standard	021
Stern	021
Sunkai	021, 028
Sunstar	011
Suntronic	011
Sunwood	009
Supra	003
Sylvania	010, 001, 005
Symphonic	001, 044
Tandberg	021
Tandy	001, 011
Tashiko	010, 003, 001, 007, 020
Tatung	010, 028, 001, 029, 007, 005
Tchibo	028
TCM	028
Teac	003, 001, 051
Tec	009
Tech Line	009
Technics	010, 019
TechniSat	028
Technosonic	029
Teknika	003, 001
Telefunken	021, 024, 025
Telerent	019
Teletech	021, 001, 009
Tenosal	009
Tensai	021, 003, 001, 009
Tevion	028, 051
Texet	021
Thomas	001
Thomson	021, 024, 008, 025
Thorn	003, 011
TMK	020
Tokai	003, 009, 011

Topline	028
Toshiba	010, 029, 006, 005, 030, 068
Totevision	003, 020
Towada	009
Tradex	010
Uher	020
Ultravox	021
Unitech	020
United	028, 068
Universum	010, 003, 028, 001, 011, 012, 020, 102
Vector	006
Victor	008
Video Concepts	006
Video Technic	001
Videomagic	003
Videosonic	020
Villain	001
Wards	010, 001, 009, 006, 007, 004, 020
Watson	010, 051, 029
Weltblick	003
Wharfedale	044
White Westinghouse	021, 009
World	028
XR-1000	001, 009
Yamishi	021, 009
Yokan	009
Yoko	003, 009, 020
Zenith	050, 001
ZX	028, 029
TV/VCR Combo	
Aiwa	001, 029, 068, 102
Alba	029
Amstrad	001
Beko	011
Bestar	021
Blue Sky	021, 029, 068
Bush	029, 068

Appendix

English

Citizen	021	Portland	050
Colt	009	Radiola	010
Daewoo	021, 050	RCA	007, 020
Dantax	029, 068	Saba	024
Emerson	021, 050	Samsung	030, 020, 068
Ferguson	021, 001, 025, 068	Sansui	001
Fidelity	001	Sanyo	020
Firstline	021	Saville	029
Funai	001	Schneider	010, 001
GE	007, 020	Sears	003, 001
GoldStar	003, 031	SEG	050
Goodmans	021, 050, 029, 068	Sharp	007
Grandin	021, 068	Siemens	010
Grundig	010, 029, 068	Sinudyne	029
Hanimex	029	Sony	001, 002, 112
Harley Davidson	001	Sylvania	010
Hinari	029	Symphonic	001
Hitachi	001	Tatung	029
Hypson	003	Teac	001
Internal	021, 050	Technics	010
JBL	021	Technosonic	029
JMB	029	Telefunken	021
Kneissel	021, 029	Thomas	001
LG	003, 031	Thomson	021, 025
Lloyd's	001	Toshiba	029, 030, 068
Magnasonic	021, 044	United	068
Magnavox	010, 001	White Westinghouse	021
Magnin	020	Zenith	011
Matsui	029, 068		
Medion	029		
Memorex	003		
MGA	020		
Mitsubishi	010, 007		
Orion	029, 068		
Pace	029		
Pacific	068		
Penney	003, 020		
Philips	010		

Appendix

5. Audio & AUX Code List

Brand	Code
Amplifier	
Acoustic Solutions	078, 082, 084, 094
Cambridge Audio	106
Curtis Mathes	014
Denon	012
Durabrand	089, 090
Goodmans	093
Hitachi	089
JBL	042
Logitech	074
Magnat	042
Magnum	094
Mustek	093
Optimus	014, 029
Pacific	094
Pioneer	014, 029
RCA	014
Sven	090
Tevion	094
Trice	090
upXus	078
Vieta	042
Yamaha	016, 030
Accessory	
Apple	038
Sony	008
Yamaha	121, 122
Receiver	
Acoustic Solutions	087
AEG	071, 072
AFK	071
Aiwa	005, 073
Akai	004, 021, 072, 087
Alba	087, 088
All-Tel	072
Amstrad	024, 072
Anam	021

Arcam	044
ASCOMTEC	071
Audiolab	043
Audiosonic	071
Audiotronic	043
Bang & Olufsen	028
Basic Line	088
Belson	071
Binatone	071
Blue Sky	072, 087
Bose	046, 099
Bush	027
Cambridge Audio	080, 101
Cat	071
CCE	065
Centrum	045, 071
Clatronic	027, 071
Cosmotron	027
Daewoo	076
Dantax	018, 072
Denon	067, 025, 036, 075
Denver	071
DiK	027
Dual	045, 072
eBench	024, 027
Elta	024, 027, 072
EuroLine	098
Fine Arts	043
Firstline	027
Garrard	013, 018
Genexxa	010
Global Sphere	098
Goodmans	021, 024, 027, 071, 072
Grundig	043, 013, 027, 035, 087
Grunkel	024, 072
Hanseatic	072
Harman/Kardon	043, 056, 003, 011, 057, 060
Harwood	024

HCM	072	Onkyo	006, 063, 114
HE	071	Optimus	032, 010, 024
Hitachi	088	Orient Power	024
Hitech	024	Orion	018
Hiteker	071	Palladium	027, 045, 054, 072, 086
Home Tech Industries	071	Panasonic	109, 085, 058, 059, 062, 110, 111, 113, 128
Hyundai	087	Paramount Pictures	045
Inkel	020	PCCW	128
Intersound	024	Philips	043, 049, 031, 035, 048, 053, 117
JBL	056, 057	Phonotrend	020
JVC	001, 019, 068	Pioneer	052, 032, 010, 039, 081, 097
Kenwood	033, 061, 091, 010	PJ	071
Kioto	027	Polk Audio	053
Kompernass	027	Prima Electronic	027
KXD	071	Proline	027, 072
LG	054, 086, 125	ProVision	071
Lifetec	027	QONIX	072, 087
LXI	024	Radionette	054, 100
Magnat	071	Recco	027
Magnavox	043, 035	Redstar	071
Marantz	043, 049, 031, 035, 053	Revox	007, 010, 035
Matsui	024, 027	Roadstar	027
MBO	065	Rotel	026
Medion	027, 087	Samsung	013, 055, 119, 123, 083
MEI	072	Sansui	021, 035, 098
Metz	088	Sanyo	024
Micromega	043	Schneider	003, 024, 045, 072
Microstar	027	Scott	071
MTlogic	087	SEG	088
Musicmagic	035	Sharp	010, 022, 070, 100
Mustek	065	Sherwood	020, 022
Mx Onda	024, 027	Siemens	021
Myryad	043	Silva Schneider	027, 072, 086
NAD	015, 021	SilverCrest	087
Nexius	072	Sony	040, 034, 047, 103, 107, 037, 066, 077, 079, 096, 108, 116, 118, 124
Nikkai	071	Soundwave	021
Nikkei	024	Stereophonics	032
Norcent	071	Sumida	024
NTDE Geniesom	024		

Appendix

Sunfire	061
T+A	050, 105
TAG McLaren	043
Tandberg	088
Targa	054
TCM	027
Teac	018, 021
Technics	109, 085, 058, 059, 011, 110
Techwood	088
Tedelex	098
Tevion	071
Thorens	043
Thorn	024
Tokai	072
Toshiba	092

United	072, 098
Universum	013, 021, 024, 027, 045, 072, 076, 095
Venturer	027 ,072
Vestel	088
Victor	001
Waitec	065
Watson	027
Wellfund	024
Welltech	027
Wharfedale	072
Xenius	072
Yamaha	009, 002, 010, 017, 023, 041, 051, 064, 069, 112, 115, 120
Yukai	065
Zenith	024

MDB1.3

OPEN SOURCE SOFTWARE NOTICE

HUMAX products use certain open source operating system software distributed pursuant to GNU GENERAL PUBLIC LICENSE Version 2 and GNU LESSER GENERAL LICENSE Version 2.1 each as defined and published by the Free Software Foundation, Inc.

The following GPL and LGPL software source codes used in this product can be provided and this offer is valid for up to three years from the date of original download of the software or purchase of product containing such software. Please contact us at gnu@humaxdigital.com.

GPL Software

linux

busybox

tinyftp

avinfo

e2fsprogs

This package, the ext2 filesystem utilities, are made available under the GNU Public License version 2, with the exception of the lib/ext2fs and lib/e2p libraries, which are made available under the GNU Library General Public License Version 2, the lib/uuid library which is made available under a BSD-style license and the lib/et and lib/ss libraries which are made available under an MIT-style license.

LGPL Software

uClibc

libexif

id3lib

FreeType License (FTL) Software

freetype

Portions of this software are copyright © <2007> The FreeType Project (www.freetype.org).
All rights reserved.

OpenSSL License Software

OpenSSL

This product includes cryptographic software written by Eric Young. (ey@cryptsoft.com)

This product includes software written by Tim Hudson. (tjh@cryptsoft.com)

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.
(<http://www.openssl.org>)

Appendix

Use, modification and redistribution of the Open Source Software is governed by the terms and conditions of the applicable Open Source License. The GNU General Public License (GPL) v2 is shown below.

The GNU General Public License (GPL)

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".
Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.
1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.
You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.
2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
 - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

Appendix

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

One line to give the program's name and a brief idea of what it does.

Copyright (C) yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

signature of Ty Coon, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

GNU Lesser General Public License (LGPL)

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages—typically libraries—of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the “Lesser” General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and a “work that uses the library”. The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

- This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you”.
A “library” means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.
The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification”).

Appendix

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library’s complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.
You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.
2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a) The modified work must itself be a software library.
 - b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
 - c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
 - d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.
Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.
This option is useful when you wish to copy part of the code of the Library into a program that is not a library.
4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications. You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:
 - a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
 - b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user’s computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
 - c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
 - d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
 - e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.
7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:
 - a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
 - b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.
8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.
10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients’ exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.
11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.
12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

Appendix

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.
14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

one line to give the library's name and an idea of what it does.> Copyright (C) year name of author

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library ‘Frob’ (a library for tweaking knobs) written by James Random Hacker.

signature of Ty Coon, 1 April 1990

Ty Coon, President of Vice

Problem Check List

1. Please check the **Trouble Shooting** section first when problem occurs.
Website: <http://www.humaxdigital.com/au>
2. Read the description below and mark the type of problem you have before calling HUMAX Customer Service.

	Description	Check
AC & DC Power	No power when using AC power	
	No power caused by physical damage	
STB (Product) Operation	System does not boot up - Freezes on initial screen (with front LED on)	
	Cannot wake up from standby	
	Cannot power off	
	Frozen picture (while system is operating)	
	Flickering / snowy / black / blue screen	
	Broken OSD (menu) display	
	Reboots unintendedly (while operating)	
Audio	Dolby Digital : Optical	
	No audio - (RCA, HDMI OUT). Please check the output port.	
	Excessive / low audio level	
	Audio does not mute	
	Distorted / unbalanced audio or popping noise in audio	
	Audio delay / Lip-sync problem	
Video	No video - (RCA, HDMI OUT). Please check the output port.	
Channel Searching	No HDTV, UHF,VHF reception. Please check the input port.	
	Incorrect channel tuning	
	No OTA software reception	
Remote Control	No remote control operation	
Front Display	Error code appears in display. Please enter the error code.	
	Front display dim (no display)	
UI (User interface)	Faulty teletext	
	Faulty EPG reception or functional problem	
	Faulty operation of parental lock (keylock function)	
	Faulty clock function	
	Faulty channel editing function	
	Faulty search function (language / subtitle / chapter)	
Accessory	Missing accessory	

Appendix

Description		Check
Network	MAC address is missing or incorrect	
	IP address is missing or incorrect	
	USB interface problem	
Recording	Cannot erase recording files	
	Cannot playback recording files	
	Recording file gets erased unintendedly	
	HDD formatting problem	
	Other recording / playback problem	
Physical Damage	Damaged top cover (STB only)	
	Damaged bottom case	
	Damaged front / door	
	Damaged /not working front key button	
	Damaged plug / socket / terminal / connector /card holder / RF	
Pay Channels	Cannot watch pay channels. Make sure that the electronic chip on the Smartcard is facing the correct direction.	

Note: The contents of the Problem Check List may differ according to the product specification.

Other issues : Please write in the blank below.

www.humaxdigital.com/au

