


Apple AirPort Extreme (ME918ZP/A) Router Guide (MAC OS version)

1 Get to know the Apple AirPort Extreme Router	2
2 Connecting Apple AirPort Extreme Router to MAC OSX	3
A. Setting up Internal Wi-Fi network with the Apple AirPort Extreme Router	3
B. Switching broadband Internet service from other ISP to HKBN	8
C. Setup Home Hotspot with 2 or more AirPort Extreme Routers.....	13
3 Factory default reset of Apple AirPort Extreme	18

1 Get to know the Apple AirPort Extreme Router

A. Tech Specs - Connections and Expansion

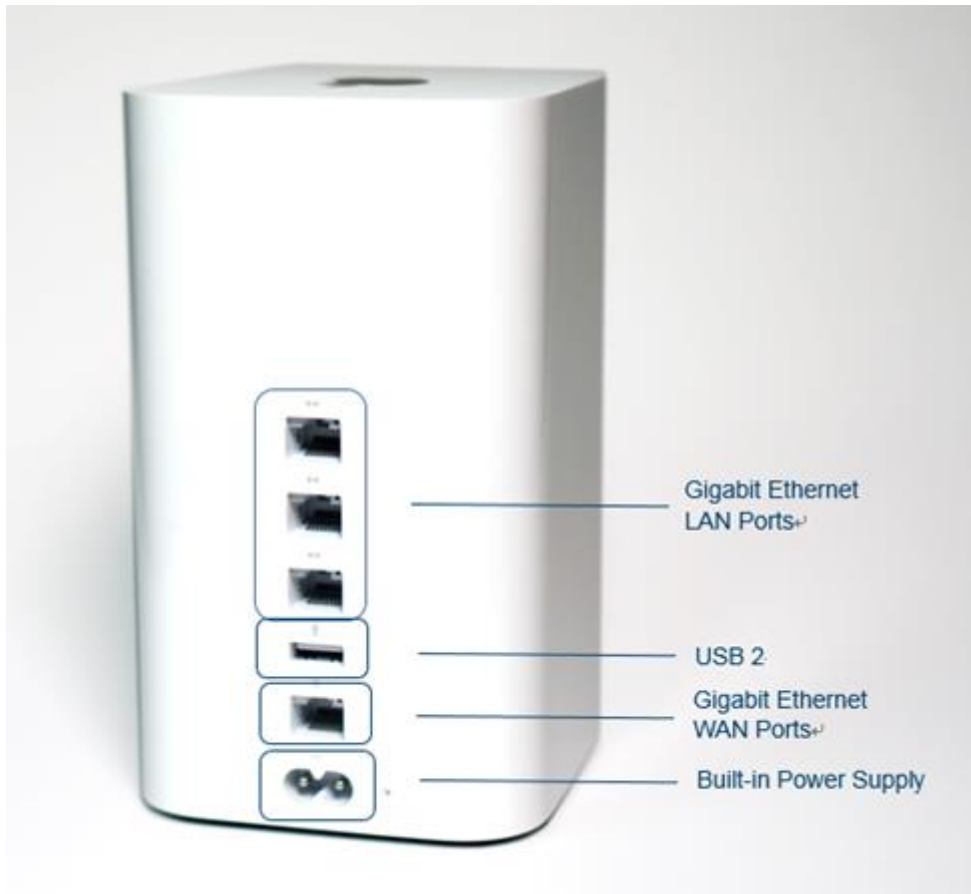

B. System Requirements (bb500/ FibreHome500/ bb1000/ FibreHome1000)

Setting up the AirPort Extreme using a Mac

What you need:


- Wi-Fi enabled Mac computer or a Mac computer connected to AirPort Extreme with an Ethernet cable (required for set up using Ethernet)
- OS X v10.7.5 or later
- AirPort Utility v6.3 or later

2 Connecting Apple AirPort Extreme Router to MAC OSX

A. Setting up Internal Wi-Fi network with the Apple AirPort Extreme Router


Make sure you have a LAN cable connected from the HKBN wall plate/ONT to the WAN port of your Apple AirPort Extreme router. Switch on the power supply for the router and turn on the computer.

Click [Wi-Fi] in the Apple menu bar then choose [AirPort Extreme] to connect. The AirPort Utility will run automatically.

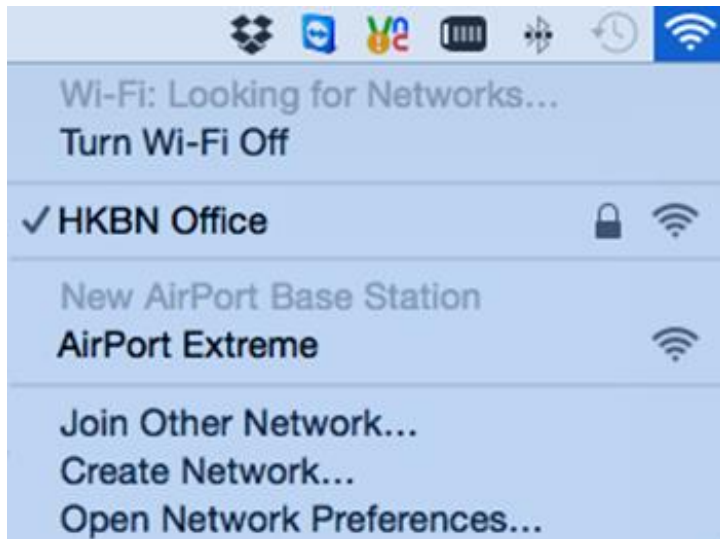

2 Connecting Apple AirPort Extreme Router to MAC OSX

In the AirPort Utility page, input a customized [Network Name] (SSID), [Base Station Name] (used to identify the AirPort Extreme router), [Password] and [Verify] (password must be at least 8 characters), click [Next].

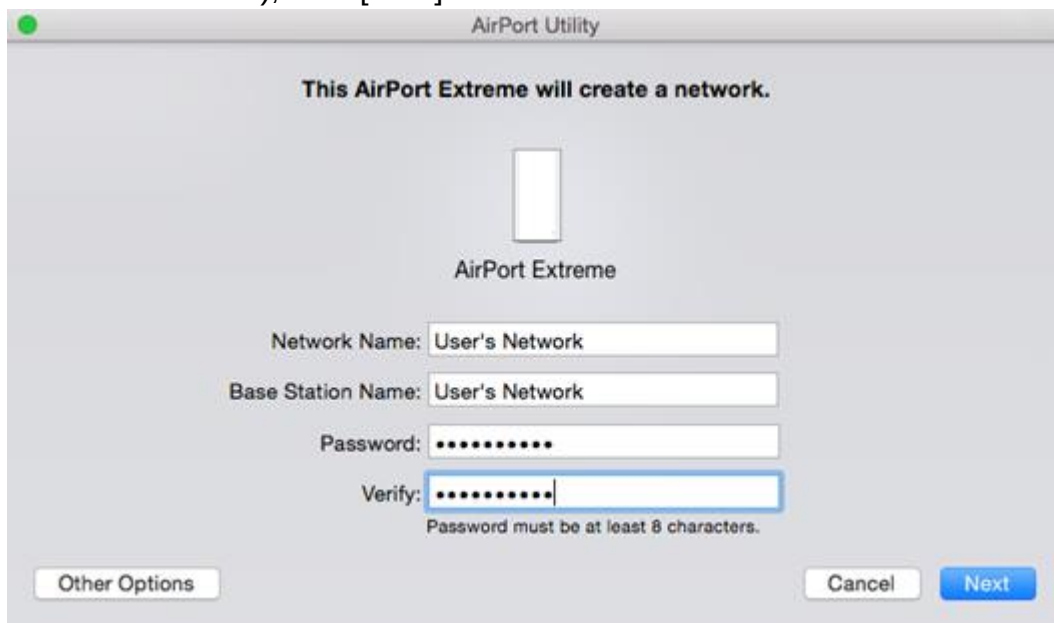

The screenshot shows the 'AirPort Utility' window. At the top, it says 'This AirPort Extreme will create a network.' Below this is a small icon of the AirPort Extreme router. The configuration fields are as follows:

- Network Name: User's Network
- Base Station Name: User's Network
- Password: (8 dots)
- Verify: (8 dots)

Below the Verify field, it says 'Password must be at least 8 characters.' At the bottom, there are three buttons: 'Other Options', 'Cancel', and 'Next'.


Wait for the Airport Extreme router to create a network.



The screenshot shows the 'AirPort Utility' window. At the top, it says 'Gathering information about your network...'. Below this is a small icon of the AirPort Extreme router. Below the icon, there is a loading spinner and the text 'Preparing...'. At the bottom, there are three buttons: 'Other Options', 'Cancel', and 'Next'.


2 Connecting Apple AirPort Extreme Router to MAC OSX

When AirPort Utility has finished gathering information, select [Don't send] at [Diagnostics & Usage] page, click [Next].

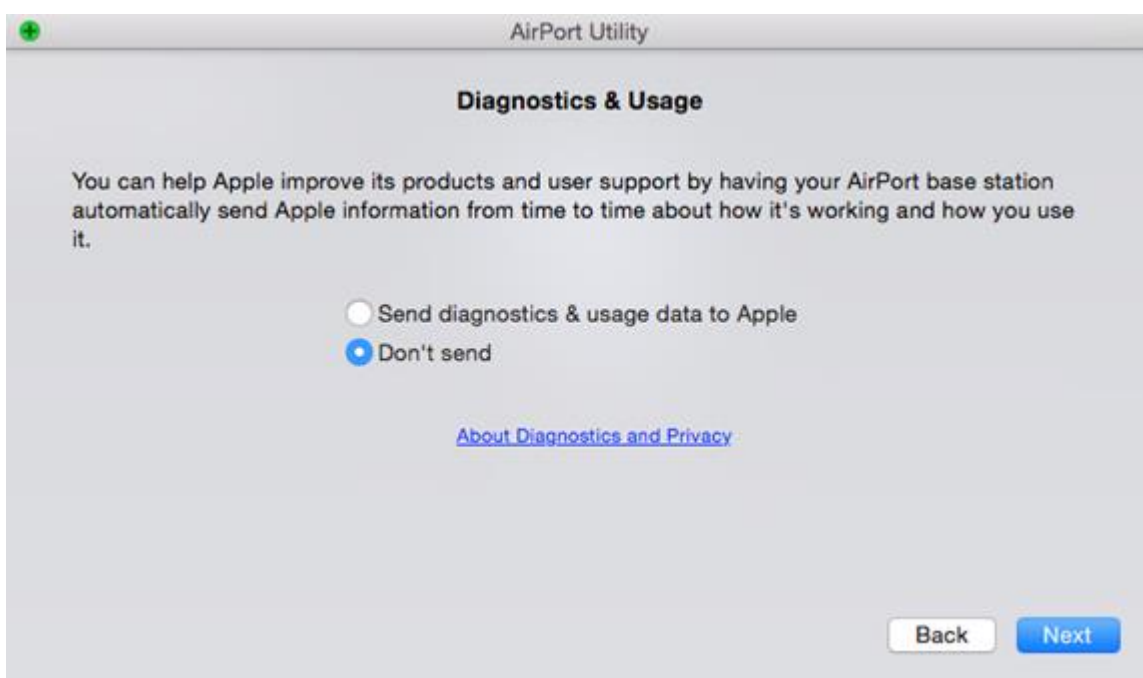

2 Connecting Apple AirPort Extreme Router to MAC OSX

After the setting is applied, click [Done] to finish setup.

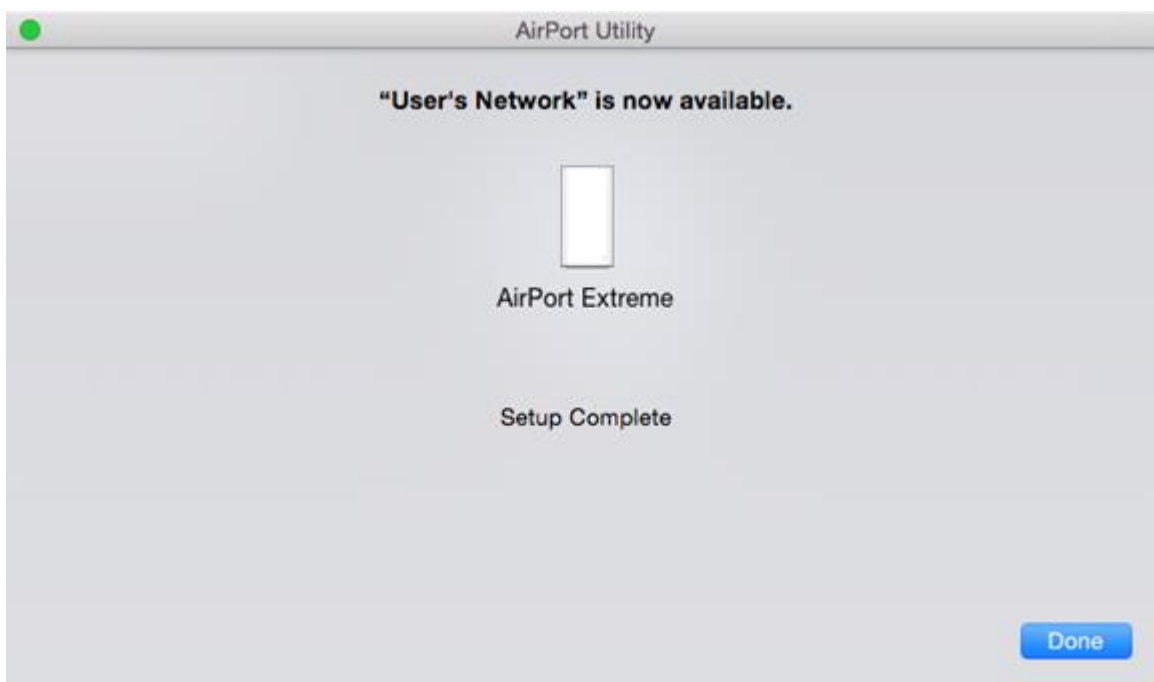


2 Connecting Apple AirPort Extreme Router to MAC OSX

AirPort Utility will verify that the network is now connected to the Internet.




Click [Wi-Fi] in the Apple menu bar. The wireless network name has now been changed from default [AirPort Extreme] to your customized wireless network name.

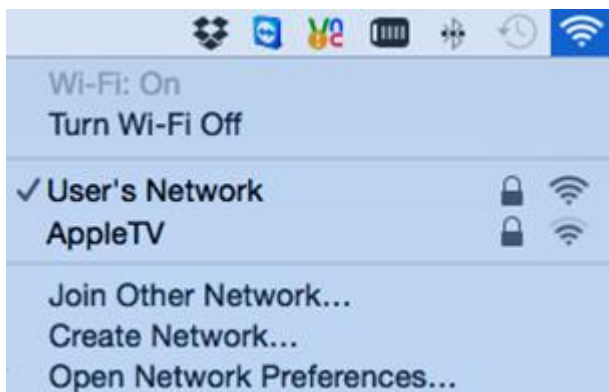

2 Connecting Apple AirPort Extreme Router to MAC OSX

B. Switching broadband Internet service from other ISP to HKBN


Click [Wi-Fi]  in the Apple menu bar, access the wireless network.

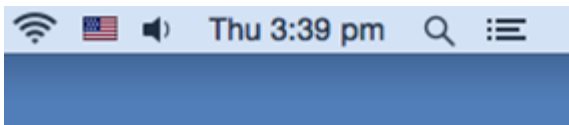

Click [Spotlight]  in the Apple menu bar, the Spotlight search bar will appear.




Input [Airport], then choose [AirPort Utility] from the suggestion list and press [Enter].

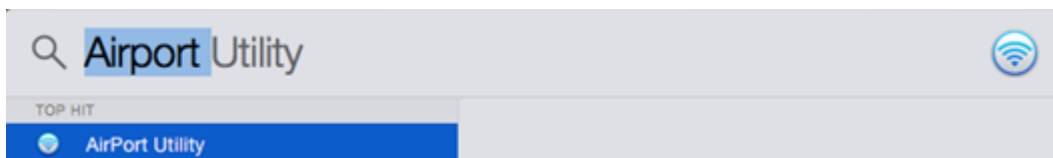


2 Connecting Apple AirPort Extreme Router to MAC OSX

At the main page, click on the customized wireless network and click [Edit] inside the popup window to enter settings.

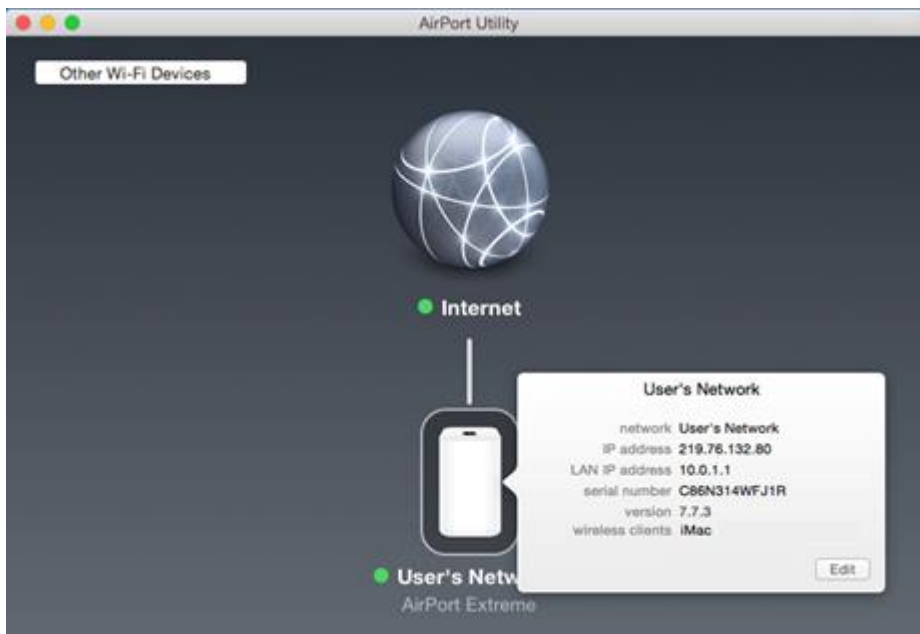

Click [Internet].

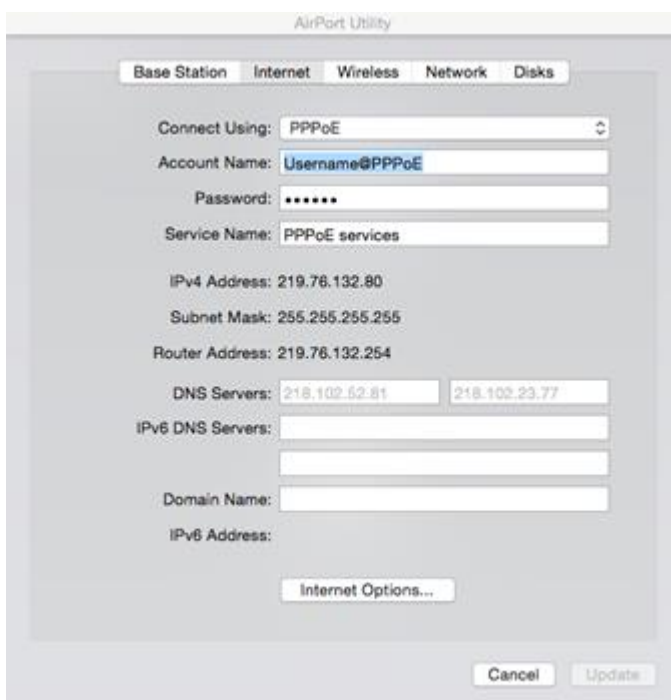

2 Connecting Apple AirPort Extreme Router to MAC OSX

Select [DHCP] under [Connect Using] and press [Update].



2 Connecting Apple AirPort Extreme Router to MAC OSX

Press [Continue] and wait for the device to restart.




After the device has restarted, open the AirPort Utility again.



2 Connecting Apple AirPort Extreme Router to MAC OSX

From the main page, click on the customized wireless network, and click [Edit] inside the popup window to enter settings.

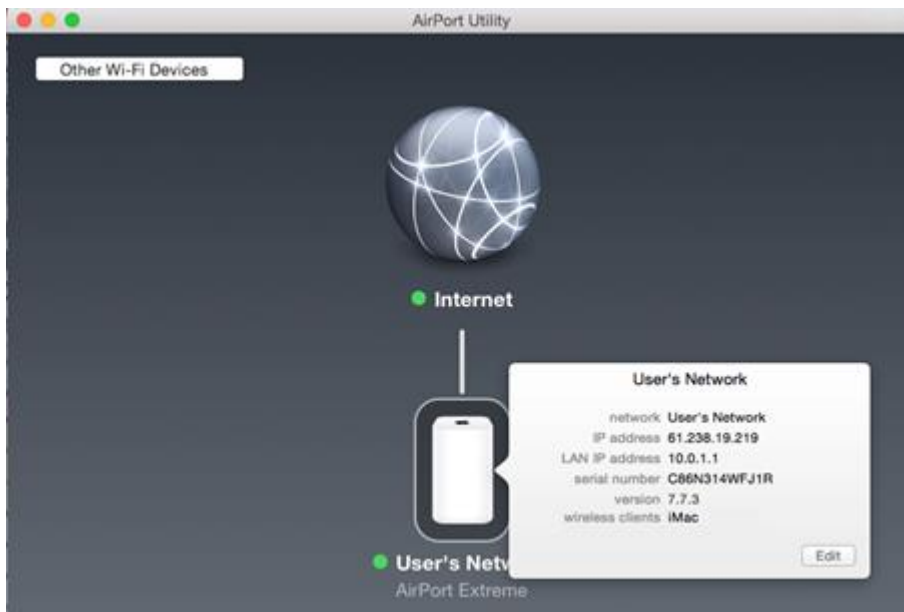


Click [Internet] to confirm the [Connect Using] option has successfully updated to [DHCP], click [Cancel] to close AirPort Utility.




2 Connecting Apple AirPort Extreme Router to MAC OSX

C. Setup Home Hotspot with 2 or more AirPort Extreme Routers

Click [Wi-Fi]  in the Apple menu bar and access the first AirPort Extreme router's wireless network. Switch on your second AirPort Extreme router and connect to the new AirPort Extreme wireless connection once it appears in the [Wi-Fi] list.

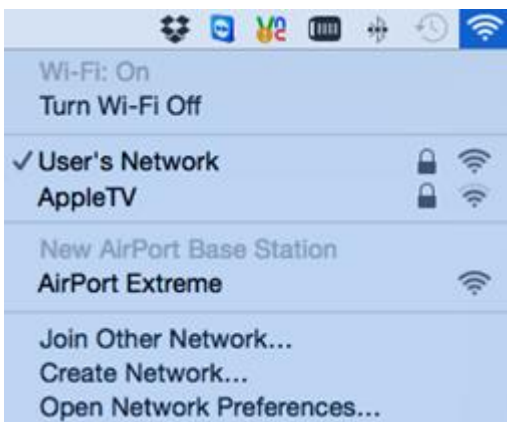

AirPort Utility will automatically examine the new wireless network.

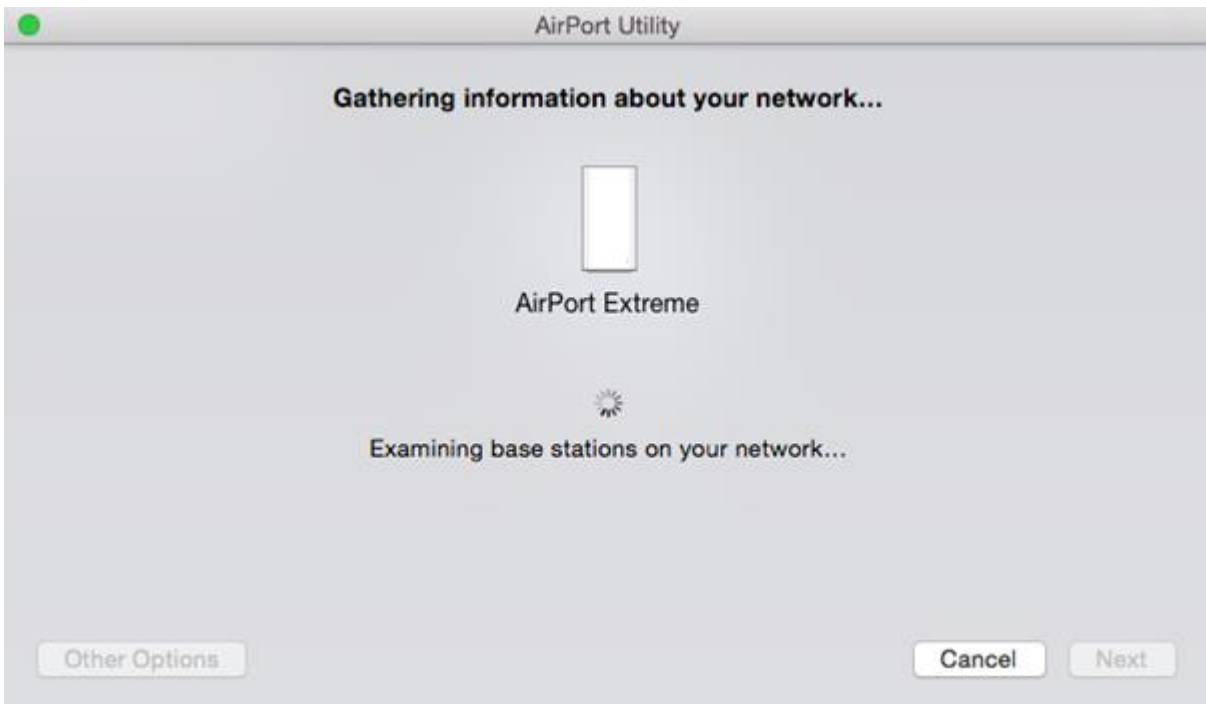


2 Connecting Apple AirPort Extreme Router to MAC OSX

AirPort Utility will automatically sync the new Apple AirPort Extreme router with the wireless network configuration of the first Apple AirPort Extreme router.




Input [Base Station Name] to identify this new Apple AirPort Extreme router, click [Next].

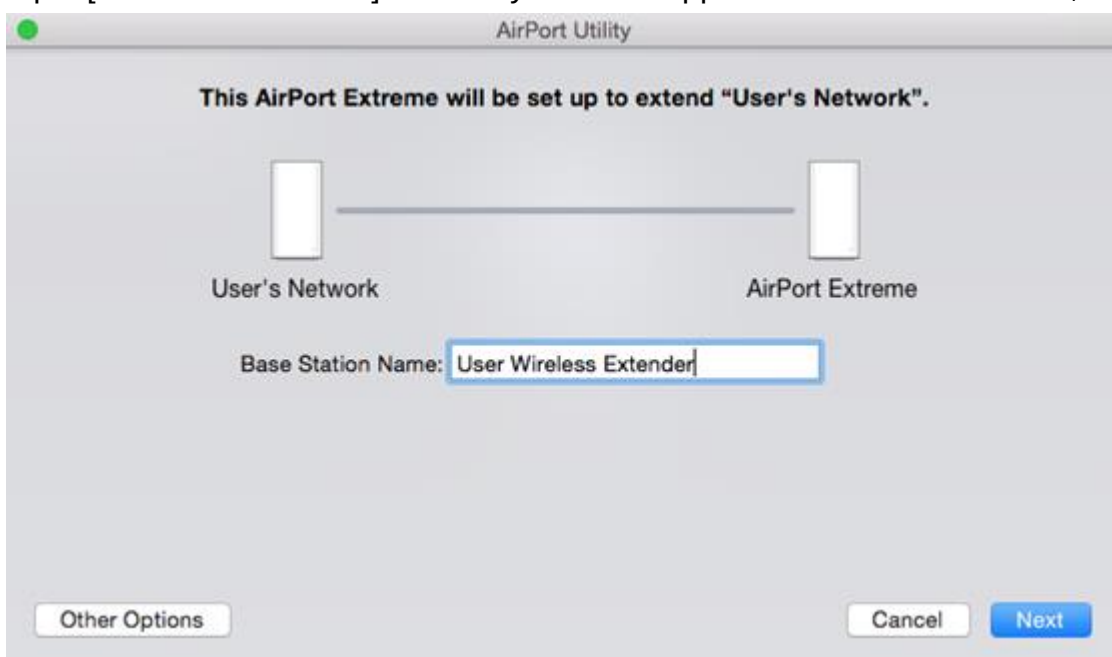


2 Connecting Apple AirPort Extreme Router to MAC OSX

Select [Don't send] at [Diagnostics & Usage] page, click [Next].


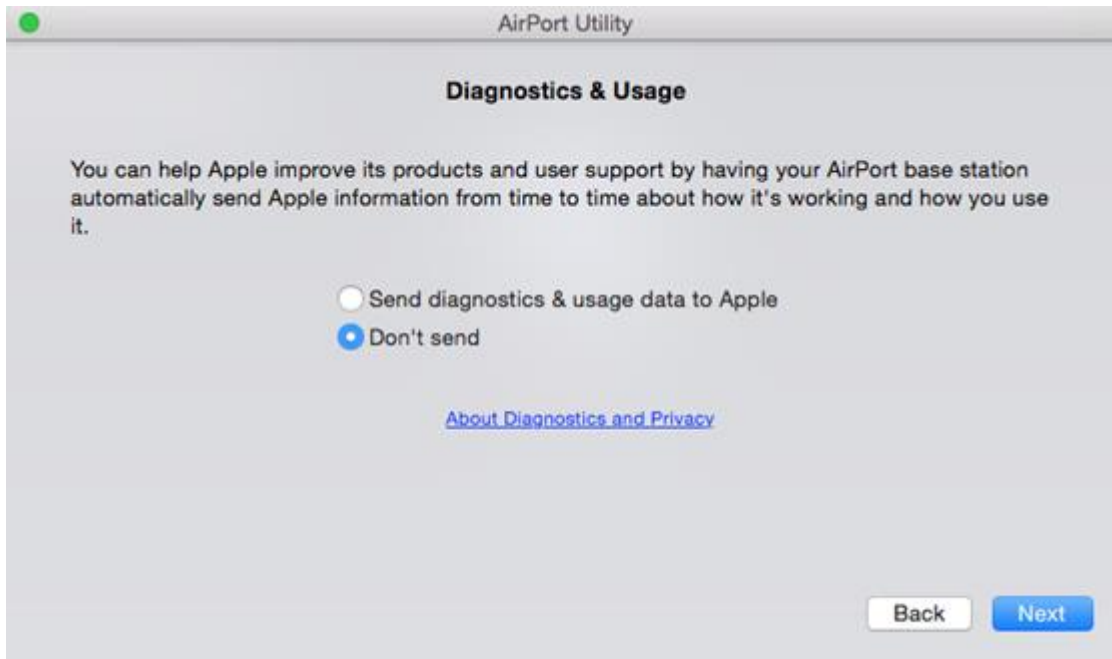


AirPort Utility will start applying the settings

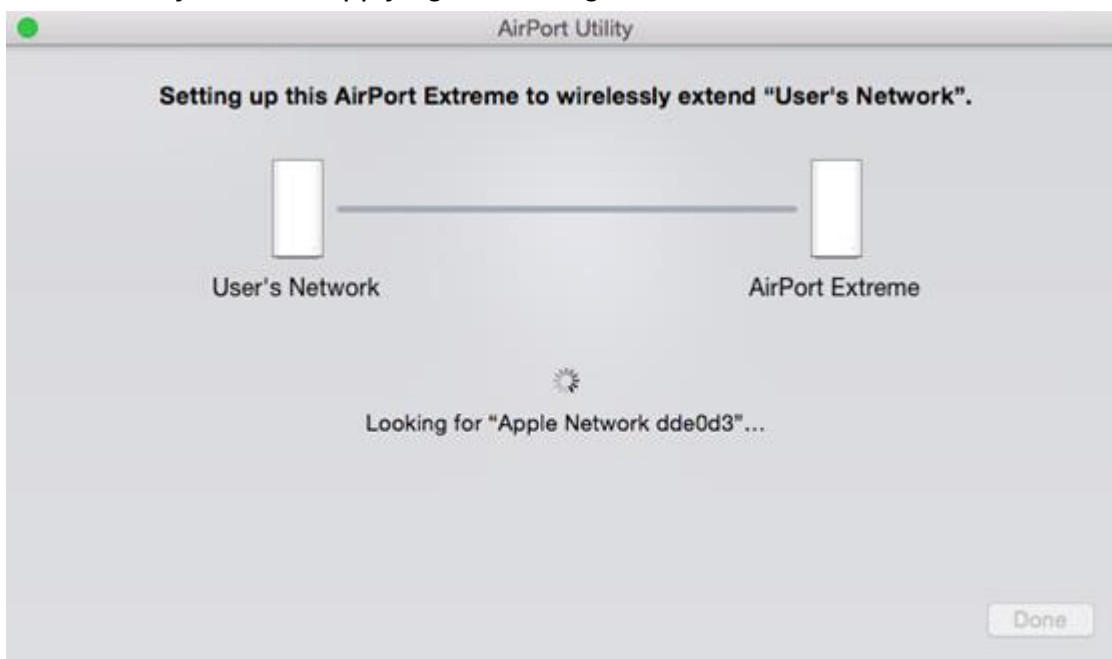


2 Connecting Apple AirPort Extreme Router to MAC OSX

After the setting is applied, click [Done] to finish the setup.

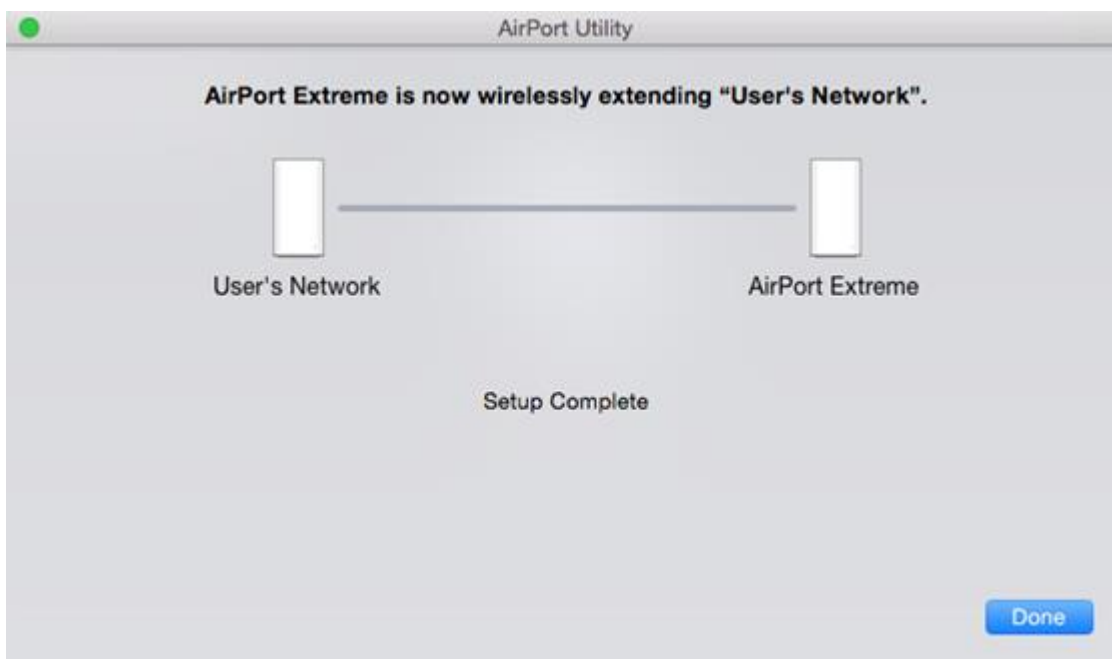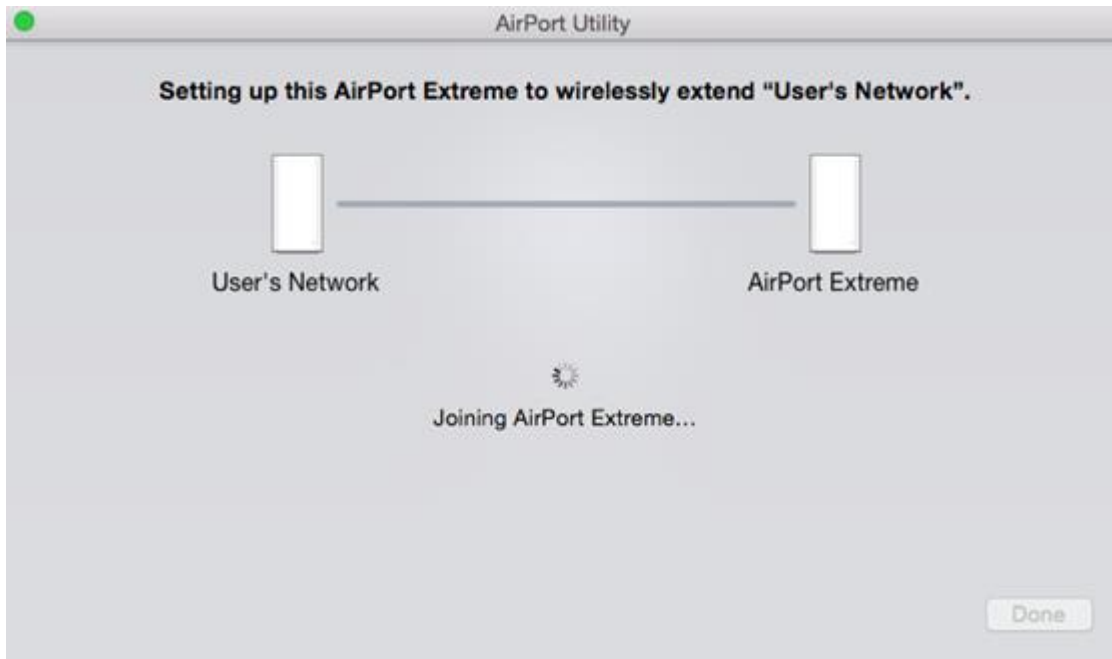

2 Connecting Apple AirPort Extreme Router to MAC OSX

AirPort Utility will verify that the new Apple AirPort Extreme router is now connected to the first Apple AirPort Extreme router.

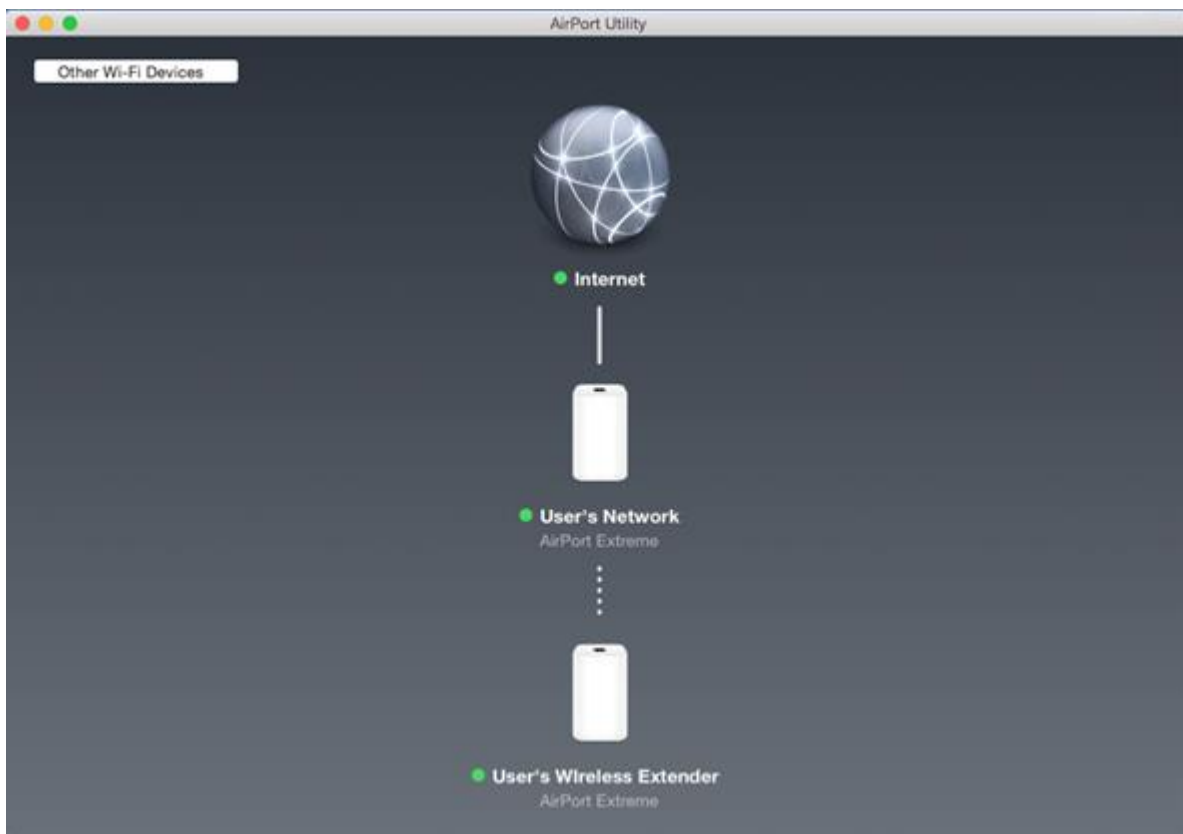

3 Factory default reset of Apple AirPort Extreme

If the device isn't accessible from AirPort Utility, you can reset to factory default setting by pressing the reset button.

1. Unplug the base station's power cord.
2. Press and hold the reset button with a pen, pencil, straightened paperclip or any sharp object. Hold down the button and plug in the power cord. Keep the reset button pressed until the status light (LED) flashes amber rapidly.

AirPort Extreme - The reset button is located to the right of the AC Power Inlet:

