 




SERVICE MANUAL

DIGITAL COMPUTING PRINTING SCALE

SM-300

Edition 6

Table of Content

i)	Notice	1
ii)	Safety Information	2
1.	GENERAL	3
1.1	Model Specification	3
1.2	Operating Specification	4
1.3	Type of Interface	4
1.4	Main Components	4
2.	OVERVIEW	5
2.1	Dimensions	5
2.2	Key Sheet Layout	7
2.3	Panel Layout	10
2.4	Label Type	11
2.5	Interface Ports Location	12
2.5.1	For Pole, Bench, Elevated, Self-service.	12
2.5.2	For Hanging	12
3.	SET UP	13
3.1	Scale Assembly	13
3.1.1	Set up	13
3.1.1	Level Adjustment	13
3.1.3	Hanging Type Scale Set Up	14
3.2	Software Setting	15
3.2.1	Memory Initialization	15
3.2.1.1	Default Country Specification 1	15
3.2.1.2	Default Country Specification 2	18
3.2.1.3	Country List	20
3.2.2	Span Adjustment	21
3.2.3	Specification Setting	23
3.2.3.1	Customer Specification (Re-zero 141)	23
3.2.3.2	Weight And Measurement Specification (Re-zero 142)	25
3.2.3.3	Scale Setting	27
4.	MAINTENANCE	28
4.1	Diagnostic	28
4.1.1	Changing Mode	28
4.1.2	RAM & Communication Port Testing	30
4.1.2.1	RAM Test	30
4.1.2.2	SIO Loop Back Test	31
4.1.2.3	RS-485 Loop Back Test	32
4.1.2.4	Ethernet Test	32
4.1.2.5	ROM Checksum Test	33

4.1.2.6	Auto Generate PLU	33
4.1.3	Internal Count.....	34
4.1.4	Span Switch Status	35
4.1.5	Thermal Head Usage	36
4.2	Adjustment	37
4.2.1	Location Of Label Gap Sensor And Thermal Head	37
4.2.2	Label Gap Sensor	37
4.2.3	Peel Sensor.....	39
4.2.4	Printing Position	40
4.2.5	Voltage Checkpoint.....	41
4.3	Memory Clear.....	41
4.3.1	Clearing Data Files.....	41
4.3.2	Clearing Transaction Files	43
4.3.3	Clearing All Files	44
4.4	Data Backup.....	45
4.4.1	System Configuration.....	45
4.4.2	Data Transfer Of SM 300 And FL-1 Or PCFL-1	45
4.4.3	Specification Data Transfer Of SM 300 And FL-1 Or PCFL-1	47
5.	ASSEMBLY / DISASSEMBLY	49
5.1	Bench and Pole Type.....	49
5.1.1	Top Cover	49
5.1.2	Circuit Board	49
5.1.2.1	Display Board for Bench.....	49
5.1.2.2	Display Board for Pole	50
5.1.2.3	Keyboard Circuit Board	50
5.1.2.4	Interface Main Board	51
5.1.3	Printer Kit	51
5.1.3.1	Drawer Block	51
5.1.3.2	Thermal Head.....	52
5.2	Self-Service Type.....	52
5.2.1	Self-Service Key Board.....	52
5.2.2	Pole Display	53
5.3	Hanging Type.....	54
5.3.1	Side Cover	54
5.3.2	Circuit Board	55
5.3.2.1	Main Board	55
5.3.2.2	Power Block.....	55
5.3.3	Front / Back Panel.....	56
5.3.4	Printer Kit	56
5.3.4.1	Printer Block	56
5.3.4.2	Thermal Head	56
5.3.5	Loadcell.....	57
6.	NETWORK CONFIGURATION	58
6.1	RS-232C / RS-485	58
6.1.1	System Configuration.....	58
6.1.1.1	RS-232C.....	58
6.1.1.2	RS-485.....	59
6.2	TCP / IP.....	60

6.2.1	PC Ethernet Adapter Set-Up.....	60
6.2.1.1	Configuration Of Ethernet Communication On PC.....	60
6.2.1.2	Configuration Of Ethernet Card On PC Using WINDOWS 95	60
6.2.1.3	Window version client driver (Client /Server or Server/Workstation connection with PC)	61
6.2.1.4	SIS 98 (Client/Server or Server/Workstation Connection With PC)	61
6.2.2	Scale Ethernet Address, Scale IP Address, Server IP Address & Subnet Mask.....	62
6.2.2.1	Scale Ethernet Address.....	62
6.2.2.2	Scale IP Address	63
6.2.2.3	Server IP Address.....	64
6.2.2.4	Subnet Mask.....	66
6.2.3	System Configuration.....	67
6.2.3.1	Server / Client	67
6.2.3.2	Server / Client with PC	68
6.2.3.3	All Server	69
6.3	Wireless Configuration For Model SM 300	70
7.	FIRMWARE	71
7.1	WinDload v2.10.....	71
7.2	Firmware Version Upgrade	71
7.3	Bin File Updating.....	72
7.4	Non-Based / Based Downloading	74
7.5	Upgrading Scale firmware Version Using Server / Client Configuration.....	75
8.	HARDWARE SETTING	76
8.1	Memory Expansion	76
8.2	Interface Add On	77
8.3	RF Kit Interface Add On	77
8.3.1	All Models Except Hanging Type	77
8.3.2	Hanging Type.....	78
8.4	Change of Cable	79
9.	MISCELLANEOUS	80
9.1	Error Messages.....	80
9.2	Table of Characters Code	82
9.2.1	ASCII Characters	82
9.2.2	TERAOKA Code	83
9.3	Wire and Connector	83
9.3.1	ETHERNET WIRE - STRAGHT CABLE AND CROSSOVER CABLE	83
9.3.2	RS232C AND MULTIDROP (4 LINE, RS485) WIRE.....	84
10.	Exploded View.....	87
10.1	Pole Type	87
10.2	Bench Type	88
10.3	Elevated Type	89

10.4 Self-Service Type.....90

10.5 Hanging Type.....91

11. REVISION RECORDS92

12. **APPENDIX 1 – Spec List**

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*