



Brilliant Technology Co.

Genius 7 Bill Acceptor

TW User's Manual



Brilliant Technology Co.

11240 Robin Park Ave., Las Vegas, NV 89138, USA
深圳市福田区红荔西路 7002-2 第一世界广场 A 座 10 楼 B1



A、Features:

- 1、Four ways Acceptance
- 2、Accept multiple Bill width
- 3、High speed, High resolution import Sensors
- 4、Light weight and Quite system Design
- 5、High speed Bill transportation system
- 6、Dimensions: 131.9mm(H) X 95.5mm(W) X 81.5mm(D)
- 7、Power Supply: DC 12V, 24V (10V-30V Wide Operation Range)
- 8、Low Power Consumption, Low Standby current
- 9、Firmware and Data Upload Box or On Line Upload
- 10、Patent Optical Recognition, Multiple Wave length, Anti-Fishing, Jam less
- 11、Real time Bill detector in all modes
- 12、Support Up and Downward installation


B、 Specifications:

Bill Validation	Worldwide major bank note
Validation time	< 1 Sec.
Insertion direction	4 directions
Maximum Width	78 mm
Validation Rate	>98%
Acceptance Rate	>98 %
Firmware upgrade	Upload Online
Dimension	131.9mm (H) X 95.5mm (W) X 81.5mm (D)
Weight	300g

Note: Except dirty, wet, broken or wrinkled notes. (Used in market)

C、 Electrical:


Operation voltage	DC 12V, DC24 (10VDC-30VDC Wide Range)
Operation current	< 1A max.
Standby current	< 10mA
Operation temperature	0°C to +60°C (41°F to 140°F)
Storage temperature	-20°C to +70°C (-4°F to 158°F)
Operation humidity	15% to 85% RH (non-condensed)
Storage humidity	15% to 85% RH (non-condensed)

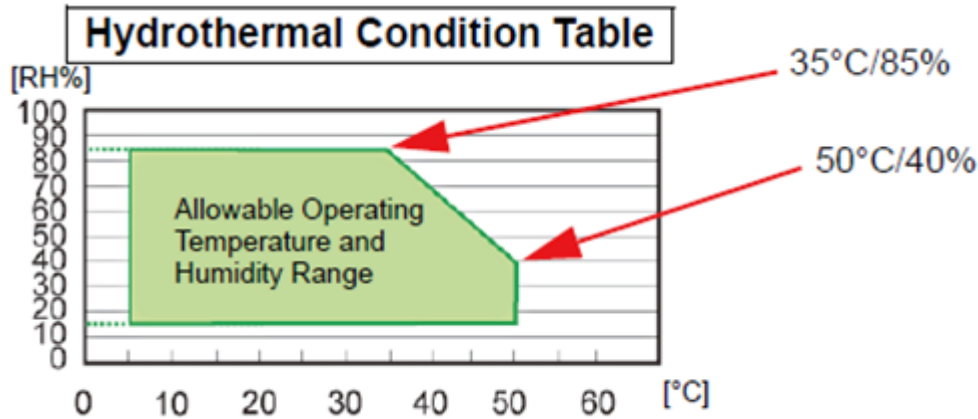

D、Wire Hardness

1. Pulse : 12VDC Power+ Data wire

 AMP 172340-1 Back View	PIN 1	Yellow	Inhibit+
	PIN 2	Green	Inhibit-
	PIN 5	Red	+12VDC
	PIN 7	Blue	Credit Relay (NO)
	PIN 8	Purple	Credit Relay (COM)
	PIN 9	Orange	GND

 
 JST PHD 2.0 mm 2 x 3 Back View	PIN 1	Orange	GND
	PIN 2	Red	+12VDC
	PIN 3	Green	Inhibit-
	PIN 4	Yellow	Inhibit+
	PIN 5	Purple	Credit Relay (COM)
	PIN 6	Blue	Credit Relay (NO)

2. COMMUNICATION RS-232 TTL : Serial Bus

 JST PHD 2.0 mm 2 x 4 Back View	PIN 1		ESERVED
	PIN 2		GND
	PIN 3		ccTalk
	PIN 4		ESERVED
	PIN 5		VDD +3.3V
	PIN 6		RESET
	PIN 7		TXD
	PIN 8		RXD



 JTAG and Upload



JST PHD 2.0 mm
2 x 5 Back View

PIN 1		JTCK
PIN 2		JTMS
PIN 3		JTDO
PIN 4		GND
PIN 5		NC
PIN 6		JTDI
PIN 7		VDD +3.3V
PIN 8		NJTRST
PIN 9		TXD2
PIN10		RXD2

3. 6 PIN Power Connection and 8 PIN Data Connection.

POWER	Pin No.		
CREDIT RELAY(COMMON)	1		
CREDIT RELAY(N.O)	2		
INHIBIT-	3		
INHIBIT+	4		
GROUND	5		
POWER (+12V ~ +24V)	6		
COMMUNICATION	Pin No.		
RS-232 TXD TTL	1		
RS-232 RXD TTL	2		
VDD +3.3V	3		
RESET	4		
ccTalk	5		
RESERVED	6		
RESERVED	7		
GROUND	8		



E、Installation

In/Out circuit

(1) Pulse Interface connection, See figure 1、 2.

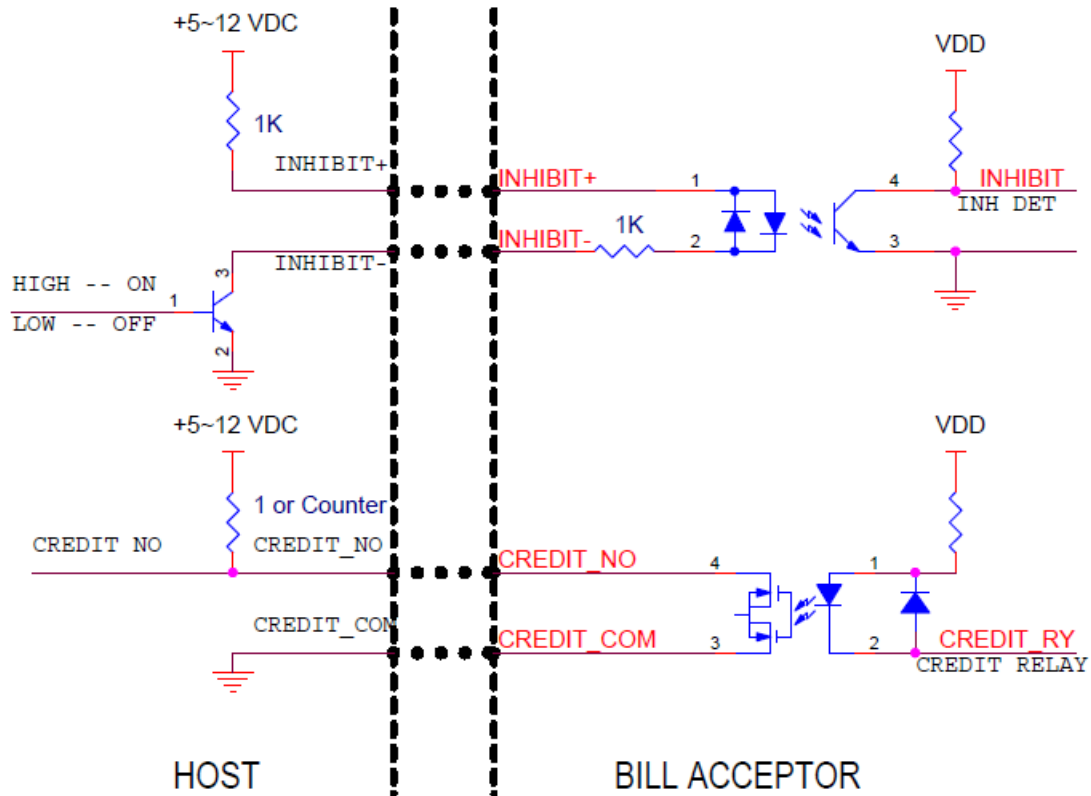


Figure 1.

FUNCTION	DIP SW SETTING		CONTROL
INHIBIT	IINHIBIT ACTIVE	LOW	LOW
		HIGH	HIGH
ENABLE	INHIBIT ACTIVE	LOW	HIGH
		HIGH	LOW

Figure 2.



(2) TTL Interface, See figure 3、4.

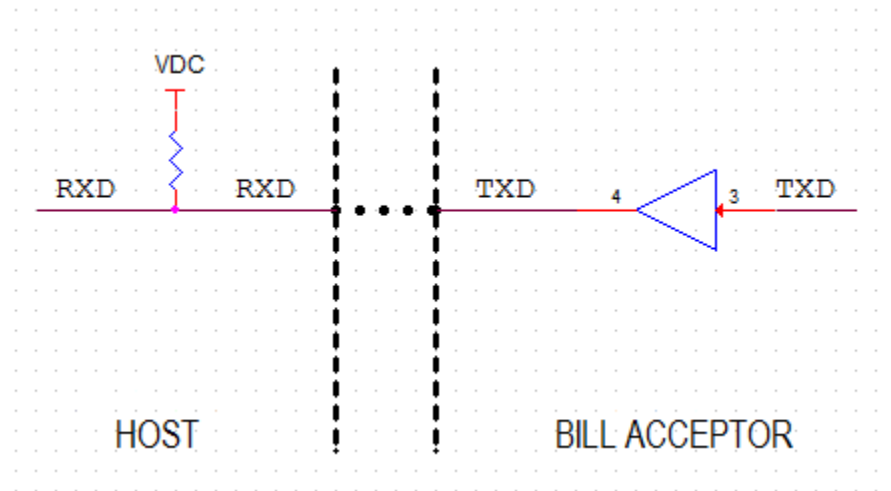


Figure 3.

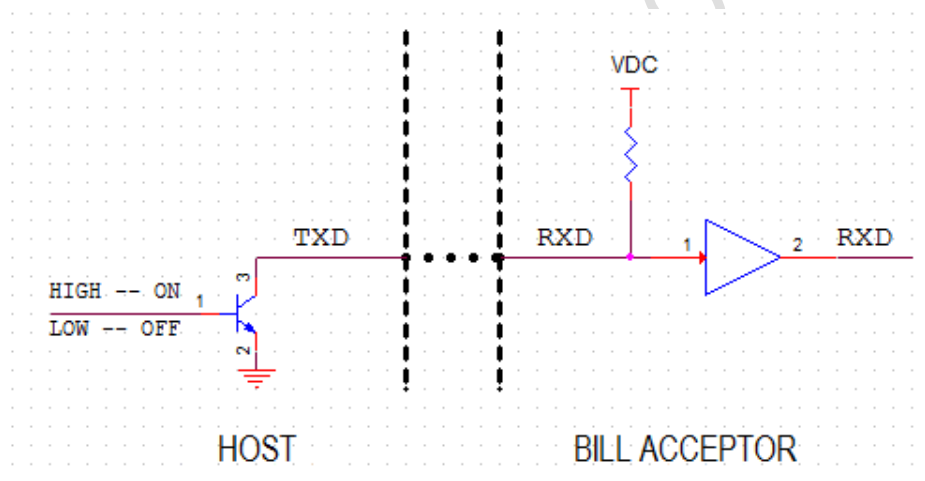


Figure 4.



(3) ccTalk Interface, See figure 5

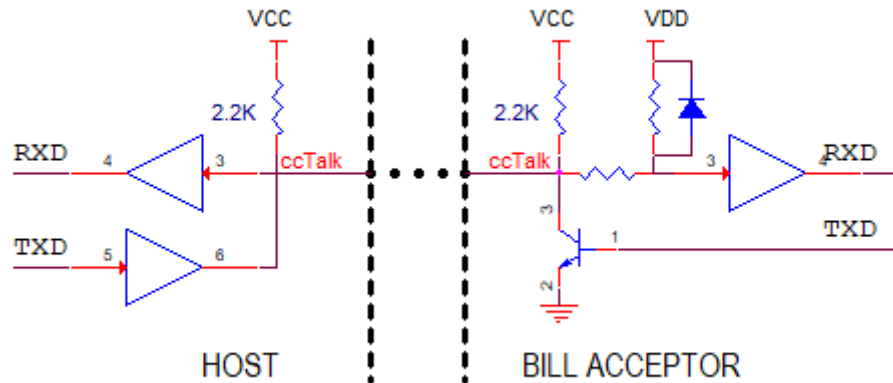


Figure 5

Genius7 DIP SWITCH SETTING

10 POSITION SWITCH(1) SETTING REFER TO APPENDANT

DIP SWITCH(2) 4 POSITION MODE SETTING

FUNCTION	SW1	SW2	SW3	SW4
PULSE OUTPUT LOW ACTIVE	On	On	Off	Off
PULSE OUTPUT HIGH ACTIVE	Off			
I-PROTOCOL (Ver 1.04)	Off	Off	Off	Off
I-PROTOCOL (Ver 1.06)	On	Off	Off	Off
MDB	X	Off	On	Off
ccTalk (CRC check)	On	Off	Off	On
ccTalk (Normal check)	Off			
003	X	On	On	Off
Setup	Off	On	On	On
Calibration	On	On	On	On

NOTE:

Please restart unit after setting.


Set all 4 position SW1~ SW4switchs to On, 10 position SW5~ SW10all in Off, then restart unit to get in to the calibration mode.

- Test mode: Switch (1) all in ON, Switch (2) all in Off.. Burn-in: Set all switch in ON.



F、Product disassembly and maintenance

1. Disassembly

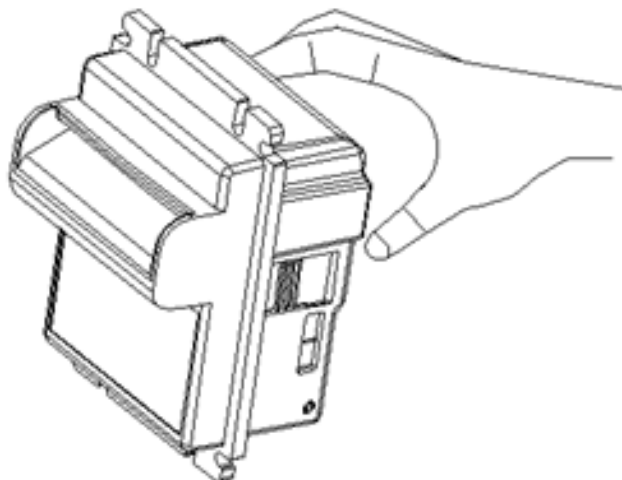

Never use an organic solvent such as gasoline or paint thinner to clean the unit.

2. **Cleaning** Any residuals in the channel of the sensors or LED will causing bill jam or decrease acceptance rate.
For the best performance, please cleanup internal channel regularly
Please refer to the following steps to cleanup internal channel :
- (1) Turn off the power and remove power cable.
 - (2) Open the back cover by press the both sides lock and pull out.
 - (3) Use a soft brush to clean the back cover and use clean paper to clean the bill path.

H、Troubleshooting

Entrance light is breathing Red/Green/Blue colors in normal operation. This light also indicated the errors by flashing color alternatively. The unit need to clean or re-calibration if only two colors remains.


BEZEL LED error messages

Number of flashing color LED :

Red	Green	Blue	Error message	Remarks	Record
0	1	1	Firmware upload or Firmware errors need to update	For factory setting	
1	0	0	In calibration mode, calibration error, needs to restart to calibrate	Factory / Setting	MFG
0	1	0	In calibration mode, calibration success. Restart and reset switch	Factory / Setting	Yes
0	0	1	Unit inhibit by switch setting or inhibit command from host		Yes
1	1	1	Power initialization, not connected with host		Yes
2	0	1	Bill jam in entry position	Auto recovery	Yes
2	0	2	Bill jam in the back	Auto recovery	Yes
3	0	1	Input or output sensor errors	Sensor damaged	Yes
3	0	2	Validation Sensors error.	Sensor damaged	Yes
3	0	3	Anti-Fishing error	Remain operation	Yes
4	0	1	Motor time out	Check every 10S, Auto recovery	Yes
5	0	1	No Valid Bill data, needs to update	Factory / Setting	Yes



G、Drawing Dimensions

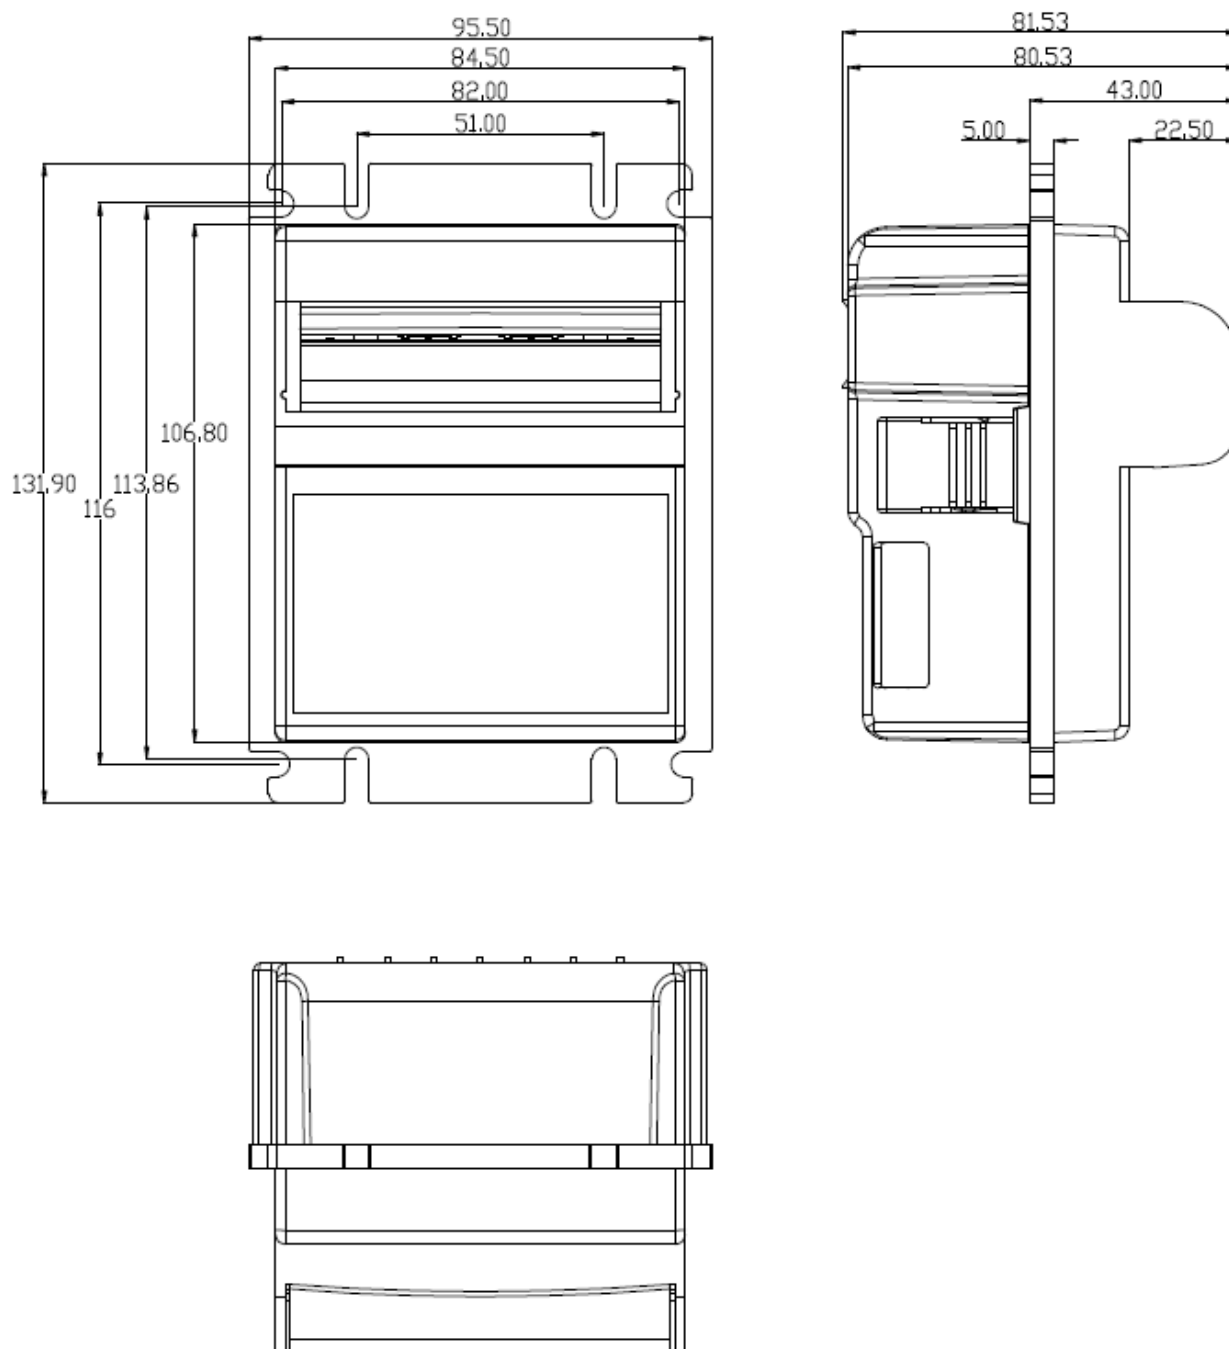



11240 Robin Park Ave., Las Vegas, NV 89138, USA
深圳市福田区红荔西路 7002-2 第一世界广场 A 座 10 楼 B1