 
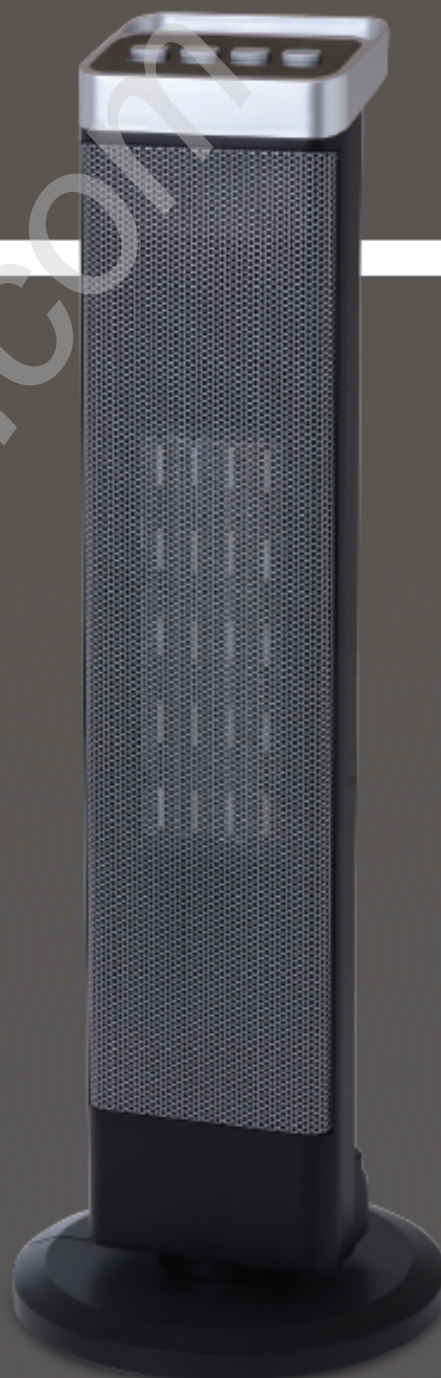 


# GOLDAIR™

## Ceramic Tower Heater

OPERATING INSTRUCTIONS

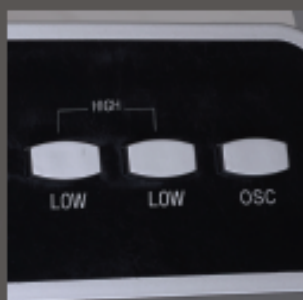

Model: GCT260

# General Care and Safety Guide

**Thank you for choosing a Goldair Ceramic Heater. This Goldair Heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.**

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance.
3. This appliance is intended for household use only and not for commercial or industrial use.
4. Indoor use only.
5. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
6. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
7. Always unplug appliance when not in use.
8. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team.
9. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Ensure hands are dry before handling the plug or main unit.
12. Do not locate the appliance directly below any power socket outlet.
13. Ensure heater is on a flat, stable, heat-resistant surface.
14. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
15. Carry out regular checks of the supply cord to ensure no damage is evident.
16. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
17. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
18. It is recommended that this heater is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
19. A correctly specified, undamaged extension cord may be used with this heater provided it is used in a safe manner.
20. Do not remove plug from power socket until the appliance has been switched off.
21. Do not remove plug from power socket by pulling cord; always grip plug.
22. Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
23. Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
24. Switch off and use handle provided when moving.
25. Do not place appliance close to radiant heat source.
26. Never use the appliance to dry clothes.
27. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
28. Do not sit on the appliance.
29. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
30. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
31. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
32. Children should be supervised to ensure that they do not play with the appliance.
33. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
34. There are no user serviceable parts installed in the unit.
35. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
36. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
37. **WARNING** you must not cover this heater. Covering this heater presents fire risk and will activate the safety fuse; permanently disabling the unit.

 
## TECHNICAL SPECIFICATION

Model No: GCT260  
 Supply: 220-240VAC 50Hz  
 Wattage: 2000W



# Assembly

## ASSEMBLY

Clip base A and B together

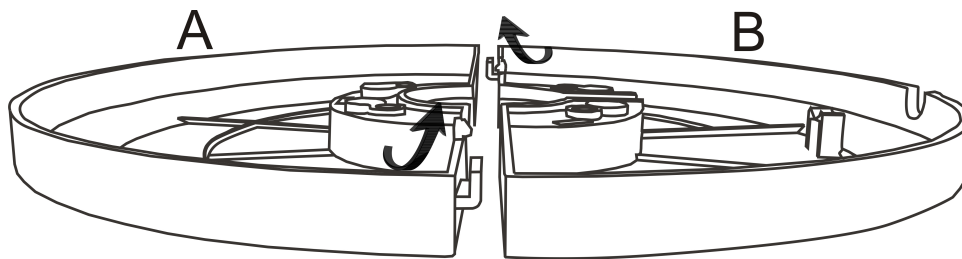

  Thread the power cord through the hole made by the 2 base parts and then place the base on the bottom of the main body of the heater and secure with the 4 screws provided.

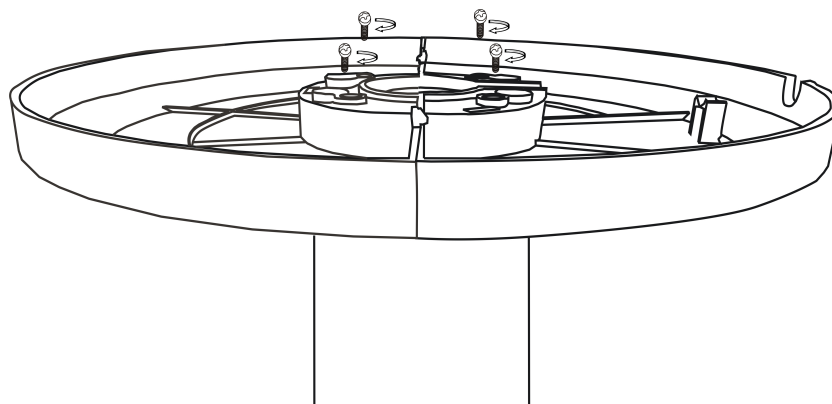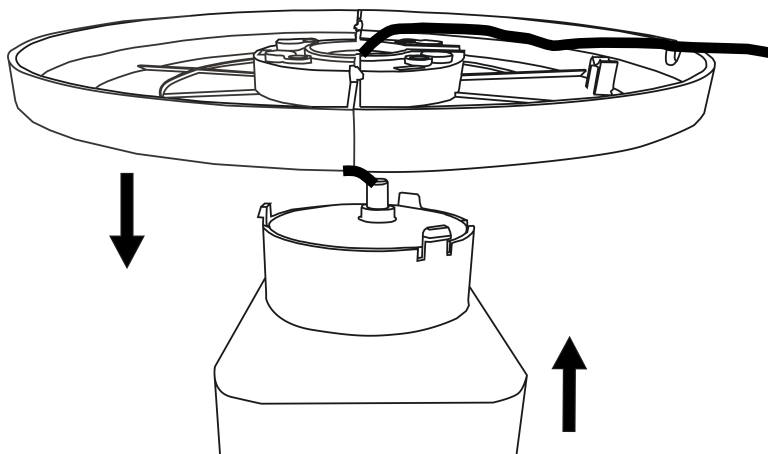

# Operating your Ceramic Heater

## OPERATING YOUR HEATER

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

**WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance.**

**WARNING: In order to avoid overheating, do not cover the heater.**

**WARNING: Never leave this heater unattended.**

**WARNING: Do not use this heater with a separate programmer, timer, remote-control system or any other device that turns the unit on automatically.**

## HEAT CONTROL SWITCHES

Check that the heat control switch is set to Off position before plugging the heater into the mains supply. For greater economy, use the High Heat setting initially and then switch to the Low Heat setting.

The control switches are:

ON/OFF

2 x LOW Button

OSC Oscillation



For Low heat press either of the LOW buttons.  
For High heat press both of the LOW buttons.

For the Low and High Heat settings the fan remains at the same speed, only the element changes to create the greater/lesser heat output.

## SAFETY DEVICE

This appliance has three protection devices:

The first device will automatically turn the appliance off if the appliance is not in the appropriate operating position.

The second device automatically disconnects & reconnects power to the appliance at a pre-set temperature.

The third device disconnects the appliance permanently in case of overheating, power spike or product damage, by means of a thermal fuse (It is non resettable).

**CAUTION:** The heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

## CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation.

Unplug the heater from the mains supply before cleaning.

Ensure that the heater has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.

Never use solutions such as benzene, thinners or polishing agents.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Ensure the heater is dry before plugging back into the mains supply.

## PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

# GOLDAIR

## SUPPORT AND TECHNICAL ADVICE

**Goldair – New Zealand**  
Monday – Friday 8am-5pm  
Phone +64 (0)9 917 4000  
Phone 0800 232 633  
[info@cdb.co.nz](mailto:info@cdb.co.nz)

**Goldair – Australia**  
Monday – Friday 8am-5pm  
Phone +61 (0)3 9365 5100  
Phone 1300 465 324  
[info@cdbgolldair.com.au](mailto:info@cdbgolldair.com.au)

## Two Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

### Goldair – New Zealand

CDB Goldair  
PO Box 100-707  
N.S.M.C  
Auckland  
  
Phone +64 (0)9 917 4000  
Phone 0800 232 633  
[www.goldair.co.nz](http://www.goldair.co.nz)

### Goldair – Australia

CDB Goldair Australia Pty  
PO Box 574  
South Morang  
Victoria, 3752  
  
Phone +61 (0)3 9365 5100  
Phone 1300 GOLDAIR (1300 465 324)  
[www.goldair.com.au](http://www.goldair.com.au)

### Goldair Two Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name

.....

Address

.....

.....

.....

Place Of Purchase

.....

Date Of Purchase

.....

Name Of Product

.....

Model Number

.....

Attach a copy of the purchase receipt to this warranty card

# GOLDAIR™

THIS PAGE IS LOW RES

PLEASE PRINT FROM  
'COVER' ARTWORK FILE  
PROVIDED

CDB  GOLDAIR

New Zealand  
PO Box 100-707,  
North Shore Mail Centre,  
Auckland, 0745  
[www.goldair.co.nz](http://www.goldair.co.nz)

Australia  
PO Box 574,  
South Morang,  
Victoria, 3752  
[www.goldair.com.au](http://www.goldair.com.au)