




## JOCEL JFE 014641 Built In Oven Instruction Manual

[Home](#) » [JOCEL](#) » JOCEL JFE 014641 Built In Oven Instruction Manual 

### Contents

- 1 JOCEL JFE 014641 Built In Oven
- 2 Built-in Oven (JFE 014641) Instruction Manual
- 3 Usage Instructions
- 4 Troubleshooting:
- 5 Tips for Baking and Grilling:
- 6 IMPORTANT SAFETY INFORMATION
- 7 OPERATION
- 8 ELECTRICAL CONNECTION
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts



**JOCEL JFE 014641 Built In Oven**



## Built-in Oven (JFE 014641) Instruction Manual

The Built-in Oven comes with a panel control, fan motor, grill, tray, lateral guides, door, and handle. It also has a digital timer and heating indicator.

### Usage Instructions

#### Before Starting the Appliance:

Ensure that the oven is installed correctly and that there is enough space between the oven and the drawer. It is recommended to have a qualified electrician install the oven.

#### Control of the Digital Timer:

Press the program button to set the cooking time and wait for the heating indicator to flash. Use the up and down buttons to set the cooking time. When done, press the program button again to confirm.

#### How to Use the Oven:

Before using the oven for the first time, remove any packaging materials and clean the inside of the oven. To bake or grill food, place it on the desired shelf position and set the temperature and cooking time according to the recipe or table for baking and grilling.

### Troubleshooting:

Problem	Cause	Solution
Temperature controller is not working	Incorrect settings on the controller	Reset the controller
Heating element is not working	The heating element may be damaged	Replace the heating element

### Tips for Baking and Grilling:

- Refer to the table for baking and grilling for cooking times and temperatures.
- For best results, preheat the oven before cooking.
- Use the correct shelf position for the food being cooked.

- When grilling, place the food on the grill rack and place the rack on the tray to catch any drippings.

### **Removing the Door:**

To remove the door, open it completely and lift it out of the hinges. To replace the door, align it with the hinges and push it down until it clicks into place.

### **Removing and Installing the Glass Door:**

Remove the screws that hold the glass door in place and carefully remove the glass. To install a new glass door, align it with the frame and secure it with the screws.

### **Important Safety Information:**

- Do not use the oven to dry clothes or store items.
- Do not touch the heating elements while they are hot.
- Do not use abrasive cleaners or sharp objects to clean the oven, as they may damage the surface.
- Ensure that the oven is installed correctly and that there is enough space between the oven and other appliances or objects.
- If there is a problem with the appliance, contact a qualified technician or electrician for assistance.

## **IMPORTANT SAFETY INFORMATION**

This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

**WARNING:** · The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. · Children less than 8 years of age shall be kept away unless continuously supervised. · This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. · A steam cleaner is not to be used. · Accessible parts may become hot during use. Young children should be kept well away when in use. · Do not use harsh abrasive cleaners or metal scrapers to clean the oven door glass as this can scratch the surface, which may result in the oven glass shattering. · Do not use abrasive products to clean the glass door panel to avoid scratching it. Otherwise, severe failure might happen to the appliance. · The appliance must not be installed behind a decorative door in order to avoid overheating. · The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

## **OPERATION**

### **WARNING! DANGER OF FIRE!**

· Do not allow paper or cloth to come in contact with any heating element. · Never store or use corrosive chemicals, vapors, flammables or nonfood products in or near oven. It is specifically designed for use when heating or cooking food. The use of corrosive chemicals in heating or cleaning will damage the appliance and could result in injury · If food inside an oven should ignite, keep door closed. Switch off the oven and disconnect from supply power. · Exercise caution when opening the door. Standing to the side, open the door slowly and slightly to let hot air and/or steam escape. Keep your face clear of the opening and make sure there are no children or pets near the oven.

necessary for cooking or cleaning purposes. · Only use utensils that are suitable for use with ovens.

**WARNING! DANGER OF EXPLOSION!** · Liquids and other foods must not be heated in sealed containers since they are liable to explode. · If smoke is observed, switch off the oven and keep the door closed in order to stifle any flames. · Do not allow any accessories or electric cables to contact the hot parts of the appliance.

**WARNING! HOT SURFACES! RISK OF BURNS!** · During use the appliance becomes hot.

Care should be taken to avoid touching heating elements inside the oven. · Warning! Accessible parts may become hot during use.

Young children should be kept away.

Never move racks or pans when they are hot. Wait until they cool.

**SAFETY ADVICES: IMPORTANT!** Always switch off the electricity supply at the mains during installation and maintenance.

**GENERAL INFORMATION** · This appliance is designed for domestic household use and can be built into a standard kitchen cabinet or housing unit. · Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above. · The appliance surfaces will become hot during use and retain heat after operation. · Any damage caused by the non-compliance of temperature tolerance of oven during installation or by the too close distance between the furniture and the oven will be borne by the owner.

80

This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.

**INSTALLATION** · The oven must be installed in accordance with the installation instructions and all measurements must be followed. · All installation work must be carried out by a competent person or qualified electrician.

## **CHILDREN**

Please dispose of the packaging material carefully. Packaging material can be dangerous to children. · Make sure to keep children away from the appliance, children should be supervised to ensure that they do not play with the appliance. It might be dangerous to allow the children to touch the appliance.

## **GENERAL SAFETY**

Do not place heavy objects on the oven door or lean them on the oven door when it is open, as it may cause damages to the oven door hinges. · Do not place those baked hot oil or fat unattended on unattended areas, as it will be a fire risk. · Do not place pans or baking trays directly on the base of the oven cavity, even if aluminum foil is placed below them. · Do not allow cable or plug to come into contact with the heating areas of appliance. · Do not install the appliance next to curtains or soft furnishings. · Do not attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.

## **ELECTRICAL SAFETY**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. · The appliance must be placed in such a way, that the power supply is accessible at all times. · Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label. · Never use a damaged appliance! Disconnect the appliance from the power source and contact your supplier if

it is damaged.


- Danger of electric shock! Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
- To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.
- Do not open the appliance casing under any circumstances. Do not insert any foreign objects into the inside of the casing.
- Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level, stable, clean and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, dripping and splashing water.
- Do not place objects with open flames, e.g. candles, on top of or beside the appliance.
- WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- The fixed wiring for applicant shall have an all-pole disconnection device.

SAFETY: · Attention, the glass is extremely fragile. Always wear gloves when handling. · For your safety, this product is made of tempered glass. This type of glass is highly resistant but has the feature to retain the “memory” of shocks. · Therefore, it should handle the product with the greatest care to avoid shocks and twists, especially during installation. · Avoid installing this type of product in areas where it would be highly exposed to shocks. · Do not let children play with the product. · Do not stick adhesive film on the glass surface. In case of breakage, it would generate large pieces that could be dangerous

## ELECTRICAL CONNECTION

DANGER OF ELECTRIC SHOCK! · Any electrical installation must be carried out by an authorized professional. · All fittings must be installed by a competent person in accordance with local regulations. If in doubt, consult a qualified electrician. · Important! Always switch off the electricity supply at the mains during installation and maintenance. We recommend that the circuit breaker switched off at the distribution board whilst work is in progress

## Documents / Resources

	<p><a href="#">JOCEL JFE 014641 Built In Oven [pdf] Instruction Manual</a> JFE 014641 Built In Oven, JFE 014641, Built In Oven, Oven</p>
---	--

## References

- [/// JOCEL Electrodomésticos](#)
- [/// JOCEL Electrodomésticos](#)

