




Handbook for the SX 'Ultrastar' imaging and guiding camera

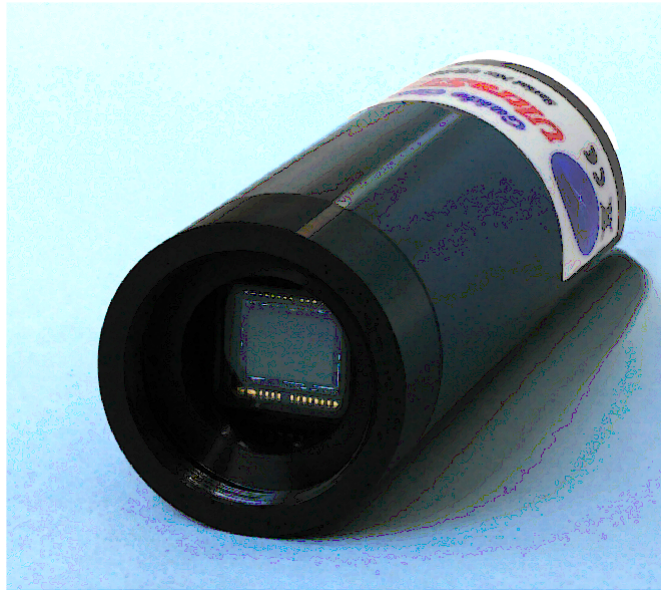

Thank you for purchasing a Starlight Xpress 'Ultrastar' camera. We hope that you will be very pleased with the performance of this product.

The Ultrastar is a higher QE and larger area version of the very popular 'Superstar' and is a very compact imaging camera, which is powered and operated via a single USB2.0 computer connection. It also provides an opto-isolated output connection for direct control of most mounts, via their 'Autoguider' sockets. This output is compatible with the 'ST4' style of RJ12 connection and supplies 4 'pull down' direction lines and a common return. Alternatively, you may send the mount control signals via a serial connection from the guider control computer. The Ultrastar utilises a very sensitive Sony 'ExView2' CCD (the ICX825AL) with an array of 1392 x 1040 pixels in a 'two-thirds-inch' format. Although the chip is not cooled, it has a very low dark signal and very little readout noise, so it can be used to guide on faint stars that are well beyond the reach of webcams and most CMOS chip based cameras.

The Ultrastar specification:


CCD	-	Sony ICX825AL ExView2 monochrome CCD
Pixel count	-	1392(H) x 1040(V)
Pixel size	-	6.45 x 6.45µm
Optical size	-	8.98 x 6.71 mm
Read noise	-	Typically 5.0 electrons
QE	-	Peak QE 75% (yellow light)
Gain	-	0.3 e-/ADU
Barrel size	-	31.75mm dia. x 85mm long (1.25 inch eyepiece push fit size)
Barrel thread	-	25.4mm x 0.75mm 'CS' mount lens thread
Input connection	-	'Mini B' USB socket for USB2.0

Output connection -	Standard RJ12 autoguider socket
Output type -	Opto-isolated 4 lines (N,S,E & W) pull down with common return line
Download rate -	Approx. 2 frames per second in binned 1x1 mode

Installing the Ultrastar:


In most cases, the supplied CD will install the drivers and software for you. Just run the appropriate 'Setup' file for your operating system. However, be careful if you are using Windows XP, as the XP drivers are not compatible with Windows 7 onwards. For XP, copy the XP drivers from the CD onto your hard drive and then remove the CD. Run the driver installation from the files on your hard drive. If you encounter any problems, you can download the latest drivers from our web page at <http://www.sxccd.com/support>.

The SX Ultrastar control software is Ultrastar.exe and will be installed from the CD setup program. An icon will appear on your desktop and may be clicked on to start the program. Please note that this requests an 'ini' file when first started, but just click 'OK' until you reach the main program window and then open 'Set Program Defaults'. Now just click 'Save' and the ini file will be created. Alternatively, PHD2, Lodestar Live, AstroArt and MaximDL all support the Ultrastar and may be preferred.

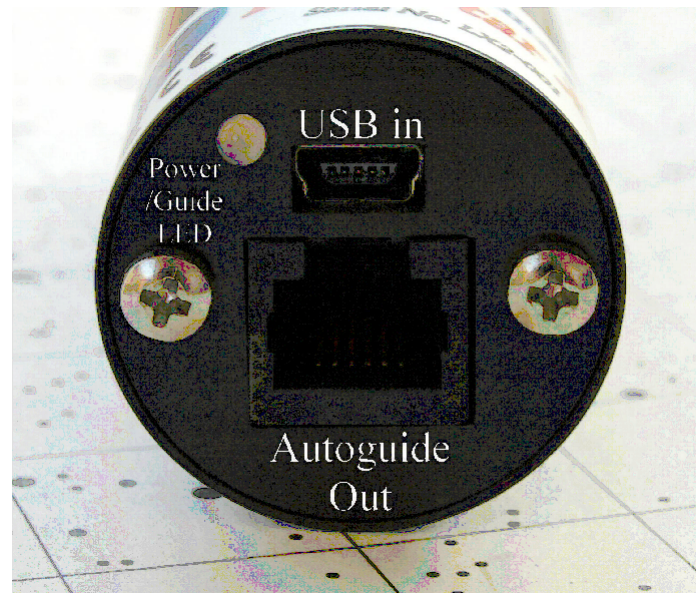


Imaging with the Ultrastar:


The Ultrastar makes an excellent imaging camera, especially when used as a 'Live View' imager. This method involves stacking many short exposures to achieve a high sensitivity with simple equipment. It is ideal for public outreach events, where the images can be seen 'developing' in real time, and for field use where the compact size of the Ultrastar makes for easy transport and setup. The free software 'Starlight Live' (previously 'Lodestar Live') from Paul Shears, makes Live Viewing very easy and is highly recommended. Starlight Live recognises the Ultrastar automatically and all that you need to do is to open the software and select 'Live stacking' and a suitable exposure time.

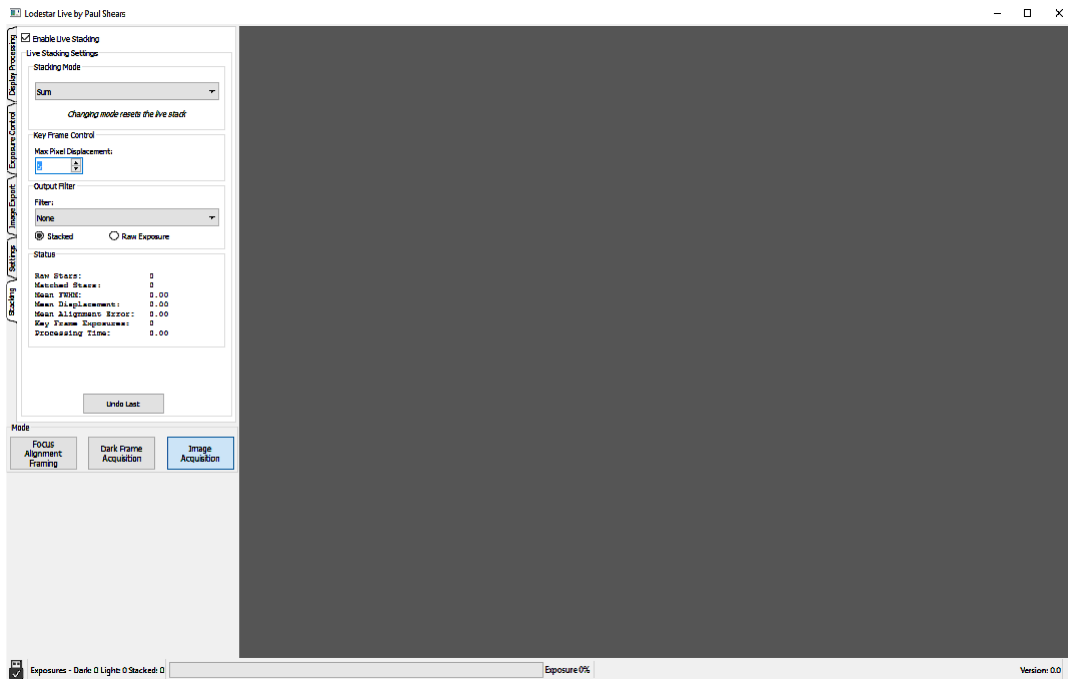

If stars are visible, Starlight Live will use these for registering the images together and the image clarity will steadily improve as the stack develops.

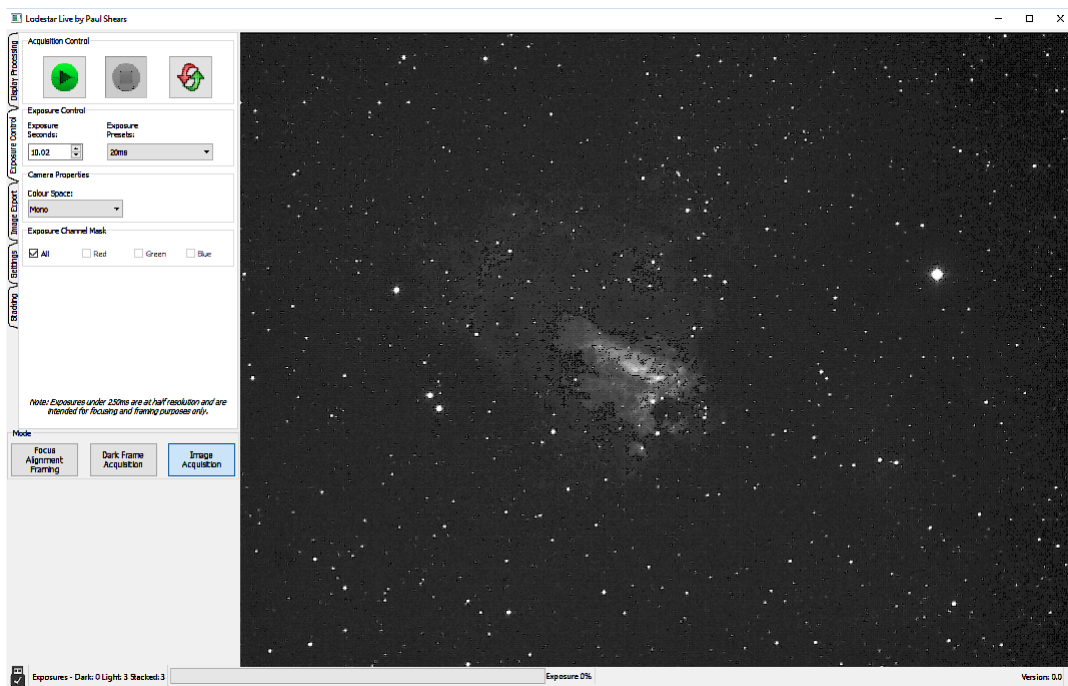

The image brightness and contrast may be manipulated by adjusting the sliders provided.

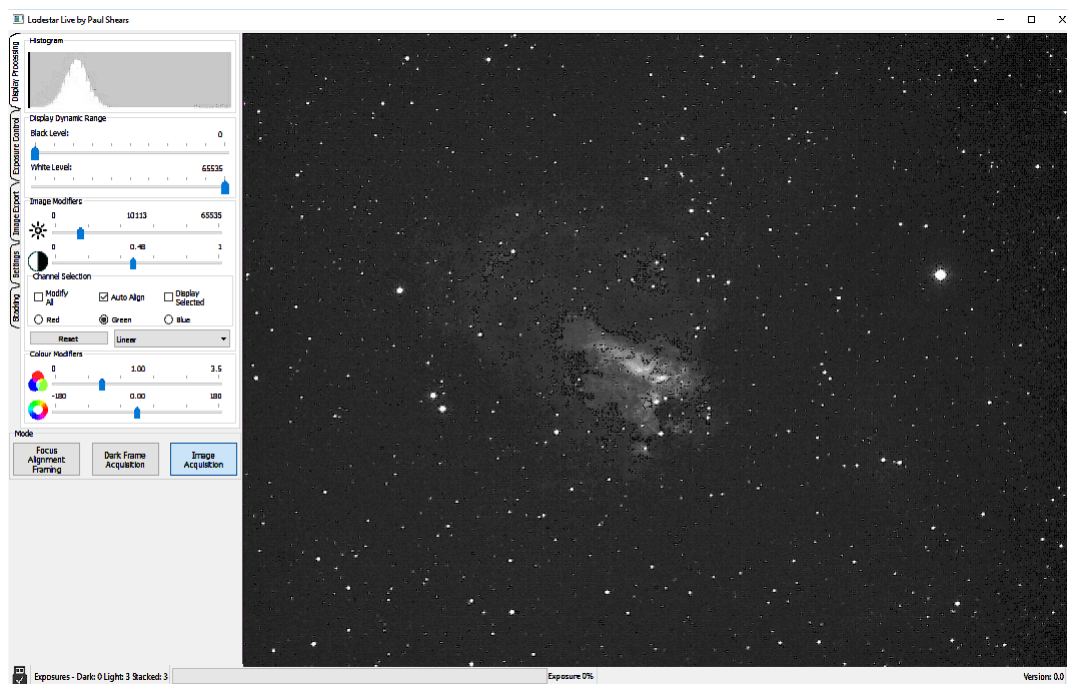


More details can be found in this YouTube video http://youtu.be/bwQvU3Zo_Pg

Conventional long-exposure imaging is also perfectly practical with the Ultrastar. The camera is uncooled, but its dark signal is very low and any warm pixels are easily removed by applying hot pixel filters, or by stacking 'dithered' images. Conventional dark frame subtraction can also be used.

A simple way of using the Ultrastar is to attach a suitable camera lens and 'piggyback' it on a driven telescope. You may find it difficult to buy a suitable 'C' mount lens, as the Ultrastar chip is too large to be fully illuminated by the cheaper versions that are widely available. You need a lens that is specified for 2/3 inch sensors and these tend to be expensive 'machine vision' lenses. A relatively cheap option is to use an SLR lens with a C to T or Pentax thread adaptor tube. The old Asahi 55 mm F1.8 SLR lenses can be bought for as little as 20 pounds on Ebay and work very well with the Ultrastar. The correct focal distance for these lenses is about 45 mm, so you will need a C to lens thread adaptor of about 32 mm overall length to achieve focus. A typical adaptor for a T2 lens is the Kipon KP-LA-C-T2 and there are versions for EOS, OM lenses etc. In this mode, the field is fairly wide and is good for comet and large nebula pictures. It also makes a very nice electronic finder.

If you are interested in smaller objects, such as galaxies, planetary nebulae and solar system objects, then a longer focal length is desirable. The Ultrastar may be slid into the 1.25" adaptor of an SCT and will give very nice images with relatively short exposure times. A Barlow lens may be required for imaging the planets.

Using the SX software is straightforward. Start Ultrastar.exe and click on the camera icon in the top toolbar (4th one from left). A control panel will open and you can set an exposure time from the list offered. Pressing 'Take picture' will give you an image and this can be saved as a FIT file for further processing.

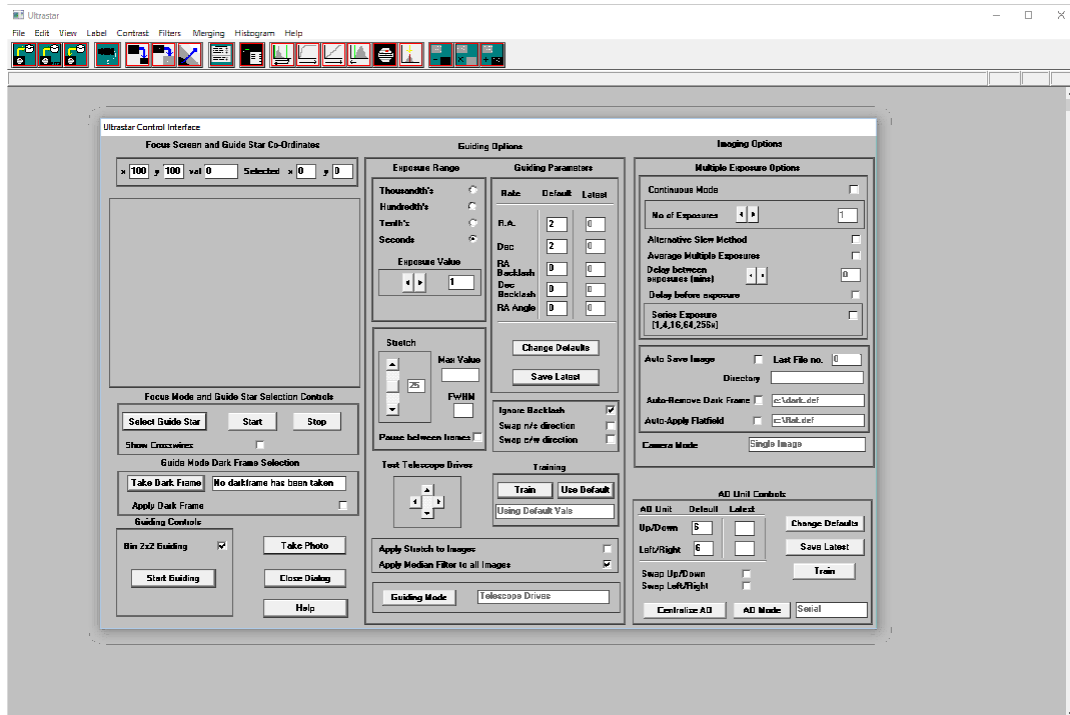

Various image processing functions are available from the menu bar and will be adequate for many general imaging purposes.

Many other imaging programs will recognise and work with the Ultrastar. Maxim DL5 and 6 will work, although the camera might appear as an 'Unknown' device in earlier versions of this software. However, it will still work correctly.



A 400 second exposure of M27, using an FSQ106. No darks, flats or bias frames used.

Guiding with the Ultrastar:

For guiding, the Ultrastar is generally used with a separate guide telescope, or via an off-axis guider assembly. It is designed to be inserted into a standard 1.25" focuser tube, but also has a 25.4mm 'C' type camera lens thread in the front to allow standard CCTV lenses or adaptors to be attached. Please note that the chip to lens distance is only 12.5mm and so a 'CS' to 'C' extension will be needed to permit a standard C lens to reach focus. Lenses designed for 'CS' mount cameras will focus without an extension tube, but many of these lenses cannot fully illuminate a two thirds inch format CCD, so take care when selecting a lens for this purpose.

A typical set up might consist of an inexpensive 80mm F5 refractor 'piggybacked' onto an SCT, with the Ultrastar fitted directly into its focus barrel. Many such telescopes are designed to be used with an inverting prism ahead of the eyepiece and so the focuser may be too short when the Ultrastar is inserted directly. In this case, an extension tube may often be made from a cheap Barlow lens assembly with the lens removed. This configuration can be seen in the picture below.



A guider attached to an 80mm F5 guide 'scope

The focal length of your guide telescope is not especially critical for good guiding, as the guiding software searches for the 'centroid' of the guide star image and can resolve shifts of far less than 1 pixel. Using a guide scope with a relatively short focal length (between 300 and 500mm) makes guide star finding very easy and this is a recommended setup for general purpose guiding.

The alternative (and more mechanically stable) option, is to use an off-axis guide prism on the main telescope drawtube. SX Ltd offer various assemblies for this purpose, such as our 'Mini wheel with OAG', or our 'Slim OAG + Filter Wheel'. The OAG can also be supplied on its own, with an extension tube to compensate for the thickness of the missing filter wheel. The OAG utilises the C mount thread in the Ultrastar to give a secure attachment.



The control of your telescope mount will depend on what inputs are provided. The Ultrastar output connector supplies 4 pull-down lines and a common return line to simulate an 'ST4' style autoguider output. The lines are isolated from the Ultrastar electronics by opto-coupler chips and so there is no risk of damage when connecting the outputs to mounts with unprotected electronics. A standard 'RJ12' style output lead is supplied with the Ultrastar and this may be connected to any ST4 compatible autoguider input socket on the mount. It is also possible to guide by using serial data from the computer to an RS232 input on the mount, but this will be covered later and can be less effective than the direct hardware connection. Note that the Ultrastar guide cable is a 'non reversing' cable and so is not compatible with some other guider cables, such as the SBIG versions.

The preferred guiding mode is generally 2x2 binned, as this gives both fast downloads and high sensitivity. However, if operating with a very short focus 'scope, or lens, high resolution mode may be best.

Guiding with the Starlight Xpress software

With the Ultrastar connected to the PC and mount, open 'Ultrastar.exe' and find the 'Set program defaults' menu under the 'File' heading. If this is the first run of the software, you will get a warning about the 'ini file not found', but ignore this and click on OK. You should now see a screen similar to the one shown below:

Set Program Defaults

Normal Camera Operation

Radius of Guide Star Mask: 7 Pixels, 8 Pixels, 9 Pixels, 11 Pixels, 13 Pixels, 15 Pixels

Background Image Area: Red, Lt Gray, Dark Gray

Autosave Directory: [] Last Num: 0 Set AutoSave Dir

Camera Vid/Pid Detection: Ignore Camera PID

Exposure Display: Hide exposure countdown

Save in 16bit Tiff format

Telescope Guiding Parameters

None, Meade LX200 (Tm), Autoguider Socket

Guiding Parameters: 1 Sec, 2 Sec, 4 Sec, 8 Sec

Default Guide Training Time

Pixels per sec in RA: 6 Pixels per sec in Dec: 6

RA Backlash: 0 Dec Backlash: 0

Hysteresis in RA (0-20): 0 Hysteresis in Dec (0-20): 0

Set Manually

70ms delay when changing correction direction

Turn off North Corrections Turn off South Corrections

Motor Control

Ignore drift less than 1.0 pixel, 0.8 pixel, 0.5 pixel, 0.2 pixel

Miscellaneous

1 Sec Delay in Focus Mode Disable Interrupts during Download Apply correction to all HighRes Images Debug Info Mode FITS Unsigned Integer Use Saved Exposure Values

Telescope Drive Direction: Swap n/s direction Swap e/w direction

AO Unit: AO Unit Available PC Com Port 1 Select half rate

Delay before Exposure: Delay Before Exposure 10 Seconds, 15 Seconds, 20 Seconds

Save Changes Cancel

The settings shown above are generally satisfactory as a starting point, although some will probably need refinement for best results. In the example shown, the 'autoguider socket' on the Ultrastar is providing the control signals to the mount, but you might alternatively use the 'LX200' mode via the serial port of the computer, if this is preferred. The Guiding Parameters are set to 6 pixels per second, which corresponds to the typical drift rate of a 1000mm focal length guide telescope when the mount is guiding at 0.5x sidereal speed. Longer focal lengths and/or higher guiding rates will require a larger value to be set so as to avoid excessively fast corrections, which can cause erratic guiding or even oscillation of the guiding errors to either side of the guide star.


Once the defaults have been set to values which you think will be approximately correct, save the settings and open the 'View' menu. In this you will see an option called 'Max palette stretch'. Open this and check the 'Activate stretch display' check box. This will automatically boost the image brightness so that faint guide stars can be easily seen – if necessary, you can adjust the slider for the best results.

Now click on the camera icon to open the Ultrastar control dialog, as below:

The image box will be empty at this point, but we need a frame to select the guide star from, so use the guiding options to select a suitable exposure time (say 1 second) and press the 'Start' button below the image box. A sequence of images will be shown and you can refine the image focus and centring as required. Before attempting to guide, it is wise to check that you have control of the telescope drive via the Ultrastar software. This is easily done by pressing the 'Move Telescope' buttons at the lower left of the control box. Check that pressing the arrow buttons causes the star field to drift left, right, up and


down, as appropriate. The LED at the back of the Ultrastar should change colour when the buttons are pressed. If all is well, move onto the next step below:

Once a good guide star has been found, press the 'Stop' button and then the 'Select guide star' button. You can now click the mouse arrow on the guide star and a green cross will appear, centred on the star (see above). Don't select a very bright guide star, as this will result in poor guiding due to saturation of the core pixels in the star image.

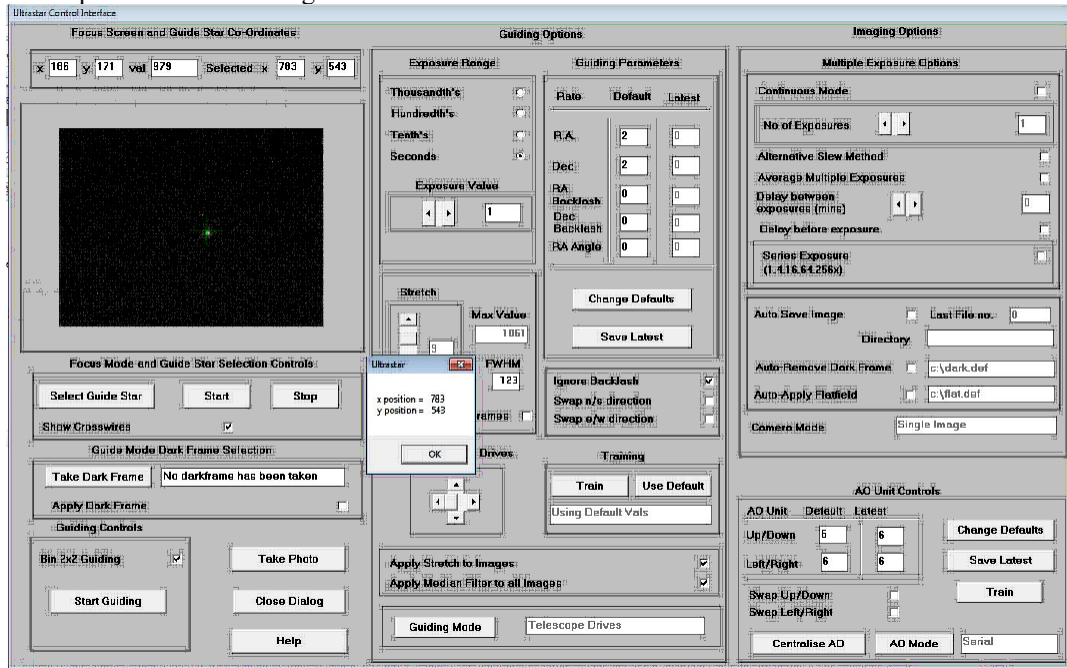

Once the guide star is selected, a small box appears with the star coordinates. If they look good, just click on OK.

Now click on 'Start Guiding':

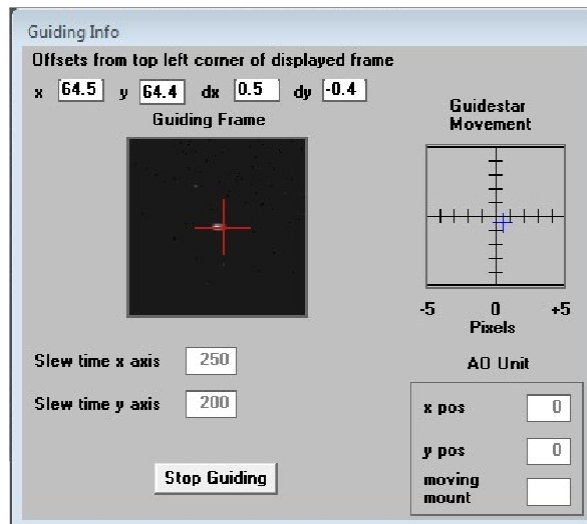


After a brief delay, the Guiding Info window will open, as above, and you will see the guide star, along with error values and a reticule showing the guide star location with respect to the reference position. If all is well, you should see the guide star location being forced towards the centre position with each successive guide image. However, it is quite likely that it will be pushed away from the correct position, due to an error in the guiding default settings. If this is the case, note the direction of travel, and then reverse the appropriate direction setting in the guiding defaults menu. For example, if the star moves away to the left or right, try reversing the 'Swap e/w direction' setting. If guiding works, but is

sluggish, try reducing the 'Rate' setting in the guider settings, or increase it if the guiding oscillates from one side of the guide star to the other.

Guiding with 'PHD2'


A very simple-to-use guiding program is Stark Labs 'PHD2' (<http://openphdguiding.org/>). I recommend this as a good and simple way to guide with the Ultrastar and I use it myself on most occasions.

To guide with PHD2, first press the 'camera' icon and select the 'Starlight SXV' option for the camera. If you have more than one SX camera connected, then choose 'Ultrastar' or 'SX-825' from the list.

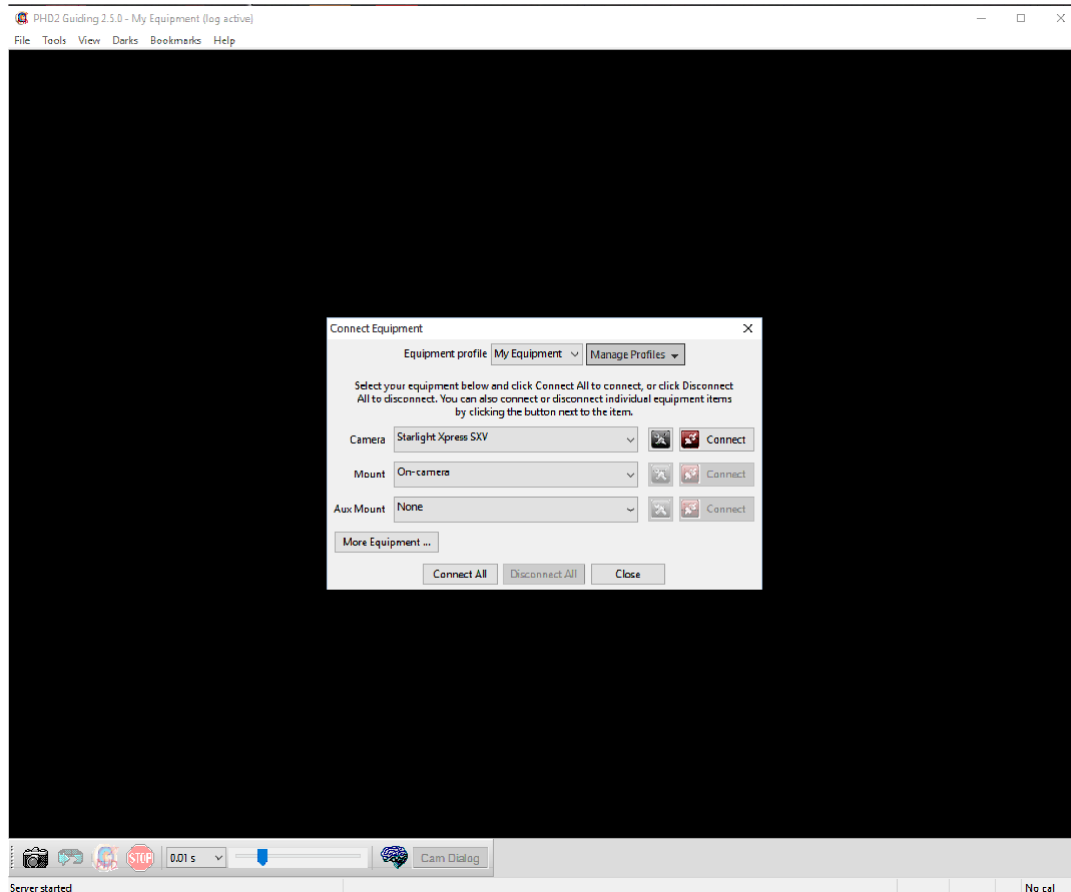


Next, press the 'Mount' button and select 'On camera' (this uses the RJ12 cable to feed corrections to the mount). You can also set these as the default by using the 'Manage Profiles' selection at the top of the box. Close the settings window when finished.

Now press the 'Loop' icon and you should see a continuously updating star field. Focus and select the best exposure time, then press 'Stop'.

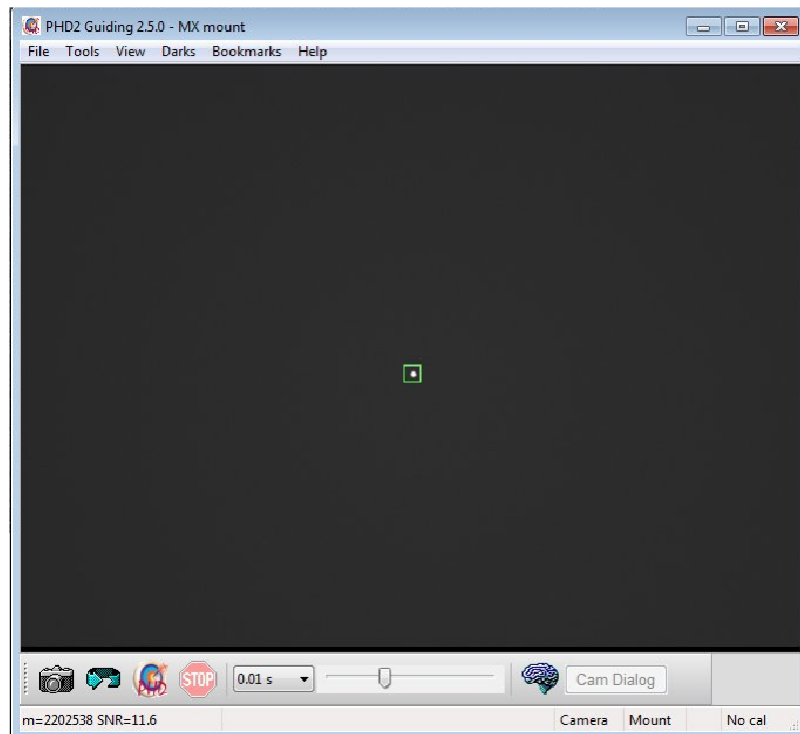

Click the mouse on a suitable guide star in your last image and then select the 'Target' icon. PHD2 will set up a cursor and box on the guide star and proceed to 'calibrate' the mount. After about 1 minute of calibration, it will start to guide on the star.

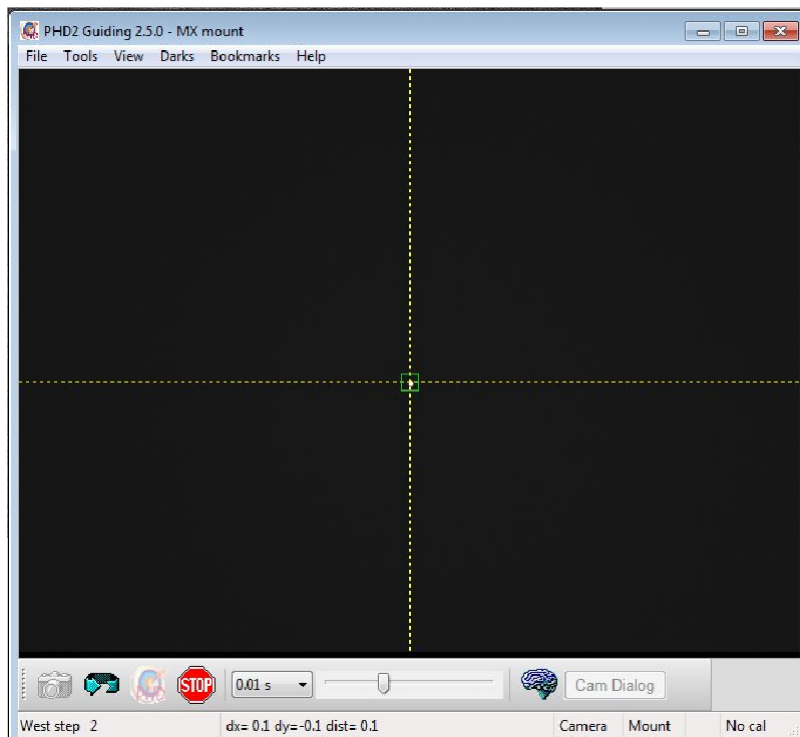

Ultrastar maintenance

The Ultrastar head is designed for a long and reliable lifespan and needs very little maintenance to keep it in good working order. The only common issue is with dust particles which collect on the CCD window and can shade areas of the image field. These are best removed with a quick blast of compressed air from a 'Dust off' aerosol, or similar air blower. More permanent marks may be removed with a drop of alcohol on a 'microfibre' lens cloth.

Dear User,

Thank you for purchasing a Starlight Xpress CCD Imaging camera. We are confident that you will gain much satisfaction from this equipment, but please read carefully the accompanying instruction manual to ensure that you achieve the best performance that is capable of providing.

In the unfortunate instance when the equipment does not perform as expected, may we recommend that you first study the fault finding information supplied. If this does not remedy the problem, then contact Starlight Xpress for further advice. Our message board service on the Starlight Xpress web site will often provide solutions to any problems.

The equipment is covered by a 12-month guarantee covering faulty design, material or workmanship in addition to any statutory Consumer Rights of Purchasers.

CONDITIONS OF GUARANTEE

- 1) The equipment shall only be used for normal purposes described in the standard operating instructions, and within the relevant safety standards of the country where the equipment is used.
- 2) Repairs under guarantee will be free of charge providing proof of purchase is produced, and that the equipment is returned to the Service Agent at the Purchaser's expense and risk, and that the equipment proves to be defective.
- 3) The guarantee shall not apply to equipment damaged by fire, accident, wear and tear, misuse, unauthorised repairs, or modified in any way whatsoever, or damage suffered in transit to or from the Purchaser.
- 4) The Purchaser's sole and exclusive rights under this guarantee is for repair, or at our discretion the replacement of the equipment or any part thereof, and no remedy to consequential loss or damage whatsoever.
- 5) This guarantee shall not apply to components that have a naturally limited life.
- 6) Starlight Xpress's decision in all matters is final, and any faulty component which has been replaced will become the property of Starlight Xpress Ltd.

For further info. or advice, please call:

Mr Michael Hattey,

Starlight Xpress Ltd.,

Unit 3, Brooklands Business Park,

Bottle Lane, Binfield,

Berkshire,

England. RG42 5QX

Tel: 01184026878

e-mail: michael.hattey@starlight-xpress.co.uk

Web site: <http://www.sxccd.com>