

USER MANUAL

CM 8

CYRUS-TECHNOLOGY.DE



Thank you very much

for the purchase of the CM8 SOLID from Cyrus Technology.

With the help of this user manual you will get a comprehensive understanding of the mobile phone, its functions and its simple operation.

This mobile phone with a color display is GSM-certified. It is dual SIM-capable and offers, in addition to the basic features such as word recognition, phone book, scene mode, information's, audio player, alarm clock, calculator, time and date, a range of other practical features that will make your work and leisure time activities easier.

If your mobile phone does not work as described in the user manual, please contact the manufacturer at info@cyrus-technology.de

COPYRIGHT DECLARATION

- » Cyrus reserves the right to finalize these instructions.
- » Cyrus reserves the right to change the technical product specifications without notice.
- » It is strictly forbidden to reproduce, use or publish the contents of this manual in any way whatsoever without the prior written permission of Cyrus.

The manufacturer reserves the right to change technical specifications without prior notice.
The Company reserves the right to change the contents of this manual without prior notice.
The manufacturer reserves the right to change the technical product specifications without notice.



Cyrus Technology GmbH
Hergelsbendenstraße 49, 52080 Aachen

Tel.: +49 (0)241 / 93 91 27-0
E-Mail: info@cyrus-technology.com

Table of contents

1. Safety information	4	4. The function menu	9	4.5 Multimedia	12
1.1 Safety instructions and precautions	4	4.1 Contacts	9	4.6 Games	12
1.1.1 General points	4	4.1.1 New	9	4.7 My files	12
1.1.2 Precautions when using the mobile phone	4	4.1.2 Writing a message	9	4.8 Tools	12
1.1.3 Precautions when using the battery	4	4.1.3 Call	9	4.8.1 SOS Settings	12
1.1.4 Precautions when using the charger	5	4.1.4 Deleting	9	4.8.2 Calculator	12
1.1.5 Cleaning and care	5	4.1.5 Deleting several	9	4.8.3 World time clock	12
		4.1.6 Import/Export	9	4.8.4 Alarm	12
		4.1.7 Sending a V-card	9	4.8.5 Calendar	12
		4.1.8 Other	9	4.8.6 Unit calculator	13
2. Basic functions	6	4.2 News	9	4.8.7 Memo	13
2.1 Inserting and removing the SIM card(s) and/or SD card	6	4.2.1 Writing a message (SMS and MMS)	9	4.8.8 Bluetooth	13
2.1.1 The SIM card	6	4.2.2 Inbox	9		
2.1.2 Inserting and removing the SIM card	6	4.2.3 Outbox	9	4.9. Internet	13
2.1.3 The Memory Card (SD Card)	6	4.2.4 Drafts	10		
2.2 The battery	6	4.2.5 Sent	10	5. Maintenance & Repair	13
2.2.1 Inserting the battery	6	4.2.6 Templates	10	5.1 Battery maintenance	13
2.2.2 The charging process	6			5.2 Telephone maintenance	13
		4.3 Call logs	10		
3. Quick start guide	6	4.3.1 Missed Calls	10		
3.1 Features	6	4.3.2 Dialed Calls	10		
3.2 Making a call	7	4.3.3 Received calls	10		
3.2.1 Dial field	7	4.3.4 Rejected Calls	10		
3.2.2 Additional Functions	7	4.3.5 Delete All	10		
3.3 Call options	7	4.3.6 Call timer	10		
3.4 Main keys	7	4.3.7 GPRS Counters	10		
		4.4 Settings	10		
		4.4.1 Call settings	10		
		4.4.2 Phone Settings	11		
		4.4.3 Display	11		
		4.4.4 Safety	11		
		4.4.5 Profiles	11		
		4.4.6 Connections	12		

1. Safety information

Please read this manual carefully before using your phone for the first time to ensure proper use.

If your phone is lost or stolen, please notify your telecommunications provider immediately to deactivate the SIM card and prevent it from being used by third parties. For this you need the IMEI number of your mobile phone, which you will find either on the corresponding invoice or on the outside of your original packaging.

As a preventive measure, you should set up an individual PIN code for your SIM card and not leave the mobile phone in the car, for example, in plain view, but store it in a hidden place or carry it with you.

1.1 Safety instructions and precautions

1.1.1. General points

- » Never use the phone in an airplane or hospital. This could adversely affect both the aircraft's navigation system and medical instruments. In many airplanes and hospitals the use of mobile phones is therefore prohibited.
 - » Your phone may cause problems with hearing aids, pacemakers and other electronic medical devices. Please contact your doctor or the manufacturer of medical devices for further information.
 - » Pay attention to traffic safety.
Be careful when driving a vehicle. Only use a hands-free car kit to make calls while driving. If you do not have this, interrupt the journey before using the telephone. Please consider applicable laws and regulations.
 - » Pay attention to environmental safety.
Never use the phone at a gas station, oil storage facility, chemical plant or near flammable or explosive objects. Consider all applicable laws, regulations and hazard symbols.
 - » Place the phone, battery and charger in a place that is not accessible to children.
 - » Use the original battery and charger and charge the battery correctly. Charging the battery not with the original charger may result in loss of the protective circuit function within the battery. In addition, chemical reactions may occur, the battery may leak, heat up, smoke may occur and the battery may ignite.
 - » Do not place the battery in a microwave, oven or other pressure vessel. The resulting damage to the structure can lead to heating, smoke and inflammation of the battery. If a leak is found on the battery (or if a strange smell is perceived), the battery should be kept away from fire, as otherwise the leaked electrolyte can catch fire or cause other dangers.
 - » Do not use the device in places where flammable and explosive gas can escape, as this may cause a fire or breakdown.
 - » Do not store the phone in a place with a temperature of below -25°C and above 55°C. Too high a temperature could damage, bend or melt the phone. If the temperature is too low, humidity can be generated inside the battery, which can damage the circuit board if the battery is then brought to a place with normal temperature.
- ### 1.1.2 Precautions when using the mobile phone
- » Do not modify the phone on your own, as this may cause damage to the phone, leaks and circuit failures.
 - » Do not use the LCD display to mount other objects, as this will break the LCD display and leak liquid crystals. If the LCD liquid comes into contact with your eyes, there is a risk of blindness. Immediately rinse with water (do not rub your eyes) and go to the hospital immediately.
 - » In rare cases or selected vehicle models, the mobile phone can have a bad influence on the vehicle's electronic equipment. Please do not use a mobile phone to avoid security risks. If your vehicle is equipped with an airbag, please do not place a mobile phone on it. Serious injuries may occur if the airbag opens.
 - » Pay attention to the storage environment. Keep the phone away from magnetic media. Mobile phone radiation can erase the information stored on the magnetic device.
- ### 1.1.3. Precautions when using the battery
- » Avoid getting moisture and water inside the device as this may cause short-circuit or other defects in the device.
 - » Please do not remove or modify the battery by yourself as it may leak, overheat, burst or catch fire.
 - » Do not throw old rechargeable batteries in the household waste, but dispose of them in designated places at dealers or directly at recycling yards.
 - » Do not throw the battery into the fire, as this may cause a fire or explosion.
 - » When inserting the battery, do not exert any force as it may leak, overheat, burst or catch fire.
 - » If the battery fluid comes into contact with your eyes, there is a risk of blindness. In case of contact, rinse immediately with water (do not rub your eyes) and go to the hospital immediately. If the battery fluid comes into contact with your skin or clothing, it can cause skin burns. Please rinse immediately with water and see a doctor if necessary.
 - » Do not use the battery at a fire or in a place with high temperature, such as a heater, as it may leak, overheat, burst or catch fire.
 - » If the battery warms up, discolors or distorts during use of the phone or charging, please stop using it and replace it with a new battery.
 - » If the battery fluid leaks or if unpleasant smells develop, keep away from fire to avoid explosions.
 - » Please ensure that the battery does not come into contact with moisture as overheating, smoke or corrosion may occur.
 - » Do not use the device in direct sunlight and high temperatures, and do not insert the battery as this may cause leakage of liquid or overheating, degrade performance and shorten the life of the device.

1. Safety information

- » Please do not recharge your phone more than 24 hours at a time.
- » Please place the battery in a cool, ventilated place protected from sunlight.
- » The battery life of the phone is limited. Frequent charging gradually reduces battery life. If the battery life is greatly reduced, the battery should be replaced.

1.1.4. Precautions when using the charger

- » Please do not modify the charger yourself, as this may cause injury, electric shock, fire or damage to the charger itself.
- » Please use 220 VAC. Use of other voltages will cause leaks, fire and damage to the phone and charger.
- » Avoid quick chargers, as this may result in electric shock, smoke and damage to the charger.
- » Do not use the charger if the power cord is damaged, as it may cause fire or electric shock.
- » Please remove any dirt from the socket.
- » Please do not place any water reservoirs next to the charger to avoid splashing water onto the charger and causing leaks or other problems. If the charger comes into contact with water or any other liquid, immediately disconnect the power supply to prevent short circuits, fire, electric shock or damage to the charger.
- » Do not use the charger in the bathroom or other places where there is high humidity, as this may result in electric shock, fire or damage to the charger.
- » Please do not use the chargers, cables and sockets with wet hands as this may cause electric shock.
- » Do not place any weight on the charger, as this may cause electric shock or fire.

- » Before cleaning and servicing, unplug the charger from the wall outlet.
- » When charging the battery, please avoid places with direct sunlight, high temperatures, humidity, dust or vibrations as this may cause breakdowns.

1.1.5. Cleaning and care

- » If you want to clean your device under running water, please make sure that all connections, covers and the battery compartment are tightly closed. IMPORTANT: Please also disconnect all cables to clean the device. Do not charge or open the phone in a damp environment, as the battery and the charger should not get wet. For this reason, clean the battery and the charger only with a soft, dry cloth and without alcohol, thinner or benzene.
- » Dirt can lead to poor contact with the socket and prevent charging. Please clean the devices regularly.

2. Basic functions

2.1 Inserting and removing SIM card (s) and/or SD card

2.1.1 The SIM card

Before using the mobile phone, you must insert a valid SIM card provided by the network operator. It allows you to establish a network connection.

Information from the phone book such as name and telephone number as well as short messages are stored in the SIM card's chip. The SIM card can be removed and replaced with the SIM card of another network operator.

To prevent loss of or damage to the information on the SIM card, you should avoid touching the metal contact surface or using the SIM card in an electrical, magnetic location. Once the SIM card is damaged you can usually no longer use the phone.

Note:

Make sure you turn off your phone before removing the SIM card. Never remove or insert the SIM card while the power supply is connected, as this may damage the SIM card and the phone.

2.1.2 Inserting and removing the SIM card


The metal contact surface of the SIM card is easily damaged. Outside the bracket, it must therefore be handled with care.

Turn off the phone, remove the back cover, battery and any other external power source. Insert the SIM card into the card slot in the direction of the arrow as indicated above.

The second SIM card is installed according to the same principle. To remove the SIM card, pull it lightly.

Note:

The procedures described here apply to the use of two SIM cards.. If you use only one SIM card deviations may occur.

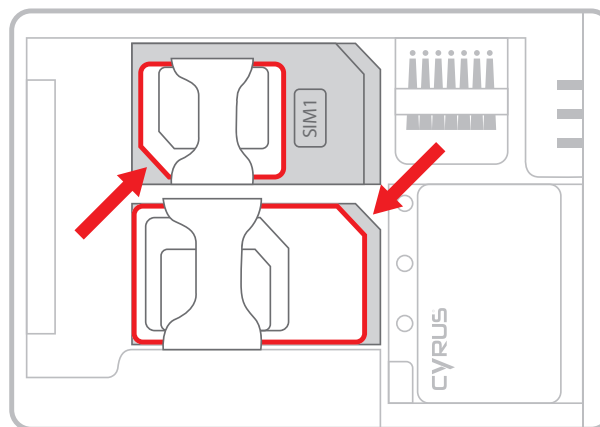

2.1.3 The Memory Card (SD Card)

Remove the rear cover and battery. Slide the memory card into the slot at the bottom right, in the direction indicated by the arrow.

2.2 The battery

2.2.1 Inserting the battery

Remove the rear cover of the phone. Insert the battery with the side of the metal surface into the battery compartment of the phone. Use your fingers to gently press down the battery until it snaps into place.

2.2.2 The charging process

Connect the AC adapter to the charger cable to complete the charger.

Plug the USB port of the charger into the charger's charging port on the phone and plug the charger's power supply into the wall outlet. After the plug is plugged in, the charging starts. The battery icon in the upper right corner of the screen indicates the progress of the charging process. In standby mode or when the mobile phone

3. Quick start guide

is switched off, the battery icon appears in full screen. If the battery is fully charged and the charger can be removed from the phone.

A warning message appears when the battery is low. If the battery is fully discharged, the power supply is too low and the phone switches off automatically. Avoid using the phone with low battery power for a long period of time as otherwise the quality and longevity of the battery will be compromised. Please do not charge the device for too long, disconnect it from the charger as soon as the battery charge reaches 100%.

Note:

To ensure that your phone works properly, please make sure you use the charger provided for this purpose.

3.1 Features

In addition to the basic functions, your mobile phone has many other helpful functions. Below you will find a short introduction:

Contacts (phone book)	Up to 300 contacts can be stored in the phone book. From here SMS messages can be sent and phone book entries between the SIM cards can be duplicated.
Scene mode	Allows you to save different settings regarding ring tone, volume, system alert tone, key tone, etc.
Call logs	Your phone automatically stores information about incoming, outgoing or missed calls that you can view.
Multimedia	Audio player, FM radio features.
Camera	Your mobile phone has a camera. The camera's settings can be customized as required.
Settings	You can make individual settings for network settings, mobile phone sets, security settings, etc. as required.

3. Quick start guide

Input method Your mobile phone uses the keyboard input. It supports the multiple input mode for entering letters, numbers, characters, symbols, etc. as well as the multilingual input method.

3.2 Making a call

3.2.1 Dial field

There are several ways to make a call:

- » Pressing the keypad automatically brings you to the call interface. Here, the telephone number can be entered manually via the keypad.
- » After extracting from the received text messages, the number is displayed.
- » Dials the phone number of the contact stored in the phone book.
- » If you accidentally dialed the wrong number, click the red button to hang up.

3.2.2 Additional Functions

1. Answering and rejecting a call

When you receive a call, the phone will respond according to the settings you have made (call tone, vibration, etc.). The name or number of the caller is displayed on the phone's display. Press the green handset key to answer the call and the red handset key to reject the call.

2. Making an international call

If you want to make an international call, please hold down the * key until the plus sign appears. Enter the country code, area code and telephone number. Press the green handset key to make the call.

3. Query of the IMEI number

Select „* # 06 #” from the keyboard to query the IMEI number.

4. Ending calls

To end the call, press the red hang up button.

3.3 Call options

The following options are available during a call:

- Left function key: Menu
- 1. Connecting to BT headphones
 - 2. Add a new call
 - 3. Holding the line
 - 4. Start recording
 - 5. Sound off
 - 6. Adjusting the volume
 - 7. Phone book
 - 8. Call logs
 - 9. Messages

- Control pad:
- Volume
 - » Control pad up (louder)
 - » Control pad down (quieter)

- Right function key: Hanging up (alternatively also by pressing the red hang up button)

3.4 Main keys

Button	» Description
Left function key (Pre-/Okay key)	» Depending on the respective screen display above the key. The function key also serves as the primary key for locking and unlocking the keys.
Right function key (Back button)	» Depends on the respective screen display above the key-
Direction keys	» To scroll through the menu, phone book, etc., in standby mode:- Left: to write notes Right: for scene mode, Up: music player Down: Alarm clock
Button dial 1	» To use SIM1 calls and receive calls. Click this button to start SIM1 call recording in standby mode.
Red handset button	» The red handset button serves the following functions: Back, hang up, lock keys, wake up.
0-9 Numeric keys	» Keys cannot be used during the key lock. Buttons 1,2 and 0 in the corresponding combination are excluded in order to be able to dial an emergency call. In addition, the left-hand function key and the * key are enabled to unlock the keys
# button	» Press the # button to switch between the following scene modes: Normal, silent and meeting.

3. Quick start guide



4. The function menu

4.1 Contacts

This feature allows you to browse, save, edit and delete contacts. The storage capacity of the SIM card depends on the respective card. Up to 300 contacts can be stored in the phone's phone memory.

Click on „Add contact“ in the phone book interface. You can then specify the contact name and phone number and store it then in the memory.

Click on „Options“ in the phone book interface to perform one of the following actions:

Note:
For example, the data records are stored on SIM card 1.

4.1.1 New

Create new contacts on your SIM card or phone memory.

4.1.2 Writing a message

Sending text Messages	You can send text messages to the current number.
Send MMS	You can send an MMS to the current number.

4.1.3 Call

Call the contact you have just selected by pressing the green handset button.

4.1.4 Delete

Remove the desired contact by selecting it and deleting it using the options.

4.1.5 Deleting several

Go to Options in the phone book and select the 5th item to select multiple contacts to remove. After selecting the corresponding contacts, confirm with OK.

4.1.6 Import/Export

You can import or export contacts from the other SIM card.

4.1.7 Sending a V-card

You can send this phonebook entry via SMS, MMS or Bluetooth.

4.1.8 Other

Speed dial	Can assign speed dial functions to the number keys 2-9.
Own number	You can add your own number here.

You can also create new groups: the default groups are Family, Friends, Business and Other.

4.2 Messages

4.2.1 Writing a message (SMS and MMS)

You can use this function to write short messages. If you are in input mode, you can use the Options menu item to perform further actions (send message, insert templates, add contact information, etc.).

4.2.2 Inbox

Received messages are displayed here. The following options are available:

Delete	Delete message.
Reply	Send reply message or multimedia message to the sender.
Forward	Forward message to other contacts.
Call	Call sender of the message.
Add sender to	Add this record to a contact.
Details	You can view the shipping date and location of this message.

4.2.3 Outbox

Displays messages that have not been sent. The symbol in front of the sender number indicates whether the message is stored on the SIM card or on the phone.

The following options are available:

Resend	Send SMS/MMS againn.
Delete	Delete message.
Lock	Lock message but do not delete.
Mark	After the check, you can remove the lock or perform another action.

4. The function menu

4.2.4 Drafts

Texts written in advance are stored here. The icon behind the message indicates whether the message is stored on the SIM card or on the phone.

Following options are available:

Delete	Delete message.
Edit	Edit message.
Display	Display of information content.
Send	Send message (again).

4.2.5 Sent

Saves successfully sent messages. The icon behind the message indicates whether the message is stored on the SIM card or the phone.

The following options are available:

Delete	Delete message.
Forward	Forward message to other contacts.
Mark	After the check, you can remove the lock or perform another action.

If you open a message, you have the following options:

Delete	Delete message.
Forward	Forward Message to Others.
Call	Call recipient of the message.

4.2.6 Templates

You can select the message template to send or edit it.

4.3 Call logs

4.3.1 Missed Calls

Displays the list of phone numbers you missed recently.

4.3.2 Dialed Calls

Shows the numbers you have recently dialed. Choose Options in the respective tab to perform the desired action:

Details	You can display the details of this data record, such as number, date, time, and so on.
Call	Call the number directly.
Write message	You can send a SMS/MMS to this number.
Add to contacts	Saves the corresponding number in the phone book.
Add to blacklist	This record can be added to the blacklist.
Delete	Deletes the call log.
Delete all	Delete all data records.
Mark	Mark this record.

4.3.3 Received calls

Displays a list of phone numbers you have recently received.

4.3.4 Rejected Calls

Displays a list of the phone numbers you recently rejected.

4.3.5 Delete All

You can delete all stored calls (incoming, outgoing, rejected, etc.) at the same time.

4.3.6 Call timer

Show all call times.

4.3.7 GPRS Counters

Displays the traffic information used on the SIM card.

4.4 Settings

4.4.1 Call settings

- » Call forwarding
Call forwarding applies to future calls and takes place according to the settings you have made. The following options are available:
 - Unlimited call forwarding
The incoming call is immediately forwarded to the mailbox or a user-defined phone number.
 - Forwarding when busy
If your phone is occupied, the incoming call will be forwarded to the voicemail or a user-defined phone number.
 - No response Options forwarding
If a call is not answered, the incoming call is forwarded to the mailbox or a stored phone number after a set period of time.
 - Forwarding if not available
If your phone cannot be reached because it is switched off or in flight mode, for example, it will forward the call to the mailbox or a user-defined other telephone number.
 - Delete all forwarding's
You can delete all configured call forwarding settings.

4. The function menu

» Call waiting

If you are called while you are already on the phone, you will hear a soft knocking sound. You can now switch between the already started and waiting call.

» Call barring

Here you can select which calls may not be made or accepted (all incoming calls, incoming roaming calls, international calls, etc.).

» Caller ID

Set whether your phone number is displayed or suppressed during calls.

» Others

- IP prefix: IP number adjustable
- Gesprächszeiterinnerung (Minuten): Wählen Sie aus den Vorlagen, oder konfigurieren Sie selbst eine Zeit als Erinnerungsintervall während eines Telefonats.
- Talk time reminder (minutes): Choose from the templates or configure your own time interval reminders during a call.
- Automatic redial: with this function activated, your mobile phone starts a new connection attempt as soon as the desired caller is available again.
- Vibration when connected: By activating this function, you can recognize that you are connected to the desired caller by a short vibration of the mobile phone.
- Automatically record voice calls: When this function is activated, the call is automatically recorded.

Note:

The above function requires network support. If you want to use this function, contact the network operator

4.4.2 Phone Settings

» Date and time

Here you can set and format the date and time.

» Language settings

You can select the language of the phone.

» Shortcut Settings

Enter shortcuts for key functions.

» Automatic Power On/Off

You can select a time at which your phone is automatically turned on or off.

» Energy management

Check the battery capacity.

» Restore settings

Reset your phone to factory settings. The password can also be restored.

4.4.3 Display

Turning display on/off

You can make various settings regarding the display.

Wallpaper Settings

You can set different background images.

Settings for the display in idle mode:

Contrast

You can adjust the brightness of the backlight for the screen.

Keyboard background illumination time

You can set different backlighting times for the keyboard.

Automatic key lock

You can specify the period of time after which the automatic key lock is to be activated.

4.4.4 Safety

» PIN

You can set, change, or disable the PIN code. To create, remove or change the PIN, the current correct PIN must be entered. If you have set the PIN, you must enter this PIN each time you open the phone. If you enter the wrong PIN three times the SIM card will be blocked. To unlock you need the PUK1 code. If you have misplaced your PUK1 code or need a new one, please contact your network operator. The default PIN number is 1234.

» PIN2-Code

You can change the PIN2 code. For further information, please contact the network operator.

» Locking the phone

You can assign or change a password. If you create a password, you must enter it each time you reboot your phone.

» Privacy

You can set a password to protect your phone from third-party access in standby mode. This password must always be entered when you want to use your mobile phone.

» Lock screen with End key

Set the red handset button as a button to lock and wake up the phone.

» Blacklist

Add the number you want to block to this list. Select whether to block all calls and text messages of this number.

4.4.5 Profiles

The term scene mode describes the following audio profiles: Normal, mute, meeting, inside and outside.

Rename

Here you can rename the profile.

Set ringtone

You can set the ringtone.

4. The function menu

Volume	Sie können die Lautstärke des Telefons festlegen.
Ring type	Here you can determine the type of ringtone.
Other warning tones	You can set the button sound, low battery alarm, power ring tone, dial tone and other tones.

4.4.6 Connections

Displays the data connections of the respective SIM card and account.

4.5 Multimedia

Camera	You can take pictures of subjects targeted with the camera.
Videoaufnahme	Start a video recording here.
Bild	View your videos and pictures here. In the view, you will find the options that you can use to do this.
Audio	Recorded or stored audio files can be played back in your music player.

Note:

The MP3 files should be stored in the phone memory or on the SD card in your audio folder.

Video	Here you can watch your video recordings.
Radio	Search for a suitable station frequency to receive the desired radio station.



Note:

You must connect the headphones to use the radio.

Voice recorder Record your voice memo here.

4.6 Games

The device has built-in games for your entertainment.

4.7 My files

Here you will find the files stored in the memory. You can edit them as you wish.

4.8 Tools

4.8.1 SOS Settings

- » Mode setting
Set whether only calls, only SMS or calls and SMS are possible.
- » Phone number settings
Go to the SOS menu to select manually three groups of emergency numbers. After setting the SOS number, the SOS key is activated. If necessary, the call can be made by pressing the OK key.

» SMS settings

When the SOS function is started, the alarm sounds and the SOS number is automatically called and a text message is automatically sent to the assigned first aid number.

4.8.2 Calculator

This function opens the calculator and provides some basic calculation functions.

4.8.3 World time clock

Can be viewed or edited.

4.8.4 Alarm

You can change the alarm time, alarm tone and repeat mode.

4.8.5 Calendar

You can use this function to view the calendar and make the following settings:

- 10. Add new appointment
- 11. Display appointments
- 12. All appointments
- 13. Delete today appointments
- 14. Delete all
- 15. Go to Date
- 16. Weekly
- 17. Daily

4. The function menu

4.8.6 Unit calculator

You can perform a variety of conversions (currency, unit of measurement, and so on).

4.8.7 Memo

Use this function to make notes.

4.8.8 Bluetooth

Activate the Bluetooth switch, search for a suitable device or query the setting of the relevant Bluetooth functions.

4.9. Internet

You can manually enter the URL of the website you want to search.

5. Maintenance & Repair

5.1 Battery maintenance

- » This phone has a rechargeable battery as its power source. If the power supply is weak, please charge the battery.
- » If the charger is not needed, unplug it from the wall outlet.
- » The temperature influences the limits of the battery to be charged. The battery should be cool before charging. If the battery is over 40 degrees Celsius, do not charge the battery.
- » Using the battery in an extremely cold or hot place can shorten the battery's service life or interfere with its operation.
- » Please do not place the battery in the fire! Please observe the local regulations for handling batteries and rechargeable batteries.

5.2 Telephone maintenance

The following suggestions will help you take care of your phone:

- » Place the phone in a place that is not accessible to children.
- » Keep the phone dry, moisture may cause metal corrosion.
- » Please protect the device from high temperatures, high temperatures shorten the life of electronic devices, melt plastic and damage the battery.
- » Please do not try to open the phone. Improper disassembly may cause damage to the housing. Unauthorized disassembly of the device may result in damage and void the warranty.
- » Do not use acidic or alkaline cleaning materials to clean your phone.
- » Only use original accessories for the phone. Failure to do so may result in loss of warranty.

Note:

We reserve the right to make any changes in the form of firmware updates

Warning:

The manufacturer does not accept any responsibility for the improper use of the mobile phone or any consequences thereof.