


Installation Recommendations and Guidelines

Half Scale Sections

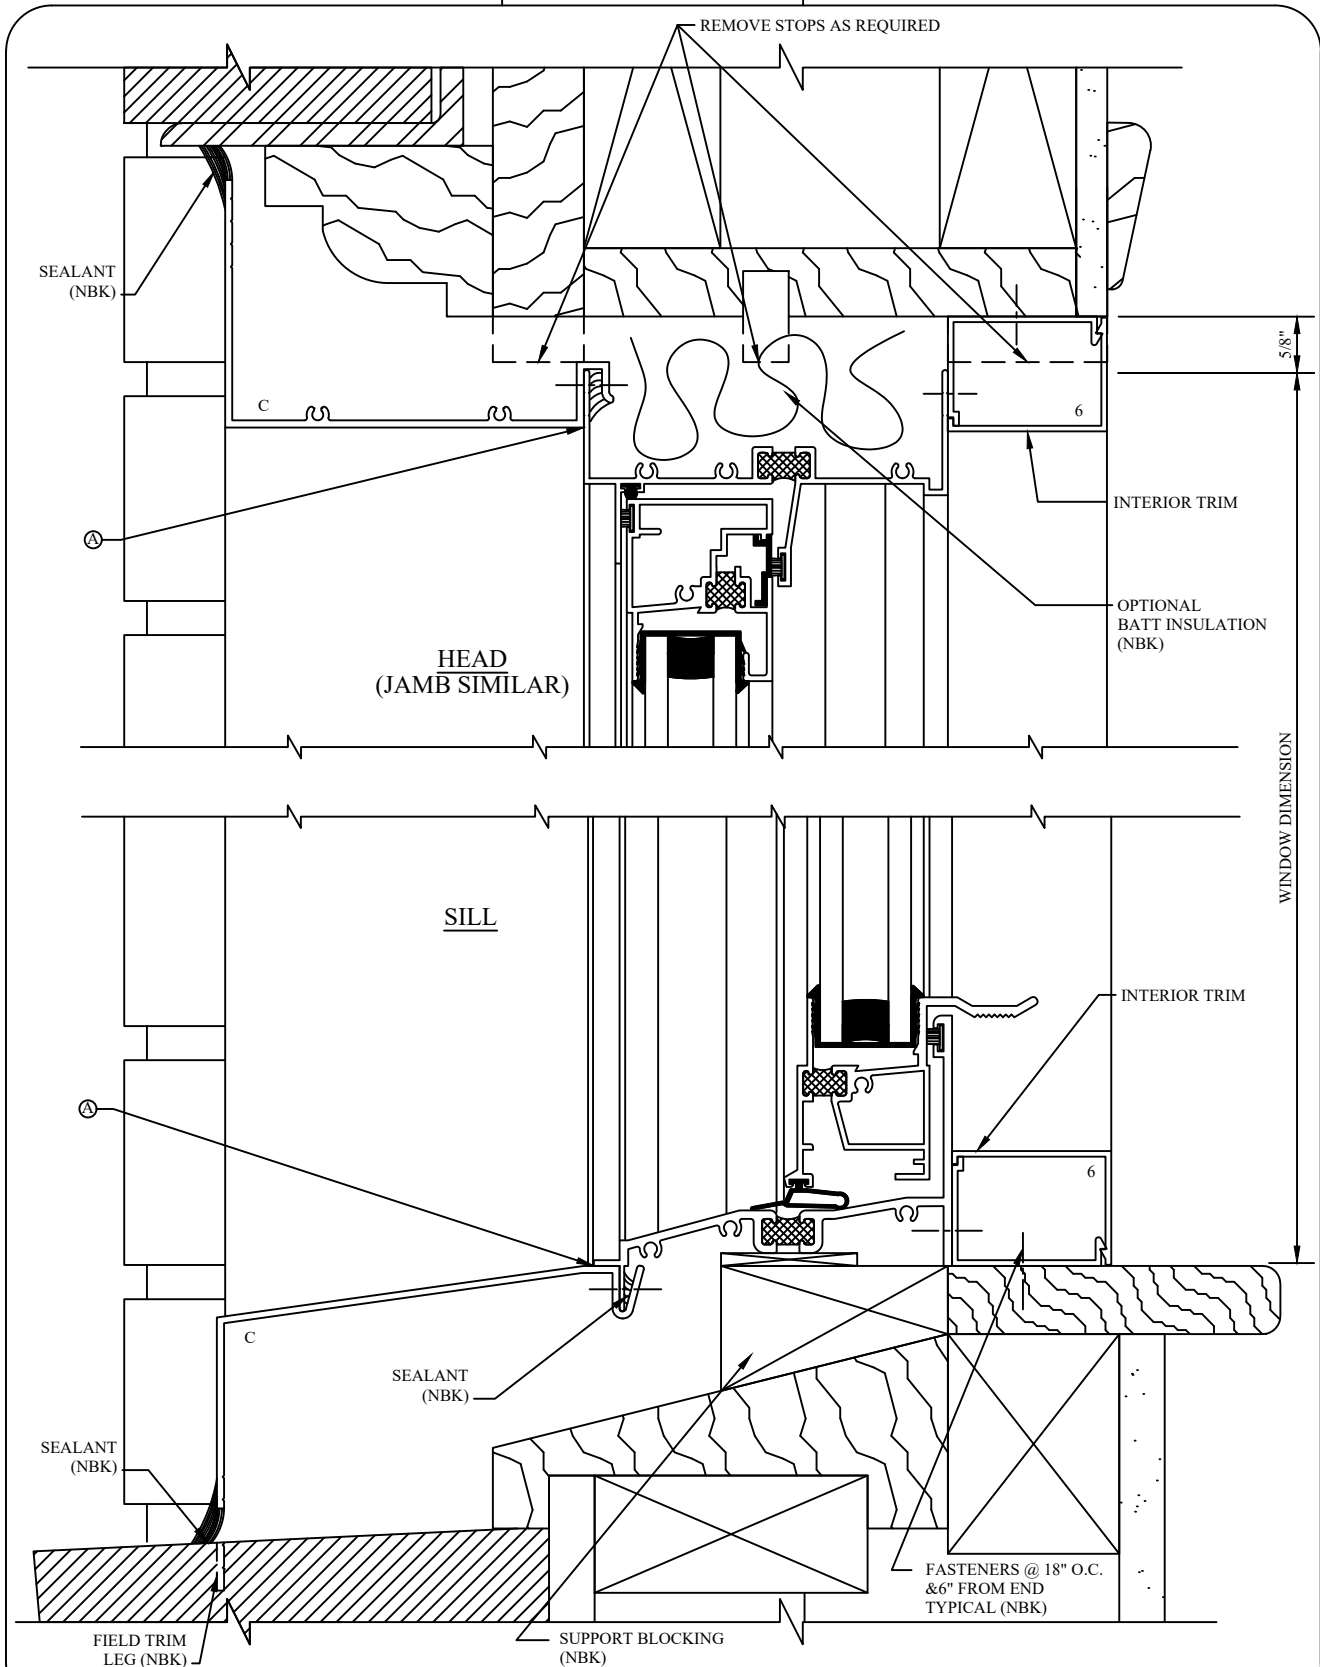


EXAMPLE SHOWN WITH TR-9000

Ⓐ FOR OPTIONAL IMPROVED PERFORMANCE, ADD AN EXPOSED CAP BEAD (NBK)

(NBK) = NOT BY KAWNEER

Half Scale Sections

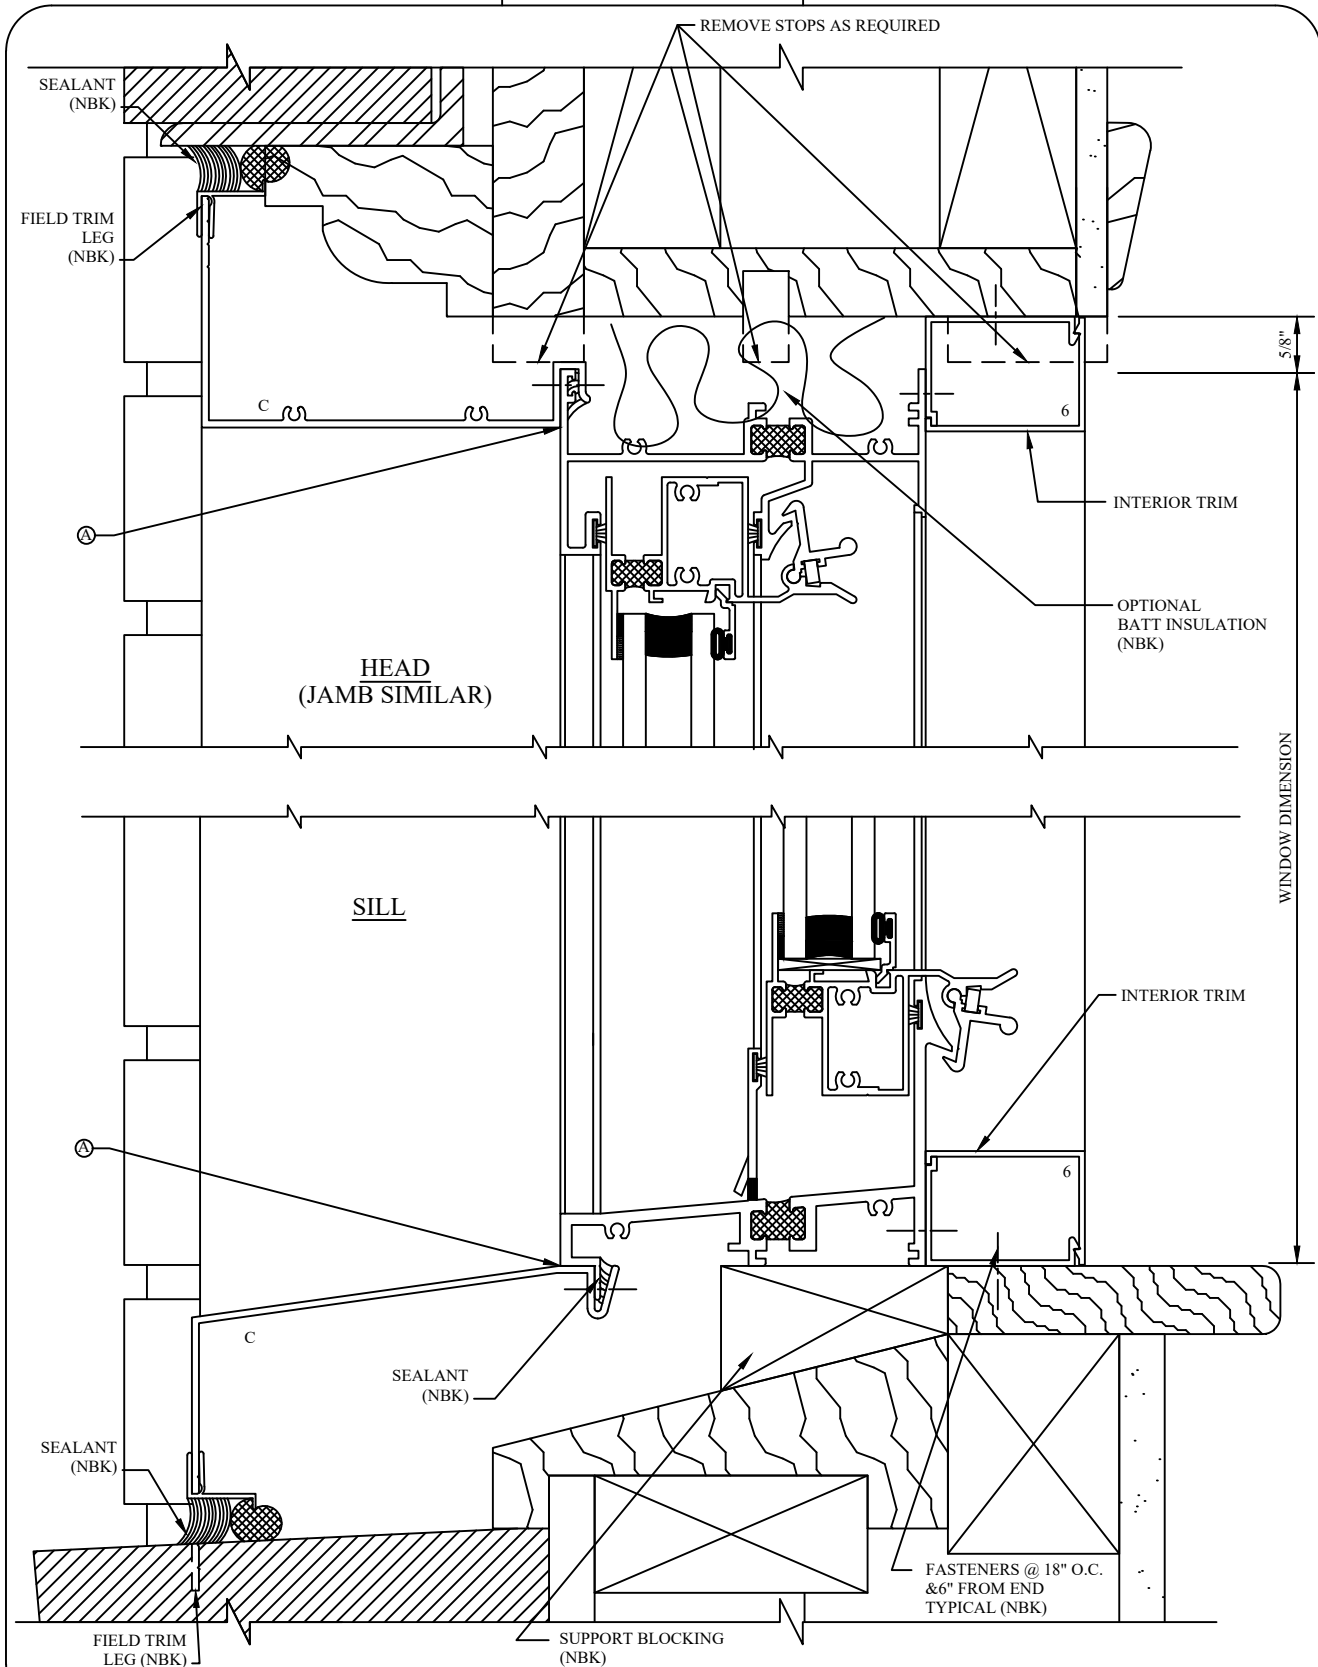


EXAMPLE SHOWN WITH TR-9400

Ⓐ FOR OPTIONAL IMPROVED PERFORMANCE, ADD AN EXPOSED CAP BEAD (NBK)

(NBK) = NOT BY KAWNEER

Half Scale Sections

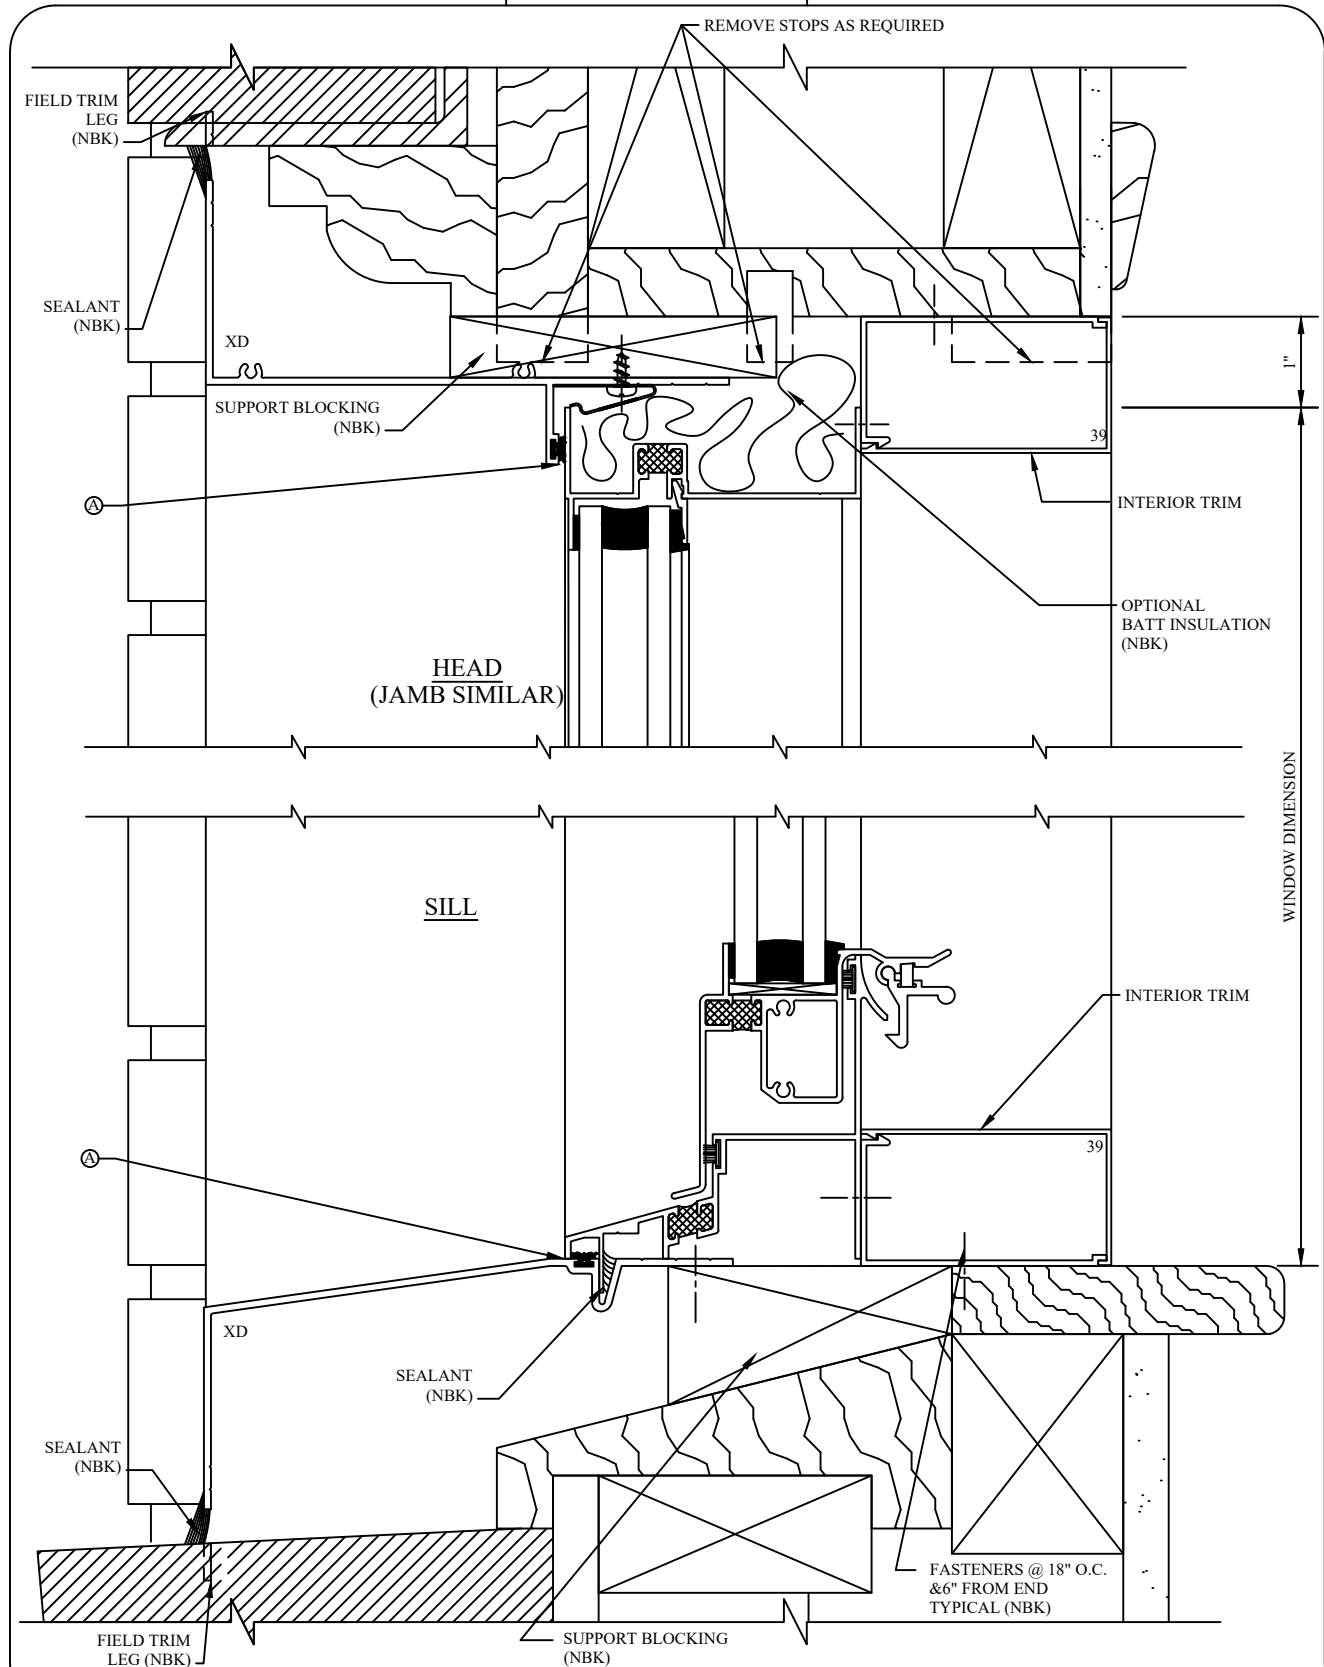


EXAMPLE SHOWN WITH TR-9100


Ⓐ FOR OPTIONAL IMPROVED PERFORMANCE, ADD AN EXPOSED CAP BEAD (NBK)

(NBK) = NOT BY KAWNEER

Half Scale Sections

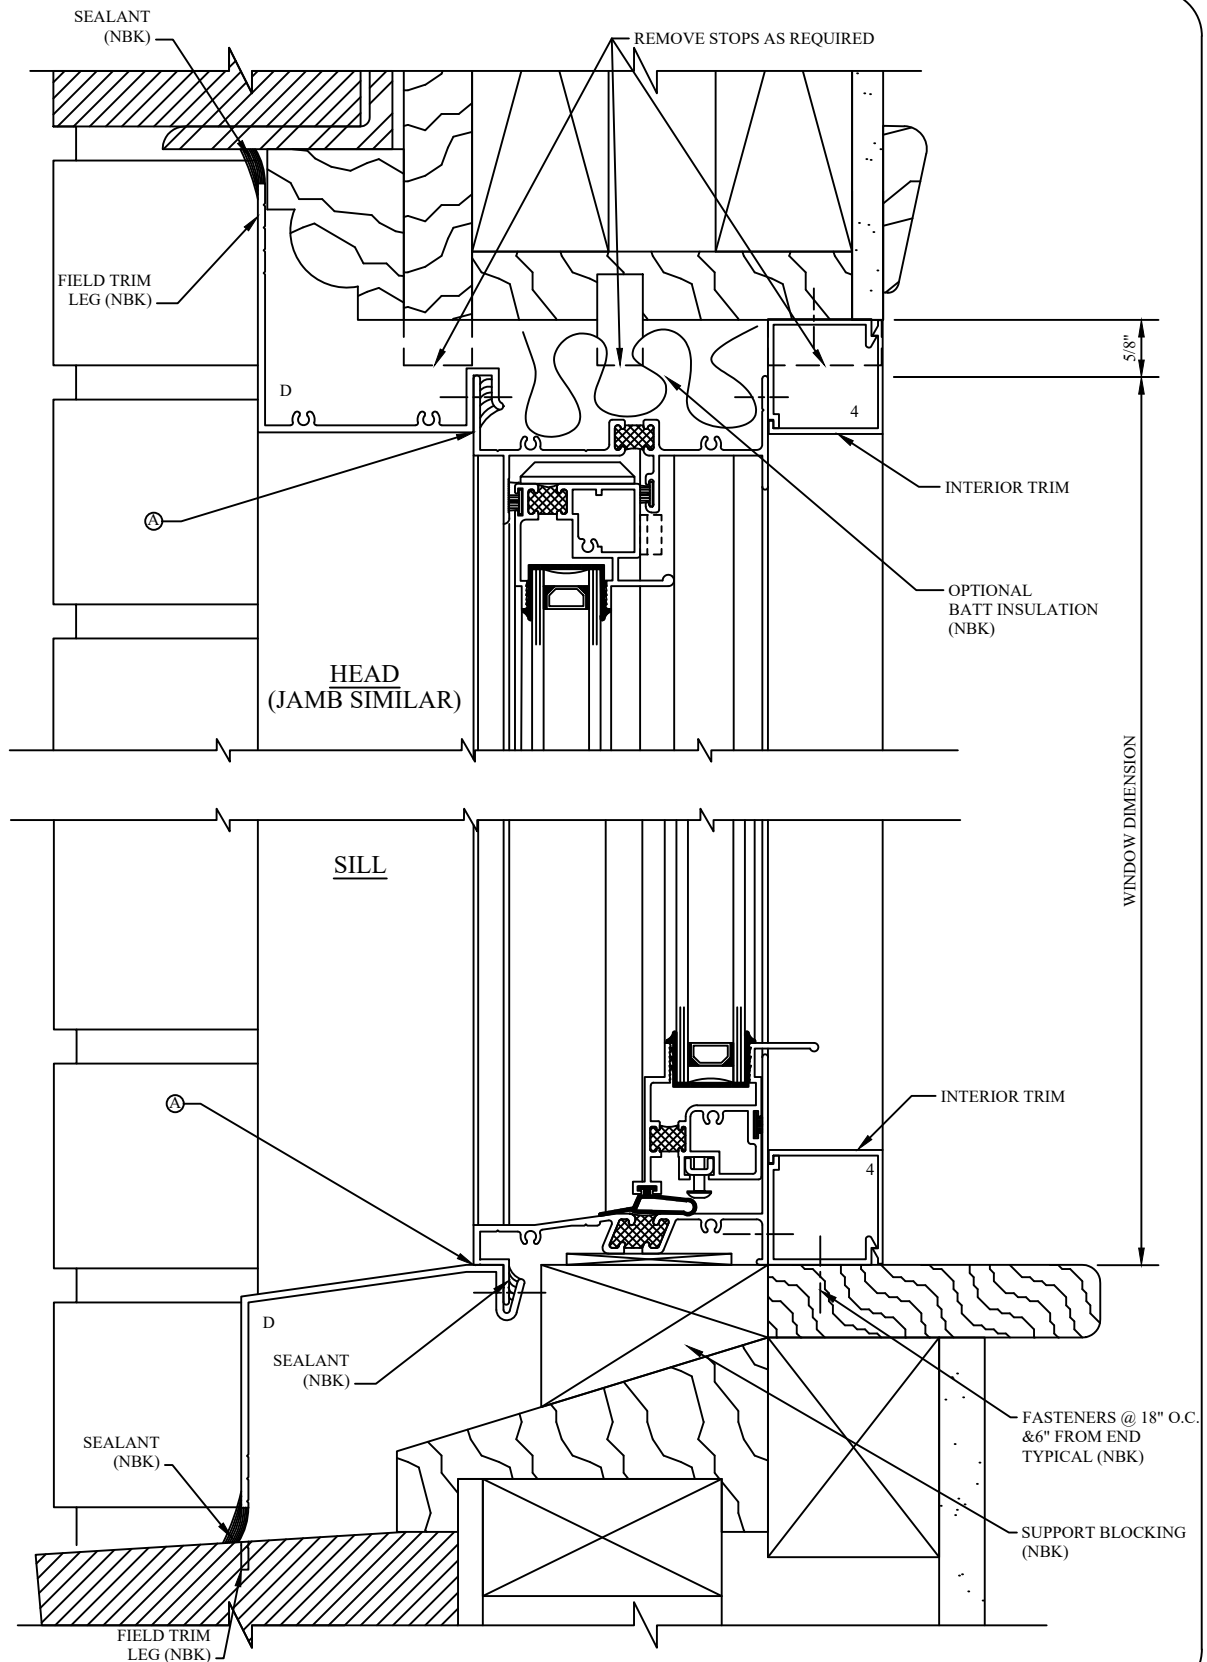

Half Scale Sections

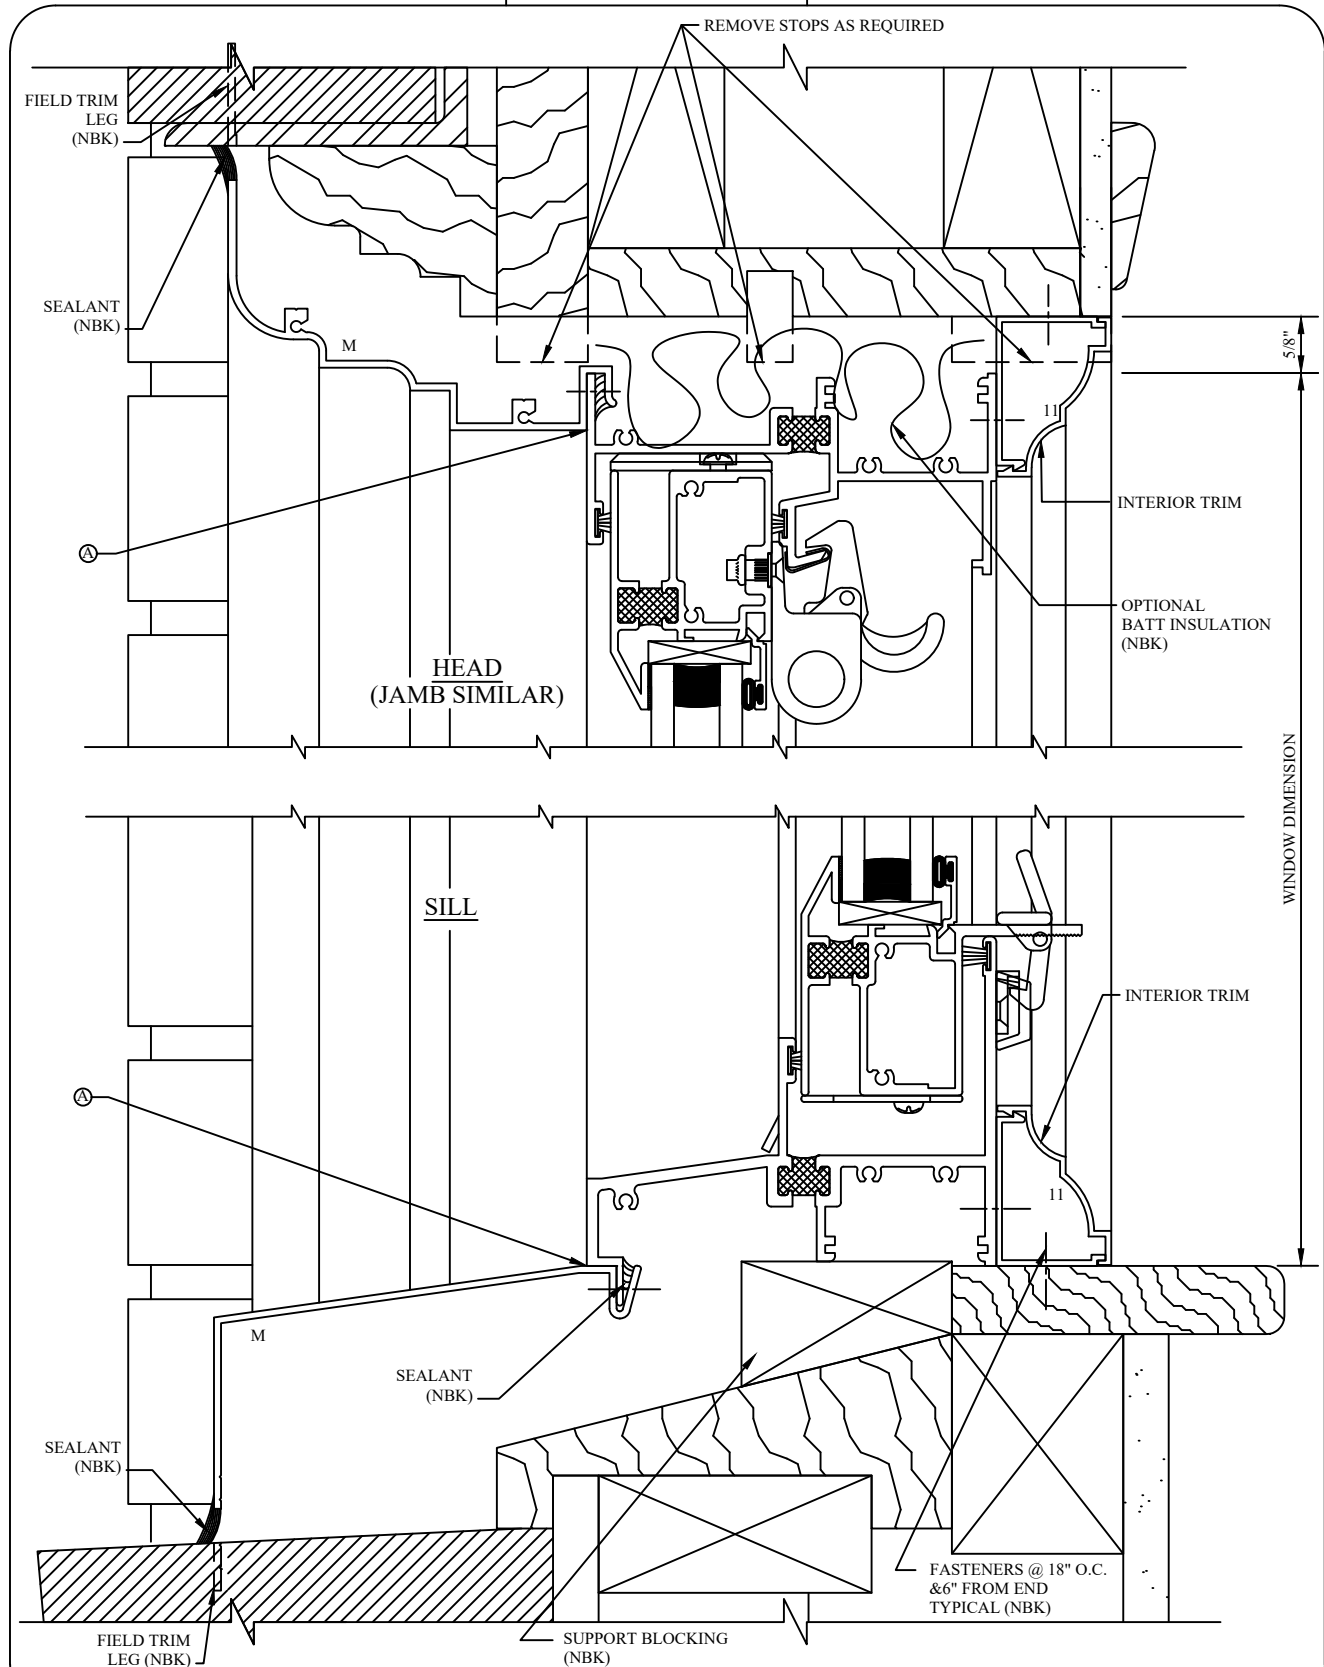


EXAMPLE SHOWN WITH TR-9900

Ⓐ FOR OPTIONAL IMPROVED PERFORMANCE, ADD AN EXPOSED CAP BEAD (NBK)

(NBK) = NOT BY KAWNEER

Half Scale Sections

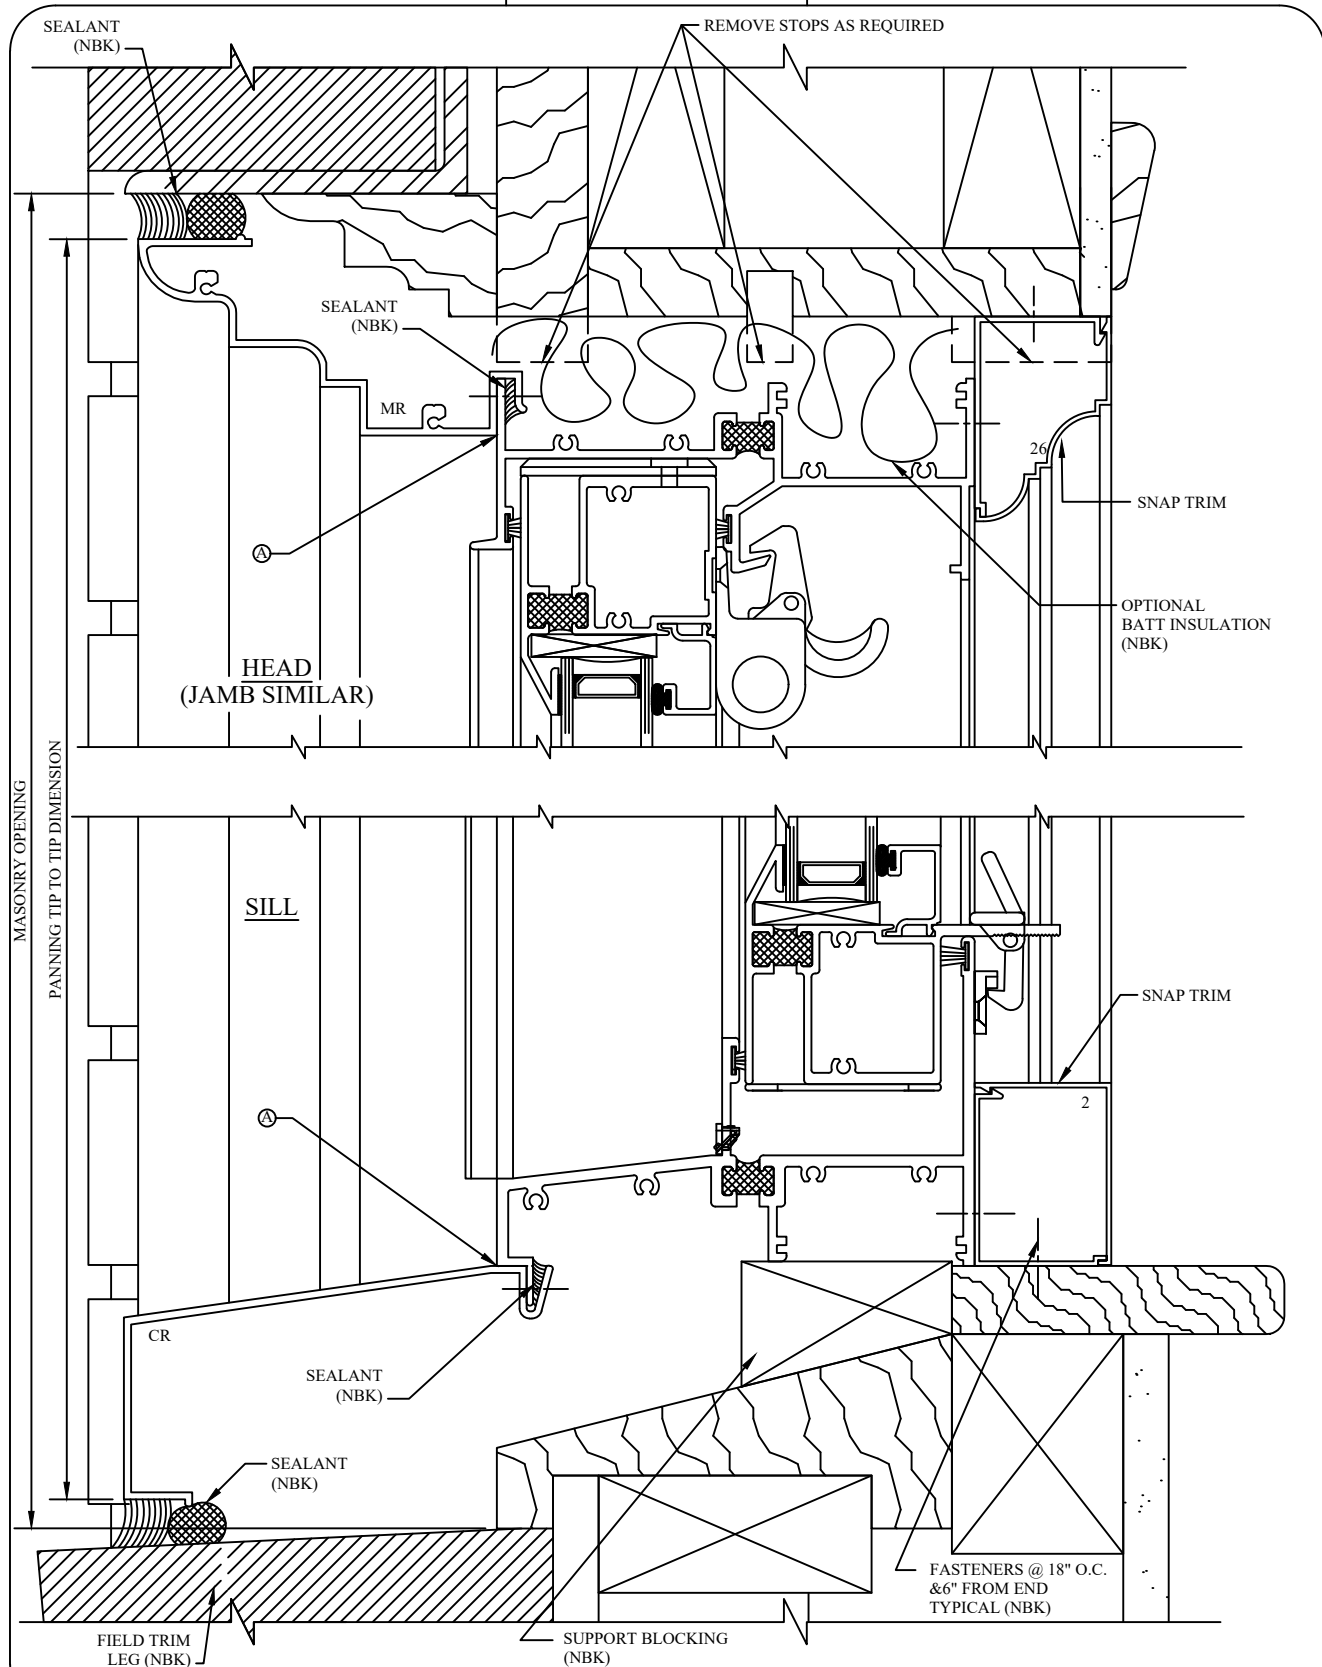


EXAMPLE SHOWN WITH TR-9600

Ⓐ FOR OPTIONAL IMPROVED PERFORMANCE, ADD AN EXPOSED CAP BEAD (NBK)

(NBK) = NOT BY KAWNEER

Half Scale Sections

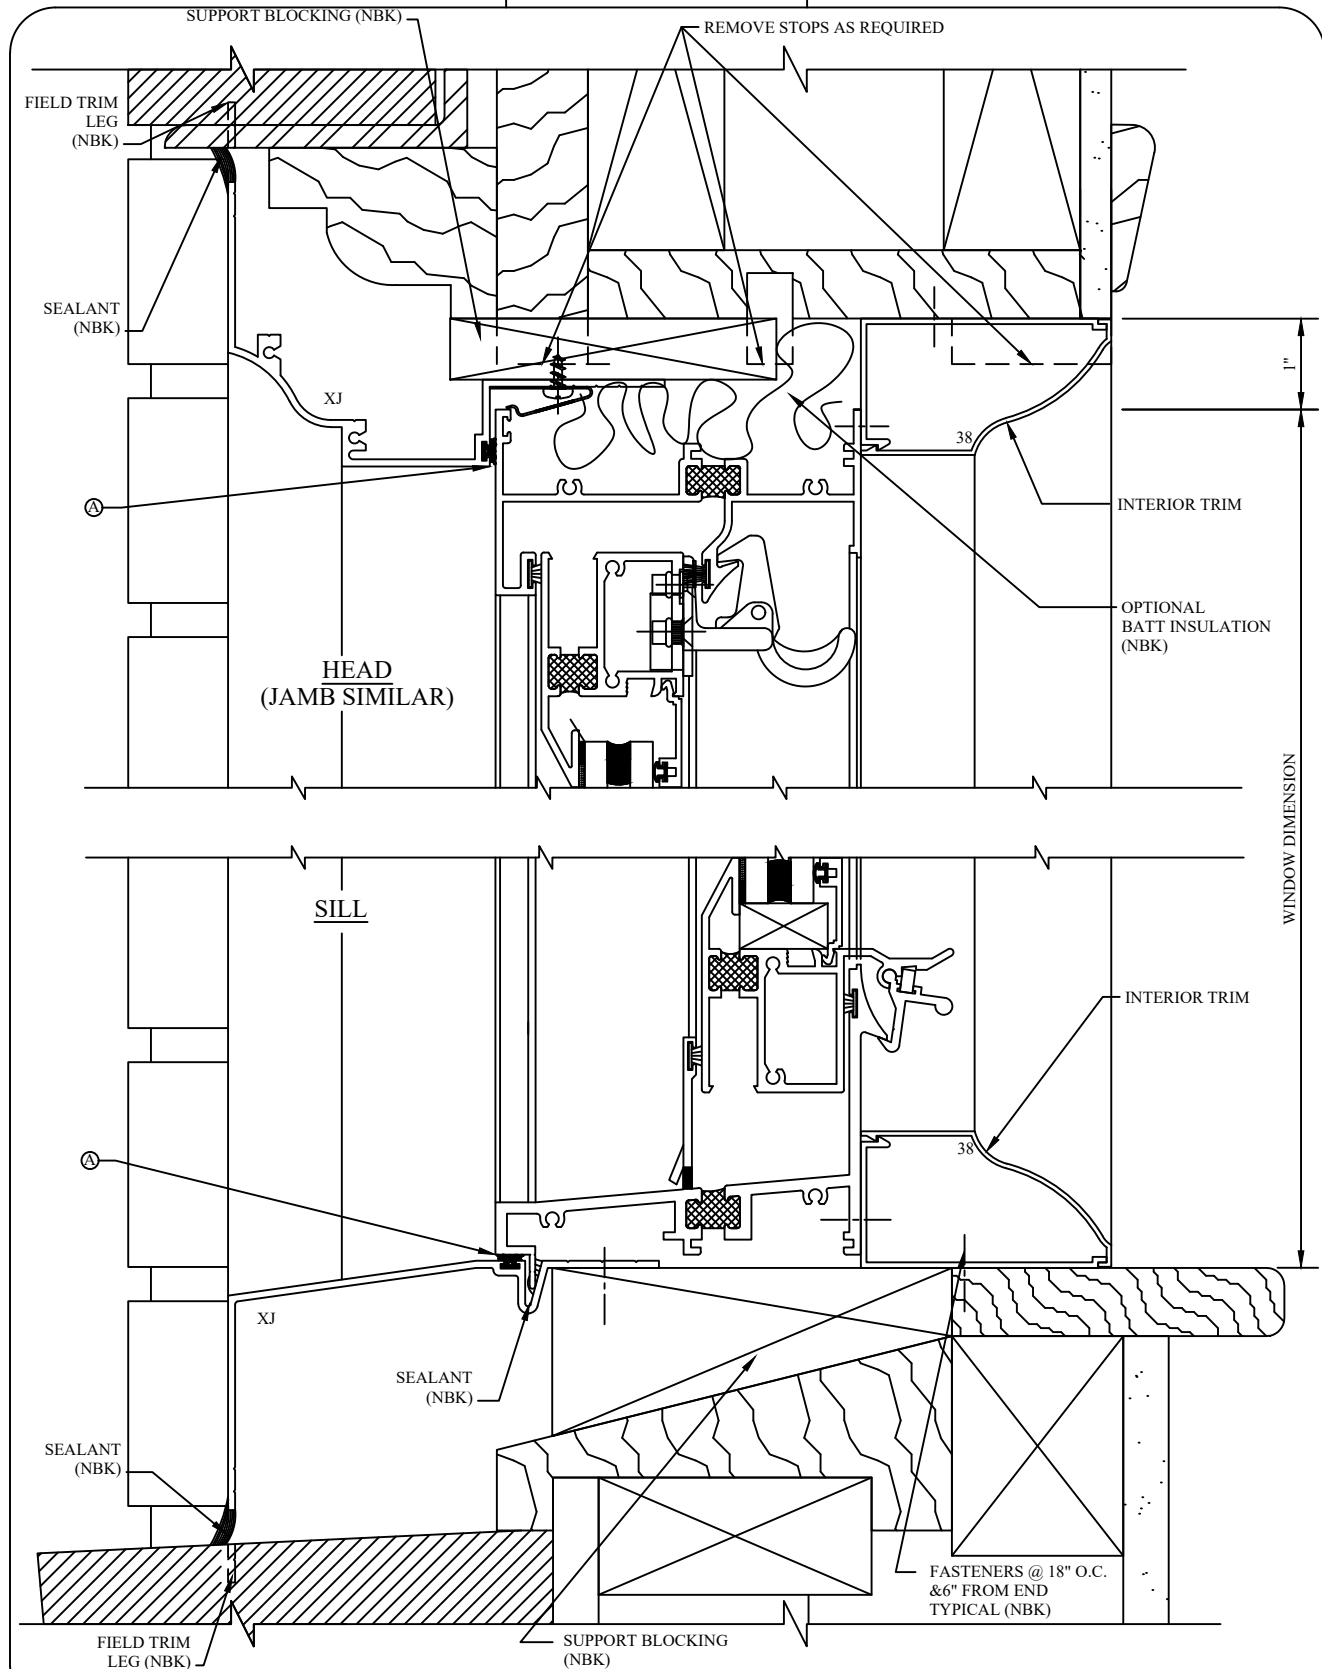


EXAMPLE SHOWN WITH TR-9400

Ⓐ FOR OPTIONAL IMPROVED PERFORMANCE, ADD AN EXPOSED CAP BEAD (NBK)

(NBK) = NOT BY KAWNEER

Half Scale Sections

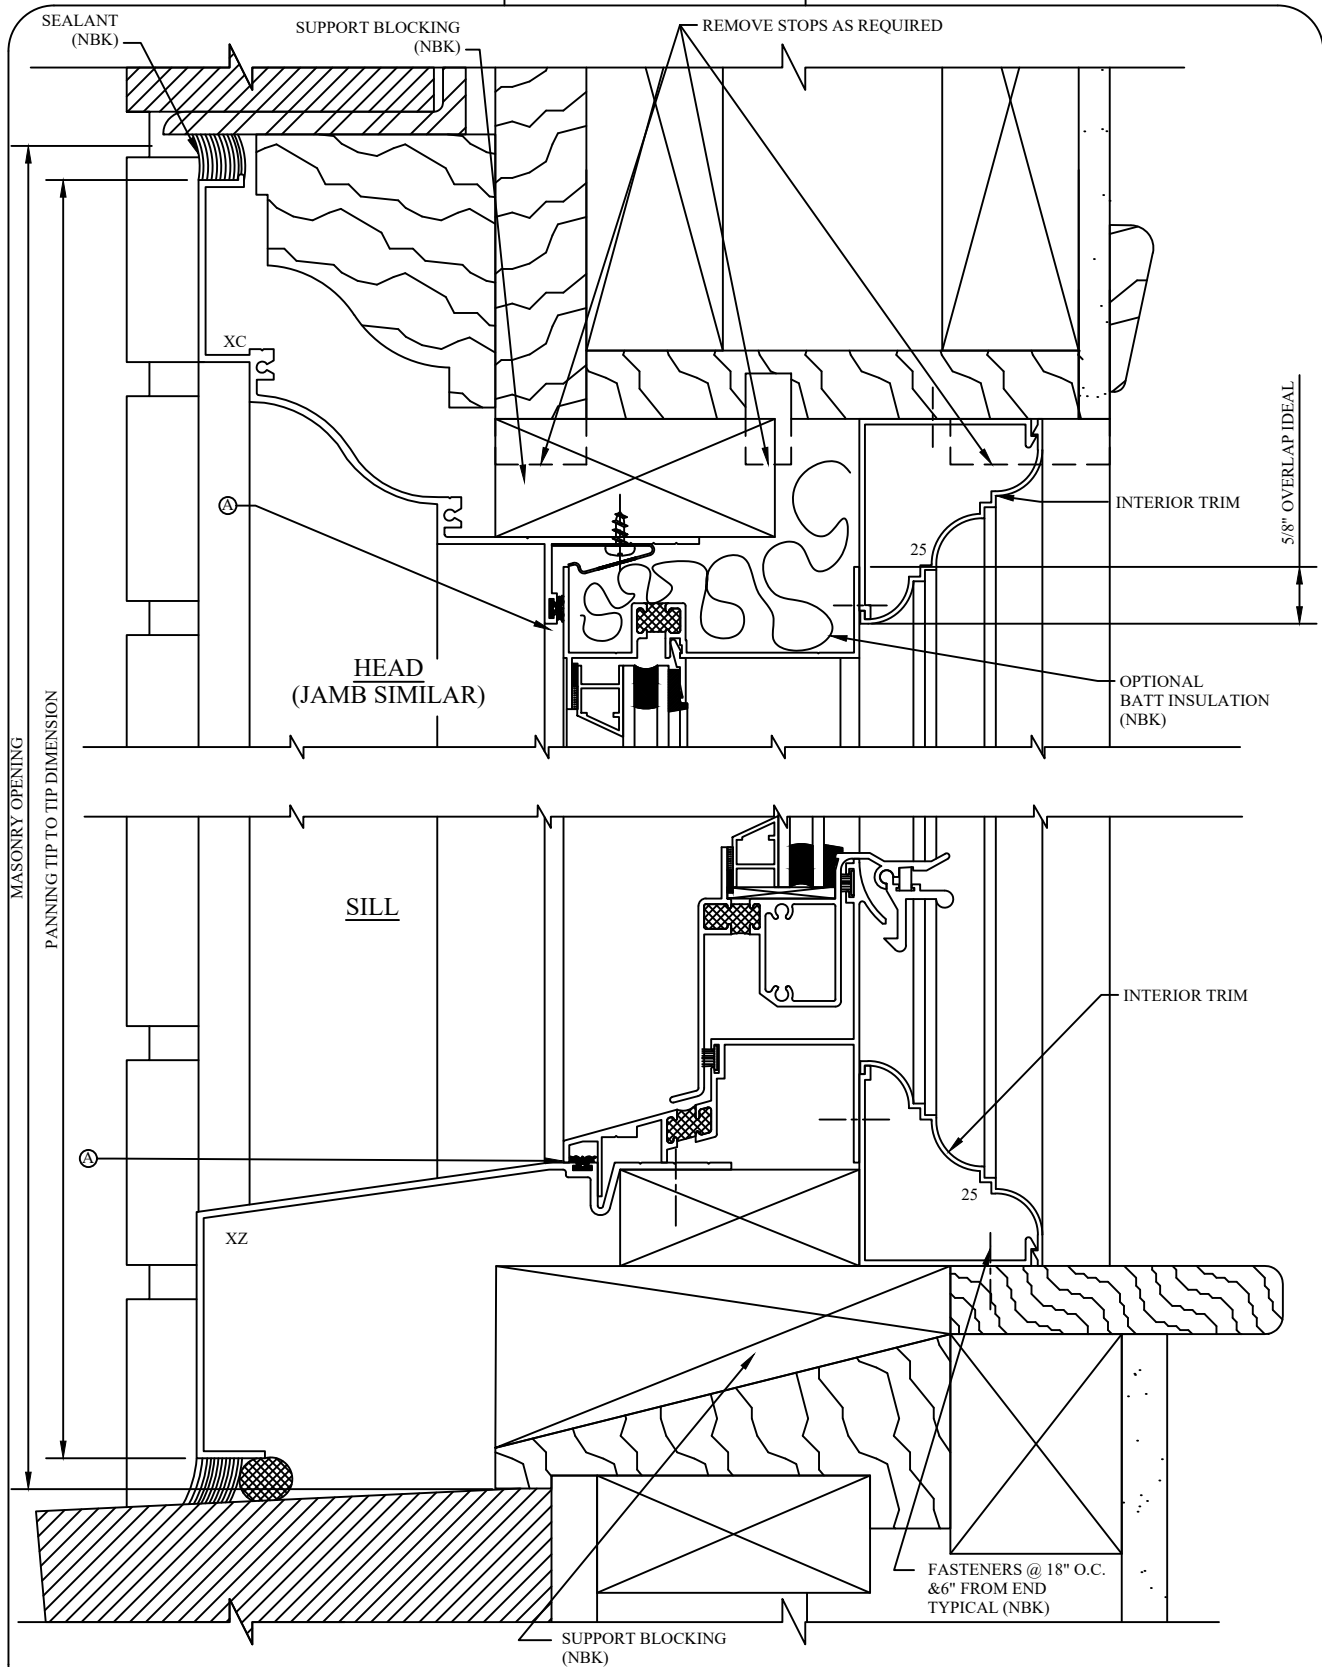



EXAMPLE SHOWN WITH TR-9100

Ⓐ FOR OPTIONAL IMPROVED PERFORMANCE, ADD AN EXPOSED CAP BEAD (NBK)


(NBK) = NOT BY KAWNEER

Half Scale Sections

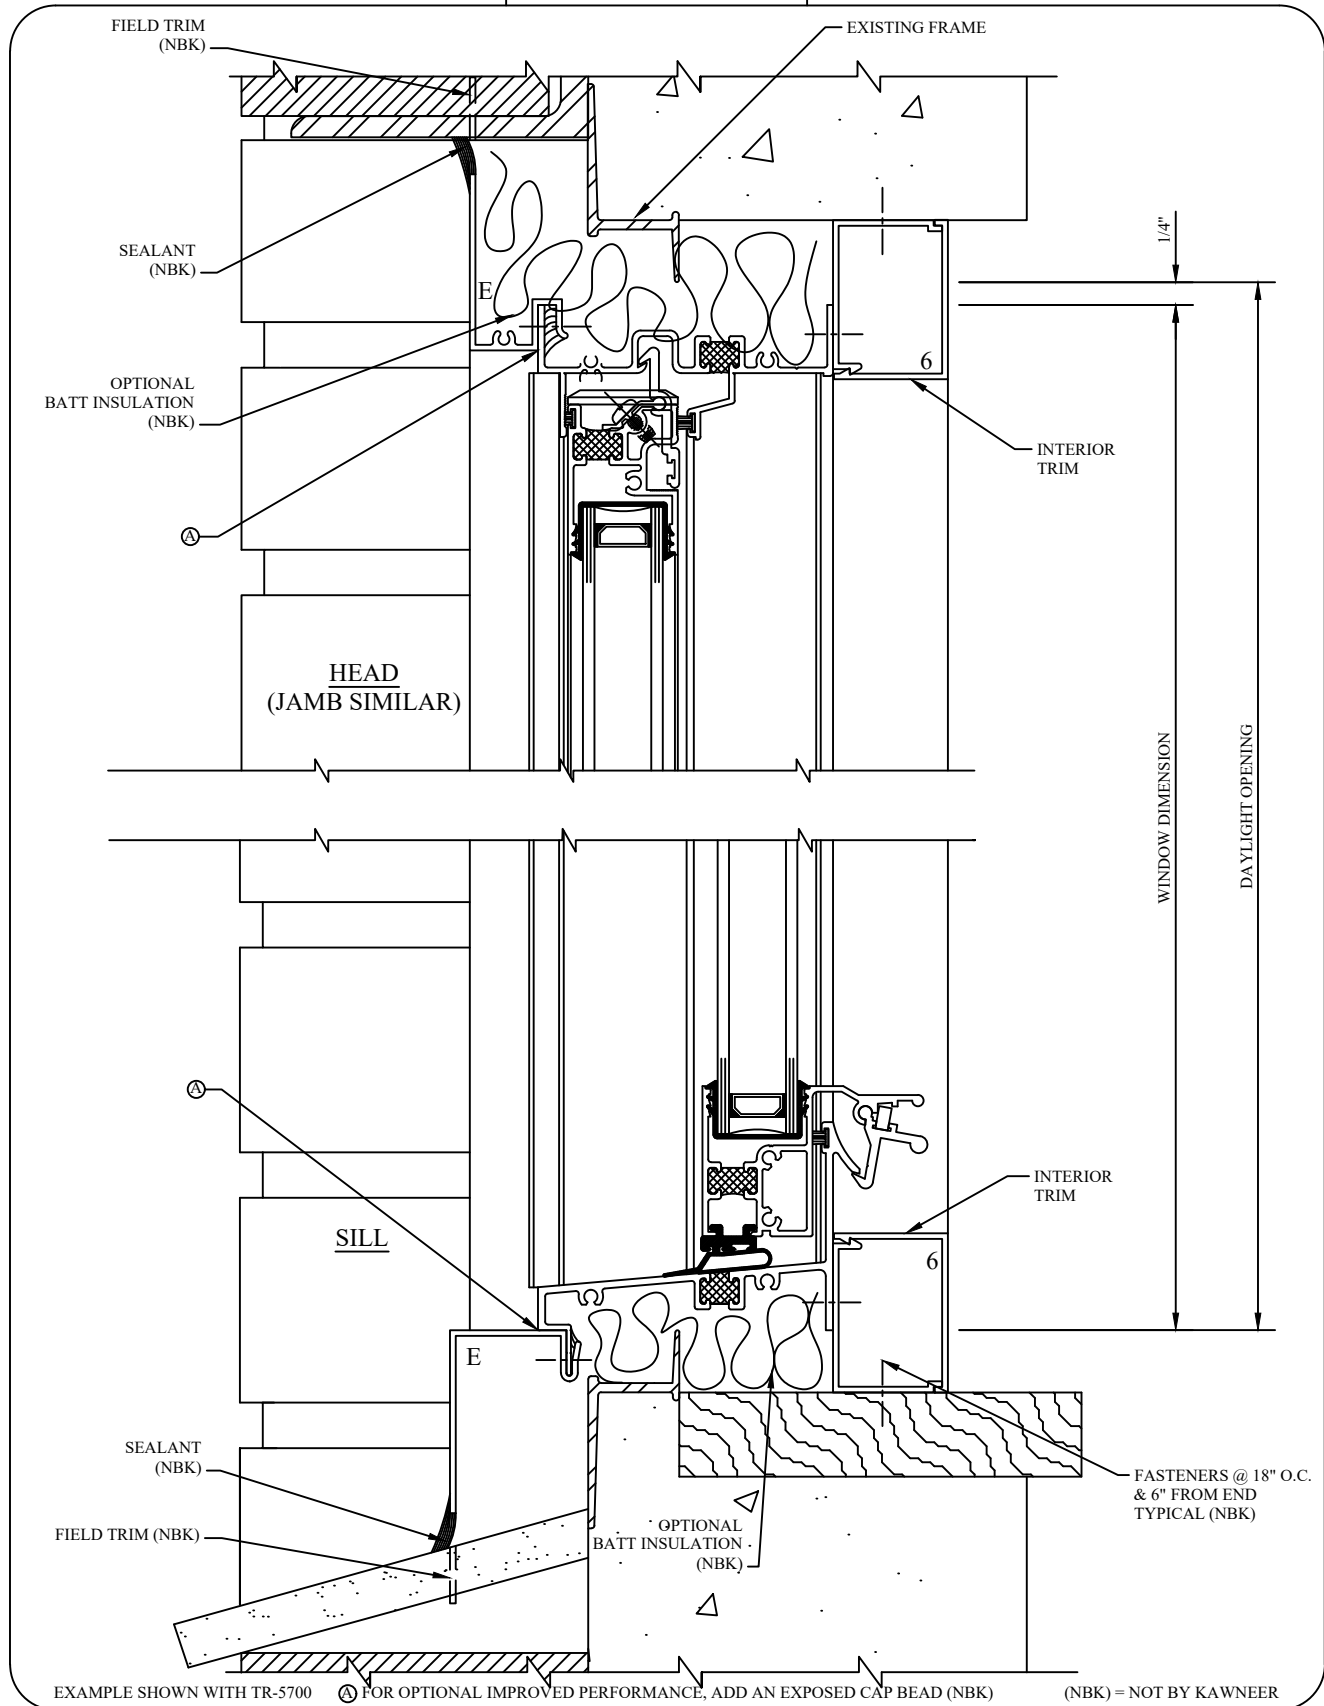


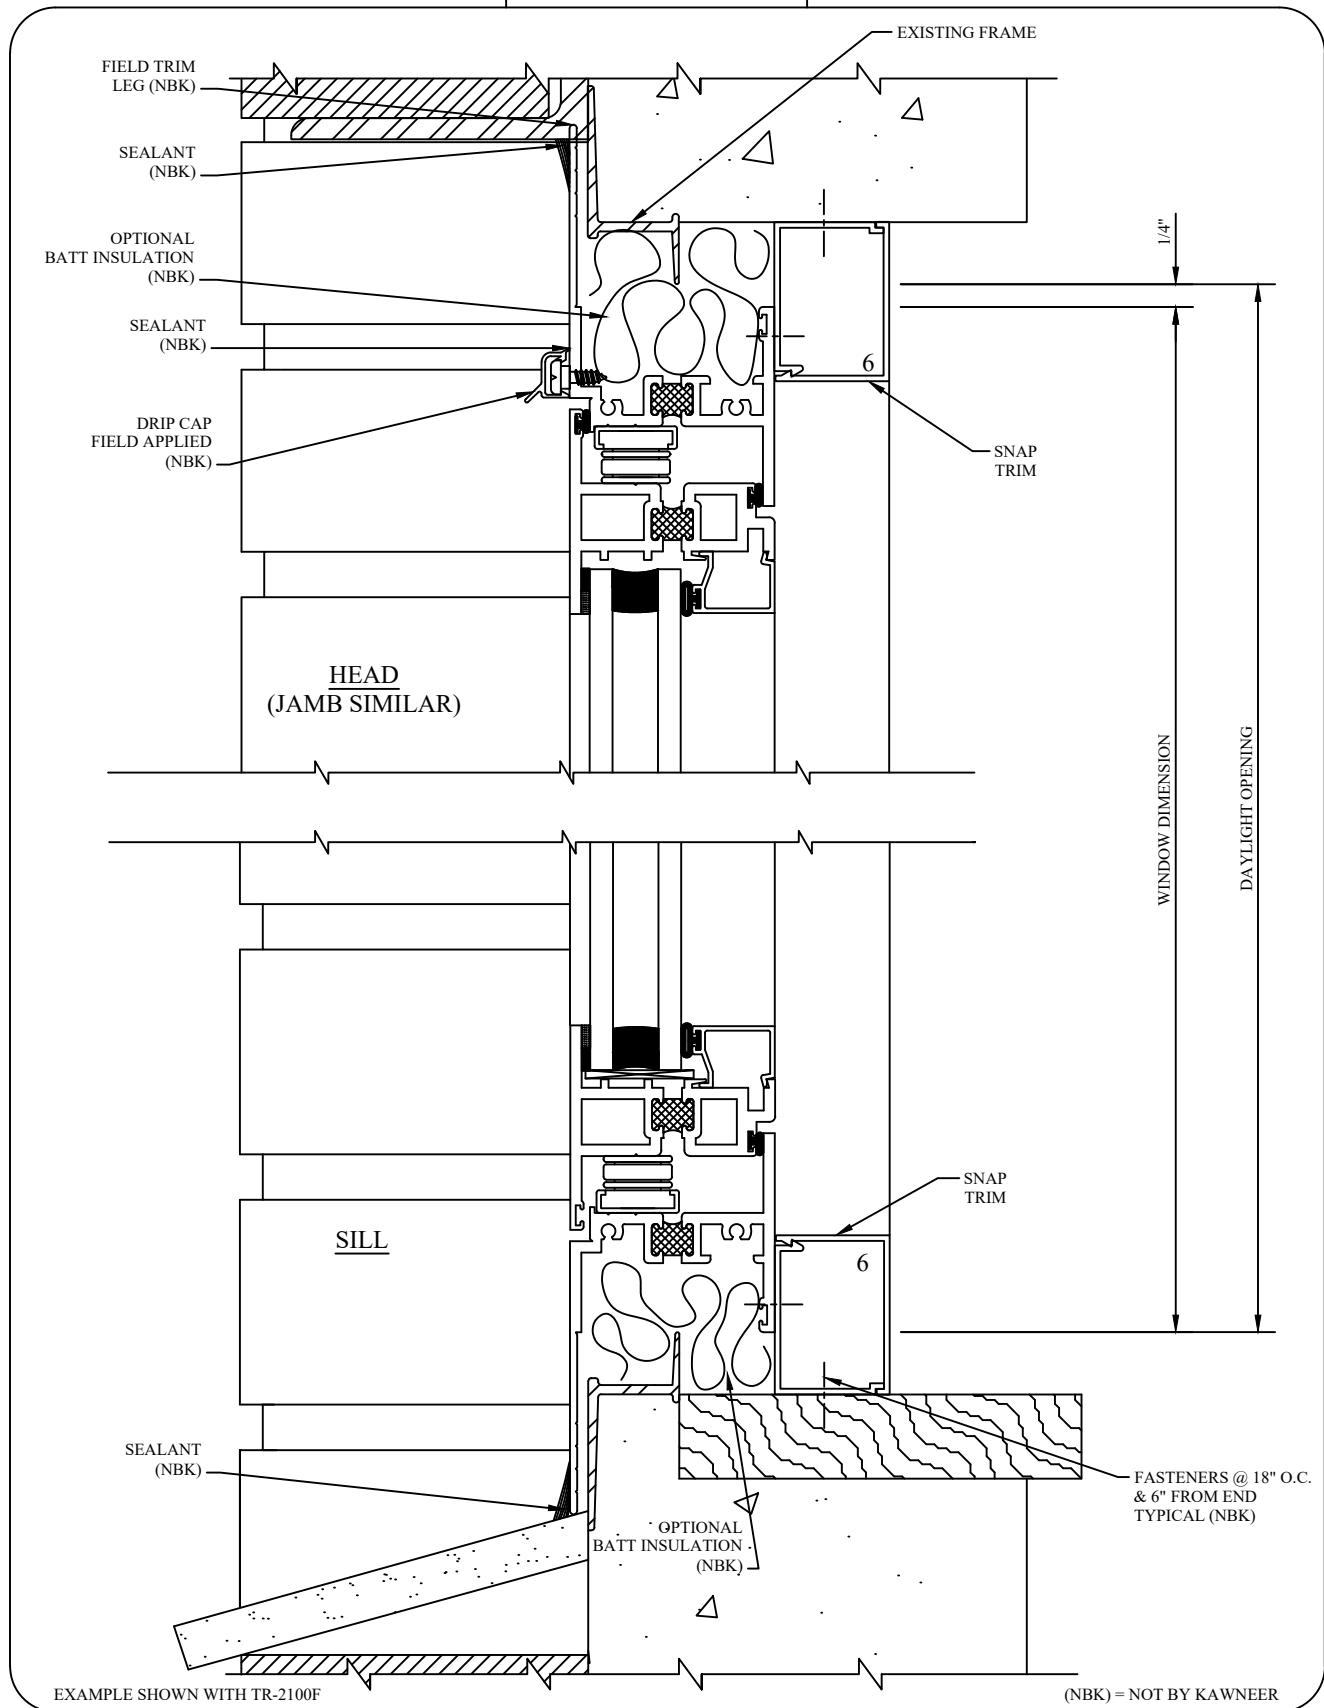


Half Scale Sections

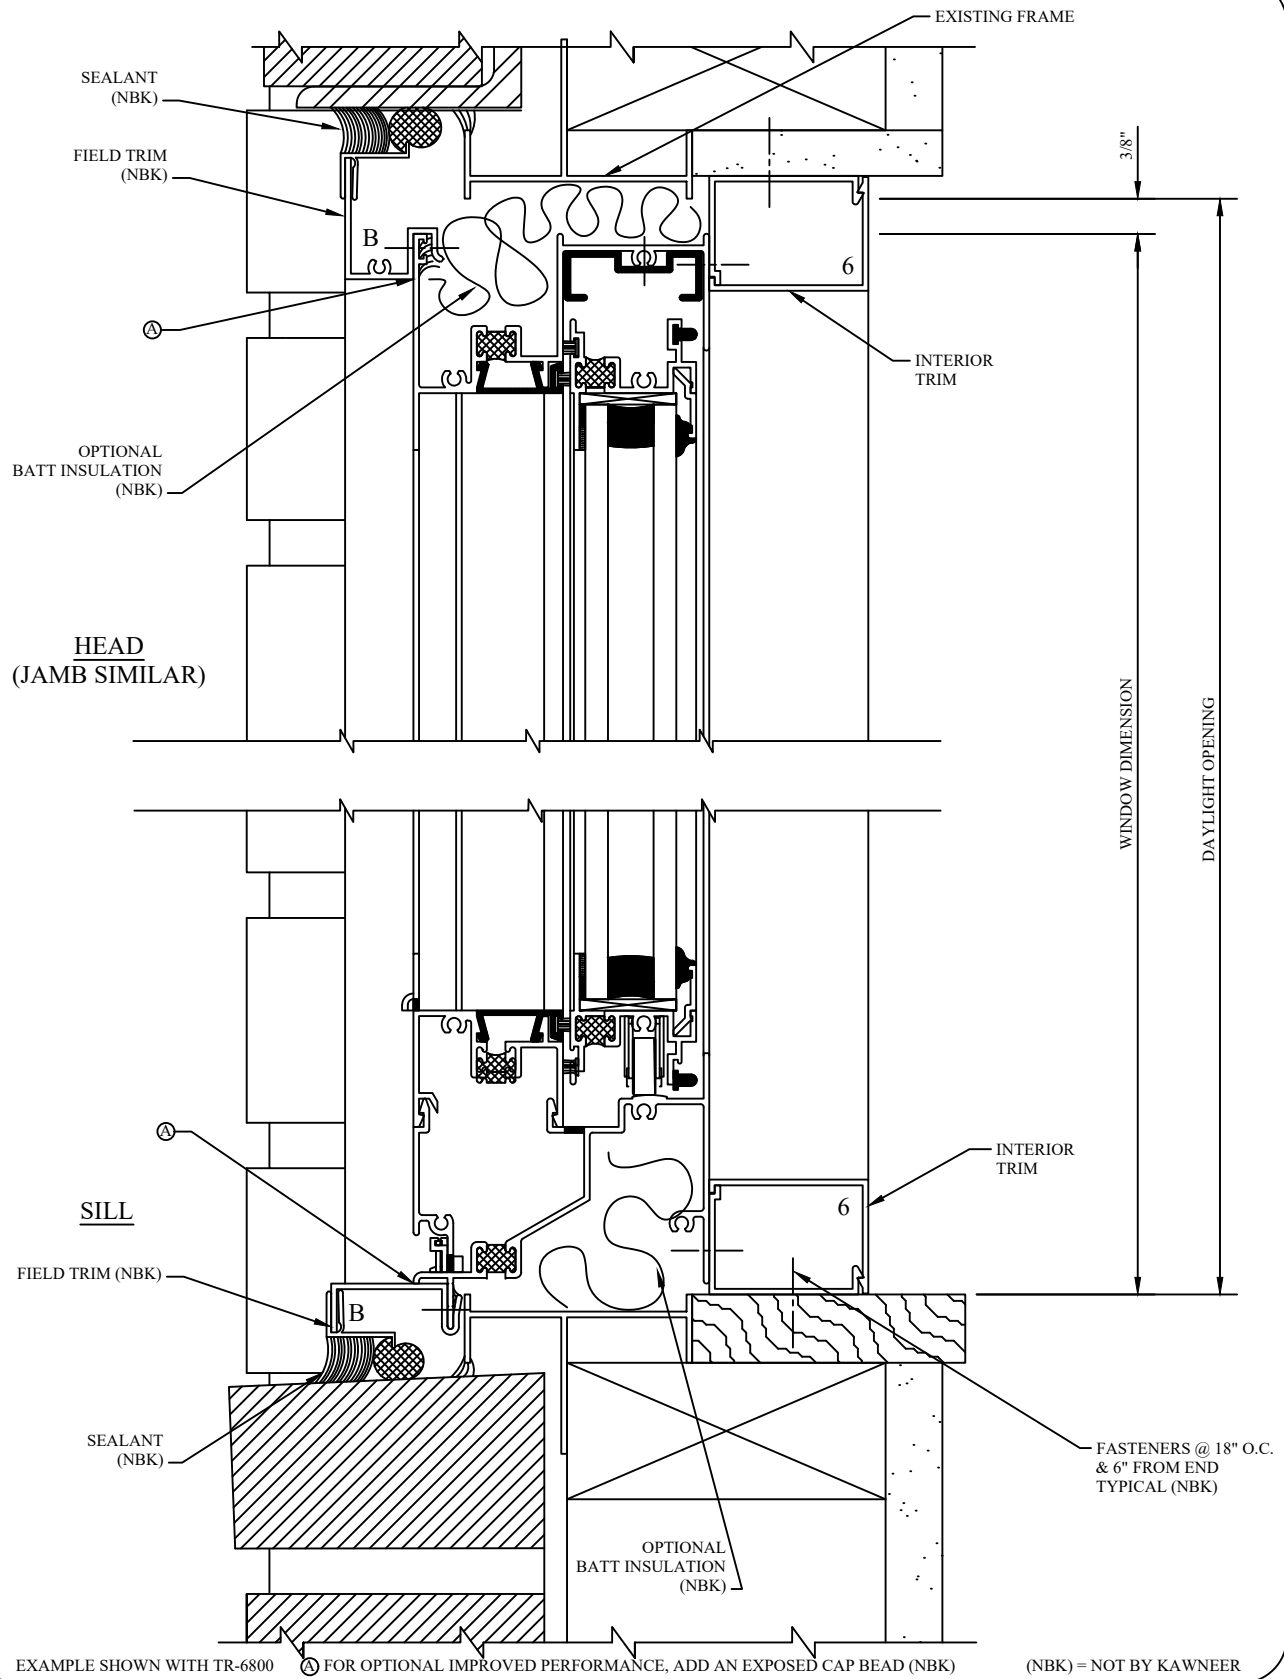

Half Scale Sections

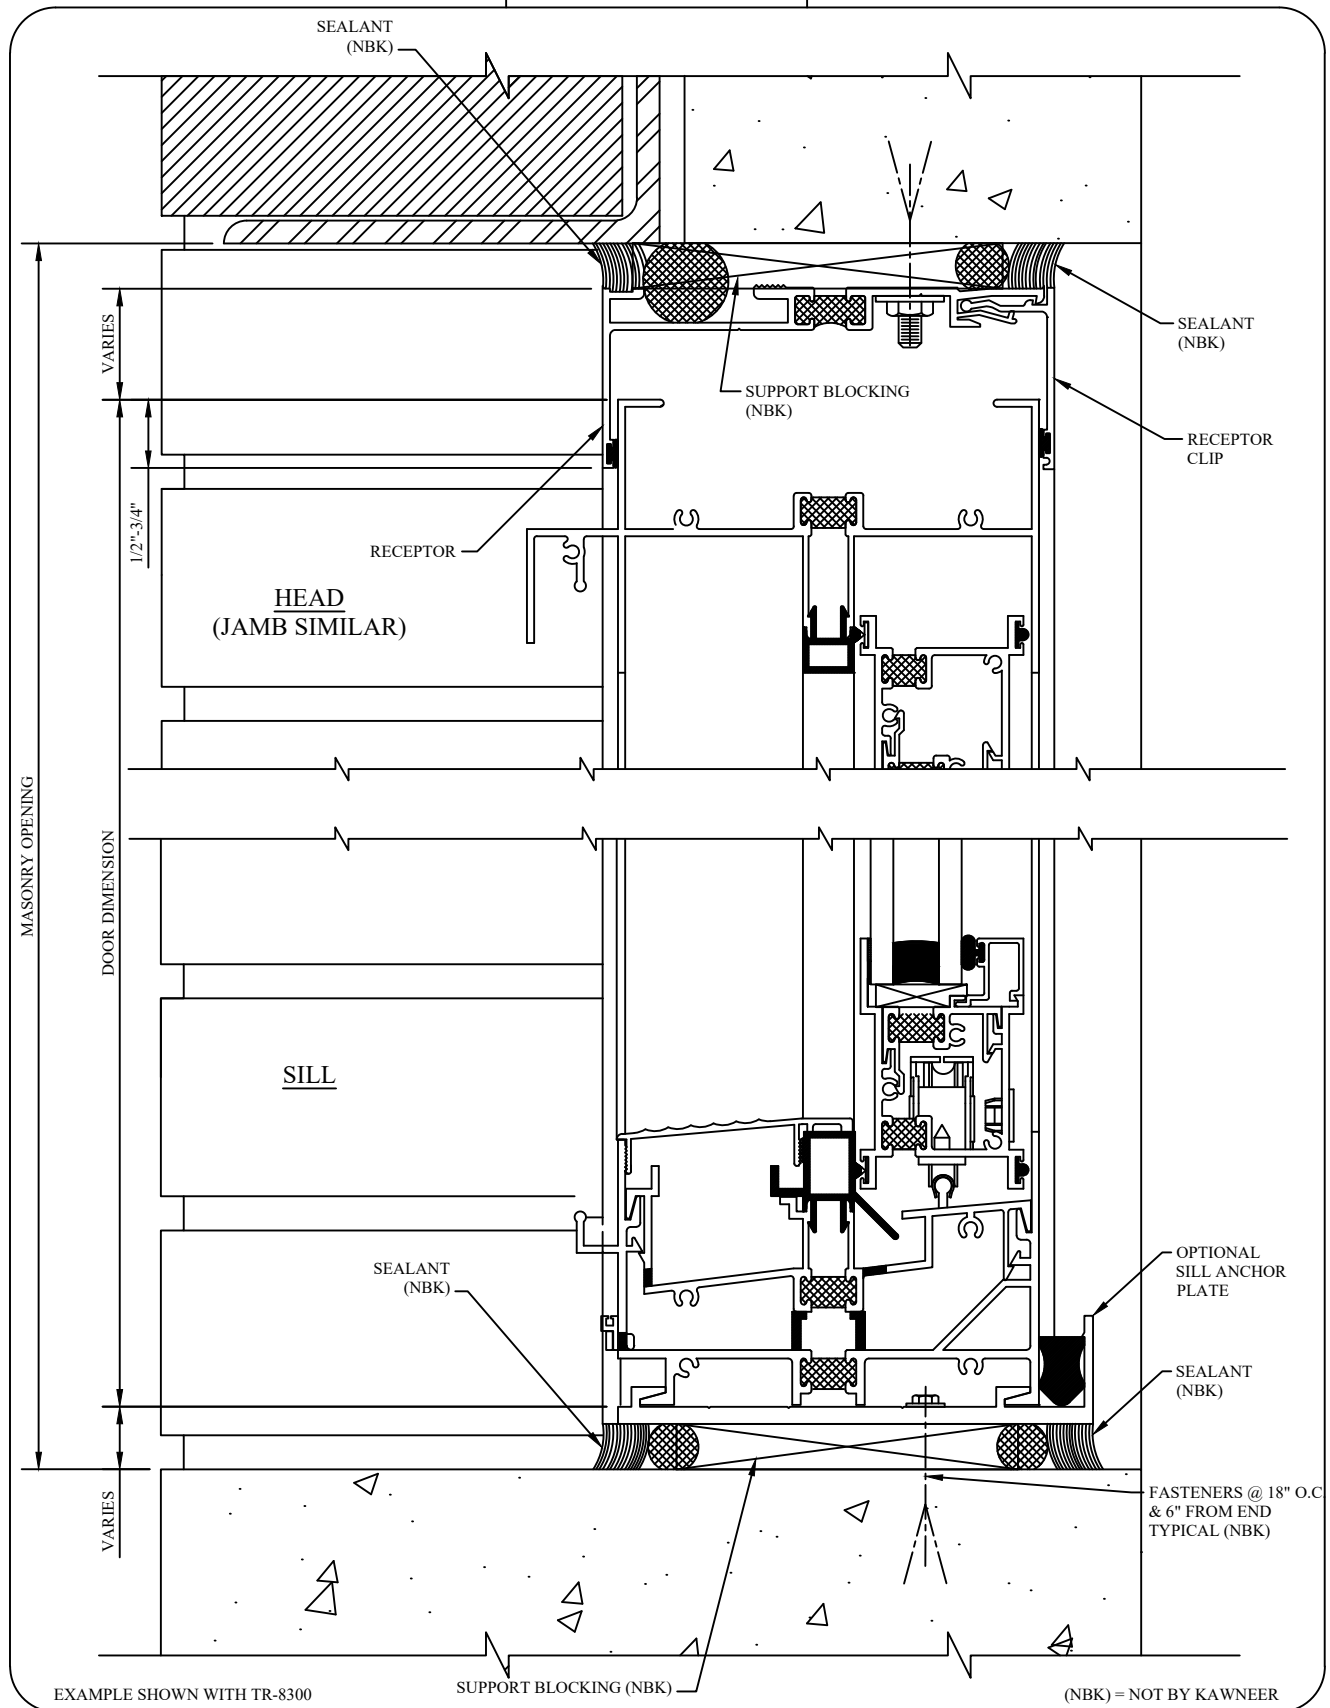


Half Scale Sections

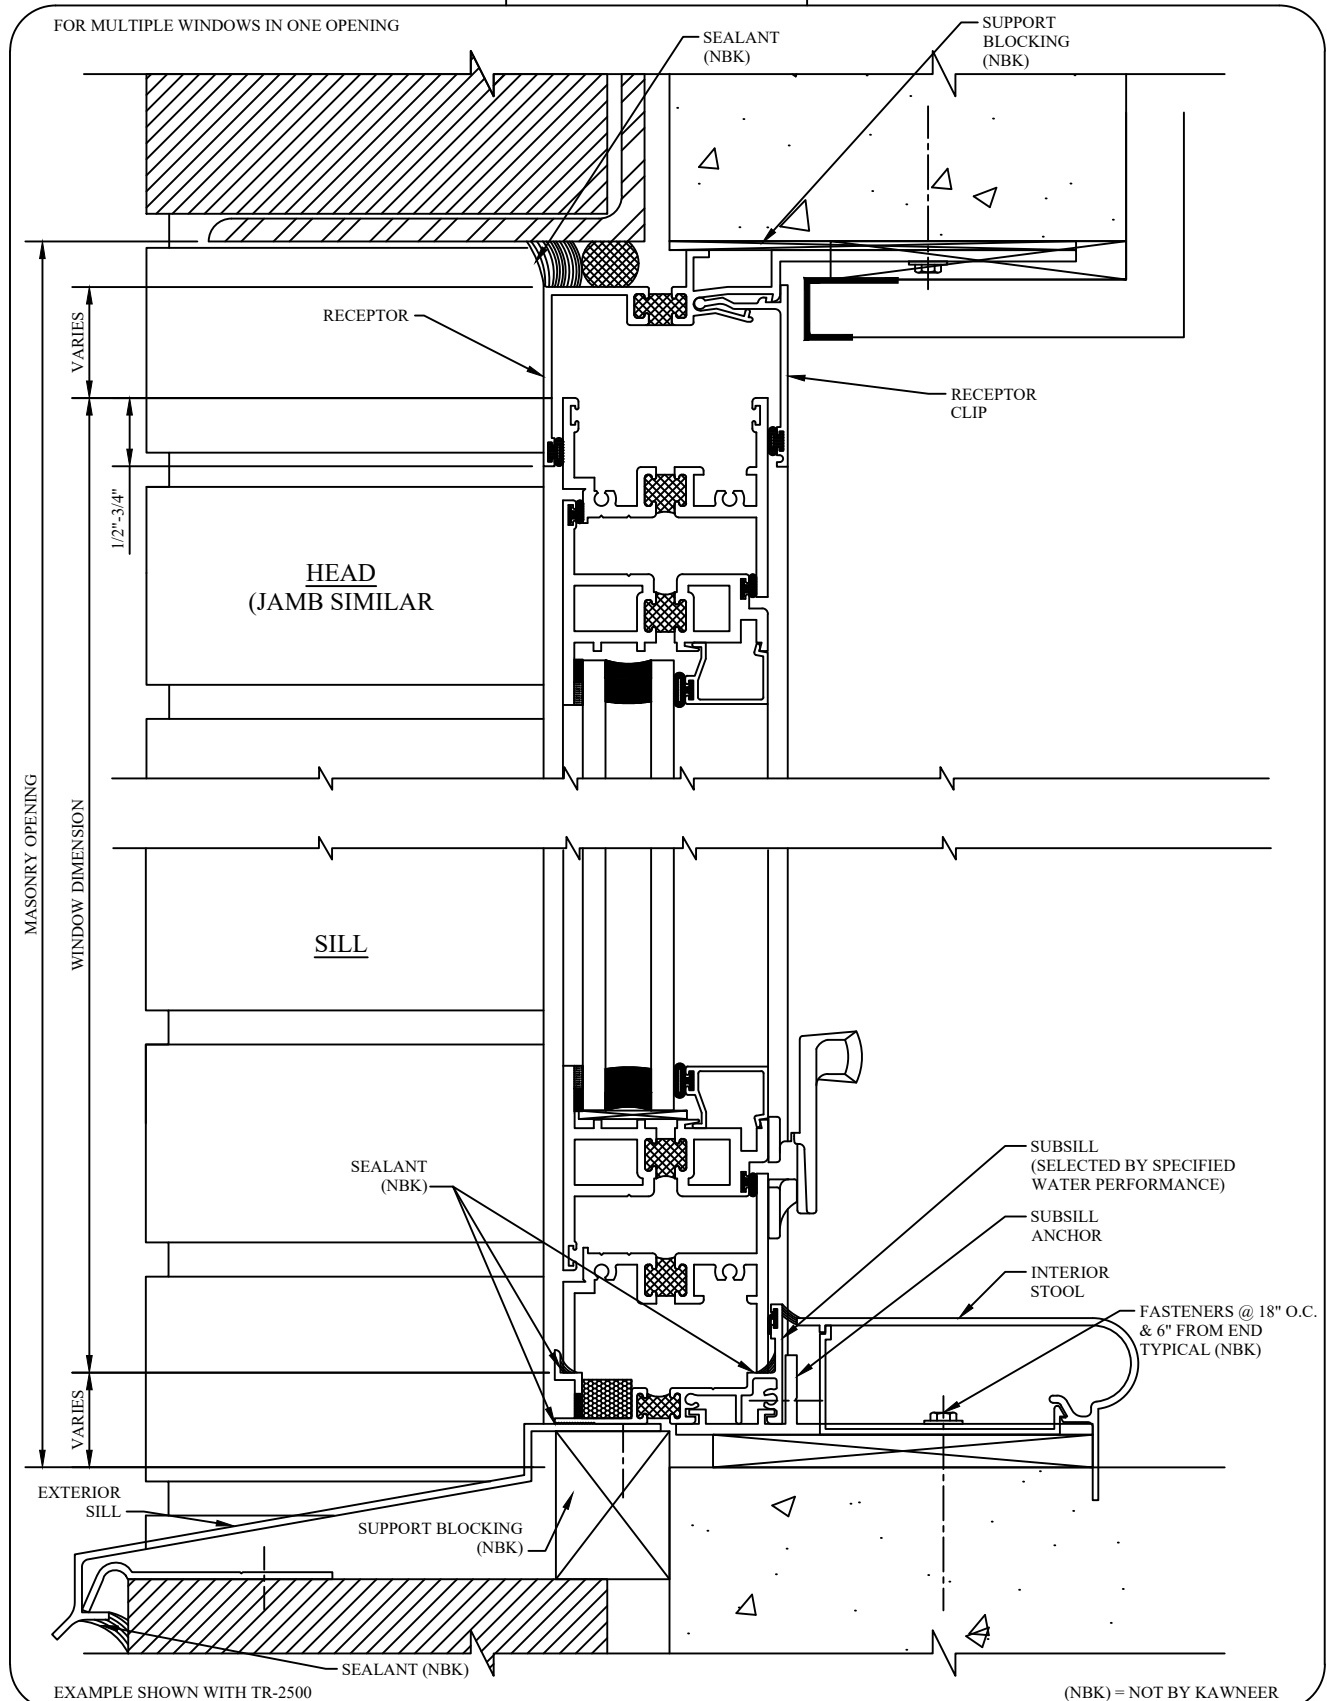


Half Scale Sections


FOR SINGLE WINDOWS IN SINGLE OPENINGS

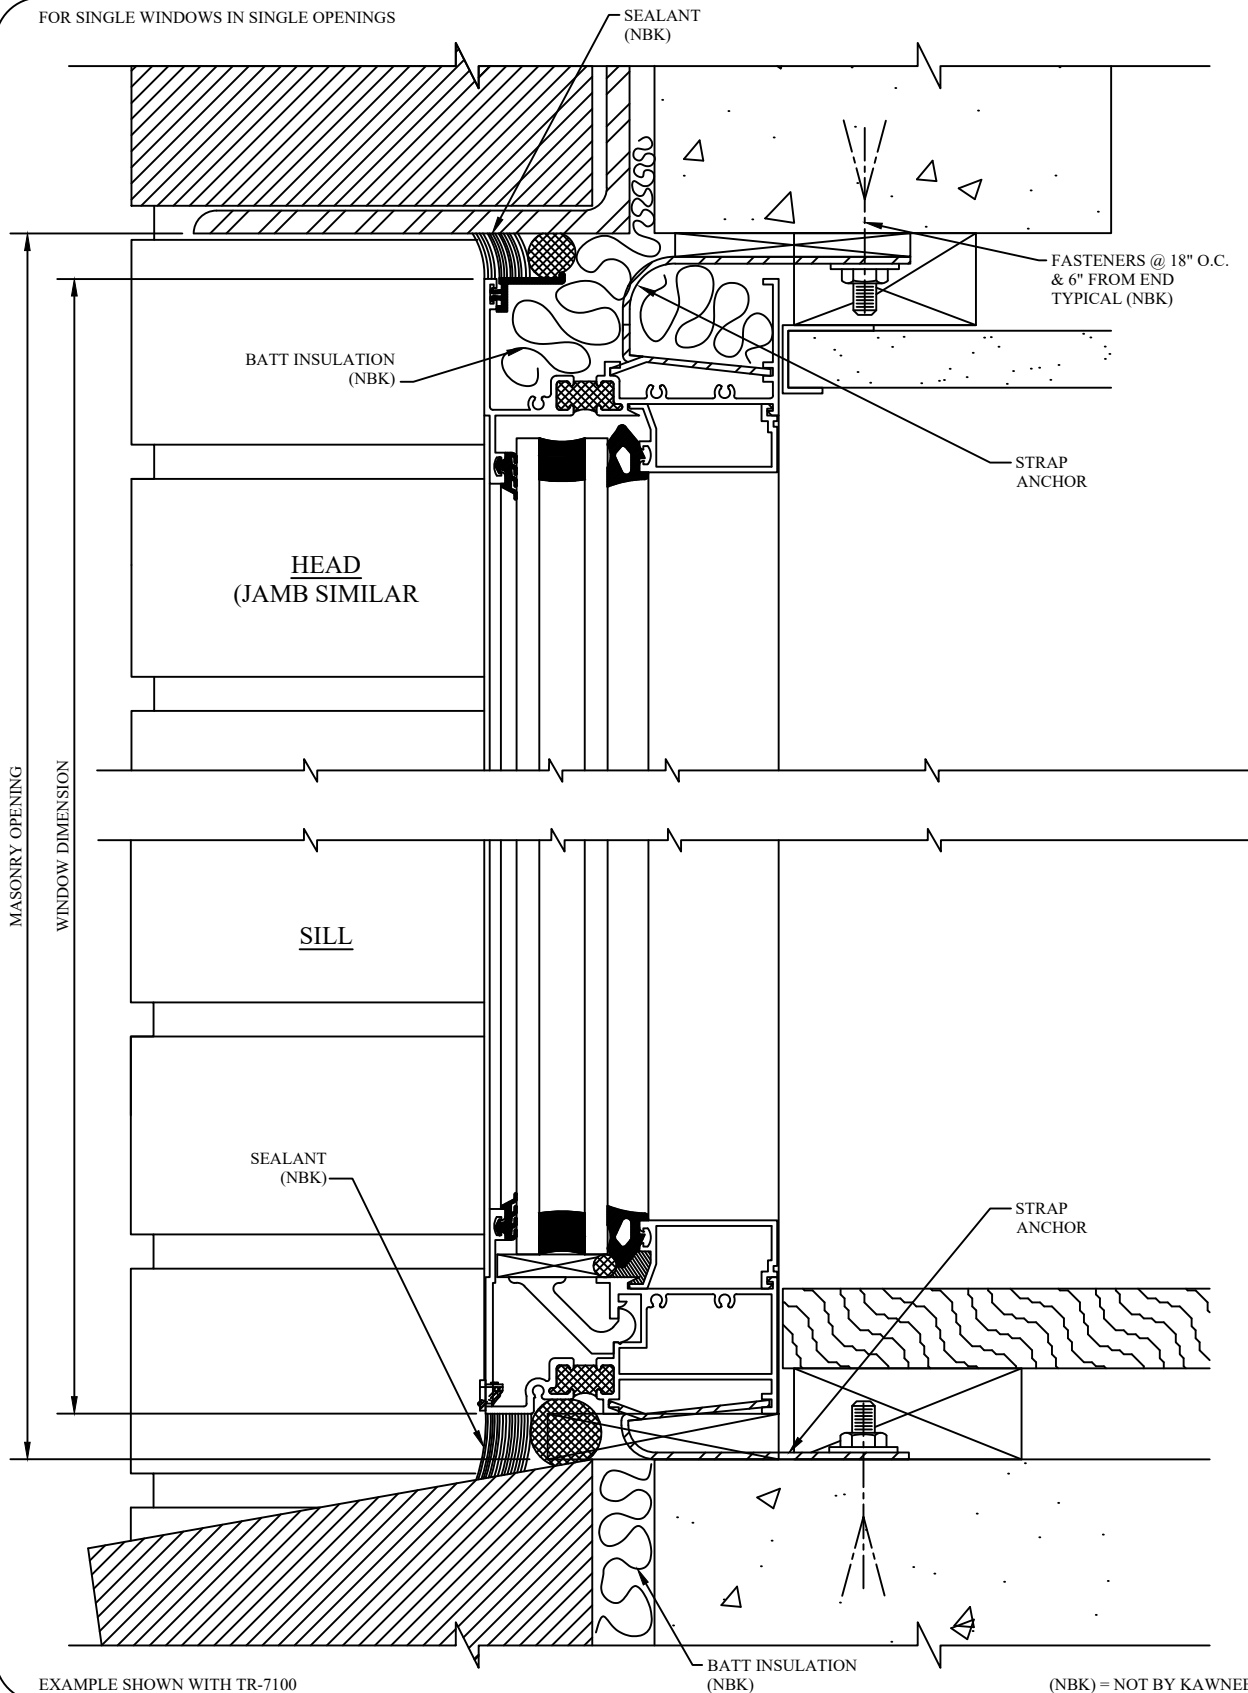


(NBK) = NOT BY KAWNEER

FOR SINGLE WINDOWS IN SINGLE OPENINGS

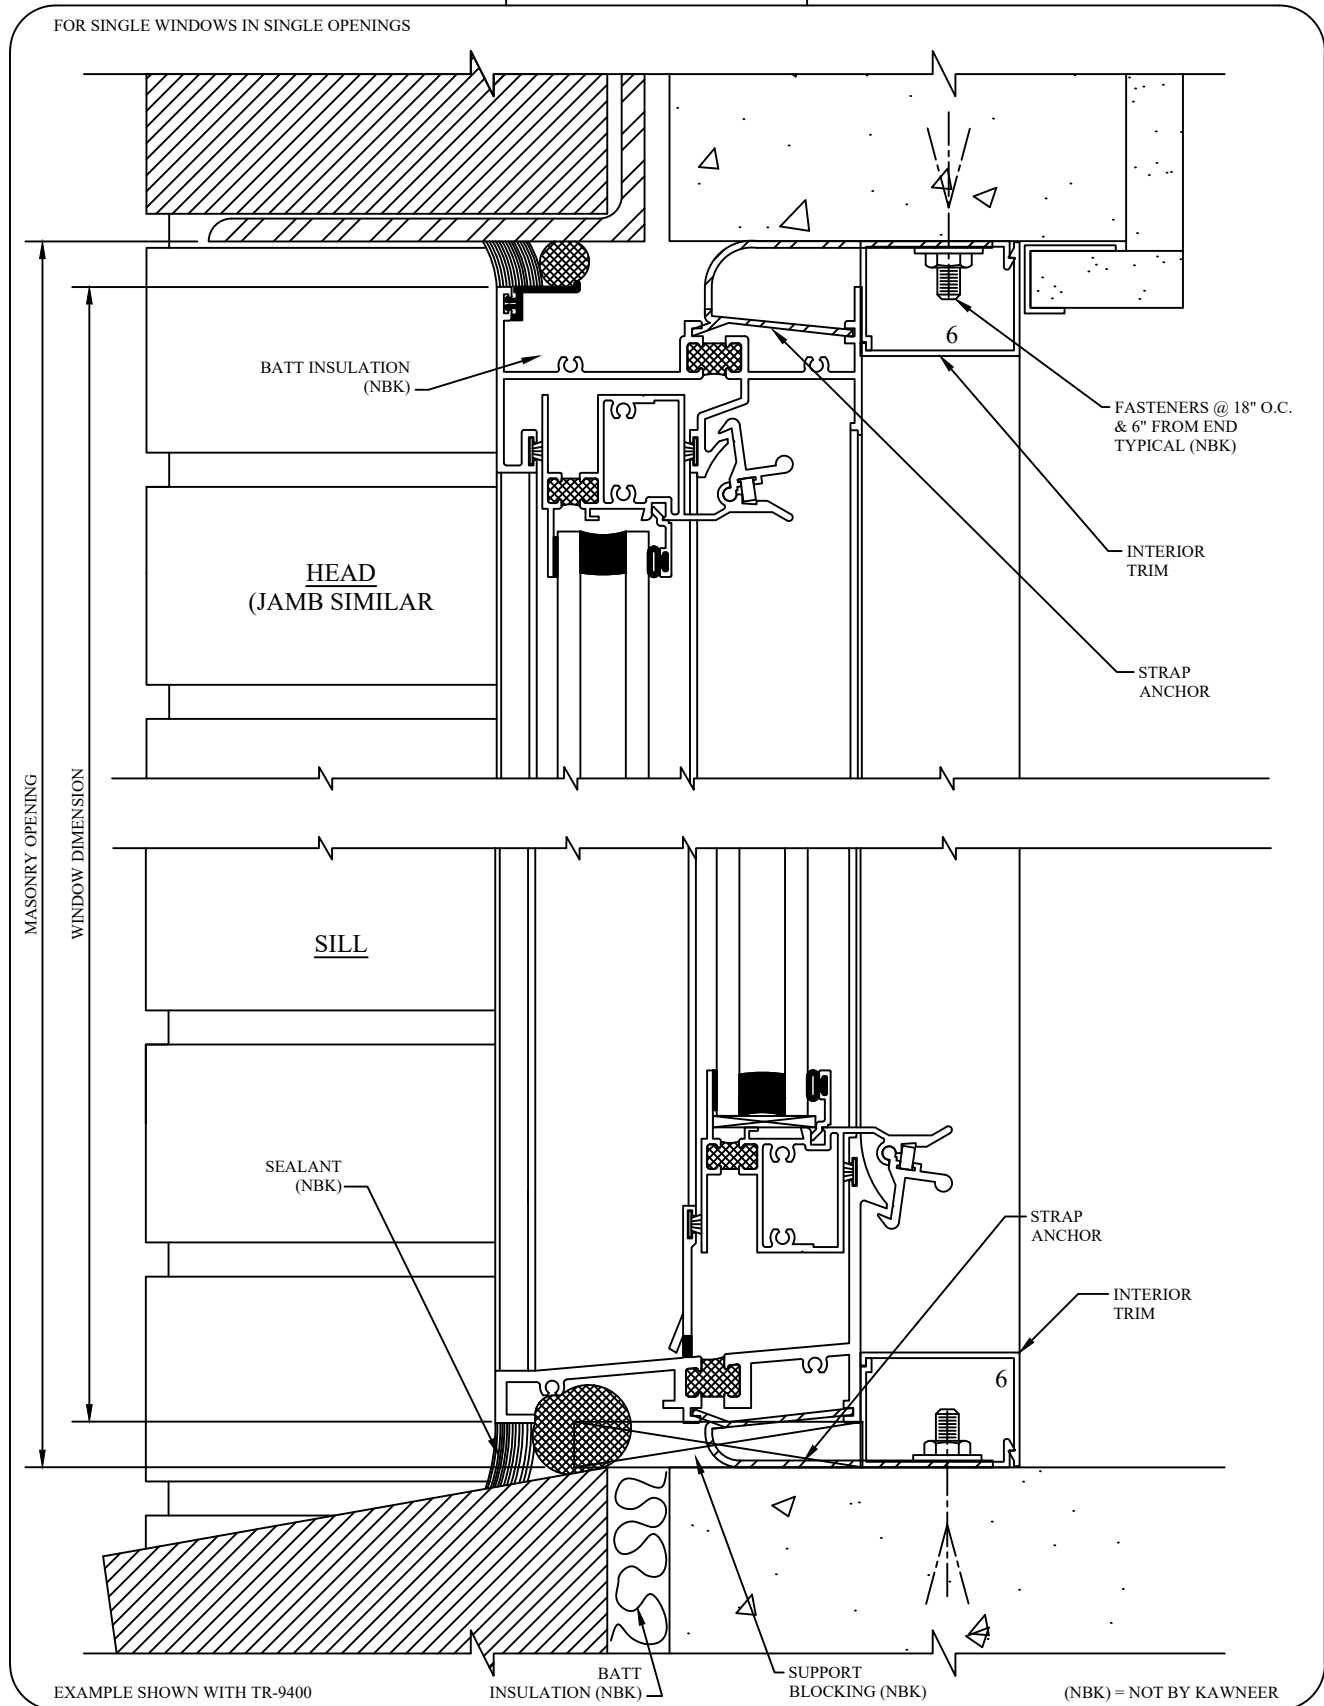


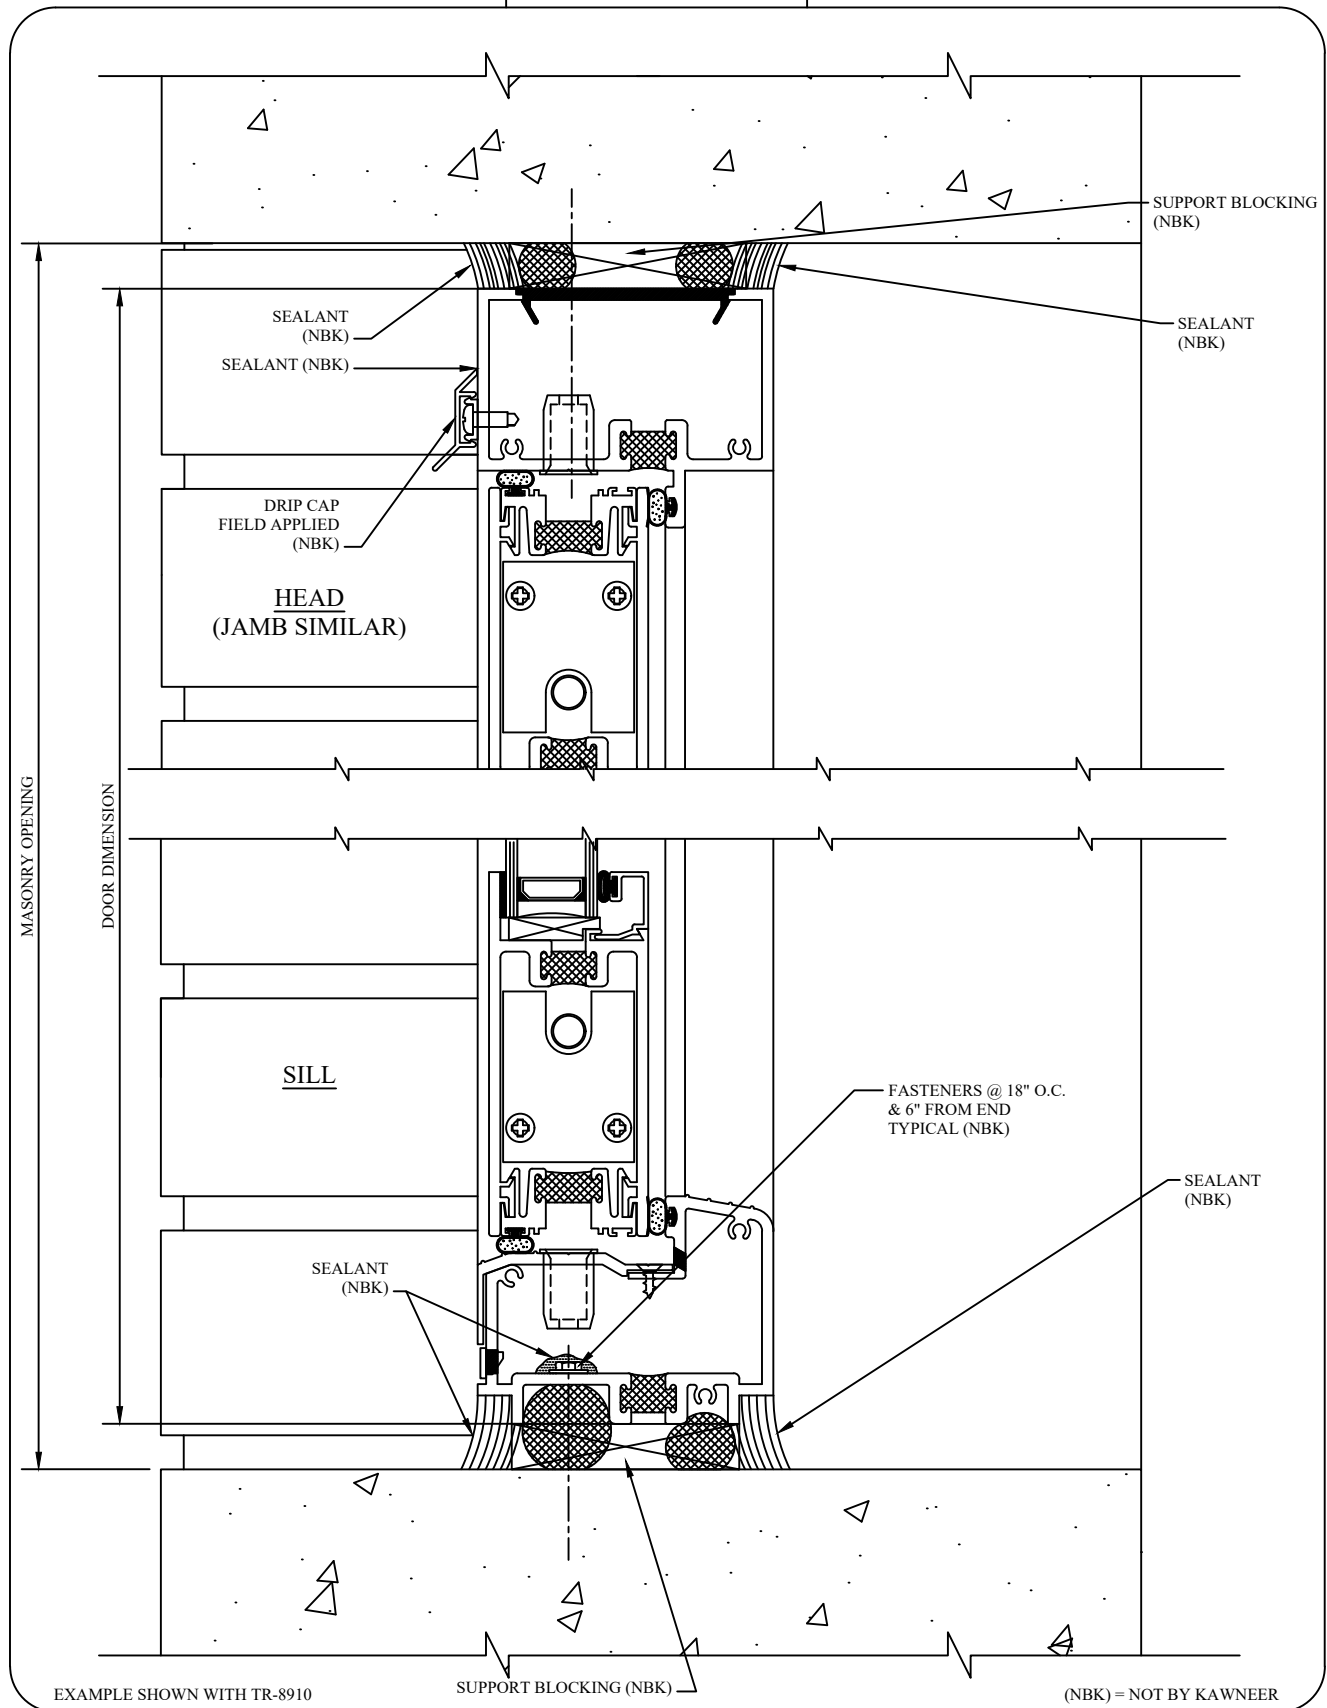

Half Scale Sections

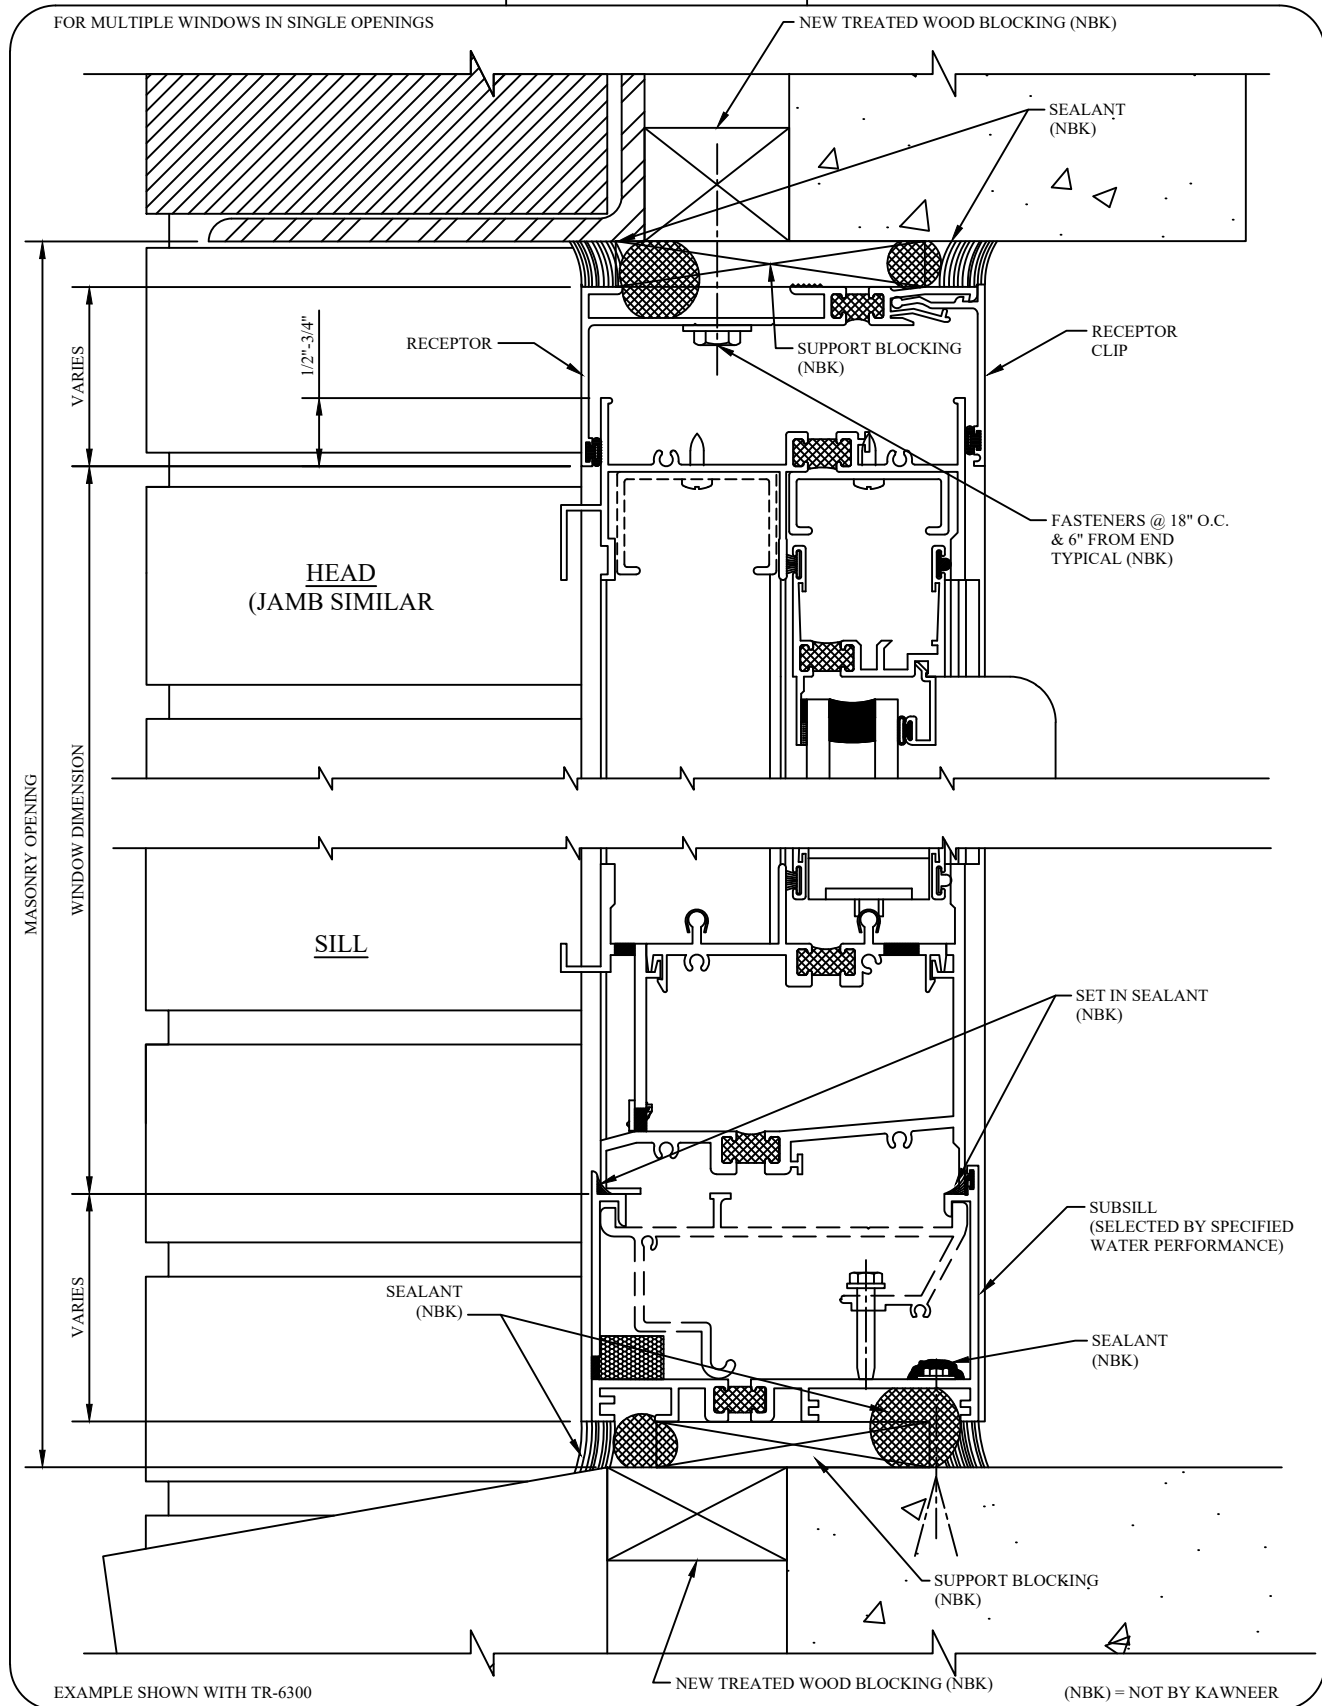


Half Scale Sections

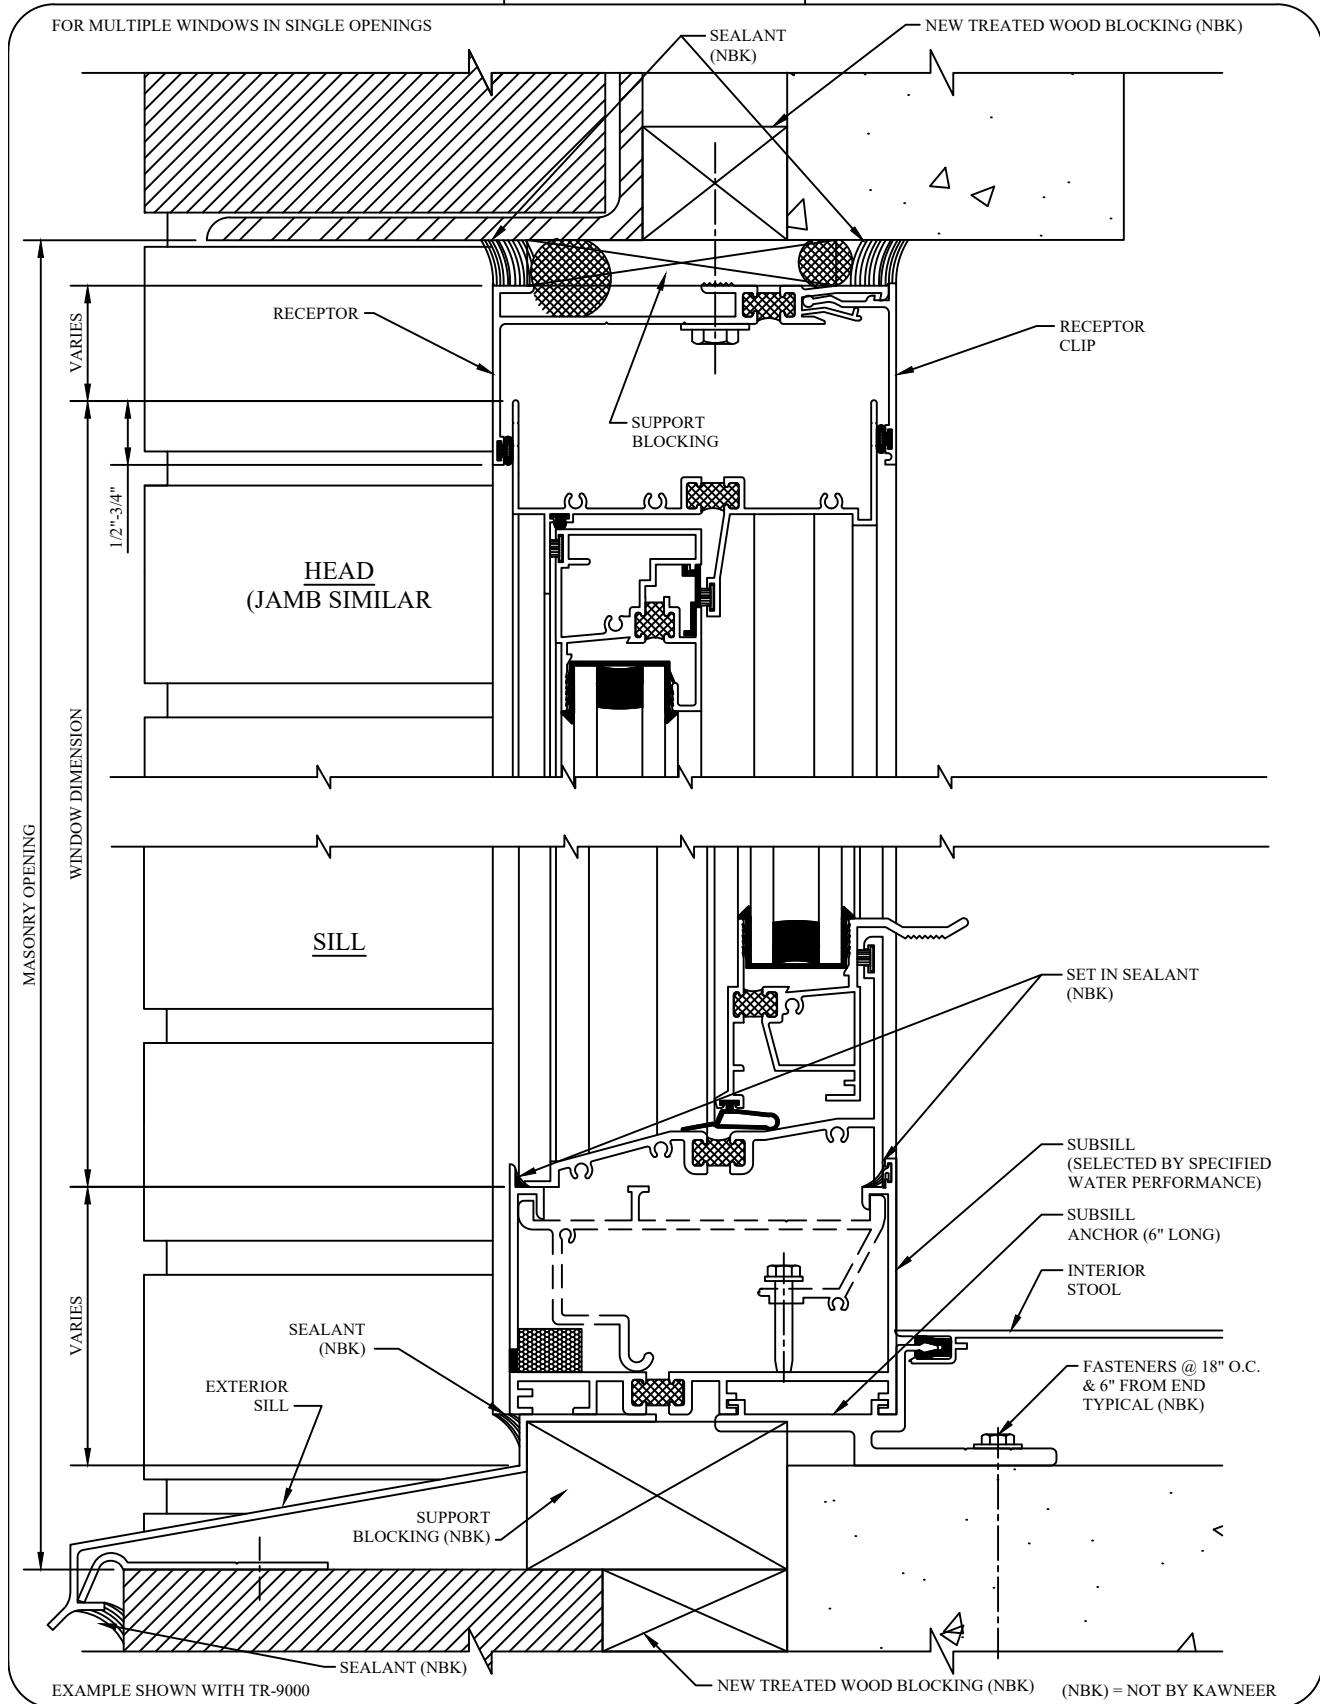

Half Scale Sections


FOR SINGLE WINDOWS IN SINGLE OPENINGS

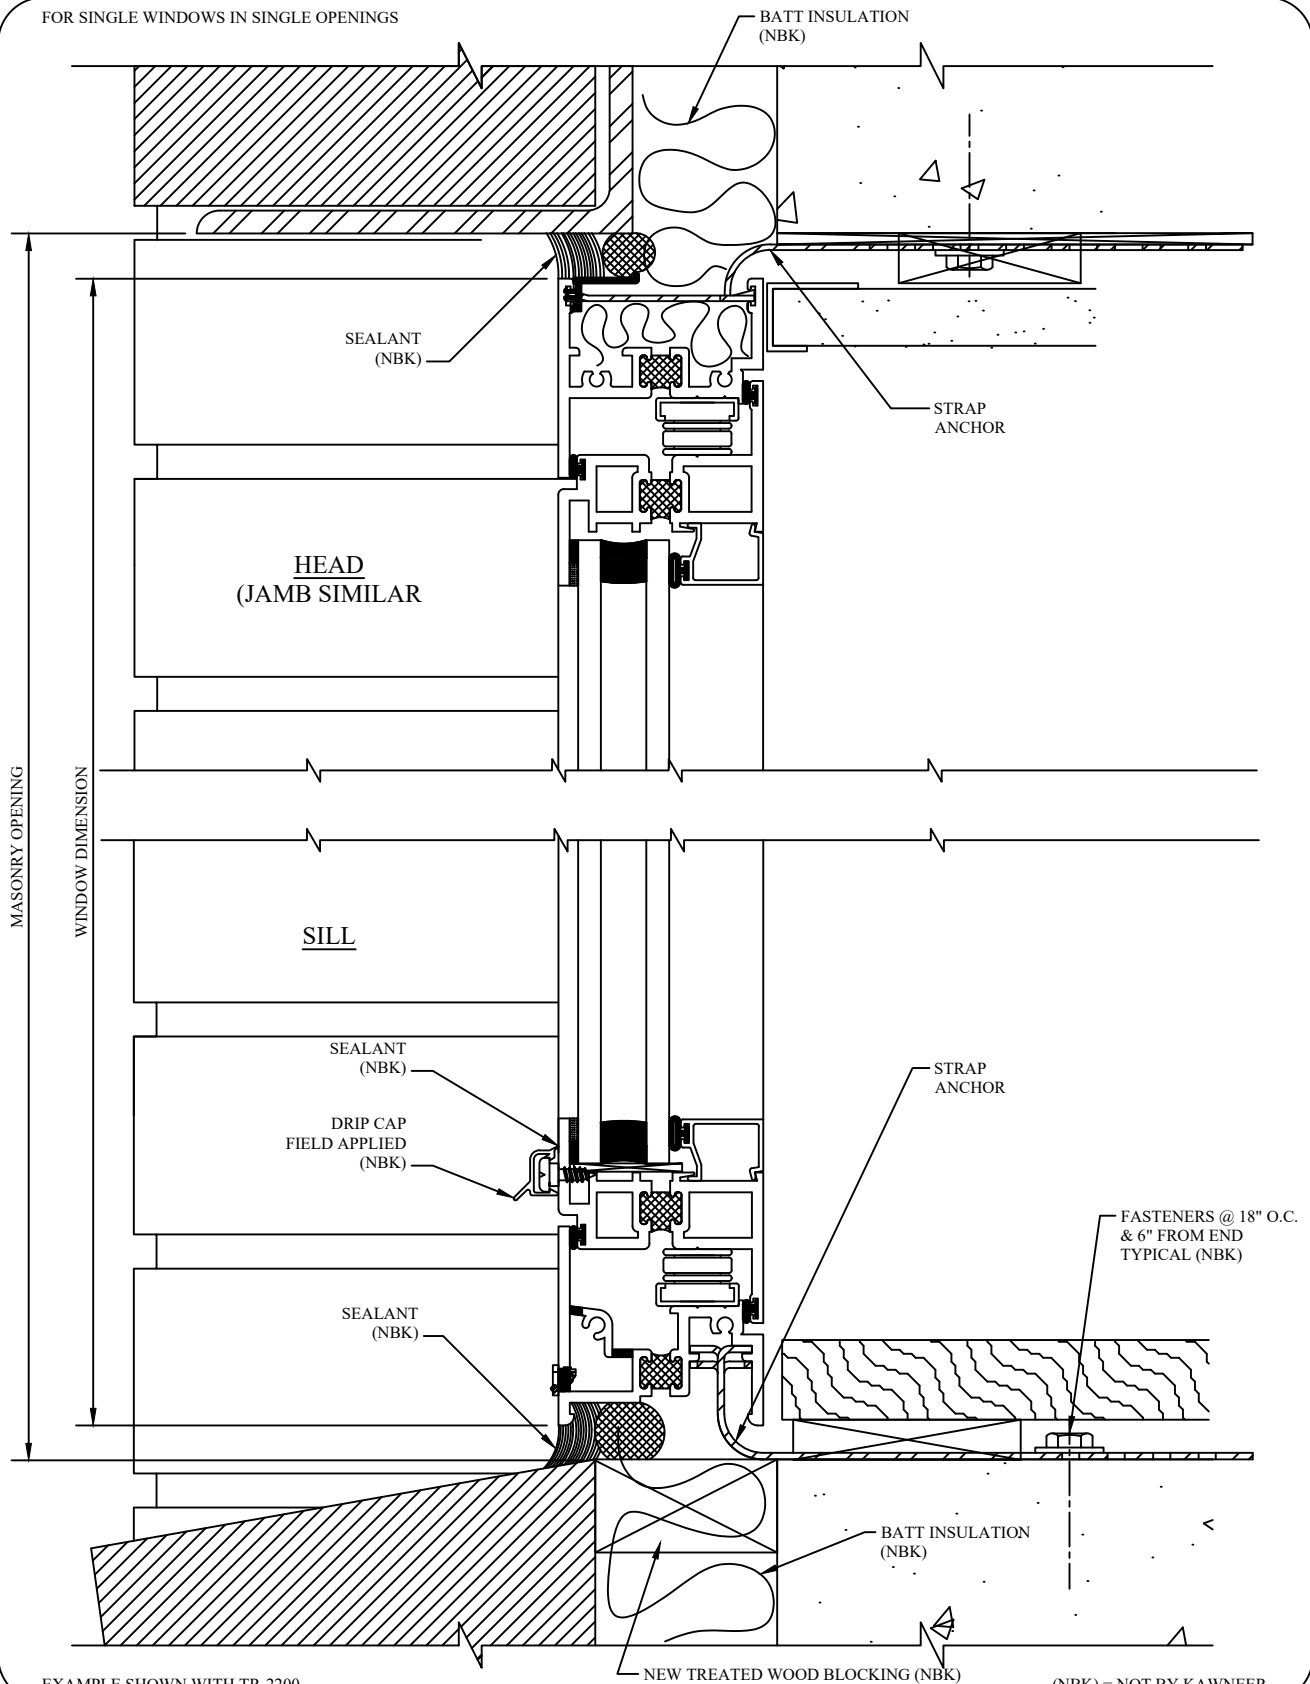

EXAMPLE SHOWN WITH TR-2200

(NBK) = NOT BY KAWNEER


Half Scale Sections

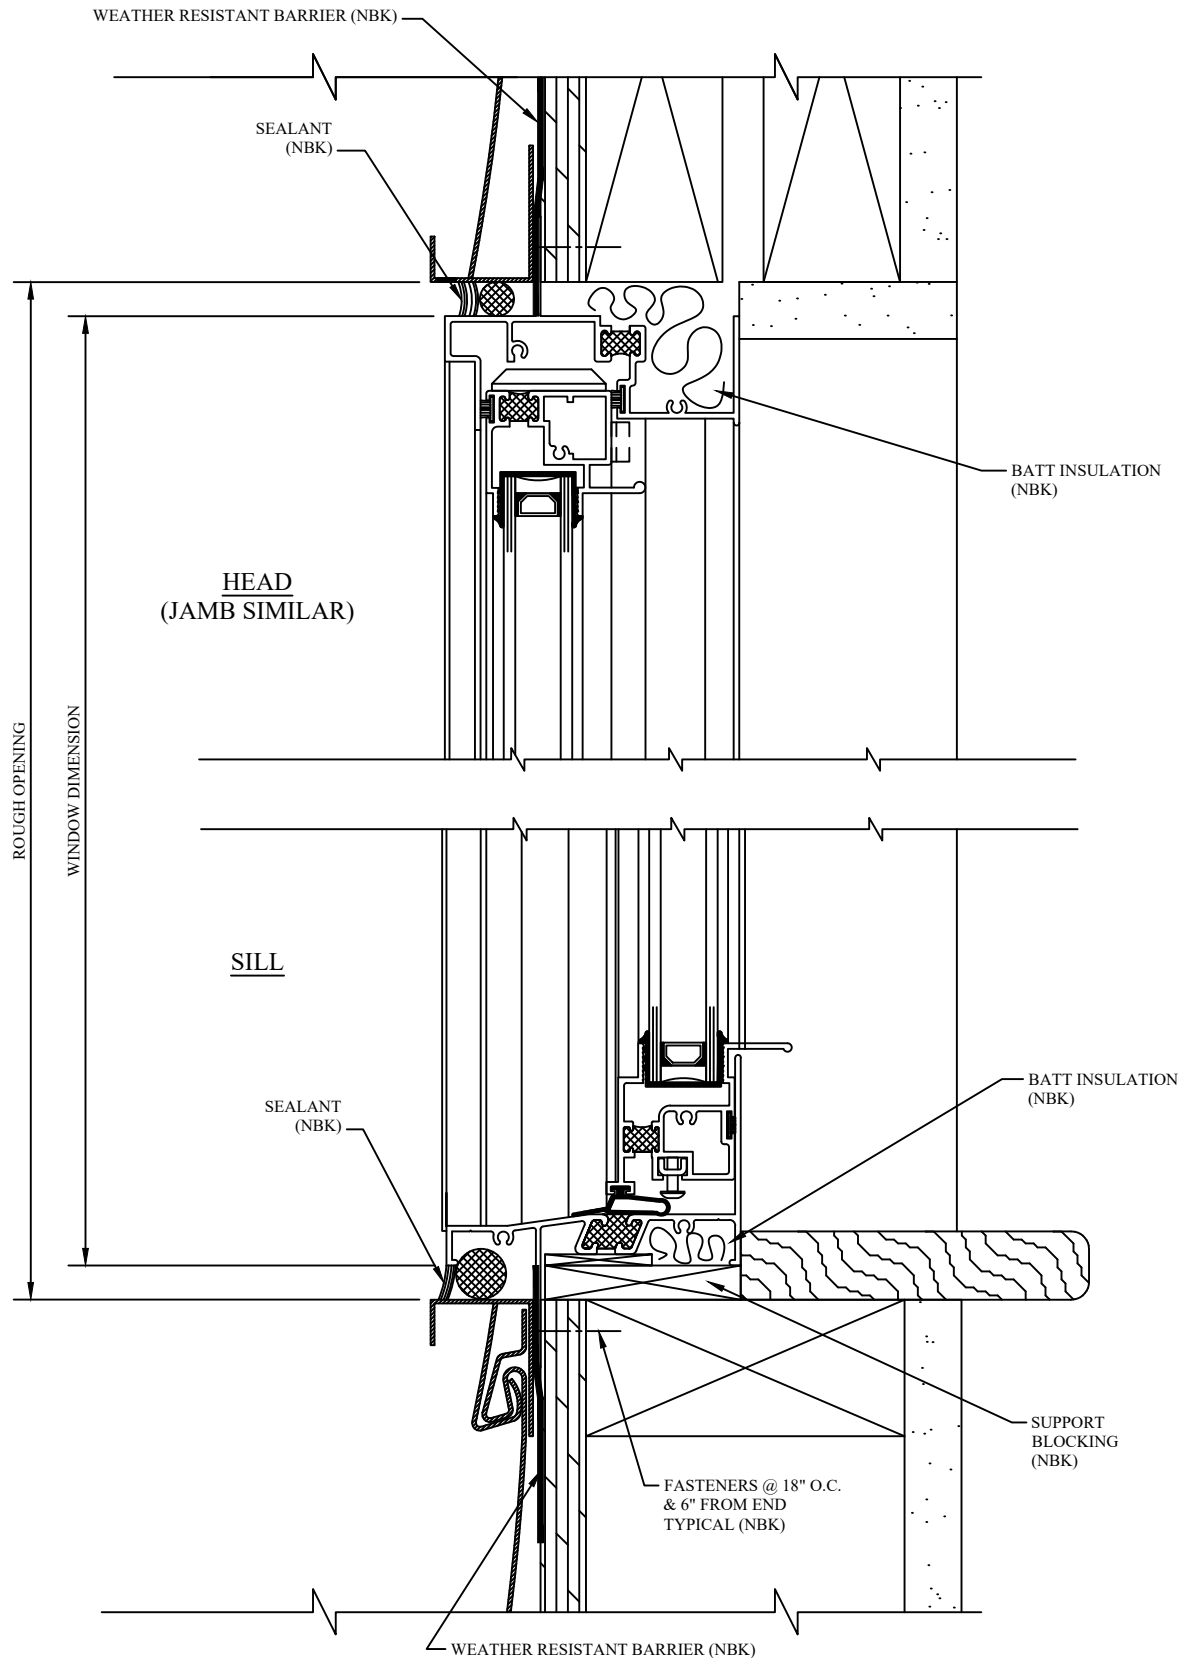

EXAMPLE SHOWN WITH TR-5000P

(NBK) = NOT BY KAWNEER

FOR MULTIPLE WINDOWS IN SINGLE OPENINGS

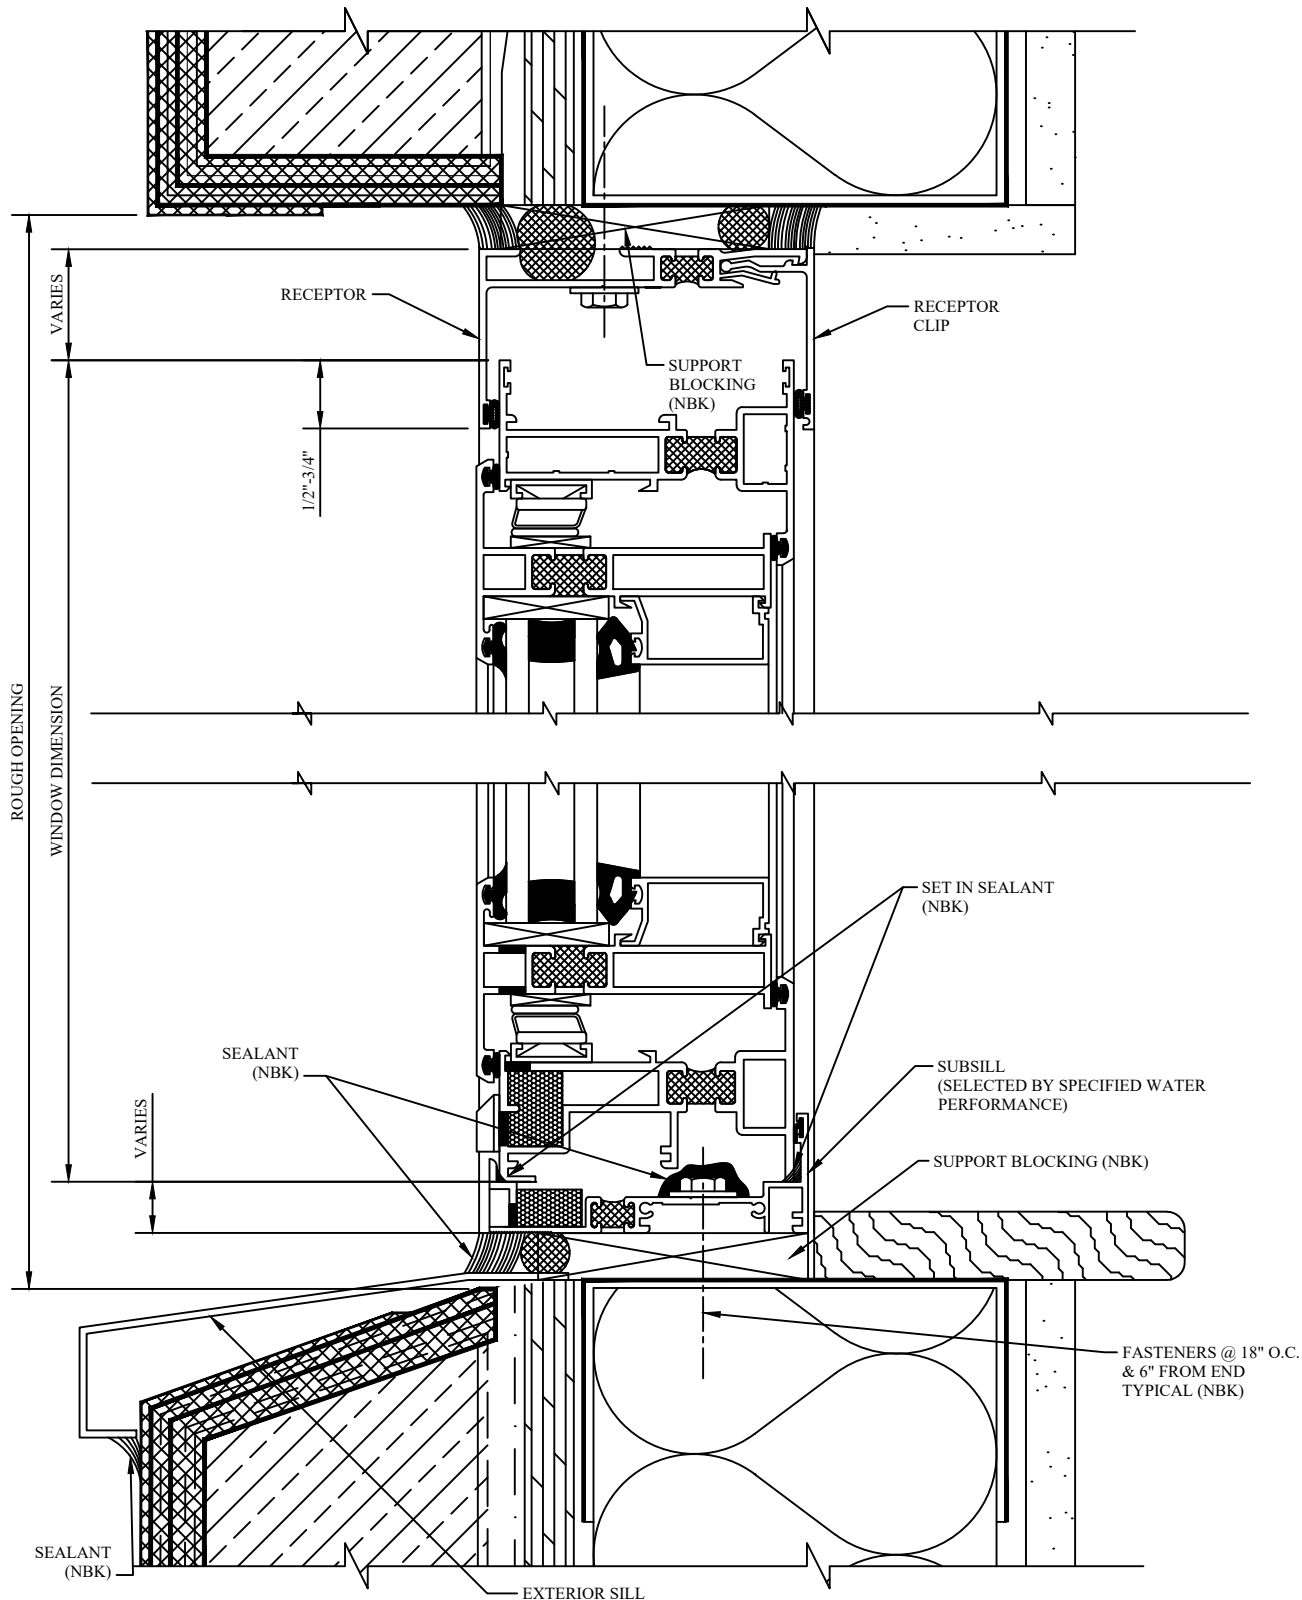

EXAMPLE SHOWN WITH TR-3100

(NBK) = NOT BY KAWNEER