

Sandisk Clip Audible User Guide



Requirements & Tech Specs

- Windows XP with SP 2 or Vista
- Windows Media Player 11.
- **Audible Formats:** 2 3 4
- **Capacities Available:** 1GB, 2GB
- **Bookmarking:** No
- **Section Navigation:** Yes
- **Variable Playback Speed:** Yes
- **FM Radio:** Yes
- **Video:** No
- **Removable Battery:** No

How To's:

A. **Playback:** How do I locate/play Audible content on the device?

1. Press the **Menu** button to bring up the menu.
2. Scroll to and Select **Music**.
3. Within the **Music** menu, scroll to and select **Audiobooks**.
4. From the list, scroll to, highlight, and select the Audible title you wish to play from the list shown

B. **Rewind/Fast-Forward:** How do I rewind/fast-forward through my Audible content on the device?

1. **Rewinding:** While the title is playing, press and hold the **Rewind** button.
2. **Fast-Forwarding:** While the title is playing, press and hold the **Fast-Forward** button

C. **Section Navigation:** How do I use section navigation?

1. While the title is playing, press the **Down/Submenu** button.
2. Go down to **Ch. Mode** and press the **Center** button.
3. The **Section** is then displayed atop the screen.
4. Using the **Rewind** and **Fast-Forward** buttons to move through the sections.

D. **Playback Speed:** How do I change the playback speed on the device?

1. While the title is playing, press the **Down/Submenu** button.
2. Go down to **Speed** and press the **Center** button to choose either **Slow**, **Normal**, or **Fast** speeds.

Buttons and Functions



1	Display window	Display the information and status here
2	Left/Previous/Rewind	Press for previous track, rewind, or move left
3	Select Button	Press to select the item
4	Down/Submenu	Press to move down or to options menu
5	Right/Forward	Press for next track, fast forward, or move right
6	Up/Pause/Resume	Press to move up one item, pause, or resume
7	Menu	Return to the Main Menu
8	MIC	Built-in microphone
9	Earphone Port	Connect earphones here to listen
10	Volume Up	Turns up the volume
11	Volume Down	Turns down the volume
12	Hold/Lock	Factory sets to locked position (shows orange color). Slide to center position for controls. When locked, all controls are disabled to prevent accidental activation of controls.
13	Power/ Reset	<ul style="list-style-type: none"> Slide up to turn on the player Slide up and hold for 2 seconds to turn off the player Slide up and hold for 15 seconds to reset your player
14	USB Port	Plug USB cable here to connect to the computer
15	Clip	The removable clip accessory

