



Programmable Single-Axis Servo Drive Compact Version Sizes C2 to C4

Operation Manual

2.0 A – 8.0 A





Sizes

C4

C3

C2

Single-Axis Compact High-Performance Drives

The modularity of the Single-Axis Compact guarantees you optimum integration into the machine process. Whether in high-speed field bus communication with the central multi-axis machine controller or with distributed programmable Motion Control intelligence in the servo drive, the Single-Axis Compact is a master of both.

Single-Axis Compact Operation Manual

ID no.: CA97555-001, Rev. 4.0

Date: 01/2015

Applicable as from firmware version: V1.25-01

The German version is the original of this Operation Manual.

We reserve the right to make technical changes.

The contents of our documentation have been compiled with greatest care and in compliance with our present status of information.

Nevertheless we would like to point out that this document cannot always be updated parallel to the technical further development of our products.


Information and specifications may be changed at any time. For information on the latest version please refer to drives-support@moog.com.

How to use this document

Dear user,

We are happy that you have made a decision in favour of a product from Moog. In order to be able to start using your new Single-Axis Compact quickly and without problems, we ask you kindly to read this Operation Manual thoroughly beforehand.

Step	Action	Comment
 1.	This Operation Manual will enable you to install and commission the Single-Axis Compact system very quickly and easily.	Quick-start guide
 2.	Simply follow the step-by-step tables in the chapters.	Off you go!

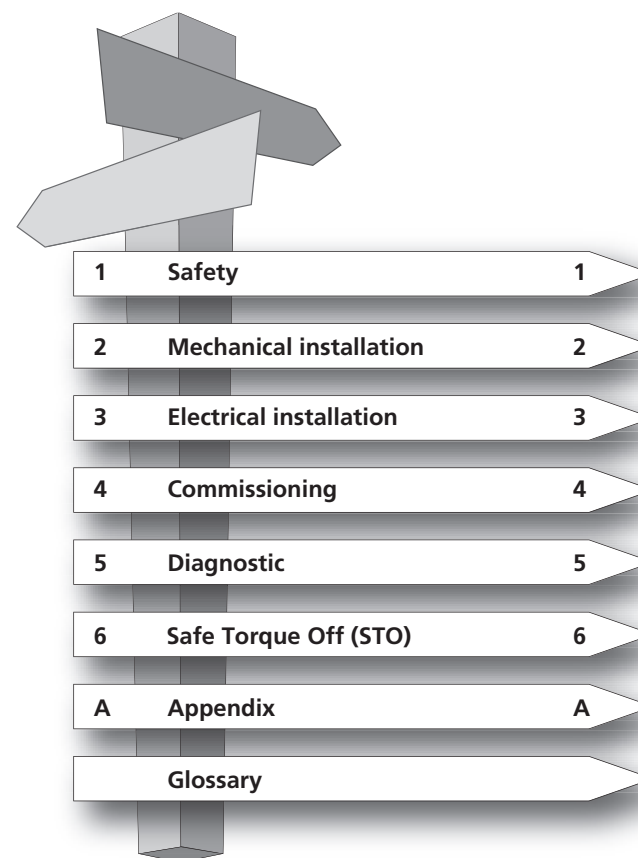

Order code

The order designation G394-xxx-xxx-xxx informs you about the corresponding variant of the servo drive delivered to you. The significance of the individual characters of the order designation is given in the following order code. You will find the complete order code with all values in the MSD Ordering Catalog.

G394	-				-				-			
Rated current												
Option 1 (Communication)												
Option 2 (Technology)												
Option 3 (Safety)												
Option 4 (Function package)												
Variants												

Fig. 0.1 Single-Axis Compact order code

Data on manufacture:

On rating plates of the Single-Axis Compact you will find the serial number, from which you can identify the date of manufacture based on the following key. For the location of the rating plate on the Single-Axis Compact refer to Fig. 3.1 on page 18.

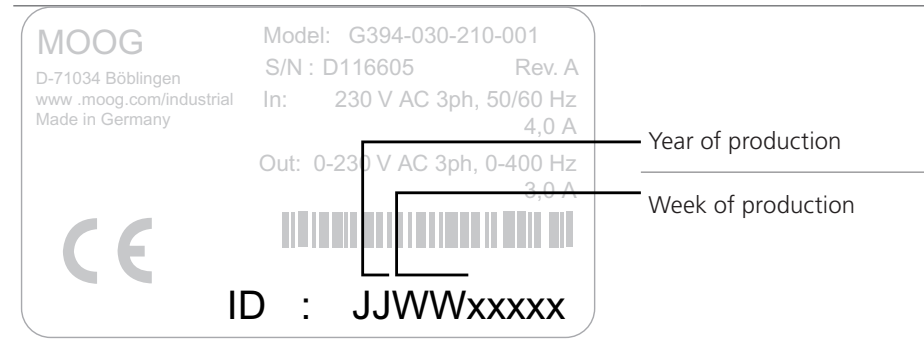


Fig. 0.1 Single-Axis Compact hardware rating plate

Supply package

The supply package includes:

- Single-Axis Compact
- Terminal kit for control and power terminals (depending on device power and variant)
- Set with shield connecting plates and fixing material
- Product DVD

Pictograms

To provide clear guidance, this Operation Manual uses pictograms. Their meanings are set out in the following table. The pictograms always have the same meanings, even where they are placed without text, such as next to a connection diagram.

Warnings (see also section 1.1)	
	ATTENTION! Misoperation may result in damage to the drive or malfunctions.
	DANGER FROM ELECTRICAL TENSION! Improper behaviour may endanger human life.
	DANGER FROM ROTATING PARTS! Drive may start up automatically.
Hints & Tips	
	NOTE: Useful information or reference to other documents.
	STEP: Action in a sequence of multiple actions.

Table of contents

1	Safety.....	9		
1.1	For your safety	9		
1.2	Warning symbols	10		
1.3	Intended use	10		
1.4	Responsibility	11		
2	Mechanical installation.....	13		
2.1	Notes for operation.....	13		
2.2	Wall mounting	13		
2.2.1	Dimensions of the servo drives.....	14		
3	Installation.....	17		
3.1	Notes for installation	17		
3.2	Layout.....	18		
3.3	Connection diagram size C2 to C4.....	19		
3.4	Effective EMC installation.....	20		
3.4.1	Interference immunity of servo drives	20		
3.4.2	Specimen setup	20		
3.5	Connection PE conductor.....	23		
3.6	Electrical isolation concept.....	24		
3.7	Connection of supply voltage.....	25		
3.7.1	Connection of control supply (+24 V DC)	25		
3.7.2	Connection Mains supply	26		
3.8	Control connections.....	28		
3.8.1	Specification of control connections	29		
3.8.2	Connection of motor brake X13.....	30		
3.9	Specification of Ethernet interface	30		
3.10	Option 1	31		
3.11	Option 2	31		
3.12	Encoder connection	31		
3.12.1	Ready made-up encoder cables	32		
3.12.2	Resolver connection X6.....	33		
3.12.3	Connection for high-resolution encoder	33		
3.13	Motor connection	34		
3.13.1	Connection of the servo motors	35		
3.13.2	Switching in the motor cable	37		
3.14	Braking resistor (BR)	37		
3.14.1	Protection in case of braking chopper fault.....	37		
3.14.2	Design with integrated braking resistor (size C3 and 4).....	37		
3.14.3	Connection of an external braking resistor.....	39		
4	Commissioning	43		
4.1	Notes for operation.....	43		
4.2	Initial commissioning.....	43		
4.2.1	Switching on control supply.....	44		
4.2.2	Connection between PC and servo drive	44		
4.2.3	Parameter setting.....	44		
4.2.4	Drive control with Moog DRIVEADMINISTRATOR 5	44		
4.3	Serial commissioning.....	46		
4.4	Integrated control unit	46		

4.4.1	Function of buttons T1 and T2	47
4.4.2	Display	48
4.4.3	Parameter menu (PA)	48
4.4.4	Error numbers	48
4.4.5	Ethernet IP-address menu (IP)	49
4.4.6	Field bus address menu (Fb)	50
5	Diagnostics	53
5.1	Device states	53
5.2	Error display	53
5.3	Error codes	53
5.4	Helpline/Support & Service	54
6	Safe Torque Off (STO)	55
7	Appendix	57
7.1	Current capacity of servo drives	57
7.2	Technical data Single-Axis Compact	60
7.3	Ambient conditions	62
7.4	UL certification	63
8	Glossary	65

1 Safety

1.1 For your safety

The instructions set out below should be read through prior to initial commissioning in order to prevent injury and/or damage to property. The safety instructions must be followed at all times.



Read the Operation Manual first!

- Follow the safety instructions!
- Refer to the user information!



Electric drives are dangerous:

- Electrical voltages of 230 to 480 V
- Dangerously high voltages of ≥ 50 V may still be present 10 minutes after the power is cut (capacitor charge). So check that the power has been cut!
- Rotating parts
- Hot surfaces



Protection against magnetic and/or electromagnetic fields during installation and operation.

Persons fitted with heart pacemakers, metallic implants and hearing aids etc. must not be allowed access to the following areas:

- Areas where drive systems are installed, repaired and operated.
- Areas where motors are installed, repaired and operated. Motors with permanent magnets pose a particular hazard.
- If it is necessary to access such areas, suitability to do so must be determined before hand by a doctor.



Your qualification:

- In order to prevent personal injury or damage to property, only personnel with electrical engineering qualifications may work on the device.
- The said qualified personnel must be familiar with the contents of the Operation Manual (cf. IEC 364, DIN VDE 0100).
- Awareness of national accident prevention regulations (e.g. BGV A3 in Germany)



During installation observe the following instructions:

- Always comply with the connection conditions and technical specifications.
- Comply with the standards for electrical installations, such as regarding wire cross-section, grounding lead and ground connections.
- Do not touch electronic components and contacts (electrostatic discharge may destroy components).

Table 1.1 Safety instructions

1.2 Warning symbols

The safety instructions detail the following hazard classes.
The hazard class defines the risk posed by failing to comply with the safety notice.

Warning symbols	General explanation	Hazard class to ANSI Z 535
	Attention! Misoperation may result in damage to the drive or malfunctions.	Serious injury or damage to property may occur.
	Danger from electrical tension! Improper behaviour may endanger human life.	Death or serious injury will occur.
	Danger from rotating parts! Drive may start up automatically.	Death or serious injury will occur.

Table 1.2 Explanations of warning symbols

1.3 Intended use

Single-Axis Compacts are components designed solely for vertical installation in stationary electrical systems or machines.

When installed in machines the commissioning of the servo drive (i.e. start-up of intended operation) is prohibited, unless it has been ascertained that the machine fully complies with the provisions of the Machinery Directive 2006/42/EC; compliance with IEC/EN 60204 is mandatory.

Commissioning (i.e. start-up of intended operation) is only permitted when strictly complying with the EMC Directive (2004/108/EC).



The Single-Axis Compact conforms to the Low Voltage Directive 2006/95/EC.

The servo drives fulfill the demands of the harmonized product standard IEC/EN 61800-5-1.

If the servo drive is used for special applications, such as in areas subject to explosion hazard, the required standards and regulations (e.g. in a potentially explosive atmosphere IEC/EN 60079-0, "General requirements" and IEC/EN 60079-1, "Equipment protection by flameproof enclosures") must always be observed.

Repairs may only be carried out by authorized repair workshops. Unauthorized opening and incorrect intervention could lead to death, physical injury or material damage. The warranty provided by Moog would thereby be rendered void.



NOTE:

Deployment of the servo drives in non-stationary equipment is classed as non-standard ambient conditions, and is permissible only by special agreement.

1.4 Responsibility

Electronic devices are fundamentally not fail-safe. The company setting up and/or operating the machine or plant is itself responsible for ensuring that the drive is rendered safe if the device fails.

In the section on "Electrical equipment of machines" the standard IEC/EN 60204-1/ VDE 0113 "Safety of machines" stipulates safety requirements for electrical controls. They are intended to protect personnel and machinery, and to maintain the function capability of the machine or plant concerned, and must be observed.

The function of an emergency off system does not necessarily have to cut the power supply to the drive. To protect against danger, it may be more beneficial to maintain individual drives in operation or to initiate specific safety sequences. Execution of the emergency stop measure is assessed by means of a risk analysis of the machine or plant, including the electrical equipment in accordance with EN ISO 12100

(previously EN ISO 14121), and is determined in accordance with EN ISO 13849-1 (previously DIN EN 954-1), "Safety of machines - Safety-related parts of controls" by selecting the circuit category.

2 Mechanical installation

2.1 Notes for operation



PLEASE STRICTLY AVOID ...

- penetration of damp into the device;
- aggressive or conductive substances in the immediate vicinity;
- drill chippings, screws or foreign bodies dropping into the device;
- ventilation openings being covered over, as otherwise the device may be damaged.

Note the following points:

- Cooling air must be able to flow through the device without restriction.
- For mounting in switch cabinets with convection (= heat loss is discharged to the outside via the cabinet walls), always fit an internal air circulation fan.
- The backing plate must be well grounded.
- The device is designed only for vertical installation in switch cabinets. The switch cabinet must as a minimum provide IP4x protection.
- To attain the best result for EMC-compatible installation you should use a chromated or galvanized backing plate. If backing plates are varnished, remove the coating from the contact area. The devices themselves have an aluminium back panel.
- Maximum pollution severity 2



ATTENTION!

According to EN ISO 13849-2 the switch cabinet must have IP54 protection or higher when using the STO (Safe Torque OFF) safety function.

Further information on environmental conditions can be found in the appendix.

2.2 Wall mounting

Step	Action	Comment
1.	Mark out the position of the tapped holes on the backing plate. Cut a tap for each fixing screw in the backing plate.	Dimensional drawings/hole spacing - see Fig. 2.1 and Fig. 2.2 The tapping area will provide you with good, full-area contact.
2.	Mount the servo drive vertically on the backing plate.	Observe the mounting clearances! The contact area must be metallic bright.
3.	Mount the other components, such as the mains filter, mains choke etc., on the backing plate.	The cable between mains filter and servo drive may be maximum 300 mm (11.81 in) long.
4.	Continue with the electrical installation in section 3.	


Table 2.1 Mechanical installation



NOTE:

For all sizes of the Single-Axis Compact forced cooling by external air flow is necessary. The air must be able to flow unhindered through the device. If a temperature cut-out occurs, the cooling conditions must be improved.

Air flow: minimum 1.2 m/s (3.93 ft/s)

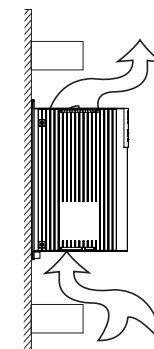

2.2.1 Dimensions of the servo drives

Single-Axis Compact	Size C2	Size C3	Size C4
	G394-030 G394-020	G394-059 G394-035	G394-080 G394-065
Weight]	1.0 kg (2.2 lb)	1.5 kg (3.3 lb)	2.8 kg (6.2 lb)
B (width)	55 (2.17)		
H (height) ¹⁾	210 (8.27)		290 (11.42)
T (depth) ¹⁾	142 (5.59)	189 (7.44)	235.5 (9.27)
A	27.5 (1.08)		
A1	-	-	40 (1.57)
C	225 (8.86)		305 (12.01)
C1	5 (0.20)		
D Ø	4.8 (0.19)		
H1	235 (9.25)		315 (12.40)
Screws	2 x M4		4 x M4

All dimensions in mm (in)

1) without terminals/connections

2) The bend radius of the connecting cables must be taken into account

Table 2.2 Single-Axis Compact dimensions - see Fig.Fig. 2.1

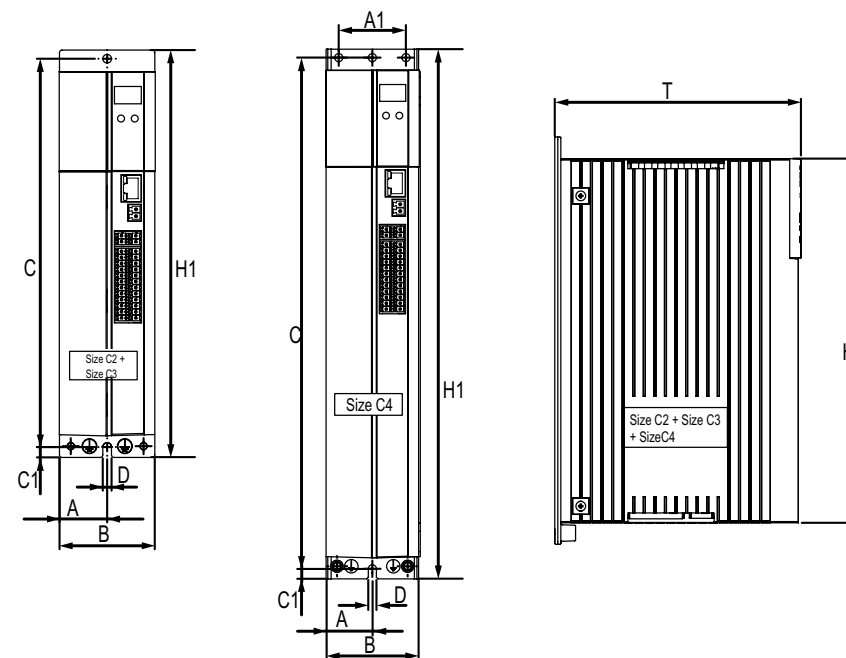


Fig. 2.1 Dimensions (in mm (in)) size C2, size C3, size C4

Mounting clearances



NOTE: The minimum distance specified in the table applies for devices of the same power. When butt mounting devices with different drive power you should arrange the devices according to their power (e.g., viewed from the left, size C4-size C3-size C2). This minimizes the thermal influence among each other.

When butt mounting Single-Axis Compacts together with other devices, you must make sure that these device do not affect one another thermally.

Single-Axis Compact	Size C2	Size C3	Size C4
	G394-030 G394-020	G394-059 G394-035	G394-080 G394-065
E	for direct butt mounting (see note)		
F ²⁾	≥100 (3.94)	≥150 (5.90)	
G ²⁾	≥235 (9.25)		≥280 (11.02)

All dimensions in mm (in)
2) The bend radius of the connecting cables must be taken into account

Table 2.3 Single-Axis Compact Mounting clearances

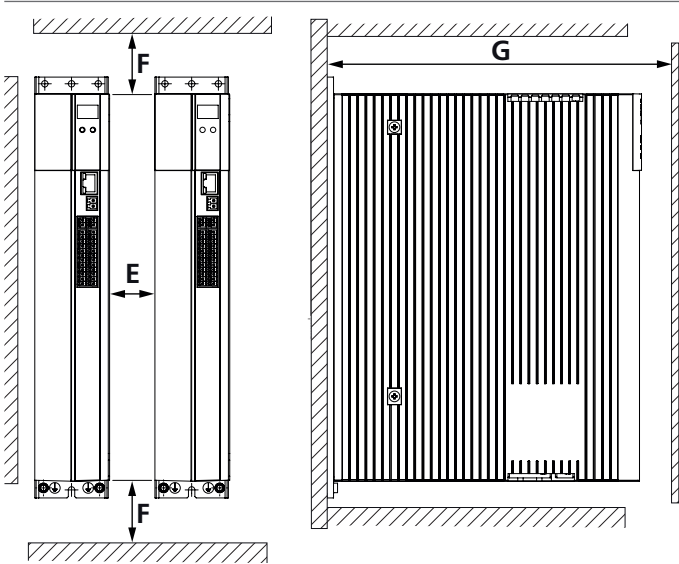


Fig. 2.2 Mounting clearances (in mm)

3 Installation

3.1 Notes for installation



ATTENTION! Qualified personnel:

Installation must only be carried out by electrical engineering experts who have been specially instructed in the necessary accident prevention measures.

During installation work:

- Strictly avoid that ...
- screws, cable rests or foreign bodies drop into the device
- moisture enters into the device



DANGER CAUSED BY HIGH VOLTAGE!

Danger to life!

- Never wire or disconnect electrical connections while they are live. Isolate the device from the mains supply (230/400/460/480 V AC) before working on it. Even 10 minutes after switching off the mains supply dangerously high voltages of ≥ 50 V may still be present (capacitor charge). Work on the device must only be carried out, after the DC link voltage has dropped below a residual voltage of 50 V (indicated by monitoring LED H1 and to be measured on terminals X1/L- and L+).
- Dangerous voltage may be applied to the device, even if the device does not emit any visual or audible signals/indications (e.g. with mains voltage applied to terminal X3 and missing control supply +24 V on X2)!

The following general guidelines apply for the installation of single axis controllers:

- *Compliance with the EMC product standard*
 - Commissioning (i.e. starting intended operation) is only permitted when strictly complying with EMC product standard IEC/EN 61800-3. The installer/ operator of a machine and/or item of plant must provide proof of compliance with the protection targets stipulated in the standard.

- *Cabel type*
 - Use only shielded mains, motor and signal lines with double copper braiding that is overlapping by 60 to 70 %.
- *Routing of cables*
 - Route mains, motor and signal cables separated from one another. If possible, keep a distance of at least 0.2 m (0.66 ft), otherwise use separators. They should not run in parallel. If crossovers are unavoidable, they should wherever possible be configured perpendicular (at a 90° angle).
 - Always route the motor cable without interruptions and the shortest way out of the control cabinet. When using a motor contactor for example, the component should be directly mounted to the servo drive and the shielding of the motor cable should not be stripped off too soon.
 - If possible enter signal lines only from one side into the control cabinet.
 - Lines of the same electric circuit must be twisted.
 - Avoid unnecessary cable lengths and loops.
- *Grounding measures*
 - Grounding measures of relevance for the servo drive are described in section "3.5 Connection PE conductor"
- *Shielding measures*
 - Do not strip the cable shields too soon, and lay them across wide areas both on the component and on the backing plate or on the PE rail (main ground) of the backing plate.
- *External components*
 - Place larger consumers near the supply.
 - Contactors, relays, solenoid valves (switched inductivities) must be wired with fuses. The wiring must be directly connected to the respective coil.
 - Any switched inductance should be at least 0.2 m (0.66 ft) away from the process controlled assemblies.
- Additional information can be found in the corresponding connection description. If you require further detailed information on installation you should consult the Moog Helpline (see „Helpline/Support & Service“ on page 54)

3.2 Layout

The following shows the layout with the corresponding positions of plugs and terminals. For better orientation we have identified the designations of plugs and terminals with an abbreviation.

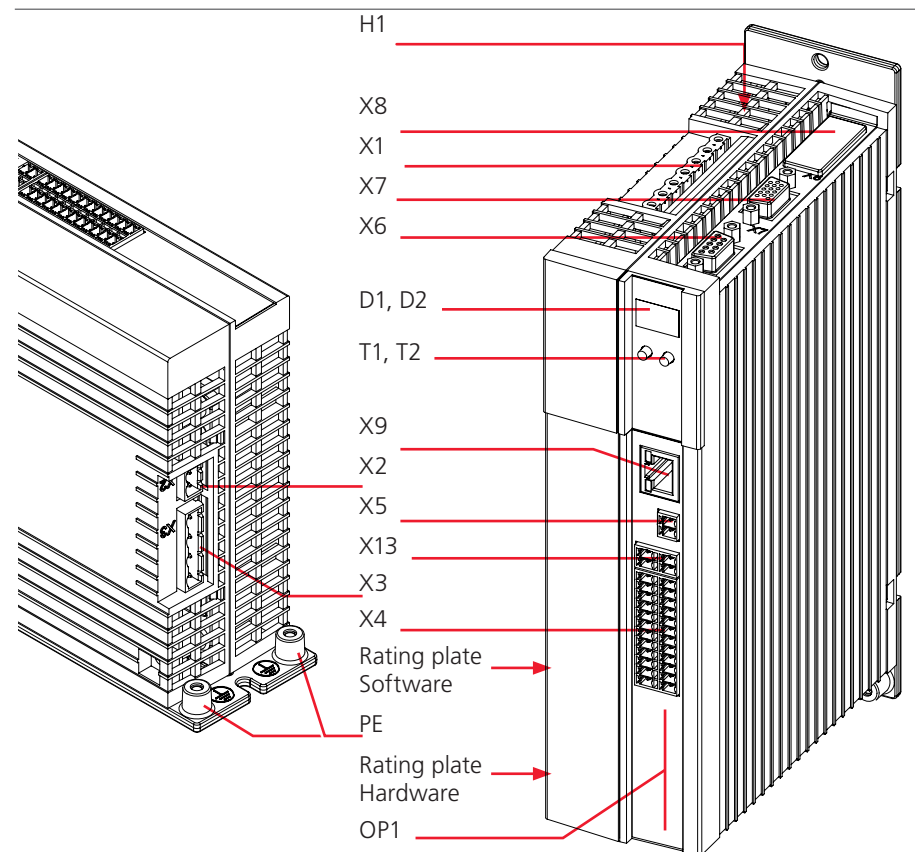


Fig. 3.1 Layout Single-Axis Compact size C2 to C4

Number	Designation
D1, D2	7-segment display
H1	DC link voltage indicator LED (only size C2 to C4)
OP1	Installation space for option 1 (Communication)
T1, T2	Button
X1	Power connections (only size C2 to C4)
X2	Connection control supply U_v
X3	Connection AC power supply
PE (bottom)	Device protective earth conductor connection
X4	Terminals
X5	Motor temperature monitoring
X6	Connection resolver
X7	Connection high-resolution encoder
X8	Option 2 (Technology)
X9	Ethernet interface
X13	Connection motor brake

Table 3.1 Key to layout Single-Axis Compact size C2 to C4

3.3 Connection diagram size C2 to C4

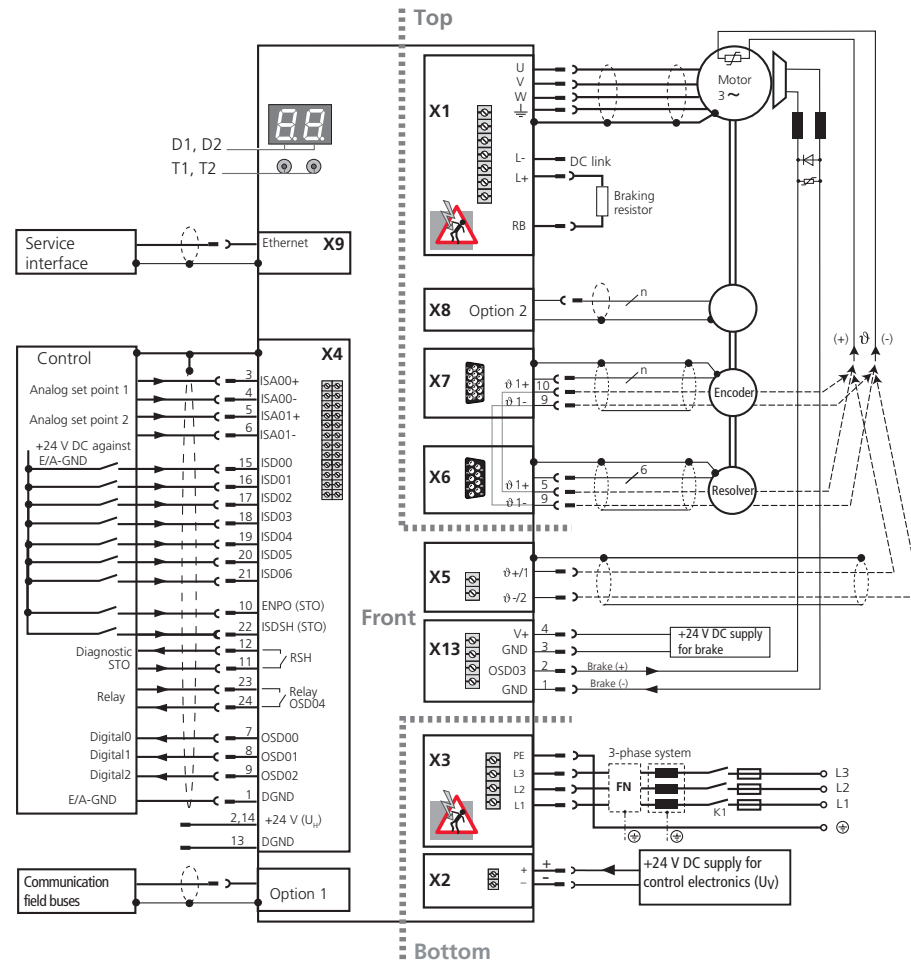


Fig. 3.2 Connection diagram size C2 to C4

Number	Designation	Details
D1, D2	7-segment display	page 48
T1, T2	Button	page 47
X1	Connection for motor, braking resistor and measurement of DC link voltage	page 34
X2	Connection Control supply	page 25
X3	Connection AC power supply	page 27
X4	Terminals	page 28
X5	Connection motor temperature monitoring ¹⁾	page 34
X6	Connection resolver ¹⁾	page 33
X7	Connection high-resolution encoder ¹⁾	page 33
Option 1	Communication	page 31
PE	PE connection	page 23
X8 (Option 2)	Technology	page 31
X9	Ethernet interface	page 30
X13	Connection motor brake	page 30
1)	Screen connections via separate shield plates	page 20
	Connection PE conductor housing	page 20

¹⁾ NOTE: The temperature sensor of the motor winding can be optionally connected via the encoder cables (X6 or X7) or to terminal X5.

Table 3.2 Key to connection diagram size C2 to C4

3.4 Effective EMC installation

3.4.1 Interference immunity of servo drives



ATTENTION!

This is a restricted availability product in accordance with IEC/EN 61800-3. This product may cause radio interference in domestic environments; in such cases the operator may need to take appropriate countermeasures.

External radio frequency interference suppression filters (CB09937-001 to CB09940-001, CB09942-001) are available for the servo drives. With the measurement method specified and the external mains filter, these servo drives conform to the EMC product standard IEC/EN 61800-3 "First environment" (residential size C2) and "Second environment" (industrial C3).

3.4.2 Specimen setup

The specimen setup presented on the following pages is intended to illustrate the key measures necessary to ensure EMC-compatible setup.



NOTE:

The specimen setup merely presents a recommendation, and does not automatically guarantee compliance with applicable EMC directives. The installer/ operator of a machine and/or item of plant must provide proof of compliance with the protection targets stipulated in the standard.

Overview

Fig. Fig. 3.3 presents an overview of the minimum components required:

- A. Backing plate with cable ducts
- B. Single-Axis Compact
- C. Mains filter
- D. Mains choke
- E. Distributor rail for AC power supply and control supply (+24 V DC)

The layout and cabling are based on the instruction set out in section 3.1 „Notes for installation" on page 17. The numbered red arrows refer to four very important detailed notices presented on the following pages.

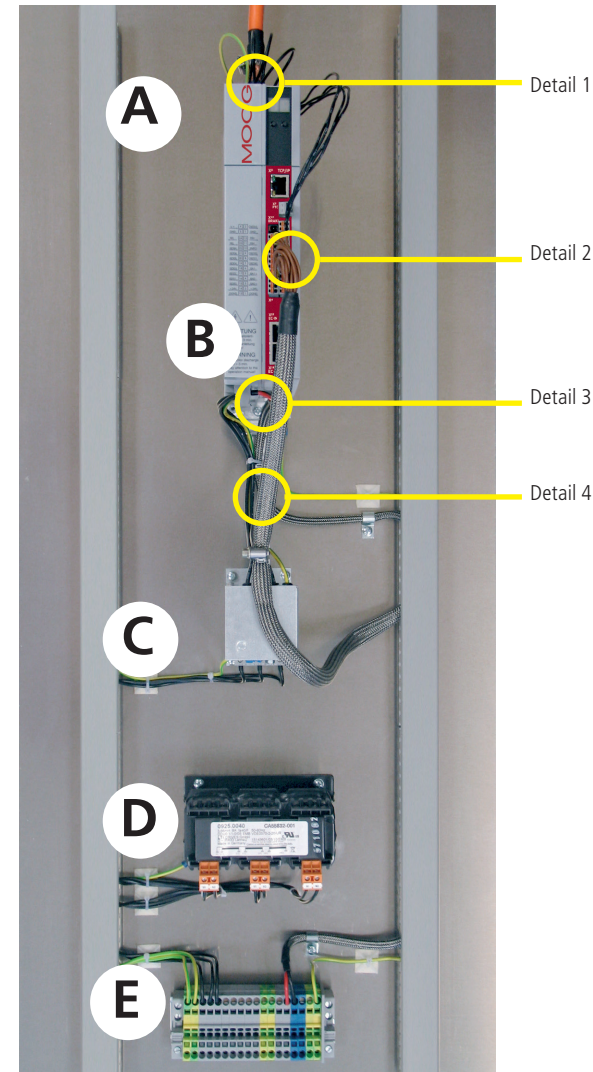


Fig. 3.3 Specimen setup - Overview

Detail 1: Motor cable

Make sure that on devices size C2 to C4 the motor connection is connected to terminal (X1):

- Fasten the shield connection plate supplied (shield plate for size C2 to C4 see Fig. 3.4), to the top of the device. Ensure the plate contacts across a wide area with the heat sink of the Single-Axis Compact and with the backing plate. Use a toothed ring.

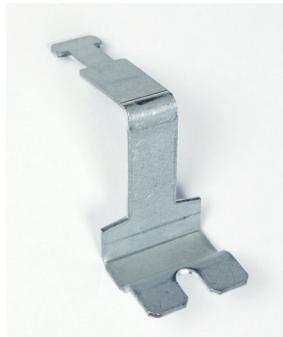


Fig. 3.4 Shield plate size C2 to C4

- Strip the shielding of the motor cable back only as short as absolutely necessary.
- Connect the motor cable shield across a wide area to the shield connection plate by the clamp supplied.



NOTE:

Ready made-up motor cables are available for Moog Servo Motors. For details refer to the MSD Ordering Catalog or to the Servo Motors Ordering Catalog.

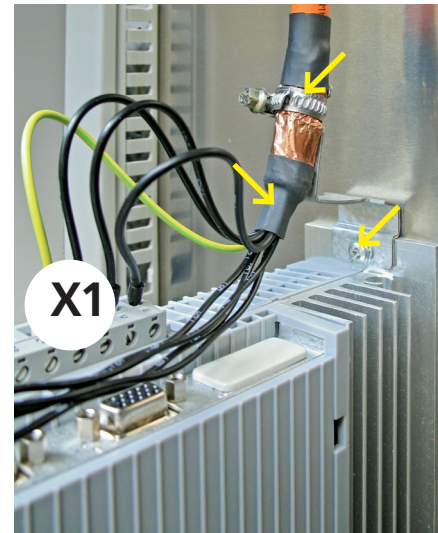


Fig. 3.5 Detail 1: Motor cable size C2 to C4

Detail 2: Control supply (+24 V DC)

At the connection for the control voltage (X2) pay attention to:

- Secure the second of the two supplied shield connection plates by the screw to the mount on the bottom of the unit. Ensure the plate contacts across a wide area with the heat sink of the Single-Axis Compact and with the backing plate. Use a toothed ring.
- Slot a shield tube over the control supply cable and strip it back only as short as necessary before the control supply connection (X2).
- Connect the shielding tube of the control supply cable across a wide area to the shield connection plate by the clamp supplied.

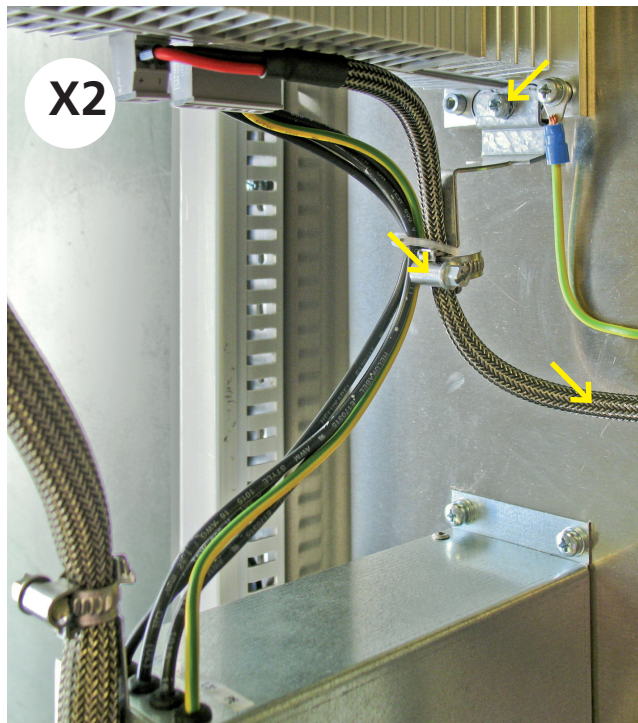


Fig. 3.6 Specimen setup - Detail 2: Control supply

Detail 3: Mains filter and mains connection

At the output of the mains filter and the AC mains connection (X3):

- Connect the wire strands at the output of the mains filter directly to the AC mains (X3) of the Single-Axis Compact. The strands must **not** be extended, so the mains filter should be installed correspondingly close to the Single-Axis Compact. But be sure to maintain the necessary minimum clearance (see Table 2.1 on page 13).
- Fix the strands to the shield connection plate using a cable tie as necessary.
- The leakage current of the Single-Axis Compact is >3.5 mA. So:
 - Connect the protective earth conductor from the output of the mains filter to the connection (X3) of the Single-Axis Compact size C2 to C4 **and**
 - one of the PE connections on the heat sink of the Single-Axis Compact using a cable of at least the same cross-section to the main ground of the distributor rail.

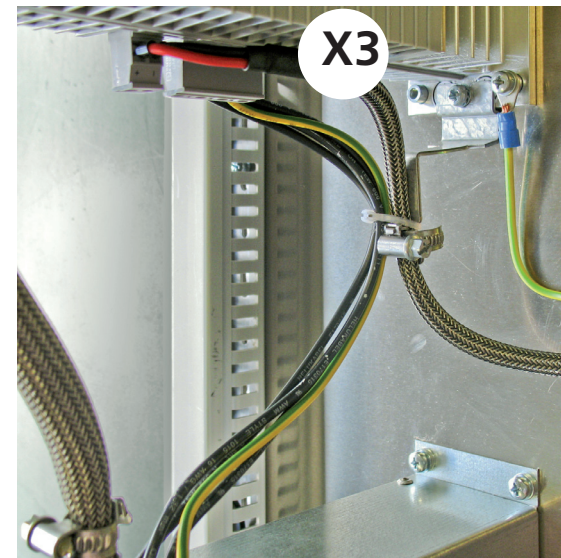


Fig. 3.7 Specimen setup - Detail 3: Mains filter and mains connection

Detail 4: Control cables

At the control terminals (X4) of the Single-Axis Compact:

- Strip the shielding of the control cables back only as short as absolutely necessary.
- Connect the control cable shields across a wide area to the shield connection tab of the mains filter by the clamp supplied. If this is not possible, lay the control cable shielding directly across a wide area on the backing plate directly adjacent to the Single-Axis Compact.

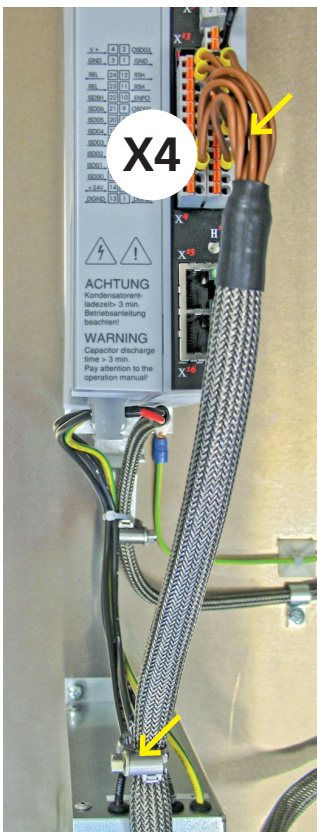


Fig. 3.8 Specimen setup - Detail 4: Control cables

3.5 Connection PE conductor

Step	Action	PE mains connection to DIN IEC/EN 61800-5-1
1.	Ground each of the servo drives! Connect terminal in $\oplus$ star configuration and amply dimensioned with the PE bar (main ground) in the control cabinet.	Rules for the PE terminal (as leakage current > 3.5 mA): Use protective conductors with the same cross-section as the mains power cables, though at least 10 mm² (0.02 in²) . Also comply with local and national regulations and conditions.
2.	Also connect the PE-conductor terminals of all other components, such as mains choke, filter, etc. in a star configuration and amply dimensioned with the PE bar (main ground) in the control cabinet.	

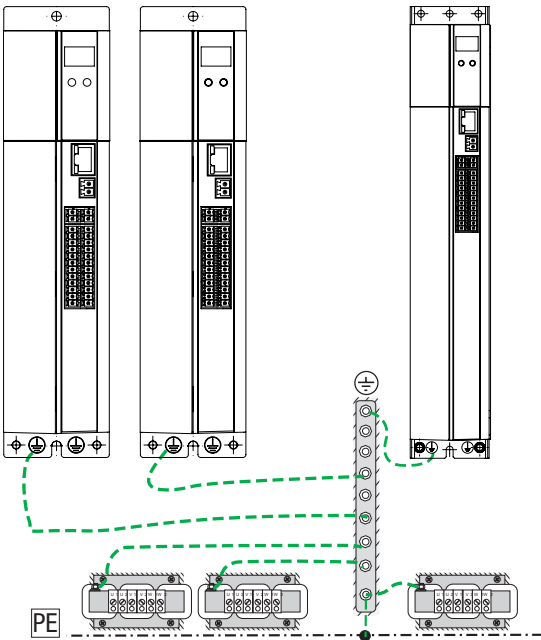


Fig. 3.9 Star configuration layout for the PE conductor

3.6 Electrical isolation concept

The control electronics, with its logic (μP), the encoder terminals and the inputs and outputs, are electrically isolated from the power section (power supply/DC-link). All control terminals are designed as safety extra-low voltage/protective extra-low voltage (SELV/PELV) circuits and must only be operated with such SELV/PELV voltages, as per the relevant specification. This provides reliable protection against electric shock on the control side.

A separate control supply, compliant with the requirements of a SELV/PELV, is therefore needed.

The opposite overview shows the potential supplies for the individual terminals in detail.

This concept also delivers higher operational safety and reliability of the servo drive.

SELV = Safety Extra Low Voltage
PELV = Protective Extra Low Voltage

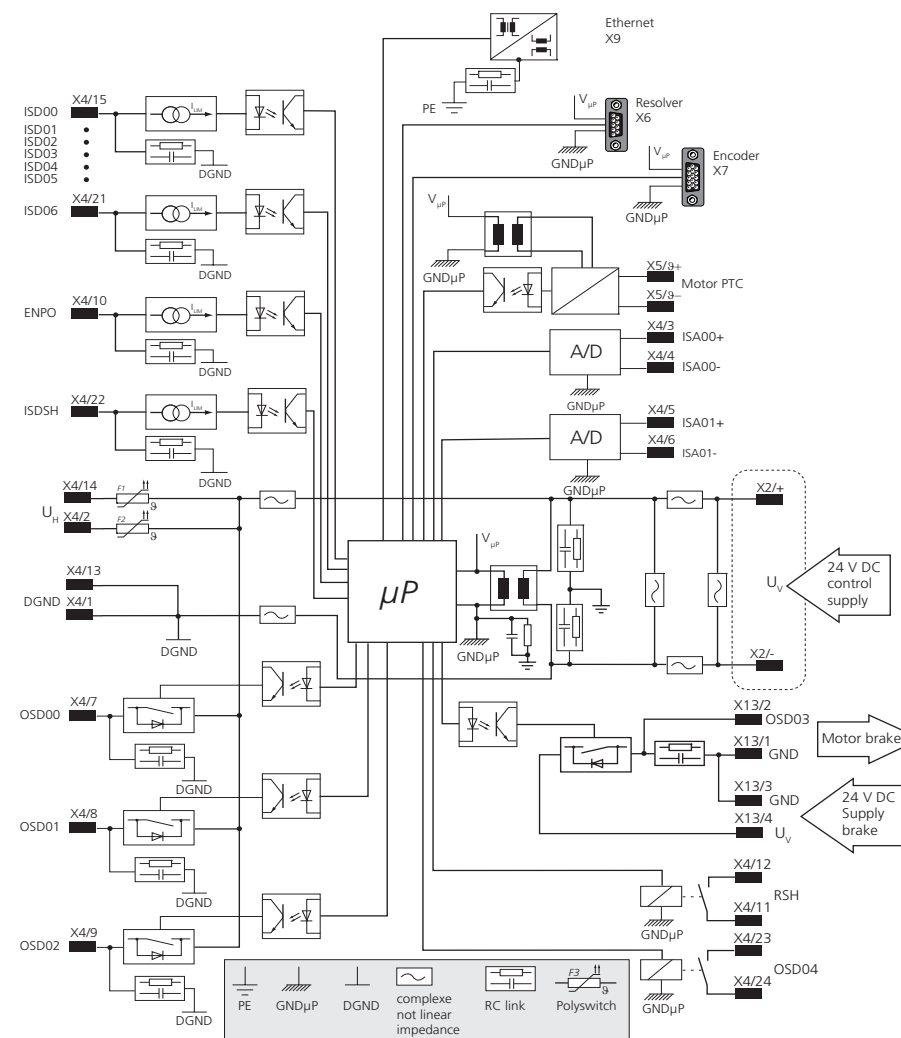


Fig. 3.10 Electrical isolation concept Single-Axis Compact

3.7 Connection of supply voltage

The voltage supply to the Single-Axis Compact is separate for the control and power sections. The control supply should always be connected **first**, so that the device can be parameterized with Moog DRIVEADMINISTRATOR 5 and, above all, set to the correct power supply.



ATTENTION!

Only when the mains voltage has been set and the Single-Axis Compact restarted (if the mains voltage or switching frequency has been changed) may the mains power supply be activated. Otherwise the device may be destroyed!

3.7.1 Connection of control supply (+24 V DC)

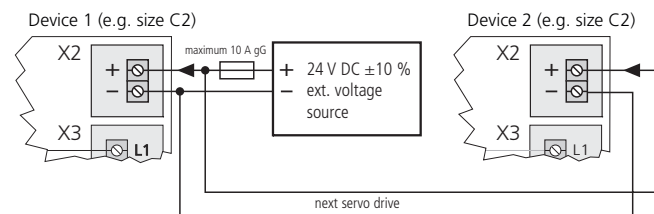


Fig. 3.11 Connection of control supply Single-Axis Compact

Control supply (Specification)

Control supply	X2/+ X2/-	• $U_v = +24 \text{ V DC } \pm 10 \%$, stabilized and filtered. • $I_v = 2 \text{ A}$ (size C2 to C4) • Internal polarity reversal protection • The power supply unit used must have a safe and reliable isolation against the mains system acc. to EN 50178 or IEC/EN 61800-5-1
----------------	--------------	---

Table 3.3 Specification of control supply Single-Axis Compact



ATTENTION!

Suitable measures must generally be applied to provide adequate line protection.



DANGER FROM ELECTRICAL TENSION!

When the mains voltage is switched on at terminal X3 and there is no control supply (+24 V DC at X2), dangerous voltage is connected to the device with no visual signal on the display or acoustic indication by fan noise. If visible in the installed state, LED H1 (see Fig. 3.1) indicates whether voltage is connected to the device. Even when H1 is out, X1 must be checked to ensure no voltage is connected.



NOTE:

The start-up current for the supply voltage to the size C2 to C4 may be two to three times the operating current.

3.7.2 Connection Mains supply

Procedure:

Step	Action	Comment
 1.	Specify the cable cross-section dependent on the maximum current and ambient temperature.	Cable cross-section according to local regulations and conditions.
 2.	Wire the servo drive with the mains filter ¹⁾ , maximum cable length 0.3 m (1.0 ft) (with non-shielded cable)!	
 3.	Wire the mains choke ¹⁾ (if installed)	Reduces the voltage distortions (THD) in the system and prolongs the life of the servo drive.
 4.	Install a K1 circuit breaker (power circuit breaker, contactor, etc.).	Do not switch on the power!
 5.	Use mains fuses (duty class gG) to isolate all poles of the servo drive from the mains supply.	For compliance with equipment safety requirements laid down in IEC/EN 61800-5-1

¹⁾ optional



DANGER FROM ELECTRICAL TENSION!

Danger to life! Never wire or disconnect electrical connections while these are live. Always disconnect the power before working on the device. Dangerously high voltages of ≥ 50 V may still be present 10 minutes after the power is cut (capacitor charging). So always check that the power has been cut.



ATTENTION!

If local regulations require the installation of a residual current operated protective device, the following applies:
In case of a fault the servo drive is able to generate d.c. leak currents without zero crossing. Servo drives therefore must only be operated with (RCDs) ¹⁾ type B for a.c. fault currents, pulsating or smooth d.c. fault currents, which are suitable for servo drive operation, see IEC 60755. RCMs ²⁾ can additionally be used for monitoring purposes.

¹⁾ engl.: residual current protective device

²⁾ engl.: residual current monitor

Note the following points:

- Switching the mains power:
 - In case of too frequent switching the device protects itself by high-resistance isolation from the system. After a rest phase of a few minutes the device is ready to start once again.
- TN and TT network: Operation is permitted if:
 - in the case of single-phase devices for 1 x 230 V AC the supply system conforms to the maximum overvoltage category III as per IEC/EN 61800-5-1.
 - in the case of three-phase devices with external conductor voltages 3 x 230 V AC, 3 x 400 V AC, 3 x 460 V AC and 3 x 480 V AC
- 1. **the neutral point** of the the supply system is **grounded** and
- 2. the supply system conforms to the maximum overvoltage category III as per IEC/EN 61800-5-1 at a system voltage (external conductor → neutral point) of maximum 277 V.
- IT network: **not** permitted!
 - In case of an ground fault the electrical stress is approx. twice as high. Clearances and creepages to IEC/EN 61800-5-1 are no longer maintained.
- Connection of the servo drives by way of a mains choke is mandatory:
 - where the servo drive is used in applications with disturbance variables corresponding to environment class 3, as per IEC/EN 61000-2-4 and above (hostile industrial environment)
 - in the case of single-phase mains supply
 - for compliance with IEC/EN 61800-3

- For further information on permissible current loads, technical data and ambient conditions please refer to the appendix.



NOTE:

Please be aware that the Single-Axis Compact is not rated for environment class 3. Further measures are essential in order for that environment class to be attained! For further information please consult your project engineer.

Drive	Device rated power ¹⁾ [kVA]		Maximum cable cross-section ²⁾ of the terminal [mm ²]		Specified mains fuse, duty class gG [A]
	with mains choke (4% u_k)	without mains choke	Ferr. with insul. ³⁾	Ferr. w/o insul. ³⁾	
G394-030	1.3	1.6	2.5	2.5	1 x 16 maximum (1-phase) 3 x 16 maximum (3-phase)
G394-020	1.5	1.9			3 x 6 max
G394-059	2.6	3.2	2.5	2.5	1 x 16 maximum (1-phase) 3 x 16 maximum (3-phase)
G394-035	2.7	3.3			3 x 10 maximum
G394-080	3.5	4.3	4	4	1 x 20 maximum (1-phase) 3 x 20 maximum (3-phase)
G394-065	5.0	6.1			3 x 16 maximum

1) At 3 x 230 V AC or 3 x 400 V AC mains voltage and $FT \geq 8$ kHz

2) The minimum cross-section of the mains power cable depends on the local regulations and conditions, as well as on the rated current of the servo drive.

3) Ferr. with insul. = Ferrule with plastic insulation, Ferr. w/o insul. = Ferrule without plastic insulation

4) = Device protection

Table 3.4 Connected load and mains fuse

Mains supply size C2 and C3



NOTE:

Before commissioning, the value of the connected mains voltage must be set on the servo drive (factory setting = 3 x 230 V AC / 3 x 400 V AC).

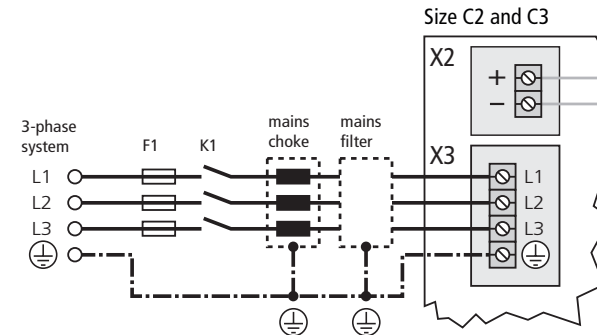


Fig. 3.12 Connection size C2 and C3 mains supply 3 x 230 V (G394-xxx) or 3 x 400 V (G394-xxx) depending on device design

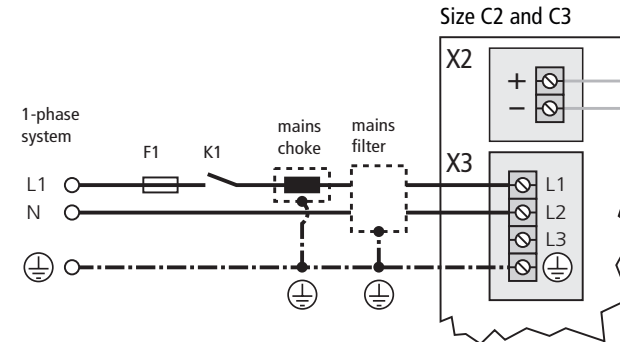


Fig. 3.13 Connection size C2 and C3 mains supply 1 x 230 V (G394-XXX)

Mains supply size C4



NOTE:

Before commissioning, the value of the connected mains voltage must be set on the servo drive (factory setting = 3 x 230 V AC / 3 x 400 V AC).

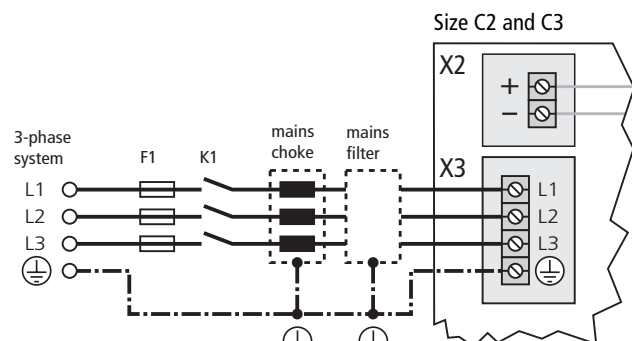


Fig. 3.14 Connection size C4 mains supply 3 x 230 V (G394-xxx) or 3 x 400 V (G394-xxx) depending on device design

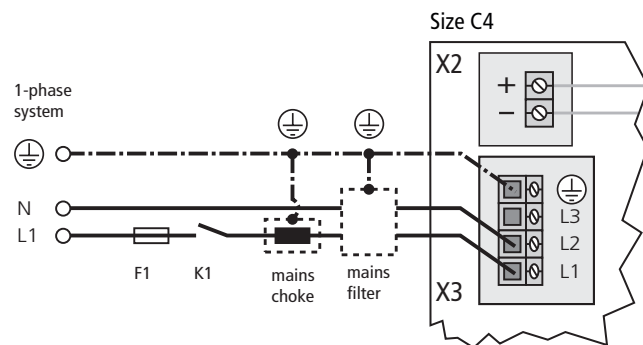


Fig. 3.15 Connection size C4 mains supply 1 x 230 V (G394-XXX)

3.8 Control connections

Step	Action	Comment
1.	Check whether a complete device setup is already available, i.e. whether the drive has already been configured.	
2.	If this is the case, a special control terminal assignment applies. Please contact your project engineer to obtain the connecting assignment!	
3.	Choose a connecting assignment.	Initial commissioning
4.	Wire the control terminals with shielded cables. The following is strictly required: STO request X4/22, ENPO X4/10 and a start signal (with control via terminal).	Ground the cable shields over a wide area at both ends. Conductor sizes fixed: 0.2 to 1.5 mm ² (0.0003 to 0.0023 in ²) Flexible conductor sizes: - Ferrule without plastic sleeve: 0.2 to 1.5 mm ² (0.0003 to 0.0023 in ²) - Ferrule with plastic sleeve: 0.2 to 0.75 mm ² (0.0003 to 0.0012 in ²)
5.	Keep all contacts open(inputs inactive).	
6.	Check all connections again!	Continue with commissioning in section 4.

Note the following points:

- Always wire the control terminals with shielded cables.
- Lay the control cables separately from the mains power and motor cables.
- A cable type with double copper braiding, with 60 - 70 % coverage, must be used for all shielded connections.

3.8.1 Specification of control connections

Des.	Term.	Specification of	Electrical isolation
Analog inputs			
ISA0+ ISA0- ISA1+ ISA1-	X4/3 X4/4 X4/5 X4/6	• $U_{IN} = \pm 10$ V DC • Resolution 12 bit; R_{IN} approx. 101 kΩ • Terminal scan cycle in "IP mode" = 125 μs, otherwise = 1 ms • Tolerance: $U \pm 1$ % of the measuring range end value	no
Digital inputs			
ISD00 ISD01 ISD02 ISD03 ISD04	X4/15 X4/16 X4/17 X4/18 X4/19	• Frequency range <500 Hz • Terminal scan cycle in = 1 ms • Switching level Low/High: ≤ 4.8 V / ≥ 18 V • $U_{IN\ max} = +24$ V DC +20 % • I_{IN} at +24 V DC = typ. 3 mA	yes
ISD05 ISD06	X4/20 X4/21	• Frequency range ≤ 500 kHz • Switching level Low/High: ≤ 4.8 V / ≥ 18 V • $U_{IN\ max} = +24$ V DC +20 % • $I_{IN\ max}$ at +24 V DC = 10 mA, R_{IN} approx. 3 kΩ • internal signal delay time < 2 μs suitable as trigger input for quick saving of actual position	yes
ENPO	X4/10	• Disable restart inhibit (STO) and enable power stage = High level • OSSD-capable • Reaction time approx. 10 ms • Switching level Low/High: ≤ 4.8 V / ≥ 18 V • $U_{IN\ max} = +24$ V DC +20 % • I_{IN} at +24 V DC = typ. 3 mA	yes
Digital outputs			
OSD00 OSD01 OSD02	X4/7 X4/8 X4/9	• No destruction in case of short-circuit (+24 V DC -> DGND), but device may briefly shut down. • $I_{max} = 50$ mA, PLC-compatible • Terminal scan cycle in = 1 ms • High-side driver	yes

X4



Table 3.5 Specification of control connections X4

Des.	Term.	Specification of	Electrical isolation
STO "Safe Torque Off"			
ISDSH (STO)	X4/22	"Request STO" input = Low level - OSSD-capable - Switching level Low/High: $\leq 4.8 \text{ V} / \geq 18 \text{ V}$ $U_{IN \max} = +24 \text{ V DC} + 20 \%$ I_{IN} at $+24 \text{ V DC} = \text{typ. } 3 \text{ mA}$	yes
RSH RSH	X4/11 X4/12	Diagnostics STO, both tripping channels active, one NO contact with automatically resetting circuit-breaker (polyswitch) $25 \text{ V} / 200 \text{ mA AC}, \cos \varphi = 1$ $30 \text{ V} / 200 \text{ mA DC}, \cos \varphi = 1$	yes
Relay outputs			
REL	X4/23 X4/24	Relay, 1 NO contact $25 \text{ V} / 1.0 \text{ A AC}, \cos \varphi = 1 \text{ (AC1)}$ $30 \text{ V} / 1.0 \text{ A DC}, \cos \varphi = 1 \text{ (DC1)}$ - Switching delay approx. 10 ms - Cycle time 1 ms	yes
Auxiliary voltage			
+24 V	X4/2 X4/14	- Auxiliary voltage output (U_H) to feed the digital control inputs $U_H = U_V - \Delta U$ (ΔU typically approx. 1.2 V), no destruction in case of short circuit ($+24 \text{ V DC} \rightarrow \text{DGND}$), but device may briefly shut down. $I_{\max} = 80 \text{ mA}$ (per pin) with self-resetting circuit breaker (polyswitch)	yes
Digital ground			
DGND	X4/1 X4/13	Reference ground for +24 V DC	yes

Table 3.5 Specification of control connections X4

3.8.2 Connection of motor brake X13

Connector X13 is intended for connection of a motor brake.

Des.	Term.	Connection	Specification
OSD03 GND	X13/2 X13/1		- Short-circuit proof - External control supply +24 V DC ($I_{IN} = 2.1 \text{ A}$) required via X13/3 (GND) and X13/4 (V+) $U_{BR} = U_V - \Delta U$ (ΔU typically approx. 1.4 V) - To actuate a motor holding brake up to $I_{BR} = 2.0 \text{ A}$ maximum (for brakes with higher current requirements a relay must be interposed). - Overcurrent causes cyclic shutdown - Also usable as configurable digital output - Interruptible cable break monitor $< 200 \text{ mA}$ typically in condition "1"
GND V+	X13/3 X13/4		

Table 3.6 Specification of the terminal connections X13

3.9 Specification of Ethernet interface

The service and diagnostic interface X9 is executed as a TCP/IP Ethernet port. It is suitable for connection of a PC for commissioning, service and diagnostics and for programming of the servo drive.

The following software can communicate via the Ethernet port with the servo drive:

- Moog DRIVEADMINISTRATOR 5 for commissioning, service and diagnostics of the Single-Axis Compacts
- CoDeSys 3.x programming system for programming of the Single-Axis Compact in the languages of IEC/EN 61131-3. This requires a servo drive licence.

Specification of interface:

- Transfer rate 10/100 Mbits/s BASE
- Line protocol IEEE802.3 compliant
- Connection via standard commercially available crosslink cable, CAT 5

3.10 Option 1

Depending on the MSD variant, Option 1 is factory-configured with various options. Field bus options such as EtherCAT or SERCOS are available.

You will find all available options in the MSD Ordering Catalog. The user manuals for the respective options provide detailed information on commissioning.

3.11 Option 2

Option 2 can be fault-configured with various technology options. Additional or special encoders can be evaluated with it for example.

You will find all available options in the MSD Ordering Catalog. The user manuals for the respective options provide detailed information on commissioning.

3.12 Encoder connection

All encoder connections are located on the top of the unit.

Encoder connection of the synchronous motors

Please use the ready made-up motor and encoder cables from Moog to connect the synchronous motors (see Servo Motors Ordering Catalog).

Matching motor - encoder cable - servo drive connection

Compare the rating plates of the components. Make absolutely sure to use the correct components according to variant A, B or C!

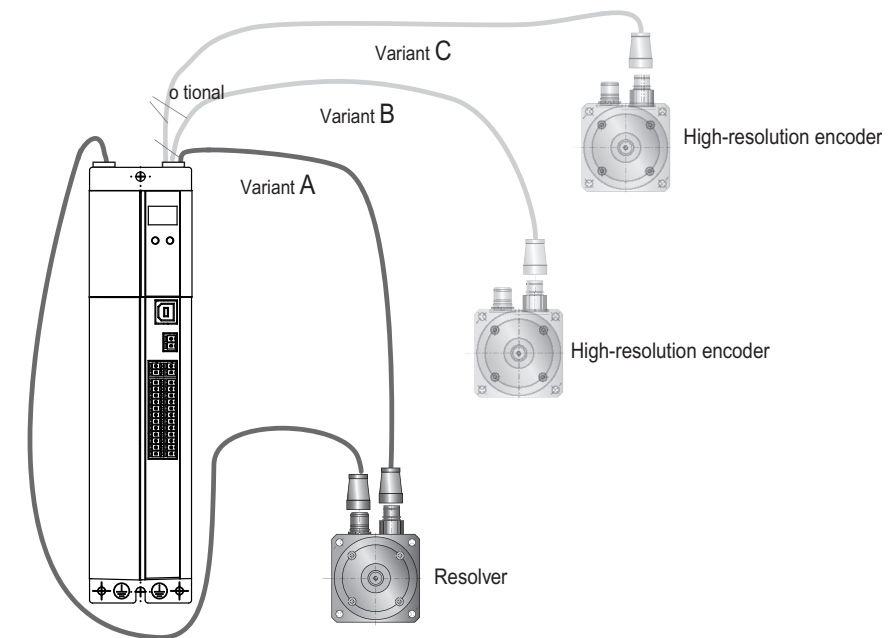


Fig. 3.16 Matching motor/encoder cable



NOTE:

Do not split the encoder cable, for example to route the signals via terminals in the switch cabinet. The knurled screws on the D-Sub connector housing must be tightly locked!

	Motor (with installed encoder)	Encoder cable	Connection for the servo drive
Variant A	with with resolver without further options	C08335-013-yyy	X6
Variant B	Sin/Cos single-/multi-turn encoder with SSI/EnDat-interface	CA58876-002-yyy	X7
Variant C	Sin/Cos single-/multi-turn encoder with HIPERFACE®-interface	CA58877-002-yyy	X7

Table 3.7 Variants of motors, encoder type and encoder cable

3.12.1 Ready made-up encoder cables

The specifications can only be assured when using the Moog system cables.

	Encoder cable	C08335	-	013	-	yyy ¹⁾
	Ready made-up cable					
	Resolver cable					
	Encoder cable SSI, EnDat	CA58876			002	
	Encoder cable Hiperface®	CA58877			002	
Encoder system						
Version						
Cable length (m)						

1) yyy stands for length in meters; Standard length: 1 m (3.28 ft), 5 m (16.40 ft), 10 m (32.80 ft), 15 m (49 ft), 20 m (65 ft), 50 m (164 ft). Further lengths on request

Encoder cable C08335-011-yyy¹⁾

Order code


Technical data

	C08335-013-yyy ¹⁾	CA58876-002-yyy ¹⁾	CA58877-002-yyy ¹⁾
Encoder system	Resolver	G3, G5, G12.x (Single-/multi-turn with SSI-/EnDat-interface)	G6, G6.x (Single-/multi-turn with HIPERFACE®-interface)
Controller-end assignment (sub-D connector)	1 = S2 2 = S4 3 = S1 4 = n.c. 5 = PTC+ 6 = R1 7 = R2 8 = S3 9 = PTC-	1 = A- 2 = A+ 3 = VCC (+5 V) 4 = DATA+ 5 = DATA- 6 = B- 8 = GND 11 = B+ 12 = VCC (Sense) 13 = GND (Sense) 14 = CLK+ 15 = CLK- 7, 9, 10 = n.c.	1 = REFCOS 2 = +COS 3 = Us 7 – 12 V 4 = Data+ EIA485 5 = Data- EIA485 6 = REFSIN 7 = Jumper to pin 12 8 = GND 11 = +SIN 12 = Jumper to pin 7 9, 10, 13, 14, 15 = n.c.
Capable for energy chains	Yes		
Minimum bend radius	90 mm (3.54 in)	100 mm (3.93 in)	90 mm (3.54 in)
Temperature range	-40 ... +85 °C (-40 to +185 °F)	-35 ... +80 °C (-31 to +176 °F)	-40 to 85 °C (-40 to +185 °F)
Cable diameter approx.	8.8 mm (0.34 in)		
Material of outer sheat	PUR		
Resistant to	oil, hydrolysis and microbic attack (VDE0472)		
Approvals	UL-Style 20233, 80 °C - 300 V, CSA-C22.2N.210-M90, 75 °C - 300 V FT1		

Table 3.8 Technical data encoder cable

3.12.2 Resolver connection X6

A resolver is connected to slot X6 (9-pin D-Sub socket).

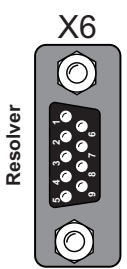Fig.	X6/Pin	Function
	1	Sin+ / (S2) analog differential input track A
	2	Refsin / (S4) analog differential input track A
	3	Cos+ / (S1) analog differential input track B
	4	Supply voltage 5 ... 12 V, internally connected to X7/3
	5	Θ+ (PTC, KTY, Klixon) internally connected to X7/10 ¹⁾
	6	Ref+ analog excitation
	7	Ref- analog excitation (ground reference point to pin 6 and pin 4)
	8	Refcos / (S3) analog differential input B
	9	Θ- (PTC, KTY, Klixon) internally connected to X7/9 ¹⁾

1) Be sure to pay attention to the notice headed "ATTENTION" in !

Table 3.9 Pin assignment X6 resolver connection

3.12.3 Connection for high-resolution encoder

The interface X7 enables evaluation of the following encoder types.

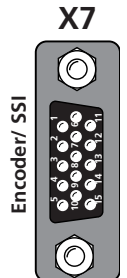
Fig.	Function
	Sin/Cos encoder with zero pulse e.g. Heidenhain ERN1381, ROD486
	Heidenhain Sin/Cos encoder with EnDat interface e.g. 13 bit single-turn encoder(ECN1313.EnDat01) and 25 bit multi-turn encoder (EQN1325-EnDat01)
	Heidenhain encoder with digital EnDat interface Single- or multi-turn encoder
	Sin/Cos encoder with SSI interface e.g. 13 bit single-turn and 25 bit multi-turn encoder (ECN413-SSI, EQN425-SSI)
	Sick-Stegmann Sin/Cos encoder with HIPERFACE® interface Single-/multi-turn encoder, e.g SRS50, SRM50

Table 3.10 Suitable encoder types on X7



NOTES:

- The usage of encoders not included in the range supplied by Moog requires special approval by Moog.
- The maximum signal input frequency is 500 kHz.
- Encoders with a power supply of 5 V ± 5 % must have a separate sensor cable connection. The encoder cable detects the actual supply voltage at the encoder, thereby compensating for the voltage drop on the cable. Only use of the sensor cable ensures that the encoder is supplied with the correct voltage. The sensor cable must always be connected.

Select the cable type specified by the motor or encoder manufacturer. During this process bear in mind the following:

- Always used shielded cables. Apply the shield on both sides.
- Connect the differential track signals A/B, R or CLK, DATA to each other via twisted wires.
- Do not split the encoder cable , for example to route the signals via terminals in the switch cabinet.

X7 Pin	Sin/Cos and TTL	Sin/Cos Absolute encoder SSI/EnDat	Absolute encoder EnDat (digital)	Absolute encoder HIPERFACE®	
1	A-	A-	-	REFCOS	
2	A+	A+	-	+COS	
3	+5 V DC ±5 %, IOUT maximum = 250 mA (150 mA for hardware versions 0..1), monitoring via sensor cable			7 to 12 V (typ. 11 V) maximum 100 mA	The sum of the currents tapped at X7/3 and X6/4 must not exceed the specified value!
4	R+	Data +	Data +	Data +	
5	R-	Data -	Data -	Data -	
6	B-	B-	-	REFSIN	
7	-	-	-	U _s - Switch	 After connecting pin 7 to pin 12, a voltage of 11.8 V is set at X7/3 and X6/4!
8	GND	GND	GND	GND	
9	9- (PTC, KTY, Klixon) internally connected to X6/9 ¹⁾				
10	9+ (PTC, KTY, Klixon) internally connected to X6/5 ¹⁾				
11	B+	B+	-	+SIN	
12	Sense +	Sense +	Sense +	U _s - Switch	
13	Sense -	Sense -	Sense -	-	
14	-	CLK+	CLK+	-	
15	-	CLK -	CLK -	-	

1) Be sure to pay attention to the notice headed "ATTENTION" in Table 3.12!

1) Be sure to pay attention to the notice headed "ATTENTION" in Table 3.12!

Table 3.11 Pin assignment of the X7 terminal connection



NOTE:

The encoder supply at X7/3 is short-circuit proof in both 5 V and 11 V operation. The drive remains in operation enabling the generation of a corresponding error message when evaluating the encoder signals.

3.13 Motor connection

Step	Action	Comment
1.	Specify the cable cross-section dependent on the maximum current and ambient temperature.	Cable cross-section according to local and country-specific regulations and conditions.
2.	Connect the shielded motor cable to terminals X1 / U, V, W and connect the motor to ground at ⊕.	Mount shield at both ends to reduce interference emission.
3.	Wire the motor temperature sensor and activate temperature evaluation by means of Moog DRIVEADMINISTRATOR. See also related note.	Mount shield at both ends to reduce interference emission.

Motor temperature sensor



ATTENTION!

The motor PTC when connected to X5 must be provided with **basic insulation**, against the motor winding and when connected to X6 or X7 must be provided with **reinforced insulation** as per IEC/EN 61800-5-1.

X5	Temperature switch (Klixon), PTC	Sensor with basic insulation
X6	Temperature switch (Klixon), PTC, KTY	Sensor with reinforced insulation
X7	Temperature switch (Klixon), PTC, KTY	Sensor with reinforced insulation

Table 3.12 Motor temperature sensor terminal configuration



NOTE:

In the event of a short-circuit or ground fault in the motor cable, the power stage is disabled and an error message is issued.

3.13.1 Connection of the servo motors

Please use the ready made-up motor cable to connect motors.

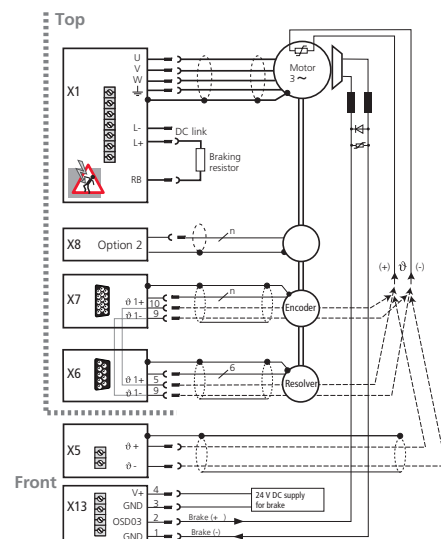



Fig. 3.17 Connection of motor size C2 to C4



ATTENTION!

DC linking of multiple servo drives is **not** permitted!

Ready made-up motor cable

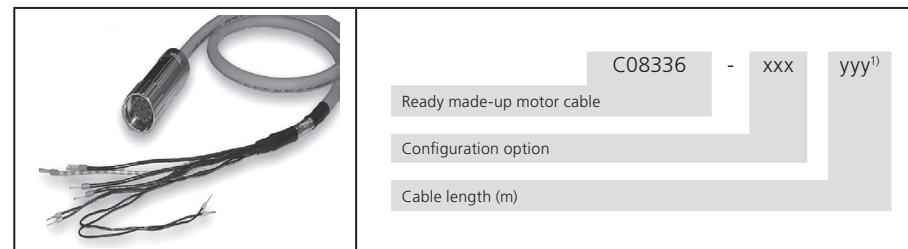

1) yyy stands for length in meters; Standard length: 1 m (3.28 ft), 5 m (16.40 ft), 10 m (32.80 ft), 15 m (49 ft), 20 m (65 ft), 50 m (164 ft). Further lengths on request

Motor cable C08336-xxx-yyy

Order code

Technical data

Technical data	C08336-xxx-yyy ^{1),2)}		CB05708-xxx-yyy ^{1),2)}		CA44958-xxx-yyy ^{1),2)}		CB00076-xxx-yyy ^{1),2)}		CA98676-xxx-yyy ^{1),2)}	
Continuous rated current	10 A		TBD		44 A		61 A		82 A	
Cable cross-section	4 x 1.5 mm ² + 2 x 1 mm ² (4 x 0.0024 in ² + 2 x 0.0016 in ²)		4 x 4 mm ² + 2 x 1.5 mm ² (4 x 0.0062 in ² + 2 x 0.0023 in ²)		4 x 6 mm ² + 2 x 1.5 mm ² (4 x 0.0093 in ² + 2 x 0.0023 in ²)		4 x 10 mm ² + 2 x 1.5 mm ² (4 x 0.0155 in ² + 2 x 0.0023 in ²)		4 x 16 mm ² + 2 x 1.5 mm ² (4 x 0.0248 in ² + 2 x 0.0023 in ²)	
Temperature range	-40 to +125 °C (-40 to +257 °F)		TBD		-50 to +90 °C (-58 to +194 °F)		TBD		TBD	
Wiring	Connector pin	Wiring	Connector pin	Wiring	Connector pin	Wiring	Connector pin	Wiring	Connector pin	Wiring
	2	U	2	U	U	U	U	U	U	U
	4	VV	4	VV	V	VV	V	VV	V	VV
	1	WWW	1	WWW	W	WWW	W	WWW	W	WWW
	PE	yellow / green	PE	yellow / green	PE	yellow / green	PE	yellow / green	PE	yellow / green
	5	Brake + / white	5	Brake + / white	+	Brake + / white	+	Brake + / white	+	Brake + / white
	6	Brake - / black	6	Brake - / black	-	Brake - / black	-	Brake - / black	-	Brake - / black
	Connector housing	Screen	Connector housing	Screen	Connector housing	Screen	Connector housing	Screen	Connector housing	Screen
Connector type	Size 1		Size 1		Size 1		Size 1		Size 1	

1) yyy stands for length in meters; Standard length: 1 m (3.28 ft), 5 m (16.40 ft), 10 m (32.80 ft), 15 m (49 ft), 20 m (65 ft), 50 m (164 ft). Further lengths on request

2) xxx-001 for standard configuration option, others on request

Table 3.13 Technical data motor cable

**NOTE:**

Wires 5 and 6 (PTC) are required only for motors in which the motor PTC cannot be connected via the encoder cable. In the case of synchronous motors with resolver, the PTC is connected via the resolver cable.

3.13.2 Switching in the motor cable

**ATTENTION!**

Switching in the motor cable must take place with the power cut and the power stage disabled, as otherwise problems such as burned-off contactor contacts may occur.

In order to ensure unpowered switch-on, you must make sure that the contacts of the motor contactor are closed before the servo drive power stage is enabled. At the moment the contactor is switched off it is necessary for the contact to remain closed until the servo drive power stage is shut down and the motor current is 0. This is done by inserting appropriate safety times for switching of the motor contactor in the control sequence of your machine.

**NOTE:**

Despite these measures, the possibility cannot be ruled out that the servo drive may malfunction during switching in the motor cable.

3.14 Braking resistor (BR)

In regenerative operation, e.g. when braking the drive, the motor feeds energy back to the servo drive. This increases the voltage in the DC link. If the voltage exceeds a threshold value, the internal braking transistor is activated and the regenerated power is converted into heat by means of a braking resistor.

3.14.1 Protection in case of braking chopper fault

**ATTENTION!**

If the internal braking chopper transistor is permanently switched on, because it is alloyed through by overload ($\approx 0 \Omega$), there is a protective function to protect the device against overheating.

You activate this function by assigning to any digital output (Moog DRIVEADMINISTRATOR 5 ►expert field "I/O configuration" ►digital outputs ►OSD00 to OSD02) with **BC_FAIL(56)**. In the event of a fault the selected output then switches from 24 V to 0 V. This signal ensures that the servo drive is safely disconnected from the mains supply.

For detailed information on parameterization refer to the "MSD device help".

3.14.2 Design with integrated braking resistor (size C3 and 4)

The Ordering Catalog only specifies the peak braking power for the servo drives with integrated braking resistor (model G394-xxx-xxx-xx2). The permissible continuous braking power must be calculated. It depends on the effective loading of the drive in the corresponding application.

The servo drive is thermally designed in such a way that no energy input by the internal braking resistor is permitted during continuous operation with rated current and at maximum ambient temperature.

Consequently, a drive design featuring an integrated braking resistor only makes sense when the effective servo drive load is $\leq 80\%$ or the braking resistor is designed for one-off emergency stop. In the event of an emergency stop, only the heat capacity of the braking resistor can be used for a one-off braking action. The permissible energy W_{IBr} can be taken from the following table.

Device	Technology	Rated resistance R_{BR}	Peak braking power P_{PBr}	Pulse energy W_{IBr}	K1
G394-059	Wire resistance	100 Ω	1500 W 1)	150 Ws	120
G394-035		420 Ω	1000 W 2) 1300 W 3) 1400 W 4)	140 Ws	50
G394-080		90 Ω	1690 W 1)	6000 Ws	170
G394-065			4700 W 2) 6170 W 3) 6500 W 4)	6000 Ws	120

1) Data referred to 1 x 230 V AC mains voltage (BR switch-on threshold 390 V DC)

2) Data referred to 3 x 400 V AC mains voltage (BR switch-on threshold 650 V DC)

3) Data referred to 3 x 460 V AC mains voltage (BR switch-on threshold 745 V DC)

4) Data referred to 3 x 480 V AC mains voltage (BR switch-on threshold 765 V DC)

K1 = Factor for the calculation of the permissible continuous braking power, see next page

Table 3.14 Data of the integrated braking resistor (design G394-xxx-xxx-xx2)

If the drive is not permanently operated at its power limit, the saved power dissipation of the drive can be used as braking power.



NOTE:

Further calculation assumes that the servo drive is used at maximum permissible ambient temperature. This means that any additional energy input from the internal braking resistor caused by low ambient temperature will be neglected.

Method to calculate the continuous braking power:

- Calculation of effective servo drive loading in a cycle T:

$$I_{eff} = \sqrt{\frac{1}{T} \int_0^T i^2 dt}$$

- Determination of permissible continuous braking power based on unused drive power:

$$P_{DBr} = \left(1 - \frac{I_{eff}}{I_N}\right) \times K1$$

Marginal conditions

- A single braking action must not exceed the maximum pulse energy of the braking resistor.
- The continuous braking power calculated for the device must be greater than the effective braking power of a device cycle.

$$W_{IBr} \geq P_{PBr} \times T_{Br}$$

$$P_{DBr} \geq \frac{1}{T} \times \int_0^T P_{PBr} dt_{Br}$$

This results in the minimum permissible cycle time T with calculated continuous braking power Continuous braking power:

$$T = \frac{P_{PBr}}{P_{DBr}} \times \int_0^T dt_{Br}$$

The maximum total on-time of the braking resistor over a specified cycle time T with calculated continuous braking power results as:

$$T_{BrSum} = \frac{P_{PBr}}{P_{DBr}} \times T$$



ATTENTION!

No additional external braking resistor may be connected to servo drives G394-059 to G394-065 with integrated braking resistor.

3.14.3 Connection of an external braking resistor



ATTENTION!

- Be sure to follow the installation instructions for the external braking resistor.
- The temperature sensor (bimetal switch) on the braking resistor must be wired in such a way that the power stage is deactivated and the connected servo drive is disconnected from the mains supply if the braking resistor overheats.
- The minimum permissible connection resistance of the servo drive must not be infringed for technical data see section A.2 on page 60.
- The braking resistor must be connected by a shielded cable.

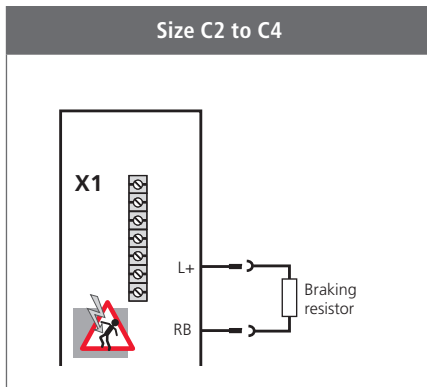


Fig. 3.18 Connection Braking resistor



ATTENTION!

No additional external braking resistor of the size C3 and C4 is allowed to be connected to the servo drives with integrated braking resistor.



DANGER FROM ELECTRICAL TENSION!


Danger to life! Never wire or disconnect electrical connections while these are live. Always disconnect the power before working on the device. Dangerously high voltages of ≥ 50 V may still be present 10 minutes after the power is cut (capacitor charging). So check that the power has been cut!



ATTENTION!

The external braking resistor must be monitored by the control. The temperature of the braking resistor is monitored by a temperature watchdog (Klixon). In the event of overheating the servo drive must be disconnected from the mains supply.

Available braking resistors (excerpt)

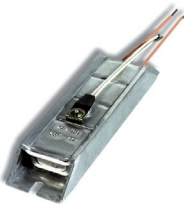Article designation	Continuous braking power	Resistance ¹⁾	Peak braking power ²⁾	Protection	Fig.
CA59737-001	35 W	90 Ω	6250 W	IP54	 Example: CA59737-001
CA59738-001	150 W		6250 W	IP54	
CA59739-001	300 W		6250 W	IP54	
CA59740-001	1000 W		6250 W	IP65	

1) Tolerance $\pm 10\%$

2) The maximum possible braking power dependent on ON-time and cycle time

Table 3.15 Technical data - braking resistors



NOTE:

The available braking resistors with the exact specifications, in particular with regard to surface temperature, maximum system voltage and high-voltage strength, are set out in the MSD Ordering Catalog.

Please consult your projecting engineer for more detailed information on the design of braking resistors.

4 Commissioning

4.1 Notes for operation



ATTENTION! Safety instructions:

During operation pay attention to the notes on safety in chapter 1

During operation it is imperative to avoid that ...

- foreign objects or moisture enters into the device
- aggressive or conductive substances in the immediate vicinity
- ventilation openings are covered

Cooling:

- The device heats up during the operation and the temperature on the heat may reach +100 °C (+212 °F). Danger of skin injury when touching.
- Cooling air must be able to flow through the device without restriction.

4.2 Initial commissioning

Once the Single-Axis Compact has been installed as described in chapter 2 "Mechanical installation" and wired with all required voltage supplies and external components as described in chapter 3 "Installation", initial commissioning can be performed in the following sequence:

Step	Action	Comment
 1.	Installation and start of PC software	see Installation Manual Moog DRIVEADMINISTRATOR 5
 2.	Switching on control supply	see section 4.2.1
 3.	Connection between PC and servo drive	see section 4.2.2
 4.	Parameter setting	see section 4.2.3
 5.	Drive control with Moog DRIVEADMINISTRATOR 5	see section 4.2.4

Table 4.1 Initial commissioning Step table



NOTE:

Details concerning STO (Safe Torque Off) have not been taken into account for initial commissioning, see chapter 6

4.2.1 Switching on control supply

- 2.** First only switch on the 24 V control supply for initializing and parameterizing. Do **not** yet switch on the AC mains supply..

Display reading after switching on the control supply

D1	D2	Action	Explanation
0		Switching on the external 24 V control supply	Initialization is running
51		Initialization completed	Not ready for starting

Table 4.2 Switch-on status of the Servo Drive (after the 24 V DC control supply)

- NOTE:**
Details concerning the control supply can be found in section 3.7, "Connection of supply voltage" starting at page 25.

4.2.2 Connection between PC and servo drive

- 3.** The PC can be linked with the servo drive via Ethernet (TCP/IP). Connect PC and servo drive with an ethernet connecting cable.

- NOTES:**
- Initialization
The communication link between PC and servo drive can only be set up after the servo drive has completed the initialization.
 - TCP/IP configuration
If the PC does not recognize the connected servo drive you should check the driver or the settings for the corresponding interfaces (see Installation Manual Moog DRIVEADMINISTRATOR 5).

4.2.3 Parameter setting

- 4.** The Commissioning Wizard in Moog DRIVEADMINISTRATOR 5 helps to make settings to the drive system. Start the wizard.

- NOTES:**
- Help Moog DRIVEADMINISTRATOR
A detailed description of Moog DRIVEADMINISTRATOR 5 as well as the commissioning wizard can be found in the Moog DRIVEADMINISTRATOR 5 help system.
 - Motor dataset
If you intend to use a Moog Servo Motors, motor datasets are available.

4.2.4 Drive control with Moog DRIVEADMINISTRATOR 5

- 5.** Switch on the AC mains supply. Subsequently enable the power stage and activate the drive. The drive should be tested without the coupled mechanics.

- DANGER FROM ROTATING PARTS!**
Mortal danger due to uncontrolled rotation! Before starting motors with feather keys in the shaft end these must be reliably secured against being ejected, as far as this is not already prevented by drive elements such as belt pulleys, couplings or similar.

- ATTENTION!**
- Avoid damage caused by motor test run!
In this case it must be assured that the test will not cause any damage to the system! Pay particular attention to the limitations of the travel range. Please note that you yourself are responsible for safe operation. Moog will not assume liability for any occurring damage.

- Destruction of motor!
 - Certain motors are intended for operation on the servo drive. Direct connection to the mains supply can destroy the motor.
 - The motor surfaces may become extremely hot. No temperature sensitive parts may touch or be mounted to these areas, appropriate measures to prevent contact must be applied wherever necessary.
 - In order to avoid overheating of the motor, the temperature sensor installed in the winding must be connected to the terminals of the temperature monitoring system for the servo drive (X5 or X6)
 - The motor brake (if installed) should be checked for fault-free functioning before commissioning of the motor. Standstill holding brakes are only designed for a limited number of emergency braking operations. Use as working brake is not allowed.

Display reading after switching on the AC mains supply

D1	D2	Action	Reaction	Explanation
		Switching on the AC mains supply	Control ready, power stage ready, control deactivated	Device is ready for switching on

Table 4.3 Display D1/D2 after switching on the AC mains supply



NOTES:

- Inputs "ISDSH" and "ENPO"
 - For step 1 in table 1.1 Fig. 4.1 at least the two inputs "ISDSH" and "ENPO" for terminal X4 must be interconnected.
- Manual operation dialog
 - For step 2 in table Fig. 4.1 best via the "Manual operation" dialog of Moog DRIVEADMINISTRATOR 5, details can be found in the help system.
- Configuration of inputs/outputs
 - If step 2 is to be executed via the inputs of terminal X4, the sources for "START CONTROL" and speed setpoint must be configured accordingly in the subject area "Inputs/Outputs" of Moog DRIVEADMINISTRATOR 5.

Switching on sequence to start the drive

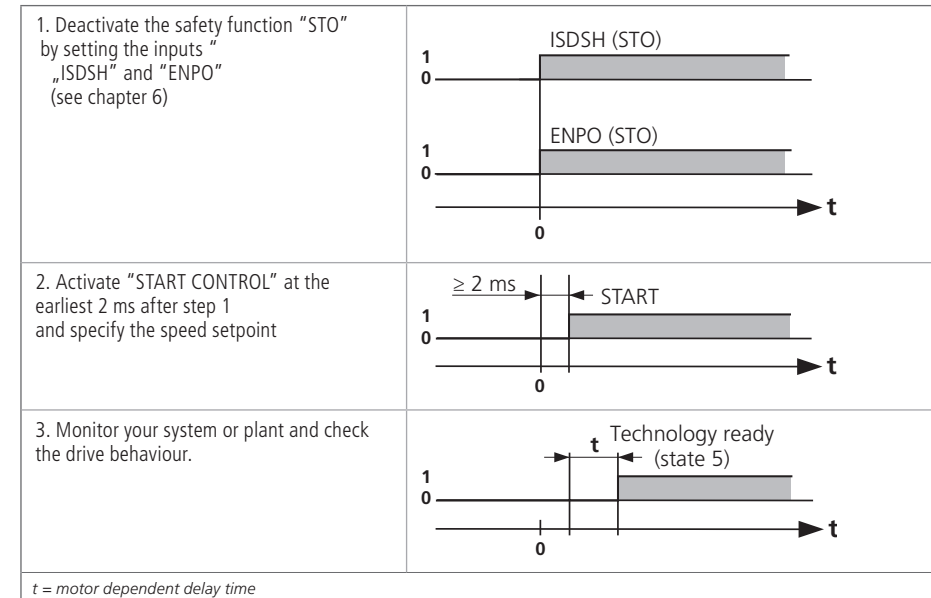


Fig. 4.1 Switching on sequence

Display reading after start of drive

D1	D2	Action	Reaction	Explanation
		"Enable "STO" and power stage "ENPO"	Ready for switching on	Power stage ready
 ATTENTION! Before the next step "Enable start" you must specify a plausible setpoint, because the pre-set setpoint is transferred to the drive directly after the motor control has started.				
		"Start" enabled	Technology ready	Motor energized, control active

Table 4.4 Display D1/D2 during activation of motor

Details for optimizing the drive on your application can be found in the Moog DRIVEADMINISTRATOR 5 Online help and in the MSD Application Manual.

4.3 Serial commissioning

An existing parameter dataset can be transferred to other Single-Axis Compacts by using Moog DRIVEADMINISTRATOR 5. Details can be found in the Moog DRIVEADMINISTRATOR 5 help system.

4.4 Integrated control unit

The built-in operator control unit permits diagnostics of the Single-Axis Compact. The operator control unit comprises the following elements, all located on the front of the device:

- 2-digit 7-segment display (D1, D2)
- 2 buttons (T1, T2)

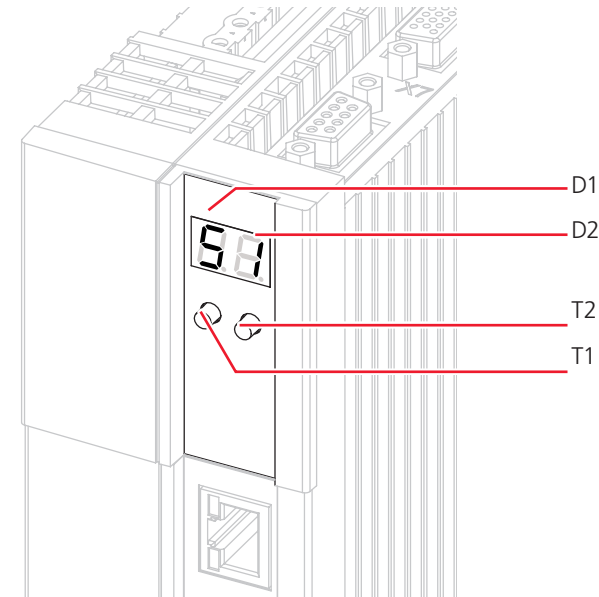


Fig. 4.2 Integrated control unit Single-Axis Compact

The following functions and displays are available:

- Display of device states (see section 5.1 „Device states" on page 53)
The device state is displayed after switching on the control voltage. If no input is made via the keypad for 60 seconds, the display switches back to the device state.
- Display of device error state (see page 53)
If a device error occurs the display immediately switches to show the error code.
- Parameter setting (display "PA") (see section 4.4.3)
Resetting device parameters to their factory setting
- Ethernet IP address setting (display "IP") (see section 4.4.5)
Setting of the Ethernet IP address and the subnet mask.
- Field bus settings (display "Fb") (see section 4.4.6)
Setting of field bus address for example.

4.4.1 Function of buttons T1 and T2

These buttons are used to activate the different menus and to control the corresponding functions.

Button	Function	Comment
T1 (left)	Activation of menu (exit the device status display) Scrolling through the menus/sub-menus Setting of values - left segment display (D1)	The button T1 can be held depressed for any time, because the display will only scroll through the menu options of the corresponding level. No settings will be changed.
T2 (right)	Selection of chosen menu Setting of values - right segment display (D2)	The button T2 must not be held depressed for any length of time, because the display will change from one menu level to the next within the menu structure and then change the parameter that is reached at the end. You should therefore always release the button T2 after each change in display.
T1 and T2 together	Menu level up Accept selection Acknowledge	When pressing T1 and T2 at the same time, the accepted value will be flashing for five seconds. During this time the Save procedure can still be aborted by pressing any button, without the set value being accepted. Otherwise the new value will be saved after 5 seconds.
General		The time the button needs to be held depressed until an action is executed, is approx. 1 second. If there is no action by the user over a period of 60 seconds, the display returns to the device status display.

Table 4.5 Function of buttons T1 and T2

4.4.2 Display

The following table defines various displays and status information about the Display.

Display	Meaning
	Menu entries ("PA" in this case serves as an example, further possible entries see section 4.4.5 and 4.4.6)
	[flashing decimal points] Selected function in action
	[two dashes] Entry/function not available
	[OK] Action executed successfully, no errors
	[Error] Action via control unit not executed successfully, "Er" flashes in alternation with error number (see section 4.4.3) Display Device error, "Er" flashes in alternation with error number and error location (see "MSD Application Manual")
	Numerical values ("10" in this case serves as an example) In the parameter menu (PA) error numbers are shown as . All other values are displayed in hexadecimal mode. In these cases the displayed 10 would represent the decimal value 16

Table 4.6 Meaning of display



NOTE:

If no input is made via the keyboard over a period of 60 seconds, the display returns to the device status display.

4.4.3 Parameter menu (PA)

On the Parameter menu the device settings can be reset to their factory defaults.

Menu level 1	Menu level 2	Parameter	Value range	Meaning	Explanation
PA	Pr	-	-	Parameter reset	Reset device settings to factory defaults

Table 4.7 Parameter menu

4.4.4 Error numbers

A failed user action is indicated by an error message. The message consists of an alternating display of "Er" and the error number.



NOTE:

NOTE: The error messages displayed during user input should not be confused with drive error messages. For detailed information on the error codes and on error management refer to the "MSD Application Manual".

Error number	Meaning
17	Parameter reset to factory settings failed
18	Parameter write access failed
19	Save parameter data set non volatile failed
20	Not all parameters written
21	Error while reset to factory settings

Table 4.8 Error numbers

4.4.5 Ethernet IP-address menu (IP)

An Ethernet TCP/IP port is available as a service and diagnostics interface. The IP address is set by default to 192.168.39.5 and the subnet mask to 255.255.255.0. Both can be changed by way of the IP-address menu.

Menu level 1	Menu level 2	Parameter	Value range	Meaning	Explanation
IP	lu	b0	00..FF	IP address update Byte 0	Setting of byte 0 of the IP address in hexadecimal format (e.g. "05" at 192.39.5. 168)
		b1	00..FF	IP address update Byte 1	Setting of byte 1 of the IP address in hexadecimal format (e.g. "27" at 192.168. 39 .5)
		b2	00..FF	IP address update Byte 2	Setting of byte 2 of the IP address in hexadecimal format (e.g. "A8" at 192. 168 .39.5)
		b3	00..FF	IP address update Byte 3	Setting of byte 3 of the IP address in hexadecimal format (e.g. "C0" at 192 .168.39.5)
	lr	-	-	IP reset to factory setting	Reset IP address to factory setting (192.168.39.5)
	Su	b0	00..FF	Subnetmask update Byte 0	Setting of byte 0 of the subnet mask in hexadecimal format (e.g. "00" at 255.255.255. 0)
		b1	00..FF	Subnetmask update Byte 1	Setting of byte 1 of the subnet mask in hexadecimal format (e.g. "FF" at 255.255. 255 .0)
		b2	00..FF	Subnetmask update Byte 2	Setting of byte 2 of the subnet mask in hexadecimal format (e.g. "FF" at 255. 255 .255.0)
		b3	00..FF	Subnetmask update Byte 3	Setting of byte 3 of the subnet mask in hexadecimal format (e.g. "FF" at 255 .255.255.0)
	Sr	-	-	Subnetmask reset to factory setting	Reset subnet mask to factory default setting (255.255.255.0)

Table 4.9 IP-address menu

Example configuration of subnet mask

In this example the subnet mask is changed from 255.255.255.0 to 122.255.255.0.



NOTE:

Changes on the IP-address menu are only saved when the control electronics are subsequently restarted.

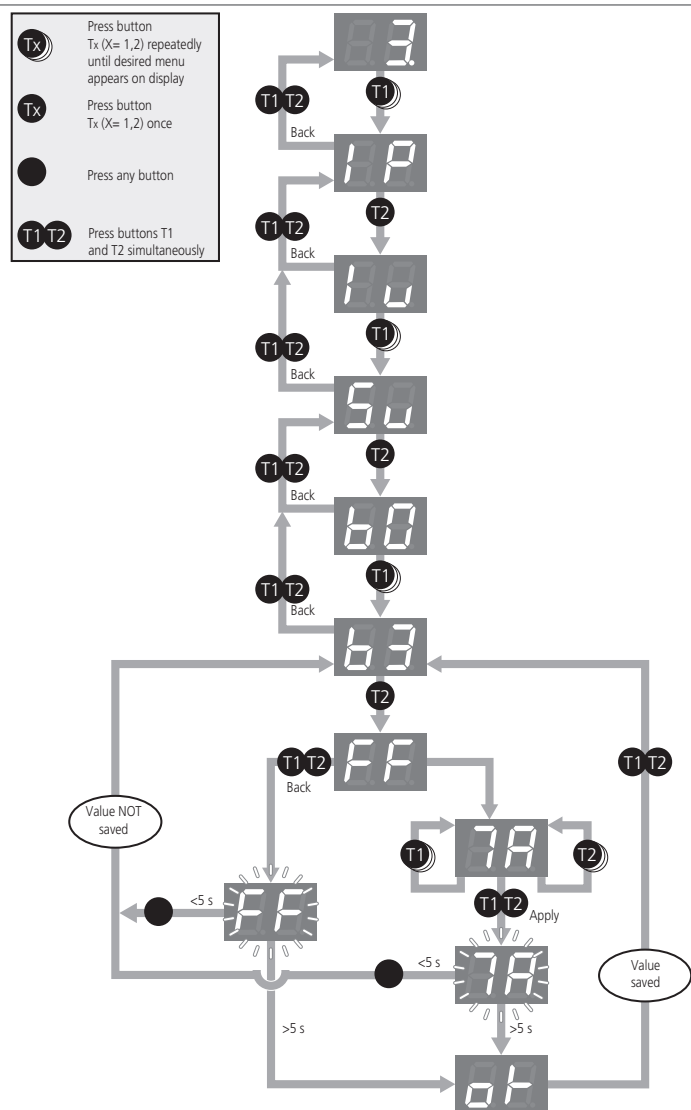


Fig. 4.3 Example configuration of subnet mask

4.4.6 Field bus address menu (Fb)

The functions available under this menu item depend on the device expansion option. For detailed information refer to the relevant specification.

Menu level 1	Menu level 2	Parameter	Value range	Meaning	Explanation
Fb	Ad	-	00..xx or --	Field bus address	Setting of field bus address (only when field bus option used), otherwise display "--" (The maximum programmable value depends on the option)
	Po	-	0..3 or --	Transmit power	Setting of fibre-optic power output (only with SERCOS II option), otherwise display "--"

Table 4.10 Field bus address menu

Example configuration of field bus address

In this example the field bus address is changed from 1 to 23.



NOTE:

Changes on the field bus address menu are only saved when the control electronics are subsequently restarted.

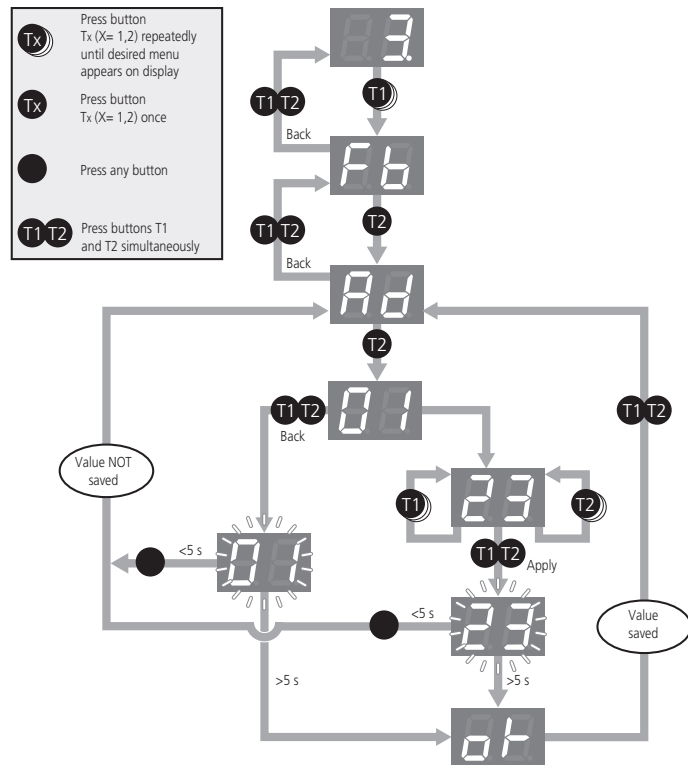


Fig. 4.4 Example configuration of field bus address

5 Diagnostics

The device states and error displays are indicated on the device by way of the 7-segment display of the integrated operator control unit.

5.1 Device states

Display	System status
	Device in reset state
	Self-initialization on device startup
	Not ready to switch on (no DC link voltage) ¹⁾
	Start inhibit (DC link OK, power stage not ready)
	Ready (power stage ready)
	Switched on (drive powered) ²⁾
	Drive ready (power applied to drive and drive ready for setpoint input) ²⁾
	Quick stop ²⁾
	Error response active ²⁾

¹⁾ Not a "safe indication" as specified in IEC/EN 61800-5-2.

S flashes when STO (Safe Torque Off) function is active, display goes out when function is inactive.

²⁾ The dot flashes when the power stage is active.

Table 5.1 Device states

5.2 Error display

The 7-segment display shows the specific error codes. Each error code comprises the alternating sequence "Er" ► error number ► error location.

Display	Meaning
	Device error
↓ Display changes after approx. 1 s	
	Error number (decimal) Example: 05 = Overcurrent
↓ Display changes after approx. 1 s	
	Error location (decimal) Example: 01 = Hardware monitoring
↑ After approx. 1 s the display jumps to ER	

Table 5.2 Display of the error code



NOTE:

The errors can be reset in accordance with their programmed reaction (ER) or only via a 24 V reset (X2) (ER.). Errors marked with a dot can only be reset when the cause of the fault has been eliminated.

5.3 Error codes



NOTE:

For detailed information on the error codes and on error management refer to the "MSD device help".

5.4 Helpline/Support & Service

Our Helpline can provide you with fast, targeted assistance if you have any technical queries relating to project planning or commissioning of the drive unit. To that end, please collect the following information prior to making contact:

1. Type designation, serial number and software version of the devices (see Software rating plate)
2. Moog DRIVEADMINISTRATOR version in use (menu ►Help ►Information... ►Version)
3. Displayed error code version (on 7-segment display or Moog DRIVEADMINISTRATOR)
4. Description of the error symptoms, how it occurred and relevant circumstances
5. Save device settings to file in Moog DRIVEADMINISTRATOR
6. Name of company and contact, telephone number and e-mail address

If you have any technical questions concerning project planning or commissioning of the servo drive, please feel free to contact our helpline.

- Helpline - Please contact us:
Moog GmbH
Hanns-Klemm-Straße 28
D-71034 Böblingen
Phone: +49 7031 622 0
Telefax: +49 7031 622 100
E-Mail: drives-support@moog.com

If you need further assistance, our specialists at the Moog Service Center will be happy to help.

- Service - Please contact us:
Phone: +49 7031 622 0
E-Mail: info.germany@moog.com

6 Safe Torque Off (STO)



NOTE:

You will find all information on the “STO” function in the 24-language document “Description of the STO Safety Function” (ID no. CB19388).

6 Safe Torque Off (STO)



ID no.: CA97555-001 Date: 01/2015

Single-Axis Compact Operation Manual

56

Space for personal notes

A Appendix

A.1 Current capacity of servo drives

The maximum permissible servo drive output current and the peak current are dependent on the mains voltage, the motor cable length, the power stage switching frequency and the ambient temperature. If the conditions change, the maximum permissible current capacity of the servo drives also changes.

Single-Axis Compact for 1 x 230 V

Device	Switching frequency of power stage [kHz]	Ambient temperature maximum [°C (°F)]	Rated current I_N [A _{eff}] at 1 x 230 V	Peak current			
				200 % (2 I_N) [A _{eff}]	for time [s]	300 % (3 I_N) [A _{eff}]	for time [s]
G394-030	4	+45 (+113)	3.0	6.0	10	9.0	0.08
	8	+40 (+104)	3.0	6.0		9.0 ¹⁾	0.08 ¹⁾
	16	+40 (+104)	2.0	4.0		6.0 ¹⁾	0.08 ¹⁾
G394-059	4	+45 (+113)	5.9	11.8	10	17.7	0.08
	8	+40 (+104)				17.7 ¹⁾	
	16	+40 (+104)				17.7 ¹⁾	
G394-080	4	+45 (+113)	8.0	16.0	10	24.0	0.08
	8	+40 (+104)	8.0	16.0		24.0 ¹⁾	
	16	+40 (+104)	5.4	10.8		16.2 ¹⁾	

¹⁾ Automatic power stage switching frequency change to 4 kHz.

Data applies to motor cable length ≤10m (32.80 ft). Maximum permissible motor cable length 30 m (98 ft).

All current ratings with recommended mains choke.

Table A.1 Rated current and peak current size C2 to C4 (1 x 230 V AC)

Single-Axis Compact for 3 x 230 V

Device	Switching frequency of power stage [kHz]	Ambient temperature maximum [°C (°F)]	Rated current I_N [A _{eff}] at 3 x 230 V	Peak current			
				200 % (2 I_N) [A _{eff}]	for time [s]	300 % (3 I_N) [A _{eff}]	for time [s]
G394-030	4	+45 (+113)	3.0	6.0	10	9.0	0.08
	8	+40 (+104)	3.0	6.0		9.0 ¹⁾	
	16	+40 (+104)	2.0	4.0		6.0 ¹⁾	
G394-059	4	+45 (+113)	5.9	11.8	10	17.7	0.08
	8	+40 (+104)				17.7 ¹⁾	
	16	+40 (+104)				17.7 ¹⁾	
G394-080	4	+45 (+113)	8.0	16.0	10	24.0	0.08
	8	+40 (+104)	8.0	16.0		24.0 ¹⁾	
	16	+40 (+104)	5.4	10.8		16.2 ¹⁾	

¹⁾ Automatic power stage switching frequency change to 4 kHz.

Data applies to motor cable length ≤10m (32.80 ft). Maximum permissible motor cable length 30 m (98 ft).

Table A.2 Rated current and peak current size C2 to C4 (3 x 230 V AC)

Single-Axis Compact for 3 x 400 V

Device	Switching frequency of power stage [kHz]	Ambient temperature maximum [°C (°F)]	Rated current I_N at 400 V [A _{eff}]	Peak current			
				200 % (2 I_N)		300 % (3 I_N)	
				[A _{eff}]	for time [s]	[A _{eff}]	for time [s]
G394-020	4	+45 (+113)	2.0	4.0		6.0	
	8	+40 (+104)	2.0	4.0	10 ²⁾	6.0 ¹⁾	0.08 ²⁾
	16	+40 (+104)	0.7	1.4		2.1 ¹⁾	
G394-035	4	+45 (+113)	5.5	7.0		10.5	
	8	+40 (+104)	3.5	7.0	10 ²⁾	10.5 ¹⁾	0.08 ²⁾
	16	+40 (+104)	2.2	4.4		6.6 ¹⁾	
G394-065	4	+45 (+113)	8.5	13.0		19.5	
	8	+40 (+104)	6.5	13.0	10 ²⁾	19.5 ¹⁾	0.08 ²⁾
	16	+40 (+104)	4.0	8.0		12.0 ¹⁾	

1) Automatic power stage switching frequency change to 4 kHz.

2) Disconnection according to I^2t characteristic

Data applies to motor cable length ≤10m (32.80 ft). Maximum permissible motor cable length 30 m (98 ft).

Table A.3 Rated current and peak current size C2 to C4 (3 x 400 V AC)

Single-Axis Compact for 3 x 460 V

Device	Switching frequency of power stage [kHz]	Ambient temperature maximum [°C (°F)]	Rated current I_N [A _{eff}] at 460 V	Peak current			
				200 % (2 I_N)		300 % (3 I_N)	
				[A _{eff}]	for time [s]	[A _{eff}]	for time [s]
G394-020	4	+45 (+113)	2.0	4.0		6.0	
	8	+40 (+104)	2.0	4.0	10 ²⁾	6.0 ¹⁾	0.08
	16	+40 (+104)	0.7	1.4		2.1 ¹⁾	
G394-035	4	+45 (+113)	4.8	6.2		9.2 ¹⁾	
	8	+40 (+104)	3.5	7.0	10 ²⁾	10.5 ¹⁾	0.08
	16	+40 (+104)	1.3	2.6		3.9 ¹⁾	
G394-065	4	+45 (+113)	7.4	11.8		17.8	
	8	+40 (+104)	6.5	13.0	10 ²⁾	19.5 ¹⁾	0.08
	16	+40 (+104)	2.4	4.8		7.2 ¹⁾	

1) Automatic power stage switching frequency change to 4 kHz.

2) Disconnection according to I^2t characteristic

Data applies to motor cable length ≤10m (32.80 ft). Maximum permissible motor cable length 30 m (98 ft).

Table A.4 Rated current and peak current size C2 to C4 (3 x 460 V AC)

Single-Axis Compact for 3 x 480 V

Device	Switching frequency of power stage [kHz]	Ambient temperature maximum [°C (°F)]	Rated current I_N [A _{eff}] at 480 V	Peak current			
				200 % (2 I_N)		300 % (3 I_N)	
				[A _{eff}]	for time [s]	[A _{eff}]	for time [s]
G394-020	4	+45 (+113)	2.0	4.0	10 ²⁾	6.0	0.08 ²⁾
	8	+40 (+104)	1.7	3.4		5.1 ¹⁾	
	16	+40 (+104)	-	-		-	
G394-035	4	+45 (+113)	4.6	6.0	10 ²⁾	8.8 ¹⁾	0.08 ²⁾
	8	+40 (+104)	2.6	5.2		7.8 ¹⁾	
	16	+40 (+104)	-	-		-	
G394-065	4	+45 (+113)	7.0	11.2	10 ²⁾	16.8	0.08 ²⁾
	8	+40 (+104)	6.5	13.0		19.5 ¹⁾	
	16	+40 (+104)	1.9	3.8		5.7 ¹⁾	

1) Automatic power stage switching frequency change to 4 kHz.

2) Disconnection according to I^2t characteristic.

Data applies to motor cable length ≤10m (32.80 ft). Maximum permissible motor cable length 30 m (98 ft).

Table A.5 Rated current and peak current size C2 to C4 (3 x 480 V AC)

A.2 Technical data Single-Axis Compact

Designation	G394-030	G394-059	G394-080
Technical data			
Output, motor side			
Voltage	3 phase U_{Mains}		
Rated current effective (I_N)	3 A ^{1) 2)}	5.9 A ^{1) 2)}	8 A ^{1) 2)}
Peak current ($2 \times I_N / 3 \times I_N$)	see table A.1 and A.2		
Rotating field frequency	0 ... 400 Hz		
Switching frequency of power stage	4, 8, 16 kHz		
Input mains side			
Mains voltage	(1 x 230 V AC / 3 x 230 V AC) -20 %/+15 %		
Device power connection (with mains choke)	1.3 kVA ¹⁾	2.6 kVA ¹⁾	3.5 kVA ¹⁾
Current consumption (with mains choke)	1 x 230 V AC	5.4 A	10.6 A
	3 x 230 V AC	3.3 A	6.5 A
Asymmetry of mains voltage	±3 % maximum		
Permissible mains frequency	50/60 Hz ±10 %		
Power loss at I_N	75 W ¹⁾	150 W ¹⁾	200 W ¹⁾

1) Data referred to output voltage 230 V AC and switching frequency 8 kHz,

2) For rated current refer to table A.1 and table A.2!

3) On design with integrated braking resistor (G394-xxx-xx2). Connection of an external braking resistor is not permitted.

4) Braking resistor always integrated. Connection of an external resistor is permissible.

Table A.6 Technical data G394-030, G394-059 and G394-080

Designation	G394-030	G394-059	G394-080
Technical data			
DC link			
Braking chopper switch-on threshold	390 V DC ¹⁾		
DC link - Capacitance	880 µF	1320 µF	1760 µF
Minimum ohmic resistance of an externally installed braking resistor	72 Ω ⁴⁾	72 Ω ³⁾	72 Ω ³⁾
Brake chopper continuous power with external braking resistor	2.1 kW		
Peak brake chopper with external braking resistor	2.1 kW		
Internal braking resistor	550 Ω (PTC) ⁴⁾	100 Ω ³⁾	90 Ω ³⁾
Brake chopper continuous power with internal braking resistor	0 W	depending on the effective load on the controller in the specific application	
Peak brake chopper with internal braking resistor	400 W	1500 W	1700 W

1) Data referred to output voltage 230 V AC and switching frequency 8 kHz,

2) For rated current refer to table A.1 and table A.2!

3) On design with integrated braking resistor (G394-xxx-xx2). Connection of an external braking resistor is not permitted.

4) Braking resistor always integrated. Connection of an external resistor is permissible.

Table A.6 Technical data G394-030, G394-059 and G394-080



NOTE:

For more information on the braking chopper switch-on threshold also refer to section 3.14 from page 37.

G394-020, G394-035 and G394-016

Designation	G394-020	G394-035	G394-065
Technical data			
Output, motor side¹⁾			
Voltage	3 phase U_{Mains}		
Rated current, effective (I_N)	2 A ^{1) 2)}	3.5 A ^{1) 2)}	6.5 A ^{1) 2)}
Peak current ($2 \times I_N / 3 \times I_N$)	see table A.3 and A.4 and A.5		
Rotating field frequency	0 ... 400 Hz		
Switching frequency of power stage	4, 8, 16 kHz		
Input mains side			
Mains voltage	(3 x 400 V AC / 3 x 460 V AC / 3 x 480 V AC) ± 10 %		
Device power connection (with mains choke)	1.5 kVA ¹⁾	2.7 kVA ¹⁾	5.0 kVA ¹⁾
Current consumption (with mains choke)	2.2 A ^{1) 2)}	3.9 A ^{1) 2)}	7.2 A ^{1) 2)}
Asymmetry of mains voltage	± 3 % maximum		
Frequency	50/60 Hz ± 10 %		
Power loss at I_N	42 W ¹⁾	80 W ¹⁾	150 W ¹⁾

1) Data referred to output voltage 400 V AC and switching frequency 8 kHz,

2) For rated current refer to table A.3 and A.4 and A.5!

3) On design with integrated braking resistor (G394-xxx-xxx-xx2). Connection of an external braking resistor is not permitted.

4) Braking resistor always integrated. Connection of an external resistor is permissible.

Table A.7 Technical data G394-020 to G394-065

Designation	G394-020	G394-035	G394-065
Technical data			
DC link			
Braking chopper switch-on threshold	650 V DC ¹⁾		
DC link - Capacitance	220 μ F	330 μ F	440 μ F
Minimum ohmic resistance of an externally installed braking resistor	230 Ω	180 Ω ³⁾	72 Ω ³⁾
Brake chopper continuous power with external braking resistor	1.8 kW	2.3 kW	5.9 kW
Peak brake chopper with external braking resistor	1.8 kW	2.3 kW	5.9 kW
Internal braking resistor	7500 Ω (PTC) ⁴⁾	420 Ω ³⁾	90 Ω ³⁾
Brake chopper continuous power with internal braking resistor	0 W	depending on the effective load on the controller in the specific application	
Peak brake chopper with internal braking resistor	200 W ¹⁾	1000 W ¹⁾	4700 W ¹⁾

1) Data referred to output voltage 400 V AC and switching frequency 8 kHz,

2) For rated current refer to table A.3 and A.4 and A.5!

3) On design with integrated braking resistor (G394-xxx-xxx-xx2). Connection of an external braking resistor is not permitted.

4) Braking resistor always integrated. Connection of an external resistor is permissible.

Table A.7 Technical data G394-020 to G394-065



NOTE:

For more information on the braking chopper switch-on threshold also refer to section 3.14 from page 37.

A.3 Ambient conditions

Ambient conditions	Single-Axis Compact
Protection	IP20 except terminals (IP00)
Accident prevention regulations	according to local regulations (in Germany e.g. BGV A3)
Mounting height	up to 1,000 m (3,280 ft) above MSL, over 1,000 m (3,280 ft) above MSL with power reduction (1 % per 100 m (328 ft), maximum 2,000 (6,500 ft) m above MSL)
Pollution severity	2
Type of installation	Built-in unit, only for vertical installation in a switch cabinet with minimum IP4x protection, when using STO safety function minimum IP54

Table A.8 Ambient conditions Single-Axis Compact

Climatic conditions	Single-Axis Compact
in transit	as per IEC/EN 61800-2, IEC/EN 60721-3-2 class 2K3 ¹⁾
	Temperature -25 °C to +70 °C (-13 °F to +158 °F)
	Relative air humidity 95 % at maximum +40 °C (+104 °F)
in storage	as per IEC/EN 61800-2, IEC/EN 60721-3-1 class 1K3 and 1K4 ²⁾
	Temperature -25 °C to +55 °C (-13 °F to +131 °F)
	Relative air humidity 5 to 95 %

1) The absolute humidity is limited to maximum 60 g/m³. This means, at +70 °C (+158°F) for example, that the relative humidity may only be maximum 40 %.

2) The absolute humidity is limited to maximum 29 g/m³. So the maximum values for temperature and relative air humidity stipulated in the table must not occur simultaneously.

3) The absolute humidity is limited to maximum 25 g/m³. That means that the maximum values for temperature and relative air humidity stipulated in the table must not occur simultaneously.

Table A.9 Climatic conditions Single-Axis Compact

Climatic conditions	Single-Axis Compact
in operation	as per IEC/EN 61800-2, IEC/EN 60721-3-3 class 3K3 ³⁾
	Temperature -10 °C to +45 °C (+14 °F to +113 °F) (4 kHz), up to +55 °C (+131 °F) with power reduction (2 % per °C/°F) -10 °C to +40 °C (+14 °F to +104 °F) (8, 16 kHz), up to +55 °C (+131 °F) with power reduction (2 % per °C/°F)
	Relative air humidity 5 to 85 % without condensation

1) The absolute humidity is limited to maximum 60 g/m³. This means, at +70 °C (+158°F) for example, that the relative humidity may only be maximum 40 %.

2) The absolute humidity is limited to maximum 29 g/m³. So the maximum values for temperature and relative air humidity stipulated in the table must not occur simultaneously.

3) The absolute humidity is limited to maximum 25 g/m³. That means that the maximum values for temperature and relative air humidity stipulated in the table must not occur simultaneously.

Table A.9 Climatic conditions Single-Axis Compact

Mechanical conditions	Single-Axis Compact
Vibration limit in transit	as per IEC/EN 61800-2, IEC/EN 60721-3-2 class 2M1
	Frequency [Hz] Amplitude [mm (in)] Acceleration [m/s²]
	2 ≤ f < 9 3.5 (0.14) not applicable
	9 ≤ f < 200 not applicable 10
	200 ≤ f < 500 not applicable 15
Shock limit in transit	as per IEC/EN 61800-2, IEC/EN 60721-2-2 class 2M1
	Drop height of packed device maximum 0.25 m (9.84 in)
Vibration limit of the system ¹⁾	as per IEC/EN 61800-2, IEC/EN 60721-3-3 class 3M1
	Frequency [Hz] Amplitude [mm (in)] Acceleration [m/s²]
	2 ≤ f < 9 0.3 (0.01) not applicable
	9 ≤ f < 200 not applicable 1

1) NOTE: The devices are only designed for stationary use.

Table A.10 Mechanical conditions Single-Axis Compact

**ATTENTION!**

- No continuous vibrations!
The servo drives must not be installed in areas where they would be permanently exposed to vibrations.
- Control cabinet minimum IP54 for STO!
According to EN ISO 13849-2 the switch cabinet must have IP54 protection or higher when using the STO (Safe Torque OFF) safety function .
- Observe cooling conditions!
Forced cooling by external air flow necessary. Air must be able to flow unhindered through the device (air flow at least 1.2 m/s (3.93 ft/s). If a temperature cut-out occurs, the cooling conditions must be improved.

A.4 UL certification

The devices are certified as per UL 508C. For this purpose the following conditions are to be met by the user:

1. The devices may only be operated in systems of overvoltage category III.
2. The devices are rated for installation in an environment of pollution severity 2.
3. The protective device for branch lines must be executed in accordance with the manufacturers' instructions, the requirements of the NEC (National Electrical Code) and other locally applicable standards.
4. Only UL certificated device connection cables (mains, motor and control cables) may be used:
 - Use copper conductors with a temperature resistance of at least +75 °C (+167 °F).
 - Specified tightening torques for the terminals.
5. Maximum temperature of the ambient air (surrounding temperature): see table A.9.
6. Multiple rated equipment: For details see tables A.1, A.2 and A.3.
7. Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the Manufacturer Instructions, National Electrical Code and any additional local codes.
8. Control outputs (X4/23; X4/24) and OSD00, OSD01, OSD02 (see ratings of control circuitry): Use secondary isolating source rated 25 V AC, 30 V DC or 24 V DC as appropriate for rating of the given output. Fuse in accordance with UL248, rated 100 V must be connected between the source and the output.
9. Suitable for use on a circuit capable of delivering not more than 5000 rms symmetrical Amperes @ Volts maximum (+240 V maximum for G394-0xx / +480 Volts maximum for G394-0xx), when protected by class RK5 fuses.

Size	Device	Tightening torque mains terminal X3	Tightening torque motor terminal X1	maximum mains fuse / class
C2	G394-030	5 - 7 lb-in (0.56 - 0.79 Nm)		10 A, 250 V / RKS
	G394-020	5 - 7 lb-in (0.56 - 0.79 Nm)		6 A, 600 V / RKS
C3	G394-059	5 - 7 lb-in (0.56 - 0.79 Nm)		20 A, 250 V / RKS
	G394-035	5 - 7 lb-in (0.56 - 0.79 Nm)		15 A, 600 V / RKS
C4	G394-080	4.4 - 5.3 lb-in (0.50 - 0.60 Nm)	7 lb-in (0.79 Nm)	25 A, 250 V / RKS
	G394-065	4.4 - 5.3 lb-in (0.50 - 0.60 Nm)	7 lb-in (0.79 Nm)-	20 A, 600 V / RKS

Table A.11 Tightening torques and mains fuse size C2 to C4

Certifications

The Single-Axis Compacts have the following acceptances

Servo drive	Certification
G394-030-xxx-xx1	UL Recognized
G394-059 -xxx-xx1	UL Listed
G394-080 -xxx-xx1	UL Listed
G394-020 -xxx-xx1	UL Recognized
G394-035 -xxx-xx1	UL Listed
G394-065 -xxx-xx1	UL Listed

Glossary

Symbole

7-segment display	18, 19, 53, 54
2004/108/EC	10
2006/42/EC	10
2006/95/EC	10

A

Accident prevention measures	17
Ambient conditions	13, 27
Ambient conditons	62
ANSI Z 535	10

B

Backing plate	13
BGV A3	9
Braking chopper	37, 60, 61
Braking resistor	37, 38, 39, 40, 60, 61
Continuous braking power	37, 38, 39
Peak braking power	37, 38, 39, 60, 61
Button	18, 19, 46, 47

C

Cable	
Cable cross-section	9, 26, 34
Cable length	26, 35, 57, 58, 59
Cable type	17, 29, 33
Motor cable	35
Routing of cables	17
Capacitor charging	9, 26, 39
Clearances and creepages	26

Climatic conditions	62
CoDeSys	30
Commissioning	9, 10, 27, 28, 30, 31, 43, 45, 54
Connection diagram	19
Control	45
Control cabinet	13, 23, 32, 33, 62
Control connections / Control terminals	18, 19, 23, 28
Control supply	18, 19, 22, 24, 25, 30, 44, 47
Control unit	46, 48
Cooling	
Cooling air	13, 43
Cooling conditions	13, 63
Heat sink	43

D

DC linking	35
Device error	47, 48, 53
Device power connection	60, 61
Device settings	28, 48, 54
Diagnostic	30
Diagnostics	46, 53
Dimensions	14
DIN EN 954-1	11
DIN VDE 0100	9
Display	25, 48

E

Electrical isolation concept	24
EMC	
EMC-compatible installation	13, 20
Emergency-Off	11
Encoder	
Encoder cable	31, 32, 37
Encoder connection	31
EnDat	32, 34
High-resolution encoder	18, 33

HIPERFACE®	33, 34
Ready made-up encoder cables.....	32
Sin/Cos	32, 33, 34
SSI	32, 34
EN ISO 12100.....	11
EN ISO 13849-1	11
EN ISO 13849-2	13, 63
EN ISO 14121	11
ENPO	28, 29, 45
Environmental.....	43
Error code.....	47, 48, 53, 54
Error number	48
Ethernet interface	18, 19, 30

F

Field bus	
Field bus address.....	47, 50, 51
Field bus settings	47
Filter	
Mains filter.....	13, 20, 22, 26
Radio frequency interference suppression filters.....	20
FI protective device	26
For your safety.....	9

G

Grounding measures	17
--------------------------	----

H

H1 (Control LED)	17, 18, 25
Hazard class.....	10
Helpline/Support & Service	54

I

IEC 364	9
IEC 60755.....	26

IEC/EN 60079-0.....	10
IEC/EN 60079-1	10
IEC/EN 60204	10
IEC/EN 60204-1/VDE 0113	11
IEC/EN 60721-2-2	62
IEC/EN 60721-3-1	62
IEC/EN 60721-3-3	62
IEC/EN 61000-2-4.....	26
IEC/EN 61131-3	30
IEC/EN 61800-3	17, 20, 26, 34
IEC/EN 61800-5-1	10, 23, 25, 26
IEC/EN 61800-5-2	53
Initial commissioning	43
Initialization	44
Installation.....	9, 13, 17, 20
Intended use.....	10
Interference immunity.....	20
IP address	47, 49
ISDSH	30
IT Net	26

L

Layout	18
Leakage current.....	23

M

Mains choke	26
Mains supply	26, 45
Mains connection	18, 22, 23
Mains fuses.....	26, 27
Power connection	27
Manufacturer date.....	4
Mechanical conditions	62
Mechanical installation	13
Minimum clearance	15
Moisture	13

Moog DRIVEADMINISTRATOR	25, 30, 34, 44, 45, 54
Motor	
Motor brake	18, 19, 30, 45
Motor cable	21
Motor connection	34, 35
Motor dataset	44
Motor temperature monitoring	18, 19
Motor temperature sensor	34
Klixon	33, 39
KTY	33
PTC	32–36, 60, 61
Ready made-up motor cable	35
Synchronous motor	31, 35

N

Neutral point	26
Notes for operation	13

O

Operator control unit	53
Option 1	18, 19, 31
Option 2	18, 19, 31
Order code	4
Overvoltage category	26

P

Parameter setting	47
Pollution severity	13, 62
Power connection	18
Power stage	29, 34, 37, 39, 45, 53, 60, 61
Project planning	54
Protection	13, 39, 62
Protective conductor	23
Protective conductor connection	18, 23
Protective Extra Low Voltage (PELV)	24

Q

Qualification	9
---------------------	---

R

Rated current	57, 58, 59
Rating plate	4, 54
RCD	26
Resolver	32, 33, 37
Resolver connection	18, 33
Responsibility	11
Risk	10

S

Safety	
Safety function	55
Safety Extra Low Voltage (SELV)	24
Safety function	13, 45, 62, 63
Serial number	4, 54
Shield connecting plate	21, 22
Shielding measures	17
Specimen setup	20
Start-up current	25
STO	55
Stop categories	
Stop category 0 (STO)	53, 62
Stop category	
Stop category 0 (STO)	13, 28–29
STO (Safe Torque OFF)	
ISDSH	45
STO	45
Subnet mask	47, 49, 50
Supply package	4
Supply voltages	25
Switching frequency	25, 60, 61
Switching frequency change	57, 58, 59
Switching in the motor cable	37
Switching on sequence	45

T

Technical data.....	9, 27, 36, 39, 60
Temperature evaluation	34
TN Net.....	26
TT Net	26

U

UL certification	63
------------------------	----

V

Variant.....	31
--------------	----

W

Wall mounting.....	13
Warning symbols	10

X

X1.....	18, 19, 21, 25, 34
X2	17, 18, 19, 22, 25, 53
X3	18, 19, 22, 25
X4	18, 19, 23, 28, 29, 30
X5	18, 19, 34, 45
X6	18, 19, 32, 33, 34, 45
X7	18, 19, 32, 33, 34
X8	18, 19
X9	18, 19, 30
X13.....	18, 19, 30

TAKE A CLOSER LOOK.

Moog solutions are only a click away. Visit our worldwide Web site for more information and the Moog facility nearest you.

Argentina	+54 11 4326 5916	info.argentina@moog.com
Australia	+61 3 9561 6044	info.australia@moog.com
Brazil	+55 11 3572 0400	info.brazil@moog.com
Canada	+1 716 652 2000	info.canada@moog.com
China	+86 21 2893 1600	info.china@moog.com
Finland	+358 10 422 1840	info.finland@moog.com
France	+33 1 4560 7000	info.france@moog.com
Germany	+49 7031 622 0	info.germany@moog.com
Hong Kong	+852 2 635 3200	info.hongkong@moog.com
India	+91 80 4057 6666	info.india@moog.com
Ireland	+353 21 451 9000	info.ireland@moog.com
Italy	+39 0332 421 111	info.italy@moog.com
Japan	+81 46 355 3767	info.japan@moog.com
Korea	+82 31 764 6711	info.korea@moog.com
Luxembourg	+352 40 46 401	info.luxembourg@moog.com
Netherlands	+31 252 462 000	info.thenetherlands@moog.com
Norway	+47 6494 1948	info.norway@moog.com
Russia	+7 8 31 713 1811	info.russia@moog.com
Singapore	+65 677 36238	info.singapore@moog.com
South Africa	+27 12 653 6768	info.southafrica@moog.com
Spain	+34 902 133 240	info.spain@moog.com
Sweden	+46 31 680 060	info.sweden@moog.com
Switzerland	+41 71 394 5010	info.switzerland@moog.com
Turkey	+90 216 663 6020	info.turkey@moog.com
United Kingdom	+44 (0) 1684 858000	info.uk@moog.com
USA	+1 716 652 2000	info.usa@moog.com

MOOG

Moog GmbH
Hanns-Klemm-Straße 28
D-71034 Böblingen
Phone +49 7031 622 0
Telefax +49 7031 622 100

www.moog.com/industrial
drives-support@moog.com

Moog is a registered trademark of Moog, Inc. and its subsidiaries.
All quoted trademarks are property of Moog, Inc. and its subsidiaries.
All rights reserved.
© 2015 Moog GmbH

Technical alterations reserved.

The contents of our documentation have been compiled with greatest care and in compliance with our present status of information.

Nevertheless we would like to point out that this document cannot always be updated parallel to the technical further development of our products.

Information and specifications may be changed at any time. For information on the latest version please refer to drives-support@moog.com.

ID no.: CA97555-001, Rev. 4.0

Date: 01/2015

Applicable as from firmware version: V1.25-01

The German version is the original of this Operation Manual.