

商品ID	SKU编码	商品名称	69码	产品型号
41917	BHR6454IN	Xiaomi Beard Trimmer 2C	6934177795237	XMGHT2CLF

小米生态链产品包装图纸

图纸提供单位

宁波朗菲生活电器有限公司

项目名称

Beard Trimmer 2C - 说明书

版本号

V1.0

设计时间

2022.06.22

设计师

高晖

材质工艺要求

材质要求: 105G东帆哑粉纸
尺寸: 72*105mm

制作工序: 印刷+折页

工艺要求: 色相正确、印迹牢固、
套印准确、各色套印
不露杂色, 套印误差 ≤ 0.1mm
如有其它特殊要求, 请写明
模切走位 ≤ ± 0.5mm

颜色及专色: PANTONG Cool Gray 11C

纹理要求



如有其它特殊要求, 请写明

比例 1:1 单位 mm



72*105mm

注: 所有字迹、图标等颜色为
PANTONG Cool Gray 11C

Xiaomi Beard Trimmer 2C
User Manual

Read this manual carefully before use, and retain it for future reference.

Safety Instructions

- The battery in this trimmer is non-replaceable, and do not disassemble the trimmer yourself.
- This trimmer has a built-in rechargeable battery and should never be exposed to the fire or charged, used, or stored in a high temperature environment.
- Do not use this trimmer during charging.
- Do not use this trimmer while bathing or in a humid environment.
- Do not place or insert any foreign objects into this trimmer.
- Do not allow children to play with or use this trimmer.
- Keep packaging materials away from children to prevent suffocation.
- Make sure the blade head is installed correctly before using the trimmer.
- Do not modify or repair this trimmer yourself.
- It is normal for the blade head to become warmer during use.

Warnings

- Do not expose this trimmer or its battery to fire to prevent the battery from exploding or releasing toxic or hazardous substances.
- Do not short-circuit the battery to prevent it from combustion and causing a fire.

Product Overview

Package content: Trimmer, charging cable, beard comb-1 (0.5-10mm and 10.5-20mm), travel pouch, cleaning brush, user manual.

Note: Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Assembly & Disassembly

Installing & removing the beard comb

- To install the beard comb, gently press it into the slot, clips first, until it clicks into place.
- Use your fingers to push the beard comb upward to remove it.

Note: Two beard combs are included with this product, for trimming in the length range of 0.5-10mm and 10.5-20mm. Choose the appropriate beard comb according to your needs.

Installing & removing the blade head

- To install the blade head, align step (A) of the blade head to slot (B) of the trimmer, then firmly press the blade head until it snaps into place.
- Use your thumb to push and remove the blade head while the Xiaomi logo on the back of the trimmer faces upwards.

How to Use

Turning on/off
Press the On/Off button to turn On/Off the trimmer.

Trimming length setting
Turn off the trimmer and turn the knob to adjust the beard comb to the desired length.

Trimming
After adjusting the beard comb to the desired length, turn on the trimmer, and gently move the blade end through your beard in slow, sliding motions.

Note: You can shake off your beard entirely by not attaching a comb, however, care should be taken to avoid scratching your skin.

Travel Lock

This trimmer is equipped with a travel lock to prevent it from accidentally turning on while being transported. To enable the accidental turning on while being transported:

To enable the travel lock
Press and hold the On/Off button for three seconds while the trimmer is turned off until the indicator lights blink three times. This prevents the trimmer from turning on when the button is pressed accidentally.

To disable the travel lock
Press and hold the On/Off button for three seconds until the trimmer is turned on. Press again to turn it off.

Note: When pressing the On/Off button while the trimmer is locked, the indicator lights will blink three times, but the trimmer will not turn on.

The Beard Styles

Battery Level Indication

Description of the battery level indicator status while the trimmer is being used or charged.

Battery Level While Using			
Battery Level	LED1	LED2	LED3
>70%	Blinking	Off	Off
30% - 70%	On	Off	Off
10% - 30%	On	On	Off
<10%	On	On	On

Battery Level While Charging			
Battery Level	LED1	LED2	LED3
>70%	Blinking	Off	Off
30% - 70%	On	Blinking	Off
10% - 30%	On	On	Blinking
<10%	On	On	On

This trimmer does not support plug-and-play. If it does not turn on due to a low battery, it can be quickly charged for 5 minutes to provide sufficient power for one trimming session. It takes about 120 minutes to fully charge the battery. The trimmer can be used for 40 minutes when fully charged. If it is not used for a long time, make sure fully charge it at least once every six months. Cut-off voltage mode: The trimmer will turn Cut-off voltage mode when the battery voltage is lower than 3V. Led1 will blink for five times. The trimmer can be turned on after being charged.

Care & Maintenance

To ensure optimal functionality clean the trimmer after each use.

- Before cleaning the trimmer, make sure it is turned off and not being charged.
- Remove the beard comb and blade head and use the provided cleaning brush to clean out the blade head slot and blade teeth.
- The beard comb and blade head can be rinsed with clean water, please thoroughly dry them after cleaning.
- The body of the trimmer is not washable, you can clean it with a soft dry cloth.
- After drying, it is recommended to add lubricating oil to maintain smooth operation.
- It is recommended to add lubricating oil to the blade before using the device.
- It is normal for the blade to get warmer during use. To add 1 or 2 drops of lubrication oil onto the blade teeth as illustrated below will help keep the blade running normally.
- For optimal trimming performance, lubricate the blade teeth regularly with 1 or 2 drops of lubrication oil as illustrated below. Do not over-lubricate. Wipe away any excess oil from the product surface.

Note: The trimmer service life depends on the frequency of use and whether it is properly maintained. Do not use compressed gas, steel wool, abrasive cleaning agents, corrosive fluids such as gasoline or acetone and sharp objects to clean this trimmer.

Precautions

The blade head needs to be correctly installed before use.

- Make sure the trimmer charging port are completely dry before connecting the adapter.
- Do not wrap the charging cable around the trimmer to avoid damage to the cable.
- Do not use the trimmer when the blade head and blade head while the trimmer is turned off.
- The trimmer needs to be turned off and unplugged while cleaning.
- The body of the trimmer is not waterproof. Keep it dry during its use, cleaning, and storage.
- Do not press the blade teeth into the skin to prevent injuries.
- Stop using the trimmer immediately if it is faulty. Refer to the Troubleshooting section of this manual for assistance or if necessary, contact customer service to request a repair.
- Stop using the trimmer charging cable or plug immediately if it is damaged or stopped functioning normally.
- Fully charge the trimmer at least once every six months. If it has not been used for a long time.
- Fully charge the trimmer at least once every six months. If it has not been used for a long time.
- People (including children) who lack the relevant experience and knowledge, or capacity for civil conduct may not use, clean, or maintain the device without adult supervision and guidance.

Note: 1. It is recommended to use a Xiaomi brand adapter (5 V/2 A) with this trimmer.
2. Turn the beard comb to the lowest position and enable the travel lock when transporting the trimmer.
3. It is recommended to charge, use, and store this trimmer at temperatures between 0°C and 35°C.
4. This trimmer is only suitable for facial hair, nose hair, body hair and eyelid trimming. It is not recommended for hair cutting or sensitive body parts. It is also not suitable for pets.
5. For hygiene reasons, it is recommended that this trimmer is only used by one person.

6. It is recommended to store the trimmer in a cool dry place.
7. Make sure the trimmer is dry before packing it in order to prevent damage to other articles in your luggage.

Troubleshooting

Fault	Possible Causes	Solutions
Trimmer does not work	Blade head is worn or damaged. Trimmer is charged with fault. Low battery level.	Immediately repair it with a genuine blade head. Thoroughly clean the trimmer. Plug the trimmer into the charger to charge it.
Trimmer does not turn on when pressing the button	Travel lock is enabled.	Press and hold the on/off button for three seconds to unlock.
Indicator light does not light up	Circuit failure.	Contact the after-sales service team.
Unable to charge the battery	Trimmer is damaged. Charging cable is damaged.	Contact the after-sales service team. Replace the charging cable. Please refer to the after-sales service team.
Charging ambient temperature is too low or too high	Charge in an environment of between 0°C and 35°C.	

WEEE Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE) as defined in Directive 2002/96/EC, which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, approved by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Specifications

Name	Trimmer
Model	XMGHT2CLF
Power Consumption	3 W
Rated Input	5 V=2 A
Charging Time	About 2 hours
Usage Time	About 15 hours
Comb Settings	40 lengths

Manufactured by: Ningbo Lofans Home Appliances Co., Ltd. 18 Mill Equipment Company, Room 22-3, Linyue Building, Beiliao Road, Cui City, 315300, Zhejiang, China.
Imported by: Xiaomi Technology India Pvt. Ltd., Orchid (Block E), Embassy Tech Village, Oneers Road, Marathahalli, Bengaluru, Karnataka - 560073, Karnataka.
For Consumer Complaints Contact: Manager, Customer Care, Xiaomi Technology India Pvt. Ltd., Ground Floor, A&H Infinite, By 10/13, Krishna Reddy Industrial Area, 7th Mile, Hosur Road, Bangalore - 560096, Karnataka, Phone No. 1800 1030286, Email: service.in@xiaomi.com. For further information, please go to www.mi.com User Manual Version V1.0