

MINI AIR EASi 2

air cushion system

使用手册

HANDBOOK

服务热线：0592-6271616

MINI AIR EASi 2用户手册 ... 1

基本参数

电 源：AC110V-220V；50-60Hz

额定功率：120W

运行速度：8m/min

设备重量：5kgs

外观颜色：灰色

外形尺寸：405 × 220 × 195mm

出厂原装配件

拆开外箱后，请确认箱内有以下配件：



扳手组一套



隔热布（2条）



电源线（1条）

MINI AIR EASi 2用户手册 ... 2

操作说明

A、插上电源线，按下开关至“I”档位，接通电源。



图一

B、设备正常通电后，控制面板的液晶显示器进入主界面：



EAB 表示设备编号

图二

C、主界面停留5秒后，自动进入操作界面



S.T 表示温度大小


FAN 表示风量大小

图三

D、安装卷膜

a) 管芯套入卷膜支撑杆

注：将有进气口一侧朝下套入

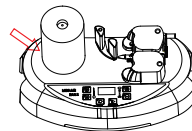

图四

HANDBOOK

TEL: +86-400-700-6166

Technical Data

Power: 110V-220V

Rated: 90W

Speed: 3m/min

Net Weight: 2.5kgs

Color: White

Dimension: 405×220×195mm

The factory original accessories

When open the box, please make sure the following accessories are in the box:



扳手组一套




隔热布（2条）



电源线（1条）

Operating Instructions

- A. Connect the power line and switch on, the power light will illuminate. (picture 1)

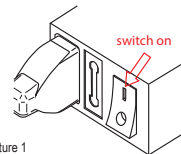

picture 1

- B. You will automatically enter the start page on the control panel.



EA refer to device ID

picture 2

- C. After approx. 5 seconds the system will automatically enter the main page.




S.T refer to Temperature
FAN refer to Air volume

picture 3

- D. Installation of film roll

- a) Put the film roll on the roll holder. (picture 4)


Note: the black line side should be placed facedown.

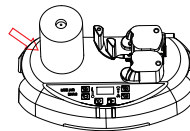

picture 4

b) 卷膜绕过导膜杆，如（图五）所示。

c) 将卷膜套入充气管，直至硅胶轮处，按住设备操作面板上黄色的“IN/OUT”（进退膜键）将卷膜从气管内拉出。如（图五）所示。

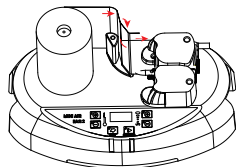

图五

参数设置



图六

进膜键

启动/暂停键

降低温度

降低风量

风量与温度参数设置参考值

推荐参数

Wrapper	风量
葫芦球	38
大双排	30
小双排	35
四连排	38
大波浪	40
小波浪	40
Filler	风量
200x100mm	17
200x130mm	16
200x150mm	16
200x200mm	15



设备操作 维护视频


电子说明书
更多推荐参数

服务热线：0592-6271616

Better Cushion
Better Protection


www.amesonpak.com

- b) Roll film bypasses S line support shaft (picture 5)
- c) When the film reached the roller, press still (hold on) the IN/OUT button, the film will go through itself.
- d) Check whether the film is set into the blowing port, and press the "START/STOP" button to start work. (picture 5)

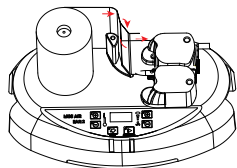

picture 5

Data Setting _

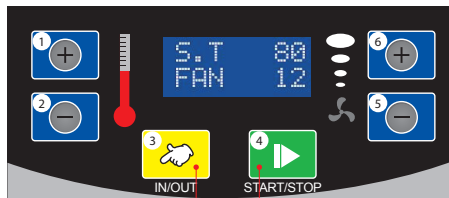

picture 6

in/out

Start/Stop

Adjust the temperature using the + and – button on the left side of the panel.

Adjust the air volume using the + and – button on the right side of the panel.

Recommended parameter

Wrapper	FAN
bubbles	38
bubble wave	38
tube wave	38
tube multi	38
tube small	35
tube large	30
Filler	FAN
200x100mm	17
200x130mm	16
200x150mm	16
200x200mm	15



TEL: +86-400-700-6166

Better Cushion
Better Protection

www.cushionpak.com

Version 2019