

BFBS TechniSat Quick Start Guide

Unpacking



Check that your set top box (STB) has all the following items:

- Set top box
- Remote control (2 AAA batteries supplied separately)
- Mains power unit with two alternative plug adapters
- HDMI signal cable

In addition, you will be supplied with a 'Conditional Access Module' (CAM) and a BFBS Viewing Card. The card and CAM must only be used in the STB for which they are issued.




Connections

The mains power is supplied with an adapter for UK style "13 amp" sockets and one for European type 2 pin plugs. Fit the required one by engaging the end away from the power outlet cable then pivot it down until it locks in place.





Rooms equipped for using an STB will have a cable feed with an "F type" screw connector. Ensure the centre conductor protrudes slightly as shown below, guide it into the dish connector on the rear of the STB and screw it in place.

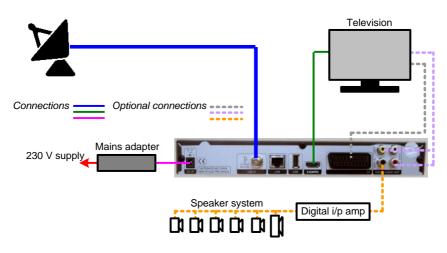



If your television has an HDMI connection available, this is the one to choose. SCART and RCA phono connections provide alternatives but you must then use the STB remote control MENU button as described in the User Guide to make settings changes.

CAM and viewing card

Towards the right end of the set top box is a flap covering the slot for the Conditional Access Module (CAM). The CAM holds a viewing card.

The CAM and/or viewing card must both be pushed fully home. Make sure you place them the way round as shown. The large BFBS logo on the viewing card is on the underside.



Do not attempt to use the Viewing Card/CAM in any unit except the one for which it was supplied. Cards and CAMS should never be removed unless instructed by the support team at BFBS and never touch exposed contact pads. The CAM is removed by pressing the lever at the right of the CAM slot then once it is released, pulling it straight outwards.

If contacting BFBS for support purposes, it is important to identify your STB as being the TechniStar S1 version. You will also be asked for viewing card number (the 11 digit number above the bar code) and also the CAM identifier which is 14 characters.



Card enabling

BFBS television broadcasts are encrypted to prevent programmes being watched by non-entitled viewers. When a Viewing Card/CAM is issued, the card is enabled but it can take up to <u>two hours</u> for the card to begin working.

Until that happens you cannot watch TV programmes and the screen will show this "not authorised" message.

During this time, the RADIO mode allows you to check that the audio connections are all OK.



More information

If you need more help, consult the BFBS/TechniSat User Guide supplied with your STB. This and further help can be found by visiting the website:

www.bfbs.com/tvhelp