

# User Manual

020-000883-03

## HS Series D13HD-HS/D13WU-HS



**CHRISTIE®**

**The CD included with this printed manual contains an electronic copy in English. Please read all instructions before using or servicing this product.**

手册中包含的光盘，带有着中文的电子副本，使用或维修本产品前，请仔细查阅所有的指示。

**Le DC fourni avec ce manuel imprimé contient une copie électronique en français. S'il vous plaît lire toutes les instructions avant d'utiliser ou de réparer ce produit.**

**Das CD, das mit diesem gedruckten Handbuch eingeschlossen ist, enthält eine elektronische Kopie auf in deutscher Sprache. Vor der Anwendung oder der Instandhaltung dieses Produktes lesen Sie bitte alle Anweisungen.**

**Il CD fornito con il manuale stampato contiene una copia elettronica in lingua italiano. Si prega di leggere tutte le istruzioni prima di utilizzare o riparare questo prodotto.**

この印刷されたマニュアルに同梱されております CD には、日本語での説明書が入っております。この製品を使用あるいは修理点検される際に、ご参照下さい。

**매뉴얼과 함께 포함되어 있는 CD 에는 한글로 된 전자사본을 포함하고 있습니다 . 본 제품을 사용 혹은 서비스하기 전에 모든 지침 사항들을 읽어 보시기 바랍니다 .**

Поставляемый в комплекте с документацией компакт-диск (CD) содержит электронную копию руководства пользователя на русском языке. Перед началом использования изделия или проведения сервиса пожалуйста прочтите все инструкции изложенные в руководстве.

**El DC incluido con este manual impreso contiene una copia electrónica en español. Por favor, lea todas las instrucciones antes de usar o dar servicio a este producto.**

Компакт диск, що постачається з цим друковане керівництво містить електронну копію українською мовою. Будь ласка, прочитайте всі інструкції перед використанням або обслуговуванням цього продукту.

**O CD incluído com o impresso livro contém um eletrônico cópia em Português. Por favor lido todas as instruções antes de usar ou prestando serviço esse resultado.**

## NOTICES

### COPYRIGHT AND TRADEMARKS

Copyright © 2016 Christie Digital Systems USA Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

### REGULATORY

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.

**WARNING!** Changes or modifications not expressly approved by Christie could void the user's authority to operate the product.

#### FOR COMMERCIAL USE ONLY - POUR USAGE COMMERCIAL UNIQUEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING 2 CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING ANY INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS A DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.


CET APPAREIL NUMÉRIQUE DE CLASSE A EST CONFORME AUX NORMES DÉFINIES DANS LES RÉGLEMENTATIONS CANADIENNES SUR LES APPAREILS CAUSANT DES INTERFÉRENCES RADIO (CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS, ICES-003, CLASS A).

声明 此为 A 级产品，在生活环境中，该产品可能会造成无线干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

이 기기는 업무용 (A 급) 으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

### GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material.

The product is designed and manufactured with high-quality materials and components that can be recycled and reused. This symbol  means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Canadian manufacturing facility is ISO 9001 and 14001 certified.

### GENERAL WARRANTY STATEMENTS

For complete information about Christie's limited warranty, please contact your Christie dealer. In addition to the other limitations that may be specified in Christie's limited warranty, the warranty does not cover:

- Damage occurring during shipment, in either direction.
- Problems caused by combination of the product with non-Christie equipment, such as distribution systems, cameras, video tape recorders, etc., or use of the product with any non-Christie interface device.
- Damage caused by misuse, improper power source, accident, fire, flood, lightning, earthquake or other natural disaster.
- Damage caused by improper installation/alignment, or by product modification, if by other than a Christie authorized repair service provider.
- For LCD projectors, the warranty period specified applies only where the LCD projector is in "normal use". "Normal use" means the LCD projector is not used more than 8 hours a day, 5 days a week. For any LCD projector where "normal use" is exceeded, warranty coverage under this warranty terminates after 6000 hours of operation.
- Failure due to normal wear and tear.

## **PREVENTATIVE MAINTENANCE**

**Preventative maintenance is an important part of the continued and proper operation of your product. Please see the Maintenance section for specific maintenance items as they relate to your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, will void the warranty.**



# Content

|   |           |
|---|-----------|
| <b>Safety .....</b>                                 | <b>8</b>  |
| Laser safety warnings .....                         | 9         |
| Laser label .....                                   | 10        |
| Light intensity hazard distance .....               | 11        |
| <b>Introduction .....</b>                           | <b>12</b> |
| Projector components .....                          | 12        |
| Front view .....                                    | 12        |
| Rear view .....                                     | 13        |
| Left view .....                                     | 14        |
| Right view .....                                    | 15        |
| Built-in keypad .....                               | 15        |
| Input/Output (I/O) panel .....                      | 16        |
| IR remote keypad .....                              | 17        |
| LED status indicators .....                         | 19        |
| Status LED .....                                    | 19        |
| Shutter LED .....                                   | 19        |
| <b>Installation .....</b>                           | <b>20</b> |
| Connecting to a computer .....                      | 21        |
| Connecting to video equipment .....                 | 22        |
| Turning the projector on .....                      | 23        |
| Turning the projector off .....                     | 24        |
| Adjusting the projector position .....              | 25        |
| Portrait mode orientation .....                     | 26        |
| Calculating the lens offset .....                   | 26        |
| WUXGA projectors .....                              | 27        |
| HD Projectors: .....                                | 28        |
| Removing and installing the lens .....              | 29        |
| Installing the fuse .....                           | 30        |
| Cleaning or replacing the filter .....              | 31        |
| Installing the ceiling mount .....                  | 32        |
| Installing the projector in the rigging frame ..... | 32        |
| Setup, alignment and test procedures .....          | 33        |

|  |           |
|--|-----------|
| <b>Operation .....</b>                             | <b>34</b> |
| Size and Position menu .....                       | 35        |
| Geometry correction .....                          | 37        |
| Image Settings menu .....                          | 39        |
| Configuration Menu .....                           | 42        |
| Color matching .....                               | 46        |
| Light Source menu .....                            | 48        |
| Status menu .....                                  | 49        |
| For DHD models .....                               | 49        |
| For DWU models .....                               | 50        |
| Input Switching & PIP menu .....                   | 51        |
| PIP/PBP layout and size .....                      | 52        |
| Language menu .....                                | 53        |
| Test Pattern menu .....                            | 53        |
| Web user interface .....                           | 53        |
| Logging on to the web user interface .....         | 54        |
| Main tab-General .....                             | 55        |
| Main tab-Status .....                              | 55        |
| Main tab-Lens .....                                | 56        |
| Network .....                                      | 57        |
| Tools .....  | 60        |
| Administrator Page .....                           | 60        |
| About Page .....                                   | 60        |
| Christie Presenter .....                           | 61        |
| Connecting to the Projector .....                  | 61        |
| Installing the Christie Presenter software .....   | 62        |
| Using the Christie Presenter .....                 | 64        |
| Connecting and searching the network display ..... | 65        |
| Selecting the display region .....                 | 66        |
| Configuring Christie Presenter .....               | 67        |
| Managing all connected network displays .....      | 68        |
| Operating the card reader .....                    | 69        |
| <b>Troubleshooting .....</b>                       | <b>72</b> |
| No image appears on screen .....                   | 72        |
| Incorrectly displayed image .....                  | 72        |
| Presentation is not displayed .....                | 73        |
| Unstable or flickering images .....                | 74        |

|   |    |
|---|----|
| Vertical flickering bar . . . . .       | 74 |
| Image is out of focus . . . . .         | 74 |
| Image is stretched . . . . .            | 74 |
| Image is not the correct size . . . . . | 75 |

## **Specifications . . . . . 76**

|   |    |
|---|----|
| Inputs . . . . .  | 77 |
| PIP/PBP compatibility . . . . .                                   | 81 |
| Key features . . . . .  | 81 |
| List of components . . . . .                                      | 82 |
| Physical specifications . . . . .                                 | 83 |
| Physical operating environment . . . . .                          | 84 |
| Power requirements . . . . .                                      | 84 |
| Warnings . . . . .  | 84 |
| Regulatory . . . . .  | 85 |
| Safety . . . . .  | 85 |
| Laser safety . . . . .  | 86 |
| Approvals . . . . .   | 86 |
| Electro-Magnetic Compatibility . . . . .                          | 86 |
| Environmental . . . . .   | 86 |
| Federal Communications Commission (FCC) warning . . . . .         | 86 |
| Christie Laser Projection System Installation Checklist . . . . . | 87 |
| On-screen display tree . . . . .                                  | 89 |

# Safety

Read through this document in its entirety and understand all warnings and precautions before attempting to operate the projector.



**Warning!** Failure to comply with the following could result in death or serious injury.

- Do not look into the projector lens when the laser is on. The bright light may result in permanent eye damage.
- To reduce the risk of fire or electric shock, do not expose this projector to rain or moisture.
- Do not open or disassemble the projector as this may cause electric shock.
- All installation and maintenance procedures must be performed by a Christie qualified technician.
- Keep all combustible material away from the concentrated light beam of the projector.
- Position all cables where they cannot contact hot surfaces or be pulled or tripped over.
- Always power down the projector and disconnect all power sources before servicing or cleaning.
- Use a soft cloth moistened with a mild detergent to clean the display housing.
- Disconnect the power plug from the AC outlet if the product is not being used for an extended period of time.
- Only use the AC power cord supplied. Do not attempt operation if the AC supply and cord are not within the specified voltage and power range for your region.
- Remove the lens plug from the lens opening in the projector before installing the lens. Retain the lens plug to protect the optical components from dust and debris during transport.
- Do not block the ventilation slots and openings on the projector.
- Do not use abrasive cleaners, waxes, or solvents to clean the projector.
- Do not allow anything to rest on the power cord.
- A minimum of two people or appropriately rated lift equipment is required to safely lift, install, or move the product.
- Always install safety straps when the frame and projector are installed overhead.




**Caution!** Failure to comply with the following could result in minor or moderate injury.

- Only Christie qualified technicians are permitted to open product enclosures.
- FIRE HAZARD! Do not use a power cord or that appears damaged.
- FIRE OR SHOCK HAZARD! Do not overload power outlets and extension cords.

# Laser safety warnings

This product is classified as CLASS 1 LASER PRODUCT - RISK GROUP 3 according to IEC 60825-1:2014 and IEC 62471:2006.



IEC 60825-1:2014 CLASS 1 LASER PRODUCT RISK GROUP 3.  
Warning  
Possibly hazardous optical radiation emitted from this product.  
Do not look at operating beam.  
Permanent eye damage may result.  
No direct exposure to beam shall be permitted.  
Not for household use.

---

IEC 60825-1:2014 PRODUIT LASERDE CLASSE 1 GROUPE DE RISQUE 3.  
AVERTISSEMENT  
Le rayonnement optique dangereux potentiellement émis par ce produit.  
Ne pas regarder directement sur le faisceau.  
Ce peut provoquer des dommages permanents aux yeux.  
Aucun faisceau direct d'exposition ne sera autorisé.  
Ne pas pour l'usage domestique.

---

IEC 60825-1:2014 1类激光产品 RG3危险等级。  
注意  
此产品可能会产生危险光辐射。请勿直视操作光束，可能对眼睛造成永久性伤害。应避免直接暴露于激光下。  
非家居用。


---

IEC 60825-1:2014 1등급 레이저 제품 위험 그룹 3.  
경고  
이 제품으로부터 위험한 광선이 방사될 수 있음 작동 중 광선을 정면으로 바라보지 마시오 영구적인 안구 손상을 유발할 수 있음  
광선에 직접적인 노출을 피하십시오  
가정용으로 사용하지 마시오

---

IEC 60825-1:2014 クラス1レーザー製品リスクグループ3。  
警告  
本製品より危険となりうる 光放射あり。動作中のビームを見ないこと。  
眼に永久に残る障害をもたらす恐れあり。  
ビームに対する直接被曝のなきこと。  
家庭用途の使用なきこと。
 
## Laser label



CLASS 1 LASER PRODUCT IEC 60825-1:2014



**Warning!** Failure to comply with the following could result in death or serious injury.

- This product must be installed within a restricted access location not accessible by the general public.
- Only personnel who are trained on the precautions for the restricted access location can be granted entry to the area.
- PERMANENT/TEMPORARY BLINDNESS HAZARD! Operators must control access to the beam within the hazard distance or install the product at the height (greater than or equal to 3.0 m from the floor to the beam) that prevents exposure of the spectators' eyes within the hazard distance.
- Possibly hazardous optical radiation emitted from this product. (Risk group 3)
- This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the projector.
- Any operation or adjustment not specifically instructed in the User manual creates the risk of hazardous laser radiation exposure.
- Do not open or disassemble the projector as this may cause damage from exposure of laser radiation.
- PERMANENT/TEMPORARY BLINDNESS HAZARD! No direct exposure to the beam must be permitted. RG3 IEC 62471:2006.
- Install the product so users and the audience cannot enter the restricted area at eye level.
- Follow the control, adjustment, or operation procedures to avoid damage or injury from exposure of laser radiation.
- The instructions for the assembly, operation, and maintenance include clear warnings concerning precautions to avoid possible exposure to hazardous laser radiation.
- Installing or replacing a lens must be done by a Christie qualified service technician to avoid exposure to dangerous emission levels.
- Not for household use.

## Light intensity hazard distance


This projector has been classified as Risk Group 3 per the IEC62471:2006 standard due to possible hazardous optical and thermal radiation being emitted.



Warning! Failure to comply with the following could result in serious injury.

- PERMANENT/TEMPORARY BLINDNESS HAZARD! No direct exposure to the beam must be permitted. RG3 IEC 62471-5:2006.
- PERMANENT/TEMPORARY BLINDNESS HAZARD! Operators must control access to the beam within the hazard distance or install the product at the height (greater than or equal to 3.0 m from the floor to the beam) that prevents exposure of spectators' eyes within the hazard distance.
- EXTREME BRIGHTNESS! Do not place reflective objects in the product light path.
- Do not stare into beam when the projector is on. The bright light may result in permanent eye damage.
- The use of the projector with lenses PN: 140-109101-XX, 140-110103-XX, 140-114107-XX, and 140-115108-XX, where the throw ratio is less than or equal to 2.0:1 result in risk group 2 emissions from the projector. No hazard zone (Zone A) has been identified for use of the projector with these lenses. Precautions must be taken to follow the warnings listed above to avoid serious injury.

The following diagram and table shows the zones for optical and thermal radiation hazard distances:

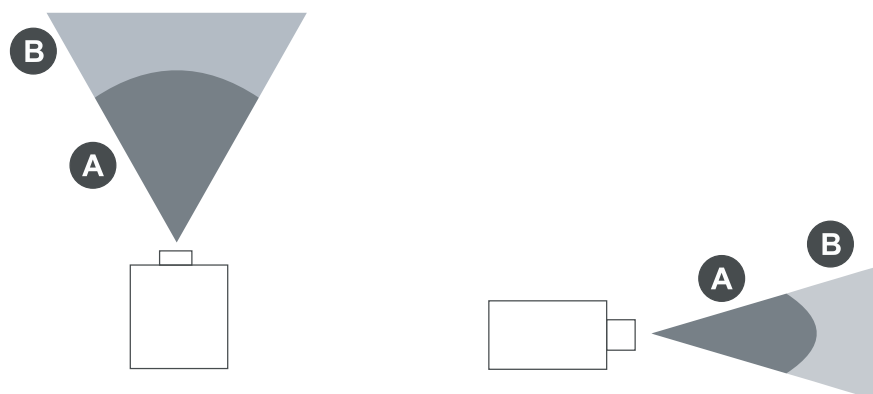

- Zone A — The light intensity may cause eye damage after a momentary or brief exposure (before a person can avert his or her eye away from the light source). The light may cause skin burns to occur.
- Zone B — The light intensity does not pose a hazard due to the eye's aversion response to bright light. However, staring directly into the light may still be a hazard.

| Projection lens              | Part number   | Zone A (m) | Zone B (m) |
|------------------------------|---------------|------------|------------|
| Optional lens TR 1.2~1.5     | 140-109101-XX | 0          | 0+         |
| STD lens TR 1.5~2.0          | 140-110103-XX | 0          | 0+         |
| Optional lens TR 2.0~4.0     | 140-111104-XX | 1.0 to 2.1 | 2.1+       |
| Optional lens TR 4.0~7.2     | 140-116109-XX | 2.7 to 4.1 | 4.1+       |
| Optional lens TR 0.84 ~ 1.02 | 140-114107-XX | 0          | 0+         |
| Optional lens TR 1.02 ~ 1.36 | 140-115108-XX | 0          | 0+         |

# Introduction


The HS Series is a high brightness, high-resolution video graphics one-chip laser-based projector. The projector is available in HD and WUXGA resolutions and uses Digital Light Processing (DLP®) technology from Texas Instruments. It is primarily designed for fixed installation and secondary applications including rental-staging and LBE (Location Based Entertainment). This product is used for professional applications and is not for domestic use.

## Projector components

Identify the main components of the projector.

### Front view

Identify the main components on the front of the projector.

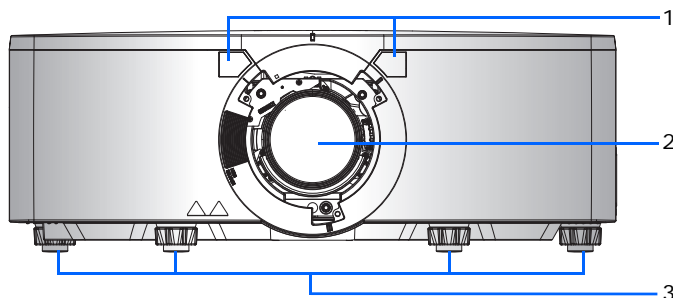


| ID | Part name        | Description   |
|----|------------------|---|
| 1  | Front IR sensors | Receives signals from the IR remote keypad. Keep the signal path to the sensor unobstructed for uninterrupted communication with the projector. |
| 2  | Projection lens  | Allows automated lens control and adjustment: vertical and horizontal offsets, zoom, and focus.   |
| 3  | Adjustable feet  | Raises or lowers the feet to level the projector.   |



## Rear view



Identify the main components on the rear of the projector.

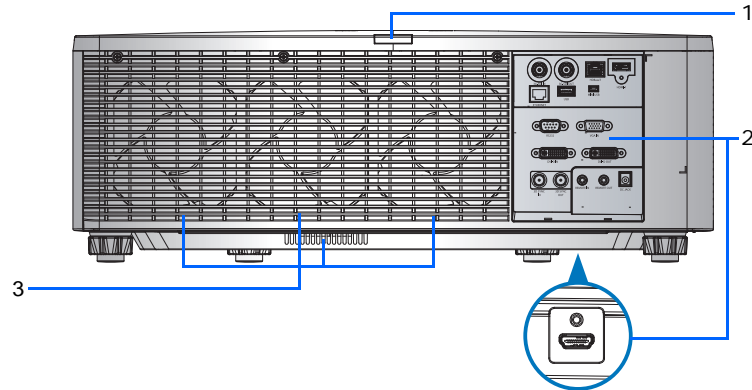

| ID | Part name                   | Description   |
|----|-----------------------------|---|
| 1  | Rear IR sensor              | Receives signals from the IR remote keypad. Keep the signal path unobstructed for uninterrupted communication with the projector. |
| 2  | Input/Output (I/O) panel    | Connects the projector to external devices.   |
| 3  | Cooling air vents (exhaust) | Provides cooling to the projector. Keep these vents unobstructed to prevent the projector from overheating.                       |

## Left view


Identify the main components on the left side of the projector.

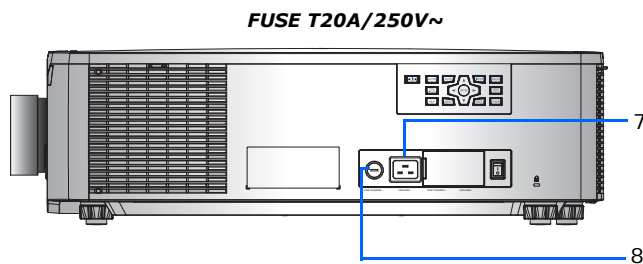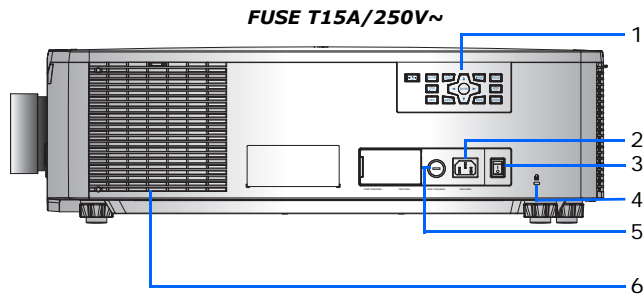

| ID | Part Name                  | Description   |
|----|----------------------------|---|
| 1  | Built-in keypad            | Controls the projector.   |
| 2  | AC input                   | Connects to the supplied power adapter (200 to 240V~).  |
| 3  | Power button               | Powers the projector on or off.   |
| 4  | Kensington lock            | Secures the projector to counter tops, tables, and so on.   |
| 5  | Fuse                       | FUSE T15A/250V~.  |
| 6  | Cooling air vents (intake) | Provides cooling to the projector. Keep these vents unobstructed to prevent the projector from overheating. |
| 7  | AC input                   | Connects to the supplied power adapter (100V to 120V~).   |
| 8  | Fuse                       | FUSE T20A/250V~.  |

## Right view


Identify the main component on the right side of the projector.

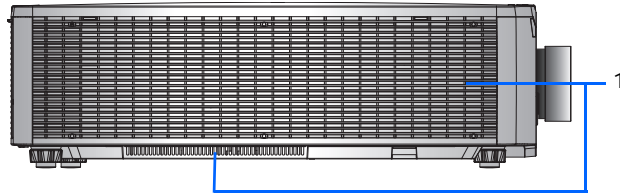

| ID | Part Name                  | Description   |
|----|----------------------------|---|
| 1  | Cooling air vents (intake) | Provides cooling to the projector. Keep these vents unobstructed to prevent the projector from overheating. |

## Built-in keypad

The built-in keypad controls the projector.

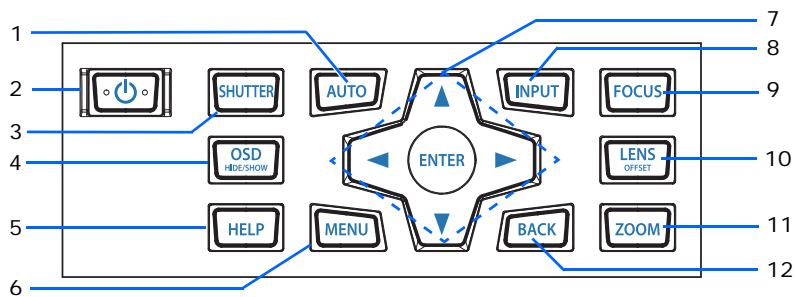


| ID | Part Name  | Description  |
|----|------------|--|
| 1  | Auto       | Automatically optimizes an image.                        |
| 2  | Power      | Turns the projector on or off.                           |
| 3  | Shutter    | Displays or blanks the video image.                      |
| 4  | OSD        | Hides or shows the on-screen display (OSD) menus.        |
| 5  | Help       | Displays the instructions for source connection.         |
| 6  | Menu       | Displays the menus.                                      |
| 7  | Arrow keys | Adjusts a setting up or down, or navigate within a menu. |
| 8  | Input      | Selects an input for the main or PIP/PBP image.          |
| 9  | Focus      | Adjust the focus.  |
| 10 | Lens       | Adjusts the lens vertical or horizontal offset setting.  |

| ID | Part Name | Description   |
|----|-----------|---|
| 11 | Zoom      | Adjusts the zoom.   |
| 12 | Back      | Returns to the previous level or exits the menus if at top level. |

## Input/Output (I/O) panel

Identify the components of the Input/Output (I/O) panel.

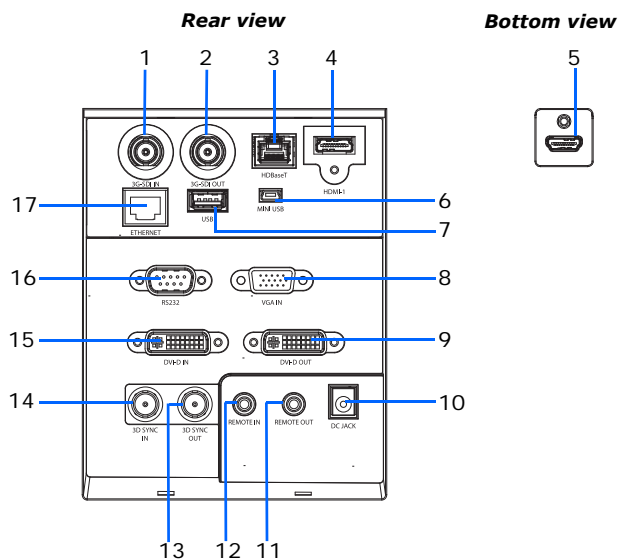


| ID | Connector name | ID | Connector name |
|----|----------------|----|----------------|
| 1  | 3G-SDI IN      | 10 | DC JACK        |
| 2  | 3G-SDI OUT     | 11 | REMOTE OUT     |
| 3  | HDBaseT        | 12 | REMOTE IN      |
| 4  | HDMI-1         | 13 | 3D SYNC OUT    |
| 5  | HDMI-2         | 14 | 3D SYNC IN     |
| 6  | MINI USB       | 15 | DVI-D IN       |
| 7  | USB            | 16 | RS232          |
| 8  | VGA IN         | 17 | ETHERNET       |
| 9  | DVI-D OUT      |    |                |

## IR remote keypad

The IR remote keypad communicates with the projector by way of wireless communications.

Use a cable length of 20 m or less. If the length of cable exceeds 20 m, the IR remote keypad may not work correctly.

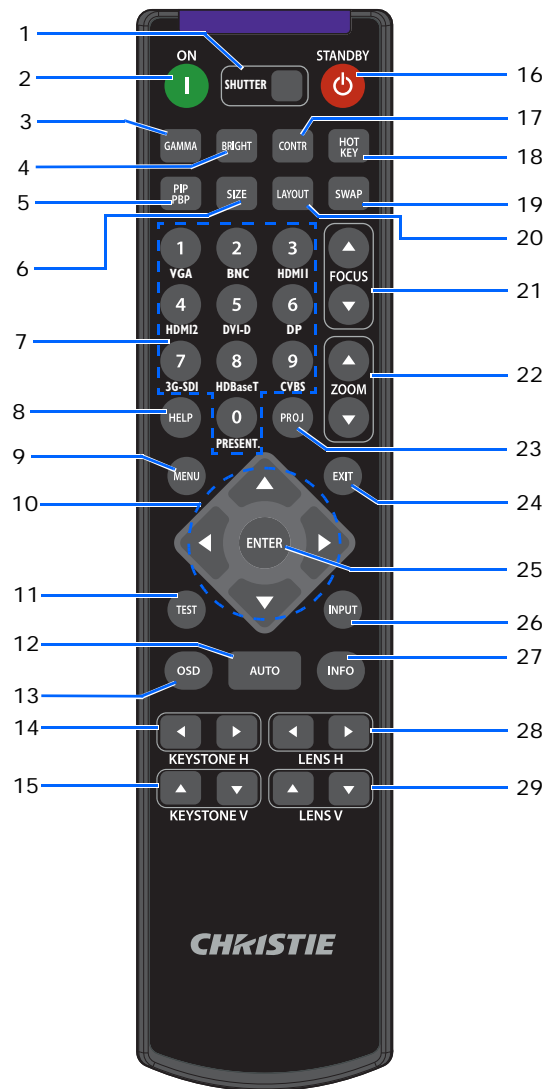

| ID | Part Name | Description                               |
|----|-----------|---|
| 1  | SHUTTER   | Displays or blanks the video image.       |
| 2  | Power on  | Turns the projector on.                   |
| 3  | Gamma     | Adjusts the mid-range levels.             |
| 4  | Bright    | Adjusts the amount of light in the image. |
| 5  | PIP/PBP   | Turns PIP/PBP on or off.                  |

| ID | Part Name   | Description   |
|----|-------------|---|
| 6  | Size        | Adjusts the PIP/PBP size.   |
| 7  | Number Keys | Enter a number, such as a channel, value, and so on. The on-screen display indicates if a function is not supported.  |
| 8  | Help        | Displays the instructions for source connection.  |
| 9  | Menu        | Displays the menus.   |
| 10 | Arrow Keys  | Adjusts a setting up or down to navigate within a menu.   |
| 11 | Test        | Displays a test pattern.  |
| 12 | Auto        | Automatically optimizes an image.   |
| 13 | OSD         | Use to hide or show on-screen display (OSD) menus.  |
| 14 | Keystone H  | Adjusts the horizontal keystone.  |
| 15 | Keystone V  | Adjusts the vertical keystone.  |
| 16 | Standby     | Turns the projector off.  |
| 17 | Contrast    | Adjusts the difference between dark and light.  |
| 18 | Hot key     | Selects your preset key quickly.  |
| 19 | Swap        | Swaps the main and PIP/PBP images.  |
| 20 | Layout      | Adjusts the PIP/PBP layout.   |
| 21 | Focus       | Adjusts the focus to improve image clarity as required.   |
| 22 | Zoom        | Adjusts the zoom to achieve a required image size.  |
| 23 | Proj        | Changes the IR remote keypad ID. <ul style="list-style-type: none"> <li>• To assign an ID, press <b>Proj</b> + &lt;1 to 9&gt;.</li> <li>• To return to the universal IR remote ID, press <b>Proj</b> + <b>0</b>.</li> </ul> |
| 24 | Exit        | Returns to previous level or exit menus if at top level.  |
| 25 | Enter       | Selects a highlighted menu item, or changes or accepts a value.   |
| 26 | Input       | Selects an input for the main or PIP/PBP image.   |
| 27 | Info        | Displays the source image information.  |
| 28 | Lens H      | Adjusts the position of the image horizontally.   |
| 29 | Lens V      | Adjusts the position of the image vertically.   |

## LED status indicators

LEDs are defined below.

### Status LED

Identify the LED state colors and meaning.

| LED Status        | Projector State   |
|-------------------|---|
| Off               | AC power is off (without AC plugged in).  |
| Green (flashing)  | Projector is in startup or cool down mode.  |
| Green (solid)     | System is operating normally.   |
| Blue (flashing)   | Projector is cooling down.  |
| Blue (solid)      | AC has been applied, projector is in standby mode.  |
| Yellow (flashing) | A problem exists with the projector that does not cause it to shut down.<br>Examples of warnings include: filter needs changing, one of the pumps is damaged, or a fan is operating at full speed due to over temperature of LD driver. |
| Yellow (solid)    | The end user is turning off the projector while it is in a warning state.   |
| Red (flashing)    | An error with the projector exists that has caused or may inevitably cause it to shut down.<br>Examples of errors include: fan failure, over temperature, wrongly installed filter, color wheel (CW) failure.                           |
| Red (solid)       | The end user is turning off the projector while it is in an error state.  |
| White (flashing)  | Projector is in a flash (LAN) update state.   |

### Shutter LED

Identify the shutter LED state colors and meaning.

| LED Status      | Projector State   |
|-----------------|---|
| Off             | Projector is on and an image is displayed. Shutter is open. |
| Magenta (solid) | Projector is on and the image is blank. Shutter is closed.  |

# Installation



**Warning!** Failure to comply with the following could result in death or serious injury.

- This product must be installed within a restricted access location not accessible by the general public.
- Only personnel who are trained on the precautions for the restricted access location can be granted entry to the area.
- PERMANENT/TEMPORARY BLINDNESS HAZARD! Operators must control access to the beam within the hazard distance or install the product at the height (greater than or equal to 3.0 m from the floor to the beam) that prevents exposure of the spectators' eyes within the hazard distance.
- Possibly hazardous optical radiation emitted from this product. (Risk group 3)

For more information, see [Light intensity hazard distance](#) on page 11.


Installations shall be completed by trained professional installers who are familiar with the product, associated hazards and laser safety precautions. The area shall be cleared of all non-essential personnel during installation, setup and alignment of the projector. Verify safe installation of the projector by completing the [Christie Laser Projection System Installation Checklist](#) on page 87 and by following the [Setup, alignment and test procedures](#) on page 33.

Learn how to install, connect, and optimize the projector display.



## Connecting to a computer

Learn what cables/connectors that may be used to connect to various devices.

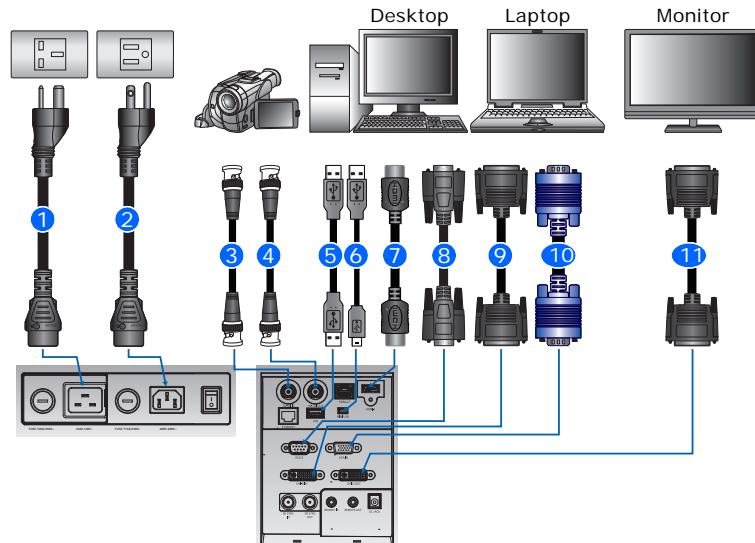


| ID | Connector name   | ID | Connector name        | ID | Connector name  |
|----|--|----|-----------------------|----|-----------------|
| 1  | Power Cord (100-120V). Power cord (100-120V) rated for North America and Japan.  | 5  | USB type A cable      | 9  | DVI-D in cable  |
| 2  | Power Cord (200 to 240V). Power cord (200 to 240V) rated for North America, UK, EU, Russia, Korea, India, Australia/Nz, South Africa, and Argentina. | 6  | USB type B Mini cable | 10 | VGA in cable    |
| 3  | 3G-SDI In with BNC cable + Camcorder   | 7  | HDMI cable            | 11 | DVI-D out cable |
| 4  | 3G-SDI Out with BNC cable + Camcorder  | 8  | RS232 cable           |    |                 |



- Due to the difference in applications for each country, the accessories required in some regions may differ from those shown.
- This diagram is for illustrative purposes only and does not indicate that these accessories are supplied with the projector.

## Connecting to video equipment

Learn what cable/connectors may be used to connect to various devices.

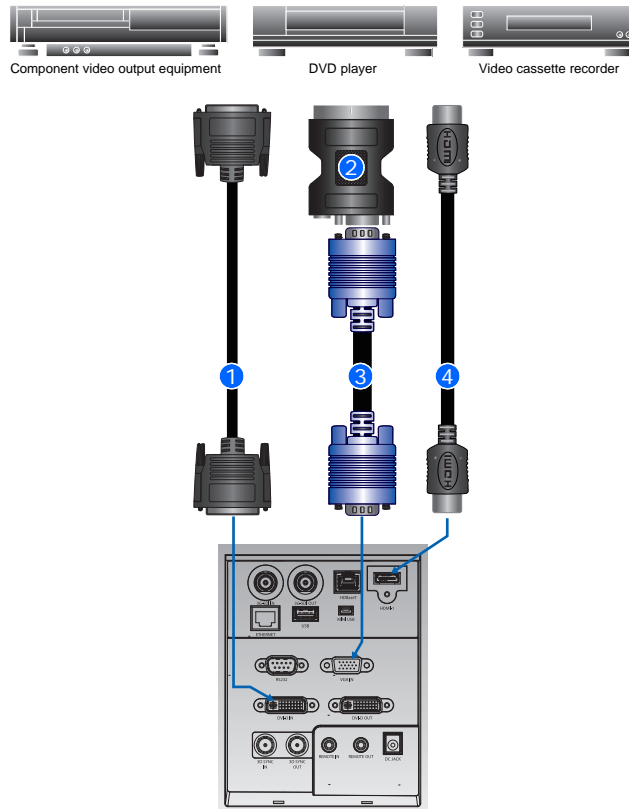

| Ind. | Connector name   | Ind. | Connector name |
|------|------------------|------|----------------|
| 1    | DVI-D IN Cable   | 3    | VGA IN Cable   |
| 2    | VGA to Component | 4    | HDMI Cable     |



- Due to the difference in applications for each country, the accessories required in some regions may differ from those shown.
- This diagram is for illustrative purposes only, and does not indicate that these accessories are supplied with the projector.


## Turning the projector on

The projector cables must be securely connected before turning the power on.



**Warning!** PERMANENT/TEMPORARY BLINDNESS HAZARD! No direct exposure to the beam must be permitted. RG3 IEC 62471:2006.

1. Ensure the correct power input has been selected.

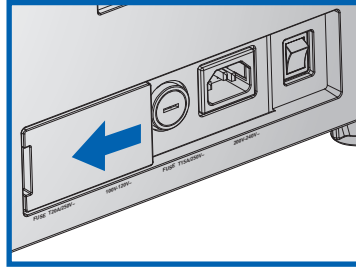

| Condition | Power Input | AC Inlet selected | Projector Behavior  | Applicable Regions   |
|-----------|-------------|-------------------|---|--|
| 1         | 100-120V    | 100-120V          | Full power (100%)   | <ul style="list-style-type: none"> <li>• North America</li> <li>• Japan</li> </ul>   |
| 2         | 100-120V    | 200-240V          | <ul style="list-style-type: none"> <li>• Warning message appears on screen</li> <li>• ECO 2 mode (50% power)</li> </ul> |  |
| 3         | 200-240V    | 100-120V          | <ul style="list-style-type: none"> <li>• Warning message appears on screen</li> <li>• ECO 2 mode (50% power)</li> </ul> |  |
| 4         | 200-240V    | 200-240V          | Full power (100%)   | <ul style="list-style-type: none"> <li>• North America</li> <li>• UK</li> <li>• EU</li> <li>• Russia</li> <li>• Korea</li> <li>• India</li> <li>• Australia/Nz</li> <li>• South Africa</li> <li>• Argentina</li> </ul> |



The Power button on the built in keypad is illuminated when the power cables are connected.

2. Ensure the lens has been installed in the projector by a Christie qualified service technician.



**Warning!** Failure to comply with the following could result in death or serious injury.

- Installing or replacing a lens must be done by a Christie qualified service technician to avoid exposure to dangerous emission levels.


3. Ensure that no one or no objects are in the beam path before turning on the projector.
4. To turn on the projector, on the IR remote keypad press  or on the built-in keypad press .

The status LED is green with a long blink. ②

5. To select an input source and turn it on, on the IR remote keypad select **Input Key**. ③

Available input sources are VGA, HDMI1, HDMI2, DVI, 3G-SDI, and HD-BaseT.

The projector detects the source you selected and displays the image.

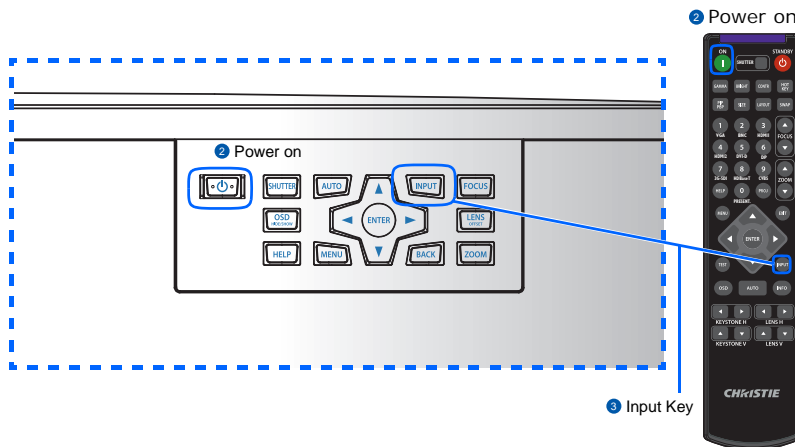

The first time the projector is used, select the preferred language from the Main Menu after the startup screen is displayed.

## Turning the projector off

Power off the projector in preparation for inspection or maintenance.

1. To turn the projector off, on the IR remote keypad or built-in keypad press **Power off**.

A warning message appears on the displayed image.


2. To confirm your selection, press **Power off** again.

If you do not press **Power off** again, the warning message disappears after three seconds and the projector remains on.

## Adjusting the projector position


When you select a position for the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Follow these general guidelines:

- Position the projector on a flat surface at a right angle to the screen. The projector (with the standard lens) must be at least 3 feet (0.9 m) from the projection screen.
- Position the projector to the required distance from the screen. The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image.
- Determine the lens throw ratio:
  - Lens 0.84~1.02 (WU/HD)
  - Lens 1.02~1.36 (WU/HD)
  - Lens 1.2~1.5 (WU/HD)
  - Lens 1.5~2.0 (WU/HD)
  - Lens 2.0~4.0 (WU/HD)
  - Lens 4.0~7.2 (WU/HD)
- 360 degree free orientation operation

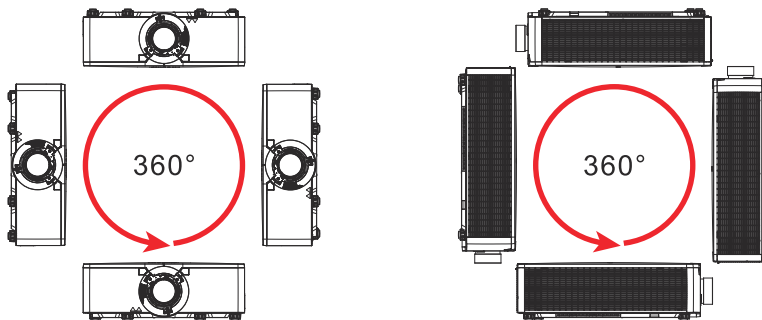

## Portrait mode orientation

When installing the projector in portrait orientation, it is recommended that the built in keypad and power inputs face upwards. This allows access to the built in keypad and power connections during operation.

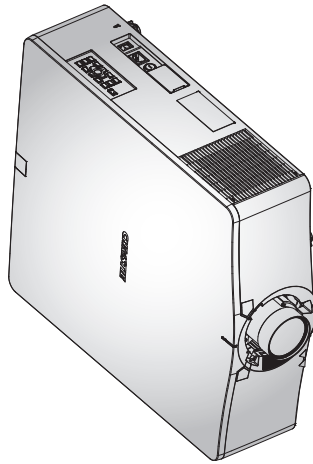

## Calculating the lens offset


Adjust the offset to align the image on the screen with full image size.

- The vertical image offset (shift) ranges for the projector are +/-60% (WUXGA) and +/-70% (HD).
- The horizontal image offset (shift) range for the projector is +/-25% (HD/WUXGA).
- The method for calculating lens offset complies with industry standards. For example for Vertical lens offset:
  - At 0% offset (or on axis), the center of the image is on the lens center, so half of the image appears above and half appears below the lens center.
  - At +50% offset, all of the image appears above the lens center.
  - The percentage (%) offset is calculated as the ratio of the number of pixels shifted up or down to full image size. For example for WUXGA:
    - Shifting up 600 pixels gives an offset of  $600/1200 * 100\% = 50\%$
    - Shifting down 600 pixels gives an offset of  $-600/1200 * 100\% = -50\%$
    - Shifting up 720 pixels gives an offset of  $720/1200 * 100\% = 60\%$
    - Shifting up 240 pixels gives an offset of  $240/1200 * 100\% = 20\%$


## WUXGA projectors

The following show vertical image offsets for the WUXGA projectors:


- Vertical image offset: 0%

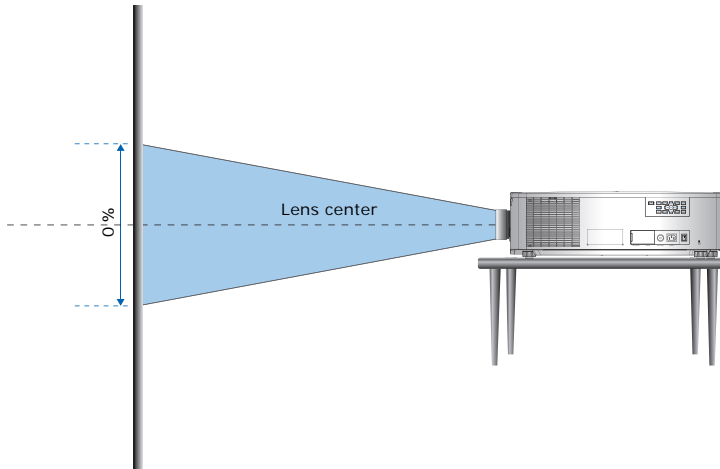

- Vertical image offset: +60%

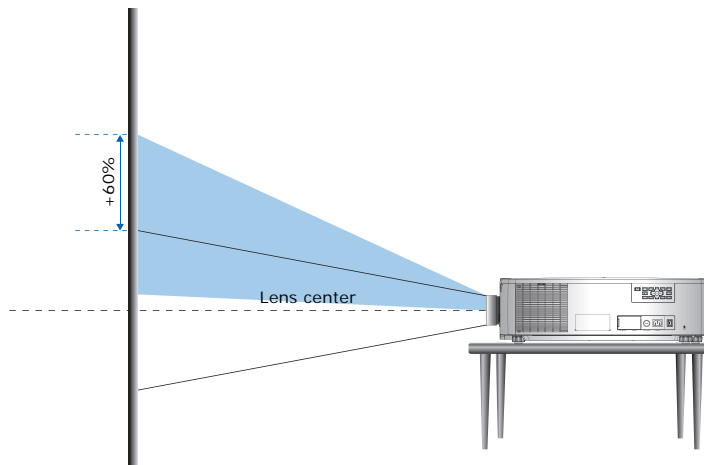


- Vertical image offset: -60%

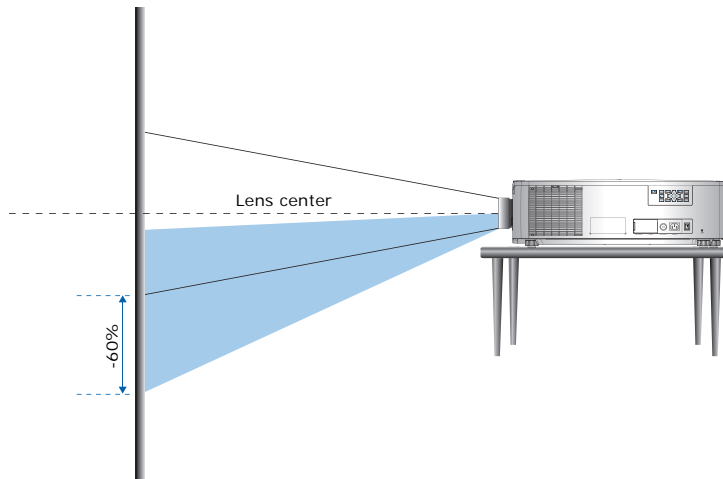

## HD Projectors:


The following show vertical and horizontal image offset for HD projectors:

- Vertical image offset: +70%

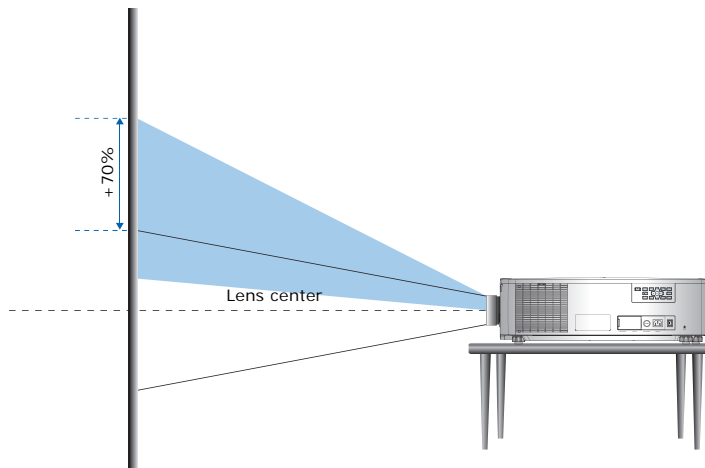




- Vertical image offset: -70%

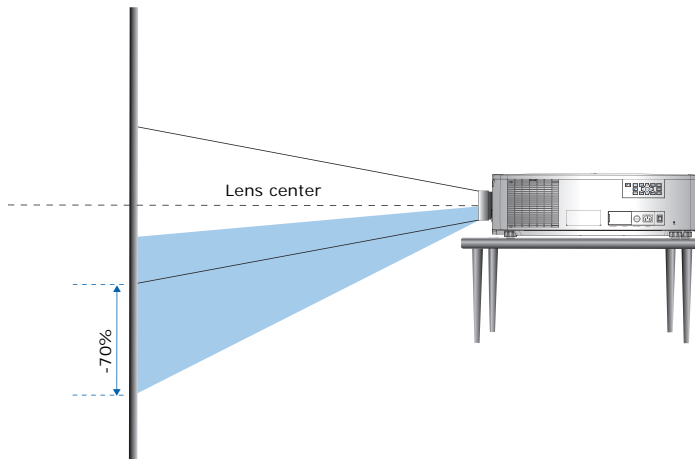

- Horizontal image offset: +/-25%

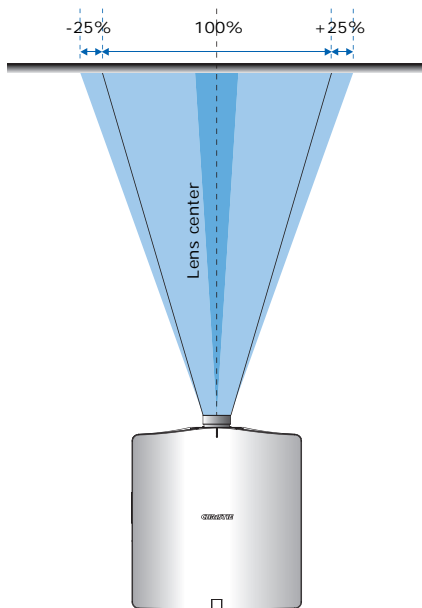

## Removing and installing the lens




**Warning!** Failure to comply with the following could result in death or serious injury.

- Installing or replacing a lens must be done by a Christie qualified service technician to avoid exposure to dangerous emission levels.
- Turn off the projector and remove the power cord, before installing or replacing a lens.

## Installing the fuse

A fuse must be installed in the projector for it to power on.

1. Turn the projector off.
2. Choose the 20A or 15A fuse by sliding the AC cover to the right or to the left.
3. Remove the screw on the fuse with a flat-head screwdriver.
4. Remove the fuse and replace it with the new one.

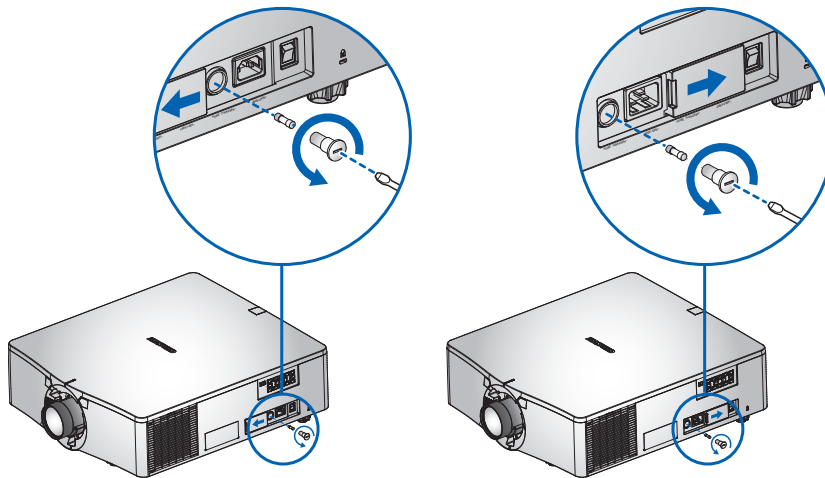


- For regions using 200 to 240V-15A fuse.
- For regions using 100 to 120V-20A fuse.
- To order a fuse, see [page 82](#).

## Cleaning or replacing the filter

Regularly clean or replace the filters in the projector to ensure dust and other foreign materials are kept out of the projector.

1. Turn off the projector.
2. Remove the screws on the filter cover using a 3 mm hex key.

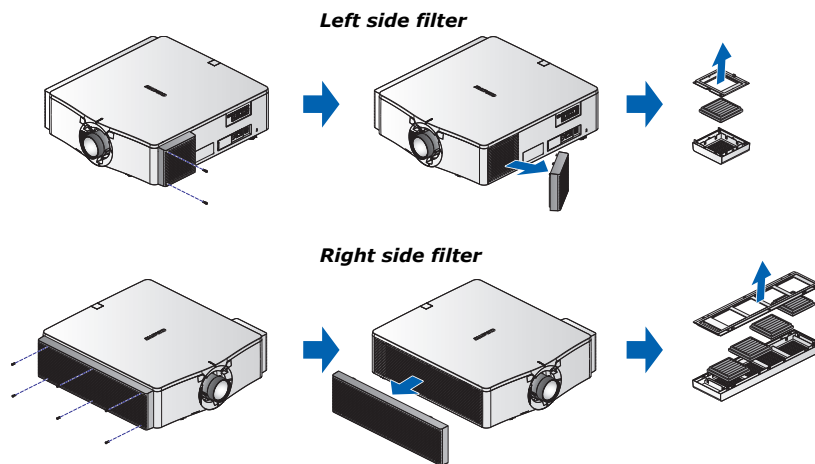

3. Remove the filter cover.
4. Remove the filter from its compartment.
5. Clean or replace the filter.

Fog filters should be replaced after each use of the projector to a maximum of 20 hours. The life of the filter is approximately 20 hours based on environmental conditions. Leave the filters in their sealed packaging until ready for use.



Do not re-use the fog filters as they clog up with oil and the projector overheats and shuts down.  
For more details, see [page 82](#).


## Installing the ceiling mount

Mount the projector with a Christie-approved mount (such as the Christie One Mount Plus, P/N: 140-117100-XX), using the four mounting points on the underside of the projector.



Warning! Failure to comply with the following could result in death or serious injury.

- When not mounted properly, the projector may fall.
- The warranty on this projector does not cover damage caused by the use of a non-recommended ceiling mount kit or installation of the ceiling mount kit in an improper location.

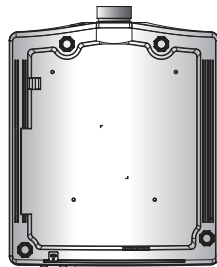

1. Refer to the installation instructions and safety guidelines provided in the kit (such as the Christie One Mount Plus, P/N: 140-117100-XX).


## Installing the projector in the rigging frame

Install the projector in a Christie-approved rigging frame (such as the Christie One Rigging Frame, P/N: 140-113106-XX), using the four mounting points on the underside of the projector.



Warning! Failure to comply with the following could result in death or serious injury.

- When not mounted properly, the projector may fall.
- The warranty on this projector does not cover damage caused by the use of a non-recommended ceiling mount kit or installation of the ceiling mount kit in an improper location.

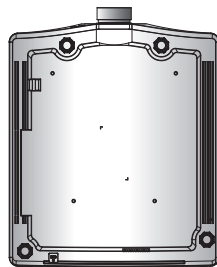

1. Refer to the installation instructions and safety guidelines provided in the kit (such as the Christie One Rigging Frame, P/N: 140-113106-XX).

## Setup, alignment and test procedures

Follow the steps for the initial setup, alignment and test procedures.

1. Ensure all appropriate agencies have been notified.
2. Ensure that all required documentation is present at show site.
3. Hang appropriate laser area warning signage (if applicable).
4. Ensure all laser equipment is securely and rigidly mounted.
5. Ensure all cables are appropriately dressed and covered to prevent tripping or other hazards.
6. Perform visual inspection of projector for damage and other issues.
7. Notify and remove all non-essential personnel from fixed radiation area.
8. Check operation of safety features such as, shutters and labels.
9. Check all radiation areas for safe emission condition to ensure no people or objects are obstructing the beam path.
10. Power on lasers.
11. Open shutter and ensure proper operation of laser projector.
12. Use and fill-in Checklist for laser install.
13. Evaluate, discuss and address possible safety concerns.
14. Power off lasers.
15. Ensure operating procedures and checklists are current.

# Operation



**Warning!** PERMANENT/TEMPORARY BLINDNESS HAZARD! No direct exposure to the beam must be permitted. RG3 IEC 62471:2006.

Operators shall be familiar with all aspects of the function and operation of the laser projector.


The projector has multilingual on-screen display (OSD) menus so you can make image adjustments and change a variety of settings.

Most of the projector controls are accessed from within the projector menu system. Several groups of related functions are selectable from the Main Menu as shown below.

- To display the Main Menu, on the IR remote keypad or on the built-in keypad on the rear of the projector, press **MENU**.
- To navigate within the menu and adjust a setting up or down, use the arrow keys.
- To select a highlighted menu item or use it to change or accept a value, press **ENTER**.


You can then select the next item that you want to adjust in the menu and adjust it.

- To return to the previous menu or exit menus if at top level, press **EXIT**.

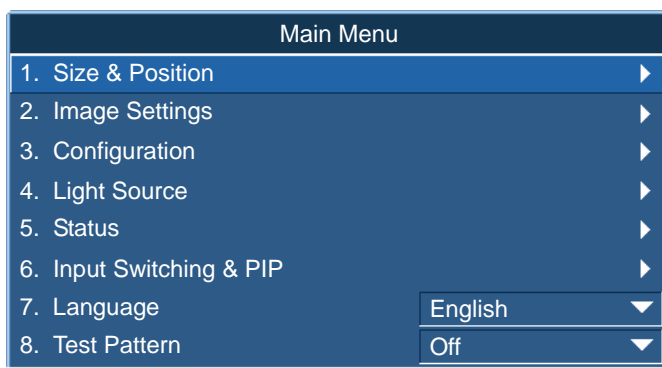

## Size and Position menu

The Size and Position menu determines the size and position of the image on the screen.

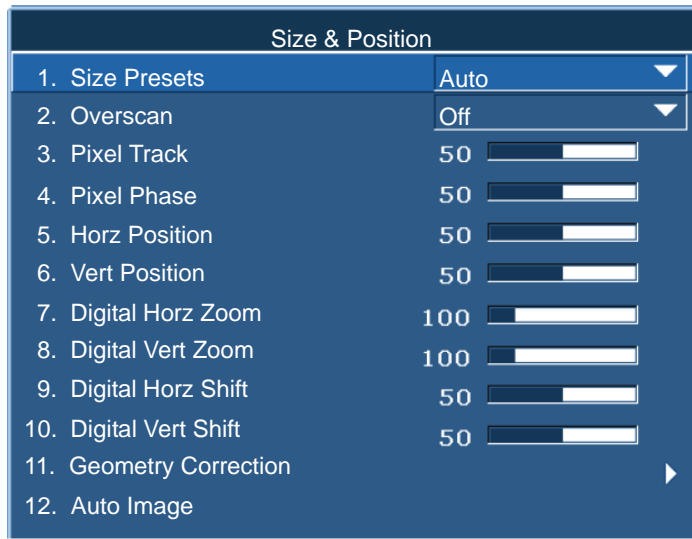

| Menu item    | Description   | Options   |
|--------------|---|---|
| Size Presets | Displays an image with the detected size, or resizes the image by maximizing either the height, width, both, or resizes to the maximum size possible while keeping the original aspect ratio. | <ul style="list-style-type: none"> <li>• Auto—Displays with the detected size.</li> <li>• Native—Displays in its native resolution.</li> <li>• 4:3—Retains 4:3 aspect ratio.</li> <li>• Letterbox—Make the active content enlarge to the full screen.</li> <li>• Full Size—Fills the screen (regardless of the source).</li> <li>• Full Width—Fills display width and keep aspect ratio.</li> <li>• Full Height—Fills display height and keep aspect ratio.</li> <li>• Custom—Stretches the display horizontally or vertically without cutting the image display.</li> <li>• 3D Mode—Displays 3D content.<br/>If 3D Mode is selected, all other Size Presets items are grayed out.</li> </ul> |
| Overscan     | Removes noise around the image.   | <ul style="list-style-type: none"> <li>• Overscan Zoom enlarges image 6% from the original size.</li> <li>• Overscan Crop cuts 6% of the active pixels in four edges of original image.</li> </ul>  |

| Menu item           | Description  | Options  |
|---------------------|--|--|
| Pixel Track         | Steady flickering or several soft vertical stripes or bands across the entire image indicates poor pixel tracking. Proper pixel tracking ensures that the image quality is consistent across the screen, the aspect ratio is maintained, and that the pixel phase can be optimized. (Analog RGB signals only.) |  |
| Pixel Phase         | Adjust the pixel phase when the image shows shimmer or noise after pixel tracking is optimized. Pixel phase can adjust the phase of the pixel-sampling clock relative to the incoming signal. (Analog RGB signals only.)   |  |
| Horz Position       | Moves the image right or left within the area of available pixels.   |  |
| Vert Position       | Moves the image up or down within the area of available pixels.  |  |
| Digital Horz Zoom   | Changes the size of projector's display area horizontally. If the display area has been resized by this setting, it can be moved by changing the Digital Horz Shift and Digital Vert Shift settings.   |  |
| Digital Vert Zoom   | Changes the size of projector's display area vertically. If the display area has been resized by this setting, it can be moved by changing the Digital Horz Shift and Digital Vert Shift settings.   |  |
| Digital Horz Shift  | Moves the display area horizontally if its size has been changed by the Digital Zoom setting.  |  |
| Digital Vert Shift  | Moves the display area vertically if its size has been changed by the Digital Zoom setting.  |  |
| Geometry Correction | Provides two ways for warping control.   | <ul style="list-style-type: none"> <li>• PC Mode off—User can do simple horizontal and vertical keystone, pincushion, and 4-corner control by using the on-screen display.</li> <li>• PC Mode on—User can do arbitrary warping or blending control by using PC APP provided separately.</li> </ul>                                 |
| Auto Image          | Forces the projector to reacquire and lock to the input signal. This is useful when signal quality is marginal.  | <ul style="list-style-type: none"> <li>• Normal mode—Supports all of the 4:3 input sources.</li> <li>• Wide mode—Supports all of the 16:9 input source and most of the 4:3 input source.</li> </ul> <p>For the 4:3 input sources not recognized by Wide mode (for example, 1400 x 1050), perform Auto Image using Normal mode.</p> |



## Geometry correction

Geometry correction provides two ways for warping control:


- PC Mode off—User can do simple horizontal and vertical keystone, pincushion, and 4-corner control by using the on-screen display.
- PC Mode on—User can do arbitrary warping or blending control by using the PC APP provided separately.

The following table provides information about the geometry correction feature compatibility:

| Warp Function | 4-Corner | Keystone | Pincushion |
|---------------|----------|----------|------------|
| 4-Corner      | --       | ✓        | ✓          |
| Keystone      | ✓        | --       | ✓          |
| Pincushion    | ✓        | ✓        | --         |

### Horz Keystone


Adjust the keystone horizontally to make the image more square. Horz Keystone corrects a keystoneed image shape in which the left and right borders of the image are unequal in length, and the top and bottom are slanted to one of the sides. Use Horz Keystone with horizontally on-axis applications. For horizontally offset applications, use 4-Corner correction using the OSD control or the PC APP provided separately.

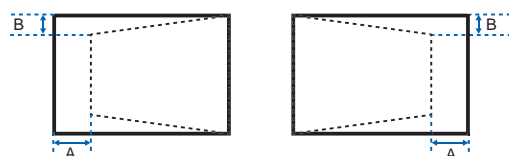

| Ind. | 1080P  | WUXGA  |
|------|--------|--------|
| A    | 30.60% | 30.34% |
| B    | 14.20% | 12.86% |

### Vert Keystone



Adjust the keystone vertically to make the image more square. Vert Keystone corrects a keystoneed image shape in which the left and right borders of the image are unequal in length, and the top and bottom are slanted to one of the sides. Use with vertically on-axis applications. For vertically offset images, use 4-Corner correction using the OSD control or the PC APP provided separately.

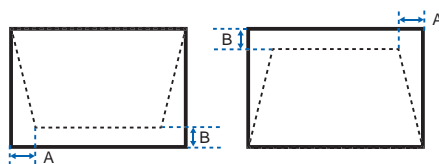

| Ind. | 1080P  | WUXGA  |
|------|--------|--------|
| A    | 5.12%  | 5.04%  |
| B    | 11.00% | 10.52% |

## Horz Pincushion



Adjust the pincushion horizontally and make the image more square.

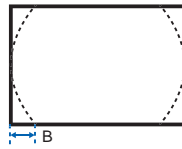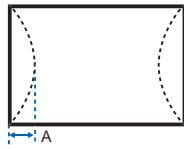

| Ind. | 1080P | WUXGA |
|------|-------|-------|
| A    | 5.17% | 5.39% |
| B    | 5.17% | 4.24% |

## Vert Pincushion

Adjust the pincushion vertically and make the image more square.

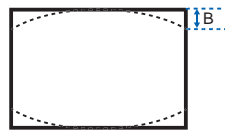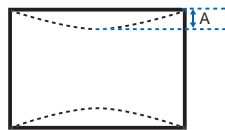


| Ind. | 1080P | WUXGA |
|------|-------|-------|
| A    | 9.67% | 7.44% |
| B    | 9.83% | 7.58% |

## 4-Corner

Allow the image to be squeezed to fit an area defined by moving each of the four corners' x and y position.

| Ind. | 1080P | WUXGA |
|------|-------|-------|
| A    | 6.25% | 6.25% |
| B    | 6.67% | 6.67% |

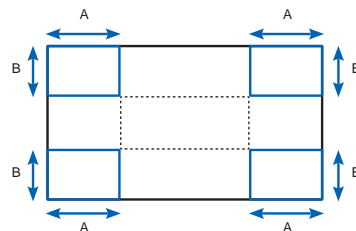


## Reset

Reset all Geometry Correction parameters.

## Image Settings menu

The Image Settings menu sets the brightness, contrast, and other settings for images.

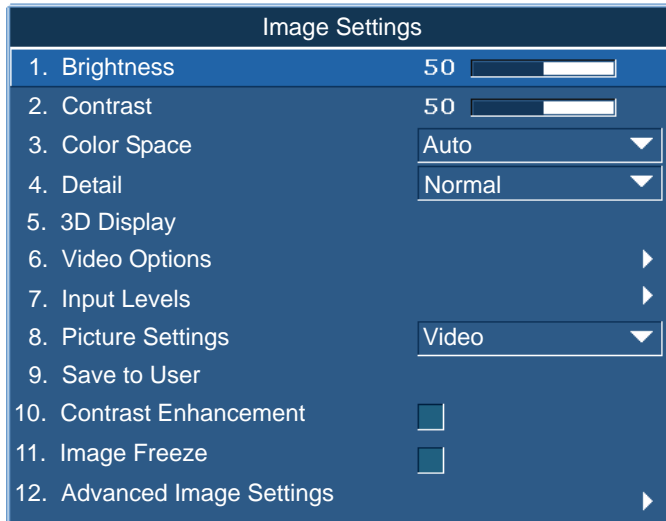


| Menu item   | Description  | Options  |
|-------------|--|--|
| Brightness  | Adjusts the intensity of the image.  | —  |
| Contrast    | Adjusts the degree of difference between the lightest and darkest parts of the image and changes the amount of black and white in the image. | —  |
| Color Space | Selects a color space specifically tuned for the input signal. Only useful for analog signals and certain digital sources.                   | —  |
| Detail      | Selects the edge clarity of the image.   | —  |
| 3D Display  | Selects the 3D relating settings.  | <ul style="list-style-type: none"> <li>• 3D Enable—Sets the 3D format. Supports mandatory 3D formats and frame sequential 3D@120Hz.</li> <li>• 3D Invert—Inverts the 3D sync signal when using a single projector.</li> <li>• Toggle 3D Blending—Inverts 3D sync signal when using multiple projectors for 3D blending.</li> </ul> |

| Menu item        | Description   | Options  |
|------------------|---|--|
| Video Options    | Applies only to video sources.  | <ul style="list-style-type: none"> <li>• Color—Adjusts a video image from black and white to fully saturated color. (Video sources only.)</li> <li>• Tint—Adjusts the red-green color balance in the image of NTSC video images. (NTSC video sources only.)</li> <li>• Detect Film—Controls film mode detection and determine whether the original source of the input video was film or video.</li> </ul>   |
| Input Levels     | Applies to VGA or component signals only.   | <ul style="list-style-type: none"> <li>• Gain—Adjusts the gain of the red, green, or blue channel of the image. It affects the black and white.</li> <li>• Offset—Adjusts the offset of the red, green, or blue channel of the image. It affects the black and white.</li> <li>• Sync Threshold—Helps to sync when connecting to the projector, if a hardware device, such as a DVD player, is not syncing properly with the projector. (Progressive signals only.)</li> </ul> |
| Picture Settings | <p>Optimizes the projector for displaying images under certain conditions, such as:</p> <ul style="list-style-type: none"> <li>• Presentation</li> <li>• Video</li> <li>• Bright</li> <li>• REC709</li> <li>• Real</li> <li>• DICOM SIM</li> <li>• 2D High Speed</li> <li>• 3D</li> <li>• Blending</li> <li>• User-definable preset.</li> </ul> <p>It affects the following:</p> <ul style="list-style-type: none"> <li>• Gamma</li> <li>• Sharpness</li> <li>• White Peaking</li> <li>• Overscan</li> <li>• Brightness</li> <li>• Contrast</li> <li>• Color</li> <li>• Tint</li> <li>• Red Gain</li> <li>• Green Gain</li> <li>• Blue Gain</li> <li>• Red Offset</li> <li>• Green Offset</li> <li>• Blue Offset</li> </ul> | —  |

| Menu item               | Description   | Options  |
|-------------------------|---|--|
| Save to User            | <p>Saves the user settings.</p> <p>Adjust the image settings and <b>Select Save to User</b> as a picture setting. To recall these settings in the future, select the <b>User in the Picture Settings</b> menu.</p> <p>You can save the following settings:</p> <ul style="list-style-type: none"> <li>• Brightness</li> <li>• Contrast</li> <li>• Color</li> <li>• Tint</li> <li>• Red Gain</li> <li>• Green Gain</li> <li>• Blue Gain</li> <li>• Red Offset</li> <li>• Green Offset</li> <li>• Blue Offset</li> <li>• Color Temperature</li> <li>• Gamma</li> <li>• Detail</li> <li>• White Peaking</li> <li>• Overscan</li> </ul> | —  |
| Contrast Enhancement    | Enables or disables the contrast enhancement function. Enable this function to raise the contrast ratio.  | <ul style="list-style-type: none"> <li>• DynamicBlack™— Auto adjust the contrast ratio for video contents.</li> <li>• RealBlack— Lower down the black level for dark images to raise the contrast ratio.</li> </ul>  |
| Image Freeze            | Pauses the screen image.  | —  |
| Advanced Image Settings | Provides access to advanced image settings such as gamma, white peaking, and so on.   | <ul style="list-style-type: none"> <li>• Gamma—Selects the appropriate gamma from Video, Film, Bright, CRT, and DICOM.</li> <li>• White Peaking—Increases the brightness of whites near 100%. (Video source only.)</li> <li>• Color Temperature—Changes the intensity of the colors. Select a listed relative warmth value.</li> <li>• Edge Enhancement—Applies the edge enhancement process.</li> <li>• Color Wheel Speed—Selects the color wheel speed from 2x or 3x. The color wheel speed defines the delay between the color wheel and the DMD. The higher the speed, the less rainbow effect on the screen.</li> </ul> |

# Configuration Menu

The Configuration menu sets the language, projection orientation, power usage, and other preferences for the projector.

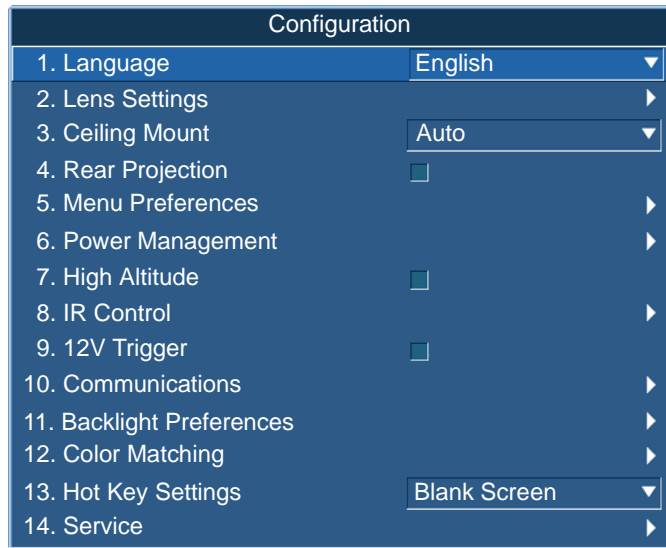

| Menu item     | Description  | Options   |
|---------------|--|---|
| Language      | Selects an available language for the on-screen display. | <ul style="list-style-type: none"> <li>• English</li> <li>• French</li> <li>• German</li> <li>• Italian</li> <li>• Spanish</li> <li>• Chinese (Simplified)</li> <li>• Japanese</li> <li>• Korean</li> <li>• Russian</li> </ul>  |
| Lens Settings | Adjusts the lens.  | <ul style="list-style-type: none"> <li>• Focus and Zoom—Adjust the focus and zoom the image in or out.</li> <li>• Lens Shift—Shifts the lens up and down, or left and right.</li> <li>• Lens Shift Memory—Applies zoom, focus, and lens position according to the chosen set of lens memory position. Save the current zoom, focus, and lens position to the projector memory.</li> <li>• Lock All Lens Motors—Selects this function to prevent all lens motors from moving. It may disable the zoom, focus, horizontal and vertical position settings, locking any changes and overriding all other lens features. This helps to prevent accidental lens position changes in multi-projector installations.</li> <li>• Lens Calibration—Calibrates the lens center.</li> </ul> |

| Menu item        | Description  | Options  |
|------------------|--|--|
| Ceiling Mount    | Turns the image upside down for ceiling-mounted projection.                      | —  |
| Rear Projection  | Reverse the image so you can project from behind a translucent screen.           | —  |
| Menu Preferences | Sets the on-screen display menu preferences, and the password for the projector. | <ul style="list-style-type: none"> <li>• Menu Horz Offset—Changes the horizontal position of the on-screen display.</li> <li>• Menu Vert Offset—Changes the vertical position of the on-screen display.</li> <li>• Show Messages—Displays status messages on the screen.</li> <li>• Menu Transparency—Changes the on-screen display menu background to be transparent. As the value increases, more of the image behind the menu is visible.</li> <li>• Splash Screen Setup—Selects the splash screen.</li> <li>• PIN Protect—Protects your projector with a password. Once enabled, you must enter the password before you can project an image.</li> <li>• Change PIN—Allows you to change the password.</li> </ul>                              |
| Power Management | Determines the power modes for the projector.                                    | <ul style="list-style-type: none"> <li>• Standby Mode—Determines if the projector is in standby mode when connected to AC power (&lt;0.5 W).</li> <li>• AC Power On—Automatically turns the projector on when electrical power is connected.</li> <li>• Auto Shutdown—Automatically turns the projector off after no signals are detected for a preset number of minutes. If an active signal is received before the projector powers down, the image is displayed.</li> <li>• Sleep Timer—Allows the projector to automatically power off after it has been on for a specified amount of time (two, four, or six hours).</li> <li>• Cool Down—Configure the cool down time period (instantly off, after 1 minute, or after 2 minutes).</li> </ul> |
| High Altitude    | Enables or disables high altitude mode.  | <ul style="list-style-type: none"> <li>• On—Enables high altitude mode for altitudes <math>\geq 2000</math> m. The fan operates at high speed to ensure sufficient air flow for high altitudes.</li> <li>• Off—Disables high altitude mode. For altitudes below 2000 m.</li> </ul>   |
| IR Control       | Enables or disables the IR sensors.  | <ul style="list-style-type: none"> <li>• Top—Enables or disables the signal from the top IR sensor.</li> <li>• Front—Enables or disables the signal from the front IR sensor.</li> <li>• HDBaseT—Enables or disables the signal from the HDBaseT Box.</li> </ul>   |

| Menu item             | Description  | Options  |
|-----------------------|--|--|
| 12V Trigger           | Sets the 12V trigger on or off.<br><br>The 12V trigger is used for electrical projector screens. The projector screen is automatically lowered or raised when the projector is switched on or off. | —  |
| Communications        | Determines the communication settings such as network setup, serial port information, and so on.   | <p>Network—Allow you to setup network settings.</p> <ul style="list-style-type: none"> <li>• DHCP—Turns the DHCP on or off.</li> <li>• IP Address—Assigns the network IP address.</li> <li>• Subnet Mask—Assigns the network subnet mask.</li> <li>• Default Gateway—Assigns the network default gateway.</li> <li>• MAC Address—Displays the network MAC address value.</li> <li>• Enable—Enables or disables the WLAN functionality.</li> <li>• Start IP—Enter the start IP address for wireless network.</li> <li>• End IP—Enter the end IP address for wireless network.</li> <li>• SSID—Enter a unique wireless network name (SSID).</li> <li>• Password—Enter the wireless network password.</li> <li>• Show Network Messages—Turns network messages on or off</li> <li>• Restart Network—Restarts the network.</li> <li>• Network Factory Reset—Performs factory reset on the network settings. The Projector Name, IP Address (LAN), Start IP and End IP, and SNMP settings can be reset.</li> </ul> <p>Serial Port Baud Rate—Selects the serial port and baud rate.</p> <p>Serial Port Echo—Controls whether the serial port echoes characters.</p> <p>Serial Port Path—Sets the serial port path to RS232 or HDBaseT.</p> <p>Projector Address—Sets the projector address (0 to 9). The projector responds to the IR remote set to the same address as the projector or to the IR remote set to address 0.</p> |
| Backlight Preferences | Controls the back light behavior and timeout setting for the keypad and status LED.  | —  |



| Menu item        | Description   | Options  |
|------------------|---|--|
| Color Matching   | <p>Enables the selected method (Manual Adjustment or HSG) to define the precise hue of each primary color component (red, green, blue and white).</p> <p>When one method is enabled, the other method is automatically disabled. For both methods, if Auto Test Pattern is enabled, the solid colored test pattern can be displayed according to the menu item on which you are positioned.</p> <p>For more information on color matching, see <a href="#">Color matching</a> on page 46.</p> | <ul style="list-style-type: none"> <li>• Manual Adjustment—Manually defines the precise hue of each primary color component.</li> <li>• HSG Adjustment—Adjusts the hue, saturation, and gain (HSG) of the projected image. The HSG function independently controls each of the color regions R, G, B, C, M, Y, and W.</li> <li>• Wall Color—Sets the wall color so the projector can enhance the color performance customized for the specific wall.</li> </ul>  |
| Hot Key Settings | <p>Assigns a different function to the hot key on the IR remote keypad by highlighting the function in the list and pressing <b>ENTER</b>.</p> <p>Choose a function that does not already have a dedicated button, and assign the hot key to that function, allowing you to quickly and easily use the chosen function.</p>   | —  |
| Service          | Displays projector information, sets test patterns, error logs, and high temperature warnings.  | <ul style="list-style-type: none"> <li>• Projector Info—Displays the current projector settings. (Read-only)</li> <li>• Factory Reset—Restores all settings to their default value. It does not reset network but it resets RS232.</li> <li>• Test Pattern—Sets the required internal test pattern to display. To turn off a test pattern, select Off.</li> <li>• Wheel Index (2X)—Sets the wheel index to Speed 2X. Only use this setting when a new main board is installed, and the picture quality needs to be optimized.</li> <li>• Wheel Index (3X)—Sets the wheel index to Speed 3X. Only use this setting when a new main board is installed, and the picture quality needs to be optimized.</li> <li>• Error Log—Shows the projector error log for debug.</li> <li>• Mode Adjustment—Fine tunes the horizontal (H) and vertical (V) start position for a signal in the EDID timing table and record the values in the system to override the timing table. To keep the settings, before exiting the menu, select <b>Saved to Record</b>. To revert to original timing table settings, manually clear each setting. Factory Defaults do not clear these override settings.</li> <li>• Laser Diode Info—Displays the information of each laser diode bank including its voltage, current, and temperature.</li> </ul> |

## Color matching

You may require a unique color gamut (range) for a single projector or application, or you may need to precisely match colors across multiple adjacent displays. Use color matching by Manual Adjustment or HSG to define the precise hue of each primary color component (red, green, blue and white).

### HSG


Hue, Saturation, and Gain (HSG) software controls the color regions R, G, B, C, M, Y, and W independently.

1. Select HSG, select **Color Matching > HSG**.

#### Hue

Note the following about adjusting hue:


- Adjust the hue independently for each color (R,G,B,C,M, and Y).
- White does not have a hue input.
- A negative hue input provides a clockwise rotation of the color's hue.
- A positive hue input provides a counter-clockwise rotation of the color's hue.
- A zero input does not change the hue of the color.

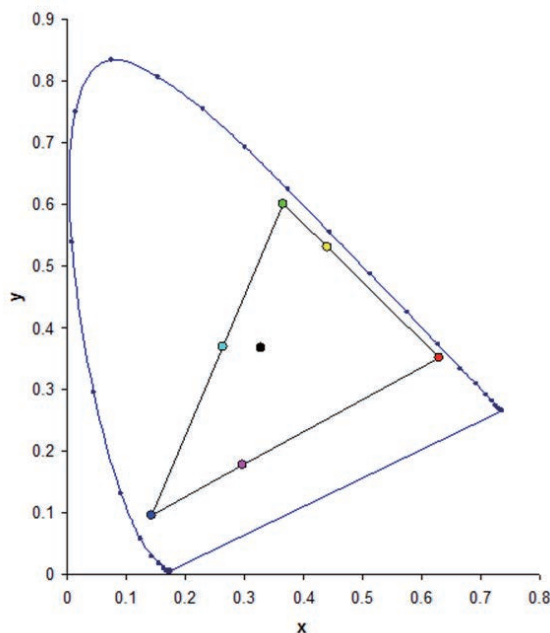

## Saturation

Note the following about adjusting saturation:

- The saturation can be adjust independently for each color (R,G,B,C,M, and Y).
- A saturation level of 0 removes all color from that region.
- A saturation level of 254 sets the color region to have maximum color.
- A saturation level of 127 does not change the saturation.

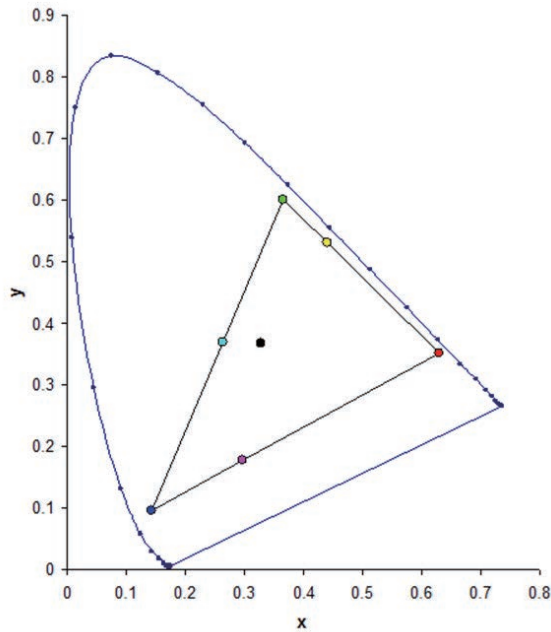


## Gain

Note the following about adjusting gain:

- The gain can be adjust independently for each color (R,G,B,C,M,Y, and W).
- The range of input is 0 to 254.
- The gain changes the intensity level of the respective color.
- A gain level of 127 disables the HSG controls for that color.
- A gain level less than 127 darkens the respective color.
- A gain level of 254 sets the color region to have maximum gain; however, clipping occurs on the signal.
- A gain of 127 is the nominal setting.
- White provides three gain level controls, one each for the R,G,B component of white.

## Light Source menu

The Light Source menu sets the light source mode and power preferences.

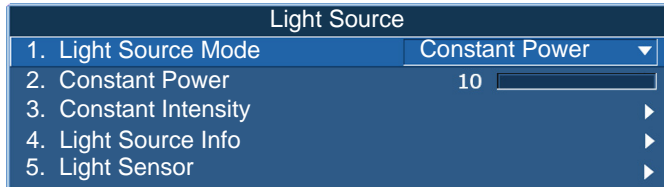

| Menu item          | Description   | Options   |
|--------------------|---|---|
| Light Source Mode  | Sets the light source mode.   | <ul style="list-style-type: none"> <li>• Constant Power</li> <li>• Constant Intensity</li> <li>• ECO 1/ECO 2</li> <li>• Rental Mode—Adjusts to the lowest fan speeds and switches the laser diode power to the minimum setting.</li> </ul>      |
| Constant Power     | Sets the value of the laser diode power.  | —   |
| Constant Intensity | <p>Sets the value for the Constant Intensity mode to maintain constant brightness.</p> <p>The light sensor monitors the light level and consumes more power as the laser brightness decays naturally over time. When the laser setting reaches the maximum power, it remains at this setting.</p> <p>Note the following:</p> <ul style="list-style-type: none"> <li>• Light sensor must be calibrated for Constant Intensity mode to work properly. The calibration must be performed after the laser diode replacement.</li> <li>• Constant Intensity mode is disabled if Light Sensor Calibration is not completed.</li> <li>• Constant Power mode and Constant Intensity mode conflict with each other. When one function is enabled, the other function is automatically disabled.</li> <li>• When Constant Intensity mode is enabled, the Dymanic Black and RealBlack functions are automatically disabled.</li> </ul> | —   |
| Light Source Info  | Display information about the light source in the projector.  | <ul style="list-style-type: none"> <li>• Total Projector Hours—Displays the current total number of hours the projector has been used.</li> <li>• LD Hours—Displays the current total number of hours the laser diode has been used.</li> </ul> |
| Light Sensor       | Calibrates the light sensor.  | —   |

## Status menu

The read-only Status menu lists a variety of details about the standard and optional components currently detected in the projector.

### For DHD models

| Status                |                      |
|-----------------------|----------------------|
| Model Name            | D13HD-HS             |
| Serial Number         | H1YYWWXXX            |
| Native Resolution     | 1920 x 1080          |
| Firmware              | V02.00,A02.00,B01.00 |
| Main Input            | VGA 1                |
| Main Signal Format    | 720P                 |
| Main Pixel Clock      | 74.256 MHz           |
| Main Sync Type        | Sync On Green        |
| Main Horz Refresh     | 45.1 KHz             |
| Main Vert Refresh     | 60.0 Hz              |
| PIP/PBP Input         | -                    |
| PIP/PBP Signal Format | -                    |
| PIP/PBP Pixel Clock   | -                    |
| PIP/PBP Sync Type     | -                    |
| PIP/PBP Horz Refresh  | -                    |
| PIP/PBP Vert Refresh  | -                    |
| Light Source Power    | 99                   |
| Total Projector Hours | 0                    |
| Light Source Hours    | 0                    |
| LC Hours              | 0                    |
| Standby Mode          | 0.5W Mode            |
| Lens Lock Settings    | Allow                |
| IP Address            | 192.168.0.100        |
| DHCP                  | No                   |
| System Temperature    | 29 C, No Filter      |

## For DWU models

| Status                |                      |
|-----------------------|----------------------|
| Model Name            | D13WU-HS             |
| Serial Number         | H1YYWWXXX            |
| Native Resolution     | 1920 x 1200          |
| Firmware              | V02.00,A02.00,B01.00 |
| Main Input            | VGA 1                |
| Main Signal Format    | 720P                 |
| Main Pixel Clock      | 74.256 MHz           |
| Main Sync Type        | Sync On Green        |
| Main Horz Refresh     | 45.1 KHz             |
| Main Vert Refresh     | 60.0 Hz              |
| PIP/PBP Input         | -                    |
| PIP/PBP Signal Format | -                    |
| PIP/PBP Pixel Clock   | -                    |
| PIP/PBP Sync Type     | -                    |
| PIP/PBP Horz Refresh  | -                    |
| PIP/PBP Vert Refresh  | -                    |
| Light Source Power    | 99                   |
| Total Projector Hours | 0                    |
| Light Source Hours    | 0                    |
| LC Hours              | 0                    |
| Standby Mode          | 0.5W Mode            |
| Lens Lock Settings    | Allow                |
| IP Address            | 192.168.0.100        |
| DHCP                  | No                   |
| System Temperature    | 29 C, No Filter      |

## Input Switching & PIP menu

The Input Switching & PIP menu determines how the main and PIP/PBP inputs are handled.













 











| Input Switching & PIP      |                                     |
|----------------------------|-------------------------------------|
| 1. Main Input              | VGA                                 |
| 2. PIP/PBP Input           | HDMI1                               |
| 3. PIP/PBP Enable          | <input checked="" type="checkbox"/> |
| 4. Swap                    | <input type="button" value="▶"/>    |
| 5. Size                    | Medium                              |
| 6. Main Layout             | Top Right                           |
| 7. Timing Detection Mode   |                                     |
| 8. Source Info             | <input type="button" value="▶"/>    |
| 9. Input Key               | Auto Source                         |
| 10. Blank on Signal Switch | <input type="checkbox"/>            |

| Menu item             | Description  | Options   |
|-----------------------|--|---|
| Main Input            | Selects an active input to be used as the main image.  | —   |
| PIP/PBP Input         | Selects an active input to be used as the PIP/PBP.   | —   |
| PIP/PBP Enable        | Toggles between displaying two sources at once (main and PIP/PBP images) or one source only.<br><br>Refer to <a href="#">Inputs</a> on page 77 and <a href="#">PIP/PBP compatibility</a> on page 81.   | <ul style="list-style-type: none"> <li>Selected checkbox—Turns the PIP/PBP source on.</li> <li>Cleared checkbox—Turns the PIP/PBP source off.</li> </ul>                |
| Swap                  | Changes the main image to PIP/PBP, and the PIP/PBP to main image.<br><br>Swapping is available only when PIP/PBP is enabled.   | —   |
| Size                  | Selects the PIP/PBP size to small, medium, or large.   | —   |
| Main Layout           | Sets the location of the PIP/PBP image on the screen.  | —   |
| Timing Detection Mode | Sets timing detection mode to wide or normal to support additional PC timings. When the projected picture is not completed, this function is used to adjust the picture.<br><br>For 4:3 input sources not recognized by Wide mode (for example 1400 x 1050), perform Auto Image using Normal mode. | <ul style="list-style-type: none"> <li>Normal mode—Supports 4:3 input sources.</li> <li>Wide mode—Supports the 16:9 input source and most 4:3 input sources.</li> </ul> |
| Source Info           | Displays the current source settings. (Read-only)  | —   |
| Input Key             | Lists or changes the sources.  | —   |
   
| Menu item              | Description   | Options   |
|------------------------|---|---|
| Blank On Signal Switch | Blanks the screen before timing is stable when changing the source. | <ul style="list-style-type: none"> <li>• Enabled—Blanks the screen before timing is stable when charging source.</li> <li>• Disabled—Disables blanking the screen.</li> </ul> |

## PIP/PBP layout and size

A P indicates the primary source region (lighter color) and an asterisk (\*) indicates both regions are the same size.

| PIP/PBP Layout           | PIP/PBP Size  |   |   |
|--------------------------|---|---|---|
|                          | Small   | Medium  | Large   |
| PBP, Bigger Left         |    |    |    |
| Over-Under, Bigger Upper |    |    |    |
| PBP, Bigger Right        |    |    |    |
| Over-Under, Bigger Lower |  |  |  |
| PIP-Bottom Right         |  |  |  |
| PIP-Bottom Left          |  |  |  |
| PIP-Top Left             |  |  |  |
| PIP-Top Right            |  |  |  |




## Language menu

Select an available language for the on-screen display.



## Test Pattern menu

Choose the required internal test pattern to display, or select Off to turn off a test pattern.

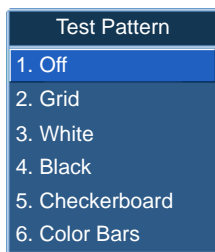

## Web user interface

The web user interface provides an alternate way to access the menu functionality on the projector.

## Logging on to the web user interface

Log onto the web user interface by following the steps below.

1. Open a web browser and type the IP address (in the address bar) assigned to your projector.



The screenshot shows the Christie Projector Web Management login page. At the top is the Christie logo. Below it, the text reads "Welcome to Projector Web Management" and "Compatible with Internet Explorer 8 or higher". The form includes fields for "Projector model name" (D13WU-HS), "Access type" (a dropdown menu with "user" selected), "Password" (a text input field), and "Language" (a dropdown menu with "English" selected). A "Login" button is positioned below the language dropdown. Below the login button is a blue button labeled "Christie Presenter" with a "Download" link underneath it. At the bottom of the page, a copyright notice states "Copyright© 2016 Christie Digital Systems. All rights reserved."

2. From the Access type list, select the log in level.
3. In the Password field, type the password.
4. From the Language list, select the appropriate language.
5. To access the Main window, click **Login**.

## Main tab-General

Displays information about the projector, its power status, and what is selected for the main and PIP/PBP input sources.

**CHRISTIE** Model Name D13WU-HS Serial Number H61532E05 Logout User administrator

**Main** General Status Lens

**Network Setting**

**Tools**

**Administrator**

**About**

**Control**

Main Input: Card Reader

PIP/PBP Input: VGA

PIP / PBP: ☒ ON ☐ OFF

Main Layout: PBP, Main Left

Size: Small

Swap: Execute

Test Pattern: OFF

**Projector Info**

Power: ON

Pic Mute: OFF

OSD: ON

IP Address: 10.2.24.2

MAC Address: 00:50:41:7F:93:0F

**Switch**

Power: Power On Power Off

Pic Mute: On Off

OSD: On Off

**Christie Presenter**

Download

| Panel                 | Description   |
|-----------------------|---|
| Control               | Selects main source/PIP source, enables or disables PIP/PBP, changes the layout or PIP size, swap, and change the test pattern. |
| Projector Information | Check the projector information for power status, Pic mute status, on-screen display status, IP address, and MAC address.       |
| Switch                | Switches the on or off status of Power, Pic Mute, and on-screen display.  |

## Main tab-Status

Displays the current status of light source, cooling (fans), version numbers and signal (source) information.

**CHRISTIE** Model Name D13WU-HS Serial Number H61532E05 Logout User administrator

**Main** General Status Lens

**Network Setting**

**Tools**

**Administrator**

**About**


**Lamp Info**

|                       |       |
|-----------------------|-------|
| Light Source Hours    | 00000 |
| Total Projector Hours | 00001 |
| LC Hours              | 00000 |

Light Source Cooling Version Signal


## Main tab-Lens

Controls the focus, lens shift, and zoom adjustments for the lens.

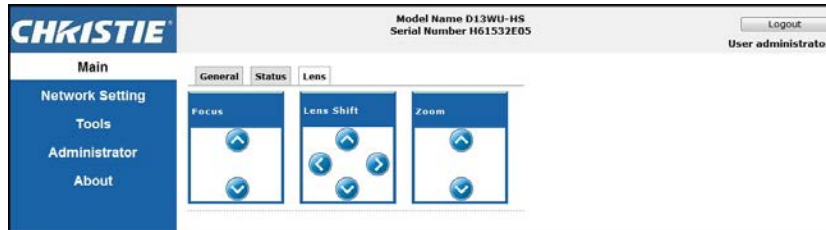

# Network

If you change a setting, the network subsystem of the projector may restart, and you may be logged off.

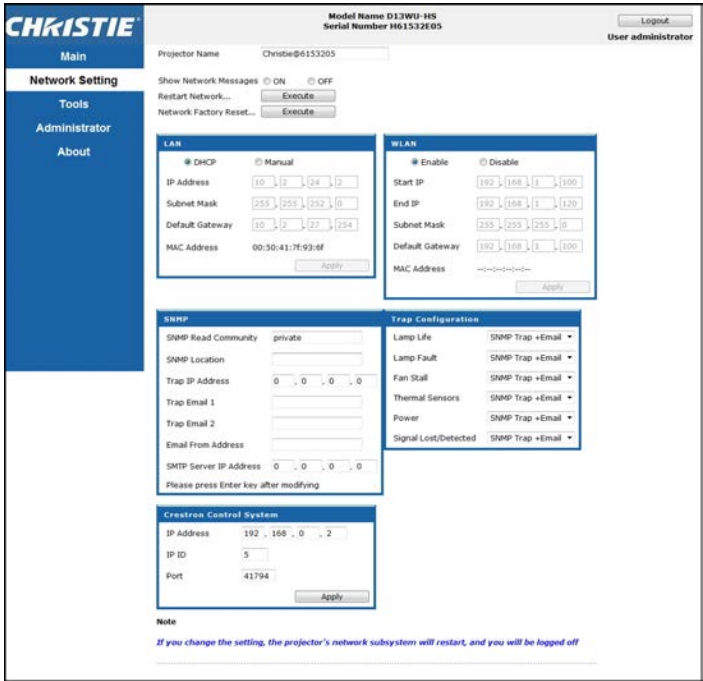

| Panel           | Description  |
|-----------------|--|
| Restart Network | Execute a network restart. This does not change any of the network settings. |

| Panel                 | Description  |
|-----------------------|--|
| Network Factory Reset | <p>Execute a network factory reset. Network settings may be reset to the following default values.</p> <p>Projector Name = Christie@ + Serial Number</p> <p>Show Network Messages = ON</p> <p>LAN settings:</p> <ul style="list-style-type: none"> <li>• Manual</li> <li>• IP Address = 192.168.0.100</li> <li>• Subnet Mask = 255.255.255.0</li> <li>• Default Gateway = 192.168.0.100</li> </ul> <p>WLAN settings:</p> <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Start IP = 192.168.1.100</li> <li>• End IP = 192.168.1.120</li> <li>• Subnet Mask = 255.255.255.0</li> <li>• Default Gateway = 192.168.1.100</li> </ul> <p>SNMP settings:</p> <ul style="list-style-type: none"> <li>• SNMP Read Community = private</li> <li>• Trap IP Address = 0.0.0.0</li> <li>• SMTP IP Address = 0.0.0.0</li> <li>• All other settings are cleared or blanked</li> </ul> <p>Trap Configuration:</p> <ul style="list-style-type: none"> <li>• All items = SNMP Trap + Email</li> </ul> |
| LAN Setting Panel     | <ul style="list-style-type: none"> <li>• Sets if the projector must obtain an automatically assigned IP address through DHCP or if the user sets the address manually.</li> <li>• For the TCP/IP setting, enter the IP address, netmask, and default gateway address.</li> </ul>   |
| WLAN Setting Panel    | <ul style="list-style-type: none"> <li>• Enables or disables the wireless LAN of the projector.</li> <li>• Enter the IP address range, netmask, and default gateway for the wireless LAN.</li> </ul>   |

| Panel                         | Description  |
|-------------------------------|--|
| SNMP Panel                    | <p>Provides network administrators with a common way to manage their network devices from a single remote location. Administrators can use the Simple Network Management Protocol (SNMP) interface to query a number of devices to see their current status or configuration. Operators can change configuration values and configure trap notifications to be sent when certain events occur (for example, loss of signal, power state change, and so on).</p> <p>Emails are sent to the mail server configured in the projector settings. Up to two user email accounts can be selected. Important information regarding the event is located in the body content of the email.</p> <p>SNMP Traps are notifications that are sent from the projector. They are only received by a trap receiver (MIB Browser) in the computer.</p> <ul style="list-style-type: none"> <li>• SNMP Read Community (default setting: private)—Plain text password that must also be entered in the MIB browser. This password allows various settings in the projector to be queried.</li> <li>• SNMP Location (default setting: blank)—Use as a description to where a projector is located in a building. SNMP emails sent specify this location.</li> <li>• Trap IP Address (default setting: 0.0.0.0)—Fill in this field with the IP address of the computer, on which you want to view received traps from the projector.</li> <li>• Trap Email 1/2 (default setting: Blank)—Set the Trap Email 1 and 2 to an email address configured under the mail server entered in the SMTP Server IP Address field.</li> <li>• Email from Address (default setting: blank)—Set the name of the source of the SNMP emails.</li> <li>• SMTP Server IP Address (default setting: 0.0.0.0)—Enter the IP address of the mail server.</li> </ul> |
| Trap Configuration Panel      | <p>Set the SNMP actions for the system events. The options are:</p> <ul style="list-style-type: none"> <li>• SNMP Trap</li> <li>• + Email</li> <li>• Email</li> <li>• SNMP Trap</li> <li>• Disabled</li> </ul>   |
| Crestron Control System Panel | <p>Enter the IP address, IP ID, and port of Crestron device for the connection.</p>  |

## Tools

Use the Tools pages to control size and position, image settings, configuration, light source, input switching, PIP, and test patterns.

## Administrator Page

Add or delete a user or change password.

## About Page

The About page provides version and license information about HS Series.

| Tab     | Description   |
|---------|---|
| Version | Views the main firmware version, network firmware version, projector model name, and projector serial number. |
| License | Displays the license information of the computer program.   |



## Christie Presenter

The Christie Presenter application allows a remote desktop from a host PC to be displayed on the network display through Ethernet or wireless transports. It can adapt to different network settings (DHCP, fixed IP, and direct link by Ethernet cable).

Download Christie Presenter from the Christie website or from the web page of the projector.

## Connecting to the Projector

Before using Christie Presenter, you must connect to the projector.

1. Connect to the projector using WiFi or Ethernet.

Ethernet connection:

- a. To determine the projector's IP address, select **Main Menu > Configuration > Communications > LAN**.


| LAN                |                          |
|--------------------|--------------------------|
| 1. DHCP            | <input type="checkbox"/> |
| 2. IP Address      | 192.168.0.100            |
| 3. Subnet Mask     | 255.255.255.0            |
| 4. Default Gateway | 192.168.0.254            |
| 5. MAC Address     | 00:08:18:00:35:18        |

- b. Configure your PC IP address to be on the same network as the projector.
- c. The projector and computer must be connected directly or over the network using Ethernet.

WiFi Wireless connection:

- a. Insert the WiFi USB dongle (1DWUSB-BGN) into the USB port on the projector input panel.

For more information about the WiFi USB dongle, see [page 78](#).

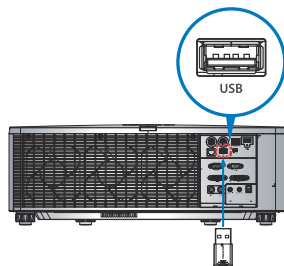

- b. Power on the projector.
- c. Obtain the WiFi SSID from **Main Menu > Configuration > Communications > WLAN**.


- d. Connect your PC device to the wireless SSID for the selected projector, for example: Christie@0112000123.



## Installing the Christie Presenter software


Install and configure the Christie Presenter software.

1. In a web browser, connect to the projector's network address.  
The default address is 192.168.1.100.
2. Download and install the Christie Presenter software.

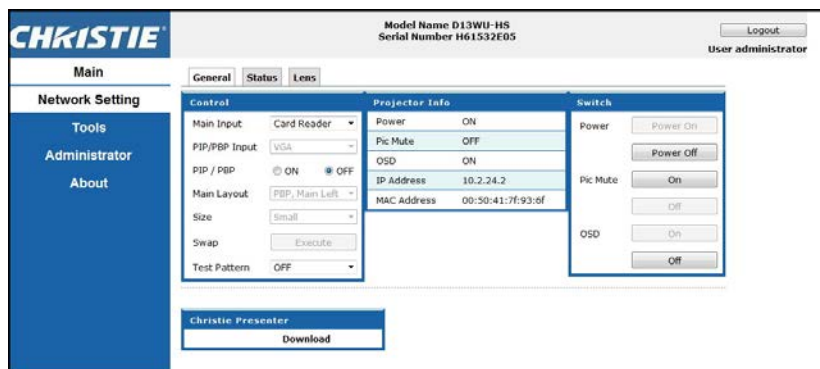

### 3. Configure the Christie Presenter software.

The name entered identifies all computers connected to the projector by the Christie Presenter software—either wired or wireless connections. The **Network Display Management > Device Management** tab shows all current connections.

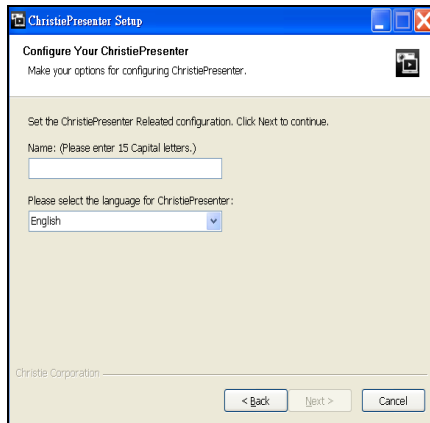

## Using the Christie Presenter

1. To pause or play the USB display, in the system tray, press **Autorun**.




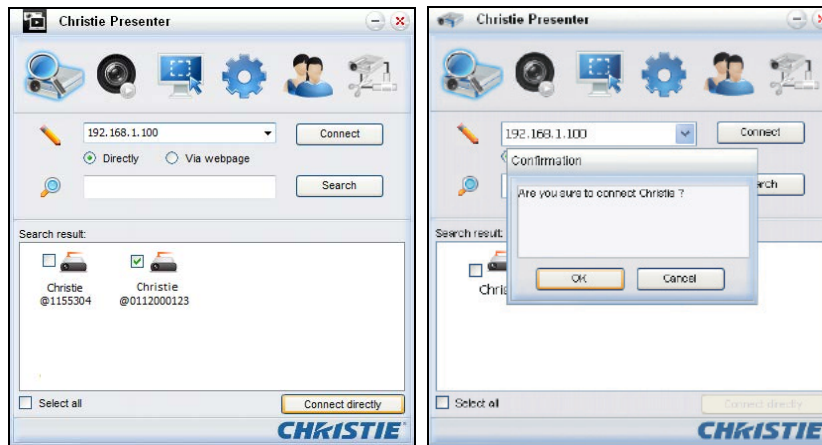
After starting the Christie Presenter application, the main window appears.



| Icon | Description   |
|------|---|
|      | Connects and searches the network display.                                    |
|      | Stops or starts displaying desktop contents to the connected network display. |
|      | Selects a display region.   |
|      | Configures Christie Presenter.  |
|      | Manages all connected network displays.                                       |
|      | Disconnects all connections.  |

## Connecting and searching the network display


1. To enter into the connection menu section, click .
2. If the IP address of the projector is known, type the IP address and click **Connect**.
3. If the IP address is not known:
  - a. To search for the projector on the network, click **Search**.
  - b. Select the projector to which you want to connect.
  - c. To access the Login dialog, click **Connect directly**.



4. In the Login dialog, select the user type and type the password.


The default password for the Normal user is left blank. If the password was previously set, it appears in the bottom-left corner of the on-screen display. The default password for the Admin user is admin.


5. In the Select display port window, select the display port.

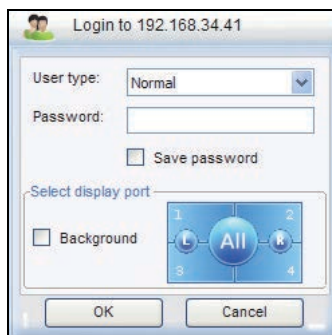

## Selecting the display region

When the connection is set up, you must select the display region.


1. To select the size of the projection region, click  and select an option: FullScreen, FixedSize, or Alterable.

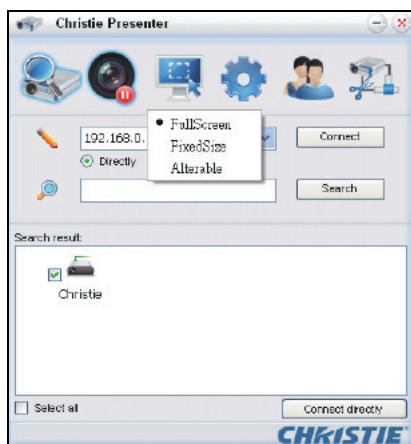


| Tab        | Description  |
|------------|--|
| FullScreen | Turns the default capture mode to full screen when the program is launched. If screen capture starts, the image of the entire screen is transferred to a remote network display. |
| FixedSize  | Transfers on the image enclosed inside the frame (after a user places a frame on the desktop) to remote network display.   |
| Alterable  | Encloses only the captured region by the frame. To enlarge or downsize the region, drag the eight small black squares scattered on eight edges of the frame.                     |

## Configuring Christie Presenter

Set the language for Christie Presenter, the region size of fixed size capture mode, if a notification message dialog is allowed, the quality of JPEG images, YUV sample formats, and the network port setting.


1. To configure Christie Presenter for basic and advanced settings, click  .

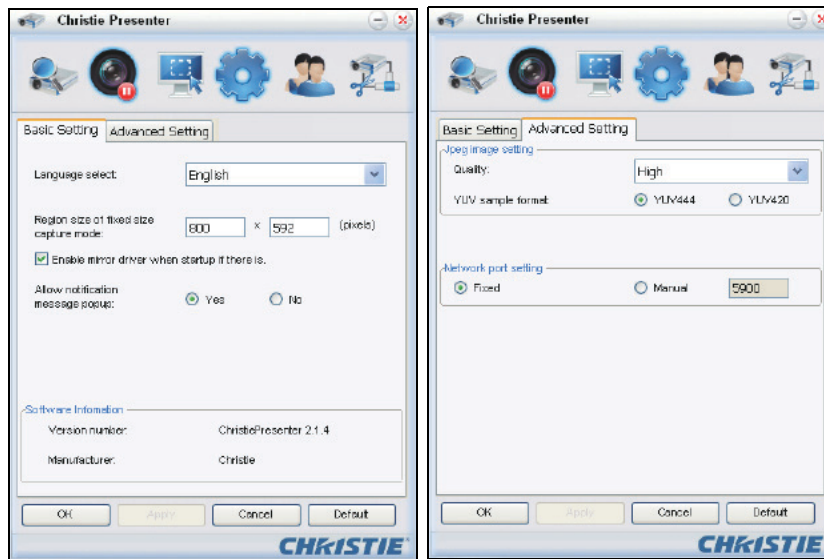








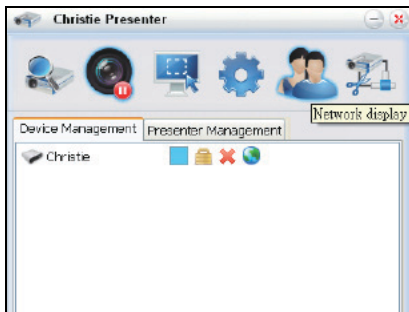


| Tab              | Description  |
|------------------|--|
| Basic Setting    | Selects the language, changes the region size of fixed size capture mode, and selects if a notification message dialog is allowed. |
| Advanced Setting | Selects the quality of JPEG image, YUV sample formats and the network port setting. The fixed port is port 5900.                   |

## Managing all connected network displays

You can manage all connected network displays and users at the same time.

1. To control all users connected to the same projector, click .



| Icon  | Description  |
|---|--|
|    | Indicates the administrator is logged in.  |
|   | Indicates a normal user logged in.   |
|  | Indicates the device is connected.   |
|  | Indicates the device is not connected.   |
|  | Shows the current status and display position of the local screen on the network display. Click to change the display position. A dialog appears.  |
|  | Changes the password to the target network display. Only an Administrator user can change the password.  |
|  | Does not require a response. If user logs in as Admin, the key icon is displayed and the Presenter password can be changed. If user log in as Normal, the lock icon is displayed and the Presenter password cannot be changed. |
|  | Disconnects from the target network display.   |
|  | Connects to a target network display using a web page.   |




## Operating the card reader

The Card Reader application has four available operation modes:

- USB Flash Devices Detection screen
- Thumbnail Display mode
- Images Display mode
- Images Slide Show mode

### USB Flash Device Detection screen

In this mode, the Card Reader application detects any USB flash devices hot-plug events and displays the flash device icon. When the flash device is removed from USB, the icon disappears. Christie recommends removing the USB flash devices only when the Card Reader is changed to the USB Flash Devices Detection Screen state.

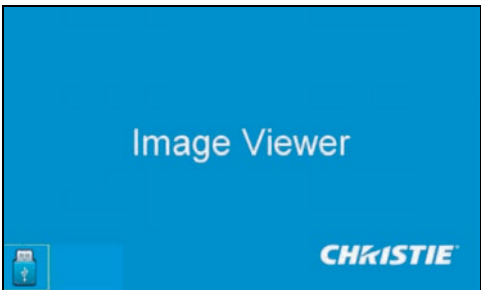


### Thumbnail Display mode

1. To access the Thumbnail Display mode, press the **Enter**.

Different photos in different folders can be chosen.

2. To access the Card Reader operation UI, press **Menu**.

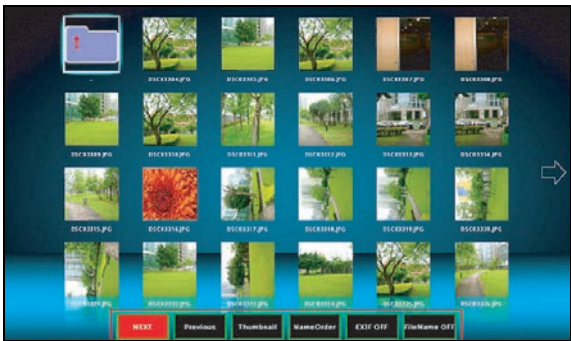

3. Operate the Card Reader application with the **Enter**, **Left**, **Right**, **Up**, and **Down** keys.

The following buttons are supported in the user interface:

| Button   | Description  |
|----------|--|
| Previous | Moves the selected item left or goes to previous page when this is the left-most item. |

| Button          | Description  |
|-----------------|--|
| Next            | Moves the selected item right or goes to next page when this is the right most item. |
| Display         | Displays the selected image or folder.   |
| Thumbnail       | Enter the Thumbnail Display mode.  |
| SlideShow       | Enter the Slide Show mode.   |
| NameOrder       | Sorts files and folders by name.   |
| ExtendOrder     | Sorts files and folders by extended order.   |
| SizeOrder       | Sorts files and folders by size.   |
| TimeOrder       | Sorts files and folders by time.   |
| EXIF ON/OFF     | Enables or disables the auto image rotate accordingly to EXIF information.           |
| FileName ON/OFF | Enables or disables the filename display in Thumbnail Display mode.                  |

## Image Display mode

1. In the Thumbnail Display mode, to enter the Image Display mode, press **ENTER**.
2. To display the last or next image in the Image Display mode, use the **Left** and **Right** keys.
3. To exit Image Display mode and return to Thumbnail Display mode, press **ENTER**.



4. To display an image in the Image Display mode use the operation UI.

The following operations are supported in the operation UI.

| Button          | Description  |
|-----------------|--|
| Display         | Enter the Image Display mode.                          |
| Thumbnail       | Enter the Thumbnail Display mode.                      |
| SlideShow       | Enter the Slide Show mode.                             |
| Actual Size     | Displays the image in actual size.                     |
| Best Fit        | Display the image in a size that best fits the screen. |
| EXIFDisp OFF/On | Enables or disables the EXIF information display.      |
| +90deg          | Rotates the image 90 degrees.                          |
| -90deg          | Rotates the image -90 degrees.                         |

## Image Slide Show mode


1. In the Thumbnail Display mode, to enter the Slide Show mode, press **SlideShow**.
2. In the Slide Show mode, to enter the Image Display Mode, press **ENTER**.
3. To display an image in the Slide Show mode use the operation UI.



The following operations are supported in the Slide Show Mode operation UI.

| Button        | Description  |
|---------------|--|
| Stop          | Stops Slide Show mode.   |
| Next          | Displays the next image.   |
| Previous      | Displays the previous image.   |
| Delay 3/4/5   | Sets a slide show delay in seconds.  |
| Slide Effect  | Supports for the following slide effects: <ul style="list-style-type: none"> <li>• Slide Right</li> <li>• Blocks</li> <li>• RightDown</li> <li>• XLines</li> <li>• Slide Up</li> <li>• Ylines</li> </ul> |
| Repeat ON/OFF | Enables or disables Slide Show Repeat mode.  |

When the image cannot be displayed due to a memory limitation or an unsupported image format, the specific image is displayed on the center of the screen.

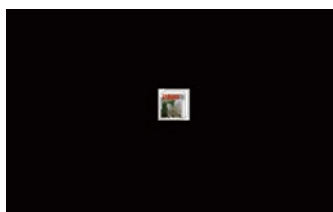

# Troubleshooting

If you cannot resolve an issue using the information provided in this section, contact your reseller or service center.

## No image appears on screen

The image does not appear on the screen.

### Resolution

- Make sure all the cables and power connections are correctly and securely connected.  
See [Installation](#) on page 20 for more details.
- Make sure the projector is switched on.

## Incorrectly displayed image

The image is partial, is scrolling, or is otherwise incorrectly displayed.

### Resolution

If using a PC (for Windows 95, 98, 2000, XP, Windows 7):

1. On control panel or IR remote keypad, press **AUTO**.
2. Select **My Computer > Control Panel**.
3. Double-click **Display**.
4. Select the **Settings** tab.
5. Verify your display resolution setting is lower than or equal to WUXGA (1920 × 1200).
6. Click **Advanced Properties**.
7. If the projector is still not projecting the entire image, change the monitor display:
  - a. Verify the resolution setting is lower than or equal to WUXGA (1920 × 1200).
  - b. Switch to the **Monitor** tab.
  - c. Click **Change**.

- d. Click **Show all devices**.
- e. Under the SP box, select **Standard monitor types**.
- f. Under the Models box, select the appropriate resolution mode.
- g. Verify that the resolution setting of the monitor display is lower than or equal to WUXGA (1920 × 1200).

If using a Notebook:

1. On control panel or IR remote keypad, press **AUTO**.
2. Adjust resolution of the computer.
3. To send signal out from notebook to projector, press the keys listed below for your Notebook manufacturer (for example, [Fn] + [F4]):

| Notebook brand | Function keys  |
|----------------|--|
| Acer           | [Fn] + [F5]  |
| Asus           | [Fn] + [F8]  |
| Dell           | [Fn] + [F8]  |
| Gateway        | [Fn] + [F4]  |
| IBM/Lenovo     | [Fn] + [F7]  |
| HP/Compaq      | [Fn] + [F4]  |
| NEC            | [Fn] + [F3]  |
| Toshiba        | [Fn] + [F5]  |
| Mac Apple      | System Preference > Display > Arrangement > Mirror display |

4. If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

## Presentation is not displayed

The screen of the Notebook or PowerBook computer is not displaying your presentation.

### Details

Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different method of reactivation.

### Resolution

Refer to your computer manual for information on changing the method of reactivation.

## Unstable or flickering images

The image is unstable or is flickering when projected.

### Resolution

- To correct the pixels, use Pixel Track and Pixel Phase.
- Change the monitor color setting on your computer.

## Vertical flickering bar

The image has a vertical, flickering bar when projected.

### Resolution

- To make an adjustment, use **Auto Image**.
- Check and reconfigure the display mode of your graphic card to make it compatible with the projector.

## Image is out of focus

The image is out of focus on the screen.

### Resolution

- Make sure both lens caps (front and back) are removed.
- Adjust the lens focus to fit the screen.
- Make sure the projection screen is between the required distance.

## Image is stretched

The image is stretched when displaying a 16:9 DVD title.

### Details

When you play anamorphic DVD or 16:9 DVD, the projector shows the best image if the projector display mode is set to 16:9 in the on-screen display.

## Resolution

- If you play 4:3 format DVD titles, change the format to 4:3 in the projector on-screen display.
- If the image is still stretched, adjust the aspect ratio by setting the display format as 16:9 (wide) aspect ratio type on your DVD player. For more details, see [Size and Position menu](#) on page 35.

## Image is not the correct size

The image is too small or too large.

### Resolution

- Adjust the lens zoom to fit.
- Verify you are using the correct lens.
- Change the position of the projector.

# Specifications

Learn about the product specifications. Due to continuing research, specifications are subject to change without notice.



# Inputs

The following table details the inputs for HS Series. RB in the Resolution column indicates reduced blanking.

| Signal Type | Resolution | Frame rate (Hz) | VGA | HDMI | DVI | 3G-SDI | HDBaseT |
|-------------|------------|-----------------|-----|------|-----|--------|---------|
| PC          | 640x480    | 60              | •   | •    | •   |        | •       |
|             | 640x480    | 72              | •   | •    | •   |        | •       |
|             | 640x480    | 75              | •   | •    | •   |        | •       |
|             | 640x480    | 85              | •   | •    | •   |        | •       |
|             | 640x480    | 66.6            |     | •    | •   |        | •       |
|             | 720x400    | 70              | •   | •    | •   |        | •       |
|             | 800x600    | 60              | •   | •    | •   |        | •       |
|             | 800x600    | 72              | •   | •    | •   |        | •       |
|             | 800x600    | 75              | •   | •    | •   |        | •       |
|             | 800x600    | 85              | •   | •    | •   |        | •       |
|             | 800x600    | 120             | •   | •    | •   |        | •       |
|             | 832x624    | 75              | •   | •    | •   |        | •       |
|             | 848x480    | 50              |     | •    | •   |        | •       |
|             | 848x480    | 60              |     | •    | •   |        | •       |
|             | 848x480    | 75              |     | •    | •   |        | •       |
|             | 848x480    | 85              |     | •    | •   |        | •       |
|             | 1024x768   | 60              | •   | •    | •   |        | •       |
|             | 1024x768   | 75              | •   | •    | •   |        | •       |
|             | 1024x768   | 85              | •   | •    | •   |        | •       |
|             | 1024x768   | 120             | •   | •    | •   |        | •       |
|             | 1152x720   | 50              |     | •    | •   |        | •       |
|             | 1152x720   | 60              |     | •    | •   |        | •       |
|             | 1152x720   | 75              |     | •    | •   |        | •       |

| Signal Type | Resolution | Frame rate (Hz) | VGA | HDMI | DVI | 3G-SDI | HDBaseT |
|-------------|------------|-----------------|-----|------|-----|--------|---------|
| PC          | 1152x720   | 85              |     | •    | •   |        | •       |
|             | 1152x864   | 60              | •   | •    | •   |        | •       |
|             | 1152x864   | 70              | •   | •    | •   |        | •       |
|             | 1152x864   | 75              | •   | •    | •   |        | •       |
|             | 1152x864   | 85              | •   | •    | •   |        | •       |
|             | 1152x870   | 75              |     | •    | •   |        | •       |
|             | 1280x720   | 50              |     | •    | •   |        | •       |
|             | 1280x720   | 60              | •   | •    | •   |        | •       |
|             | 1280x720   | 75              | •   | •    | •   |        | •       |
|             | 1280x720   | 85              | •   | •    | •   |        | •       |
|             | 1280x720   | 120             | •   | •    | •   |        | •       |
|             | 1280x768   | 60              | •   | •    | •   |        | •       |
|             | 1280x768   | 75              | •   | •    | •   |        | •       |
|             | 1280x768   | 85              | •   | •    | •   |        | •       |
|             | 1280x800   | 50              | •   | •    | •   |        | •       |
|             | 1280x800   | 60              | •   | •    | •   |        | •       |
|             | 1280x800   | 75              | •   | •    | •   |        | •       |
|             | 1280x800   | 85              | •   | •    | •   |        | •       |
|             | 1280x960   | 50              | -   | •    | •   |        | •       |
|             | 1280x960   | 60              | •   | •    | •   |        | •       |
|             | 1280x960   | 75              | •   | •    | •   |        | •       |
|             | 1280x960   | 85              | •   | •    | •   |        | •       |
|             | 1280x1024  | 50              |     | •    | •   |        | •       |
|             | 1280x1024  | 60              | •   | •    | •   |        | •       |
|             | 1280x1024  | 75              | •   | •    | •   |        | •       |
|             | 1280x1024  | 85              | •   | •    | •   |        | •       |
|             | 1360x768   | 50              |     | •    | •   |        | •       |
|             | 1360x768   | 60              |     | •    | •   |        | •       |
|             | 1360x768   | 75              |     | •    | •   |        | •       |
|             | 1360x768   | 85              |     | •    | •   |        | •       |
|             | 1368x768   | 60              | •   | •    | •   |        | •       |
|             | 1400x1050  | 50              |     | •    | •   |        | •       |
|             | 1400x1050  | 60              |     | •    | •   |        | •       |
|             | 1400x1050  | 75              | •   | •    | •   |        | •       |

| Signal Type | Resolution     | Frame rate (Hz) | VGA | HDMI | DVI | 3G-SDI | HDBaseT |
|-------------|----------------|-----------------|-----|------|-----|--------|---------|
| PC          | 1440x900       | 60              | •   | •    | •   |        | •       |
|             | 1440x900       | 75              |     | •    | •   |        | •       |
|             | 1600x900       | 60              |     | •    | •   |        | •       |
|             | 1600x1200      | 60              | •   | •    | •   |        | •       |
|             | 1680x1050      | 60              | •   | •    | •   |        | •       |
|             | 1920X1080      | 50              |     | •    | •   |        | •       |
|             | 1920X1080      | 60              | •   | •    | •   |        | •       |
|             | 1920X1200RB    | 60              | •   | •    | •   |        | •       |
|             | 1920X1200RB    | 50              | •   | •    | •   |        | •       |
| NTSC        | NTSC (M, 4.43) | 60              |     |      |     |        |         |
| PAL         | PAL (B,G,H,I)  | 50              |     |      |     |        |         |
|             | PAL (N)        | 50              |     |      |     |        |         |
|             | PAL (M)        | 60              |     |      |     |        |         |
| SECAM       | SECAM (M)      | 50              |     |      |     |        |         |
| SDTV        | 480i           | 60              | •   | •    | •   |        | •       |
|             | 576i           | 50              | •   | •    | •   |        | •       |
| EDTV        | 480p           | 60              | •   | •    | •   |        | •       |
|             | 576p           | 50              | •   | •    | •   |        | •       |
| HDTV        | 1080i          | 25              | •   | •    | •   |        | •       |
|             | 1080i          | 29              | •   | •    | •   |        | •       |
|             | 1080i          | 30              | •   | •    | •   |        | •       |
|             | 720p           | 50              | •   | •    | •   |        | •       |
|             | 720p           | 59              | •   | •    | •   |        | •       |
|             | 720p           | 60              | •   | •    | •   |        | •       |
|             | 1080p          | 23              | •   | •    | •   |        | •       |
|             | 1080p          | 24              | •   | •    | •   |        | •       |
|             | 1080p          | 25              | •   | •    | •   |        | •       |
|             | 1080p          | 29              | •   | •    | •   |        | •       |
|             | 1080p          | 30              | •   | •    | •   |        | •       |
|             | 1080p          | 50              | •   | •    | •   |        | •       |
|             | 1080p          | 59              | •   | •    | •   |        | •       |
|             | 1080p          | 60              | •   | •    | •   |        | •       |

| Signal Type         | Resolution            | Frame rate (Hz) | VGA | HDMI | DVI | 3G-SDI | HDBaseT |
|---------------------|-----------------------|-----------------|-----|------|-----|--------|---------|
| Mandatory 3D        | Frame Packing 1080p   | 24              |     | •    |     |        | •       |
|                     | Frame Packing 720p    | 50              |     | •    |     |        | •       |
|                     | Frame Packing 720p    | 60              |     | •    |     |        | •       |
|                     | Side by Side 1080i    | 50              |     | •    |     |        | •       |
|                     | Side by Side 1080i    | 60              |     | •    |     |        | •       |
|                     | Top and Bottom 720p   | 50              |     | •    |     |        | •       |
|                     | Top and Bottom 720p   | 60              |     | •    |     |        | •       |
|                     | Top and Bottom 1080p  | 24              |     | •    |     |        | •       |
| Frame sequential 3D | 800x600               | 120             |     | •    |     |        | •       |
|                     | 1024x768              | 120             |     | •    |     |        | •       |
|                     | 1280x720              | 120             |     | •    |     |        | •       |
| SD-SDI              | 480i YCbCr422 10bit   | 59.94           |     |      |     | •      |         |
|                     | 576i YCbCr422 10bit   | 50              |     |      |     | •      |         |
| HD-SDI              | 720p YCbCr422 10bit   | 50              |     |      |     | •      |         |
|                     |                       | 59.94           |     |      |     | •      |         |
|                     |                       | 60              |     |      |     | •      |         |
|                     | 1080i YCbCr422 10bit  | 50              |     |      |     | •      |         |
|                     |                       | 59.94           |     |      |     | •      |         |
|                     |                       | 60              |     |      |     | •      |         |
|                     | 1080p YCbCr422 10bit  | 23.98           |     |      |     | •      |         |
|                     |                       | 24              |     |      |     | •      |         |
|                     |                       | 25              |     |      |     | •      |         |
|                     |                       | 29.97           |     |      |     | •      |         |
|                     |                       | 30              |     |      |     | •      |         |
|                     | 1080sF YCbCr422 10bit | 25              |     |      |     | •      |         |
|                     |                       | 29.97           |     |      |     | •      |         |
|                     |                       | 30              |     |      |     | •      |         |

| Signal Type | Resolution   | Frame rate (Hz) | VGA | HDMI | DVI | 3G-SDI | HDBaseT |
|-------------|--|-----------------|-----|------|-----|--------|---------|
| 3GA-SDI     | 1080p<br>YCbCr422 10bit                            | 50              |     |      |     | •      |         |
|             |  | 59.94           |     |      |     | •      |         |
|             |  | 60              |     |      |     | •      |         |
| 3GB-SDI     | 1080p<br>YCbCr422 10bit<br>With 352M<br>Payload ID | 50              |     |      |     |        |         |
|             |  | 59.94           |     |      |     | •      |         |
|             |  | 60              |     |      |     | •      |         |

## PIP/PBP compatibility

The following table details the PIP/PBP compatibility.

| PIP/PBP<br>Matrix | 3G-SDI | VGA | DVI | HDMI1 | HDMI2 | HDBaseT<br>RJ45-1 | USB A | Mini<br>USB | Ethernet<br>RJ45-2 |
|-------------------|--------|-----|-----|-------|-------|-------------------|-------|-------------|--------------------|
| 3G-SDI            | -      | -   | -   | •     | •     | •                 | •     | •           | •                  |
| VGA               | -      | -   | -   | •     | •     | •                 | •     | •           | •                  |
| DVI               | -      | -   | -   | •     | •     | •                 | •     | •           | •                  |
| HDMI1             | •      | •   | •   | -     | -     | -                 | -     | -           | -                  |
| HDMI2             | •      | •   | •   | -     | -     | -                 | -     | -           | -                  |
| HDBaseT RJ45-1    | •      | •   | •   | -     | -     | -                 | -     | -           | -                  |
| USB A             | •      | •   | •   | -     | -     | -                 | -     | -           | -                  |
| Mini USB          | •      | •   | •   | -     | -     | -                 | -     | -           | -                  |
| Ethernet RJ45-2   | •      | •   | •   | -     | -     | -                 | -     | -           | -                  |

- Dot (•): PIP/PBP combinations are enabled.
- Dash (-): PIP/PBP combinations are disabled.

## Key features

- HD 0.95" 1920 × 1080 resolution or WUXGA 0.96" 1920 × 1200 resolution
- Projection lens compatibility:
  - Horizontal offset ranges with full image size: +/-25%
  - Vertical offset ranges with full image size: +/-60% (WUXGA) and +/-70% (HD)

Measurements comply with industry standards where offset is calculated as a ratio of the number of pixels shifted up or down to full image size.

- 360 degree orientation
- 3D blending and auto warping
- Supports fog filter as an optional accessory
- Wireless desktop display using wireless dongle (optional)
- SNMP traps and email notifications
- 10-bit image processor electronics with modular design
- All video formats can be resized to full screen either horizontally or vertically while maintaining aspect ratio
- The projector can be operated using any of the following:
  - The built-in keypad, the infrared (IR) remote keypad, a wired remote keypad, a PC/ device using serial communications (Ethernet or RS232)
  - A web page using Ethernet or from a PC or device using a wireless USB dongle (optional)

## List of components

This projector comes with all the items listed below. Check to make sure your package is complete. If anything is missing, contact your dealer.

- IR remote keypad (P/N: 003-004468-XX)
- Power cords supplied with the projector:
  - UK
  - North America (125V)
  - North America (250V)
  - Europe, Korea, and Russia
  - Japan
  - India
  - South Africa
  - Australia and New Zealand
  - Argentina
- User manual (CD)

Due to the difference in applications for each country, some regions may have different accessories.

The following accessories are available for the projector:

- 0.84-1.02:1 short zoom lens (P/N: 140-114107-XX)
- 1.02-1.36:1 short zoom lens (P/N: 140-115108-XX)

- 1.2-1.5:1 short zoom lens (P/N: 140-109101-XX)
- 1.5-2.0:1 short zoom lens (P/N: 140-110103-XX)
- 2.0-4.0:1 zoom lens (P/N: 140-111104-XX)
- 4.0-7.2:1 zoom lens (P/N: 140-116109-XX).



**Warning!** Failure to comply with the following could result in death or serious injury.

- Installing or replacing a lens must be done by a Christie qualified service technician to avoid exposure to dangerous emission levels.

- 1DWUSB-BGN/wireless dongle (P/N: 133-113106-XX)
- H-Series adapter For E Series lenses (P/N: 140-112105-XX)
- Christie One Mount Plus (P/N: 140-117100-XX)
- One Mount extender rod (P/N: 121-125109-XX)
- One Mount Rigging kit (P/N: 121-126100-XX)
- Christie One rigging frame (P/N: 140-113106-XX)
- Fog filter with frame (P/N: 003-005714-XX)
- Fog filter module (003-005715-XX)

## Physical specifications

Learn the dimensions and weight of the projector.

| Description  | Dimensions   |
|--|--|
| <b>Projector size</b>  |  |
| Overall size (L x W x H) (excluding lens, feet)                      | 677 mm (26.6 in) x 596 mm (23.5 in) x 203 mm (8.0 in)  |
| Overall size, shipping without lens (L x W x H) (includes packaging) | 923 mm (36.3 in) x 843 mm (22.2 in) x 513 mm (20.2 in) |
| <b>Projector Weight</b>  |  |
| Without lens   | 42.5 kg (93.7 lb)                                      |
| Shipping without lens (includes packaging)                           | 54.0 kg (119.0 lb)                                     |
| <b>Operating position</b>  |  |
| 360 degrees front to back and portrait capable                       | Free orientation and no tilt range constraint.         |

## Physical operating environment

Provides specifications for the operating environment.

- Operating: 0°C to 40°C
  - 0 to 40 degrees C (0 to 2500 ft)
  - 0 to 35 degrees C (2500 to 5000 ft)
  - 0 to 30 degrees C (5000 to 10000 ft)
- Storage temperature range: -10°C to 60°C
- Humidity range: 10% to 85% RH (maximum), non condensing
- Storage humidity range: 5% to 90% RH (maximum), non condensing
- Operating altitude: 10,000 ft maximum

## Power requirements

Learn the power requirements for the projector.

| Parameter                        | Requirement |
|----------------------------------|-------------|
| <b>Rated voltage</b>             |             |
| Input 1                          | 100V-120V   |
| Input 2                          | 200V-240V   |
| <b>Rated current</b>             |             |
| Input 1                          | 14A         |
| Input 2                          | 7A          |
| Line frequency                   | 50/60Hz     |
| <b>AC input coupler</b>          |             |
| Input 1                          | C20         |
| Input 2                          | C14         |
| Inrush current                   | 80A max     |
| <b>Maximum power consumption</b> |             |
| Input 1                          | 1500W       |
| Input 2                          | 1400W       |

## Warnings

- If the condition of the power input is abnormal, the projector displays the following warning:

Incorrect AC power detected. The projector is running in reduced brightness mode (ECO 2). Ensure the proper power is being provided to the selected projector input.



The following table provides information about the power input behavior.

| Condition | Input     |               | Projector Behavior (Light Source Mode)      |
|-----------|-----------|---------------|---|
|           | AC Socket | Input Voltage |   |
| Normal    | 110V      | 110V          | Full (100% power)                           |
| Abnormal  | 110V      | 220V          | ECO 2 (50% power); displays warning message |
| Normal    | 220V      | 220V          | Full (100% power)                           |
| Abnormal  | 220V      | 110V          | ECO 2 (50% power); displays warning message |

- If the filter is installed incorrectly, the projector displays the following warning:

Filter is installed incorrectly.  
Power off the projector and check the filter installation.

- Pump is malfunctioning, for example the motor or pump has stopped operating. The projector displays one of the following warnings:

Pump 1 is not working as expected. Check pump functionality.

Pump 2 is not working as expected. Check pump functionality.

- If the end-user presses the source key on the IR remote keypad that is not supported, for example **BNC(2)**, the projector displays the following warning:

Not supported

## Regulatory

This product conforms to the following regulations related to product safety, environmental requirements and electromagnetic compatibility (EMC).

## Safety

- CSA C22.2 No. 60950-1
- UL 60950-1
- IEC 60950-1
- EN 60950-1

## Laser safety

- IEC 60825-1
- IEC 62471
- FDA CDRH CFR 1040.10
- FDA CDRH CFR 1040.11

## Approvals

- This product is designed and built to comply with all relevant directives, standards, safety, health and environmental rules and regulations required for the product to be sold in: USA/ Canada, EU, Australia/New Zealand, Kuwait, China, Korea, Japan, Mexico, Ukraine, Russia, India, South Africa, Saudi Arabia, and Argentina.

## Electro-Magnetic Compatibility

### Emissions

- FCC CFR47, Part 15, Subpart B/ANSI C63.4, Class A - Unintentional Radiators
- CISPR 22/EN55022 Class A - Information Technology Equipment
- ICES/NMB003 (A) - Information Technology Equipment

### Immunity

- CISPR 24/EN55024 EMC Requirements - Information Technology Equipment

## Environmental

- The product conforms to:
  - EU Directive (2011/65/EU) on the restriction of the use of certain hazardous substances (RoHS) in electrical and electronic equipment and the applicable official amendment(s).
  - EU Regulation (EC) No. 1907/2006 on the registration, evaluation, authorization and restriction of chemicals (REACH) and the applicable official amendment(s).
  - EU Directive (2012/19/EU) on waste and electrical and electronic equipment (WEEE) and the applicable official amendment(s).
  - China Ministry of Information Industry Order No.39 (02/2006) on the control of pollution caused by electronic information products, the hazardous substances concentration limits (SJ/T11363-2006), and the applicable product marking requirement (SJ/T11364-2006).

## Federal Communications Commission (FCC) warning

- Only use the supplied power cord.

Use this checklist to ensure the Christie Laser Projection System installation meets local, municipal, and federal requirements.

|   |                    |    |     |
|---|--------------------|----|-----|
| Name:   | Address:           |    |     |
|   | Phone:             |    |     |
| Technician responsible for installing the product:<br>Name:                      Phone: | Installation Date: |    |     |
| Site meets the FDA variance requirements ( <b>USA only</b> ):                           | Yes                | No | N/A |

|                |                      |
|----------------|----------------------|
| Manufacturer:  | Date of Manufacture: |
| Model:         |                      |
| Serial Number: |                      |

|   |          |
|---|----------|
| Company Name:   | Address: |
|   | Phone:   |
| Name of representative responsible for safety and compliance: | Title:   |
|   | Phone:   |

| List of State, Local and other agencies notified about Class 1, Risk Group 3, projector installation |  |
|--|--|
|  |  |
|  |  |

| PROJECTOR AND PROJECTION SITE INSPECTION                         | Yes | No |
|--|-----|----|
| Laser warning and restricted access signs posted (if applicable) |     |    |
| Projector securely mounted                                       |     |    |
| Housing is assembled properly                                    |     |    |
| Shutter, key control, and status indicators function correctly   |     |    |
| Laser warning labels are affixed to the projector                |     |    |
| Projection system safety features have not been modified         |     |    |

| PROJECTOR SITE CLEARANCE DISTANCES CONFIRMED   | Yes | No |
|--|-----|----|
| Hazard Distance (HD) is confirmed to be _____ meters from the projector.                                 |     |    |
| Describe how the HD was confirmed or calculated (if the Christie HD was not used):                       |     |    |
| <br>   |     |    |
| (Note: The hazard distances for each lens are defined in the user manual)                                |     |    |
| Beam is 3 meters above floor where the audience is permitted to stand and/or 1.0 meters below or lateral |     |    |
| No objects (except projection window if applicable) intercept the beam path within the HD                |     |    |

**Installer's Signature:** \_\_\_\_\_ **Date:** \_\_\_\_\_

**Retain a copy of the completed form for your records.**

## On-screen display tree

The following table provides the on-screen display menu tree.

| Level 1         | Level 2             | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default       |
|-----------------|---------------------|----------------------|----------------------|----------------------|----------------------|---------------|
| Size & Position | Size Presets        | Auto                 |                      |                      |                      | Auto          |
|                 |                     | Native               |                      |                      |                      |               |
|                 |                     | 4:3                  |                      |                      |                      |               |
|                 |                     | Letterbox            |                      |                      |                      |               |
|                 |                     | Full Size            |                      |                      |                      |               |
|                 |                     | Full Width           |                      |                      |                      |               |
|                 |                     | Full Height          |                      |                      |                      |               |
|                 |                     | Custom               |                      |                      |                      |               |
|                 |                     | 3D Mode              |                      |                      |                      |               |
|                 | Overscan            | Off                  |                      |                      |                      | By source set |
|                 |                     | Zoom                 |                      |                      |                      |               |
|                 |                     | Crop                 |                      |                      |                      |               |
|                 | Pixel Track         | 0 to 100             |                      |                      |                      | 50            |
|                 | Pixel Phase         | 0 to 100             |                      |                      |                      | 50            |
|                 | Horz Position       | 0 to 100             |                      |                      |                      | 50            |
|                 | Vert Position       | 0 to 100             |                      |                      |                      | 50            |
|                 | Digital Horz Zoom   | 50% to 400%          |                      |                      |                      | 100           |
|                 | Digital Vert Zoom   | 50% to 400%          |                      |                      |                      | 100           |
|                 | Digital Horz Shift  | 0 to 100             |                      |                      |                      | 50            |
|                 | Digital Vert Shift  | 0 to 100             |                      |                      |                      | 50            |
|                 | Geometry Correction | PC Mode              | On/Off               |                      |                      | Off           |

| Level 1            | Level 2                | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List)           | Level 6<br>(Or List) | Default       |
|--------------------|------------------------|----------------------|----------------------|--------------------------------|----------------------|---------------|
| Size &<br>Position | Geometry<br>Correction | Warp                 | Keystone             | Horz<br>Keystone               | 0 to 40              | 20            |
|                    |                        |                      |                      | Vert<br>Keystone               | 0 to 40              | 20            |
|                    |                        |                      | Pincushion           | Horz<br>Pincushion             | 0 to 100             | 50            |
|                    |                        |                      |                      | Vert<br>Pincushion             | 0 to 100             | 50            |
|                    |                        |                      | 4-Corner             | Top Left<br>Horz Adjust        | 0 to 120<br>(pixel)  | 0             |
|                    |                        |                      |                      | Top Left Vert<br>Adjust        | 0 to 80<br>(pixel)   | 0             |
|                    |                        |                      |                      | Top Right<br>Horz Adjust       | 0 to 120<br>(pixel)  | 0             |
|                    |                        |                      |                      | Top Right<br>Vert Adjust       | 0 to 80<br>(pixel)   | 0             |
|                    |                        |                      |                      | Bottom Left<br>Horz Adjust     | 0 to 120<br>(pixel)  | 0             |
|                    |                        |                      |                      | Bottom Left<br>Vert Adjust     | 0 to 80<br>(pixel)   | 0             |
|                    |                        |                      |                      | Bottom<br>Right Horz<br>Adjust | 0 to 120<br>(pixel)  | 0             |
|                    |                        |                      |                      | Bottom<br>Right Vert<br>Adjust | 0 to 80<br>(pixel)   | 0             |
|                    |                        |                      | Reset                | Command                        |                      |               |
|                    | Auto Image             | Normal               |                      |                                |                      | Wide          |
|                    |                        | Wide                 |                      |                                |                      |               |
| Image<br>settings  | Brightness             | 0 to 100             |                      |                                |                      | 50            |
|                    | Contrast               | 0 to 100             |                      |                                |                      | By source set |
|                    | Color Space            | Auto                 |                      |                                |                      | Auto          |
|                    |                        | RGB                  | RGB Full             |                                |                      | RGB Full      |
|                    |                        |                      | RGB Limited          |                                |                      |               |
|                    |                        |                      | REC709               |                                |                      |               |
|                    |                        | YUV                  | REC709               |                                |                      | REC709        |
|                    |                        |                      | REC601               |                                |                      |               |

| Level 1        | Level 2       | Level 3<br>(Or List)  | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default       |
|----------------|---------------|-----------------------|----------------------|----------------------|----------------------|---------------|
| Image settings | Detail        | Maximum               |                      |                      |                      | By source set |
|                |               | High                  |                      |                      |                      |               |
|                |               | Normal                |                      |                      |                      |               |
|                |               | Low                   |                      |                      |                      |               |
|                |               | Minimum               |                      |                      |                      |               |
|                | 3D Display    | 3D Enable             | Auto                 |                      |                      | Auto          |
|                |               |                       | Frame Packing        |                      |                      |               |
|                |               |                       | Side by Side         |                      |                      |               |
|                |               |                       | Top and Bottom       |                      |                      |               |
|                |               |                       | Frame Sequential     |                      |                      |               |
|                |               |                       | Off                  |                      |                      |               |
|                |               | 3D Invert             | Off                  |                      |                      | Off           |
|                |               |                       | On                   |                      |                      |               |
|                |               | Toggle 3D Blending    | Enter key            |                      |                      | N/A           |
|                | Video Options | Color                 | 0 to 100             |                      |                      | 50            |
|                |               | Tint                  | 0 to 100             |                      |                      | 50            |
|                |               | Detect Film           | Off                  |                      |                      | Off           |
|                |               |                       | On                   |                      |                      |               |
|                | Input Levels  | Red Gain              | 0 to 100             |                      |                      | 50            |
|                |               | Green Gain            | 0 to 100             |                      |                      | 50            |
|                |               | Blue Gain             | 0 to 100             |                      |                      | 50            |
|                |               | Red Offset            | 0 to 100             |                      |                      | 50            |
|                |               | Green Offset          | 0 to 100             |                      |                      | 50            |
|                |               | Blue Offset           | 0 to 100             |                      |                      | 50            |
|                |               | Sync Threshold        | 0 to 100             |                      |                      | 50            |
|                |               | Reset RGB Gain/Offset | Command              |                      |                      |               |

| Level 1        | Level 2                 | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default       |
|----------------|-------------------------|----------------------|----------------------|----------------------|----------------------|---------------|
| Image settings | Picture Settings        | Presentation         |                      |                      |                      | By source set |
|                |                         | Video                |                      |                      |                      |               |
|                |                         | Bright               |                      |                      |                      |               |
|                |                         | REC709               |                      |                      |                      |               |
|                |                         | Real                 |                      |                      |                      |               |
|                |                         | DICOM SIM            |                      |                      |                      |               |
|                |                         | 2D High Speed        |                      |                      |                      |               |
|                |                         | 3D                   |                      |                      |                      |               |
|                |                         | Blending             |                      |                      |                      |               |
|                |                         | User                 |                      |                      |                      |               |
|                | Save to User            | command              |                      |                      |                      |               |
|                | Contrast Enhancement    | Off                  |                      |                      |                      | Off           |
|                |                         | DynamicBlack™        |                      |                      |                      |               |
|                |                         | RealBlack            |                      |                      |                      |               |
|                | Image Freeze            | Off                  |                      |                      |                      | Off           |
|                |                         | On                   |                      |                      |                      |               |
|                | Advanced Image Settings | Gamma                | Video                |                      |                      | By source set |
|                |                         |                      | Film                 |                      |                      |               |
|                |                         |                      | Bright               |                      |                      |               |
|                |                         |                      | CRT                  |                      |                      |               |
|                |                         |                      | DICOM                |                      |                      |               |
|                |                         | White Peaking        | 0 to 100             |                      |                      | By source set |
|                |                         | Color Temperature    | Warm                 |                      |                      | By source set |
|                |                         |                      | Bright               |                      |                      |               |
|                |                         |                      | Cool                 |                      |                      |               |
|                |                         | Edge Enhancement     | Off                  |                      |                      | Off           |
|                |                         |                      | Normal               |                      |                      |               |
|                |                         |                      | Maximum              |                      |                      |               |
|                |                         | Color Wheel Speed    | 2X                   |                      |                      | 3X            |
|                |                         |                      | 3X                   |                      |                      |               |



| Level 1       | Level 2          | Level 3<br>(Or List) | Level 4<br>(Or List)  | Level 5<br>(Or List) | Level 6<br>(Or List) | Default      |
|---------------|------------------|----------------------|-----------------------|----------------------|----------------------|--------------|
| Configuration | Language         | SPEC define          |                       |                      |                      | English      |
|               | Lens Settings    | Focus                | Command               |                      |                      |              |
|               |                  | Zoom                 | Command               |                      |                      |              |
|               |                  | Lens Shift           | Command               |                      |                      |              |
|               |                  | Lens Shift Memory    | Apply Position        | 1 to 5               |                      | 1            |
|               |                  |                      | Save Current Position | Off                  |                      |              |
|               |                  |                      |                       | On                   |                      |              |
|               |                  | Lock All Lens Motors | Allow                 |                      |                      | Allow        |
|               |                  |                      | Locked                |                      |                      |              |
|               |                  | Lens Calibration     | Command               |                      |                      |              |
|               | Ceiling Mount    | Off                  |                       |                      |                      | Auto         |
|               |                  | On                   |                       |                      |                      |              |
|               |                  | Auto                 |                       |                      |                      |              |
|               | Rear Projection  | Off                  |                       |                      |                      | Off          |
|               |                  | On                   |                       |                      |                      |              |
|               | Menu Preferences | Menu Horz Offset     | 0 to 100              |                      |                      | 0            |
|               |                  | Menu Vert Offset     | 0 to 100              |                      |                      | 0            |
|               |                  | Show Messages        | Off                   |                      |                      | On           |
|               |                  |                      | On                    |                      |                      |              |
|               |                  | Menu Transparency    | 0 to 90               |                      |                      | 0            |
|               |                  | Splash Screen Setup  | Factory Logo          |                      |                      | Factory Logo |
|               |                  |                      | Blue                  |                      |                      |              |
|               |                  |                      | Black                 |                      |                      |              |
|               |                  |                      | White                 |                      |                      |              |
|               |                  | PIN Protect          | Command               |                      |                      |              |
|               |                  | Change PIN           | Command               |                      |                      |              |

| Level 1       | Level 2          | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default            |
|---------------|------------------|----------------------|----------------------|----------------------|----------------------|--------------------|
| Configuration | Power Management | Standby Mode         | 0.5W Mode            |                      |                      | Communication Mode |
|               |                  |                      | Communication Mode   |                      |                      |                    |
|               |                  | AC Power On          | Off                  |                      |                      | Off                |
|               |                  |                      | On                   |                      |                      |                    |
|               |                  | Auto Shutdown        | Never                |                      |                      | Never              |
|               |                  |                      | 5 Mins               |                      |                      |                    |
|               |                  |                      | 10 Mins              |                      |                      |                    |
|               |                  |                      | 15 Mins              |                      |                      |                    |
|               |                  |                      | 20 Mins              |                      |                      |                    |
|               |                  |                      | 25 Mins              |                      |                      |                    |
|               |                  |                      | 30 Mins              |                      |                      |                    |
|               |                  | Sleep Timer          | Off                  |                      |                      | Off                |
|               |                  |                      | 2 Hrs                |                      |                      |                    |
|               |                  |                      | 4 Hrs                |                      |                      |                    |
|               |                  |                      | 6 Hrs                |                      |                      |                    |
|               |                  | Cool Down            | Instant Off          |                      |                      | Instant Off        |
|               |                  |                      | 1 Min                |                      |                      |                    |
|               |                  |                      | 2 Min                |                      |                      |                    |
|               | High Altitude    | Off                  |                      |                      |                      | Off                |
|               |                  | On                   |                      |                      |                      |                    |
|               | IR Control       | Top                  | Off                  |                      |                      | On                 |
|               |                  |                      | On                   |                      |                      |                    |
|               |                  | Front                | Off                  |                      |                      | On                 |
|               |                  |                      | On                   |                      |                      |                    |
|               |                  | HDBaseT              | Off                  |                      |                      | On                 |
|               |                  |                      | On                   |                      |                      |                    |
|               | 12V Trigger      | Off                  |                      |                      |                      | Off                |
|               |                  | On                   |                      |                      |                      |                    |
|               | Communications   | LAN                  | DHCP                 |                      |                      | By set             |
|               |                  |                      | IP Address           |                      |                      |                    |
|               |                  |                      | Subnet Mask          |                      |                      |                    |
|               |                  |                      | Default Gateway      |                      |                      |                    |
|               |                  |                      | MAC Address          |                      |                      |                    |

| Level 1       | Level 2        | Level 3<br>(Or List)  | Level 4<br>(Or List)  | Level 5<br>(Or List) | Level 6<br>(Or List) | Default |
|---------------|----------------|-----------------------|-----------------------|----------------------|----------------------|---------|
| Configuration | Communications | WLAN                  | Enable                |                      |                      | By set  |
|               |                |                       | Start IP              |                      |                      |         |
|               |                |                       | End IP                |                      |                      |         |
|               |                |                       | Subnet Mask           |                      |                      |         |
|               |                |                       | Default Gateway       |                      |                      |         |
|               |                |                       | MAC Address           |                      |                      |         |
|               |                |                       | SSID                  |                      |                      |         |
|               |                | Network               | Projector Name        |                      |                      | By set  |
|               |                |                       | Show Network Messages |                      |                      |         |
|               |                |                       | Restart Network       |                      |                      | By set  |
|               |                |                       | Network Factory Reset |                      |                      |         |
|               |                | Serial Port Baud Rate | 2400                  |                      |                      | 115200  |
|               |                |                       | 4800                  |                      |                      |         |
|               |                |                       | 9600                  |                      |                      |         |
|               |                |                       | 14400                 |                      |                      |         |
|               |                |                       | 19200                 |                      |                      |         |
|               |                |                       | 38400                 |                      |                      |         |
|               |                |                       | 57600                 |                      |                      |         |
|               |                |                       | 115200                |                      |                      |         |
|               |                |                       | 1200                  |                      |                      |         |
|               |                | Serial Port Echo      | Off                   |                      |                      | Off     |
|               |                |                       | On                    |                      |                      |         |
|               |                | Serial Port Path      | RS232                 |                      |                      | RS232   |
|               |                |                       | HDBaseT               |                      |                      |         |
|               |                | Projector Address     | 0 to 9                |                      |                      | 0       |

| Level 1       | Level 2               | Level 3<br>(Or List) | Level 4<br>(Or List)     | Level 5<br>(Or List) | Level 6<br>(Or List) | Default        |
|---------------|-----------------------|----------------------|--------------------------|----------------------|----------------------|----------------|
| Configuration | Backlight Preferences | Keypad Backlight     | Timeout 5 Secs           |                      |                      | Timeout 5 Secs |
|               |                       |                      | Timeout 10 Secs          |                      |                      |                |
|               |                       |                      | Timeout 20 Secs          |                      |                      |                |
|               |                       |                      | Timeout 30 Secs          |                      |                      |                |
|               |                       |                      | Always On                |                      |                      |                |
|               |                       |                      | Always Off               |                      |                      |                |
|               |                       | Status LED           | Always On                |                      |                      | Always On      |
|               |                       |                      | Always Off               |                      |                      |                |
|               |                       |                      | Warnings/<br>Errors Only |                      |                      |                |
|               | Color Matching        | Manual Adjustment    | Enable                   | On                   |                      | Off            |
|               |                       |                      |                          | Off                  |                      |                |
|               |                       |                      | Auto Test Pattern        | On                   |                      | On             |
|               |                       |                      |                          | Off                  |                      |                |
|               |                       |                      | Red Part of Red          | 0 to 1000            |                      | 1000           |
|               |                       |                      | Green Part of Red        | 0 to 1000            |                      | 0              |
|               |                       |                      | Blue Part of Red         | 0 to 1000            |                      | 0              |
|               |                       |                      | Green Part of Green      | 0 to 1000            |                      | 1000           |
|               |                       |                      | Red Part of Green        | 0 to 1000            |                      | 0              |
|               |                       |                      | Blue Part of Green       | 0 to 1000            |                      | 0              |
|               |                       |                      | Blue Part of Blue        | 0 to 1000            |                      | 1000           |
|               |                       |                      | Red Part of Blue         | 0 to 1000            |                      | 0              |
|               |                       |                      | Green Part of Blue       | 0 to 1000            |                      | 0              |
|               |                       |                      | Red Part of White        | 0 to 1000            |                      | 1000           |
|               |                       |                      | Green Part of White      | 0 to 1000            |                      | 1000           |
|               |                       |                      | Blue Part of White       | 0 to 1000            |                      | 1000           |

| Level 1       | Level 2        | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default |
|---------------|----------------|----------------------|----------------------|----------------------|----------------------|---------|
| Configuration | Color Matching | Manual Adjustment    | Reset to Default     | Yes                  |                      |         |
|               |                |                      |                      | No                   |                      |         |
|               |                | HSG Adjustment       | HSG Enable           | On                   |                      | Off     |
|               |                |                      |                      | Off                  |                      |         |
|               |                |                      | Auto Test Pattern    | On                   |                      | On      |
|               |                |                      |                      | Off                  |                      |         |
|               |                |                      | Red                  | Hue                  | 0 to 254             | 127     |
|               |                |                      |                      | Saturation           | 0 to 254             | 127     |
|               |                |                      |                      | Gain                 | 0 to 254             | 127     |
|               |                |                      | Green                | Hue                  | 0 to 254             | 127     |
|               |                |                      |                      | Saturation           | 0 to 254             | 127     |
|               |                |                      |                      | Gain                 | 0 to 254             | 127     |
|               |                |                      | Blue                 | Hue                  | 0 to 254             | 127     |
|               |                |                      |                      | Saturation           | 0 to 254             | 127     |
|               |                |                      |                      | Gain                 | 0 to 254             | 127     |
|               |                |                      | Cyan                 | Hue                  | 0 to 254             | 127     |
|               |                |                      |                      | Saturation           | 0 to 254             | 127     |
|               |                |                      |                      | Gain                 | 0 to 254             | 127     |
|               |                |                      | Magenta              | Hue                  | 0 to 254             | 127     |
|               |                |                      |                      | Saturation           | 0 to 254             | 127     |
|               |                |                      |                      | Gain                 | 0 to 254             | 127     |
|               |                |                      | Yellow               | Hue                  | 0 to 254             | 127     |
|               |                |                      |                      | Saturation           | 0 to 254             | 127     |
|               |                |                      |                      | Gain                 | 0 to 254             | 127     |
|               |                |                      | White Gain           | Red                  | 0 to 254             | 127     |
|               |                |                      |                      | Green                | 0 to 254             | 127     |
|               |                |                      |                      | Blue                 | 0 to 254             | 127     |
|               |                |                      | Reset to Default     | Yes                  |                      |         |
|               |                |                      |                      | No                   |                      |         |
|               |                |                      | Color Enhance        | Off                  |                      |         |
|               |                |                      |                      | CE 1                 |                      |         |
|               |                |                      |                      | CE 2                 |                      |         |
|               |                | Wall Color           | White                |                      |                      | White   |
|               |                |                      | Gray 130             |                      |                      |         |

| Level 1       | Level 2          | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default |
|---------------|------------------|----------------------|----------------------|----------------------|----------------------|---------|
| Configuration | Hot Key Settings | Blank Screen         |                      |                      |                      |         |
|               |                  | Aspect Ratio         |                      |                      |                      |         |
|               |                  | Freeze Screen        |                      |                      |                      |         |
|               |                  | Projector Info       |                      |                      |                      |         |
|               |                  | Overscan             |                      |                      |                      |         |
|               | Service          | Projector Info       | Model Name           |                      |                      |         |
|               |                  |                      | Serial Number        |                      |                      |         |
|               |                  |                      | Native Resolution    |                      |                      |         |
|               |                  |                      | Firmware             |                      |                      |         |
|               |                  |                      | Configuration        |                      |                      |         |
|               |                  |                      | Boot Code            |                      |                      |         |
|               |                  |                      | Standby Mode         |                      |                      |         |
|               |                  |                      | Lens Lock Settings   |                      |                      |         |
|               |                  |                      | Input Power Rating   |                      |                      |         |
|               |                  |                      | Wheel Index          |                      |                      |         |
|               |                  | FactoryReset         | Command              |                      |                      |         |

| Level 1       | Level 2 | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default                             |
|---------------|---------|----------------------|----------------------|----------------------|----------------------|-------------------------------------|
| Configuration | Service | Test Pattern         | Off                  |                      |                      |                                     |
|               |         |                      | Grid                 |                      |                      |                                     |
|               |         |                      | White                |                      |                      |                                     |
|               |         |                      | Black                |                      |                      |                                     |
|               |         |                      | Checkerboard         |                      |                      |                                     |
|               |         |                      | Color Bars           |                      |                      |                                     |
|               |         |                      | Red                  |                      |                      |                                     |
|               |         |                      | Green                |                      |                      |                                     |
|               |         |                      | Blue                 |                      |                      |                                     |
|               |         |                      | Yellow               |                      |                      |                                     |
|               |         |                      | Magenta              |                      |                      |                                     |
|               |         |                      | Cyan                 |                      |                      |                                     |
|               |         |                      | Boresight            |                      |                      |                                     |
|               |         | Wheel Index<br>(2X)  | Phosphor Index       | 0 to 719             |                      |                                     |
|               |         |                      | Filter Index         | 0 to 719             |                      |                                     |
|               |         | Wheel Index<br>(3X)  | Phosphor Index       | 0 to 719             |                      |                                     |
|               |         |                      | Filter Index         | 0 to 719             |                      |                                     |
|               |         | Error Log            | Show Log             |                      |                      |                                     |
|               |         |                      | Clear Log            |                      |                      |                                     |
|               |         | Mode Adjustment      |                      |                      |                      |                                     |
|               |         | Laser Diode Info     | LD1                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |         |                      | LD2                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |         |                      | LD3                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |         |                      | LD4                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |         |                      | LD5                  |                      |                      | Voltage/<br>Current/<br>Temperature |

| Level 1       | Level 2            | Level 3<br>(Or List)     | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default                             |
|---------------|--------------------|--------------------------|----------------------|----------------------|----------------------|-------------------------------------|
| Configuration | Service            | Laser Diode Info         | LD6                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |                    |                          | LD7                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |                    |                          | LD8                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |                    |                          | LD9                  |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |                    |                          | LD10                 |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |                    |                          | LD11                 |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |                    |                          | LD12                 |                      |                      | Voltage/<br>Current/<br>Temperature |
|               |                    |                          | LD13                 |                      |                      | Voltage/<br>Current/<br>Temperature |
| Light Source  | Light Source Mode  | Constant Power           |                      |                      |                      | Constant Power                      |
|               |                    | Constant Intensity       |                      |                      |                      |                                     |
|               |                    | ECO 1 (80%)              |                      |                      |                      |                                     |
|               |                    | ECO 2 (50%)              |                      |                      |                      |                                     |
|               |                    | Rental Mode (80%)        |                      |                      |                      |                                     |
|               | Constant Power     | 0 to 99 (30% to 100%)    |                      |                      |                      | 99                                  |
|               | Constant Intensity | 0 to 99 (30% to 100%)    |                      |                      |                      | 99                                  |
|               | Light Source Info  | Total Projector Hours    |                      |                      |                      |                                     |
|               |                    | LD Hours                 |                      |                      |                      |                                     |
|               | Light Sensor       | Light Sensor Calibration | Command              |                      |                      |                                     |
|               |                    | Calibrated?              | (Display Yes/<br>No) |                      |                      |                                     |



| Level 1 | Level 2               | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default       |
|---------|-----------------------|----------------------|----------------------|----------------------|----------------------|---------------|
| Status  | Model Name            |                      |                      |                      |                      |               |
|         | Serial Number         |                      |                      |                      |                      |               |
|         | Native Resolution     |                      |                      |                      |                      |               |
|         | Firmware              |                      |                      |                      |                      | Vxx, Ayy, Bzz |
|         | Main Input            |                      |                      |                      |                      |               |
|         | Main Signal Format    |                      |                      |                      |                      |               |
|         | Main Pixel Clock      |                      |                      |                      |                      |               |
|         | Main Sync Type        |                      |                      |                      |                      |               |
|         | Main Horz Refresh     |                      |                      |                      |                      |               |
|         | Main Vert Refresh     |                      |                      |                      |                      |               |
|         | PIP/PBP Input         |                      |                      |                      |                      |               |
|         | PIP/PBP Signal Format |                      |                      |                      |                      |               |
|         | PIP/PBP Pixel Clock   |                      |                      |                      |                      |               |
|         | PIP/PBP Sync Type     |                      |                      |                      |                      |               |
|         | PIP/PBP Horz Refresh  |                      |                      |                      |                      |               |
|         | PIP/PBP Vert Refresh  |                      |                      |                      |                      |               |
|         | Light Source Power    |                      |                      |                      |                      |               |
|         | Total Projector Hours |                      |                      |                      |                      |               |
|         | Light Source Hours    |                      |                      |                      |                      | BLD/RLD       |
|         | LC Hours              |                      |                      |                      |                      |               |
|         | Standby Mode          |                      |                      |                      |                      |               |
|         | Lens Lock Settings    |                      |                      |                      |                      |               |
|         | IP Address            |                      |                      |                      |                      |               |
| Status  | DHCP                  |                      |                      |                      |                      |               |
|         | System Temperature    |                      |                      |                      |                      |               |

| Level 1                     | Level 2                   | Level 3<br>(Or List)   | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default     |
|-----------------------------|---------------------------|--|----------------------|----------------------|----------------------|-------------|
| Input<br>Switching &<br>PIP | Main Input                | SPEC define  |                      |                      |                      |             |
|                             | PIP/PBP Input             | SPEC define  |                      |                      |                      |             |
|                             | PIP/PBP Enable            | Off  |                      |                      |                      | Off         |
|                             |                           | On   |                      |                      |                      |             |
|                             | Swap                      |  |                      |                      |                      |             |
|                             | Size                      | (Small/Medium/<br>Large)   |                      |                      |                      |             |
|                             | Main Layout               | (PBP, Main Left/<br>PBP, Main Top/<br>PBP, Main Right/<br>PBP, Main<br>Bottom/PIP-<br>Bottom Right/<br>PIP-Bottom Left/<br>PIP-Top Left/<br>PIP-Top Right) |                      |                      |                      |             |
|                             | Timing<br>Detection Mode  | Normal   |                      |                      |                      | Wide        |
|                             |                           | Wide   |                      |                      |                      |             |
|                             | Source Info               | Active Source  |                      |                      |                      |             |
|                             |                           | Signal Format  |                      |                      |                      |             |
|                             |                           | Aspect Ratio   |                      |                      |                      |             |
|                             |                           | Resolution   |                      |                      |                      |             |
|                             |                           | Vert Refresh   |                      |                      |                      |             |
|                             |                           | Horz Refresh   |                      |                      |                      |             |
|                             |                           | Pixel Clock  |                      |                      |                      |             |
|                             |                           | Sync Type  |                      |                      |                      |             |
|                             |                           | Color Space  |                      |                      |                      |             |
|                             |                           | PIP/PBP (When<br>PIP/PBP active)   |                      |                      |                      |             |
|                             |                           | <PIP/PBP source<br>lines><br>(When PIP/PBP<br>active)  |                      |                      |                      |             |
|                             |                           |  |                      |                      |                      |             |
|                             |                           |  |                      |                      |                      |             |
|                             | Input key                 | Change Sources   |                      |                      |                      | Auto Source |
|                             |                           | List All Sources   |                      |                      |                      |             |
|                             |                           | Auto Source  |                      |                      |                      |             |
| Input<br>Switching &<br>PIP | Blank on Signal<br>Switch | Off  |                      |                      |                      | Off         |
|                             |                           | On   |                      |                      |                      |             |
| Language                    | SPEC define               |  |                      |                      |                      | English     |

| Level 1      | Level 2      | Level 3<br>(Or List) | Level 4<br>(Or List) | Level 5<br>(Or List) | Level 6<br>(Or List) | Default |
|--------------|--------------|----------------------|----------------------|----------------------|----------------------|---------|
| Test pattern | Off          |                      |                      |                      |                      |         |
|              | Grid         |                      |                      |                      |                      |         |
|              | White        |                      |                      |                      |                      |         |
|              | Black        |                      |                      |                      |                      |         |
|              | Checkerboard |                      |                      |                      |                      |         |
|              | Color Bars   |                      |                      |                      |                      |         |

### Corporate offices

---

USA – Cypress  
ph: 714-236-8610

Canada – Kitchener  
ph: 519-744-8005

### Consultant offices

---

Italy  
ph: +39 (0) 2 9902 1161

### Worldwide offices

---

Australia  
ph: +61 (0) 7 3624 4888

Brazil  
ph: +55 (11) 2548 4753

China (Beijing)  
ph: +86 10 6561 0240

China (Shanghai)  
ph: +86 21 6278 7708

Eastern Europe and  
Russian Federation  
ph: +36 (0) 1 47 48 100

France  
ph: +33 (0) 1 41 21 44 04

Germany  
ph: +49 2161 664540

India  
ph: +91 (080) 6708 9999

Japan  
ph: 81-3-3599-7481

Korea (Seoul)  
ph: +82 2 702 1601

Republic of South Africa  
ph: +27 (0)11 510 0094

Singapore  
ph: +65 6877-8737

Spain  
ph: + 34 91 633 9990

United Arab Emirates  
ph: +971 4 3206688

United Kingdom  
ph: +44 118 977 8000



For the most current technical documentation,  
please visit [www.christiedigital.com](http://www.christiedigital.com)

**CHRISTIE®**