
INSIDE YOUR WELFARE UNIT



Here is a guide to the non-electrical features of your Boss Cabins mobile welfare unit. See Manual Section 5 for a guide to all electrical features.

6

6.1 DRINKING WATER



The unit is equipped with a 20L drinking water tank with a tap. This is stored in a wall bracket in the kitchen area of your canteen. During towing, the tank should be empty. To fill, lift the tank from its bracket, fill with either tap or bottled water fit for human consumption, replace the cap. Place the tank back where this is in its bracket and secure with the strap if one is provided.



NOTE

The container must only be used for drinking water and must be emptied and cleaned regularly. If used for any other purpose it must be replaced.



CAUTION

Each water tank weighs 20-25kg when full. Take care while lifting. To prevent injury, use suitable lifting techniques or seek assistance when replacing.

6.2 HAND WASH WATER TANK



A clean water container beneath the sink supplies the hot hand wash unit. When refilling, remove the tube and replace the cap before taking the container out. Fill with clean water suitable for hand washing. Replace in the mounting, refit the tube and test the operation. Always ensure that there is sufficient water in the fresh water container.



CAUTION

Do not let the hand wash unit be run dry as this will result in damage to the unit.

For information on how to operate the Hot Wash unit, please refer to Manual Section 5.

6.3 WASTE WATER TANK



Waste water from the sink is drained into the waste water container beneath it. When removing the container remove the drain tube and replace the cap. Lift the container from its mounting and take for disposal. Refit the empty container and ensure the drain tube from the sink is replaced in the container.

6.4 SOAP DISPENSER



Place your hand beneath the unit and press the button to dispense soap. The soap dispenser uses 2 litre sealed pouch cartridges to minimise spillage, waste and cross- contamination. Follow the manufacturer's instructions to replace the soap cartridges.

6.5 PAPER TOWEL DISPENSER



The paper towel dispenser dispenses C or Z fold towels. Place your hand beneath the unit and push the bar upwards to dispense towels. Follow the manufacturer's instructions to replace the towels in the dispenser.

6.6 DRINKING CUP DISPENSER



To dispense cups pull the exposed part of the cup from the bottom of the dispenser. To re-fill open the top and insert cups. Please remember the environment and fill with paper cups, not plastic.

6.7 FOOD PREPARATION



The unit's food preparation area is supplied as standard with a kettle to make hot drinks and a microwave for hot food preparation. For information on how to power these appliances correctly according to your electrical specification, see Section 5 of the manual.


6.8 CARBON MONOXIDE ALARM



The cabin is fitted with an audible carbon monoxide alarm. If the alarm sounds, leave the unit immediately. Turn off the cabin and evacuate it. If necessary take specialist advice to determine the source of the contamination. Do not re-enter the cabin until it is safe to do so.

The monitor should be tested at regular intervals. Please refer to the Manufacturer's Operating Manual for instructions on how to carry out these tests.

6.9 BENCH SEATING

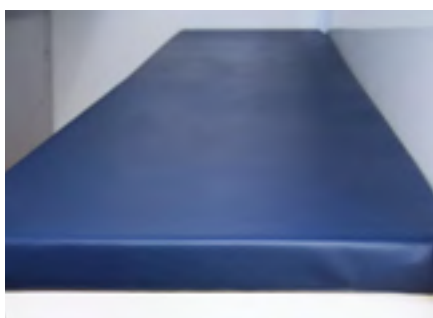

The seat pads of the bench seating in the canteen and office area (if applicable) may be cleaned by wiping down with clean water and a mild detergent. All the bench seat pads can be lifted off for deeper cleaning.

Stored within some benches is electrical equipment such as the battery, hydraulic ram machinery, etc. You will also find the remote control for the hydraulic rams and the props.

6.10 DEDICATED STORAGE



In all welfare cabins apart from the 6-man Canteen Space 12 unit, there is generous dedicated storage space under the some of the bench seating for boots and tools. The areas under other benches are used to house equipment and components. Please do not store items in these other underseat areas where equipment is installed.



Some models of cabin are also equipped with wall-mounted storage compartments to ensure there is adequate space for workers to store their clothes and equipment without causing trip hazards on the floor.

6.11 WINDOWS AND SHUTTERS



There are one or more sliding window in your cabin. To open the window(s), release the latches and slide the glass panel open.



CAUTION

When leaving the unit unattended and when towing ensure the security shutters are closed and the window is shut and latched.



The windows are protected by steel security shutters which are locked internally and can only be opened from inside the unit. To open, release the lockbolt and push the shutters open. There is a catch on the outside of the unit to hold them back in position.



CAUTION

The security shutter is heavy and may move suddenly if on uneven ground or when windy. Take care to avoid trap injuries to hands and fingers when opening or closing the shutters.

6.12 MAGNETIC DOOR STAYS



NOTE

Unlike traditional metal door stays where you have to remember to disengage the stay, with the magnetic stay there is no risk of damage either to the stay or to the door if the door is slammed or pulled with too much force.



CAUTION

Beware of the step when leaving the cabin.

You will notice your cabin is fitted with a magnetic door stay. This is a robust magnetic mechanism for holding the door open. In the fully open position this will engage automatically. To close the door, disengage the mechanism simply by firmly pushing or pulling the door towards its closed position.

6.13 DOOR LOCKS



The cabin doors are locked by moving the slider to the locked side and then locking with the key.