



XS WIRELESS 2

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Πίνακας οδηγιών | Kisa Kilavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Set	Lavalier Set	Headmic Set
XS WIRELESS 2	XSW 2-835	XSW 2-865	XSW 2-CI1	XSW 2-ME2	XSW 2-ME3
EM-XSW 2 	•	•	•	•	•
NT 12-5CW 	•	•	•	•	•
SKM 835-XSW 	•	•	•	•	•
MZQ 1 	•	•	•	•	•
SK-XSW 	•	•	•	•	•
ME 2-2 	•	•	•	•	•
ME 3-II 	•	•	•	•	•
CI 1-N 	•	•	•	•	•
2 x AA LR6 1.5 V 	•	•	•	•	•

Battery

1. Remove the battery cover.
2. Insert the battery with the correct polarity.
3. Close the battery cover.

Low battery

When the display shows a low battery warning (B. I), the device will stop working. Replace the battery with a fresh one.

Approximate battery life:

~ 10 h	Full
~ 7 h	3/4
~ 3 h	1/2
Low Batt	Empty

Setup

Connect the microphone to the receiver using the appropriate cable (XLR-3, 6.3 mm, or ME 2-2).

Connect the receiver to the power source (EU, US, UK, AU, CN, KOR).

Connect the receiver to the antenna.

On/Off

Press the On/Off button to turn the device on or off. The device will be on for 1s and off for 3s.

Display

The display shows the following information:

- Radio frequency level
- Audio level
- Frequency (606.500 MHz)
- Diversity (ANT AB, TUNE, PRESET, SCAN, SYNC)
- Battery (B. I)
- Bank (CH 01)
- Channel
- Menu
- Sync

Volume

Adjust the volume using the volume knob.

Mute

Press the Mute button to turn the audio on or off.

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 02/17, 571344/A03

SENNHEISER

Change frequency



SET

Scan mode

⚠ SKM/SK Off!

606.500 MHz
B. 1 CH. 01

+ Bank
- Bank

SET

615.400 MHz
B. 2 CH. 03

SET

SET

Preset mode

606.500 MHz
B. 1 CH. 01

+ Bank
- Bank

SET

606.500 MHz
B. 2 CH. 01

+ Channel
- Channel

SET

615.400 MHz
B. 2 CH. 03

SET

SET

Tune mode

Bank U only!

606.000 MHz
B. U CH. 00

+ 25 kHz
- 25 kHz


SET

606.025 MHz
B. U CH. 00


SET

Sensitivity


- 0 dB
- 10 dB
- 20 dB
- 30 dB

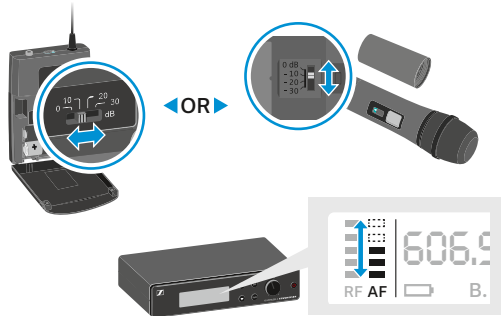


ME 2-2

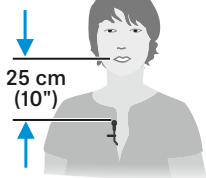


ME 3-II

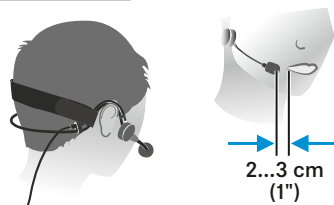

Squelch

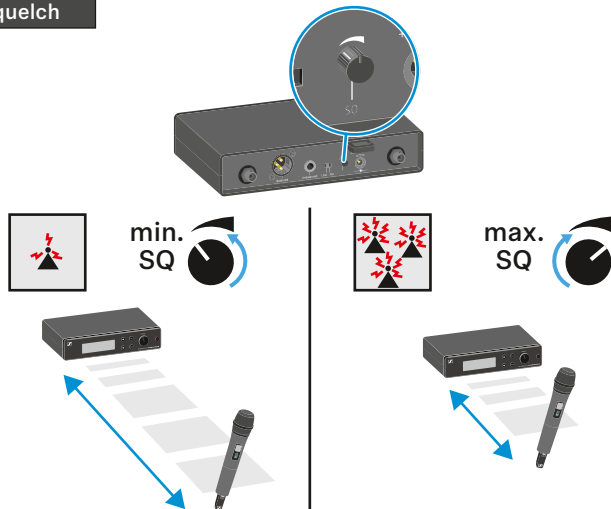

Sync

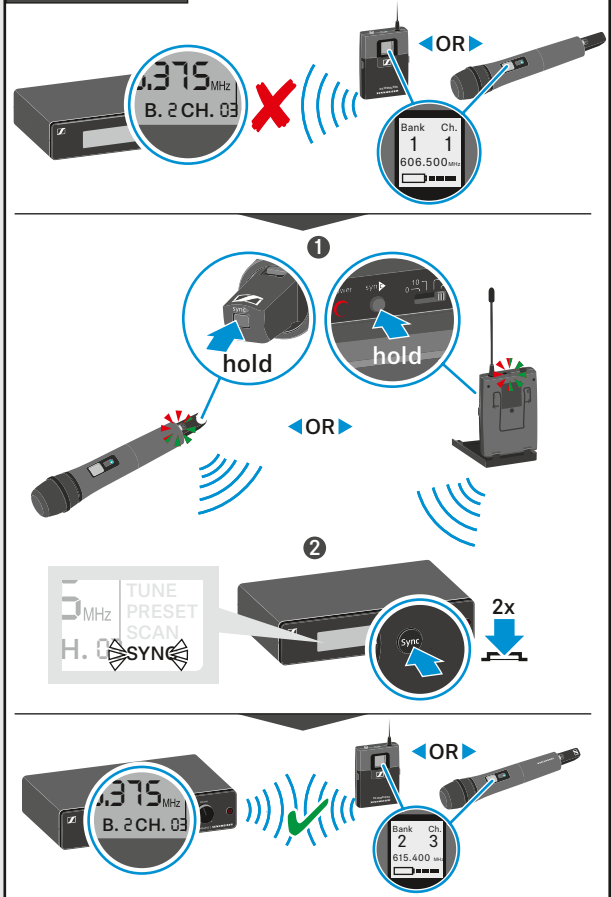


Multichannel


Bank 1...8; U
CH. 01...12

Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
2	3	2	4	2	5	2	6	✓
1	1	1	2	1	3	1	8	✓
2	3	1	3	4	7	8	9	✗
2	3	2	3	2	3	2	3	✗

Min. distance

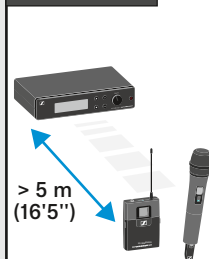

SKM

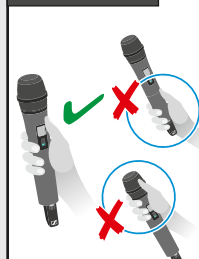

Guitar pickup

