

Basic Manual



W63K
by KYOCERA

CDMA 1X

WIN

au by **KDDI**

Contents/
Getting Ready

Phone Call

Text Input

Address Book/
Pair Function

Mail

Keitai! Kenkouroku

Camera

EZweb

EZ Navi

EZ News Flash

Other Functions

Troubleshooting/
Remote Ctrl Lock

Index

Introduction

Thank you for purchasing the W63K. Before using it for the first time, be sure to read the W63K Basic Manual (this PDF manual) so as to know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

Printed Manuals for the W63K (Japanese)

The W63K comes with a Basic Manual and an Instruction Manual.

W63K Basic Manual



Equivalent to this English PDF manual.

W63K Instruction Manual



English version not available.

The following manual is also available on the au website.

- To download the Basic Manual/Instruction Manual (<http://www.au.kddi.com/torisetsu/index.html>)
- To access a keyword searchable au online manual (<http://www.au.kddi.com/manual/index.html>)

You can also access the au online manual using EZweb.

<EZweb Access> au one Top⇒auお客さまサポート (au Customer Support)⇒調べる (Information)⇒オンラインマニュアル (Online Manual)

Read this barcode (QR code) to access to the au online manual ▶



Note

- The typefaces/design/colors of items in the screens and illustrations provided for explanatory purposes in this manual may differ from the actual screens and keys on the phone. Also, certain screen portions such as icons at the screen top may be omitted.

Cellphone Etiquette

Mind Your Manners!

A cellphone always emits weak radio waves while it is turned on, even when you are not talking with it. Enjoy using your cellphone without forgetting to be considerate of those around you.

Some locations do not allow the use of cellphones

- Using a cellphone while driving is dangerous and prohibited by Traffic Control Law.
- Using a cellphone in an aircraft is prohibited by law. Be sure to turn off your cellphone.



Watch out where you use your cellphone, and keep your voice down

- Do not make calls at cinemas, theaters, museums, libraries, or other similar locations. Turn off the cellphone or use Manner Mode to ensure that the ring tone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking a picture of others, be sure to obtain permission first.



Cellphone radio waves may interfere with electrical medical equipment

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn off your cellphone when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities prohibiting the use or possession of cellphones.



Cellphone Basics

What You Can Do with W63K

Mail

- **Mail:**
Send E-mail to other cellphones and PCs.
- **EZweb:**
Download Chaku-Uta®, wallpaper, and other data.
- **EZ News Flash:**
This service delivers the latest news and weather to your standby screen free of both information and call charges.



→ Page 46, 61, 69

EZ Navi

EZ Navi Walk, Passenger Seat Navi, Evacuate Navi, and Security Navi allow you to get various kinds of location information. They are all built-in functions.



→ Page 66

Camera

Shoot photos and send them by E-mail.



→ Page 57

Keitai! Kenkouroku

Records your weight and helps with diagnostic health checks.



→ Page 55

Safety Buzzer

Emit the extreme volume sound by using the Safety Buzzer function to show that you are in emergencies.



→ Page 71

Note

- Your phone also has many other functions. Refer to "Other Functions" (→Page 71).

When Carrying W63K Handset


Lock the handset keys to prevent the activation for accidental operations.



Note

- Some functions can be operated in keypad lock.

Keypad
Lock key

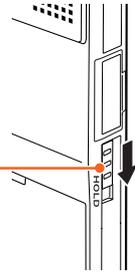

Simple Mode

Your W63K has Normal Mode and Simple Mode. Simple Mode lets you display in the menu only frequently used functions such as phone and mail, in an easy-to-use manner. The phone is in Normal Mode at the time of purchase. This manual describes operation for Normal Mode.



Simple Mode
main menu

Simple!



Note

- Follow the steps below to set Simple Mode.
When the standby screen is displayed in Normal Mode, → 8 0 TUV →
 "YES"
- Follow the steps below to set Normal Mode.
When the standby screen is displayed in Simple Mode, → select "Set Functions", [Select] → select "CancelSimpleMode", [Select] →
 "YES"

Manner Mode and Answer Memo

Manner Mode

Use Manner Mode to turn off the ring tone so as not to bother others around you.

When the standby screen is displayed, hold down  for at least one second.



→ Page 32

Answer Memo

If you cannot answer a call, Answer Memo plays an answering message and records the caller's message.

When the standby screen is displayed, hold down  for at least one second.



→ Page 32

Checking Power, Signal Strength, and Battery Level

Normally leave the phone turned on



The phone needs to be turned on to make and receive calls.

Hold down  for at least one second.

→ Page 13

You cannot talk on the phone if it is unable to receive a signal



Signal strength is low in some areas, even if they are within the service area.

"" indicates the current signal strength.

→ Page 13-14

Keep an eye on the battery level



The phone may not function properly if battery power is low.

"" indicates the current battery level.

→ Page 13-14

Using Your Cellphone While Driving is Prohibited

Do not use your phone while riding a bicycle or a motorbike, or while driving a car. Doing so may cause an accident. Using a cellphone while driving a car or riding a motorcycle is prohibited by Japanese law. You may also be penalized for using a cellphone while riding a bicycle.



× Reading mail or looking at the display



× Holding a cellphone in your hand to talk

Turn off your cellphone or use Drive Mode while driving

Drive Mode

In Drive Mode, the phone will play the message "ただ今、車を運転しています。..."(I am driving right now. . .), and ask the caller to leave a message using Answer Memo.

When the standby screen is displayed,

- select "Manner Mode",
- [Select]→select "Drive Mode",
- [OK]



Beware of Spam and One-ring Calls!

If you receive spam . . .

→Page 52

You can set up mail filters to block specific mail or spoof E-mail.

Your cellphone mainly has the following functions to block spam.

- Blocks mail identified as "未承諾広告※"(Unsolicited advertisement)
- Blocks specific mail
- Blocks spoof E-mail



If you receive a call from an unknown number . . .

A "one-ring call" (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges. Beware of one-ring calls.

An "❗" icon at the head of an incoming record indicates that the call rang for only less than three seconds.



Incoming	Outgoing
01 11/11 12:34 0901234XXX	No Image
02 11/11 12:02 Tom Brown	No Image
03 11/09 10:42 John Smith	No Image
04 11/09 10:15 Tom Brown	No Image
01 11/09 10:13 James Adams	No Image

Back Detail Menu

Disaster Message Board Service

Disaster Message Board

The Disaster Message Board lets you use EZweb to register information about your safety in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

Registering safety information

- ◆ When a major disaster strikes, you can use your au cellphone to access the "災害用伝言板"(Disaster Message Board) on EZweb and register your current condition, comments, and other information about your safety.
- ◆ After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

Checking safety information

- ◆ Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.
- ※ Disaster Message Board information can be accessed from other brand cellphone, PHS, or PC at <http://dengon.ezweb.ne.jp/>.

災害用伝言板

伝言板トップ

～サービス提供中～

安否情報の登録・確認ができます。

[登録\(登録可能地域は下記のご利用地域情報を参照ください\)](#)

[確認](#)

[削除](#)

[安否お知らせメール設定](#)

[サービス概要](#)

[ご利用地域情報](#)

[お問合せ](#)

[災害対策への取り組み](#)

[災害関連情報](#)

[English](#)

How to access

 →EZweb →au one Top→災害用伝言板(Disaster Message Board)

<http://dengon.ezweb.ne.jp/>

- ※ Registered contents are retained for up to 72 hours.
- ※ You can register up to 10 entries per phone number. Registering a new entry when there are already 10 will automatically overwrite the oldest.
- ※ You can view a Disaster Message Board demonstration at:  →EZweb→au one Top→auお客さまサポート(au Customer Support)→災害用伝言板(デモ版)(Disaster Message Board (Demo))
- ※ To view the Disaster Message Board in English, select the "English" option on the Disaster Message Board top screen.

● Cellphone Etiquette	1
Mind Your Manners!	1
● Cellphone Basics	2
What You Can Do with W63K	2
When Carrying W63K Handset	3
Simple Mode	3
Manner Mode and Answer Memo	4
Checking Power, Signal Strength, and Battery Level	4
Using Your Cellphone While Driving is Prohibited	5
Beware of Spam and One-ring Calls!	6
Disaster Message Board Service	7
● Contents	8
● Getting Ready	10
Checking the Contents of the Package	10
Names of Parts	11
Charging the Battery	12
Turning Power On/Off	13
Display Indicators	14
Initializing Your Phone	15
Switching the Display Language to English	16
Basic Operations	18
Initializing E-mail and EZweb	22
Checking Your Current Phone Number and E-mail Address	23
Changing Your E-mail Address	23
● Phone Call	26
Making a Call	26
Making an International Call	27
Answering a Call	28
Redialing (Outgoing Records/Incoming Records)	29
Adjusting the Earpiece Volume	29
Adjusting the Ring Tone Volume and Melody	30
Turning On Manner Mode	32
Turning On Answer Memo	32
Playing an Answer Memo	33
● Text Input	34
Basic Key Operation	34
Switching the Input Mode	35
Character Key Assignments	36
Inputting Text	37
● Address Book	39
Registering to the Address Book	39
Dialing from the Address Book	41
Editing an Address Book Record	41
Adding Outgoing or Incoming Record Data to the Address Book	43

● Pair Function	44
Registering Pair Partners	44
Using the Pair Function	45
Dialing with One Touch Dial	45
● Mail	46
E-mail	46
C-mail	46
Creating and Sending E-mail	47
Reading Received E-mail	49
Reading E-mail with Photos or Movies Attached	50
Replying to Received E-mail	51
Blocking Spam	52
Creating and Sending C-mail	53
Reading Received C-mail	54
● Keitai! Kenkouroku	55
What You Can Do with Keitai! Kenkouroku	55
Displaying Keitai! Kenkouroku Menu	56
● Camera	57
Basic Key Operation	57
How to Take Photos Successfully	58
Photo Size	58
Shooting a Photo	59
Attaching a Photo to an E-mail	60
Viewing Photos	60
● EZweb	61
About EZweb	61
Displaying au one Top	62
Saving Your Favorite Websites	63
Viewing Bookmarked Sites	64
Checking Your Phone Costs	64
Downloading Chaku-Uta®	65
● What You Can Do with EZ Navi	66
● EZ News Flash	69
What You Can Do with EZ News Flash	69
Setting EZ News Flash	70
● Other Functions	71
Safety Buzzer	71
● Troubleshooting	73
If You Lose Your W63K	74
● Index	78

Getting Ready

Checking the Contents of the Package


- W63K handset



- Battery pack



- Desktop holder

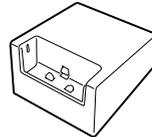

- CD-ROM (Japanese)



- Warranty (Japanese)
- Operating Precautions (Japanese)
- Global Passport mobile rental service Owner's Guide (Japanese)
- Promotional Fliers (Japanese)

- Basic Manual (Japanese)






- Instruction Manual (Japanese)




Note

- AC adaptor is not included. Please purchase a common AC adaptor 01/02 (option).
- microSD card is not included.

Names of Parts

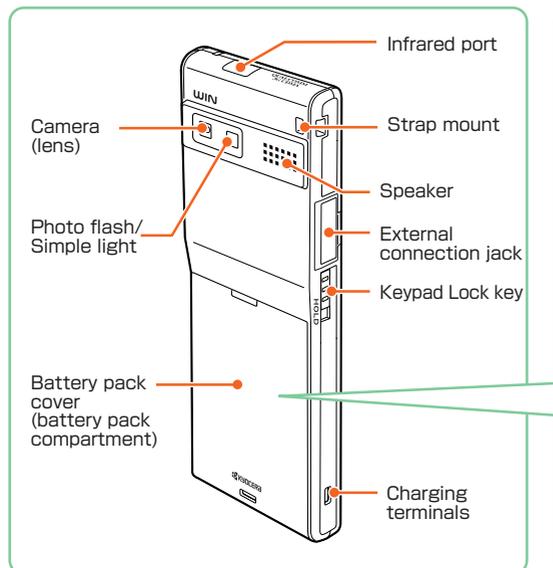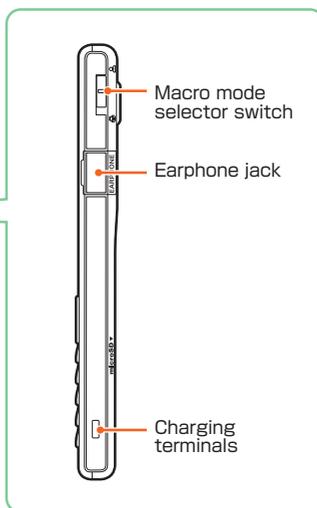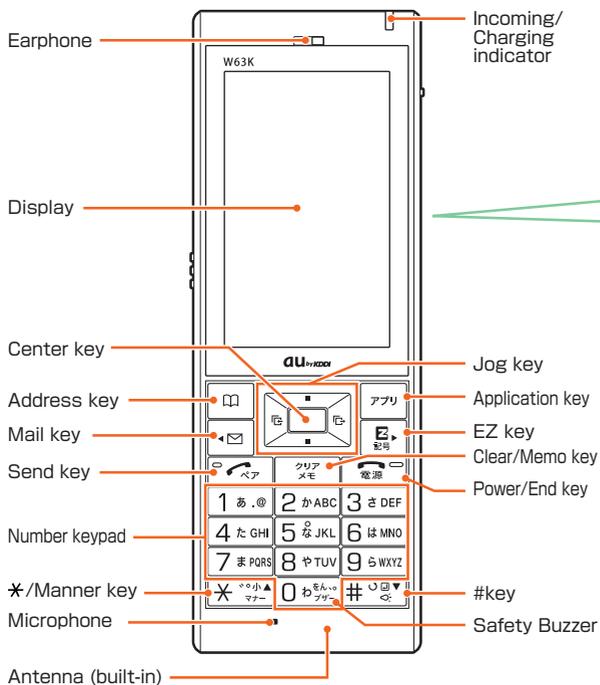


<Inserting au IC-Card>

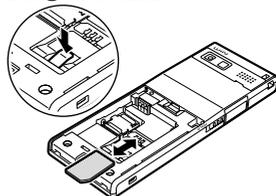



Do not take out this card if not necessary as your phone number is recorded on it.

<Inserting microSD card>

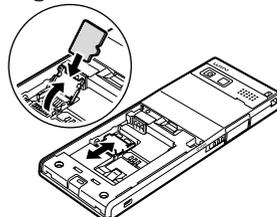

Charging the Battery

The battery pack that comes with the phone is not fully charged when purchased. Be sure to charge the battery pack before using the W63K for the first time and whenever the battery level has become depleted.

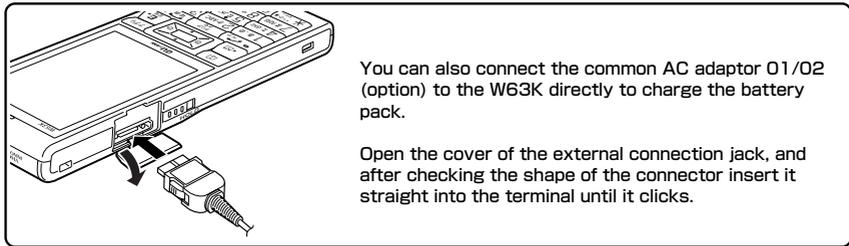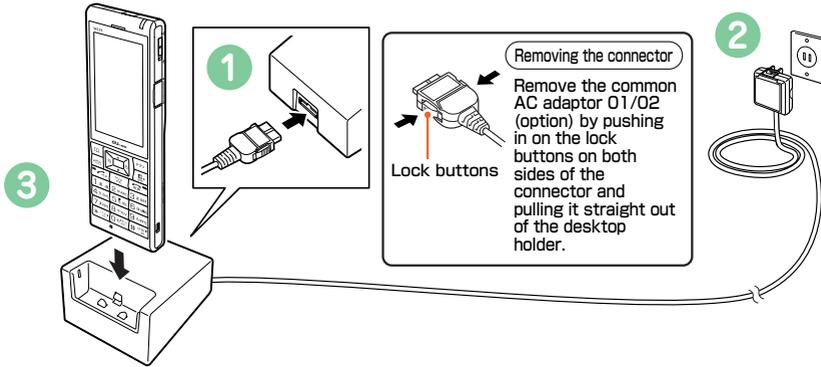

- 1 Check the shape of the connector for the common AC adaptor 01/02 (option), and insert it straight into terminal of the desktop holder until it clicks.
- 2 Rotate and fold out the power plug for the common AC adaptor 01/02 (option), and plug it into a household 100V AC power outlet.
※The common AC adaptor 02 (option) is usable for up to 240V AC.
- 3 Insert the W63K into the desktop holder until it clicks. Charging begins.

The charging start signal sounds, and the incoming indicator lights red→charging
The charging end signal sounds, and the incoming indicator goes out→charging finished

When charging is completed, remove the W63K from the desktop holder, and remove the power plug from the power outlet.

Note

- You must purchase a common AC adaptor 01/02 (option) for charging. Note that the configuration of the AC adaptor may be different from that shown in the illustration.

Turning Power On/Off

At time of purchase, the appearance of the standby screen, main menu, and other displays will differ depending on the color of your W63K handset. In this manual, screens for a burgundy handset are used.

Turning power On



Hold down  for at least one second.
The standby screen appears.

Battery level

			
High	Charge left	Charge low (needs charging)	Empty (needs charging)

During charging the battery level icon flashes.

Signal strength

				Out of Range
Strong	Medium	Weak	Very weak	Out of Range

PetaMemos set

"Calculator", "Alarm", "PowerSavingMode", and "京セラサイトK"(Kyocera SiteK) are set.

Standby screen




Turning power Off



Hold down  for at least two seconds.

Display Indicators

The following explains the main icons that appear on the standby screen.

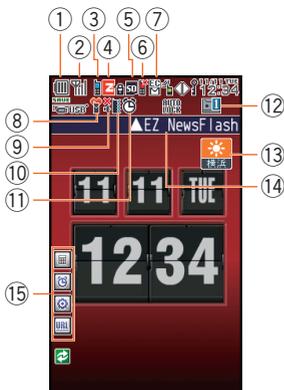

	Icon	Description
①		Battery level
②		Strength of received signal
③		Calling
④		Using EZweb
		EZ apps functioning
⑤		microSD card inserted
⑥		Incoming call that you did not answer
⑦		When E-mail or C-mail is received
		When an emergency earthquake bulletin is received
⑧		Manner Mode on
⑨		Ring tone off
⑩		Vibrator on
⑪		Alarm on
⑫		Answer Memo on (digit is number of messages)
⑬	—	News Flash window
⑭	—	News Flash telop
⑮		PetaMemos set

 
Note

- When a call or mail is received, the incoming/charging indicator flashes to notify.


Initializing Your Phone

After purchasing your phone, the initial settings screen is displayed when you first display the main menu. Perform the following steps.

- 1 When the standby screen is displayed, press .



 
- 2 Select "自動設定"(Auto Setup) and press  [選択](Select).



■ The following settings are applied for "自動設定"(Auto Setup).

Font Size	Medium Large for E-mail
Change LockNo.	1234
Caller ID	ON

 - 3 Press .




Note

- If you selected "通常モード"(Normal Mode) in step 2, you can set "文字サイズ"(Font Size), "ロックNo.変更"(Change LockNo.), and "発信者番号通知"(Caller ID).



Switching the Display Language to English

You can switch the display language for function names and other items to English.


 
- 1 When the standby screen is displayed, press .



 
- 2 Select "機能設定" (Set Functions) and press  [選択] (Select).

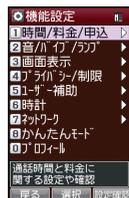

 
- 3 Select "画面表示" (Screen Setup) and press  [選択] (Select).

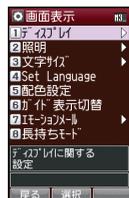

 - 4 Select "Set Language" and press  [選択] (Select).



 
- 5 Select "English" and press  [選択] (Select).



6

Select "Alphabet" and press

  [OK].



Basic Operations

Key functions



: Locks the keys



 
: Displays address book



: E-mail
C-mail (hold down at least one second)
EZweb page scroll



: Dials/answers a phone call
Displays the Pair function




: Inputs phone number/text



: Toggles Manner Mode on and off (hold down at least one second)



: Emits the Safety Buzzer sound (hold down at least one second)

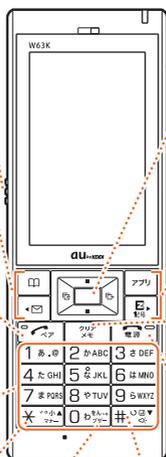

: Displays the main menu



: Selects items and adjusts sound volumes



: Displays incoming records



: Displays outgoing records



: Displays EZ apps menu



: Displays EZ Service menu
EZweb page scroll



: Returns to previous screen
Displays memo menu
Toggles Answer Memo on and off (hold down at least one second)



: Ends call
Turns power on (hold down at least one second)
Turns power off (hold down at least two seconds)
Lights Display in keypad lock




: Toggles Photo Flash on and off (camera activated)
Turns the simple light on in standby screen (hold down at least one second)

Using the jog key

Use the jog key to select items in each of the menu screens and move the cursor in the text input screen.



Jog key

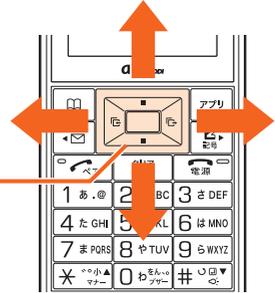


For example ...

Selecting an item in the main menu (Page 21)



Selecting an item in the various menus

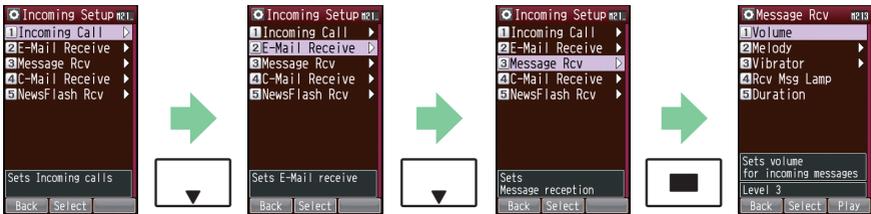

Moving the cursor to input text




Using the operation guides


Operation guides are displayed at the bottom of the screen.

To use them, press the key in the same location as the corresponding guide.

Displayed operation guides differ depending on the screen.

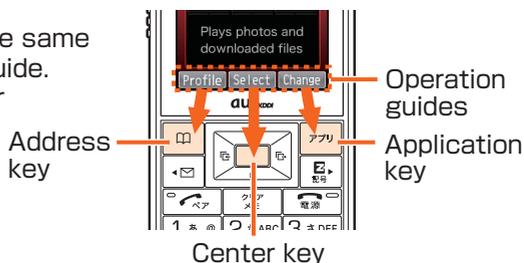

Various functions are assigned to the 3 keys depending on the screen in operation.

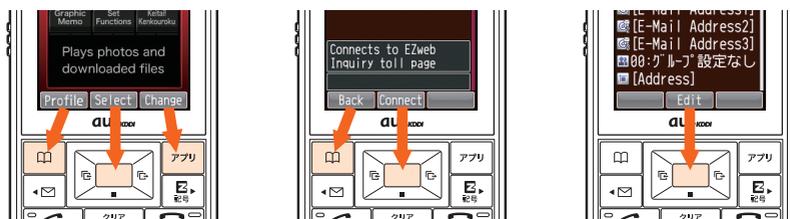

For example . . .

When operation guides are displayed as shown below, you can press **アプリ** [Menu] to display a menu.




アプリ



To return to the standby screen or previous screen

When you have mistaken an operation and want to return to the previous screen or want to cancel an operation and return to the standby screen, use  or .

<Standby screen>

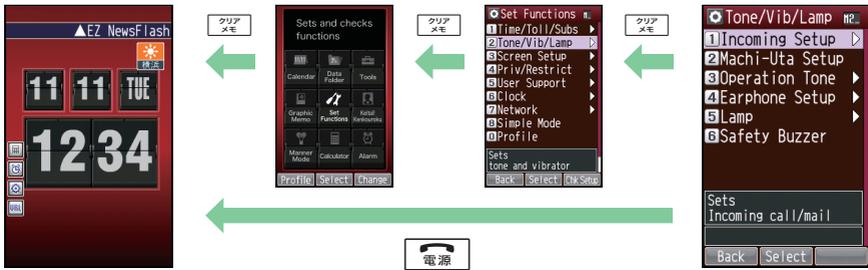

Note

- When "Back" is displayed on the left of the operation guides, you can return to the previous screen with  [Back].

Main menu

When the standby screen is displayed, the main menu is displayed by pressing .

You can use the following functions from the main menu.

Infrared Comm.	Camera	microSD
Calendar	Data Folder	Tools
Graphic Memo	Set Functions	Keitai! Kenkouroku
Manner Mode	Calculator	Alarm


 
<Main menu>



Initializing E-mail and EZweb


An EZweb subscription is required to use E-mail and EZweb. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Center. Before using your phone, be sure to make the initial settings. Your E-mail address will be automatically determined by making initial settings.

- 1 When the standby screen is displayed, press .

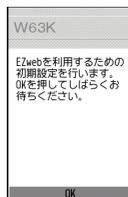

- 2 Press  [OK].

Initialization starts. Wait for initialization to end.

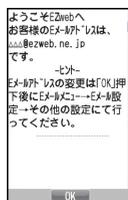

- 3 Press  [OK].

To set EZ News Flash, follow the instructions on the screen.

Press  to return to the standby screen.



Checking Your Current Phone Number and E-mail Address

- 1 When the standby screen is displayed, press  and press .

Your current phone number and E-mail address are displayed.



Note


 
- Your phone number and E-mail address can be checked by pressing  and then  [Profile] while the standby screen is displayed.

Changing Your E-mail Address



E-mail address

You can change the "▲▲▲▲" part of ▲▲▲▲@ezweb.ne.jp.



- 1 When the standby screen is displayed, press . Select "E-Mail Setup" and press  [Select].

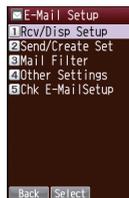

 
- 2 Select "Other Settings" and press  [Select].

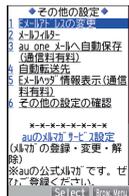

 - 3 Select "Eメールアドレスの変更"
(Change E-mail Address) and press
 [Select].

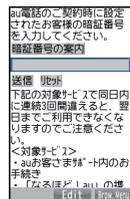


- 4 Select the input field and press
 [Edit]. Input your Security
Code and press  [OK]. Select
"送信"(Send) and press  [Select].

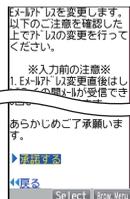

Your Security Code is the 4-digit number that you wrote on the application form when subscribing. If the wrong Security Code is entered three times on the same day, you will not be able to change your E-mail address until the following day.

 - 5 Select "承諾する"(Accept) and press
 [Select].



- 6 Select the input field and press
 [Edit]. Input your E-mail
address and press  [OK].


 


If your E-mail address won't change, try the following.


- Use a combination of both letters and numbers.
- Use a longer address (up to 30 characters).

Refer to "Characters usable in your E-mail address" (→Page 25) for characters you can use in your E-mail address.

- 7 Select "送信"(Send) and press
 [Select].

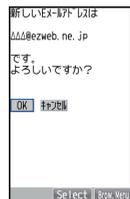

8 Select "OK" and press  [Select].

 

Follow the instructions on the screen to proceed further.



Note

- An error message will appear if the E-mail address you entered is already in use by someone else. Try entering a different address.

Characters usable in your E-mail address

A different character is displayed each time you press a key as in the table.

Key	Number of presses								
	1	2	3	4	5	6	7	8	9
1 あ・@	.	@	-	_	/	:	~	1	
2 かABC	a	b	c	A	B	C	2		
3 さDEF	d	e	f	D	E	F	3		
4 たGHI	g	h	i	G	H	I	4		
5 なJKL	j	k	l	J	K	L	5		
6 はMNO	m	n	o	M	N	O	6		
7 まPQRS	p	q	r	s	P	Q	R	S	7
8 やTUV	t	u	v	T	U	V	8		
9 らWXYZ	w	x	y	z	W	X	Y	Z	9
0 ろん・ブー	.	,	-	_	'	!	?	(space)	0

Allowable Characters in Your E-mail Address

- Shaded characters/symbols cannot be used to the left of the "@" in "△△△@ezweb.ne.jp".
- A period "." cannot be used as the first character. A zero "0" can also not be used as the first character.



Phone Call

Making a Call

 
- 1 Enter the phone number you want to call.

When calling regular phones, you need to enter the area code.



- 2 Press .

After you finish a call, press  to hang up.




Making an International Call

au International Call Service

Available without any additional application.

Example: To call 212-123-△△△△ in the USA

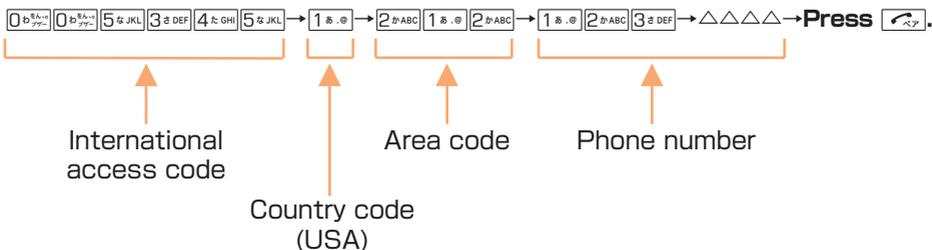

- Calling charges for this service are added to monthly mobile phone calling charges and billed together.
- Please check the Country code at the au Customer Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Center.

001 KOKUSAI MOBILE TALK


Application required.

For inquiries, please contact the KDDI Customer Service Center.

☎0077-7160

(toll-free; open 9:00 to 20:00 everyday including weekends and national holidays)

Example: To call 212-123-△△△△ in the USA

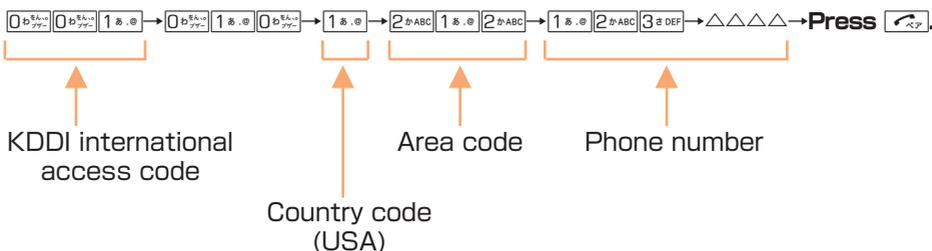

- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Please check the Country code at the au Customer Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Center.

Answering a Call

1 Press  to answer a call.



After you finish a call, press  to hang up.



Note

- The Message menu "MissedCall: △" appears on the standby screen if you did not answer one or more calls. If a Message menu appears, you can call the person back with the following steps.

Select "MissedCall:" with ,  [Check] → select the number to call, 


- When the phone is ringing, the phone number of the caller is displayed. Their name is displayed if their name is registered in the address book.
- One of the following messages appears when the phone number of the caller is not provided for some reason.



ID Unsent	The caller's phone is not sending its phone number.
Not Support	The call is from an area or phone that does not support caller ID.
Payphone	The call is from a pay phone.


Redialing (Outgoing Records/Incoming Records)

 - 1 When the standby screen is displayed, press  (Outgoing records) or  (Incoming records).

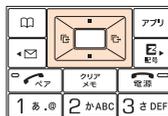

Records are displayed in order from the last made (received) call.

 - 2 Select a record with  and press .

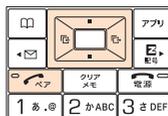


Note

- The phone stores up to 50 records each of outgoing and incoming.

Adjusting the Earpiece Volume

 - 1 During a call, adjust the volume with .

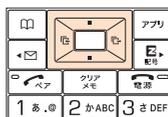


 : Increases the volume.

 : Decreases the volume.



You can adjust the earpiece volume in 5 levels. "level 3" is set at the time of purchase.

Adjusting the Ring Tone Volume and Melody

 
- 1 When the standby screen is displayed, press . Select "Set Functions" and press  [Select].



 
- 2 Select "Tone/Vib/Lamp" and press  [Select].

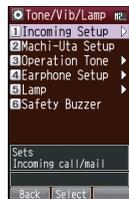

 
- 3 Select "Incoming Setup" and press  [Select].



 - 4 Select "Incoming Call" and press  [Select].



 
- 5 Select "Volume" and press  [Select]. Adjust the volume with  and  and press  [OK].



STEP UP	Ring tone volume gradually increases.
Level 5 (Deka) (Loud) ⋮ Level 1 (Soft)	Ring tone sounds at the set level.
OFF	Ring tone does not sound.


The volume is set to "level 3" when you purchase your phone.

 6 Select "Melody" and press


 [Select].


The fixed ring tone "Pattern 1" is set when you purchase your phone.

 
7 Select "Fixed RingTone" and press

 [Select].

 
8 Select "Preset Data" and press

 [Select].

 
9 Select the ring tone and press

 [OK].

 **Note**

- When you are selecting a ring tone, you can play a ring tone with the following steps.

Press  [Play] at step 8

Pressing  /  while a ring tone is playing will play the previous or next one. You can also adjust the volume with .

- You can also change the melody played when receiving E-mail/C-mail, Message, or EZ News Flash.
- You can download Chaku-Uta® and set it as the ring tone ("Downloading Chaku-Uta®" →Page 65).

Turning On Manner Mode

While Manner Mode is on, the phone alerts you to incoming calls by vibrating.

- 1 When the standby screen is displayed, hold down  for at least one second.



When Manner Mode is on, a "" icon is displayed on the standby screen.

■ To turn Manner Mode off

 
Hold down  again for at least one second

Note

- You can also toggle Manner Mode on and off with the following steps.
When the standby screen is displayed,  → select "Manner Mode",
 [Select] → select "Manner Mode"/"Cancel MannerMode",  [OK]

Turning On Answer Memo

- 1 When the standby screen is displayed, hold down  for at least one second.



When Answer Memo is on, a "" icon is displayed on the standby screen.

■ To turn Answer Memo off

Hold down  again for at least one second

Note


- The W63K can store up to 10 Answer Memos, each of which can be up to 60 seconds long.
- Even when Answer Memo is off, you can record a caller's message with the following steps.
During a call, press .
- au's Answering Service (Voice Mail) allows callers to leave voice messages if they could not reach you to leave an Answer Memo because your phone was turned off or were in a location with poor signal reception.

Playing an Answer Memo

- 1 When the standby screen is displayed, press  [Clear Memo].




- 2 Select "Answer Memo" and press  [Select].

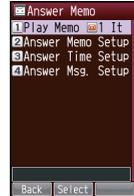

When there are unplayed memos, a  icon is displayed.

 - 3 Select "Play Memo" and press  [Select].

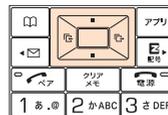

The Play Memo list is displayed.

- 4 Select the memo to play and press  [Play].



The Answer Memo plays back.
During playback, you can pause play by pressing  [Stop].
During playback, you can play the next recorded Answer Memo by pressing  [Next].

Note

- When Answer Memos are stored, the Message menu "AnswerMemo: △" is displayed on the standby screen. If a Message menu appears, you can play the memo with the following steps.
Select "AnswerMemo:" with ,  [Check] → to step 3
- You can press  [Delete] in step 4 and erase an Answer Memo.

Text Input

Basic Key Operation

■ Switches the input mode (kanji/hiragana, letters, numbers, etc.)

■ Deletes text

■ Returns to state before text was input or deleted

■ Inputs text

■ Switches capital/small letters

■ Switches pictographs/emoticons/double-byte symbols/single-byte symbols

■ Confirms text


■ Moves cursor

Press 



■ Selects item

Press 

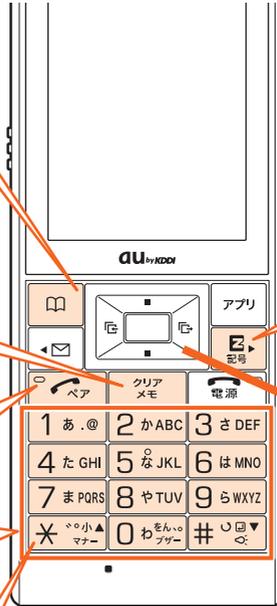


Switching the Input Mode

- 1 In the text input screen, press  [ChrTyp].



 - 2 Select the input mode and press  [Select].



The input mode can be selected from the following.

漢あ	Kanji/hiragana
カナ	Double-byte katakana
A a	Double-byte letters
1 2	Double-byte numbers
? &	Double-byte symbols
	Pictographs
か	Single-byte katakana
Aa	Single-byte letters
12	Single-byte numbers
?&	Single-byte symbols
(^ ^)	Emoticons

Text input screen

Input text and numbers using  to ,  and  for registering to the address book and creating mail.

In this manual, the screen for entering text and numbers is called the "text input screen".

Character Key Assignments

Key	Input mode	
	Letter mode*1*2	Number mode
	. @ _ / : ~ 1	1
	abcABC2	2
	defDEF3	3
	ghiGHI4	4
	jklJKL5	5
	mnoMNO6	6
	pqrPQRS7	7
	tuvTUV8	8
	wxyzWXYZ9	9
	. _ ' ! ? ␣ (space) 0	0
	. _ ' ! ? ␣ (space)	*
	Switch capital/small letters	- (hyphen) *4
	Text unconfirmed: text switched in reverse order (Back Space function)	#
	After text confirmed: ↵ (linebreak)	P (Pause) *4
	After text deleted: return to state before deletion (up to 10 steps) After text confirmed: return to state before input	

*1 : " ~ " in single-byte letter input mode changes to " ~ " (tilde).

*2 : When entering in EZweb, capital letters may be displayed first.

*3 : Linebreaks may not be enterable depending on input item.

*4 : When entering a phone number, hold down for at least one second to enter.

Basic text input

You can input characters appearing on the keys.

To input :

Ex.) In double-byte/single-byte letter input mode . . .

Press 1 time→2 times→3 times→4 times→5 times
→7 times→8 times . . .
a→b→c→A→B→C→2→a . . .

Inputting Text

Input single-byte alphanumeric

Input "taro-2"

Switch to single-byte letter input mode referring to steps 1 to 2 of "Switching the Input Mode" (→Page 35).

- 1 Press **8** やTUV (once), **2** かABC (once),
7 ま PQRS (3 times), **6** は MNO (3 times),
1 あ.@ (3 times), and **2** かABC (7 times).

戻る	クリア メモ	電話
1 あ.@	2 かABC	3 き DEF
4 た GHI	5 な JKL	6 は MNO
7 ま PQRS	8 やTUV	9 ら WXYZ
* **か マフ	0 わん. ワフ	# ひ フ



Note

- To continue inputting the same text or text assigned to the same key, move the cursor with **▶** and then input.
- To input "ab" in letter input mode



- Other operations

- To delete text

Move the cursor to text you want to delete and press **クリア** メモ

Inputting useful sentences, emoticons, and pictographs

Input the useful sentence "@ezweb.ne.jp"

- 1 In the text input screen, press  [Menu].
- 2 Select "Get" and press  [Select].
Select "UsefulSentence" and press  [Select].
- 3 Select "Internet" and press  [Select].
Select "@ezweb.ne.jp" and press  [OK].



Input the emoticon "o (^-^) o"

Switch to emoticon input mode referring to steps 1 to 2 of "Switching the Input Mode" (→Page 35).

- 1 Select "o (^-^) o" and press  [OK].
You can switch emoticon categories with  or .



Input the pictograph "♥"

Switch to pictograph input mode referring to steps 1 to 2 of "Switching the Input Mode" (→Page 35).

- 1 Select "♥" and press  [OK].
You can switch pictograph categories with  or .



Note


 
- You can switch to pictograph/emoticon mode by pressing  in the text input screen.
- You can continuously input emoticons and pictographs by pressing  [Continue] instead of  [OK] in step 1.

Address Book

You can save up to 1,000 frequently used phone numbers and E-mail addresses.

Registering to the Address Book

- 1 When the standby screen is displayed, hold down  for at least one second.

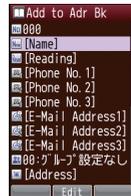


- 2 Select [Name] and press  [Edit]. Enter the name and press  [OK].




The reading is entered automatically.
To correct it, press  [Edit], delete the text with  and enter again.

- 3 Select [Phone No. 1] and press  [Edit]. Enter the phone number and press  [OK].

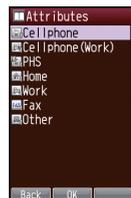

 - 4 Select attributes for the phone number and press  [OK].




 If you do not want to register the E-mail address
Go to step 7

- 5 Select [E-Mail Address1] and press  [Edit]. Enter the E-mail address and press  [OK].



 - 6 Select attributes for the E-mail address and press  [OK].



- 7 Press  [Comp].


 


Note



- Address book records are numbered from 000 through 999. A new record is automatically assigned to the lowest available unused record number.
- An address book record can also contain birthday and zodiac information and images.
- Refer to "Text Input" (→Page 34) for how to input text.

Dialing from the Address Book


- 1 When the standby screen is displayed, press .

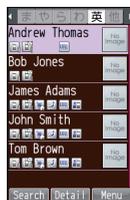

- 2 Select the name with .

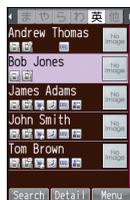 

- 3 Press .

 

Note

 
- After selecting the name in step 2, you can check the information in the address book by pressing  [Detail].

Editing an Address Book Record

Example: To change a phone number

Select the name to edit referring to steps 1 to 2 of "Dialing from the Address Book" (→Page 41).


- 1 Press  [Menu].




2 Select "Edit" and press  [Select].

 To delete

 
Select "Delete",  [Select] → select "Delete One",  [Select] → select "YES",  [OK]





3 Select the phone number and press  [Edit]. Edit the phone number and press  [OK].

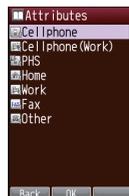

 
4 Select attributes for the phone number and press  [OK].



5 Press  [Comp].

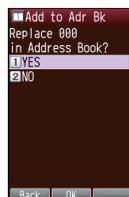 

6 Select "YES" and press  [OK].

 


Note


- You can edit in the same way if you select another item at step 3.

Adding Outgoing or Incoming Record Data to the Address Book

 
- 1 When the standby screen is displayed, press  (Outgoing records) or  (Incoming records).



 
- 2 Select the number with  and press  [Menu].



 - 3 Select "Add to Adr Bk" and press  [Select].



 - 4 Select "Store New" and press  [Select].



Note


 
- Refer to steps 2 to 7 in "Registering to the Address Book" (→Page 39) for how to add to the address book.

Pair Function

Registering Pair Partners

You can save frequently used phone numbers (up to three), allowing you to display them easily to make calls or send mail.

- 1 When the standby screen is displayed, press .

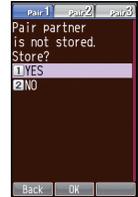

- 2 Select "YES" and press  [OK].

 If a pair partner is already registered
Select ,  [Select]



- 3 Select the partner to add with  and press  [OK].

 


Note

- Pair partners are selected from the address book to be added. Before adding a pair partner, add the pair partner information to the address book referring to "Registering to the Address Book" (→Page 39) before registering the pair partner.
- As pair partners are linked with the address book, deleting a pair partner from the address book will delete a registered pair.


Using the Pair Function

- 1 When the standby screen is displayed, press , and select the partner with .



The name and phone number/E-mail address for the pair partner are displayed.

 - 2 Select from "Phone", "E-Mail", or "C-Mail" with  and press  [Select].



■ With 

Make a call to the partner.

■ With 

Send E-mail to the partner referring to steps 5 to 7 of "Creating and Sending E-mail" (→Page 47).

 
■ With 

Send C-mail to the partner referring to steps 5 to 6 of "Creating and Sending C-mail" (→Page 53).

Dialing with One Touch Dial

You can make a call to any of the phone numbers registered to pair partners 1 to 3 by holding down , , or  on the number keypad for at least one second. Register partners to the Pair function before hand (→Page 44).

- 1 When the standby screen is displayed, hold down any one of  to  for at least one second.



A call is made to the pair partner assigned the number of the number keypad.

Note

- If no pair partner is registered to an assignable number on the keypad, a screen appears asking if you want to register the pair partner. Select "YES" and press  [OK], and register the pair partner (→Page 44).

E-mail

You need to subscribe to EZweb in order to use E-mail.

If you did not subscribe to EZweb at the time of purchase, contact an au shop or the au Customer Center.

You also need to configure the initial settings before you can use E-mail.

If you have not configured the initial settings, please refer to "Initializing E-mail and EZweb" (→Page 22).

You can send/receive up to 5,000 double-byte characters (10,000 single-byte characters) in E-mail.

- You can send up to 30 mails at one once (includes mail in To/Cc/Bcc, and mail must be less than 640 single-byte characters).
- You can send up to 1,000 E-mails per day (an E-mail with multiple recipients is counted as more than one message).
- Sending and receiving E-mail messages with attachments may take a while.
- You will incur a packet transmission fee for each E-mail you send/receive. This fee will vary according to the E-mail data size.

C-mail

C-mail is a service that allows you to send mail between C-mail supported au phones using the au phone numbers.

You can send/receive mail of up to 50 double-byte (100 single-byte) characters.

- You will incur a fee each time you send C-mail.

About C-mail Safety Block

 
C-mail Safety Block blocks C-mails that contain URLs (http://***, https://***) or phone numbers.

C-mail Safety Block is activated by default.

If you want to receive C-mails containing URLs or phone numbers in their text bodies, you can deactivate this function.


Creating and Sending E-mail

- 1 When the standby screen is displayed, press . Select "Create New E-Mail" and press [Select].





The compose message screen appears.

 - 2 Select " (Destination)" and press [Edit].



 - 3 Select "Get Adr Bk (1)" and press [Select].

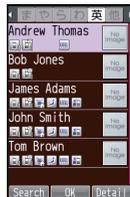

You can select the address from the send/receive history or enter it directly.

- 4 Select the recipient with and press [OK].



- 5 Select " (Subject)" and press [Edit]. Enter the subject and press [OK].

 


- 6 Select "Text (Body)" and press [Edit]. Enter the text body and press [OK].



- 7 Press [Send].

Mail is sent.




- To make changes before sending
 - Select from "To (Destination)", "Sub (Subject)", "Text (Body)", [Edit] → make changes

Reading Received E-mail

An E-mail notification tone is emitted when you receive an E-mail, and the Message menu "New E-Mail: △" is displayed in the standby screen.



1 Select "New E-Mail:" and press

  [Check].



The inbox folder list screen is displayed.

 2 Select "メインフォルダ"(Main Folder) and press  [Select].

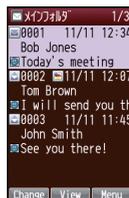


A list of all the mail in your inbox is displayed in the screen.

■ If you have not read the mail yet
"📧(Unread)" is displayed.

■ If you have read the mail already
"📧(Read)" is displayed.

3 Select the mail and press

  [View].



The mail's content is displayed. You can change the font size by pressing .

Note

 
- Perform the following steps to read mail from your inbox.
When the standby screen is displayed, press  → select "Inbox",  [Select] → to step 2
- In the Message menu, Inbox mail list and content display screen, icons matching the emotion of the E-mail (such as 😊 and 😞) are displayed. These icons are displayed by analyzing the title and content of the received mail.

Reading E-mail with Photos or Movies Attached

Example: Viewing an attached photo

Display the E-mail referring to steps 1 to 3 in "Reading Received E-mail" (→Page 49).

- 1 Select an image with  and press  [Play].



Note


- Receiving attachment files may take some time. Receiving mail may also take some time depending on the condition of the radio waves in your area.
- Depending on the size of the photo or movie files, you may have to select the file name in step 1 and press  [Receive] to receive the file.

Replying to Received E-mail


Display the text body of the mail you will reply to referring to steps 1 to 3 in "Reading Received E-mail" (→Page 49).

1 Press  [Reply].

The recipient's address is entered automatically.
"Re:" is added to the title and the original E-mail is quoted.

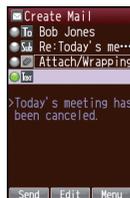


2 Select "" and press  [Edit].
Enter text body and press  [OK].

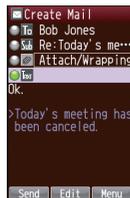

3 Press  [Send].

 Mail is sent.



Blocking Spam

It is strongly recommended that you set up the Mail Filter to avoid spam. If you select "サポート設定"(Supportive settings), you can easily set up the Mail Filter by answering questions on the screen.

Setting up the Mail Filter

Example: Connecting to "サポート設定"(Supportive settings)

- 1 When the standby screen is displayed, press .
- 2 Select "E-Mail Setup" and press  [Select].
- 3 Select "Mail Filter" and press  [Select].
- 4 Select "次へ"(Next) and press  [Select].
- 5 Enter your Security Code and press  [OK], and follow the instructions on the screen.



カンタン設定(Simple Settings)

サポート設定 (Supportive settings)

You set your filter level by answering questions. This is recommended for users who would like to set the mail filters by checking the filter conditions.

フィルターレベル (高) (Filter level (Strict))


This completely blocks mail sent from PCs. It is recommended if you only send/receive mail between cellphones.

フィルターレベル (中) (Filter level (Medium))

This function blocks mail from specific addresses as well as unsolicited advertisement and spoof E-mail. This is recommended if you are troubled by stalkers or the same spammer.

フィルターレベル (低) (Filter level (Normal))

Blocks unsolicited advertisement and spoof E-mail. You should set at least this level of security.

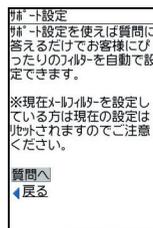


Note

- You can also prevent spam by changing your E-mail address. Refer to "Changing Your E-mail Address" (→Page 23) to see how to change your E-mail address.

Creating and Sending C-mail


 
- 1 When the standby screen is displayed, hold down  for at least one second. Select "Create New C-Mail" and press  [Select].



- 2 Select [Destination] and press  [Edit].




 - 3 Select "Get AddressBook" and press  [Select].

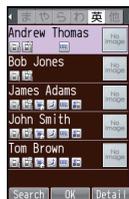

You can select your recipient from your send/receive history, or enter it directly.

 - 4 Select the recipient with  and press  [OK].



- 5 Select [Body] and press  [Edit]. Enter the text body and press  [OK].



6 Press  [Send].



 
Mail is sent.

- To make changes before sending
Select the destination or text body,
 [Edit] → make changes

Reading Received C-mail

When you receive C-mail, the C-mail notification tone will sound and the Message menu "New C-Mail: △" will appear in the standby screen.

1 Select "New C-Mail:" and press  [Check].




A list of all the mail in your inbox is displayed in the screen.

- If you have not read the mail yet
"  (Unread)" is displayed.
- If you have read the mail already
"  (Read)" is displayed.



 2 Select the mail and press  [View].



The mail's content is displayed. You can change the font size by pressing .



Note

- Perform the following steps to read mail from your inbox.

When the standby screen is displayed, hold down  for at least one second → select "Inbox",  [Select] → to step 2

- In the Message menu, Inbox mail list and content display screen, icons matching the emotion of the C-mail (such as  and ) are displayed. These icons are displayed based on the title and content of the received C-mail.

Keitai! Kenkouroku

What You Can Do with Keitai! Kenkouroku

You can keep a daily record of your weight in order to control your health, and if you become unsure you can check then and there using the "Self Diagnostic Health Check Tool".

Developed by: JustSystems Corporation

Supervising Director: Tsuguya Fukui (President, St. Luke's International Hospital)

Data provided by: ASK Corporation, "Katei no Igaku Shindan Jiten (Home Medicine Diagnosis Encyclopedia)"



Select "Keitai!
Kengkouroku" with [Select]




Keitai! Kenkouroku
Menu




健康録 [体重] (Health record [Weight])

Calculates your BMI from your height and weight and can record as a graph your weight changes as well as your ideal weight. You can record up to three years of data from the day you start.

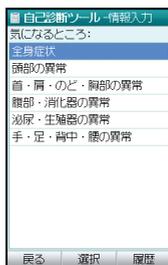

自己診断ツール (Self Diagnostic Health Check Tool)

You conduct a diagnostic self test by entering any physical or mental concerns or symptoms you may have and answering questions.

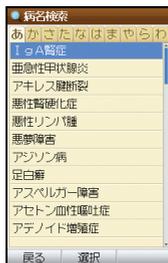

病名検索 (Search illness by name)

You can select an illness from the index and find out about its symptoms/causes/remedies.


 
Note

- This application was made in the hope that it will support users in maintaining and improving their health. However, the diagnosis results displayed in the Self Diagnostic Health Check Tool are only general possibilities and may not accurately reflect an individual user's health or potential illness. Physical and mental symptoms as well as health will differ according to each individual. Go and seek professional medical advice if you need an accurate check of your health. Moreover, while the medical information in this application is based on medical information that have been released to the public as of January 2008, and put together under expert supervision, we will not be liable against the information's completeness or accuracy.
- "Keitai! Kenkouroku" is the intellectual property of JustSystems corporation. The contents in the Self Diagnostic Health Check Tool and Search illness by name are all the intellectual properties of ASK corporation.

Displaying Keitai! Kenkouroku Menu



- 1 When the standby screen is displayed, press . Select "Keitai! Kenkouroku" and press  [Select].

The user agreement (contract) is displayed.

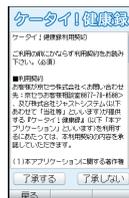

- 2 After checking the contract with , select "了承する"(I agree) with  and press  [選択] (Select).

 If you select "了承する"(I agree), it will not be displayed again. The Keitai! Kenkouroku menu will be displayed.

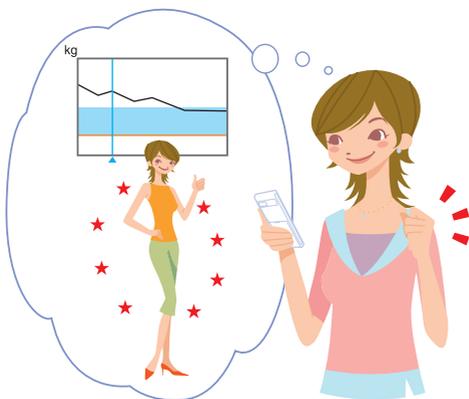

Camera

The W63K has a built-in CMOS camera with 1.31 megapixels that allows you to take photos. You can send the photos you took by E-mail, or set it as your standby screen.


Basic Key Operation

■ Adjust Brightness

Press  in the shooting screen


Dark    Light



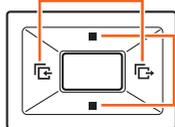

■ Adjust zoom

Press  in the shooting screen

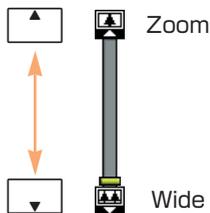

The rate will differ according to each photo size.

■ Shutter

Press 

■ Changing the Photo size

Press  in the shooting screen

■ Check the steps

Press  in the shooting screen


■ Re-shoot

Press 

■ Turn the Photo Flash ON/OFF

Press  in the shooting screen

Pressing  will turn the Photo Flash ON/OFF.

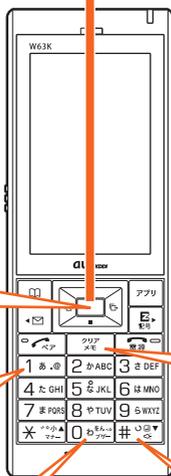

How to Take Photos Successfully

Tips for better photos . . .

How to hold

Do not cover the lens or Photo Flash with your fingers. Hold the camera steady with both hands.

To stabilize the shot

Out of focus images are often caused by the main unit being unstable. Remain steady by keeping your elbows close to your body and holding the main unit firmly using both hands. Do not move the main unit for at least two seconds after you hear the shutter sound.



Photo Size

The following shows the sizes of the photos that can be recorded with your W63K.


Photo Size

Photo Size	Where to save
Wallpaper : 240×320	"Photo Folder" inside Data Folder
Wallpaper (Wide) : 240×400	
0.3M : 640×480	"Camera Folder"* in the microSD card
1M : 1280×960	
Combine : 240×400	"Photo Folder" inside Data Folder
Distort Face : 240×320	
Multiple Shots : 240×400	


*Data will be saved in the Data Folder if the microSD card is not inserted or if the microSD card is full.

Shooting a Photo

 - 1 When the standby screen is displayed, press . Select "Camera" and press  [Select].



 - 2 Select "Photo (W. paper)" or "Photo (DSC)" and press  [Select].




The photo shooting screen is displayed.

- 3 Press  [Shoot].



The shutter tone sounds and the photo is taken.

 - 4 Press  [Save].



Note



- The photo size at the time of purchase is "Wallpaper (Wide)".
- The shutter tone will sound even when Manner Mode is activated.
- The file name of the saved photo will be made according to the shooting date and time, like below.

Example: 081111_1030^01

11th November 2008 10:30 serial number

Attaching a Photo to an E-mail

- 1 Immediately after the photo is shot (when the screen displays the preview image) press  [E-Mail].

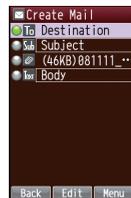 

- 2 Create and send E-mail.

 
To send the E-mail, refer to "Creating and Sending E-mail" (→Page 47).

Note



- When you attach a photo to an E-mail, the photo is automatically saved in the Data Folder.
- Sending the mail may also take some time depending on the condition of the radio waves in your area.

Viewing Photos


- 1 When the standby screen is displayed, press . Select "Data Folder" and press  [Select].



 - 2 Select "Photo Folder" and press  [Select]. Select the folder with the photographed date and press  [Select].

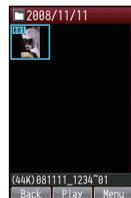

- 3 Select the data and press  [Play].

 


About EZweb

You need to subscribe to EZweb in order to use its services. If you did not subscribe to EZweb at the time of purchase, contact an au shop or the au Customer Center.

You also need to configure the initial settings before you can use EZweb. If you have not configured the initial settings, please refer to "Initializing E-mail and EZweb" (→Page 22).

You can display information sites and use contents (information sites) such as Chaku-Uta® and the latest news.

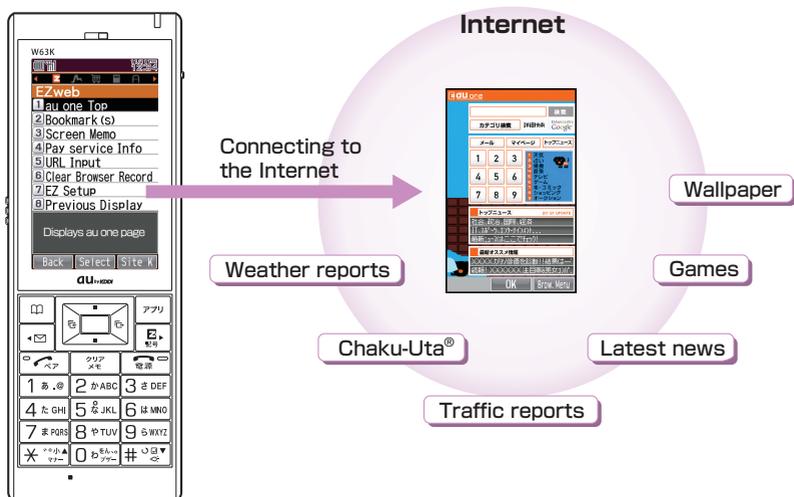


Note

- The layout and contents of the EZweb screens in this manual are only examples. They may differ from the display in the actual EZweb screen.
- Some sites may charge you for providing information, in addition to call charges.
- While connected to EZweb, you are charged a packet transmission fee according to the amount of data you sent/received, irrespective of the connection time.

Displaying au one Top

 - 1 When the standby screen is displayed, press **[E]** 登録, select "EZweb" with **[◀▶]**. Select "au one Top" and press **[■]** [Select].




①	Key word search function Offers an information search function using key word search.
②	メール(Mail) Offers another E-mail address that you can also use in your PC.
③	マイページ(My Page) Offers various information, useful tools or mass data storage capabilities to suit your needs.
④	Direct remote control access ①Weather②Horoscope③Transfer④Music⑤TV⑥Game⑦Books/Comics⑧Shopping⑨Auction
⑤	トップニュース(Top News) Offers automatic updates of the latest news.
⑥	最新オススメ情報(Latest recommended information) Introduces special features and contents of various genres on EZweb.
⑦	ニュース&ビジネス(News & Business) Offers the latest news and weather reports as well as useful business information.
⑧	マップ&エリアガイド(Map & Regional guide) Offers area-based transfer and map search services.
⑨	ショッピング&オークション(Shopping & Auctions) Offers information about products you can buy from your phone, as well as on-line auctions where you can buy/sell things easily.
⑩	ライフ(Daily life) Offers useful information for your day to day needs.
⑪	エンターテインメント(Entertainment) Offers the latest information on games, music, books, as well as hobby and entertainment trends.
⑫	コミュニティ(Community) Offers fun and useful information such as social networking sites (SNSs) and blogs.
⑬	パーソナル&ラボ(Personal&Lab) Offers additional E-mail addresses, information and tools suited to your phone usage, and ID registration for greater convenience in au services.
⑭	au style Introduces information and sites that au recommends.
⑮	とくする情報(Valuable Information) Offers free gifts and useful information to EZweb subscribers.
⑯	auお客さまサポート(au Customer Support) Offers information about charges, various applications, au online manual and notices from au.
⑰	auワンちゃんの部屋(au ワンちゃん's room) Introduces you to the au ワンちゃん mascot.
⑱	カンタンアクセス・オープンサイト(Simple Access and Open Site) Introduces Simple Access and Open Site.
⑲	災害用伝言板(Disaster Message Board) Register/check safety information during disasters.
⑳	ENGLISH Guides you to English-language websites.

Saving Your Favorite Websites


1 Display your favorite site and press

 [Brow. Menu].

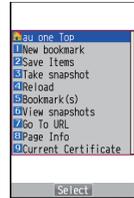

2 Select "New bookmark" and press

  [Select].



3 Press  [Reg].

The site you displayed in step 1 is bookmarked.

 


Note


- Some information sites cannot be bookmarked.
- You can save up to 100 sites in your Bookmark(s).

Viewing Bookmarked Sites

- 1 When the standby screen is displayed, press , select "EZweb" with . Select "Bookmark(s)" and press  [Select].



 - 2 Select an information site or a folder and press  [Select].




If you selected a folder, select an information site from that folder and press  [Select].

Checking Your Phone Costs

You can check call and transmission charges.


- 1 When the standby screen is displayed, press   .

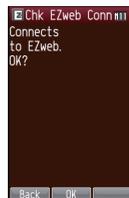

- 2 Press  [OK].



 
- 3 Select the item you want to check and press  [Select].



Downloading Chaku-Uta®

Refer to the section "Displaying au one Top" (→Page 62) and display the au one Top screen.


- 1 Select "カテゴリ検索"(Search category) and press  [OK].

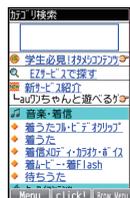

- 2 Select "着うた"(Chaku-Uta) and press  [Select].



 - 3 Select the information site you like and press  [Select].



Follow the instructions on the screen to complete the download.

The downloaded data will be saved in the "Sound" folder in the data folder.

To use paid information sites, you must enter the "EZ Password" or the "Premium EZ Password".

Initial value: The 4-digit number that you wrote on your application form.

Note

- To set a Chaku-Uta® as your incoming ring tone, perform the following steps.

After step 3, press  [Play]→while replaying press  [Reg]→select "Ring Tone (Voice)",  [OK]→select "Fixed RingTone",  [OK]

What You Can Do with EZ Navi

EZ Navi is a useful service that uses global positioning system (GPS). Please configure the initial settings (→Page 22).



Select "EZnavi"
with 



EZ Navi menu



※Packet transmission fees will incur for each EZ Navi service you use. Moreover, some of the services may incur separate charges.

Use "EZ助手席ナビ" (Passenger Seat Navi) if the passenger in the front seat is checking the driving route



"Passenger Seat Navi" is a service that guides the person in the passenger seat of the best driving route to their destination using voice guidance and maps.



To find where your child is now, use "安心ナビ" (Security Navi)



The "Security Navi" application is composed of three functions: "いつでも位置確認" (Auto Position Search) (monthly charge), "位置確認メール" (Position Search Mail) (free of charge), and "エリア通知" (Area Message) (free of charge). Operating your W63K, you can check the location of an au cellphone that supports Position Search and automatically send an notification E-mail to a specified au cellphone when you enter (or are in) or leave (or are out) of a predetermined area during a pre-registered time period.

You're in the park!



Use "EZナビウォーク"(EZ Navi Walk) when you are out

EZ Navi Walk menu

Displays various menus that are useful for when you go out.



ナビをする (Navigation)*¹	You can search the route to your destination (voice navigation), shops and facilities in your area.
地図を見る (View map) (free)*¹	You can check your current location, or any other location you like on the map.
乗換検索する (Search Connection) (free) *¹*²	You can search train connections, timetables and train information.
道路情報を見る (Check traffic updates)	You can check the current traffic conditions of any location in Japan.
もっとナビウォーク (EZ Navi Walk)	You can view the information about each setting and PC related services.
インフォメーション (Information)	You can register for memberships or make inquiries.

*¹: You can use your voice to enter search terms. This is called the "Voice Input" function.

*²: Some menus require payment.

現在地を調べる (Positioning Present Location)



Your initial location is indicated by ★. After that, your present location will be shown as "人" in real time by continuous positioning.

3Dナビ (3D Navi)



The display becomes 3D at a guidance point or in the vicinity of your destination.

Navigation engine by NAVITIME JAPAN

Map: Shobunsha Publications, Inc./Sumitomo Electric Industries, Ltd.

3D data: ZENRIN CO., LTD./GEO Technical Laboratory Co., Ltd.
ZO6A-No.2137

"災害時ナビ" (Evacuate Navi) for information about evacuation areas and way home



Evacuate Area
Map



Route Home
Map

The area map that is included in your W63K can be used to find the directions to the nearest shelter or to your home ("Evacuate Area Map"). You can also use the "Evacuate Navi" EZweb site to download a variety of contents, such as "Route Home Map" that guides you through a route between two places of your choice, such as "Office to Home".

※To display the direction to your home, you must first register the GPS information for your home in your au cellphone address book, and set this as your destination.

※Some of the contents require payment.

Map: Shobunsha Publications, Inc./Preparation: Asia Air Survey Co., Ltd.

Note

- The information offered on your phone screen is only a guide, and any instructions given by the police, fire department or local government authorities should always be obeyed.
- When using "Evacuate Navi", beware that confirming your current location may take some time, depending on the condition of the GPS satellite.
- The layout and contents of the EZ Navi screens in this manual are only examples. They may differ from the display in the actual screen.
- Packet transmission fees will incur for each EZ Navi service you use. Moreover, some of the services may incur separate charges.


EZ News Flash

EZweb Subscription Required

EZ News Flash is a free service that transmits the latest news, weather and horoscope information to your standby screen. A telop of the latest news runs across the standby screen permanently, and you can select it to see the details. You can use EZ News Flash as soon as you perform a few simple steps after configuring the initial settings of EZweb (→Page 22). The transmitted information are all free.

※A packet transmission fee may be incurred when you manually update News Flash or access the EZweb website. A confirmation screen appears when you are about to incur a packet fee.

What You Can Do with EZ News Flash

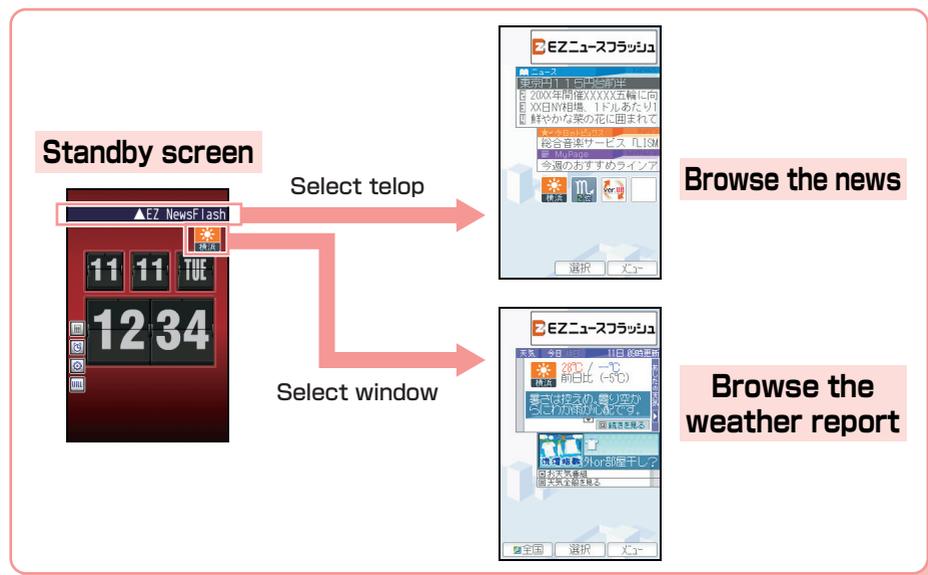

Note


 
- The information is updated at regular intervals. "光" flashes when the terminal is receiving new information.
- When you use/set au one My Page, and you select "My Page" from the top screen of EZ News Flash, you can check the updated information of My Page.

Setting EZ News Flash



EZ News Flash can be used after performing a simple setting procedure (free of charge).

Set EZ News Flash after performing "Initializing E-mail and EZweb" (→Page 22).

- 1 When the standby screen is displayed, press . Select the telop and press  [OK].

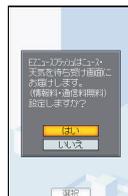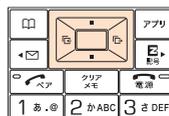

 - 2 Select "はい"(Yes), press  [選択] (Select), and press  [Select].

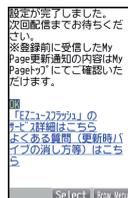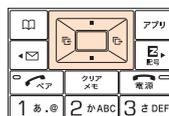

The setting is complete.

After you complete the settings and return to the standby screen, you will see a telop with the message "Next bulletin coming soon. Please wait." run across the standby screen.

Note

- Perform the following steps to cancel the News Flash service.
When the standby screen is displayed,  →select the telop,  [OK] →  [メニュー] (Menu) →select "サービス設定解除" (Undo Service Settings),  [選択] (Select) →select "YES",  [選択] (Select) →select "解除する" (Undo),  [Select] →select "OK",  [Select]
- To change the News Flash update notification tone/vibrator settings or the incoming call lamp settings, perform the following steps.
When the standby screen is displayed,  →2がABC →1あ.@ →5*JKL
"NewsFlash Rcv" →Set volume and time etc.
If you do not need notification of updates, set "Volume" and "Vibrator" to "OFF".

Other Functions

Safety Buzzer

Set Safety Buzzer to ON in advance to emit the extreme volume sound in the moment of danger.

"OFF" is set at the time of purchase. Perform the following steps.

Setting Safety Buzzer to "ON"

1 When the standby screen is displayed,

press   かABC  はMNO.

Select "ON" and press  [OK].



■ To emit the Safety Buzzer sound

When the standby screen is displayed, press  (hold down at least one second)

The Safety Buzzer sound is emitted in extreme volume.

■ To stop the Safety Buzzer sound

Enter Lock No. and press  [OK]

Note

- When the Safety Buzzer sound continues, you cannot turn W63K handset off or perform other operations. But you can dial 110 (Police), 118 (Japan Coast Guard) and 119 (Fire brigade).
- The Safety Buzzer sound continues until Lock No. is entered or battery is fully discharged.
- The volume of the Safety Buzzer sound cannot be adjusted.
- The Safety Buzzer sound is emitted from the speaker even with the stereo earphone connected or Manner Mode activated.
- Safety Buzzer does not necessarily guarantee crime prevention or your safety.
- Don't sound the Safety Buzzer in anyone's ear. Doing so may cause hearing impairment.
- Handle Safety Buzzer with care and do not allow children to mishandle it.
- Safety Buzzer is disabled when a screen other than the standby screen is displayed, standby EZ apps is activated or the phone is turned off.

W63K also comes with these features.

GLOBAL PASSPORT (GSM)	The W63K supports the Global Passport function using the au IC-Card. Global Passport is an international roaming service that allows you to connect to the world by simply inserting your au IC-Card into a GSM mobile phone for overseas use. No special application or daily/monthly charges are needed. Charges for overseas are billed together with monthly domestic call charges.
EZ apps (BREW®)	You can download and enjoy game software that is registered in the EZ apps server.
au one My Page	You can save data, such as the data in the data folder to your own server (au one My Page) and manage and check it there.
Decoration Mail	You can freely change the background color, font colors and layouts of your mail or decorate it with pictures and photos.
Barcode Reader & Maker	You can read barcodes (JAN code/QR code) as well as create QR codes using W63K.
Pair Barometer	You can easily make calls or send mails to a pair partner registered in advance (Pair Function). You can also view the frequency of calls and mails to the pair partner in 5 levels on the barometer.
Remote Manner Cancel	If Manner Mode is activated but you need to find your W63K handset, you can call it and cancel Manner Mode so you can hear the ring tone and find it.
PetaMemo	You can transfer the contents of your address book or task lists to your standby screen so you can retrieve them easily any time.
Emotion Mail	Determines whether the mail you received is "Happy", "Sad" or "Important" based on the words in the mail and informs you by displaying character icons.
Infrared communication	You can exchange the data save in your Address Book, Schedule, Bookmarks, or Data Folder with devices supporting infrared communication.
Power Saving Mode	You can switch to Power Saving Mode if the battery level is low and the phone settings automatically switch to a lower power consumption rate.
Fake Incoming Call	You can give the appearance of receiving a phone call, for times such as when walking alone at night.
Graphic Memo	You can manage images by inserting dates, categories and comments.

Troubleshooting

Symptom	Items to Check	Solution	Page
The phone does not turn on.	Is the battery pack installed correctly?	Install the battery pack correctly.	–
	Is the battery pack properly charged?	Charge the battery pack.	12
	Did you hold down  for at least one second?	Hold down  for at least one second.	13
You cannot make a call.	Is "Out of Range" displayed on the screen?	Move to a place where "Out of Range" disappears from the screen.	13
	When you entered the phone number, did you include the area code?	If you are calling a number that is not a cellphone, always include the area code even if you calling within your area.	–
	Is the phone turned on?	Hold down  for at least one second.	13
You cannot receive calls.	Is "Out of Range" displayed on the screen?	Move to a place where "Out of Range" disappears from the screen.	13
	Is the phone turned on?	Hold down  for at least one second.	13
There is no response even when you press the keys.	Is the phone turned on?	Hold down  for at least one second.	13
	Is the keypad lock activated?	Release the Keypad Lock key.	3
The phone emits a warning tone and turns off.	Is the battery pack charged?	Charge the battery pack.	12
The phone turns off automatically.	Is the battery pack terminal soiled?	Clean the battery pack terminal using something like a dry cotton bud.	–
Calls are answered automatically.	Is Answer Memo turned on?	Release Answer Memo setting.	32
You cannot hear the other party's voice.	Is the receiver volume set too low?	During a call, press  . The receiver volume will increase.	29
You access a premium service when you return a call the number in your Incoming Records.	Did you call a number that you do not know?	Be careful when calling back to an unfamiliar number.	6

If you need further details, please access the website below.


- From your W63K: When the standby screen is displayed, hold down  for at least one second. (Kyocera SiteK, in Japanese only)
- From a PC: <http://www.kyocera.co.jp/prdct/telecom/consumer/support/qa/index.html> (In Japanese only)

If You Lose Your W63K


By setting the "Remote Ctrl Lock", you can set Auto Lock and Address Book Lock to prevent others from using your cellphone.

Setting up the "Remote Ctrl Lock" operating environment


- 1 When the standby screen is displayed, press . Select "Set Functions" and press  [Select].

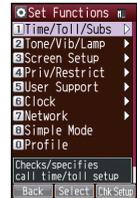

 - 2 Select "Priv/Restrict" and press  [Select].

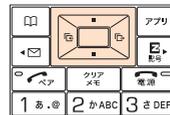

 - 3 Select "Security Lock" and press  [Select].




- 4 Select "Remote Lock" and press  [Select].



5 Enter Lock No. and press  [OK].



6 Select "Caller No. List" and press  [Select]. Select "00" and press  [Edit].

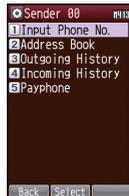


7 Select "Input Phone No." and press  [Select]. Enter the phone number and press  [OK]. Press  [Back].




By pressing "Address Book", you can retrieve a phone number and enter it.

 8 Select "ON/OFF Setup" and press  [Select]. Select "ON" and press  [OK].



 
9 Select "Set Time" and press  [Select]. Set the time and press  [OK].




Set between 1 minute and 10 minutes.

- 10** Select "No. of Calls" and press  [Select]. Specify the number of incoming calls and press  [OK].

 
Set between 5 times and 10 times.



 - 11** Select "Erase File" and press  [Select]. Select "Do Not Erase" or "Erase" and press  [OK].



 - 12** Select "Unlock Phone" and press  [Select]. Select "ON" or "OFF" and press  [OK].



Note

- You can register up to 3 phone numbers from which you can activate Remote Ctrl Lock.

Set Auto Lock by remote control

- 1** Call W63K under the conditions set by Remote Ctrl Lock.

A guidance will play back to indicate the Remote Ctrl Lock has been activated and Auto Lock set.

Activate Remote Ctrl Lock using Security Lock Service

Even if you have not preset Remote Ctrl Lock, you can activate Remote Ctrl Lock by calling the au Customer Center or accessing au Customer Support on your PC.
Security Lock Service is available free of charge.

Call au Customer Center to activate/deactivate Remote Ctrl Lock

From au phones: 113 area code not required (toll free)

From non-au cellphones and regular phones: ☎0077-7-113 (toll free)

This service is available 24 hours a day.

Follow the instructions of the voice guidance.

Activate/Deactivate Remote Ctrl Lock from your PC

Log into au Customer Support (<http://cs.kddi.com/>) and follow the instructions on the screen to set the lock.

- ※Application required for first time use (we also accept your application after the loss).
- ※As of Spring 2008, MyKDDI has been re-branded "auお客さまサポート" (au Customer Support). The new service has the same function as MyKDDI.



Note

- You cannot activate Remote Ctrl Lock if W63K is not turned on, you are outside the coverage area or the Emission OFF is set.
- If you call a number in order to set Remote Ctrl Lock and the call is answered, that call is counted as one of the setting calls.

Index

Symbol

- * /Manner key 11
- #key 11

A

- Address Book 39
 - Call 41
 - Edit 41
 - Register 39
 - Register from Incoming/
Outgoing records 43
- Address key 11
- Alphanumerics 37
- Answer Memo 32
- Antenna (built-in) 11
- Application key 11
- Attach 50, 60
- au IC-Card 11
- au one Top 62

B

- Back Space function 36
- Battery level 13
- Battery pack 10
- Battery pack compartment 11
- Battery pack cover 11
- Bookmark 63, 64

C

- C-mail 46
 - Read 54
 - Send 53
- Call 26
 - Making 26, 27
 - Receive 28
- Camera 11, 57
- Cellphone Etiquette 1
- Center key 11
- Chaku-Uta® 65
- Charge 12
- Charging terminals 11
- Clear/Memo key 11
- Common AC adaptor O1/O2
(option) 12

D

- Desktop holder 10, 12
- Disaster Message Board
Service 7
- Display 11
- Download 65
- Drive Mode 5

E

- E-mail 46
 - Change address 23
 - Read 49
 - Reply 51
 - Send 47
- E-mail address 23
- Earphone 11
- Earphone jack 11
- Earpiece Volume 29
- Emoticons 38
- Evacuate Navi 68
- External connection jack 11
- EZ key 11
- EZ Navi 66
- EZ Navi Walk 67
- EZ News Flash 69
- EZ Password 65
- EZweb 61

I

- Icon 14
- Inbox 49, 54
- Incoming call melody 31
- Incoming/Charging indicator 11
- Incoming records 29
- Information sites 61
- Infrared port 11
- Initial Settings (E-mail/EZweb) 22
- Initial Settings
(Menu Functions) 15
- Input mode 35
- International Call 27

J	
Jog key.....	11, 19
K	
Keitai! Kenkouroku.....	55
Keypad Lock key	3, 11
L	
Lens	11
Letter mode	36
M	
Macro mode selector switch.....	11
Mail	46
Mail Filter	6, 52
Mail key	11
Main menu	21
Manner mode.....	32
Microphone.....	11
Missed call.....	28
N	
Number keypad	11
Number mode.....	36
O	
One-ring calls	6
One Touch Dial	45
Operation Guide.....	20
Other Functions.....	71
Outgoing records.....	29
P	
Pair Function	44
Call.....	45
Register	44
Send mail	45
Passenger Seat Navi	66
Phone costs.....	64
Photo	57
Send as E-mail	60
shoot	59
view.....	60
Photo Flash.....	11, 57
Photo Size	58
Pictographs	38
Power	13
Power/End key	11
Premium EZ Password.....	65
R	
Records	29
Remote Ctrl Lock.....	74
Ring tone.....	30
Ring tone volume.....	30
S	
Safety Buzzer.....	71
Security Lock Service	77
Security Navi.....	66
Send key	11
Set Language.....	16
Signal strength.....	13
Simple light.....	11
Spam	6, 52
Speaker	11
Standby screen.....	13
Strap mount.....	11
Symbol	35
T	
Text input.....	34
Troubleshooting	73
U	
Useful sentence	38
W	
What you can do with W63K	2
Y	
Your phone number (my phone number)	23

For inquiries, call:
au Customer Service Center

From EZweb site:

How to access



EZ ▶ EZweb ▶ au one Top ▶
auお客様サポート (au Customer Support) ▶
お問い合わせ (Inquiries)

※Menu structure is subject to change without notice.

For general information and charges

From regular phones:



0077-7-111

(toll free)

From au cellphones:

157 area code not required
(toll free)

For loss, theft or damage and
operation information

From regular phones:



0077-7-113

(toll free)

From au cellphones:

113 area code not required
(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.



モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle
unused telephones, batteries and battery chargers
at stores bearing the  logo regardless of brand
and manufacturer to protect the environment and
reuse valuable resources.

Sales: KDDI Corporation
Okinawa Cellular Telephone
Company

Manufactured by: KYOCERA Corporation

June 2008, 1st Edition

Read this to access to
the au online manual

