


Cozyman®

DOMINICA SERIES
OUTDOOR DINING TABLE
USER'S MANUAL

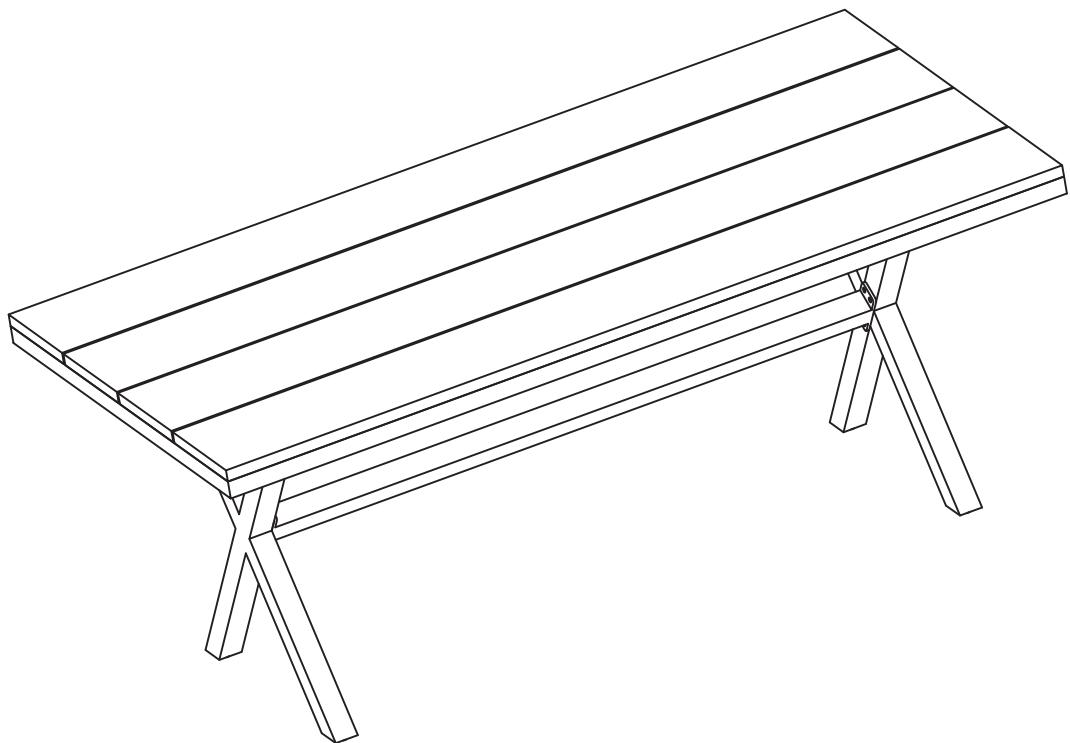

Guide of Manual

- Thanks for your choice. We will do our best to provide customer service for everyone.
- Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, we will expeditiously provide reissue accessories, compensation or other services.
- Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. Please contact us if further information and help are needed. We will respond in a timely manner.
- Please be patient that the other items are on the way if you buy more than one product.

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product. Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- It's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- If you run into scratches problems, we suggest you erase the scratches by knife.
- This item could be cleaned with soap and water. Be sure to avoid harsh solvents and abrasives.
- Periodically (every 90 days) make sure the screws are fully tightened.

Resists pest &rough weather

- These all-weather items can be stored outdoors year-round. Perfect for people who lives in a wet climate or lives on the coast where humidity and moisture will be an issue all year.

Material

- 100% POLYSTYRENE


Max Weight capacity

- 500lbs [Do not stand on the item]


Parts and Hardware List:


- Make sure all parts and hardware are in the package.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.
- "+" in below list indicates that additional pieces are replacement parts.


Parts List

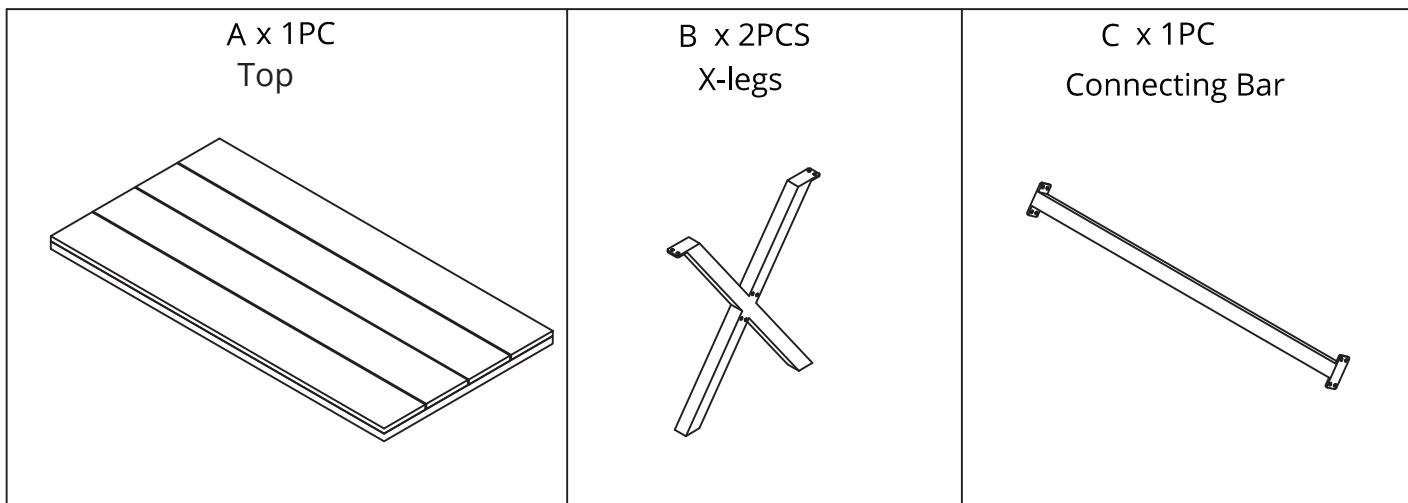


Hardware List

 AA x 16+1PCS Screw (6*25) 	BB x 16+1PCS Washer 	CC x 16+1PCS Gasket 	DD x 4PCS Leveling Feet 	EE x 1PC Allen Wrench 
---	---	---	---	---

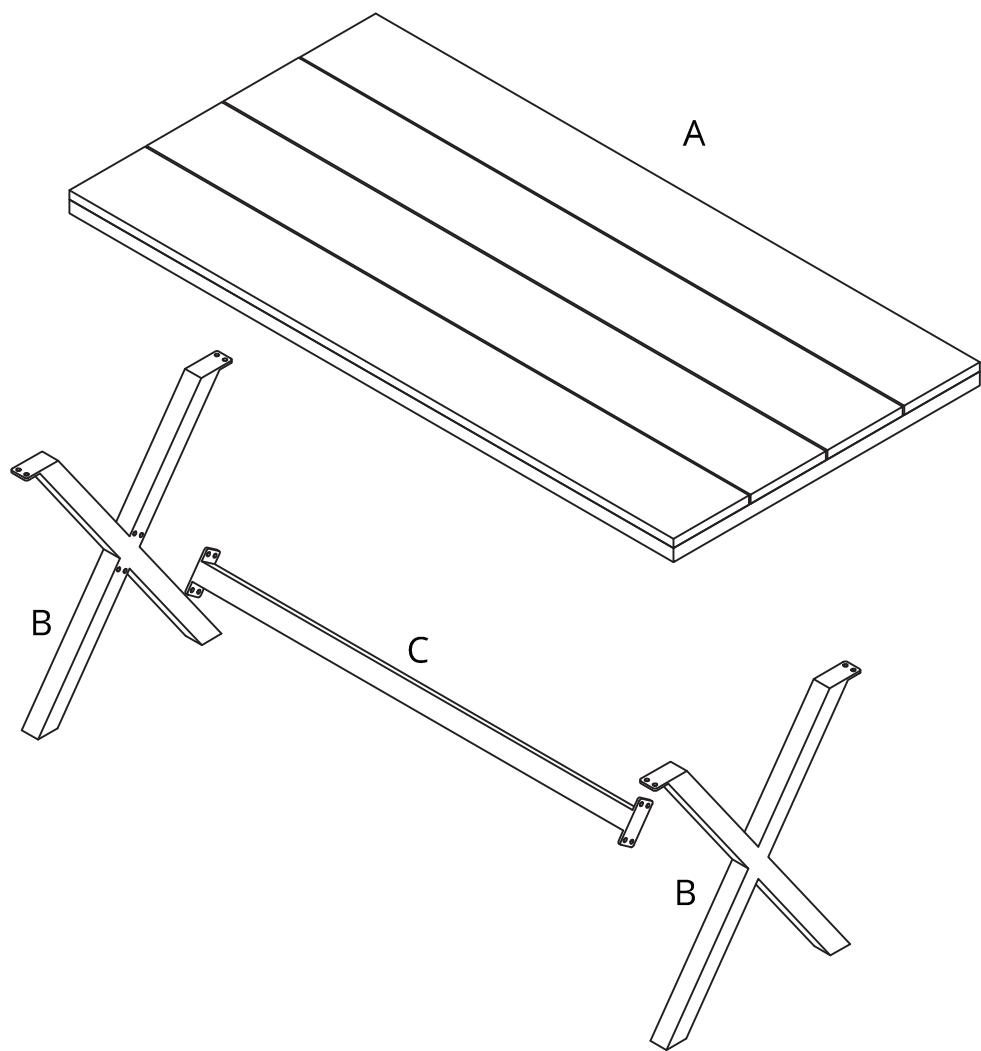

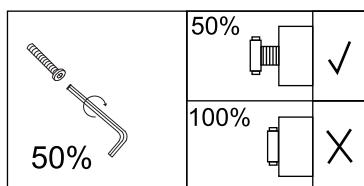
1


AA		x8
BB		x8
CC		x8
EE		x1

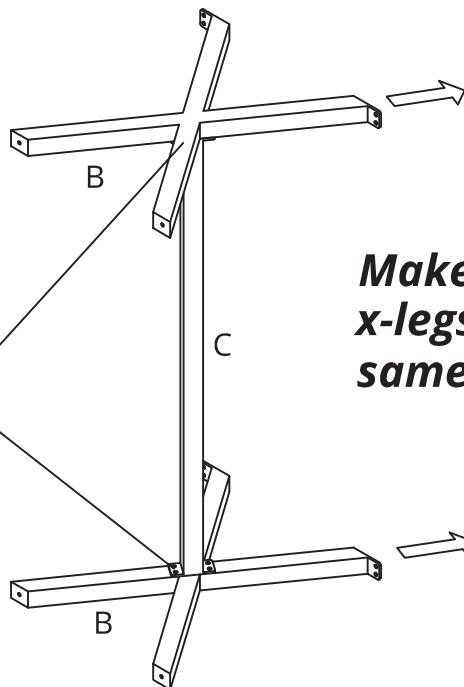

2

First tighten the legs and the top to 100%.


Then tighten the legs and connecting bar from 50% to 100%.

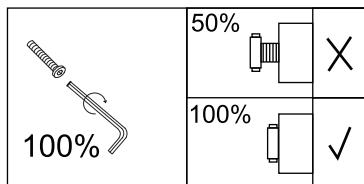


AA		x8
BB		x8
CC		x8
EE		x1

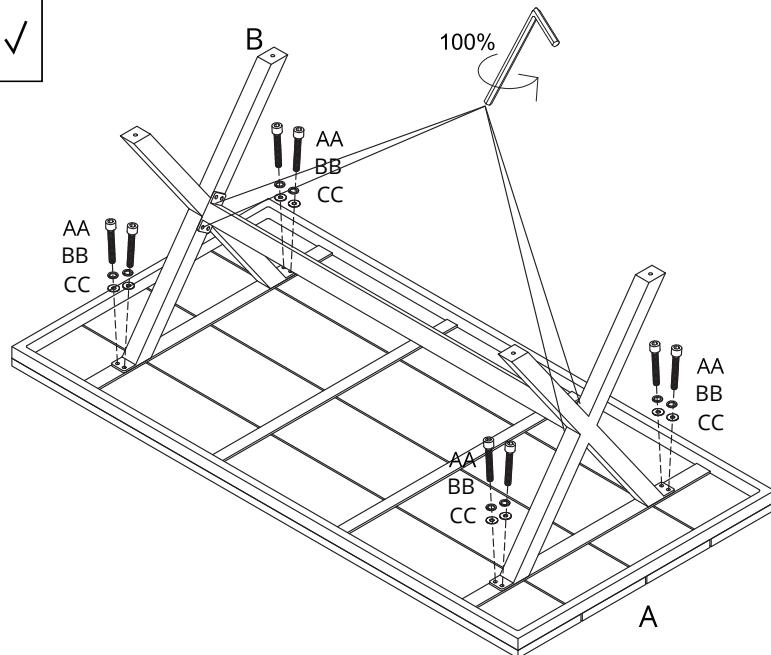

3

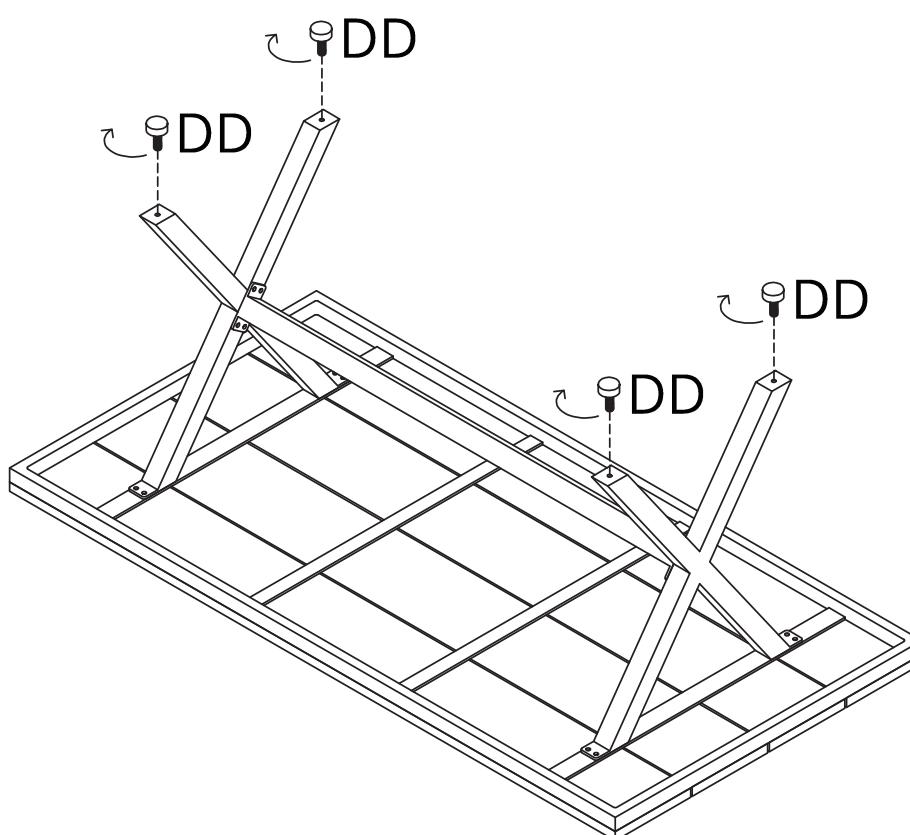
DD
x4

FINISHED

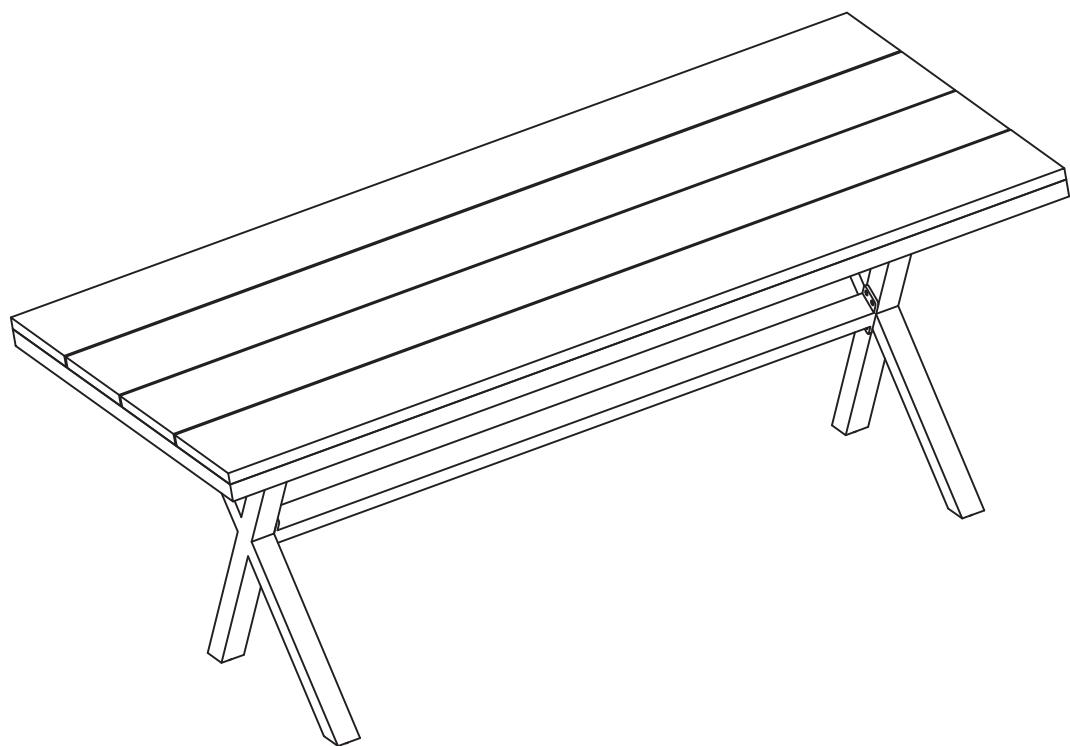

Cozyman[®]

DOMI SERIES
OUTDOOR BENCH
USER'S MANUAL

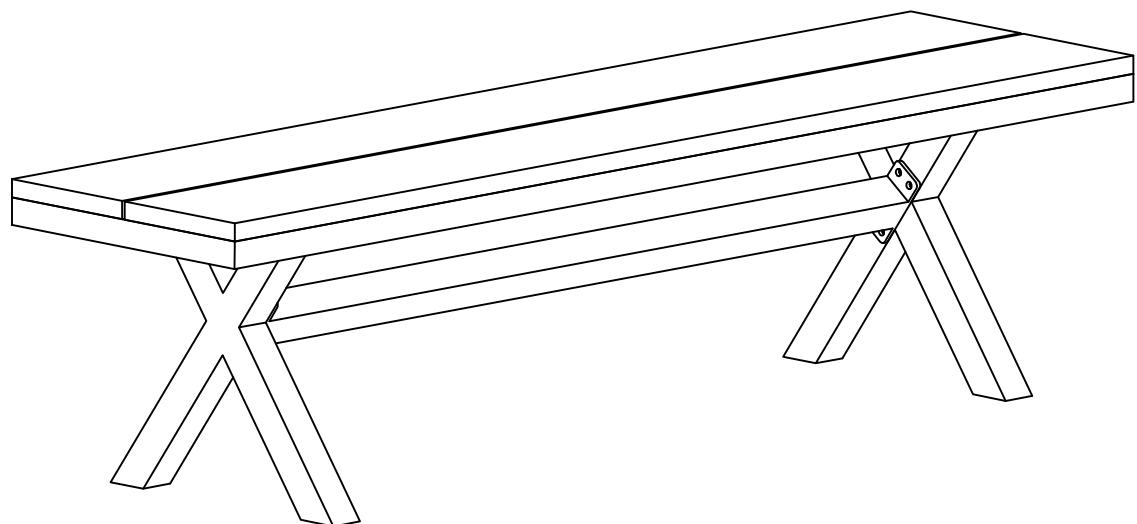

Guide of Manual

- Thanks for your choice. We will do our best to provide customer service for everyone.
- Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, we will expeditiously provide reissue accessories, compensation or other services.
- Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. Please contact us if further information and help are needed. We will respond in a timely manner.
- Please be patient that the other items are on the way if you buy more than one product.

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product. Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- It's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- If you run into scratches problems, we suggest you erase the scratches by knife.
- This item could be cleaned with soap and water. Be sure to avoid harsh solvents and abrasives.
- Periodically (every 90 days) make sure the screws are fully tightened.

Resists pest &rough weather

- These all-weather items can be stored outdoors year-round. Perfect for people who lives in a wet climate or lives on the coast where humidity and moisture will be an issue all year.

Material

- 100% POLYSTYRENE


Max Weight capacity

- 550lbs [Do not stand on the item]

Parts and Hardware List:


- Make sure all parts and hardware are in the package.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.
- "+" in below list indicates that additional pieces are replacement parts.


Parts List

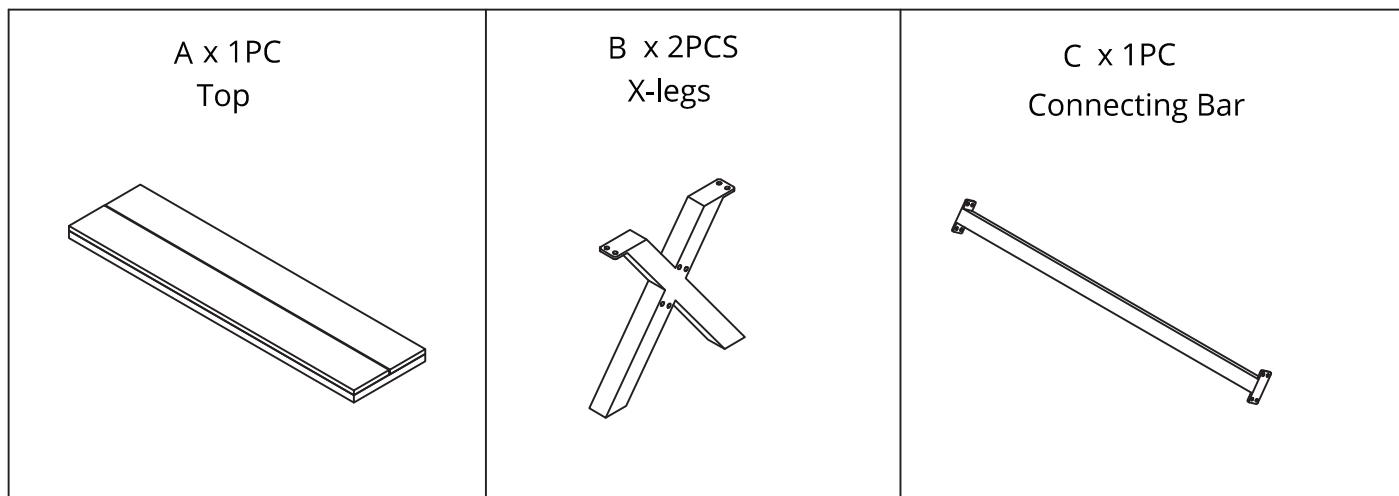



Hardware List

AA x 16+1PCS Screw (6*25)	BB x 16+1PCS Washer	CC x 16+1PCS Gasket	DD x 4PCS Leveling Feet	EE x 1PC Allen Wrench
A small screw icon with a square head and a threaded shaft.	A washer icon, which is a flat circular ring.	A gasket icon, which is a flat circular ring with a central hole.	A leveling foot icon, which is a rectangular base with a threaded stem extending downwards.	An Allen wrench icon, which is L-shaped with a hexagonal head.

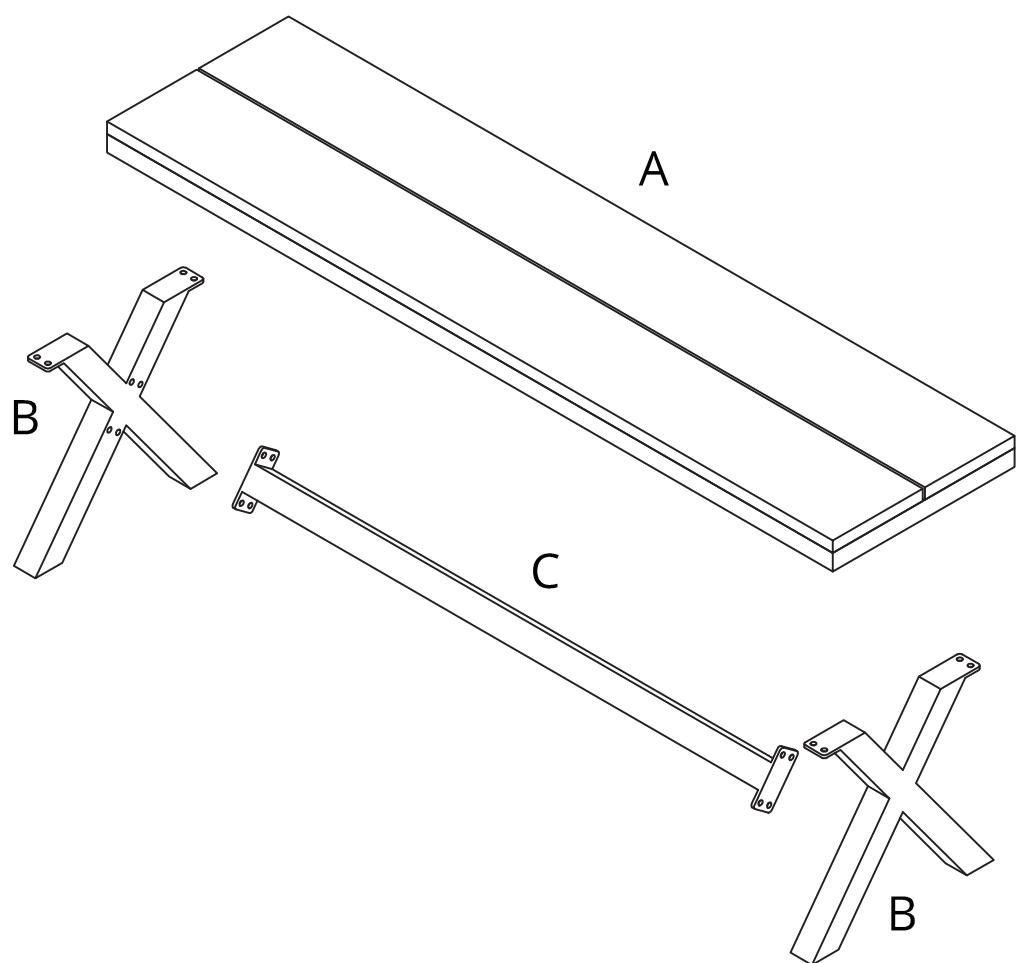

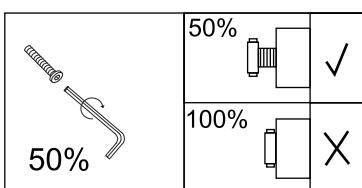1


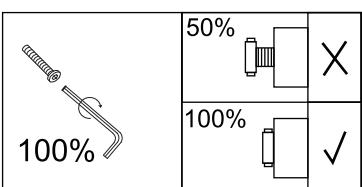
AA		x8
BB		x8
CC		x8
EE		x1

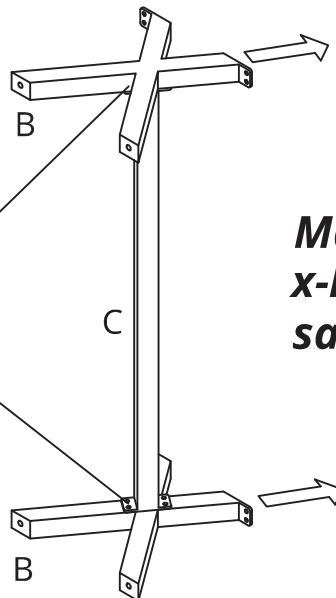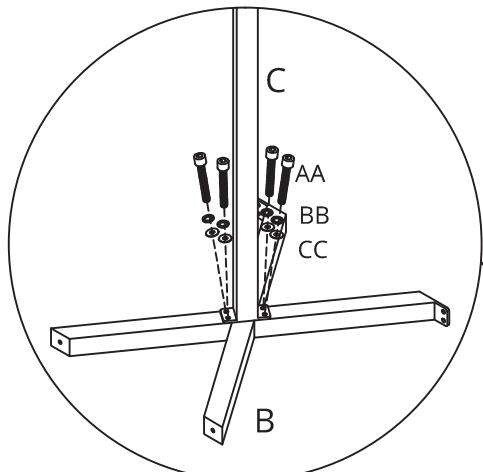


Make sure the x-legs are in the same direction

2


First tighten the legs and the top to 100%.
Then tighten the legs and connecting bar from 50% to 100%.



AA		x8
BB		x8
CC		x8
EE		x1

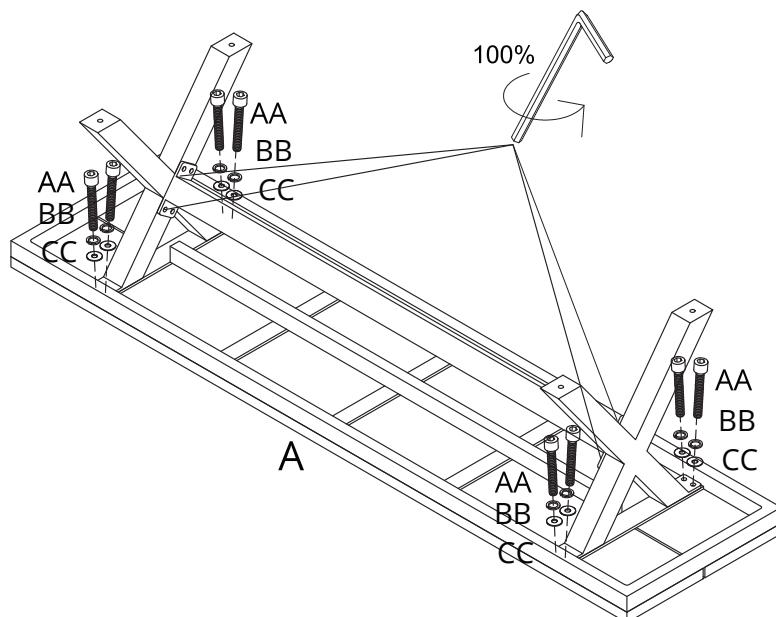

3

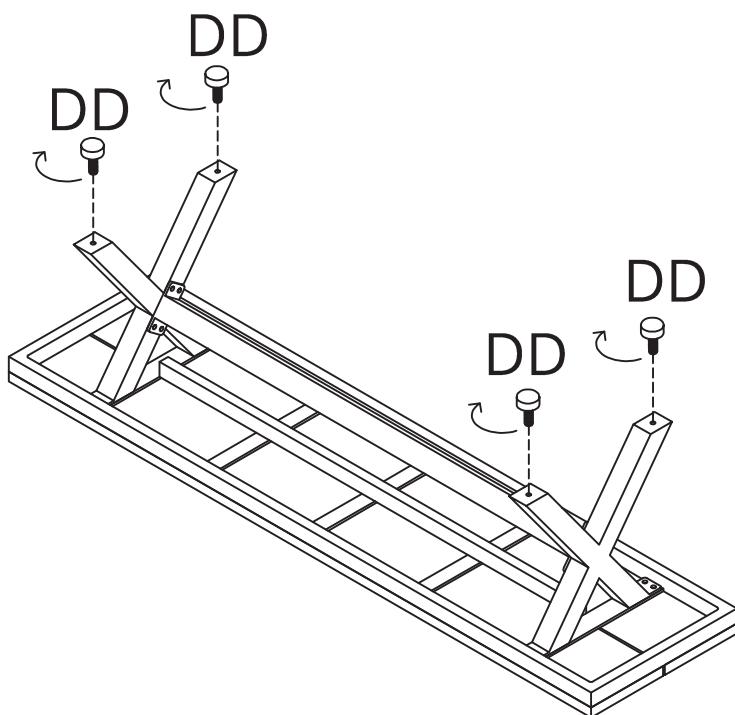DD  x4**FINISHED**