

Extron Occupancy Sensor OCS 100C User Guide

Home » Extron » Extron Occupancy Sensor OCS 100C User Guide 🏗

Contents

Extron Occupancy Sensor OCS
 100C
 Product Information
 Product Usage Instructions
 Occupancy Sensor OCS 100C
 Recommended Setup
 Installation
 OCS 100C Wiring Diagram
 Troubleshooting
 Safety Instructions
 FCC
 Power Attention
 Documents / Resources
 12.1 References



Extron Occupancy Sensor OCS 100C



Product Information

- The OCS 100C is a device designed to detect occupancy using both PIR (Passive Infrared) and US (Ultrasonic) sensors.
- The device has front panel features including Ultrasonic Sensors, Green LED status indicators, an Infrared/Photocell Lens Retainer Ring, DIP Switches, Red Infrared Sensitivity Dial, and Black Timer Dial.
- It has two sets of DIP Switches labeled A and B, each with multiple functions.
- The OCS 100C can be set to different modes, including Dual detection mode (requires both PIR and US sensors to trigger simultaneously) or exclusive detection mode (either PIR or US sensor triggering is sufficient).
- The device has LED status indicators that can be enabled or disabled.
- There are dials for adjusting Ultrasonic Sensitivity, Photocell Sensitivity, Timer, and Infrared Sensitivity.
- Automatic adjust and reset functions are available to manage learned sensor settings.

Product Usage Instructions

- 1. Ensure the OCS 100C is in the default or recommended settings (A2 OFF).
- 2. To detect occupancy, both the IR sensor and the US sensor must trigger simultaneously. If only one sensor needs to trigger to reset the timer while the room is still occupied, set A2 to ON.
- 3. Adjust the dials for Ultrasonic Sensitivity, Photocell Sensitivity, Timer, and Infrared Sensitivity as per your requirements.
- 4. If desired, enable the LED status indicators by setting A3 to OFF. If you want to disable the flashing LEDs, set A3 to ON.
- 5. Use the Automatically Adjust function (A4) to retain or erase learned sensor settings. This is applicable when Timer (B3) or Sensitivity Adjust (B4) is set to Automatic mode (OFF).

- 6. If you want to manually adjust the timer, infrared sensitivity, and US sensitivity dials, ensure B3 and B4 are set to ON for Manual mode.
- 7. If the OCS takes too long to turn off when the room is unoccupied, adjust the timer to 8 minutes and extend the timer via the configuration of the connected control processor to reduce false detection.
- 8. For optimal setup, follow the recommended setup diagram provided in the user manual.

Occupancy Sensor OCS 100C

Setup Guide

- The OCS 100C is a dual-technology occupancy sensor that can be used to automate meeting and presentation spaces when used with Extron control products. The OCS is equipped with ultrasonic (US), infrared (PIR), and photocell sensors that can be used together to report ambient light conditions and room occupancy. Sensors can be wired directly to Extron controller products equipped with Digital I/Os ports or via eBUS, when using optional eBUS interface accessories.
- The OCS requires 24 VDC for operation. If local 24 V power is not available, use the included 12 V to 24 V, USB 5 V to 24 V power converter.
- NOTE: The OCS 100C is designed to detect occupancy using both the PIR and US sensors with their default settings to avoid false detections.



Front Panel Features and Control

- Ultrasonic sensors (4) Detect movement in the room, based on ultrasonic sound waves. The US sensor
 emits ultrasonic sound waves into an area and measures the speed of their return to detect the presence of
 people. Frequency changes are caused by the movement of people, which is detected by the US waves.
- Ultrasonic (US) Green LED status indicators (2) Flash when the ultrasonic sensors detect occupancy.
- Infrared/Photocell (Fresnel) lens Diffracts the incoming light and directs the light to the infrared sensor.
- **Retainer Ring** Holds the optional IR mask in place. Remove to access all controls and DIP switches. Insert the flat end of a small screwdriver into the notch in the retainer ring to lever it up and off.
- Infrared (PIR) Red LED status indicator Located behind the Fresnel lens, these LEDs flash when the infrared sensor detects occupancy.
- **Infrared Sensor** The infrared (PIR) sensor detects the presence of people based on the difference between the heat generated by moving people versus the ambient room temperature.

A	Switch Functio n	OFF	ON	Note	
1	Not used	*Not used	Not used	The switch is not used.	
2	Occupancy det ection behavior – Dual technolo gy mode	*Mutually exclusive (re quires both PIR <u>and</u> US d etention	Independent (either PIR <u>or</u> U S detection)	If A2 is set to OFF , both the PIR and US sensors must be triggered (simultaneously) before the OCS reports an occupancy signal. If A2 is set to ON , the OCS repor ts occupancy based on only one of the sensors being triggered. When only one sensor is desired, set A2 to ON and adjust the dials accordingly. If A2 is ON , false detection when the room is not occupied increases.	
3	Sensor status i ndicators	*LEDs enabled	LEDs disabled	Setting A3 to OFF provides a visual notification whene ver the PIR or US sensors are triggered. When the vis ual LED indicators are a distraction or you want to disa ble the flashing LEDs, A3 should be set to ON .	
4	Automatically a djust reset	*Retain learn ed sensor ad justments	Erase all learn ed settings (to ggle ON , then OFF)	Only applicable when Timer (B3) or Sensitivity adjust (B4) or both are set to Automatic mode (OFF). Toggling A4 ON then OFF will reset any stored learned adjustm ents.	

Default and recommended settings

DIP Switches B

В	Switch Function	OFF	ON	Note	
1	High Airflow compensator	*Disable d	Enabled	If enabled (set to ON) the sensor will not detect minor change	
2	Doorway mount	*Disable d	Enabled	low trigger-on threshold.	
3	Timer adjust	Automati c	*Manua I	Applies to the Timer (black), Infrared sensitivity (red), and Ultr asonic sensitivity (green) adjustment dials.	
4	Sensitivity adjust	Automati c	*Manua I	 Setting to Manual mode allows for more predicted behavi or and is better suited for automating AV applications. Setting to Automatic mode allows the sensor to learn over time the ideal timer and sensitivity adjustments for the space and usage trends. This is better suited for automating lighting applications. All adjustment dials are disabled when set to Automatic (OFF). 	

Default and recommended settings

- NOTE: B3 and B4 must be set to ON for Manual mode, in order to adjust the timer, infrared sensitivity, and US sensitivity dials manually.
- Black Timer Dial The occupancy sensor has a built-in timer feature. Use the black timer dial to set the

amount of time before the sensor triggers OFF. The factory default setting is 8 minutes.

- Timer range 8 minutes to 42 minutes.
- Full counterclockwise (CCW) = 8 minutes
- Full clockwise (CW) = 42 minutes

Timer operation

- When the sensor detects motion, it instantly triggers ON.
- Once occupancy is no longer detected, the timer begins. If no motion is detected and the timer expires, then the sensor triggers OFF.
- **NOTE:** If it takes too long for the OCS to turn off when the room is unoccupied, adjust the timer to 8 minutes and extend the timer via the configuration of the connected control processor. This setup reduces false detection.
- Test mode (8-second timer):
- 1. Open the retainer ring.
- 2. Rotate the black timer dial to about midway (50% or 12 o'clock).
- 3. Return to the minimum setting (full CCW).
- 4. The timer will remain in the 8-second test mode for 1 hour, then automatically reset to 8 minutes.
- 5. To manually force the timer out of the 8-second test mode, turn the timer adjustment approximately 1/16 inch clockwise. The setting is slightly above the minimum (just above the 8-minute setting).
- Red Infrared Sensitivity Dial Adjust this dial to increase or decrease infrared sensitivity.
- Turn clockwise (CW) to increase sensitivity. Minor movements are detected as occupancy.
- Turn counterclockwise (CCW) to decrease sensitivity. Major movements are needed to detect occupancy.
- The factory default setting is at 75%.
- Green Ultrasonic Sensitivity Dial Adjust this dial to increase or decrease ultrasonic sensitivity.
- Turn clockwise (CW) to increase sensitivity. Minor movements are detected as occupancy.
- Turn counterclockwise (CCW) to decrease sensitivity. Major movements are needed to detect occupancy.
- The factory default setting is at 50%.
- Blue Photocell Sensitivity Dial The photocell prevents the sensor from triggering when the area is adequately lit with natural light and motion is detected.
- The sensor must be mounted directly over an area that is representative of the average, natural room lighting. Before setting the photocell control, wait until the natural light is brightest (optional).
- · Adjust this dial to increase or decrease photocell sensitivity.
- Turn counterclockwise to decrease photocell sensitivity, causing it to activate with less light.
- Turn clockwise to increase photocell sensitivity, requiring brighter light to activate the sensor.
- Factory default is 100% (full clockwise) Photocell sensor is disabled.
- Range 10 to 1000 LUX

Recommended Setup



Figure 3. OCS 100C Front Panel Features and Controls

- With the OCS in the default or recom ngs (A2 OFF), the OCS requires both the IR sensor AND the US sensor to detect occupancy to turn ON. Only on our US) needs to trigger to reset the timer for the OCS to remain ON while the room is still occupied.
- When the OCS is in the OFF state, no occupancy is detected.
- Follow these steps to set up the OCS to detect occupancy with minimal false detection:
- NOTE: We recommend using the OCS 100C in the default settings when beginning the setup or the test mode. If needed, make slight adjustments at a time from the default sensitivity settings.
- 1. Keep all the DIP switches and rotary dials in the default positions.
- 2. Set the OCS in Test Mode.
- 3. Enter the room several times to verify if the IR detector is detecting movement (red LEDs flash).
 - If the red LEDs flash when entering the room, the default red infrared sensitivity dial is set correctly.
 - Verify the red LEDs flash with movement throughout the room.
 - Turn the red infrared sensitivity dial to decrease or increase IR sensitivity, until the red LEDs only flash when entering the room or making movements throughout the room.
 - To avoid false detections when the room is unoccupied, do not make the sensor too sensitive.
- 4. Enter the room and verify if the US detector is detecting movement (green LEDs flash).
 - If the green LEDs flash when entering the room, the default green ultrasonic range dial is set correctly. This sensor is very sensitive.
 - Verify the green LEDs flash with movement throughout the room.
 - Turn the green ultrasonic range dial to decrease or increase US sensitivity, until the green LEDs only flash when entering the room or making movements throughout the room.
 - To avoid false detections when the room is unoccupied, do not make the sensor too sensitive.
- Leave the room and close the door. Wait until the Digital output state, relay or red and green LEDs stay OFF.
 Wait several minutes to ensure there are no false detections.
 - If the door remains open, the US sensor may detect changes.

If possible, wait longer, to confirm no IR or US change is registered.

6. Enter the room again, to confirm the Digital input state relay, and red and green LEDs turn ON.

NOTE: After going through these steps and verifying the OCS is set up to accommodate the room, do not adjust the DIP switches or dials.

Automatic Mode

Out of the box, the OCS 100C can be set up in Automatic Mode, where no manual sensitivity adjustments are

needed and sensitivity learning and adjustments are made automatically. For a simple setup, we recommend keeping the OCS in the default settings and flipping the B4 Dip switch to the OFF (Auto) position. The OCS is ready to mount.

Mask Patterns and Sensor Coverage

An included infrared mask may be needed to achieve the desired sensory coverage. Any area masked will block the PIR sensor from detecting motion in that area.

NOTE: Mount the OCS 6 to 8 feet (1.8 to 2.4 m) away from HVAC vents and high air flow areas



NOTE: These coverage dimensions are achieved when the OCS 100C is installed 10 feet (3 m) above the coverage area.

Installation

OCS 100C Parts



• NOTE: *Only use a mask if the PIR sensor needs to be blocked. Only one mask should be installed at any given time.

ATTENTION:

- All structural steps and electrical installation must be performed by qualified personnel in accordance with local and national building codes and electrical codes.
- Only connect to Class III SELV systems.

Installation Method 1

Installation Method 1



Installation Method 2



PC 1224 Wiring

ATTENTION:

- Do not connect power to the device until you have read the.
- **ATTENTION:** Notice on the next page.
- Remove power from the system before making any connections.
- The controller and the OCS 100C must share a common ground connection to avoid ground loops and a difference in grounding potential.
- The OCS 100C requires 24 VDC to power. If the sensor is connected to a device that does not provide 24 VDC, use the included

PC 1224 power module:

- 1. Connect a 12 VDC power source to the 12 VDC input on the supplied PC 1224 power converter (see figure 6), or power via the USB type-C 5 V input (see figure 7).
- 2. Wire the PC 1224 24 VDC, 75 mA max connector to the black and red wires on the OCS 100C.
- NOTE: When the PC 1224 is powered via the USB 5 V input, the 24 V output is rated at 35 mA.
- A 12 VDC, 1.25 A max pass-through is available to power additional 12 VDC devices, only if powered from the 12 V input.

OCS 100C Wiring Diagram







Figure 7. OCS 100C USB Power Wiring Diagram

Wire Color	Connections	Note					
Power							
Black	Ground	Shared with all of the outputs.					
Red	+24 VDC	Power input.					
Occupancy Control Outputs							
Blue	Occupancy control output	When wiring the blue wire of the OCS to Extron products with Digit al or FLEX Input ports, configure the ports as Input without pull up. The sensor provides approximately 21 VDC in the ON state and 0 V DC in the OFF state. Use the shared black ground wire					
Blue/White	Common	Relay contacts could be used to trigger third party devices, such as HVAC, based on occupancy.					
Black/White	Normally closed when uno ccupied						
Yellow/Whit e	Normally open when unocc upied						
Occupancy and Lighting Output							
Gray	Occupancy and photocell c ontrol output	Typically used for lighting applications. When wiring the gray wires of the OCS to Extron products with Digital or FLEX Input ports, conf igure the ports as Input without pull up. The output state will remain OFF 0 VDC when occupancy is detected but there is high amount o f ambient or natural light in the room. Only when there is low or no ambient or natural light in the room and occupancy is detected will t he output state trigger ON 21 VDC. Use the shared black ground wi re.					

Troubleshooting

Problem	Possible Cause	Test	Solution
Sensor remains ON.	Constant noise.	Reduce both green and re d knobs by 1/8 (15%) turn or remove noise source.	Move sensor to a less noi sy area within the room.
Sensor remains OFF	Sensitivity is set too low.	Increase both green and r ed knobs by 1/8 (15%) tur n.	Move the sensor. If the A2 DIP switch is set to OFF, set green and red knobs t o normal levels.
Sensor remains on too lo ng.	Timer setting is too high.	Check DIP switch settings	Reduce timer setting.
Hallway traffic turns sensor on.	Infrared sensor can see in to the hallway.	Put sensor in timer test m ode and walk the hallway.	Move sensor, so it cannot see into the hallway or ins tall the IR masks.

Safety Instructions

For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the Extron Safety and Regulatory Compliance Guide on the Extron website.

FCC

Class A Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. The Class A limits provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference. This interference must be corrected at the expense of the user.

NOTE: For more information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the Extron Safety and Regulatory Compliance Guide on the Extron website

Power Attention

ATTENTION:

- These products are intended for use with a UL Listed LPS type power source.
- Use of a non-LPS or unlisted power supply will void all regulatory compliance certifications.
- Unless otherwise stated, the AC/DC adapters are not suitable for use in air handling spaces or in wall cavities. The power supply is to be located within the same vicinity as the Extron AV processing equipment in an ordinary location, Pollution Degree 2, secured to the equipment rack within the dedicated closet, podium, or desk.
- The installation must always be in accordance with the applicable provisions of the National Electrical Code ANSI/NFPA 70, article 725 and the Canadian Electrical Code Part 1
- The power supply shall not be permanently fixed to the building structure or similar structure.
- For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the
- Extron Safety and Regulatory Compliance Guide on the Extron website.
- © 2017-2022 Extron All rights reserved. www.extron.com
- All trademarks mentioned are the property of their respective owners.
- Worldwide Headquarters: Extron USA West, 1025 E. Ball Road, Anaheim, CA 92805, 800.633.9876

Documents / Resources



• Extron - The AV Technology Leader

Manuals+,