

CARL

Cash Box

INSTRUCTION MANUAL

ENGLISH

CB-8570 / CB-8670 / CB-8770
CB-8470

Thank you for purchasing CARL Cash Box CB-8470/ CB-8570/ CB-8670/ CB-8770. Please carefully read the enclosed manual prior to use. It is advisable to retain this manual for future reference.

Please use this product as a temporary storage box. CARL is not liable for any damages caused by theft or robbery. Thank you in advance for your understanding.


CAUTION

Result of Injury	Risk of Malfunction
<div><div></div><div>Do not place your hand into any gaps of movable parts.</div></div>	<div><div></div><div>Do not place your hands on, lean against or rest on the cash box.</div></div>
<div><div></div><div>Do not use the cash box on an unstable surface.</div></div>	<div><div></div><div>Do not put anything on the cash box, throw it, or handle it roughly.</div></div>
<div><div></div><div>Use the cash box on a flat surface.</div></div>	<div><div></div><div>Do not hold and move the cash box when the cover is opened.</div></div>
<div><div></div><div>Do not put the cash box on anywhere except a desk.</div></div>	<div><div></div><div>Do not use the cash box on an unstable surface.</div></div>
<div><div></div><div>Do not attempt to modify, disassemble or repair.</div></div>	<div><div></div><div>Use the cash box on a flat surface.</div></div>
<div><div></div><div>Stop using the cash box and ask for assistance from a local stationery store if you find any abnormalities such as weld peeling, or handle falling off.</div></div>	<div><div></div><div>Check before closing the cover not to get things inside the cash box or the tray caught in the cover.</div></div>
<div><div></div><div>Never allow a child to use the cash box.</div></div>	<div><div></div><div>Make sure the cover is on top when placing the cash box.</div></div>
<div><div></div><div>Keep the cash box out of reach of children.</div></div>	<div><div></div><div>Do not attempt to modify, disassemble or repair.</div></div>
<div><div></div><div>Let user(s) of the cash box read the manual carefully prior to his/ her use.</div></div>	<div><div></div><div>Do not put the cash box on anywhere except a desk.</div></div>


BWARE WHEN USING THE CASH BOX

- The cash box is for indoor use. It may cause rusting, discoloration or deformation if being used outdoor or getting wet.
- Lock the cash box after closing the cover.
- Do not keep this instruction manual or the key inside the cash box. To prevent them from losing, keep them in a separate place.
- The dial unlock code is printed on this instruction manual. Do not keep it inside the cash box.

1. PART DIAGRAM

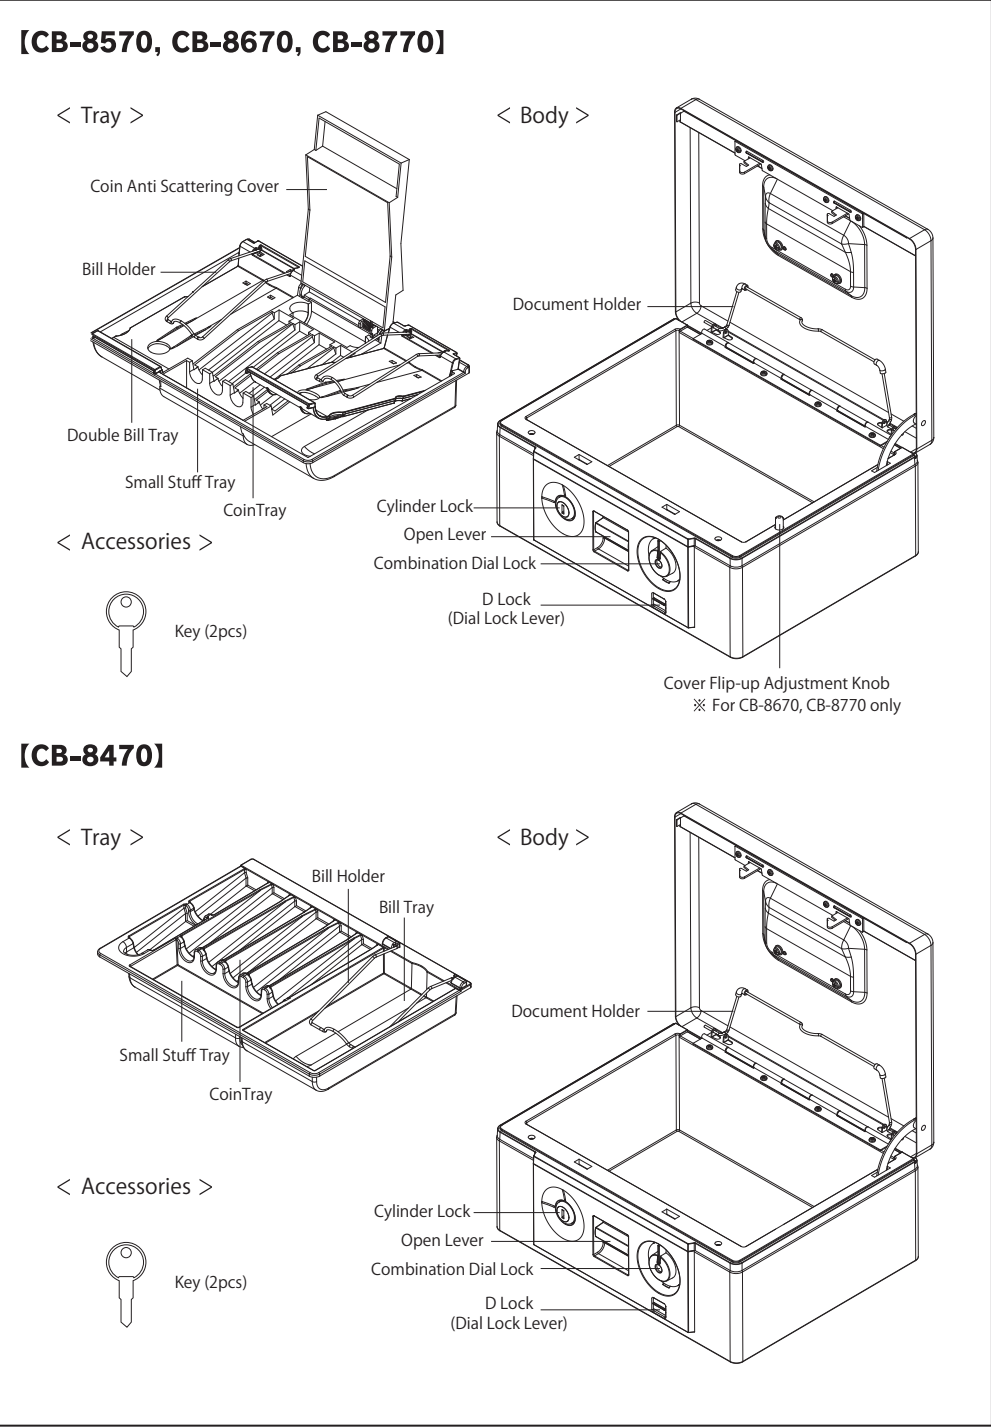


2. SPECIFICATION OF COIN TRAY

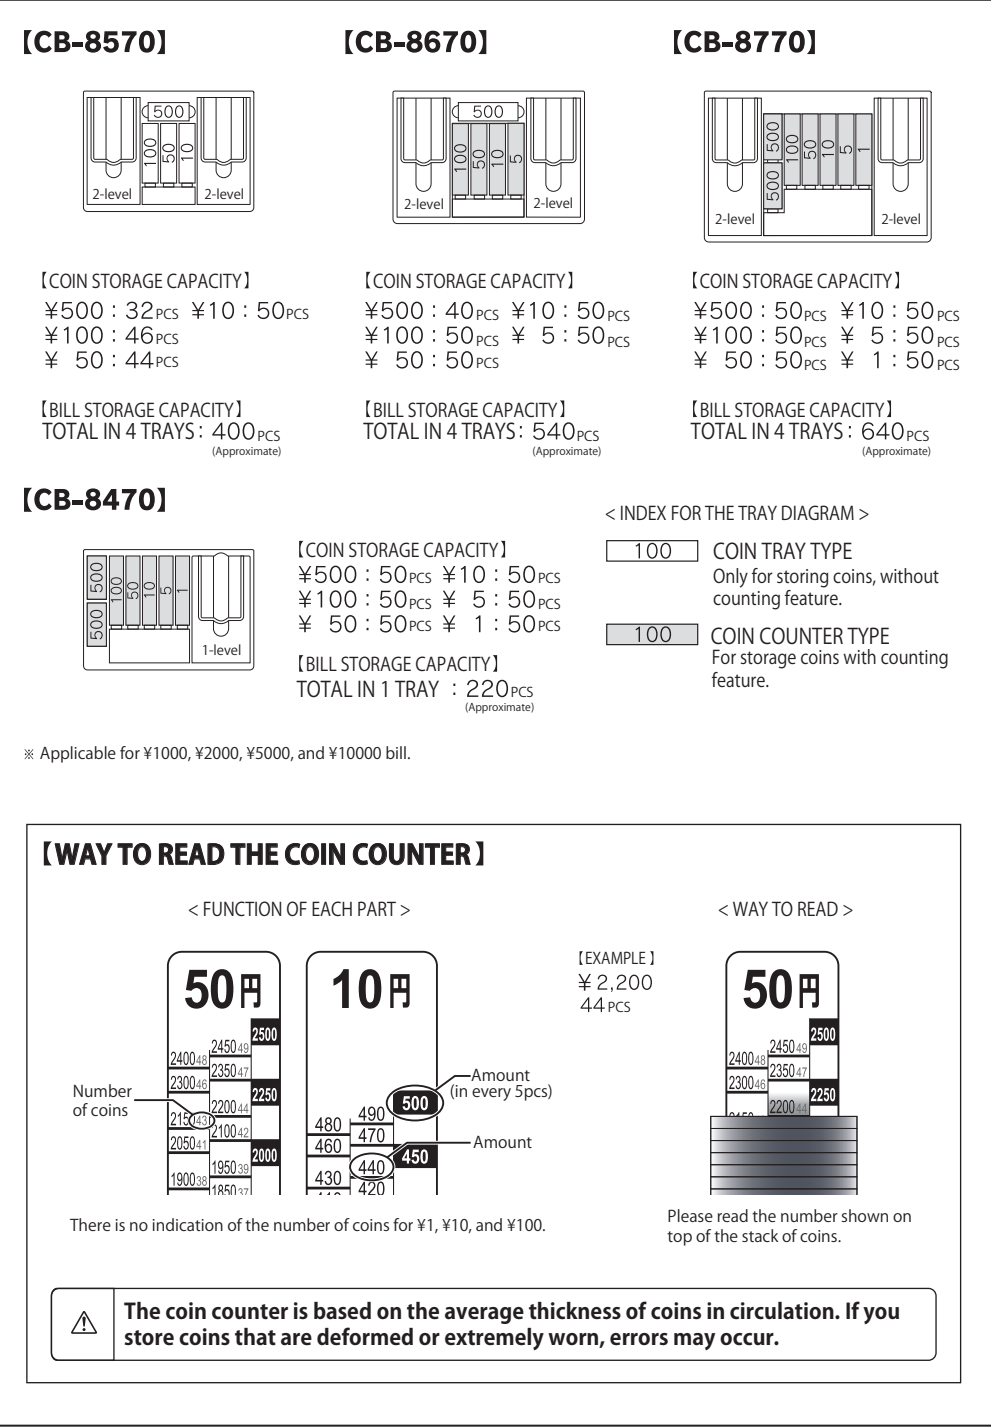


3. HOW TO OPEN THE COVER (WAY TO UNLOCK THE CYLINDER LOCK AND DIAL LOCK)

⚠ When opening the cover, both cylinder lock and dial lock have to be unlocked.
The cover cannot be opened if only either one of the locks is unlocked.


- ① Put the key in the keyhole and turn it clockwise (OPEN) to unlock.

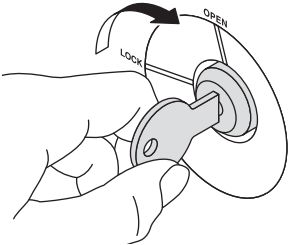

- ② Slide down the D Lock (Dial lock lever) to enable the dial to turn.


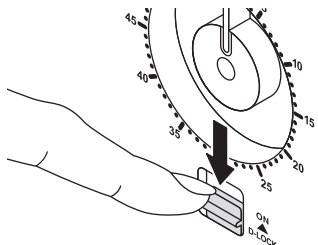


- ③ Turn the dial clockwise at least 2 full circles.

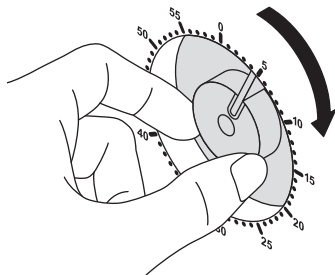



There is no need to set the dial to any specific number.
This procedure is for clearing all unlocking status of the dial lock.
If there is an error in the unlocking operation such as turning the dial too much in step ④⑤, perform this step, and then start again.

- ④ Turn the dial clockwise again and set to the position of the below number.

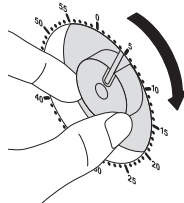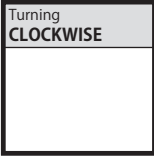


⚠ The unlock code of the dial cannot be changed.

- ⑤ From the position ④, turn the dial anti-clockwise and set to the position of the below number.
※ Please do not turn more than 1 circle.

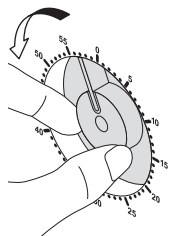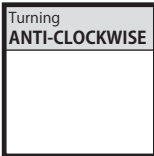

⚠ The unlock code of the dial cannot be changed.

- ⑥ Hold down the open lever.

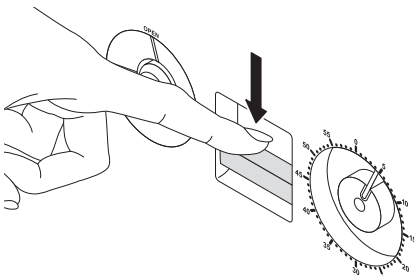

⚠ Always put your hand on the cover when opening the cover.

4. HOW TO CLOSE THE COVER (WAY TO LOCK THE CYLINDER LOCK AND DIAL LOCK)

⚠ To close the cover, both cylinder lock and dial lock have to be unlocked first.
The cover cannot be closed if only either one of the locks is unlocked.

- ① Check below before closing the cover.


- Do not put this instruction manual or the key inside the cash box.
- Make sure that the things inside are in place and would not hinder the cover from closing.
- Make sure that the tray is in place and not slanting.

- ② Ensure the cylinder lock is unlocked.


- ③ Ensure the dial lock is unlocked.

- ④ Close the cover gently till clicked.

- ⑤ Put the key in the keyhole and turn it anti-clockwise (LOCK) to lock.

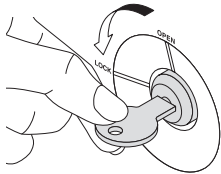


- ⑥ Turn the dial clockwise at least 2 full circles.

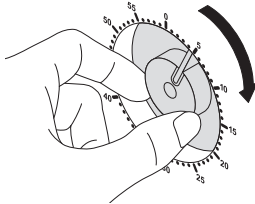

⚠ CAUTION

- Do not keep your key and unlock code tag inside the cash box.
- When the cover is opened, the cover cannot be closed if either the cylinder lock or the dial lock is locked. Closing the cover under this condition will lead to product damage or malfunction.

5. COVER FLIP-UP ADJUSTMENT KNOB (FOR CB-8670, CB-8770 ONLY)

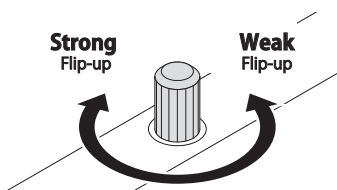


The strength of the cover flipping open can be adjusted by turning the “cover flip-up adjustment knob”.

Adjust the strength depending on the number of documents.

⚠ CAUTION

- Do not keep too many documents in the document holder. This will make the cover unable to close.

6. COIN ANTI SCATTERING COVER (FOR CB-8570, CB-8670, CB-8770 ONLY)

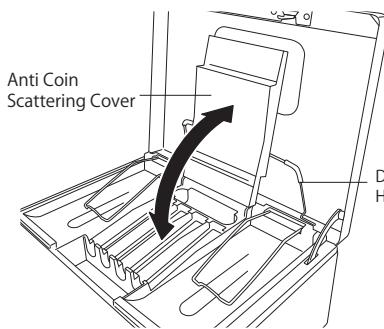

The “coin anti scattering cover” prevents the scattering of the coins inside the coin tray when carrying the cash box.

The “coin anti scattering cover” is linked with the outer cover and will automatically open and close.


⚠ CAUTION

- Do not keep things on top of the coin anti scattering cover. This may be the reason for making the cover unable to close.


7. HOW TO CHANGE THE WAY TO MANAGE THE LOCK

[USING ONLY THE CYLINDER LOCK]

- ① Turn the dial clockwise at least 2 full circles.
- ② Turn the dial clockwise and set to the position of the first unlock code.
- ③ From the position ②, turn the dial anti-clockwise and set to the position of the second unlock code.

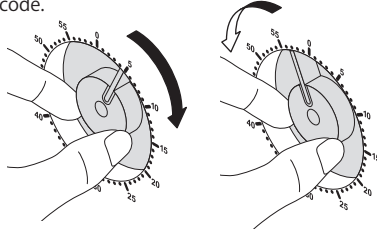


- ④ Put the key in the keyhole and turn it clockwise (OPEN) to unlock.

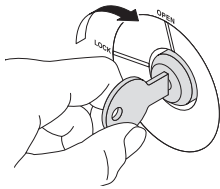


- ⑤ Hold down the open lever and check if the cover is opened.

※ If the cover is not opened, it may due to the wrong unlock code used. Do the unlocking operation again.

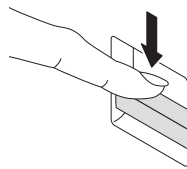


- ⑥ Slide up the D Lock (Dial lock lever) to disable the dial to turn.

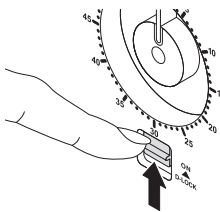


[USING ONLY THE DIAL LOCK]

- ① Put the key in the keyhole and turn it clockwise (OPEN) to unlock.
- ② Take away the key.

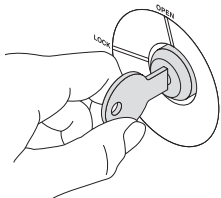

[USING BOTH THE CYLINDER LOCK AND THE DIAL LOCK]

- ① Slide down the D Lock (Dial lock lever) to enable the dial to turn.

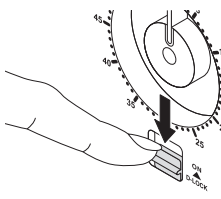

⚠ CAUTION

Do not keep the key and unlock code tag inside the cash box to prevent them from getting locked.