

Southbay Hex Easy Up Gazebo Instruction Manual

Item #: L-GZ793PST-A

SKU #: 810213584

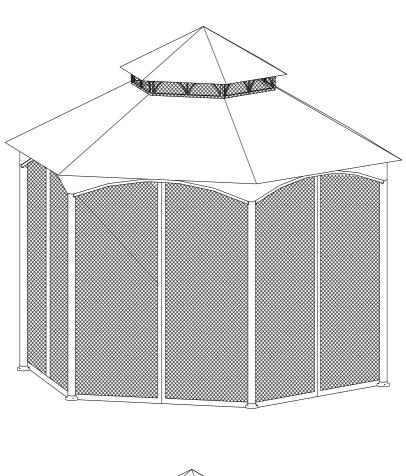

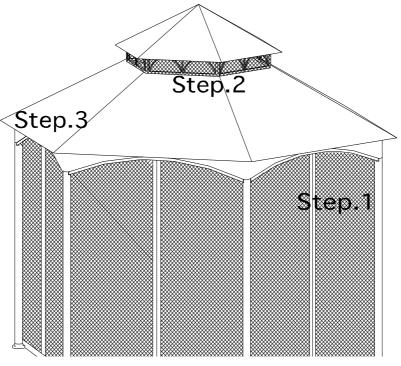

IMPORTANT:

Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble.

WARNING:

- When installing and assembling your gazebo, it is recommended that 2 or more adults are involved.
- This product is intended for outdoor use only and should be placed on flat, horizontal ground.
- 3. Ensure enough clearance around the product.
- 4. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightening.
- 5. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
- 6. Never barbecue under this gazebo or use lanterns that contain naked flames.
- 7. This package contains small items and plastic bags that should be kept away from children.
- 8. Ensure that all connectors & poles are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
- 9. WARNING: Keep all flame and heat sources away from this tent fabric. This tent is made with fabric that meets CPAI 84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the Flame-resistant properties ineffective.
- 10. WARNING: Please take down the gazebo during strong wind. The manufacturer or retailer is not liable for any loss of the product or other items due to the failure to take down the gazebo during strong wind.
- 11. Hook maximum weight: 26 lbs.


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

	. 4		4
\mathbf{p}	rte		CT
Гα	rts	_	st

i dita List			
Post	А	6	
Horizontal screen	В	6	
Arch beam	С	6	
Middle beam	D	6	
Big top frame	E	6	
Small top arch beam	F	6	
Small top connector	G	1	
Hook	Н	1	
Knob	I	42	- ()
Small canopy	J	1	
Big canopy	К	1	
Mosquito netting	L	1	
Netting tube	М	6	

Hardware Pack 1

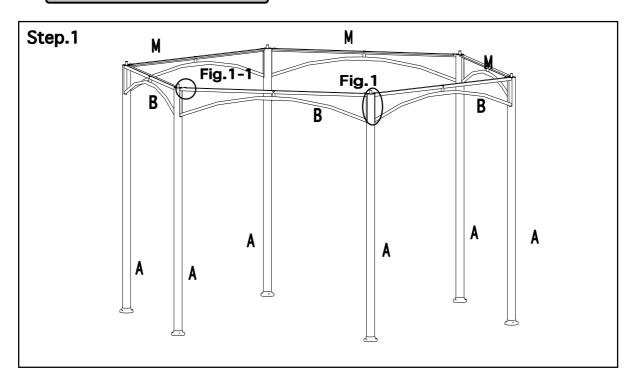

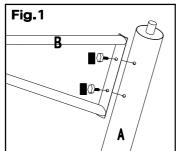


Fig.1: Attach horizontal screen (B) to post (A) by knob (I)

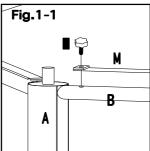
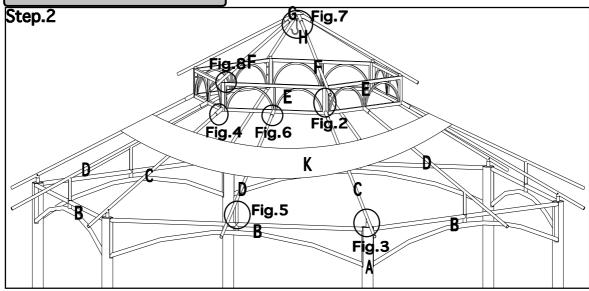


Fig.1-1: Attach netting tube (M) to horizontal screen (B) by knob (I).

Hardware Pack 2



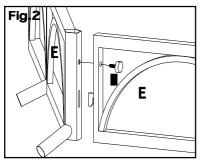


Fig.2: Insert connecting piece of big top frame (E) into pentagon tube, then locked wirth knob (I).

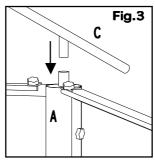


Fig.3: Insert connector of arch beam (C) into post (A).

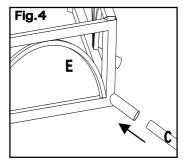


Fig.4: Insert upper side of arch beam (C) into connector of big top frame (E).

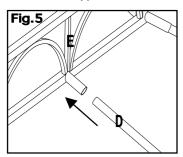


Fig.5: Insert upper side of middle beam (D) into middle connector of big top frame (E). Then put on big canopy (K). Do not spread out.

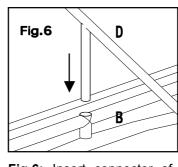


Fig.6: Insert connector of middle beam (D) into middle tube of horizontal screen (B).

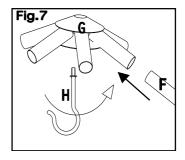


Fig.7: Insert hook (H) into small top connector (G), then insert small top arch beam (F) into small top connector (G).

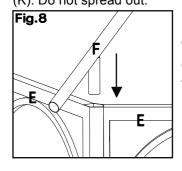


Fig.8: Insert down connector of small top arch beam (F) into big top frame (E).

Hardware Pack 3

BB Ring 48 PCS	AA	Stake	18 PCS	(
	BB	Ring	48 PCS	

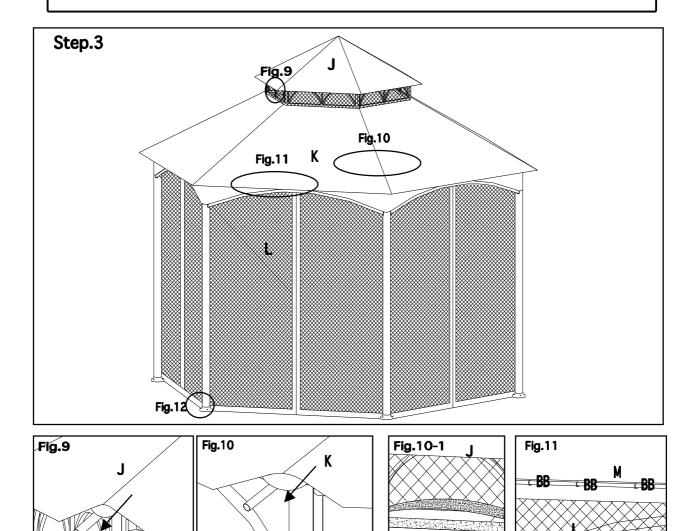


Fig.9: Put on small canopy (J), attach corners to small top arch beam (F).

Fig.10: Spread out big Fig.10-1: canopy (K), attach corners netting to arch beam and middle canopy (J) to big beam.

Stick small canopy (K).

K

Fig.11: Attach mosquito netting (L) to netting tube (M) by ring (BB).

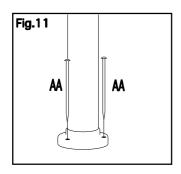


Fig.11: Secure whole gazebo to lawn by stake (AA).

USE & CARE

- 1. This Gazebo is not a permanent structure and should be disassembled & stored away after use
- 2. Do not repack your gazebo until completely dry.
- 3. This Gazebo must be assembled by two adults or more.
- 4. This Gazebo must not be left erect in windy conditions.

WARNINGS

- 1. Assembly Instructions must be followed.
- 2. Pegs supplied must be used to hold this gazebo in place when upright.
- 3. Warranty does not cover damage due to extreme weather conditions.

CUSTOMER SERVICE

Sunjoy Industries warrants to the original purchaser that this item is free from defects in workmanship and materials of your item provided the item was factory-sealed at the time of purchase and is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of **1 year**. Should any manufacturing defect arise within this warranty period, Sunjoy Industries will repair or replace (at our option) any defective merchandise upon proof of purchase; however, transportation and delivery costs, as well as labor and material charges to remove or replace parts, remain the responsibility of the purchaser. A purchaser of an "open box," previously-returned, or "clearance" item, as well as original purchasers outside of the warranty period, may obtain replacement parts from Sunjoy Industries for products in current production, at nominal cost.

If you are within the return policy that most stores have, you do have the option of returning this item back to the store which you bought it from for an exchange of the same item, or a refund of the purchase.

If you are within or beyond the return policy that most stores have, and need tech. assistance or replacement parts, please call Sunjoy Industries at 1(866) 578-6569 from 8:30 am to 5:30 pm eastern standard time or e-mail to Biglots@sunjoygroup.com or fax your parts replacement order form together with the purchase receipt to 1 (740) 283-3549 for assistance.