

Lenovo IdeaCentre A Series User Guide

Version 1.2 2009.8

 


31039406



lenovo

ideacentre



Important Safety Information

Before using this manual, it is important that you read and understand all of the related safety information for this product. Refer to the *Safety and Warranty Guide* that you received with this product for the latest safety information. Reading and understanding this safety information reduces the risk of personal injury or damage to your product.



 
 
 
 
Danger: Be aware of extremely hazardous or lethal situations.

 


Attention: Be aware of possible damage to programs, devices, or data.



Note: Pay attention to this important information.






Contents

Important Safety Information


Chapter 1 Using the Computer Hardware.....	1
1.1 Left and right view of the computer	2
1.2 Rear view of the computer.....	3
1.3 Connecting your computer	3
1.4 Computer instruction	9
1.5 Keyboard and Mouse (wired)	11
 Chapter 2 Using the Rescue System	 13
2.1 OneKey Recovery	14
2.2 Driver and Application Installation	14
2.3 System Setup	15
2.4 System Backup	16
2.5 System Recovery	16
2.6 Create Recovery Disc	16
 Chapter 3 Using the Computer Software	 17
3.1 Power2Go — Burning Discs	18
3.2 WinDVD.....	19
3.3 Lenovo Healthcare Software.....	20
3.4 McAfee Security Center	23
3.5 Media Show	24
3.6 Lenovo CamSuite	25
 Chapter 4 System Maintenance and Recovery.....	 27
4.1 Restoring the System	28
4.2 Backup and Restore.....	28
4.3 Cleaning Up the Disk	28

 

4.4 Checking For, and Correcting Disk Errors	29
4.5 Defragmenting the Disk(s).....	29
4.6 Performing Daily Maintenance Tasks.....	29

Chapter 5 Troubleshooting and Confirming Setup..... 31

5.1 Troubleshooting Display Problems	32
5.2 Troubleshooting Audio Problems.....	33
5.3 Troubleshooting Software Problems.....	33
5.4 Troubleshooting Problems with Optical Drives and Hard Disks.....	34
5.5 Special considerations for troubleshooting Windows	35

 

1

Chapter

Using the Computer Hardware

This chapter contains the following topics:

- Computer hardware introduction
- Information on computer connections



Note: The descriptions in this chapter might vary from your computer, depending on computer models and configurations.

 
1

2

3

4


5



1.1 Left and right view of the computer




 Attention: Be sure not to block any air vents on the computer. Blocked air vents can cause thermal problems.

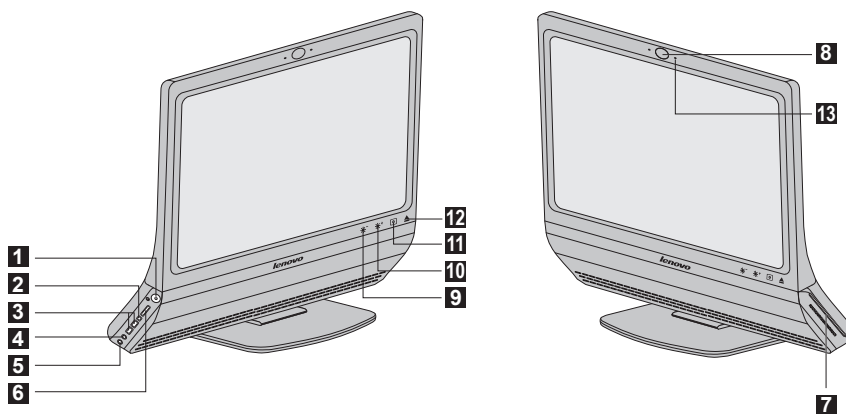


- 1** Power button
- 2** IEEE 1394 connector
- 3** USB ports (2)
- 4** Headphone connector
- 5** Microphone connector
- 6** Memory card reader
- 7** Optical drive slot

 - 8** Camera
- 9** Brightness down touch button
- 10** Brightness up touch button
- 11** LCD On/Off
- 12** Optical drive eject touch button
- 13** Built-in microphone



 1.2 Rear view of the computer

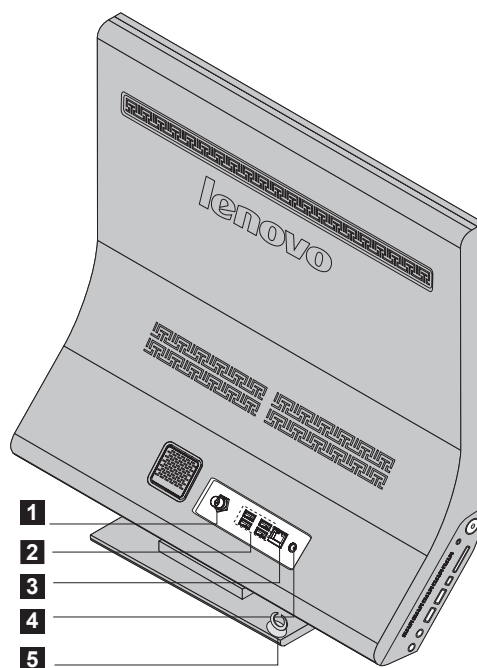


- 1** TV tuner (Select models only)
- 2** USB ports (4)
- 3** Ethernet connector
- 4** Power connector
- 5** Cable routing clip

1.3 Connecting your computer

Use the following information to connect your computer:

- Look for the small connector icons on the back of your computer. Match the connectors to the icons.

 ! **Note:** Your computer might not have all of the connectors that are described in this section.




- 1.3.1** Check the voltage rating before you connect the equipment to an electrical outlet to ensure that the required voltage and frequency match the available power source.


If your computer uses an AC adapter:

- !** **Note:** Use only the Lenovo provided AC adapter approved for use with this device. Use of another AC adapter may cause a fire or explosion.

 
- 1.3.2** Connect the keyboard cable to the appropriate keyboard connector (USB connector).

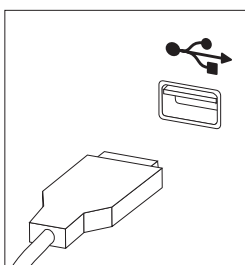

 
- 1.3.3** Connect the mouse cable to the appropriate mouse connector (USB connector).

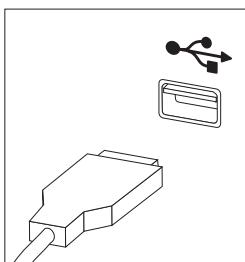

 - !** **Note:** If your computer is equipped with a wireless keyboard or mouse, follow those installation instructions.



 1.3.4 Computer stand

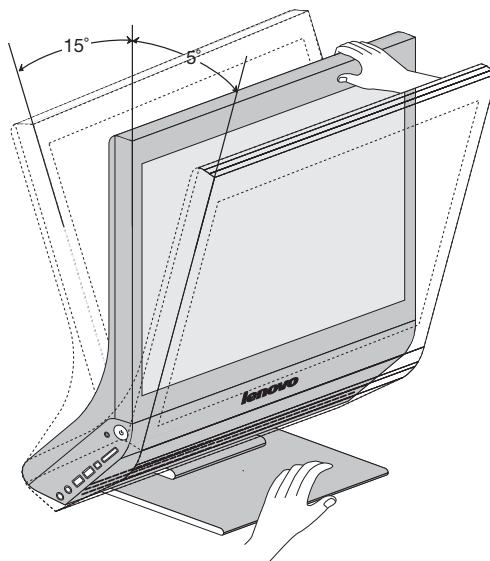


Use the stand to position the display to your preference. It can be adjusted from 5° forward to 15° backward.


The stand provides stability to the computer; it is not a removable part.



 
Attention: The computer stand must remain installed at all times to ensure maximum system stability.

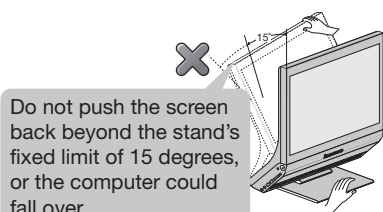

 
Do not push the screen back beyond the stand's fixed limit of 15 degrees, or the computer could fall over.

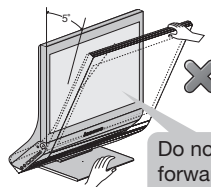

 
Do not pull the screen forward beyond the stand's fixed limit of 5 degrees, or the computer could fall over and the screen could be damaged.

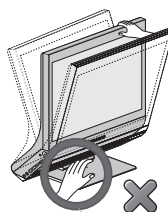

 Do not put your hand on the stand joint when adjusting the screen.



 
1.3.5 If you have audio devices, attach them using the following instructions:

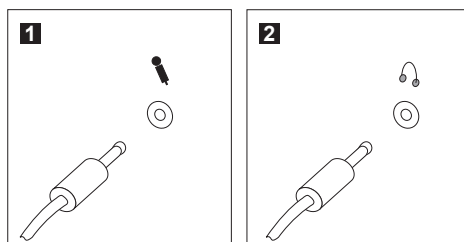


1 Microphone Use this connector to attach a microphone (purchased separately) to your computer when you want to record sound or if you use speech-recognition software.

2 Headphone Use this connector to attach headphones (purchased separately) to your computer when you want to listen to music or other sounds without disturbing anyone.

 
1.3.6 If you have powered speakers with an adapter:

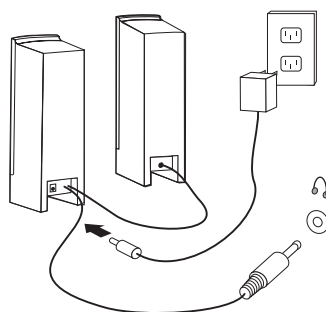

 - Connect the cable that runs between the speakers if necessary. On some speakers, this cable is permanently attached.
- Connect the adapter cable to the speaker if necessary. On some speakers, this cable is permanently attached.
- Connect the speakers to the Headphone port on the computer.
- Connect the adapter to the power source.



 
1.3.7 If you have powered speakers without an adapter :

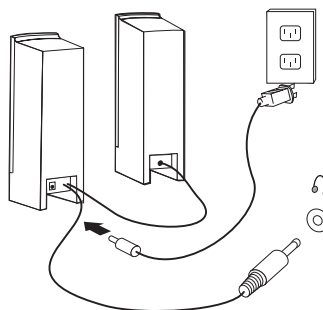

- Connect the cable between the two speakers, if necessary. On some speakers, this cable is permanently attached.
- Connect the cable to the speaker if necessary. On some speakers, this cable is permanently attached.
- Connect the speakers to the Headphone port on the computer.
- Connect the power cord plug to the power source.

Note: Some models are not equipped with external speakers.

 1.3.8 Connect any additional devices that you have. Your computer might not have all connectors shown.

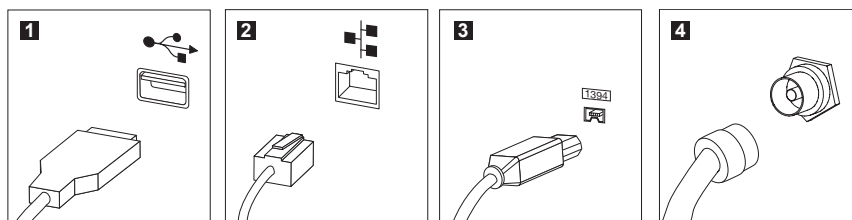

1 USB connector

Use this connector to attach a device that requires a USB connection.

2 Network adapter connector

 
Use this connector to attach the computer to an ethernet-type local area network.

3 IEEE 1394

This connector provides connection to several types of consumer electronics including digital audio devices and scanners.


4 TV-Tuner connector

Only supported on systems with optional TV tuner card.




1.3.9 Connect the power cords properly to grounded electrical outlets.

 1. Plug the power adapter cord into the back of the computer.
2. Plug the power cord into the AC adapter.
3. Plug the power cord into an AC power source.

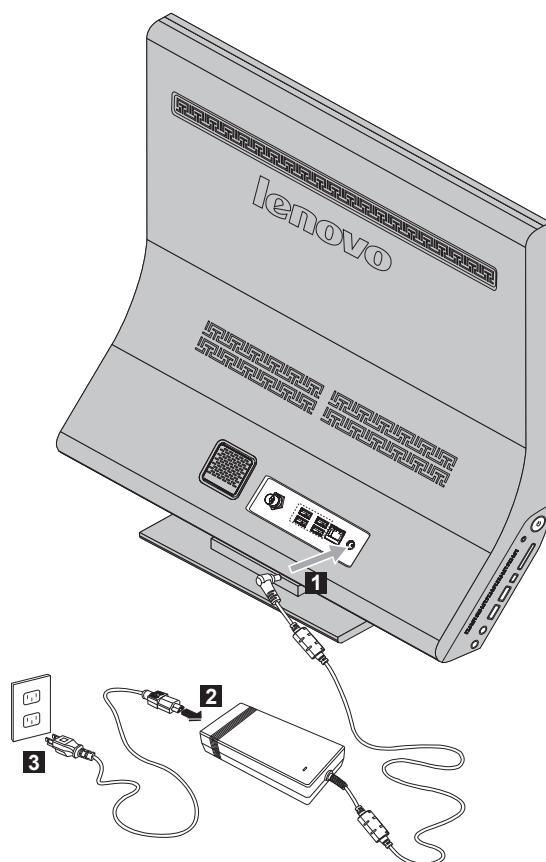

1.3.10 If your computer is equipped with a Memory Card Reader connector, it is able to read/write data from:

 
- Secure Digital (SD)
- MultiMediaCard (MMC)
- xD
- Memory Stick (MS)
- Memory Stick PRO (MS pro)




Secure Digital PRO (SD pro)


1.4 Computer instruction

 Press the power button on the side of this computer to turn it on.

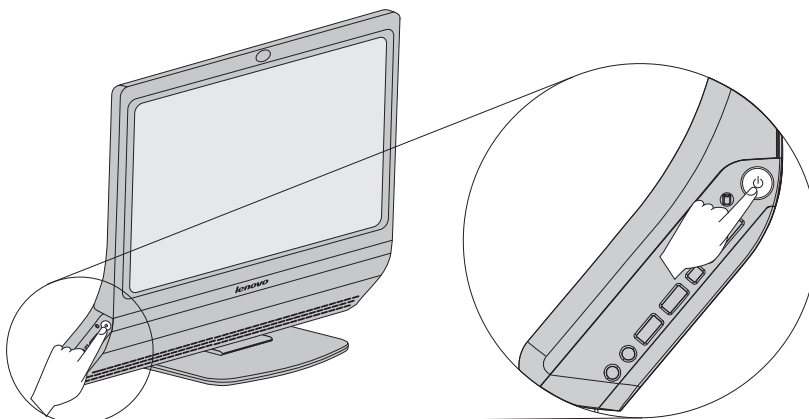


  Note: The buttons at the bottom of the screen are touch buttons. When you touch these, the indicator lights turn on.

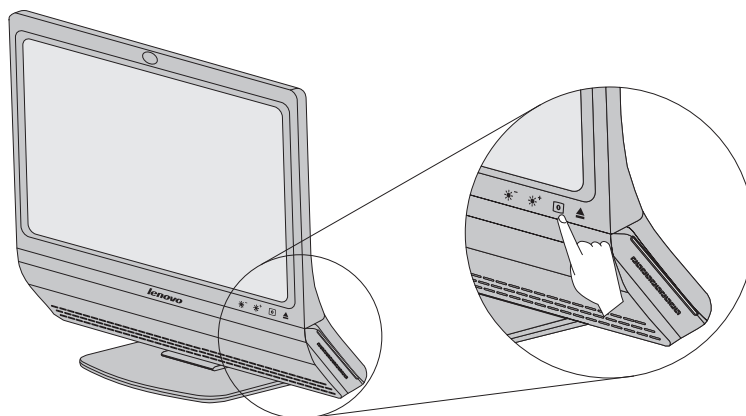




 
Important information on how to use this computer

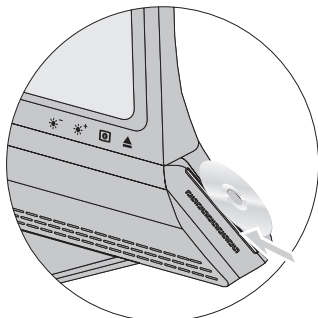

 Insert a disc with the non-label side facing the user. The disc cannot be read if you insert it the other side up.

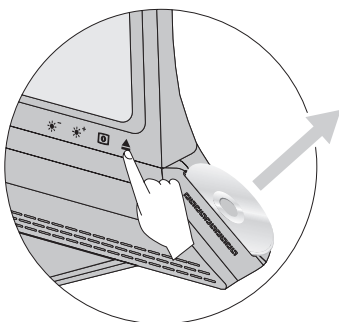

 
To eject a disc, press the eject button at the bottom of the touch screen.

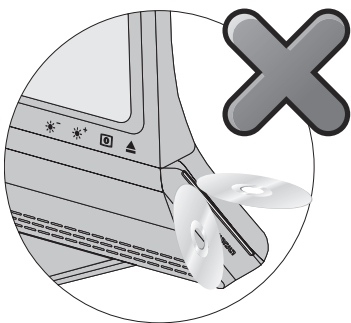

Do not obliquely insert discs into the optical drive slot. Doing so will damage the drive and scratch the discs.


Important information on how to use the optical drive

 1. Do not insert 3-inch discs into the optical drive slot.
2. Insert the disc into the optical drive slot and push gently until the disc enters automatically.




3. Do not force the disk when it is being inserted/ejected.
4. Do not insert damaged discs.
5. Do not insert any other objects other than discs.

 Not following the above guidelines could damage the optical drive slot and disc.

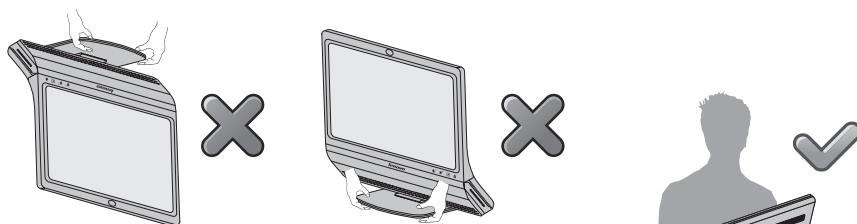


 
Do not hold the computer by the stand joint only.
Doing so could damage the stand joint.

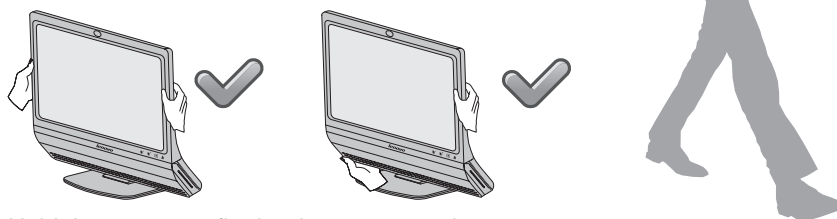

Hold the computer firmly when you carry it.

  1.5 Keyboard and Mouse (wired) (Only some models are equipped with wired Keyboard and Mouse).

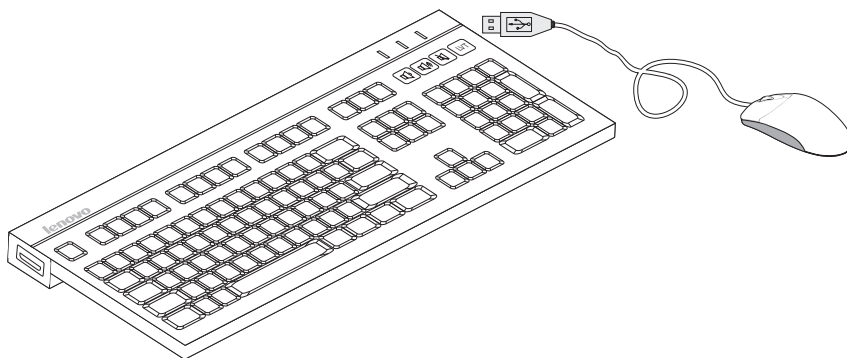



Important:

Be sure that you connect all high-power USB devices directly to the USB ports on the computer, and not the keyboard. The USB port on the keyboard can be used to connect some USB devices, such as a USB mouse.

 **Note:** Not all USB devices are compatible.

 — Volume down

 
 — Volume up

 — Mute

LVT — After entering Windows, press this key to launch the LVT (Lenovo Vantage Technology) program, Lenovo's pre-loaded Home PC software. In addition to its own functions, the LVT program will allow you to start other Windows compatible software, specially configured to run on this model of computer.

F2 — Your computer has the Lenovo Rescue System installed. To learn more about this program, turn on the computer, and when the **Lenovo** logo appears, press the F2 key and the Lenovo Rescue System will open.

 **Note:** Only some models are equipped with the wireless keyboard and mouse or remote control. For more information about the wireless keyboard and mouse or remote control, refer to those installation instructions provided with your computer.



2

Chapter

Using the Rescue System

This chapter contains the following topics:

- OneKey Recovery
- Driver and Application Installation
- System Setup
- System Backup
- System Recovery
- Create Recovery Disc



Attention: Using this program will result in a loss of data.

- You can recover the C drive of the computer to the factory default settings or to the last system backup status using **OneKey Recovery**. With this operation, all of the existing data on drive C will be lost, whereas the content and format of the other partitions of the hard disk drive will remain unchanged.
- If you want to install an operating system with the Windows Recovery DVD and back it up with **OneKey Recovery**, you must format the C partition in **NTFS** format and install the operating system on the C partition. Otherwise, the **OneKey Recovery** system cannot run.

 
1

2

3

4

5



Note about the service partition:

The files and relevant data used by the rescue system are saved in the service partition. Deleting this partition will make the rescue system unusable. For more detailed information, see the following instructions:

By selecting **Control Panel** → **Administrative Tools** → **Computer Management** → **Disk Management**, you can see the service partition, which must not be deleted.

Note: The recovery files and relevant data used by the rescue system are saved in the service partition. If the service partition is deleted or damaged by someone other than authorized Lenovo servicers, Lenovo will not be liable for any losses arising there from in any way.

2.1 OneKey Recovery

OneKey Recovery is an easy-to use application. You can use it to restore your computer to the system default or a previously backed up state.

Detailed Operation Procedure

 
1. Turn on the computer. When the *Lenovo* logo appears, press the **F2** key on the keyboard to start the **Rescue System**, then you can select **OneKey Recovery**.

Note: System Recovery will overwrite all of the data on drive C. To prevent loss of data, be sure to back up relevant data before performing system recovery.

2. Follow the onscreen instructions to select the backup task you want to restore from and disk you want to install operation system, and press **Next** to start restoration.
3. Please wait during the process of system recovery. Do not interrupt the operation during the recovery process.
4. After the system is recovered successfully, the software prompts to restart the computer. Restart the computer and enter the system.

2.2 Driver and Application Installation

The Driver and Application Installation function in the rescue system provides a way for the user to conveniently re-install all of the Lenovo applications and drivers that were shipped with your Lenovo hardware.



Method 1: Automatic Installation

Turn on the computer. When the Lenovo logo appears, press the **F2** key on the keyboard to start the **Rescue System**, then select **Drivers and Application Installation**.

Follow the screen prompts to install the Lenovo Drivers and Application Installation. Click **Install** to start installing the Lenovo Drivers and Application Installation.

The system will restart. After the system has restarted, the installation process will continue until completion.

Method 2: Manual Installation

In the Windows system, Click **Start** → **All Programs** → **Lenovo** → **Lenovo Drivers and Application Installation**.

After starting the procedure, install all the drivers and software manually according to the prompts.

! Notes:

1. It is recommended not to install the software which is already on the computer.
2. Before accessing the operating system, make sure that the Drivers and Application installation has been installed automatically. After that, the manual installation function can be used.

2.3 System Setup

System Setup configures the network configuration for the Lenovo Rescue System to ensure your Rescue System can connect to internet. In addition, System Setup sets and manages all passwords for the Lenovo Rescue system.

 
2.3.1 Launch

Turn on the computer. When the *Lenovo* logo appears, press the **F2** key to launch **Rescue System**. Then select **System Setup**.

2.3.2 Network Settings

Depending on the network access mode of the computer, select "ADSL" or "LAN Connection" in the network connection modes.

1. If you select "ADSL," input the username and password of the ADSL connection.



2. If you select “LAN connection,” configure the IP address and proxy server of the LAN.

2.3.3 Password Management

Password Management allows you to set the password for Lenovo Rescue System and manage it.

The default password is blank.

Set a password when you access the **Password Management** for the first time. If you don't want to set a password, access the system directly and operate accordingly.

2.4 System Backup

Back up your system partition to an image file. In case of a system failure, you can restore your system from this image file.

In the Windows system, click **Start** → **All Programs** → **Lenovo** → **Lenovo Rescue System**.

After starting the procedure, click **System Backup** to back up your system partition according to the prompts.

2.5 System Recovery

Reboot your computer into the system recovery environment. You can choose to restore to a system backup point or the initial state.

 
2.6 Create Recovery Disc

Create a bootable recovery disc from current system. These recovery discs are used to boot your computer and will guide you through the entire restoration process.

In the Windows system, click **Start** → **All Programs** → **Lenovo** → **Lenovo Rescue System**.

After starting the procedure, click **Create Recovery Disc** to create a bootable recovery disc from current system.

Follow the screen prompts to create recovery discs.



3

Chapter

Using the Computer Software

This chapter contains the following topics:

- Computer software instructions



Note: The interface and function of each of these features are subject to the actual software that was shipped with the computer model that you purchased.

 
1

2

3

4

5



3.1 Power2Go — Burning Discs

(This software can only be used on models with a rewritable optical drive)

Power2Go is the software for disc burning. It provides various burning tools that enable you to easily store your files on CDs or DVDs.

Power2Go can make common data discs, music discs, video/photo discs and mixed discs. It also supports disc duplication.

 **Note:** This software does not support the burning of VCD audio or Blu-ray disk DVDs.

3.1.1 Launch

1. Choose **All Programs** → **Lenovo** → **Power2Go** → **Power2GoExpress** from the **Start** menu to launch the burner program.
2. The shortcut to launch the burner software is the block icon on the desktop. To use the burner program, just drag and drop the files to be recorded onto their appropriate data, music, or video icon.

3.1.2 Starting the Burner Software

 
1. Choose **All Programs** → **Lenovo** → **Power2Go** → **Power2Go** from the Start menu to launch the burner program.
2. Choose a task for the burner from the task list. Then start the burner to record files.
3. You can choose the medium to burn from the disc type, and then click the OK icon to access the burner interface.
4. Select the file to be burned from the select source box, and then click the add files icon to add your files into the disc compilation column. Click the burn icon to start burning process.

3.1.3 Disc Utility

The burner also provides utility tools for preparing and processing various CDs and DVDs, such as the recording of mirror files, erasing of discs, and conversion of audio.

3.1.4 Help

For more information about the use of **Power2Go**, click the **Help** icon.



3.2 WinDVD (Some models are equipped with WinDVD software and the WinDVD Blu-ray software is only equipped on the model with the Blu-ray optical drive.)

With WinDVD, you can play DVDs and VCDs.

To launch the player:

Choose **All Programs** → **InterVideo WinDVD** from the **Start** menu to launch the player.

Click the “?” icon to obtain more information about **WinDVD**.

WinDVD Blu-ray Disc (BD) is the software for playing discs. It can play DVD standard format discs and Blu-ray format discs with the optical drive.

The WinDVD player includes the following basic buttons:

▶ — Play

◀◀ — Move backward within the current track

|| — Pause

▶▶ — Move forward within the current track

▼ — Track list

■ — Stop

 
◀ — Go to the previous track

⏏ — Eject

▶ — Go to the next track

🔊 — Mute

▬ — Volume



3.3 Lenovo Healthcare Software (Only some models are equipped with this software.)

 
Lenovo Healthcare Software is a smart software platform that helps parents to guide their children to use the computer correctly by protecting and providing a healthy computing experience for them.

With the eyesight protection and brightness adjustment function, the **Lenovo Healthcare Software**:

- Automatically monitors the distance between the child's head and the computer display during computer operation, and prompts the child to keep a proper distance from the computer monitor.
- Automatically adjusts the display brightness of the computer according to the ambient brightness.
- Helps the child keep a proper sitting posture while operating a computer. The **Lenovo Healthcare Software** protects the healthy growth of childrens' spines and vision (**Lenovo PC Bright Eye** camera is required in order to use these functions).


3.3.1 Eyesight Protection Setting

1. The **Lenovo PC Bright Eye** camera and **Lenovo Healthcare Software** work together to maintain proper distance between the computer operator and the computer display. It also automatically adjusts the display brightness to a comfortable level thereby protecting the operator's vision.
2. This function applies only to the computers equipped with a **Lenovo PC Bright Eye** camera and is available only after the camera is installed.
3. For details about installing **Lenovo PC Bright Eye** camera, see "Installation Guide for **Lenovo PC Bright Eye Camera**" in this document.
4. Before using this software, you need adjust the pitching angle of the web camera to the appropriate position.




To use this software, do the following:

 1) Click **Start** → **All Programs** → **Lenovo USB2.0 UVC Camera** → **vmcap**.

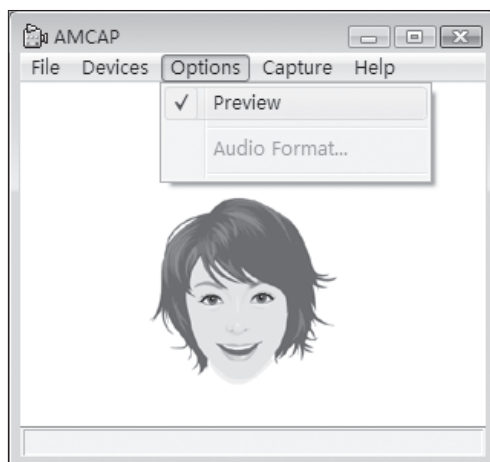


2) Select **Options** → **Preview** from the pop-up window to display the image in the video capture window.

 ⓘ **Note:** If there is no image display in the AMCAP video capture window, please confirm that preview in the options has been checked.

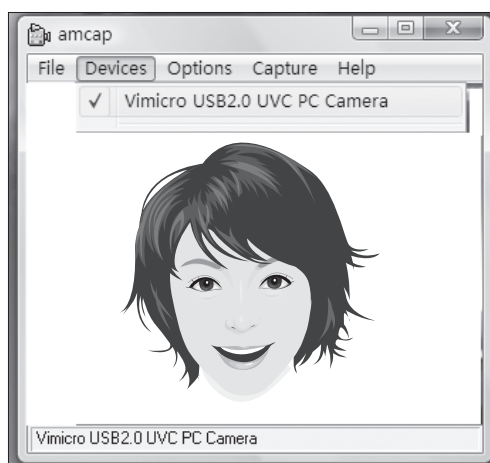

 3) Confirm that **Devices** → **Vimicro USB 2.0 UVC PC Camera** has been checked. If there are other devices in this option, do not check them. Only choose the “**Vimicro USB2.0 UVC PC Camera**” device, and the window should display the



camera image. An image, which is caught by Lenovo PC Bright Eye camera, will be displayed in the video capture window. Adjust the position and pitch angle of the camera to ensure the whole face is displayed in the video capture window. Now you have successfully configured the **Lenovo PC Bright Eye camera** with **Lenovo Health Care Software**.

5. Click **Start** → **All Programs** → **Lenovo** → **Lenovo Healthcare Software**.
6. Click **Eyesight Protection** or **Brightness Adjustment** to adjust the camera.

3.3.2 Distance Setup

 
1. Select the display type according to the size of the display used.
2. Select Healthy Viewing Distance Selection to set the distance between the computer operator and the computer display.
By default, a setting is selected. You can adjust the viewing distance according to your requirement.
3. Select Response Time Setting to set the duration of time before an alarm is given when the distance between the operator and the display is shorter than the healthy viewing distance.

3.3.3 Brightness Adjustment

1. Adjust the display brightness according to the ambient brightness.
2. There are three levels of ambient brightness: Dim, Moderate, and Bright.
3. When you use the computer for the first time, you should set the proper display brightness according to each level of ambient brightness.
4. For each level of the ambient brightness, the recommended display brightness is selected by default. Please adjust your display brightness to a comfortable level.
5. After the brightness setting is completed, the display brightness will be automatically changed according to the current level of ambient brightness.

3.3.4 The Limitations of the Lenovo Bright Eye Camera

1. Ensure the lens of the camera is exposed and not covered.
2. Ensure your eyes are exposed and not covered.
(The function that detects the distance between the user and monitor is based on the position of the user's eyes. Therefore, if the eyes are covered or there is a strong reflection, the distance detection may be affected.)
Wear glasses may affect the accuracy of the face image verification.



3. The limitation of the distance detection by the camera:

The minimum distance : about 20 centimeters (7.90 inches)

The maximum distance : about 70 centimeters (27.55 inches)

The pitch angle (the face rotary angle scope in the vertical):

Elevation angle: 20 degrees

Depression angle: 30 degrees

The horizontal rotary angle (the face rotary angle scope in the horizontal):

-20~+20 degrees

3.4 McAfee Security Center

McAfee VirusScan Center offers proactive PC security to prevent malicious attacks. It also provides security against multi-pronged attacks by combining anti-virus, anti-spyware and firewall technologies.

 **Note:** Connect to the Internet before activation.

3.4.1 Using McAfee Security Center

Choose **All Programs** → **McAfee** → **McAfee Security Center** from the **Start** menu to launch the antivirus software.

Or, Double click the **McAfee Security Center** on the desktop to launch the antivirus software.

3.4.2 Scanning for Viruses

Click **Scan** on the Security Center home page. Select a task on the Scan Options pane, Click **Start** to launch the scan program. Upon completion, the software will pop up a system scanning report, which lists all virus files detected, and you can then quarantine or delete them as required.

 
3.4.3 Check for updates

Click **Update** on the Security Center home page to check for updates.

 **Note:** Connect to the Internet before upgrading.

3.4.4 Help and Support

For more information on the operation of Security Center, see product help Information in the **Help** option. In the help document, you can learn more about McAfee Security Center operation and settings.



3.5 Media Show

MediaShow is a new and innovative way to view and be creative with your media. MediaShow lets you be as imaginative as you want by performing the following functions:

- View your photos and videos
- Edit and add effects to your photos and videos
- Create screen savers and slideshows with your photos
- Create stylish and professional looking movies with your videos
- Upload your photos directly to Flickr
- E-mail photos and videos directly from MediaShow to your friends
- Create discs with your photos and video

3.5.1 Photos

 
You can manage your photos in MediaShow through the different creative functions. It has various editing functions and the ability to e-mail your photos, or upload them to Flickr.

3.5.2 Videos

You can manage your videos in MediaShow through the different creative functions. It has various editing functions and allows you to e-mail your videos.

3.5.3 Create DVD Discs

You can create professional looking DVD discs with themes and menus using your videos and photos through this function. You also can configure your DVD disc settings.



3.6 Lenovo CamSuite

CamSuite is an animated messaging tool featuring customizable emotive facial animation that gives you much more fun than the conventional video chatting on instant-messaging applications.

 **Note:** If you have an instant-messaging application installed on your OS, the video device must be set manually.

Refer to the following steps to quickly start using **CamSuite** in your instant-messaging video conference. For more details on how to use each feature of **CamSuite**, refer to the Online Help.

3.6.1 Capture mode

 
 
 
 
In the **Capture** mode, you may click **Snapshot** or **Record** button to capture and share an image or a video of yourself from your webcam.

 
3.6.2 Avatar Live

CamSuite enables you to select a customized image and use it as your avatar during instant-messaging video calls.

3.6.3 Magic Mirror

You can add different expressions to enhance your face by means of **Face Morph** technology.





4

Chapter

System Maintenance and Recovery

This chapter contains the following topics:

- Daily Maintenance and Tools Instructions

 
1

2

3

4

5



4.1 Restoring the System

The system can develop problems due to erroneous operation or the installation of additional software. If software problems develop in the originally installed software, you can restore the system by using system backup and restoration features.

! **Note:** The existing system settings will change after restoration. Check the settings of the restored system to ensure they match settings that may be critical to your needs.

Use the following procedure to restore the software to a known functional level:

1. Click **Start** → **All Programs** → **Accessories** → **System Tools** → **System Restore**.
2. Choose either the recommended restore point, or select a different recovery time from the pop-up box. Choose the latest date when the system was running properly.
Click **Next** to continue.
3. The system will start restoration. When all processes run to completion, the system displays a message informing you that the restore operation has completed successfully.

4.2 Backup and Restore

 
For security purposes, you can back up the system status before you install additional software, or otherwise modify system settings. To back up the system status, do the following:

1. Click **Start** → **All Programs** → **Maintenance** → **Backup and Restore**.
2. Select the location for your backup. Click **Next** and follow the instructions to continue.

4.3 Cleaning Up the Disk

Do the following periodically to clean up the disks and possibly enhance your computer's performance:

1. Click **Start** → **All Programs** → **Accessories** → **System Tools** → **Disk Cleanup**.
2. Choose the disk you want to clean up.
3. Click the **OK** button to start the cleanup process.



4.4 Checking For, and Correcting Disk Errors

To properly maintain your system, you should periodically check for and fix hard disk errors by doing the following:

1. Right-click the icon for the hard disk drive (HDD) that you want to reorganize, then select **Properties** from the pop-up menu.
2. Select the **Tools** tab, and then click **Check Now**.
3. Check your inspection items for the disk and click **Start**.

 **Note:** You cannot start error checking until the computer is restarted and initialized.

4.5 Defragmenting the Disk(s)

Disk fragments are tiny unused storage areas scattered on the disk. The system cannot directly reutilize these “blank” spaces and system performance can decrease as system operations usually cause the number of unused storage gaps to increase. To defragment your disk storage, do the following:

 
1. Right-click the icon for the hard disk drive (HDD) that you want to reorganize, then select **Properties** from the pop-up menu.
2. Go to the **Tools** tab from disk Properties and select **Defragment Now**.
3. Select the time and scheme to be used by the defragging program, then start the defragmenting program. Depending on the amount of defragmentation on the hard disk drive, this procedure can take a long time (sometimes more than one hour).

4.6 Performing Daily Maintenance Tasks

Cleaning the computer components

Because many of the computer components consist of sophisticated integrated circuit boards, it is very important to periodically clean around the computer to prevent dust buildup. The cleaning supplies you need in order to clean the components include: a vacuum cleaner, a soft cotton cloth, clear water (pure water preferred) and cotton swabs.

 **Attention:** Before you clean your computer, disconnect the computer from the electrical outlet. Clean your computer with a soft cloth dampened with water. Do not use liquid or aerosol cleaners, which may contain flammable substances.



! **Note:** To avoid damaging the computer or display, do not spray cleaning solution directly onto the display. Only use products specifically designed for cleaning displays, and follow the instructions that are included with the product.

 
The following are general methods for cleaning the components:

- You can use a soft cloth to remove dust on the surface of the computer, the monitor, the printer, the speakers and the mouse.
- You can use a vacuum cleaner to clean in otherwise inaccessible corners.
- To clean the keyboard thoroughly, shut down the computer and scrub it gently with a wet cloth.
- Do *not* use the keyboard until it is dry.

Do not do any of the following:

- Allow water to enter the computer
- Use a heavily dampened cloth
- Spray water directly onto the surface of the monitor or inside of computer.

Daily attention should be given to LCD monitors. Use a dry cloth daily to brush dust from the monitor and keyboard. Keep all surfaces clean and free of grease stains.



5

Chapter

Troubleshooting and Confirming Setup

This chapter contains the following topics:

- Troubleshooting and Problem Resolution

! **Note:** The description of the TV-Tuner card in this manual applies only to those computer models that have the TV-Tuner card installed. It does not apply to those computer models that do not have the TV-Tuner card installed.

 
1

2

3

4

5



Solving Problems

Follow these tips when you troubleshoot your computer:

- If you added or removed a part before the problem started, review the installation procedures and ensure that the part is correctly installed.
- If a peripheral device does not work, ensure that the device is properly connected.
- If an error message appears on the screen, write down the exact message. This message may help support personnel diagnose and fix the problem(s).
- If an error message occurs in a program, see the program's documentation.

! **Note:** The procedures in this document were written for the Windows default view, so they may not apply if you set your Lenovo® computer to the Windows Classic view.

5.1 Troubleshooting Display Problems

Problem: Blank screen or no image is displayed on the monitor.

Troubleshooting and problem resolution:

Check that the LCD screen has been turned on; If not, press the LCD On/Off button to turn on the LCD.

If still cannot solve the problem, contact to Lenovo Customer Service.

Problem: You need to change display property settings.

 
Setting display background and icon properties:

1. Right-click the desktop anywhere except over an icon, then select Personalize from the pop-up menu.
2. From here, select the appropriate options to:
 - Change the desktop background
 - Select a screen saver
 - Select colors and appearance options for icons and characters
 - Set resolution and colors by using Display Settings options.

Problem: Ripple on screen

Troubleshooting and problem resolution:

1. Check for devices located less than one meter from the computer such as refrigerators, electric fans, electric dryers, UPSs, regulators, fluorescent lamps



or other computers that may be generating magnetic interference.

2. Move any interfering devices away from the computer.
3. If the problem persists, consult with Lenovo Service.

5.2 Troubleshooting Audio Problems

Problem: No sound from integrated speakers

Troubleshooting and problem resolution:

- Adjust the windows volume control — Double-click the speaker icon in the lower-right corner of your screen. Ensure that the volume is turned up and that the sound is not muted. Adjust the volume, bass, or treble controls to eliminate distortion.
- Reinstall the audio driver
- Disconnect headphones from the headphone connector — Sound from the speakers is automatically disabled when headphones are connected to the computer's side-panel headphone connector.

Problem: No sound from headphones

Troubleshooting and problem resolution:

- Check the headphone cable connection — Ensure that the headphone cable is securely inserted into the headphone connector.
- Adjust the windows volume control — Click or double-click the speaker icon in the lower-right corner of your screen. Ensure that the volume is turned up and that the sound is not muted.

5.3 Troubleshooting Software Problems

Problem: You are unable to exit a running program normally.

 
Troubleshooting and problem resolution:

1. Open the **Task Manager** window by pressing **Ctrl, Alt** and **Delete** at the same time.
2. Select the **Application** tab, select the problem program, and then click the **End Task** button.

Problem: You need to install or uninstall a program.

Problem resolution:

During installation never abort the install process by powering the system off or



through other drastic means. This can cause system program disorder or even failure during system initialization.

During the uninstall process, never directly delete the files or folders. This is harmful to the system, and might cause a system-wide malfunction.

Use the following procedure to properly uninstall programs:

1. Back up all documents and system settings related to the program before removing it.
2. If the program has its own uninstaller, run it directly to uninstall the program.
3. If the program does not have its own uninstaller, then select Control Panel from **Start** menu.
4. From the **Control Panel**, choose **Programs and Functions**.
5. Find the applicable program from the **Programs and Functions** dialog box and then select **Uninstall/Modify**.
6. Perform the instructions displayed to uninstall the software.

5.4 Troubleshooting Problems with Optical Drives and Hard Disks

 
Problem: The Optical drive is unable to read a CD/DVD.

Troubleshooting and problem resolution:

1. Check to determine if there is an optical drive icon in the resource manager of the operating system. If not, restart your computer. If there is still no icon, contact Lenovo Service. Otherwise, continue with the next step of this procedure.
2. Confirm that the CD/DVD has been properly placed in the drive. If not, reload the CD or DVD. Otherwise, continue with the next step of this procedure.
3. Check the specifications that came with your computer to confirm that this optical drive is supposed to be able to read this type of CD or DVD.
4. If the CD/DVD cannot be read, replace it with a known good CD/DVD such as one that was shipped with the computer.
5. If the known good CD cannot be read, visually check the operating side of the CD/DVD for defects.

Problem: The capacity of the hard disk, as indicated by the system, is less than the nominal capacity.

Troubleshooting and problem resolution: For computers equipped with the



OneKey Recovery feature, the system recovery feature needs to occupy some hard disk space. This may account for the apparent hard disk capacity deficit.

Further Technical Explanation: The nominal capacity of the hard disk is expressed in the decimal system, 1000 bytes. But the actual hard disk capacity is expressed in the binary system as 1024 bytes (For example, the nominal capacity 1G is 1000M, while the actual capacity 1G is 1024M).

The capacity of the hard disk shown in Windows can be calculated according to the calculations in the following example:

The nominal capacity of the hard disk is 40G, while its actual capacity should be: $40 \times 1000 \times 1000 \times 1000 / (1024 \times 1024 \times 1024) = 37\text{G}$.

If the Service partition of 3G - $3 \times 1000 \times 1000 \times 1000 / (1024 \times 1024 \times 1024) = 2.79\text{G}$ is subtracted, the capacity of the hard disk shown in the system can be obtained.

The capacity of the hard disk as calculated using this method may be slightly different from the actual capacity due to the rounding of totals.

5.5 Special considerations for troubleshooting Windows

Record the following information that may later be useful in troubleshooting system problems:

1. The serial number of the software. The serial number was shipped with the computer and was provided separately by the manufacturer. The Help Center is unable to retrieve this number.
2. The drivers for this computer model only support the Windows 7 system.
3. When you use the Windows Media Center to watch TV, be particularly attentive to the following:
 - In the following two situations, you must re-save a channel list:
 - a. When you change your TV signal from digital to analog, your saved channel list for digital TV is deleted. When you want to watch digital TV again, you must create and save a new channel list.
 - b. When you change your TV signal from analog to digital, your saved channel list for analog TV is deleted. When you want to watch analog TV again, you must create and save a new channel list.
 - Before you can watch teletext programming, you must set the TV tuner input signal to analog.

