


USE AND CARE GUIDE

LED Flush Mount
Model#: 417202

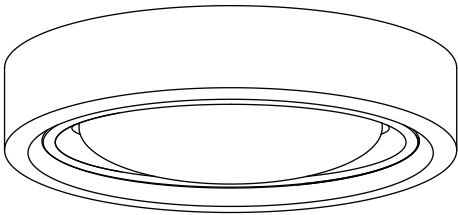


TOOLS REQUIRED



HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

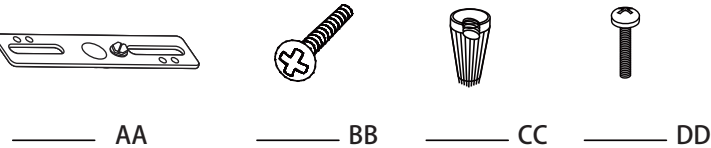


Part	Description	Quantity
AA	Mounting Bracket	1
BB	Outlet box screw	2
CC	Wire Nut	3
DD	Locking Screw	2

Pre-installation (continued)

PACKAGE CONTENTS

Part	Description	Quantity
A	Light fixture	1
B	Plastic shade	1

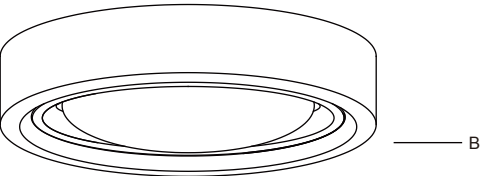

Safety Information

Consult a qualified electrician if you have any electrical questions.

CAUTION: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please contact our Customer Service Team.

WARNING: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

Pre Installation


PLANNING INSTALLATION

- Read all instructions before installation.
- To avoid damaging this product, assemble it on a soft, non abrasive surface, such as carpet or cardboard.
- Keep your receipt and these instructions for proof of purchase.


Installation

1 Attaching the mounting unit to the junction box.

- Turn off power at the circuit breaker and the light switch. Ensure the power is off before removing the old light fixture.
- Remove the plastic shade (B) by turning counter-clockwise.

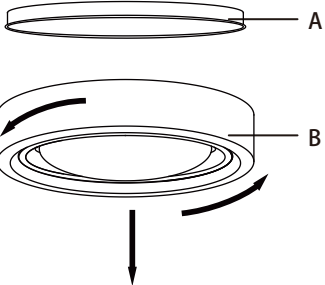


- Place the mounting bracket (AA) over the outlet box(not included) so that the holes on the mounting bracket (AA) align with the screw holes on the outlet box.
- Screw the outlet box screws (BB) through the holes on the mounting bracket (AA) into the screw holes on the outlet box.

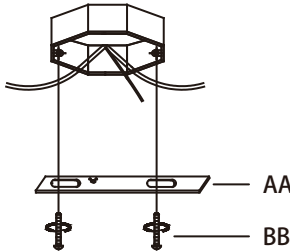

2 Connecting the electrical wires

- Wrap the ground wire from the fixture (A) around the ground screw on the mounting bracket (AA). Use a wire connector (CC) to connect the ground wire from the fixture (A) to the ground wire from the outlet box.
- Use a wire connector (CC) to connect the white wire from the fixture (A) to the white wire (neutral wire) from the outlet box.
- Use a wire connector (CC) to connect the black wire from the fixture (A) to the black wire (live wire) from the outlet box.
- Wrap the three wire connections with electrical tape for a more secure connection.
- Position the wires inside the outlet box.

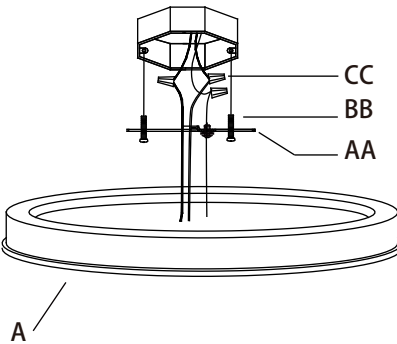

Installation




3 Securing the fixture

- Carefully, tuck all the wires and wire connections into the outlet box. Align the holes of the rear plate of fixture (A) with the locking screws (DD) and turn clockwise locking the plate into place. Tighten the locking screws, being careful not to overtighten the screws. The rear plate should be flush with the ceiling.

4 Selecting the CCT option

- Choose your correlated color temperature (CCT) from the three options: 3000K soft white, 4000K bright white, or 5000K daylight.
- Move the CCT switch on the fixture (A) to make your selection.

WARNING: If not locked in place, the fixture (A) may fall and cause serious injury.

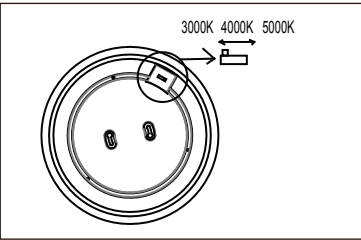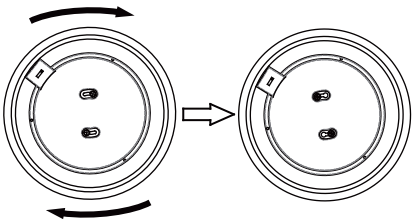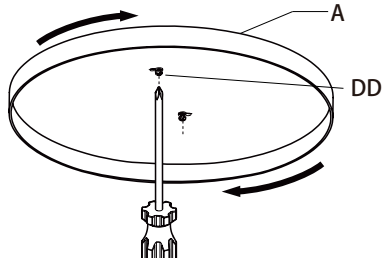


NOTE: The factory setting is 3000K, which is the soft white light.

5 Install the plastic shade

- Raise up the plastic shade (B) onto the fixture (A) and rotate the plastic shade (B) until the plastic shade (B) are fully assembled with the fixture (A).

WARNING: Ensure the plastic shade is secured properly. An improperly installed plastic shade may fall.

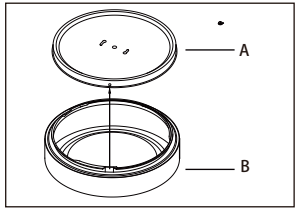

Operation

1 TURNING THE LIGHT ON

- Turn the light switch on to activate the fixture.

Care and Cleaning

- Clean the lamp with a soft, dry cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure the power supply is On.
	There is a faulty wire connection.	Check the wiring.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or contact the Customer Service Team.