 
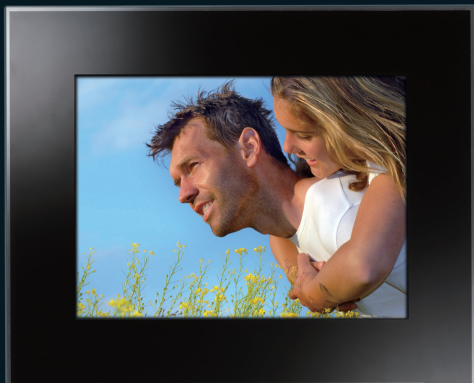 


Sandstrøm

Instruction Manual

8" Digital Photo Frame

S08DPF11

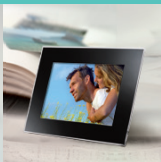

Contents

Unpacking	4
Product Overview	5
Main Unit	5
Preparations.....	6
Attaching the Stand	6
Connecting to the Mains Power	7
Inserting a Memory Card / USB Flash Drive	8
Viewing Photos	9
Main Menu	9
Selecting the Memory Drive	9
Viewing Thumbnails	10
Playing a Slideshow	10
Using the Tool Bar	11
Changing Frame Settings	12
Hints and Tips.....	13
Specifications.....	14
Safety Warnings.....	15

Thank you

 
for purchasing your new Sandström Digital Photo Frame. We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose it please do so according to local regulations.


The following items are included:

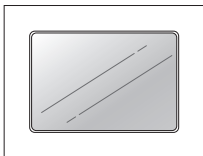


Digital Photo Frame



 Photo Frame Stand
P.N.: 27-155-04010100



Mains Adapter
P.N.: 49-501-00601059

 


Instruction Manual
P.N.: 46-007-44010509



If items are missing or damaged, please contact Partmaster (UK only).
Tel: 0844 800 3456 for assistance.

Product Overview

 Main Unit

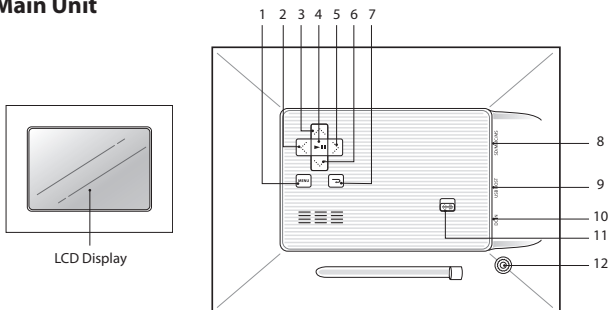


Name	Description
1. MENU	To access the menu mode
2. < button	- To move right in the menu / thumbnail mode / option settings - To display the next photo
3. ^ button	To move up in the menu / thumbnail mode / option settings
4. Play / Pause ►	- To start / pause the slideshow - To confirm a setting or function
5. > button	- To move left in the menu / thumbnail mode / option settings - To display the previous photo
6. v button	To move down in the menu / thumbnail mode / option settings
7. Esc / ↵ button	To return to the main menu
8. SD/MMC/MS slot	To accommodate SD, MMC, MS cards
9. USB host	To accommodate USB devices such as portable USB flash drives or flash memory card readers
10. DC-IN socket	To connect to the mains
11. ON / OFF switch	To turn the unit on and off
12. Stand receptacle	To attach the supplied stand


Preparations

Attaching the Stand


1. Take out the stand attached at the back of the unit.

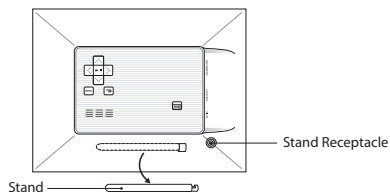

2. Screw the stand into the stand receptacle.

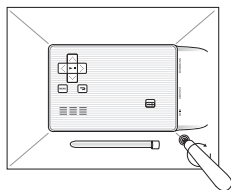


3. Once the stand is fixed, you can choose to display your unit in a landscape or portrait position.

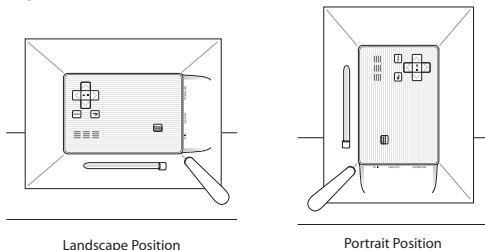


To take off the stand, unscrew it from the stand receptacle.

Connecting to the Mains Power

1. Connect the supplied mains adapter (5V DC, 1A) to the unit, and then plug into the mains socket.

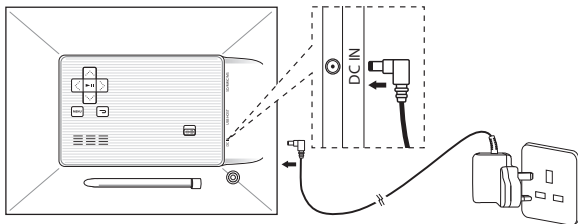

2. Slide the **ON/OFF** switch to the **ON** position to turn on the unit.
3. To turn off the unit, slide the **ON/OFF** switch to the **OFF** position.


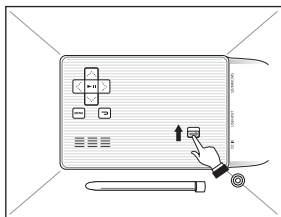


Inserting a Memory Card / USB Flash Drive

This unit can only display one storage media's contents at a time.

If more than one storage device is connected, please refer to "Selecting the Memory Drive" and select your desired drive to be displayed in the main menu.


This frame can only play images (JPEG). If files in other formats are played, please use your computer to convert the images to a readable format.

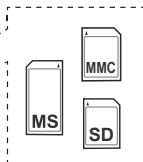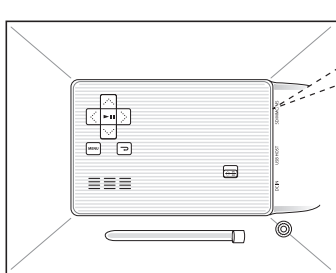

- Insert your memory card into the appropriate slot following the orientation marked on the unit.



- To remove MMC/SD/MS card, pull the card straight out.
- Some of the newer higher capacity cards may not be compatible with this frame.

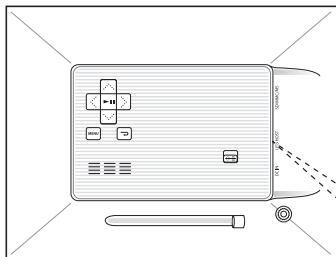


- Insert a USB drive into the USB port.

This device can only display one storage media's contents at a time. If more than one storage media is used, please refer to "Selecting the Memory Drive" section on page 9.



Viewing Photos

Main Menu

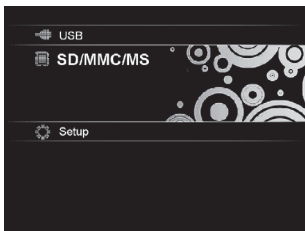

1. When a memory device is inserted into the unit, the corresponding icon appears on the main menu.
2. On the main menu, you can select the connected source to view photos or change frame settings.

Selecting the Memory Drive

Press the **MENU** button to access the main menu. All connected sources and setup icons are displayed.

USB	Highlights when you select a USB flash driver.
Card	Highlights when you select a SD / MMC / MS card.
Setup	To customise the settings of the unit.



In the main menu, if you press the  button, the frame will automatically start the slideshow of the preinstalled photos. If you insert a SD / MMC / MS card or a USB device, the frame will automatically start the slideshow. In the slideshow mode, press the  button to return to the thumbnail page and then press the **MENU** button to access the main menu and select the memory drive.

Viewing Thumbnails



In Photo mode, the photos on the selected memory source can be displayed on the screen as thumbnails. Up to 15 photos are displayed at a time.

1. Select a memory source (e.g. USB, SD/MMC/MS) on the main menu and press the **▶▶** button. The photos are displayed on the screen as thumbnails.
2. To navigate through the thumbnails or move to the next or previous page of thumbnails, press the **▲**, **▼**, **◀** or **▶** buttons.

Playing a Slideshow

In thumbnail mode, select a photo and then press the **▶▶** button to start a slide show from the current photo. The selected photo is displayed on the screen, and a “hint” pop up window will appear to guide the user.



Do not set hint time to “0” in the setup menu, if you want the unit to display a hint for button operation.

- To pause the slideshow and view a single photo, press the **▶▶** button. To resume the slideshow, press the **▶▶** button again.
- To skip to previous or next photo, press the **◀** or **▶** buttons.
- Press the **▲** or **▼** buttons to rotate a photo clockwise or counterclockwise.
- Press the **MENU** button to show the tool bar.
- Press the **↶** button to exit the slideshow and view the photos in thumbnails.


Using the Tool Bar



You also can use the OSD menu to view the photos one by one manually.

1. Press the **MENU** button during while a photo or slideshow. The OSD menu appears on the screen and the slideshow will pause.
2. Press the ◀ or ▶ buttons to navigate between the icons on the OSD menu.
 - To start or resume a slideshow from the current photo, highlight ▶ on the screen and press the ▶|| button, and then the ▶ icon will change to || on the screen.
 - To zoom in on a photo, highlight 🔍 on the screen and press the ▶|| button repeatedly to magnify a photo.
 - To rotate a photo clockwise, highlight ↻ on the screen and press the ▶|| button repeatedly.
 - To rotate a photo counterclockwise, highlight ↺ on the screen and press the ▶|| button repeatedly.
 - To set a photo to display on full screen or standard screen if its resolution is higher than the resolution of the screen, highlight ⬜ on the screen and press the ▶|| button.
 - To change the slideshow into 4 split screen, highlight 田 on the screen and press the ▶|| button.
 - To delete a photo, highlight ✖ on the screen and press the ▶|| button.
 - To exit and close the tool bar, highlight ↶ on the screen and press the ▶|| button.

Changing Frame Settings

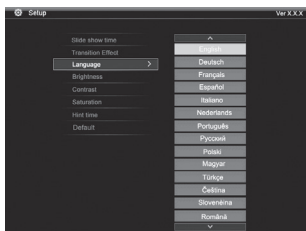

The system settings let you customize and configure your unit.

Select the **Setup** icon on the main menu and press the ► button. The Setup Menu appears on the screen.

1. To select a setting item, press the ▲ or ▼ buttons and then press the ► button.
2. To change the value, press the ▲ or ▼ buttons and then press the ► button. Press the ↵ button to exit.
3. Press the **MENU** button to return to the main menu.

Setting Items	Description
Slide show time	Set up the interval time for slideshow. The available options include: 3s, 5s, 15s, 1 min, 15min.
Transition Effect	Set up the style of photo transition while playing a slide show. The available options include Random / Off.
Language	Set up the display language.
Brightness	Adjust the brightness of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Contrast	Adjust the contrast of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Saturation	Adjust the saturation of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Hint time	Set how long to display the hint window for button operation while playing a slideshow. The available options include: 0s, 5s, 10s, 20s.
Default	Reset all settings to the default settings.

Hints and Tips

No power

- Check to make sure the mains plug is plugged into the mains socket.
- Make sure there is power in the mains socket.

Unable to view photos on the unit

- Not all JPEG files are compatible. Please open the files in a computer and resave them as JPEG files and then try to playback in the unit.
- Check if the memory card is compatible.

If the photo displayed is distorted or cannot display properly

- Go to the main menu, then the SETUP and change the display mode to match your photo (Full / Standard).

If photo display seems slow

- Use lower resolution photos.

The image is distorted or blurred.

- Resolution of the image is too low. Try playing a file with a higher resolution. Resolution of 800 x 600 pixels is recommended.

Cannot detect any external device via the USB 2.0 A-Type port

- This unit only supports a USB flash drives. It does not support any external hard disks or MP3 player via the USB port.

The unit does not work properly

- Please switch the unit off and then on again.

Specifications

Display	Digital LCD, TFT Panel size: 8 inches Screen aspect ratio: 4:3 Resolution: 800*600 pixels
I/O	DC in
Power Adapter	Input: 100~240V AC, 50~60Hz; Output: DC 5V 1A
USB Port	USB Host 2.0 (High Speed) Supports USB flash media USB Max Load : DC 5V, 400mA
Supported Peripheral Devices	SD™ (Secure Digital Card), MMC™ (MultiMedia Card), MS™ (Memory Stick)
Supported Photo Format	JPEG only
Storage Condition	Humidity<95%,-20~60°C
Working Condition	Humidity <80%,0~45°C
Dimension (L x W x H)	222 x 181.5 x 22mm
Weight	470.6g

Features and specifications are subject to change without prior notice.

Safety Warnings

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all the instructions and retain this instruction manual.
- Ensure that all electrical connections (including the mains adapter and power cable) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains adapter before making or changing connections.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of your unit.
- Do not allow the unit to be exposed to dripping or splashing.
- Never store in hot or very cold areas. Recommended operating temperature is 0~40°C.
- Do not use the unit in areas with high moisture (e.g. bathroom) or dusty areas.
- Do not place hot objects or naked flame sources such as lighted candles or night lights on or close to the unit. High temperatures can melt plastic and lead to fires.
- Do not obstruct the ventilation openings of the unit with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the unit.
- Do not handle the power cable with wet hands.
- Be careful with the LCD panels on the unit.
- Only use attachments/accessories specified by the manufacturer.

- When the unit is not in use or unattended for a long period of time, disconnect it from the mains socket.
- Do not remove any fixed cover as this may expose dangerous voltages.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains adapter and consult your dealer.
- Never let anyone especially children push anything into holes, slots or any other opening on the case - this could result in a fatal electrical shock.
- Route the power cable so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear, tear or heat.

Note about LCD screen

The LCD screen is manufactured using high-precision technology. However, some tiny black points and/or bright points (red, blue or green in colour) may constantly appear on the LCD screen. These points are generated in the manufacturing process and are normal.

Note: If you require a replacement for any of the items listed below, please quote their corresponding part numbers:

Replacement Part	Part Number
Photo Frame Stand	27-155-04010100
Mains Adapter	49-501-00601059



next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only)
Calls charged at National Rate.

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

DSG Retail Ltd • Maylands Avenue • Hemel Hempstead
Herts • HP2 7TG • England

(P.N.: 46-007-44010509)

